Safety Information for Aficio MP 6000/Aficio MP 7000/Aficio MP 8000

Introduction

Read this manual carefully before using the machine. Keep this manual in a handy place for quick reference.

Important

Contents of this manual are subject to change without prior notice. In no event will the company be liable for direct, indirect, special, incidental, or consequential damages as a result of handling or operating the machine.

•

Notes:

Some illustrations in this manual might be slightly different from the machine.

Certain options might not be available in some countries. For details, please contact your local dealer.

Laser Safety:

This machine is considered a class 1 laser device, safe for office/EDP use. The machine contains four AlGalnp laser diodes, 10 or 15-milliwatt, 770-810 nanometer wavelength for each emitter. Direct (or indirect reflected) eye contact with the laser beam might cause serious eye damage. Safety precautions and interlock mechanisms have been designed to prevent any possible laser beam exposure to the operator.

The following label is attached on the back side of the machine.



Caution:

Use of controls or adjustments or performance of procedures other than those specified in this manual might result in hazardous radiation exposure.

Notes:

The model names of the machines do not appear in the following pages. Check the type of your machine before reading this manual. (For details, see "Machine Types", About This Machine.)

- Type 1: Aficio MP 6000
- Type 2: Aficio MP 7000
- Type 3: Aficio MP 8000

Certain types might not be available in some countries. For details, please contact your local dealer.

Two kinds of size notation are employed in this manual. With this machine refer to the metric version.

For good copy quality, Ricoh recommends that you use genuine Ricoh toner.

Ricoh shall not be responsible for any damage or expense that might result from the use of parts other than genuine Ricoh parts with your Ricoh office products.

Power Source

220 - 240V, 50/60Hz, 10A or more

Please be sure to connect the power cord to a power source as above. For details about power source, see "Power Connection" in the Troubleshooting.

Safety Information

When using this machine, the following safety precautions should always be followed.

Safety During Operation

In this manual, the following important symbols are used:

⚠ WARNING:

Indicates a potentially hazardous situation which, if instructions are not followed, could result in death or serious injury.

↑ CAUTION:

Indicates a potentially hazardous situation which, if instructions are not followed, may result in minor or moderate injury or damage to property.

Safety Precautions to be Followed

This section explains safety precautions that should always be followed when using this machine.

Environments where the machine can be used

This section explains safety precautions about environments where the machine can be used.

↑ WARNING:

Keep the machine away from flammable liquids, gases, and aerosols.
 A fire or an electric shock might occur.

CAUTION:

- Keep the machine away from humidity and dust. Otherwise a fire or an electric shock might occur.
- Do not place the machine on an unstable or tilted surface. If it topples over, an injury might occur.
- Make sure the room where you are using the machine is well ventilated and spacious. Good ventilation is especially important when the machine is used heavily.
- If you use the machine in a confined space, make sure there is a continuous air turnover.

Handling power cords and power plugs

This section explains safety precautions about handling power cords and power plugs.

⚠ WARNING:

- Connect the machine to the power source specified on the inside front cover of this manual and do not use any other power sources. Connect the power cord directly to a wall outlet and do not use an extension cord. Power sources not specified on the inside front cover of this manual and extension cords are electric shock or fire hazards.
- Power cords that are damaged, broken, modified, trapped under heavy objects, pulled hard, or bent severely are electric shock and fire hazards.
- Disconnect the power plug (by pulling the plug, not the cable) if the power cable or plug becomes frayed or otherwise damaged.
- If the power cord is damaged (exposure of the core, disconnection, etc.), contact your service representative to change a new one. Operating the machine with a damaged power cord may cause an electric shock or fire.
- It is dangerous to handle the plug with wet hands. Doing this may result in receiving an electric shock.

A CAUTION:

- When you disconnect the power plug from the wall outlet, always pull the plug (not the cable).
- To disconnect the power cord, pull it out by plug. Do not drag the cord itself.

 Doing so may result in damage to the cord, leading to fire or electric shock.
- For safety reason, unplug the power cord from the wall outlet if the machine will not be used for an extended period of time such as holidays.

Handling the main machine

This section explains safety precautions about handling the main machine.

↑ WARNING:

- Turn off the power and disconnect the power plug (by pulling the plug, not the cable) if any of the following occurs:
 - · You spill something into the machine.
 - · You suspect that your machine needs service or repair.
 - · The external housing of your machine has been damaged.
- Disposal can take place at our authorized dealer.

↑ CAUTION:

- Protect the machine from dampness or wet weather, such as rain and snow.
- Unplug the power cord from the wall outlet before you move the machine.
 While moving the machine, you should take care that the power cord will not be damaged under the machine.
- After you move the machine, use the caster fixture to fix it in place. Otherwise the machine might move or come down to cause an injury.
- Contact your service representative if you need to lift the machine (such as when relocating it to another floor). Do not attempt to lift the machine without the assistance of your service representative. The machine will be damaged if it topples or is dropped, resulting in malfunction and risk of injury to users. The machine's various handling areas are for service engineer use only. Do not touch these areas.
- Do not allow paper clips, staples, or other small metallic objects to fall inside the machine.
- Do not look into the lamp. It can damage your eyes.
- For environmental reasons, do not dispose of the machine or expended supply waste at household waste collection points. Disposal can take place at an authorized dealer.
- Before moving the machine, be sure to disconnect the power cord from the wall outlet. Damaged power cords are a fire and electric shock hazard.

Handling the machine's interior

This section explains safety precautions about handling the machine's interior.

⚠ WARNING:

 To avoid hazardous electric shock or laser radiation exposure, do not remove any covers or screws other than those specified in this manual.

↑ CAUTION:

- The fusing section of this machine might be very hot. Caution should be taken when removing misfed paper.
- The inside of the machine could be very hot. Do not touch any parts other than specified in this document when removing misfed paper. Otherwise, it may cause burn injury.
- During operation, rollers for transporting the paper and originals revolve. A
 safety device is being installed so that the machine can be operated safely.
 But take care not to touch the machine during operation. An injury might occur.
- Fire and breakdown can result from heavy accumulation of dust inside this machine. Consult your service representative for details about and charges for cleaning the machine's interior.

Handling the machine's supplies

This section explains safety precautions about handling the machine's supplies.

↑ WARNING:

- Do not incinerate used toner or toner containers. Toner dust might ignite when exposed to an open flame. Dispose of used toner containers in accordance with local regulations.
- Do not incinerate spilled toner or used toner. Toner dust might ignite when exposed to an open flame.
- Do not store toner, used toner, or toner containers in a place with an open flame. The toner might ignite and cause burns or a fire.
- Dispose of the used toner container in accordance with the local regulations.

↑ CAUTION:

- To avoid fire or machine failure, do not use aluminum foil, carbon paper, or similar conductive paper.
- Keep toner (used or unused) and toner containers out of reach of children.
- If toner or used toner is inhaled, gargle with plenty of water and move into a fresh air environment. Consult a doctor if necessary.
- If toner or used toner gets into your eyes, flush immediately with large amounts of water. Consult a doctor if necessary.
- If toner or used toner is swallowed, dilute by drinking a large amount of water. Consult a doctor if necessary.
- Avoid getting toner on your clothes or skin when removing a paper jam or replacing toner. If your skin comes into contact with toner, wash the affected area thoroughly with soap and water.
- If toner gets on your clothing, wash with cold water. Hot water will set the toner into the fabric and may make removing the stain impossible.
- When loading paper, take care not to trap or injure your fingers.
- Keep your hands clear of the booklet finisher tray when pulling out or pushing in the finisher's staple unit. You can trap your fingers if you do not.

- For environmental reasons, do not dispose of the machine or expended supply waste at household waste collection points. Disposal can take place at an authorized dealer.
- Our products are engineered to meet high standards of quality and functionality, and we recommend that you use only the expendable supplies available at an authorized dealer.
- Our products are engineered to meet high standards of quality and functionality, and we recommend that you use only the expendable supplies available at an authorized dealer.

For people using a pacemaker


This section explains safety precautions for people using a pacemaker.

↑ WARNING:

 This machine generates a weak magnetic field that can interfere with pacemaker regulation. We advise people with pacemakers to consult a doctor and not to use this machine if they experience irregular pacemaker activity while near the machine.

Positions of AWARNING and ACAUTION labels

This machine has labels for <u>MARNING</u> and <u>MCAUTION</u> at the positions shown below. For safety, please follow the instructions and handle the machine as indicated.

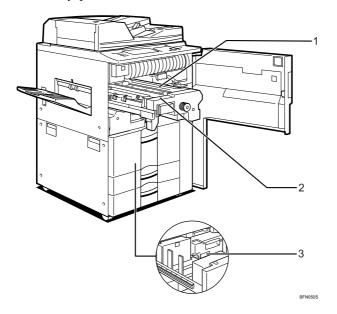




The inside of the machine could be very hot. Do not touch the parts which a label is put on. Otherwise, an injury might occur.




Keep your hands clear of the finisher tray when removing paper jam. You might trap your fingers if you do not.




Do not touch the parts a label indicates. The inside of the machine could be very hot. Caution should be taken when removing misfed paper.

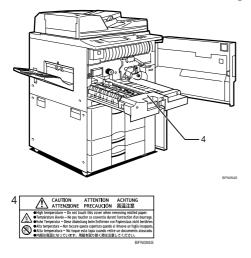

Do not touch the parts a label indicates. The inside of the machine could be very hot. Caution should be taken when removing misfed paper.

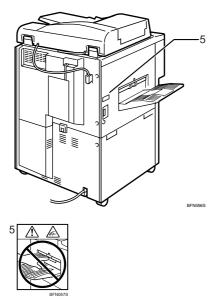


Keep your hands clear of the finisher tray when removing paper jam. You might trap your fingers if you do not.

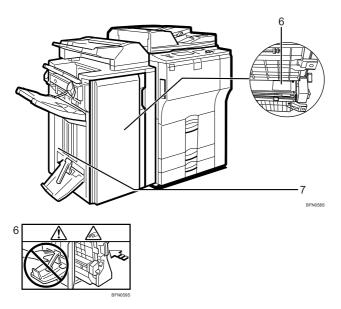

Keep your hands clear of the booklet finisher tray when pulling out or pushing in the finisher's staple unit, or removing paper jam. You might trap your fingers if you do not.



Do not touch the paper exit section of the finisher. It could cause injury.

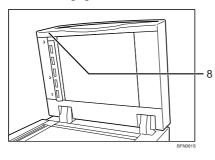

8 A BFN062S

Do not touch! Surface may be very hot.

User Information on Electrical & Electronic Equipment

Users in the EU, Switzerland and Norway

Our Products contain high quality components and are designed to facilitate recycling.

Our products or product packaging are marked with the symbol below.



The symbol indicates that the product must not be treated as municipal waste. It must be disposed of separately via the appropriate return and collection systems available. By following these instructions you ensure that this product is treated correctly and help to reduce potential impacts on the environment and human health, which could otherwise result from inappropriate handling. Recycling of products helps to conserve natural resources and protect the environment.

For more detailed information on collection and recycling systems for this product, please contact the shop where you purchased it, your local dealer or sales/service representatives.

All Other Users

If you wish to discard this product, please contact your local authorities, the shop where you bought this product, your local dealer or sales/service representatives.

ENERGY STAR Program

❖ ENERGY STAR[®] Program Requirements for Imaging Equipment



This company is a participant in the ENERGY STAR® Program.

This machine is compliant with the regulations specified by the ENERGY STAR® Program.

The ENERGY STAR® Program Requirements for Imaging Equipment encourage energy conservation by promoting energy efficient computers and other office equipment.

The program backs the development and dissemination of products that feature energy saving functions.

It is an open program in which manufacturers participate voluntarily.

Targeted products are computers, monitors, printers, facsimiles, copiers, scanners, and multifunction devices. Energy Star standards and logos are internationally uniform.

Note

☐ For the default delay time, see "Energy Saving Functions".

₽ Reference

p.13 "Energy Saving Functions"

Energy Saving Functions

To reduce power consumption, this machine has the following functions:

❖ Low Power Mode

- If this machine remains idle for a specified period, it automatically reduces its electrical consumption.
- The default period the machine waits before entering Low Power Mode is 1 minute. This default time can be changed.

Off Mode (on machines with only the Copier function)

- If this machine remains idle for a specified period, it automatically turns off its power.
- The default delay time the machine waits before entering Off Mode is 1 minute (Type 1, 2) or 15 minutes 10 seconds (Type 3). This default time can be changed.

Sleep Mode (on machines with Facsimile Printer, or Scanner functions)

- If this machine is already in Low Power Mode and remains idle for a specified period, it automatically enters Sleep Mode to further reduce its electrical consumption.
- The default delay time the machine waits before entering Sleep Mode is 1 minute (Type 1, 2) or 15 minutes 10 seconds (Type 3). This default time can be changed. The machine can print jobs from computers and receive faxes while in Sleep Mode.

	Copier Only			Printer and Scanner Installed		
	Type 1	Type 2	Type 3	Type 1	Type 2	Type 3
Electrical Consumption in Low Power Mode	158W	158W	144W	164W	164W	144W
Time taken to switch to Low Power Mode	1 minute	1 minute	1 minute	1 minute	1 minute	1 minute
Time taken to recover from Low Power Mode	10 seconds	10 seconds	10 seconds	10 seconds	10 seconds	10 seconds
Electrical Consumption in Off Mode	4.7 W	4.7 W	4.7 W	-	-	-
Time taken to switch to Off Mode	1 minute	1 minute	15minutes 10 seconds	-	-	-
Time taken to recover from Off Mode	30 seconds	30 seconds	60 seconds	-	-	-
Electrical Consumption in Sleep Mode	-	-	-	21 W	21 W	21 W
Time taken to switch to Sleep Mode	-	-	-	1 minute	1 minute	15 minutes 10 seconds
Time taken to recover from Sleep Mode	-	-	-	30 seconds	30 seconds	60 seconds

 $\hfill\Box$ The default settings can be changed. For details, see "Timer Settings", General Settings Guide.

"Timer Settings", General Settings Guide.

Overseas Affiliates and Noise Emission Information

In accordance with TUV "GS Symbol" requirements, details of the $\overline{\text{EU}}$ office or representative company are given below.

Overseas Affiliates

Ricoh Europe PLC 66 Chiltern Street, London W1U 4AG, U.K.

❖ Noise Emission

Maschinenlärminformations-Verordnung 3. GPSGV:

Der höchste Schalldruckpegel beträgt 70 dB(A) oder weniger gemäss EN ISO 7779

Noise emission is measured when the machine is connected with adapted scanner.

In accordance with IEC 60417, this machine uses the following symbols for the main power switch:

means POWER ON.

O means POWER OFF.

Notice To Facsimile Unit (optional) Users

((

Notice to Users in EEA Countries

This product complies with the essential requirements and provisions of Directive 1999/5/EC of the European Parliament and of the Council of 9 March 1999 on radio equipment and telecommunications terminal equipment and the mutual recognition of their conformity.

Notice to Users Accessing Analog PSTN in EEA Countries

This product is designed to be able to access analog PSTN in all EEA countries. Local PSTN compatibility is dependent on software switch settings. Please contact your service representative if relocating this product to another country. In the event of problems, please contact your service representative in the first instance.

The CE Declaration of Conformity is available by accessing the URL: http://www.ricoh.co.jp/fax/ce_doc/and selecting the product applicable.

Copyright © 2007 Ricoh Co., Ltd.

Printed in France
GB GB D052-7100



D0527100