


Attaching the Ferrite Core

Thank you for buying this printer.

The following explains how to attach the ferrite core to the printer cable.


Supplied: ferrite core (1 Piece), tie wraps (2 pieces)

1. Clip the ferrite core around the printer end of the cable, close to the connector.

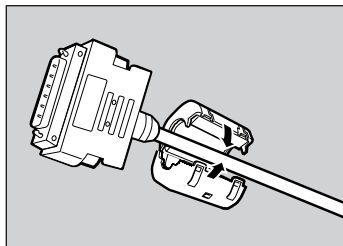


AEW022S

2. Fit one tie wrap snugly around the center of the ferrite core to prevent the core coming loose.

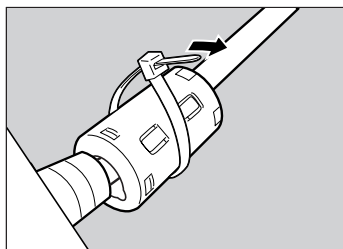

AEW022S

3. Fit the other tie wrap snugly around the end of the ferrite core to prevent the core moving along the cable.
4. Cut off excess tie wrap using scissors.

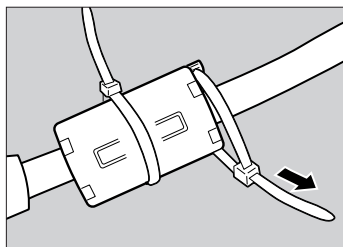

AEW020S

5. Attach the cable (ferrite core end) to the printer's parallel interface.