

 $\begin{array}{c} \text{MP 5500/6500/7500} \\ \textbf{MP 5500/6500/7500} \\ \textbf{Aficio}^{\sim} \text{ MP 5500/6500/7500} \\ \textbf{IS 2255/IS 2265/IS 2275} \end{array}$

Operating Instructions Copy/Document Server Reference



- 1 Placing Originals
- 2 Copying
- 3 Connect Copy
- 4 Document Server
- **5** Appendix

Introduction

This manual contains detailed instructions and notes on the operation and use of this machine. For your safety and benefit, read this manual carefully before using the machine. Keep this manual in a handy place for quick reference.

Important

Contents of this manual are subject to change without prior notice. In no event will the company be liable for direct, indirect, special, incidental, or consequential damages as a result of handling or operating the machine.

Notes:

Some illustrations in this manual might be slightly different from the machine.

Certain options might not be available in some countries. For details, please contact your local dealer.

Caution:

Use of controls or adjustments or performance of procedures other than those specified in this manual might result in hazardous radiation exposure.

Notes:

The model names of the machines do not appear in the following pages. Check the type of your machine before reading this manual. (For details, see "Machine Types", About This Machine.)

- Type 1: MP 5500/Aficio MP 5500/IS2255
- Type 2: MP 6500/Aficio MP 6500/IS2265
- Type 3: MP 7500/Aficio MP 7500/IS2275

Certain types might not be available in some countries. For details, please contact your local dealer.

Two kinds of size notation are employed in this manual. With this machine refer to the metric version.

For good copy quality, the supplier recommends that you use genuine toner from the supplier.

The supplier shall not be responsible for any damage or expense that might result from the use of parts other than genuine parts from the supplier with your office products.

Manuals for This Machine

Refer to the manuals that are relevant to what you want to do with the machine.

About This Machine

Be sure to read the Safety Information in this manual before using the machine. This manual provides an introduction to the functions of the machine. It also explains the control panel, preparation procedures for using the machine, how to enter text, and how to install the CD-ROMs provided.

General Settings Guide

Explains User Tools settings, and Address Book procedures such as registering, e-mail addresses, and user codes. Also refer to this manual for explanations on how to connect the machine.

Troubleshooting

Provides a guide to solving common problems, and explains how to replace paper, toner, staples, and other consumables.

Security Reference

This manual is for administrators of the machine. It explains security functions that the administrators can use to protect data from being tampered, or prevent the machine from unauthorized use. Also refer to this manual for the procedures for registering administrators, as well as setting user and administrator authentication.

Copy/ Document Server Reference

Explains Copier and Document Server functions and operations. Also refer to this manual for explanations on how to place originals.

Printer Reference

Explains Printer functions and operations.

Scanner Reference

Explains Scanner functions and operations.

Network Guide

Explains how to configure and operate the machine in a network environment, and use the software provided.

This manual covers all models, and includes descriptions of functions and settings that might not be available on this machine. Images, illustrations, and information about operating systems that are supported might also differ slightly from those of this machine.

Other manuals

- Quick Reference Copy Guide
- Quick Reference Printer Guide
- Quick Reference Scanner Guide
- PostScript3 Supplement
- UNIX Supplement
- Manuals for DeskTopBinder Lite
 - DeskTopBinder Lite Setup Guide
 - DeskTopBinder Introduction Guide

	Auto Document Link Guide
9	Note
J	Manuals provided are specific to machine types.
J	Adobe Acrobat Reader/Adobe Reader must be installed in order to view the manuals as PDF files.
J	For "UNIX Supplement", please visit our Web site or consult an authorized dealer.
7	"PostScript3 Supplement" and "UNIX Supplement" include descriptions of functions and settings that might not be available on this machine.


What You Can Do with This Machine

Functions differ depending on machine type and options.


p.3 "Functions Requiring Optional Configurations"

Types of Duplex Copies


❖ 1-sided 2 Pages → 2-sided 1 Page See p.70 "Duplex".

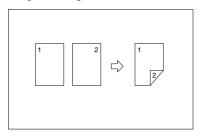


❖ 2-sided 1 Page → 2-sided 1 Page See p.70 "Duplex".

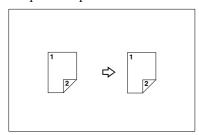


❖ 1-sided 4 Pages → 2-sided 1 Page See p.77 "Two-Sided Combine".

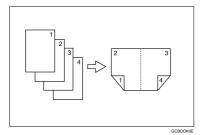


❖ 1-sided 8 Pages → 2-sided 1 Page See p.77 "Two-Sided Combine".

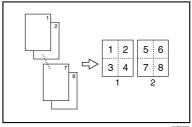


- ① Front
- ② Back
- See p.77 "Two-Sided Combine".

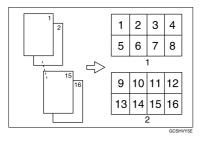


- ① Front
- ② Back
- \clubsuit 2-sided 2 Pages \rightarrow 2-sided 1 Page See p.77 "Two-Sided Combine".

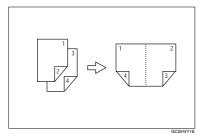


❖ 2-sided 4 Pages → 2-sided 1 Page See p.77 "Two-Sided Combine".

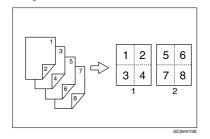

- ① Front
- ② Back
- ❖ 2-sided 8 Pages → 2-sided 1 Page See p.77 "Two-Sided Combine".

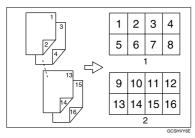


- ① Front
- ② Back
- ❖ Bound Originals → 2-sided Pages See p.82 "Booklet/Magazine".

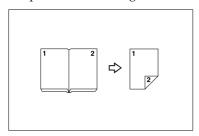


$\red{ \begin{tabular}{l} \star Front/Back Bound \to Originals 2-sided Pages \\ \end{tabular} }$

See p.82 "Booklet/Magazine".

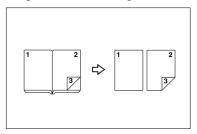

Mix 1 & 2 Sided

See p.88 "Mix 1 & 2 Sided".

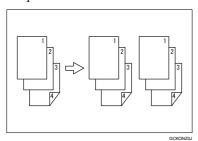


Copying Book Originals


❖ 1-sided 4 Pages → Booklet

See p.82 "Booklet/Magazine".

• Open to left

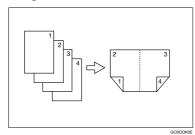


• Open to right

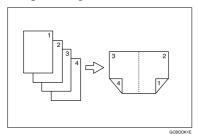


\clubsuit 2-sided 2 Pages \rightarrow Booklet

See p.82 "Booklet/Magazine".

• Open to left

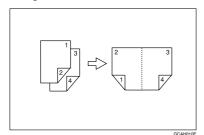


• Open to right

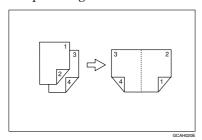


See p.82 "Booklet/Magazine".

• Open to left

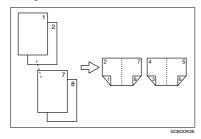


• Open to right

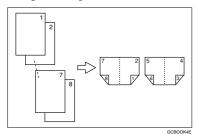


❖ 2-sided → Magazine See p.82 "Booklet/Magazine".

• Open to left

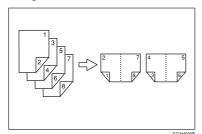


• Open to right

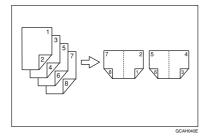


Combining Multiple Pages onto a Single Page

See p.74 "One-Sided Combine".


$\ \, \textbf{\$ 1-sided 2 Pages} \rightarrow \textbf{1-sided 1 Page}$

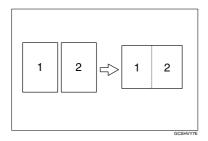


$\ \, \textbf{\$ 1-sided 4 Pages} \rightarrow \textbf{1-sided 1 Page}$

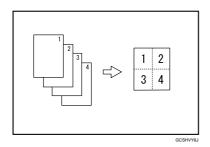


$\ \, \textbf{\$ 1-sided 8 Pages} \rightarrow \textbf{1-sided 1 Page}$

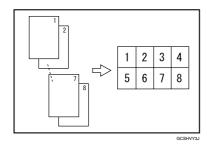


$\ \, \textbf{ $\clubsuit $ 2-$sided 1 Page} \rightarrow \textbf{ $1-$sided 1 Page}$

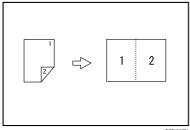

$\ \, \textbf{ 2-sided 2 Pages} \rightarrow \textbf{1-sided 1 Page}$

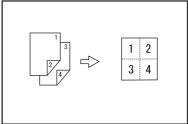


$\ \, \textbf{ $\clubsuit $ 2-sided 4 Pages} \rightarrow \textbf{ $1-sided 1 Page}$

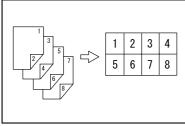


Copying Originals Such as Books


❖ Bound Originals → 1-sided Pages See p.80 "Series Copies".

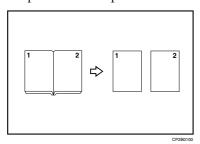

❖ Bound Originals → 2-sided Pages See p.82 "Booklet/Magazine".

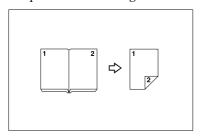

❖ Front/Back Bound Originals → 2-sided Pages See p.82 "Booklet/Magazine".

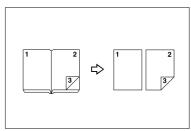

Copying 2-Sided Pages onto 1-Sided Pages

See p.80 "Series Copies".

$\ \, \textbf{$\clubsuit$} \ \, \textbf{2-sided 1 Page} \rightarrow \textbf{1-sided 2 Pages}$

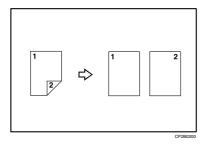


TABLE OF CONTENTS

Manuals for This Machine	
What You Can Do with This Machine	
Types of Duplex Copies	iii
Copying Book Originals	vi
Combining Multiple Pages onto a Single Page	
Copying Originals Such as Books	xi
Copying 2-Sided Pages onto 1-Sided Pages	
Notice	1
How to Read This Manual	2
Symbols	
Functions Requiring Optional Configurations	3
Display Panel	
Simplified Display	
User Tools Menu (Copier and Document Server Features)	
Oser 10013 Mena (Oopier and Document Server Features)	
1. Placing Originals	
Originals	
Sizes and Weights of Recommended Originals	
Originals not recommended for the Auto Document Feeder (ADF)	12
Sizes Detectable by the Auto Paper Select	
Sizes difficult to detect	
Placing Originals	
Original Orientation	
Placing Originals on the Exposure Glass	۱۵
Batch mode	
SADF mode	
Mixed size mode	
Original size	
Regular sizes	
Custom sizes	
2. Copying	
Basic Procedure	25
Interrupt Copy	
Left Original Beeper	27
Copy Face Up	27 27
Copying onto Tab Stock	28
Auto Start	
Job Preset	
Job List	
Job List screen	
Checking jobs in the print queue	
Changing the order of jobs	
Holding print jobs	
Deleting jobs	
Checking Job History	35

Copying from the Bypass Tray	36
When copying onto Regular Size Paper	38
When copying onto Custom Size Paper	
When copying onto OHP Transparencies	40
When copying onto Thick Paper	41
Copier Functions	42
Adjusting Copy Image Density	
Auto image density	
Manual image density	
Combined auto and manual image density	
Selecting the Original Type Setting	
Selecting Copy Paper	
Auto Paper Select	
Manual Paper Select	
Preset Reduce/Enlarge	
Create Margin function	
Zoom	49
To select the ratio with [-] and [+]	50
To enter the ratio with the number keys	50
Auto Reduce/Enlarge	51
Size Magnification	52
Directional Magnification (%)	53
To enter the ratio with the number keys	54
To specify a ratio with [一] and [十]	
Directional Size Magnification (mm)	
Sort	
Sample copy	
Changing the Number of Sets	
Stack	
Staple	
Punch	
Z-fold	
Using the Z-fold Support Tray	
Z-fold positions and Z-folding Copies	
Duplex	
Originals and copy orientation	
One-Sided Combine	
Two-Sided Combine	
Series Copies	
Booklet/Magazine	
Mix 1 & 2 Sided	
Scanning Position	
Margin Adjustment	
Erase	
Border Erase (same width)	
Border Erase (different width)	
Centre Erase	
Centre/Border Erase (same width)	
Centre/Border Erase (same wath)	
Inside Erase	
Outside Erase	
Background Numbering	101

Preset Stamp	
Changing the stamp position, size and density	104
User Stamp	104
Changing the user stamp position	
To program the user stamp	
To delete the user stamp	
Date Stamp	
To change the format of date	
To change the date stamp position	112
Page Numbering	113
Changing the stamp position	115
Specifying the first printing page and start number ("P1,P2", "-1-,-2", "P.1,P.2", "1,2")	115
Specifying the first printing page and start number ("1/5,2/5")	117
Specifying the first printing page and start number ("1-1,1-2")	118
Stamp Text	
Changing the stamp position	
Image Repeat	
Double Copies	
Centring.	
Positive/Negative	
Covers	
Designate	
Chapters	
Blank Slip Sheets	
Slip Sheets	
Storing Originals in the Document Server	
Programs	
Storing a Program	130
Changing a Stored Program	
Deleting a Program	
Recalling a Program	
Programming Defaults in Initial Display	139
3. Connect Copy	
What is Connect Copy?	
How It Works	142
Machine Types and Options	
Interrupt Copy	142
Before You Start	143
Connect Copy Display Panel	144
Display panel of the sub-machine	
Using Connect Copy	
Order of Copy Output	
Auto Reset when using Connect Copy	150
Auto Off	
Exiting Connect Copy	
Copying Stored Documents Using Connect Print	
Using Job Preset in Connect Copy	
osing Job Fleset in Connect Copy	133

Connect Copy Job Flow	
When One of the Two Machines is Idle	
Using the idle machine as the main machine (Connect Copy)	
Using the machine currently copying as the main machine (Connect Copy: Job Preset).	
When Both Machines are in Use	157
When both machines are copying the same number of originals	
(Connect Copy: Job Preset)	158
When one machines is copying a larger number of originals (Connect Copy: Job Preset)	159
4. Document Server	
Relationship between Document Server and Other Functions	
Document Server Display	162
Simplified Display	163
Preview Display	164
Using the Document Server	166
Storing Data	
To register or change a user name	100
(When using a user name registered to the Address Book)	168
To register or change a user name	100
(When using a user name not registered to the Address Book)	169
To register or change a user name	100
(When no name is registered to the Address Book)	170
To change a file name	
To set or change a Password	
Changing User Name, File Name or Password of a Stored Document	
Checking the Details of a Stored Document	
Searching for a Stored Document	
To search by file name	
To search by user name	
Printing a Stored Document	
When Interrupting Printing	
Changing Number of Print Copies while Printing is in Progress	
Sample Print	
Printing the First Page	
Printing the First Fage	
Printing a Specified Range	
Deleting a Document in Document Series with Web Image Meniter	
Displaying a Document in Document Server with Web Image Monitor	
Downloading Stored Documents	184
5. Appendix	
Function Compatibility	
Supplementary Information	187
INDEX	201

Notice

Do not copy or print any item for which reproduction is prohibited by law.

Copying or printing the following items is generally prohibited by local law:

bank notes, revenue stamps, bonds, stock certificates, bank drafts, checks, passports, driver's licenses.

The preceding list is meant as a guide only and is not inclusive. We assume no responsibility for its completeness or accuracy. If you have any questions concerning the legality of copying or printing certain items, consult with your legal advisor.

Some illustrations in this manual might be slightly different from the machine.

How to Read This Manual

✔ Note □ For proper use of this product, be sure to read About This Machine first. □ Supplementary information about the copier mode is described in "Supplementary Information". ✔ Reference p.187 "Supplementary Information"

Symbols

This manual uses the following symbols:

MARNING:

Indicates important safety notes.

Ignoring these notes could result in serious injury or death. Be sure to read these notes. They can be found in the "Safety Information" section of About This Machine.

CAUTION:

Indicates important safety notes.

Ignoring these notes could result in moderate or minor injury, or damage to the machine or to property. Be sure to read these notes. They can be found in the "Safety Information" section of About This Machine.

#Important

Indicates points to pay attention to when using the machine, and explanations of likely causes of paper misfeeds, damage to originals, or loss of data. Be sure to read these explanations.

Ø Note

Indicates supplementary explanations of the machine's functions, and instructions on resolving user errors.

This symbol is located at the end of sections. It indicates where you can find further relevant information.

[]

Indicates the names of keys that appear on the machine's display panel.

Indicates the names of keys on the machine's control panel.

Functions Requiring Optional Configurations

Certain functions require special machine configuration and extra options as follows.

Copying onto the Tab Stock: Tab sheet fence

Stack: 3,000Sheet-50Sheet Staple Finisher, booklet finisher, or 3,000Sheet-100Sheet Staple Finisher

Staple: 3,000Sheet-50Sheet Staple Finisher, booklet finisher, or 3,000Sheet-100Sheet Staple Finisher

Staple (Saddle Stitch): booklet finisher

Punch: 3,000Sheet-50Sheet Staple Finisher, booklet finisher, or 3,000Sheet-100Sheet Staple Finisher

Z-fold: booklet finisher or 3,000 Sheet-100 Sheet Staple Finisher, with Z-folding unit


Connect Copy: Copy Connector

Display Panel

The function items displayed serve as selector keys. You can select or specify an item by lightly pressing them.

When you select or specify an item on the display panel, it is highlighted like keys appearing as cannot be used.

Initial copy display

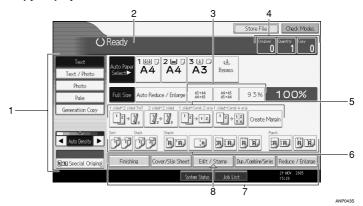

- 1. Original function, Image Density and Special Original function.
- 2. Operational status and messages.
- 3. You can register up to three frequently used reduce/enlarge ratios other than the fixed reduce/enlarge ratios. See "Reproduction Ratio", General Settings Guide.
- 4. Numbers of originals scanned into memory, copies set, and copies made.
- 5. Displays contents of the shortcut keys. You can register frequently used functions in these keys. See "General Features", General Settings Guide.
- 6. Sort, Stack, Staple, Punch, Z-fold functions.
- 7. Displays available functions. Press a function name to display its menu. For example, press [Reduce / Enlarge] to switch the Reduce/Enlarge menu.
- 8. A clip mark indicates the currently selected function.

Simplified Display


This section explains how to switch to the simplified display.

When you press the [Simplified Display] key, the screen changes from the initial display to the simplified display.

Letters and keys are displayed at a larger size, making operations easier.



Example of a simplified display

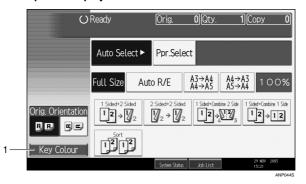

1. [Key Colour]

Press to change the key colour and increase the brightness of the display panel.

𝒜 Note

- ☐ To return to the initial display, press the [Simplified Display] key again.
- ☐ Certain keys do not appear on the simplified display.

User Tools Menu (Copier and Document Server Features)

This section describes items that can be specified on the copier initial screen. Copier initial screen can be displayed by pressing the [User Tools/Counter] key. For more information about how to set up these items, see General Settings Guide.

❖ General Features

Item	Description
Auto Image Density Priority	You can set whether Auto Image Density is "On" or "Off" when the machine is turned on, reset, or modes are cleared.
Copy Quality	You can adjust the copy quality level for each original type.
Image Density	You can adjust the image density level for each original type.
Original Orientation in Duplex Mode	You can set the original orientation when making two-sided copies.
Copy Orientation in Duplex Mode	You can set the copy orientation when making two-sided copies.
Max. Copy Quantity	The maximum copy quantity can be set between 1 and 999.
Auto Tray Switching	If you load paper of the same size in two or more trays, the machine automatically shifts to the other when the first tray runs out of paper (when Apply Auto Paper Select is selected.) This function is called "Auto Tray Switching". This setting specifies whether to use Auto Tray Switching or not.
Paper Display	You can choose to have the available paper trays and sizes shown on the initial display.
Original Type Display	You can have the original types shown on the initial display.
Tone: Original Remains	The beeper (key tone) sounds if you forget to remove originals after copying.
Job End Call	You can choose whether or not the beeper sounds when copying is complete.
Connect Copy Key Display	You can specify whether or not to display the key for Connect Copy.
Switch Original Counter Display	You can select the original counter display.
Customize Function: Copier	You can assign up to six frequently-used functions to Copy Function keys.
Customize Function: Document Server Storage	You can assign up to six frequently-used functions to Document Server Storage keys.
Customize Function: Document Server Print	You can assign up to six frequently-used functions to Document Server Print keys.

* Reproduction Ratio

Item	Description
Shortcut R / E	You can register up to three frequently used Reduce/Enlarge ratios other than the fixed Reduce/Enlarge ratio and have them shown on the initial display.
R / E Ratio	You can specify the enlargement and reduction ratios that appear if [Reduce / Enlarge] is pressed on the copier screen.
R / E Ratio Priority	You can set the ratio with priority when [Reduce / Enlarge] is pressed.
Ratio for Create Margin	You can set a Reduce/Enlarge ratio when registering Create Margin in a shortcut key.

❖ Edit

Item	Description
Front Margin: Left / Right	You can specify left and right margins on the front side of copies in Margin Adjustment mode.
Back Margin: Left / Right	You can specify left and right margins on the back side of copies in Margin Adjustment mode.
Front Margin: Top / Bottom	You can specify top and bottom margins on the front side of copies in Margin Adjustment mode.
Back Margin: Top / Bottom	You can specify top and bottom margins on the back side of copies in Margin Adjustment mode.
1 Sided→2 Sided Auto Margin: TtoT	In 1 sided to 2 sided Duplex mode, you can specify the margins on the back side. The margin is set to the same value of "Back Margin: Left / Right".
1 Sided→2 Sided Auto Margin: TtoB	In 1 sided to 2 sided Duplex mode, you can specify the margins on the back side. The value set for "Back Margin: Top / Bottom" is used.
Erase Border Width	You can specify the width of the erased border margins with this function.
Erase Original Shadow in Combine	In Combine mode, you can specify whether to erase a 3 mm, 0.1" boundary margin around all four edges of each original.
Erase Centre Width	You can specify the width of the erased centre margins with this function.
Front Cover Copy in Combine	You can make a combined copy on the front cover sheet when you select the Front Cover mode.
Copy Order in Combine	You can set the copy order in Combine mode to Left to Right or Top to Bottom.
Orientation: Booklet, Magazine	You can select the orientation of copies to open when using Booklet or Magazine mode.
Copy on Designating Page in Combine	You can specify whether to make a combined copy on the inserted slip sheets in Desig./Chapter mode.
Image Repeat Separation Line	You can select a separation line using the Image Repeat function from: None, Solid, Broken A, Broken B, or Crop Marks.
Double Copies Separation Line	You can select a separation line using the Double Copies function from: None, Solid, Broken A, Broken B, or Crop Marks.

Item	Description
Separation Line in Combine	You can select a separation line using the Combine function from: None, Solid, Broken A, Broken B, or Crop Marks.
Copy Back Cover	When copying the back cover, you can specify whether to have the back cover outside (outside page) or inside (inside page).

❖ Stamp

Item	Description	
Background Numbering		
Size	You can set the size of the numbers.	
Density	You can set the density of the numbers.	
Preset Stamp		
Stamp Language	You can select the language of the message printed in Stamp mode.	
Stamp Priority	You can select the stamp type given priority when [Preset Stamp] is pressed.	
Stamp Format	You can specify how each of stamp is printed. ("COPY", "UR-GENT", "PRIORITY", "For Your Info.", "PRELIMINARY", "For Internal Use Only", "CONFIDENTIAL", "DRAFT").	
User Stamp		
Program / Delete Stamp	You can register, change, or delete these designs as user stamps.	
Stamp Format: 1 to 4	You can specify how each of registered User Stamps 1 to 4 is printed.	
Date Stamp		
Format	You can select the date format for Date Stamp mode.	
Font	You can select the Date Stamp font.	
Size	You can set the Date Stamp size.	
Superimpose	You can have the Date Stamp printed in white where it overlaps black parts of the image.	
Stamp Setting	You can specify how Date Stamp is printed.	
Page Numbering		
Stamp Format	You can select the page number format given priority when [Page Numbering] is pressed.	
Font	You can select the page number printed in Page Numbering mode.	
Size	You can set the size of the stamp printed in Page Numbering mode.	
Duplex Back Page Stamping Position	You can set the position of the duplex back page number printed in Duplex mode.	
Page Numbering in Combine	You can set page numbering when using the Combine function and the Page Numbering function together.	
Stamp on Designating Slip Sheet	You can select to print the page number onto slip sheets when using the Designate function set to [Copy] and the Page Numbering function together.	
Stamp Position:P1,P2	You can specify where to print the stamp.	
Stamp Position:1/5,2/5	You can specify where to print the stamp.	

Item	Description	
Stamp Position:-1-,-2	You can specify where to print the stamp.	
Stamp Position:P.1,P.2	You can specify where to print the stamp.	
Stamp Position:1,2	You can specify where to print the stamp.	
Stamp Position:1-1,1-2	You can specify where to print the stamp.	
Superimpose	You can have page numbers printed in white where they overlap black parts of the image.	
Page Numbering Initial Letter	Switch the page print language.	
Stamp Text		
Font	You can select the Stamp Text font.	
Size	You can set the Stamp Text size.	
Superimpose	You can have the Stamp Text printed in white when it overlaps black parts of the image.	
Stamp Setting	You can specify how Stamp Text is printed.	

❖ Input / Output

Item	Description
Switch to Batch	You can select to have Batch mode or SADF mode displayed when you press [Special Original].
SADF Auto Reset	In SADF mode, an original must be set within a specified time after the previous original has been fed. You can adjust this time from 3 to 99 seconds in increments of 1 second.
Rotate Sort: Auto Paper Continue	You can specify to continue copying when paper of the required orientation has run out during rotatesorting.
Copy Eject Face Method in Glass Mode	You can specify the way in which copies are delivered when copying an original placed on the exposure glass.
Copy Eject Face Method in Bypass Mode	You can specify the way in which copies are delivered when copying in Bypass mode.
Memory Full Auto Scan Restart	When memory becomes full while scanning originals, the machine can make copies of scanned originals first, and then automatically proceed scanning remaining originals.
Letterhead Setting	If you select [Yes] in this function, the machine rotates images correctly.
Staple Position	Specify which Top 2 staples or Bottom shown on the initial display with priority.
Punch Type	Specify which punch type (2 holes or 3 holes) has priority to be shown on the initial display.
Simplified Screen: Finishing Types	You can select which key is displayed with higher priority for "Finishing Types" on the Simplified Screen.

❖ Administrator Tools

Item	Description
Menu Protect	Using Menu Protect, you can limit the settings available to users other than the administrator.

1. Placing Originals

This chapter describes the types of originals you can set and how to place originals.

Originals

This section describes the types of originals that can be placed, paper sizes that are automatically detected, and missing image area.

Sizes and Weights of Recommended Originals

The following describes recommended paper sizes and non-recommended originals for the ADF.

Metric version

Original location	Original size	Original weight
Exposure glass	Up to A3	-
ADF	One-sided originals:A3□ - B6 JIS (Japanese Industrial Standard) □□	40-128 g/m ² (35-110 kg)
	Two-sided originals: A3□-B6 JIS (Japanese Industrial Standard) □□	52-128 g/m ² (45-110 kg)

Inch version

Original location	Original size	Original weight
Exposure glass	Up to 11" × 17"	-
ADF	One-sided originals: $11" \times 17" \square -5^1/_2" \times 8^1/_2" \square \square$	11-34 lb.
	Two-sided originals: $11" \times 17" \square -5^1/2 \times 8^1/2" \square \square$	14-34 lb.

Note

- \square The maximum number of originals that can be placed in the ADF is about 100 (paper weight is 80 g/m^2 , 20 lb.).
- \square The weight range for originals when using Mixed Size mode is 52-81 g/m² (13.8-21.5 lb.).

Originals not recommended for the Auto Document Feeder (ADF)

Placing the following types of originals in the ADF can cause paper misfeeds or light & black lines or result in damage to the originals. Place these originals on the exposure glass instead.

- Originals other than those specified on "Sizes and Weights of Recommended Originals".
- Stapled or clipped originals
- Perforated or torn originals
- Curled, folded, or creased originals
- · Pasted originals
- Originals with any kind of coating, such as thermal fax paper, art paper, aluminum foil, carbon paper, or conductive paper
- · Originals with perforated lines
- Originals with indexes, tags, or other projecting parts
- Sticky originals such as translucent paper
- Thin, highly flexible originals
- Thick originals such as postcards
- Bound originals such as books
- Transparent originals such as OHP transparencies or translucent paper
- Originals that are still wet with ink or white-out.

Note

☐ The original might become dirty if it is written with a pencil or a similar tool.

Sizes Detectable by the Auto Paper Select

Sizes detectable by the exposure glass and ADF are:

Metric version

Size Original location	A3	B4 JIS	A4 □ □	B5 JIS D	A5	A5	B6 JIS D	11" × 17"	8 1/2" × 13"	8" × 13" □	8K □ *4	16K □ 	8 1/4" × 13"	8 1/2" × 11" □
Exposure glass	0	0	0	0	0	×*1	×	×	O *2	× *2	×	×	×*2	×
ADF	0	0	0	0	0	0	0	× *3	0	×	O *3	O *3	×	×*3

^{*1} If you wish to make A5 ☐ detectable from the exposure glass, contact your service representative.

Inch version

Size Original location	A3	A4 	11" × 17"	8 ¹ / ₂ " × 14" □	8 ¹ / ₂ " × 11" □□	×	8 ¹ / ₂ " × 5 ¹ / ₂ "	11" × 15"	10" × 14"	8" × 10"	8 ¹ / ₂ " × 13" □	7 ¹ / ₄ " × 10 ¹ / ₂ "	7 ¹ / ₄ " × 10 1/ ₂ " □
Exposure glass	×	×	0	0	0	×	0	×	×	×	×	×	×
ADF	0	0	O *1	O *1	O *1	0	0	×*1	0	×*1	×*1	×*1	0


If you wish to switch to detectable paper size from 11" \times 17" \square to 11" \times 15" \square , from $8^1/_2$ " \times 14" \square to $8^1/_2$ " \times 13" \square , from $8^1/_2$ " \times 11" \square to 10" \times 8" \square , from 11" \times 8 $^1/_2$ " \square to 7 $^1/_4$ " \times 10 $^1/_2$ " \square , contact your service representative.

^{*2} You can select from $8^1/2^{"} \times 13^{"}$, $8^1/4^{"} \times 13^{"}$, $8^{"} \times 13^{"}$ with User Tools (System Settings).


^{*3} If you wish to switch to the detectable paper size from $8K\square$ to $11" \times 17"\square$, or from $16K\square\square$ to $8^1/2" \times 11"\square\square$, contact your service representative.

^{*4 8}K: 390 mm - 267 mm, 16K: 267 mm - 195 mm

Exposure glass

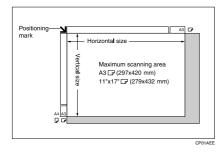

❖ ADF

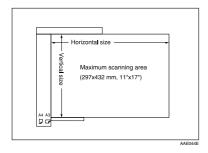

Note

- ☐ If you want to use the ADF to copy custom size originals that are between 432 mm and 1260 mm in length by using the ADF, contact your service representative.
- ☐ When you copy custom size originals, make sure you specify the size of the originals. If not, the image may not be copied properly.

p.24 "Custom sizes"


Sizes difficult to detect

It is difficult for the machine to automatically detect the sizes of the following types of originals, so select the paper size manually.

- Originals with indexes, tags, or other projecting parts
- Transparent originals such as OHP transparencies or translucent paper
- Dark originals with a lot of text and drawings
- · Originals which partially contain a solid image
- Originals which have solid images at their edges

Missing Image Area

Even if you place originals in the ADF or on the exposure glass correctly, 3 mm (0.1") margins on all four sides might not be copied.

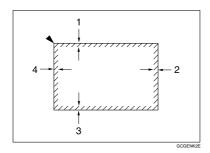

- ① 0.5 mm or more (Max 3.5 mm), 0.02" or more (Max 0.14")
- ② 2 ± 2 mm, $0.08" \pm 0.08"$
- 4 ± 2 mm, $0.16" \pm 0.08"$

Placing Originals

This section describes the procedure for placing originals on the exposure glass and in the ADF.

Take care to place originals after any correction fluid and ink has completely dried. Not taking this precaution could cause marks on the exposure glass that will be copied onto paper.



☐ For original sizes you can set, see "Originals".


₽ Reference

p.11 "Originals"

Original Orientation

When using the ADF, place the original face up.


When using the exposure glass, place the original face down.

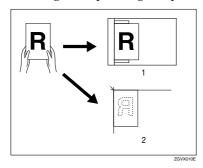

- ① ADF
- ② Exposure glass

When copying A3 \square or B4 JIS \square size originals, select \square as the Original Orientation. The machine then rotates the copy image by 90°. This is useful for copying large originals using the Staple, Duplex, Combine, or Stamp functions.

For example, to copy A3 \square or 11" × 17" \square originals with the Staple function selected:

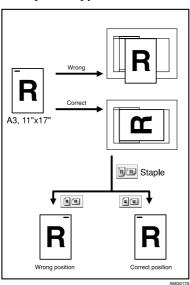

1 Press [Special Original].



2 Select the original orientation ([a or [a]), and then press [OK].

Note

☐ It is recommended that you use the Original Orientation function with the Auto Paper Select or Auto Reduce / Enlarge function.

Placing Originals on the Exposure Glass

Place originals on the exposure glass.

#Important


Do not lift the ADF forcefully. Otherwise, the cover of the ADF might open or be damaged.

1 Lift the ADF.

Be sure to lift the ADF by more than 30 degrees. Otherwise, the size of the original might not be detected correctly.

2 Place the original face down on the exposure glass. The original should be aligned to the rear left corner.

Start with the first page to be copied.

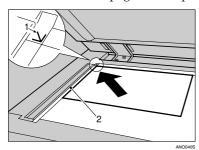

- Positioning mark
- ② Left scale

Lower the ADF.

Placing Originals in the Auto Document Feeder

Place originals in ADF.

There are four types of special originals. Setting should be made in the following situations:

- When placing originals consisting of more than 100 pages: See "Batch mode".
- ❖ When placing originals one by one: See "SADF mode".
- ❖ When placing originals of various sizes: See "Mixed size mode".
- When placing custom size originals: See "Custom sizes".


1 Adjust the guide to the original size.

2 Set the aligned originals face up into the ADF.


Do not stack originals beyond the limit mark.

The last page should be on the bottom.

Be sure not to block the sensor or load the original untidily. Doing so may cause the machine to detect the size of the scanned image incorrectly or display a paper misfeed message. Also, be sure not to place originals or other objects on the top cover. Doing so may cause a malfunction.

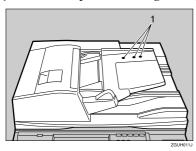

Sensors

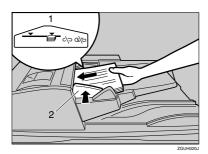

- ① Limit mark
- ② Document guide

Note

- ☐ Straighten curls in the originals before placing them on the ADF.
- ☐ To prevent multiple sheets from being fed at once, fan the original before placing it on the ADF.
- $\hfill\Box$ Set the original squarely.

p.20 "Batch mode"

p.21 "SADF mode"

p.22 "Mixed size mode"

p.24 "Custom sizes"

Batch mode

In Batch mode, the machine copies an original of more than 100 pages as one document, even if it is placed on the ADF in parts.

∰Important

- ☐ Place special originals, such as translucent paper, one by one.
- 1 Press [Special Original].



- 2 Select [Batch] and then press [OK].
- Place the first part of the original, and then press the [Start] key.
- After the first part of the original has been fed, place the next part, then press the [Start] key.

𝚱 Note

- ☐ When **[SADF]** is displayed in step **②**, set **[Batch]** with **[Switch to Batch]**. See "Input/Output", General Settings Guide.
- \square To copy subsequent originals in this mode, repeat step \P .
- □ When the Sort, Combine or 1 Sided→2 Sided mode has been set, press the [#] key after all originals have been scanned.

"Input/Output", General Settings Guide

SADF mode

In SADF mode, even when an original is placed page by page in the ADF, each page is automatically fed when placed.

#Important

- ☐ You should make a setting so that **[SADF]** is displayed when you press **[Special Original]**. See "Input/Output", General Settings Guide.
- 1 Press [Special Original].



- Press [SADF], and then press [OK].
- Place one page of an original, and then press the [Start] key.
- When the machine instructs you to place another original, place the next page. The second and subsequent pages will be fed automatically without pressing the [Start] key.
 - Note
 - □ When the Sort, Combine or 1 Sided→2 Sided mode has been set, press the [#] key after all originals have been scanned.

"Input/Output", General Settings Guide

Mixed size mode

 
In Mixed size mode, you can place originals of various sizes in the ADF at the same time if their widths are the same.

#Important

- When placing originals of different sizes in the ADF and making copies without using the Mixed size mode, paper might become jammed or parts of the original image might not be copied.
- ☐ The sizes of the originals that can be placed in this mode are follows:
 - Metric version
 A3□ and A4□, B4 JIS□ and B5 JIS□, A4□ and A5□
 - Inch version 11" \times 17" \square and $8^1/_2$ " \times 11" \square , $8^1/_2$ " \times 11" \square and $5^1/_2$ " \times $8^1/_2$ " \square
- \square You can place two different sizes of originals in the ADF at the same time.
- 1 Press [Special Original].



- 2 Select [Mixed Sizes], and then press [OK].
- 3 Align the rear and left edges of the originals as shown in the illustration.



- ① Place the originals into the ADF
- ② Vertical size
- **A**djust the guide to the widest original size.
- **5** Place originals in ADF.
- 6 Press the [Start] key.

Original size

Specify the size of the originals.


Regular sizes

Select the size of the originals from the regular sizes.

Press [Special Original].



- Press [Original Size] .
- Press [Regular Size].

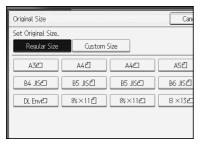

- **4** Select the size of original, and then press [OK] twice.
- Delace the original, and then press the [Start] key.

Custom sizes


When placing custom size originals in the ADF, specify the size of the originals.

#Important

- ☐ Paper that has a vertical length of 128–297 mm (5.1"-11.6") and a horizontal length of 128–432 mm (5.1"-17") can be placed with this function.
- 1 Press [Special Original].



- Press [Original Size].
- Press [Custom Size].
- Enter the horizontal size of the original with the number keys, and then press the [#] key.

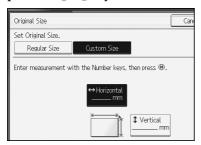

- Enter the vertical size of the original with the number keys, and then press the [#] key.
- 6 Press [OK] twice.
- Place the originals, and then press the [Start] key.

𝒜 Note

☐ If you make a mistake in step ② or ⑤, press [Clear] or the [Clear/Stop] key in step ⑥, and then enter the value again.

2. Copying

This chapter describes the procedure for making copies in various modes.

Basic Procedure

This section describes the basic procedure for making copies.

#Important

- ☐ When User Code Authentication is set, enter your user code (up to eight digits) with the number keys so that the machine accepts copy jobs. See "Administrator Tools", General Settings Guide.
- □ When Basic Authentication, Windows Authentication, LDAP Authentication, or Integration Server Authentication is set, enter your login user name and user password so that the machine accepts copy jobs. Ask the user administrator for the login user name and login password. For details, see "When the Authentication Screen is Displayed", About This Machine.
- Make sure "Ready" appears on the screen.

If any other function is displayed, press the **[Copy]** key on the left side of the control panel.

Initial copy screen



2 Make sure no previous settings remain.

When there are previous settings remaining, press the [Clear Modes] key and enter the setting again.

- Place your originals.
- 4 Make desired settings.
- **5** Enter the number of copies using the number keys.

The maximum copy quantity that can be set is 999.

Press the [Start] key.

The machine starts copying.

When placing originals on the exposure glass, press the [#] key after all originals are scanned.

Copies are delivered face down.

Note

- ☐ Always log off when you have finished using the machine to prevent unauthorized users from using the machine.
- ☐ To stop the machine during a multi-copy run, press the [Clear/Stop] key.
- ☐ To cancel all copy jobs and return the machine to the default condition, press the [Clear Modes] key.
- $\hfill\Box$ To clear entered values, press the [Clear/Stop] key or [Cancel] on the screen.
- $\hfill\Box$ To confirm settings, press [Check Modes].


"When the Authentication Screen is Displayed", About This Machine

"Administrator Tools", General Settings Guide

Interrupt Copy

Use this function to interrupt a long copy job to make urgently needed copies.

Press the [Interrupt] key.

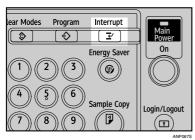

- **2** The machine stops scanning. Remove the originals that were being copied.
- Place the originals you want to copy.
- 4 Press the [Start] key.

The machine starts making copies.

- **5** When copying is complete, remove the originals and copies.
- 6 Press the [Interrupt] key again.

The interrupt key indicator goes off.

Replace the originals that you were copying, and then press the [Start] key.

Following message "Reset $\, \mathbf{x} \,$ originals.", replace the originals that you were copying.

☐ The previous copy job settings are restored. Simply press the **[Start]** key to continue copying from where it left off.

Left Original Beeper

The beeper sounds and an error message is displayed when you leave your originals on the exposure glass after copying.

Note


☐ For details, see "General Features", General Settings Guide.

"General Features", General Settings Guide


Copy Face Up

When using this function, copies are delivered in the reverse order from the originals.

• 1 Sided \rightarrow 1 Sided

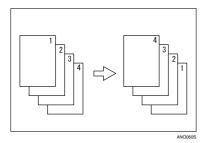


• $2 \text{ Sided} \rightarrow 2 \text{ Sided}$

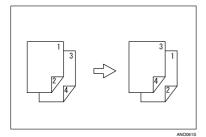

27

#Important

- ☐ Before using this function, register "Reverse Ejection: Face Up/ Down" as a copy function key. For details, see "General Features", General Settings Guide.
- Press [Reverse Ejection: Face Up/ Down].

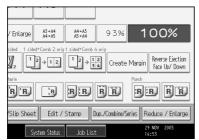


Place originals, and then press the [Start] key.

"General Features", General Settings Guide


Copying onto Tab Stock

 You can copy onto tab stock.



#Important

☐ Before using this function, set the tray for tab stock and set the position of the index tab. See "Tray Paper Settings", General Settings Guide.

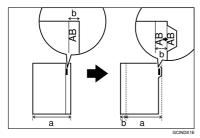


 \Box The tab stock can be placed in tray 2-3.

☐ When setting tab stock, always use the optional tab sheet fence.




- $\hfill \square$ Set tab stock so that it will be fed from the side without the tab first.
- \square Adjust the back fence position so that the tab sheet fence will fit the tab stock.

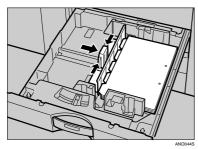

- **1** Select the paper tray where the tab stock is set.
- 2 Place originals, and then press the [Start] key.

𝒯 Note

- \square Check the position of the index tab to avoid cropping the image.
- \square Set the tab stock with the side to be copied facing down.
- \square Tab stock is always fed starting from the top tab.

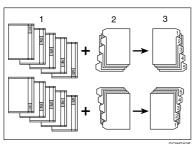

- ① Originals
- ② Tab stock
- 3 Copies

"Tray Paper Settings", General Settings Guide

Auto Start

Copying starts immediately when the machine is ready.

- Make your settings while "Select copy mode, then press the Start key." and "Scanning originals can be started." are displayed alternately.
- Place the original.
- Press the [Start] key.

The machine scans the original.

Copying starts automatically once the machine is ready.

Job Preset

You can set up the next copy job in the document server while the current one is processing.

When the current copy job is finished, the next copy job will start automatically.

Press [New Job] when "Copying..." appears.



- 2 Be sure message "Ready" appears, and then set up the next copy job.
- Place the originals, and then press the [Start] key.

All originals are scanned.

When the preset job is complete, a job preset confirmation dialog box appears.

Press [Exit].

You return to the copy screen.

After the current copy job, the next copy job starts automatically.

- ☐ You can switch the display to the current copy job by pressing [To Copying Screen]. You can switch the display to the preset job by pressing [To Reserv. Screen].
- \square Each job stored is allocated a job number that is displayed on the Reserved Job screen.

Job List

Jobs printed using Copy, Document Server, or Printer mode are temporarily stored in the machine, and then executed in order. The Job List function allows you to manage these jobs. For example, you can cancel incorrect job settings or print an urgent document.

Note

☐ You cannot use the Job List function when Interrupt Copy is active.


Job List screen

This section explains displays and icons that appear in the Job List screen.

The Job List screen varies depending on whether **[Job Order]** is selected with Print Priority for the System Settings. For details about the setting procedure, see "General Features", General Settings Guide.

❖ When [Job Order] is not selected:

The job list is displayed for each of the functions.

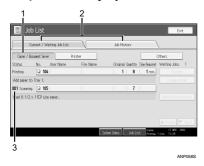

❖ When [Job Order] is selected:

The job list is displayed for all functions in the order of print jobs.



- ① Switches between job lists for each function.
- ② Switches between [Current / Waiting Job List] and [Job History].
- 3 Displays reserved job numbers.
- 4 Displays the function used to print jobs.
 - : Job printed using copy function.
 - 🖺: Job printed using printer function.
 - D: Job printed using Document Server function.
 - Job printed using DeskTopBinder.
 - Job printed using Web Image Monitor.

"General Features", General Settings Guide

Checking jobs in the print queue

You can check the contents of jobs in the print queue.

- Press [Job List].
- 2 Select the job you want to check.



- Press [Details], and then check the contents.
- Press [Exit].

Changing the order of jobs

You can change the order in which print jobs in the job list are served:

- Press [Job List].
- 2 Select the job whose order you want to change.



- Press [Change Order].
- 4 Change the order using [Top], [Previous], or [Next].



Press [OK].

Holding print jobs

The machine holds jobs that are queued and currently printing.

- Press [Job List].
- **2** Select the job(s) to hold.



Press [Suspend Printing].

Deleting jobs

You can delete job that is queued or currently printing.

- Press [Job List].
- 2 Select the job you want to delete.



- Press [Delete Reservation].
- Press [Yes].
 - Note
 - ☐ To delete multiple print jobs, select them in step ②.

Checking Job History

You can view the history contents of printed jobs.

- 1 Press [Job List].
- Press [Job History].

A list of completed print jobs appears.

- Press [Details] to check the contents of the displayed jobs.
- 4 Press [Exit].

Copying from the Bypass Tray


The bypass tray allows you to copy non-standard paper.

#Important

- ☐ The bypass tray is set to [1 Sided→2 Sided] by default. When copying from the bypass tray, select [1 Sided→1 Sided] in [Dup./Combine/Series]. You can change the initial settings. See "Programming Defaults in Initial Display".
- ☐ Paper has a vertical length of 100-305 mm (3.9-12 inch) and a horizontal length of 139.7-600 mm (5.5-23.6 inch) can be copied from the bypass tray.
- ☐ The machine can automatically detect the following sizes as standard size copy paper:
 - Metric version: A3□, A4□, A5□
 - Inch version: A3 \square , 11" × 17" \square , 8¹/₂" × 14" \square , 5¹/₂" × 8¹/₂" \square
- ☐ If you want to use the size of paper other than the above, be sure to specify the size.
- ☐ When copying on OHP transparencies or paper heavier than 105 g/m² (about 27.9 lb.), you need to specify the type and size of paper with "Special Original".
- ☐ The maximum number of sheets you can load into the bypass tray depend on paper type. The number should not exceed the upper limit.
- ☐ When paper larger than 433 mm (17.1 inch) in size is used, the paper may become wrinkled, may not be fed into the machine, or may cause paper jams.
- ☐ When copying onto special paper such as adhesive labels, always select "Face Up". If you select "Face Down", a paper misfeed may occur.
- ☐ If you place originals on the exposure glass and want the copies to be delivered face down, select "Face Down" for both "Copy Eject Face Method in Glass Mode" and "Copy Eject Face Method in Bypass Mode" of User Tools.

❖ [Bypass Tray Usage]

Press [Bypass Tray Usage] to display a description on using the bypass tray.

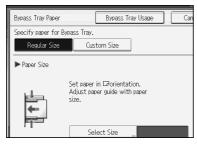

1 Open the bypass tray.




Insert the paper face-up until you hear the beep, and then align the paper guide to the paper size.

If the guide is not flush against the copy paper, images might be skewed or paper misfeeds might occur.

Do not stack paper over the upper limit mar, otherwise, images might be skewed or paper misfeeds might occur.

Swing out the extender to support paper sizes larger than A4 \square or $8^1/2" \times 11" \square$.

To prevent multiple sheets from being fed at once, fan paper before placing it on the tray.

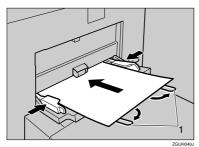

① Extender

- Press the [#] key.
- Select the size and type of the paper.
- Delace the paper, and then press the [Start] key.
- 6 When the copy job is finished, press the [Clear Modes] key to clear the settings.

Note

□ When the Sort function is selected, press the [#] key after all originals have been scanned.

₽ Reference

p.139 "Programming Defaults in Initial Display"

When copying onto Regular Size Paper

Makes copies onto regular size paper from the bypass tray.

- Open the bypass tray, and then align the paper guide to the paper size.
- 2 Insert the paper face-up until you hear the beep.
- Press the [#] key.
- Press [Select Size].



- **5** Select the paper size.
- 6 Press [OK] twice.


When copying onto Custom Size Paper

Makes copies onto custom size paper from the bypass tray.

- Open the bypass tray, and then align the paper guide to the paper size.
- 2 Insert the paper face-up until you hear the beep.
- Press the [#] key.
- Press [Custom Size].



- Enter the horizontal size of the original with the number keys, and then press [#].
- 6 Enter the vertical size of the original with the number keys, and then press [#].

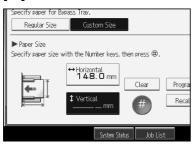

Press [OK].

- Note
- ☐ If you make a mistake in step ⑤ or ⑥, press [Clear] or the [Clear/Stop] key, and then enter the value again.
- ☐ To register the custom size entered in ⑤, press [Program] and then press [Exit] in the confirmation screen.

When copying onto OHP Transparencies

When copying onto OHP transparencies, select the type and size of paper.

∰Important

- ☐ We recommend that you use specified OHP transparencies.
- ☐ OHP transparencies must be loaded face up in the tray with the notched corner of the sheet in the appropriate corner of the tray.
- ☐ To prevent multiple sheets from being fed at once, fan paper before placing it on the tray.
- ☐ When copying onto OHP transparencies, remove copied sheets one by one.
- Open the bypass tray, and then align the paper guide to the paper size.
- 2 Insert the paper face-up until you hear the beep.
- Press the [#] key.
- Select paper type ([OHP (Transparency)]) in the Special Paper settings.



- **5** Select the paper size, and then press [OK] twice to return to the initial display.
- Delace the paper, and then press the [Start] key.
- When the copy job is finished, press the [Clear Modes] key to clear the settings.

Note

- ☐ For OHP transparencies, print speed is slower when compared to printing on plain paper.
- ☐ If you have selected **[OHP (Transparency)]** in "Special Paper", you cannot have copies delivered face down.

When copying onto Thick Paper

When copying onto thick paper, select the type and size of paper.

To prevent multiple sheets from being fed at once, fan paper before placing it on the tray.

- Open the bypass tray, and then align the paper guide to the paper size.
- 2 Insert the paper face-up until you hear the beep.
- Press the [#] key.
- Press [Thick Paper].
- **5** Select the paper size.
- 6 Press [OK] twice.
- Place the paper, and then press the [Start] key.
- When the copy job is finished, press the [Clear Modes] key to clear the settings.

- ☐ For thick paper, print speed is slower when compared to printing on plain paper.
- ☐ If you have selected [Thick Paper] in "Special Paper", you cannot have copies delivered face down.

Copier Functions

This section describes the copy functions.

Adjusting Copy Image Density

There are three types of adjustment available.

Auto Image Density

The machine automatically adjusts the image density by scanning the densities of originals. Dark texture originals (such as newspaper or recycled paper) will be copied so that background will not be reproduced.

Manual image density

You can adjust the general density of the original in seven increments.

Combined auto and manual image density

Adjusts the density of an image only for dark texture originals.

Auto image density

The machine automatically adjusts the image density by scanning the densities of originals. Dark texture originals (such as newspaper or recycled paper) will be copied so that background will not be reproduced.

1 Make sure that [Auto Density] is selected.



Manual image density

You can adjust the general density of the original in seven increments.

- If [Auto Density] is selected, press [Auto Density] to cancel it.
- Press [◀] or [▶] to adjust the image density. The density indicator "▽" moves.



Combined auto and manual image density

Adjusts the density of an image only for dark texture originals.

- 1 Make sure [Auto Density] is selected.
- Press [◀] or [▶] to adjust the density. The density indicator "▽" moves.



Selecting the Original Type Setting

Select one of the following 5 types to match your originals:

❖ Text

When originals contain only text (no pictures).

❖ Text/Photo

When originals contain photographs or pictures alongside the text.

Photo

When you want to reproduce the delicate tones of photographs and pictures.

- When copying developed photographs:
- When copying photographs or pictures that are printed on paper (e.g. magazines):
- When copying copies or originals generated by printers:

❖ Pale

When you want to reproduce originals that have lighter lines in pencil, or faintly copied slips. Faint lines are copied with greater clarity.

❖ Generation Copy

When originals are copies (generation copies), the copy image can be reproduced sharply and clearly.

1 Select the original type.



Note

☐ You can select the type of originals shown on the initial screen, when [Original Type Display] is set to [On] in [General Features] under [Copier / Document Server Features].

"General Features", General Settings Guide

Selecting Copy Paper

There are two ways to select copy paper:

❖ Auto Paper Select

The machine selects a suitable size of copy paper automatically based on the original size and the reproduction ratio.

❖ Manual Paper Select

Choose the tray containing the paper you wish to copy onto: a paper tray, by-pass tray or Large Capacity Tray (LCT).

The following table shows copy paper sizes and directions that can be used with Auto Paper Select (when copying at a ratio of 100%).

Metric version

Original location	Paper size and orientation
Exposure glass	A3□, B4 JIS□, A4□□, B5 JIS□□, A5□, 8¹/2" × 13"□
ADF	A3 \square , B4 JIS \square , A4 \square \square , B5 JIS \square \square , A5 \square \square , B6 JIS \square \square , 81/2" × 13" \square , 8K \square , 16K \square \square

Inch version

Original location	Paper size and orientation
Exposure glass	$11" \times 17" \square, 8^1/_2" \times 14" \square, 8^1/_2" \times 11" \square \square, 8^1/_2" \times 5"^1/_2 \square$
ADF	A3 \square , A4 \square \square , 11" × 17" \square , 8 $^1/_2$ " × 14" \square , 8 $^1/_2$ " × 11" \square \square , 5 $^1/_2$ " × 8 $^1/_2$ " \square \square , 10" × 14" \square , 7 $^1/_4$ " × 10 $^1/_2$ " \square

Note

□ Only the paper trays set to **[No Display]** or **[Recycled Paper]** in Paper Type and also set to **[Yes]** in Apply Auto Paper Select in Tray Paper Settings can be selected in Auto Paper Select mode.


p.12 "Originals not recommended for the Auto Document Feeder (ADF)" "Tray Paper Settings", General Settings Guide

Auto Paper Select

The machine selects a suitable size of copy paper automatically based on the original size and the reproduction ratio.

1 Make sure that [Auto Paper Select] is selected.

Trays with a key mark (17) will not be automatically selected. See "General Features", General Settings Guide.

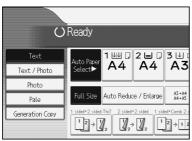


Manual Paper Select

Choose the tray containing the paper you wish to copy onto: a paper tray, bypass tray or Large Capacity Tray (LCT).


Select the tray containing the paper you wish to copy onto: a paper tray, bypass tray or Large Capacity Tray (LCT).

The indicator corresponding to the selected paper tray is highlighted. See "Copying from the Bypass Tray".

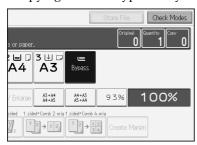

𝒯 Note

  \square If the direction in which your original is placed (\square or \square) is different from that of the paper you are copying onto, this function rotates the original image by 90° and fits it on the copy paper (rotated copy).



- ☐ This function works when [Auto Paper Select] or [Auto Reduce / Enlarge] is selected. See "Auto Paper Select" and "Auto Reduce / Enlarge".
- ☐ The default setting for Auto Tray Switching is [With Image Rotation]. You cannot use the Rotated Copy function if this setting is changed to [Without Image Rotation] or [Off]. See "General Features", General Settings Guide.
- □ Depending on the settings for the Punch, Staple or Z-fold functions, you may not be able to use the Rotated Copy function.

p.36 "Copying from the Bypass Tray"

p.51 "Auto Reduce/Enlarge"


p.61 "Staple"

p.64 "Punch"

"General Features", General Settings Guide

Preset Reduce/Enlarge


Reduces or enlarges images. You can select a preset ratio for copying.

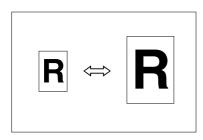


❖ Base Point

The base point of Reduce/Enlarge differs depending on how the original is scanned. When the original is set on the exposure glass, the upper left corner will be the base point. When it is set to ADF, the bottom left corner of the original will be the base point.

Shown below are the resulting copy images that differ depending on how the original is scanned.

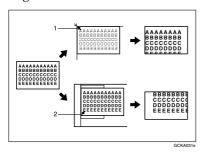

- ① Base point when placed on the exposure glass.
- ② Base point when placed in the ADF.
- 1 Press [Reduce / Enlarge].

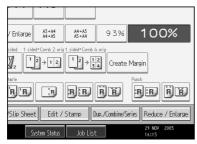

- 2 Select a ratio, and then press [OK].
- Place the originals, and then press the [Start] key.


 - ☐ To select a preset ratio on the initial display in step **1**, press the shortcut reduce/enlarge key and go to step **5**.

"Reproduction Ratio", General Settings Guide

Create Margin function

Use Create Margin to reduce the image to 93% of original size using the centre as reference. By combining it with the Reduce/Enlarge function, you can also provide the Reduce/Enlarge copy with a margin.

Press [Create Margin] displayed on the initial display.

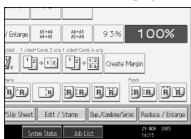


2 If you do not wish to combine it with the Reduce/Enlarge function, place your originals, and then press the [Start] key.

"General Features", "Reproduction Ratio", General Settings Guide

Zoom


You can change the reproduction ratio in increments of 1%.

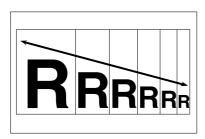

To select the ratio with [-] and [+]

Select a ratio using [-] or [+].

1 Press [Reduce / Enlarge].

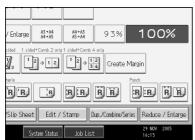

- 2 Select a preset ratio which is close to the desired ratio.
- Specify the ratio using [—] or [+].


Pressing [—] or [+] changes the ratio in increments of 1%. Pressing and holding down the relevant key changes the ratio in increments of 10%.

- Press [OK].
- Delace the originals, and then press the [Start] key.
 - Ø Note
 - ☐ If you have incorrectly entered the ratio in ②, readjust it with [一] or [十].

To enter the ratio with the number keys

Select a ratio using the number keys.

1 Press [Reduce / Enlarge].

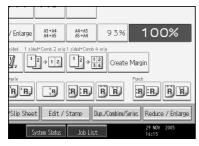


- Press [Number keys].
- Enter the desired ratio with the number keys, and then press the [#] key.
- 4 Press [OK] twice.

Delace the originals, and then press the [Start] key.

Auto Reduce/Enlarge

The machine automatically chooses an appropriate reproduction ratio based on the paper and original sizes you select.

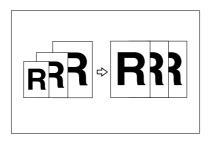

∰Important

- ☐ You cannot use the bypass tray with this function.
- ☐ When using Auto Reduce/Enlarge, see the following table for original sizes and orientations you can use:

Metric version

Original location	Original size and orientation
Exposure glass	A3□, B4 JIS□, A4□□, B5 JIS□□, A5□, 8¹/2" × 13"□
ADF	A3□, B4 JIS□, A4□□, B5 JIS□□, A5□□, B6 JIS□□, 8¹/2" × 13"□, 8K□, 16K□□

Inch version

Original location	Paper size and orientation
Exposure glass	$11" \times 17" \square, 8^{1}/_{2}" \times 14" \square, 8^{1}/_{2}" \times 11" \square \square, 8^{1}/_{2}" \times 5^{1}/_{2}" \square$
ADF	$\begin{array}{c} \text{A3$\square, A4$\square\square, 11"} \times 17"\square, 8^1/_2" \times 14"\square, 8^1/_2" \times 11"\square\square, \\ 5^1/_2" \times 8^1/_2"\square\square, 10" \times 14"\square, 7^1/_4" \times 10^1/_2"\square \end{array}$

Press [Auto Reduce / Enlarge].




- **2** Select the paper type.
- Place the originals, and then press the [Start] key.

p.12 "Originals not recommended for the Auto Document Feeder (ADF)"


Size Magnification

You can calculate an enlargement or reduction ratio based on the lengths of the original and copy.

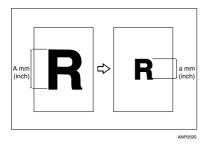

Measure and specify the lengths of the original and copy by comparing "A" with "a".


1 Press [Reduce / Enlarge].

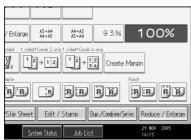

- 2 Press [Size Magnification].
- Enter the length of the original with the number keys, and then press the [#] key. You can enter sizes between 1 to 999 mm (0.1" to 99.9") in 1 mm (0.1") steps.
- **1** Enter the length of the copy with the number keys, and then press the [#] key.
- Press [OK] twice.
- 6 Place the originals, and then press the [Start] key.
 - Note
 - ☐ To change the length after pressing the [#] key in ⑤, select [Original] or [Copy], and then enter the desired length.

Directional Magnification (%)

Specify the horizontal and vertical lengths of the original and copy image at different reproduction ratio. Copies can be reduced or enlarged at different reproduction ratios horizontally and vertically.

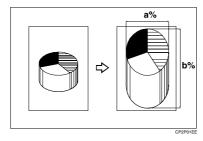


- a: Horizontal ratio
- b: Vertical ratio

2

To enter the ratio with the number keys

Select a ratio using the number keys.

1 Press [Reduce / Enlarge].

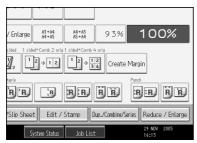


- Press [Direct. Mag. %].
- Press [Horizontal].
- 2 Enter the desired ratio with the number keys, and then press the [#] key.
- Press [Vertical].
- 6 Enter the desired ratio with the number keys, and then press the [#] key.
- Press [OK] twice.
- Place the originals, and then press the [Start] key.

To specify a ratio with [-] and [+]

Select a ratio using [—] or [+].

1 Press [Reduce / Enlarge].

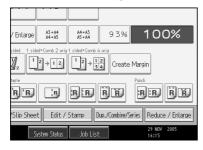

- Press [Direct. Mag. %].
- Press [[+] [-] keys].
- Press [Horizontal].


5 Specify the desired ratio using [+] or [-].

Pressing [+] or [-] changes the ratio in increments of 1%. Pressing and holding down the relevant key changes the ratio in increments of 10%.

- 6 Press [Vertical].
- **2** Specify the desired ratio using [+] or [-].
- Press [OK] twice.
- Place the originals, and then press the [Start] key.
 - Note
 - ☐ If you have incorrectly entered the ratio in steps ⑤ or ⑥, readjust it with [+] or [—].

Directional Size Magnification (mm)


A suitable reproduction ratio is automatically selected when you enter the horizontal and vertical lengths of the original and copy image you require.

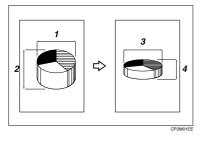

- ① Horizontal original size: A mm (inch)
- ② Vertical original size: B mm (inch)
- 3 Horizontal copy size: a mm (inch)
- 4 Vertical copy size: b mm (inch)

Measure and specify the lengths of the original and copy by comparing "A" with "a" and "B" with "b".

1 Press [Reduce / Enlarge].

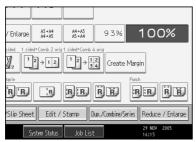

- Press [Dir. Size Mag. mm].
- Enter the horizontal size of the original with the number keys, and then press the [#] key.

You can enter sizes between 1 to 999 mm (0.1" to 99.9") in 1 mm (0.1") steps.

- Enter the horizontal size of the copy with the number keys, and then press the [#] key.
- Enter the vertical size of the original with the number keys, and then press the [#] key.

You can enter sizes between 1 to 999 mm (0.1" to 99.9") in 1 mm (0.1") steps.

- **6** Enter the vertical size of the copy with the number keys, and then press the [#] key.
- Press [OK] twice.
- Place the originals, and then press the [Start] key.
 - Note
 - ☐ To change a length in steps ② to ③, press the key you wish to change and enter the new value.

Sort


The machine assembles copies as sets in sequential order.

#Important

 - ☐ To use the Rotate Sort function, two paper trays with paper identical in size and different in direction (☐ ☐) are required. See "Tray Paper Settings", General Settings Guide.
- ☐ You cannot use the bypass tray with Rotate Sort.


Sort

Copies are assembled as sets in sequential order.



* Rotate Sort

 Every other copy set is rotated by 90 degrees ($\square \, \square$) and delivered to the copy tray.



- 1 Press [Finishing].
- 2 Select [Sort] or [Rotate Sort], and then press [OK].

When a finisher is not installed:



When a finisher is installed:



- Enter the number of copy sets using the number keys.
- 4 Set the originals.

When placing originals on the exposure glass, start with the first page to be copied. When placing originals in the ADF, set the first page on top.

When placing originals on the exposure glass or in the ADF using the Batch function, press the [#] key after all the originals have been scanned.

- Press the [Start] key.
 - Note
 - ☐ To confirm the type of finishing, press the [Sample Copy] key in step 4.

"Input/Output", "General Features", General Settings Guide


Sample copy

You can use this function to check the copy settings before making a long copy run.

∰Important

- ☐ This function can be used only when the Sort function is turned on.
- Select Sort and any other necessary functions, and the place the originals.
- Press the [Sample Copy] key.

One copy set is delivered as a sample.

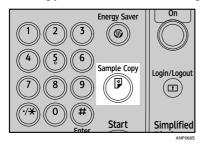

If the sample is acceptable, press [Continue].

The number of copies made is smaller than the specified number by one.

- **𝒯** Note
- □ If you press **[Suspend]** after checking the results, you can return to step **①**. You can change the settings for Staple, Punch, Duplex (1 Sided \rightarrow 1 Sided, 1 Sided \rightarrow 2 Sided), Orientation, Margin Adjust., Cover Sheet, and Designate. However, depending on the combination of functions, you may not be able to change some settings.

Changing the Number of Sets

You can change the number of copy sets during copying.

#Important

- $\hfill\square$ This function can be used only when the Sort function is turned on.
- While "Copying..." is displayed, press the [Clear/Stop] key.
- **2** Press [Change Quantity].



- Enter the number of copy sets with the number keys, and then press the [#] key.
- Press [Continue].

 
Copying starts again.

Note

☐ The range of print copies enterable in step ② depends on when the 【Clear/Stop】 key is pressed.

Stack

This function groups together copies of each page in a multi-page original.



Every other page stack is shifted for ease of separation.

∰Important

 $\hfill \square$ You cannot use the bypass tray with this function.


Press [Stack].



- **2** Enter the number of copies with the number keys.
- Place the originals, and then press the [Start] key.
 - Note
 - □ When placing originals on the exposure glass, start with the first page to be copied. When placing originals in the ADF, set the first page on top.

Staple

Individual copy sets can be stapled.

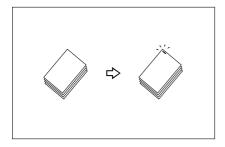

∰Important

- ☐ If you select Saddle Stitch without having the stapler cartridge for Saddle Stitch set in the booklet finisher, a paper misfeed might occur.
- ☐ You cannot use the bypass tray with this function.

Original orientation and stapling position

Place originals in the ADF in the orientation in which they can be read normally. When placing the original on the exposure glass, keep the same orientation, but set the original facing downwards.

When copy paper is identical in size and orientation to the original, the original orientations and staple positions are as follows.

❖ 3,000Sheet-50Sheet Staple Finisher, 3,000Sheet-100Sheet Staple Finisher

		Original location		Stanling
		Exposure glass	Document Feeder	Stapling position
	Тор	A	R	→ ®R
'R'R	≗	F	R -	→ ®R
	Top slant	A	R -	→ R
R R			R	→ [©] R
R R	Bottom		R	→ _R
وم رق		A	R -	→ R
RR	Left 2	A	R	→
		Ø.	R -	→ (BR
5 5	Top 2		R	→ R
n) K)		a		→ R ANPO14S


ANP014

❖ Booklet finisher

		Original location		Stapling
		Exposure glass	Document Feeder	position
'R 'R	Тор	A	R	→ R
N N	ĭ	Ŕ	R -	→ ®R
R'R)	Top slant	A	R	→ (R
	Top		R	→ [©] R
	Bottom		R	→ R
R R		A	R -	→ R
	Left 2	A	R	→ 『R
'R R	Lef	A)	[R] -	→ R
R R	Top 2		। R	→ R
R) K)		A	R	→ ®
	stitch	FS	R -	→ [3R]
L'B)	Saddle stitch	S.	B -	- P

This table shows the stapling positions, not the orientation of delivery. Not available for vertical Left 2 and horizontal Top 2 for A3 or B4 JIS size paper.

- 1 Press [Finishing].
- **2** Select one of the stapling positions.

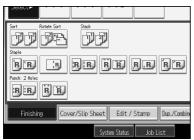

When you select a stapling position, Sort mode is automatically selected.


- Enter the number of copy sets using the number keys.
- 4 Place the originals, and then press the [Start] key.
 - Note
 - ☐ When placing originals on the exposure glass, start with the first page to be copied. When placing originals in the ADF, set the first page on top.
 - □ When placing originals on the exposure glass or in the ADF using the Batch function, press the [#] key after all the originals have been scanned.

"Input/Output", General Settings Guide


Punch

You can make punch holes in copies.


❖ 2 holes

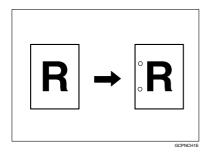

❖ 3 holes

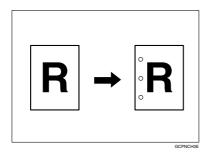

❖ 4 holes

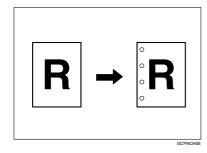

2

∰Important

- ☐ The 4-hole punch type is only capable of punching in the 4-hole format.
- ☐ You cannot use the bypass tray with this function.

Original orientation and punch hole positions


The relationship between the orientation in which you place the original and the punch hole positions is as follows:

			Punch hole		
			Exposure glass	ADF	positions
Standard	2 holes	₽		R	₿R
		┏	8	R	₿R
	3 holes	₽		R	: R
		┏	9	R	: R
	4 holes	₽		R	₿R
		D	<u> </u>	R	₿̂R
90° Turn	2 holes	₽			Ř
		₽			Ř
	3 holes				$ {\mathring{\mathbf{R}}}$
		┏		R	R
	4 holes	D			°°°°
		₽	C	<u> </u>	Ř

This table shows the punch hole positions, not the orientation of delivery.

Not available for vertical 2 hole left and horizontal 2 hole top for A3 or B4 JIS size paper.


- 1 Press [Finishing].
- **2** Select one of the punch hole positions.

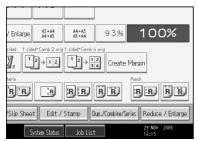

Place the originals, and then press the [Start] key.

Z-fold

Makes two parallel folds, one of which faces in and the other facing out.

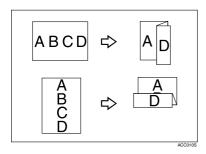

Note

☐ You cannot use the bypass tray with this function.

₽ Reference


"General Features", General Settings Guide.

Using the Z-fold Support Tray

When using the Z-fold function together with the Staple functions, attach the Z-fold support tray to the upper tray or the shift tray of the booklet finisher or the 3,000Sheet-100Sheet Staple Finisher.

❖ 3,000Sheet-100Sheet Staple Finisher

• Finisher upper tray

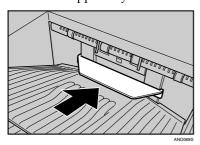


• Finisher shift tray
Fit the hooks of the Z-fold support tray into the holes in the finisher's shift tray.



Booklet Finisher


• Finisher upper tray

Fit the hooks of the Z-fold support tray into the dents in the finisher's upper tray.

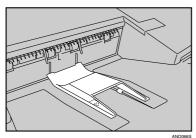


Finisher shift tray

Open and close the front cover to reset the machine. Fit the hooks of the Z-fold support tray into the holes in the finisher's shift tray while keeping the front cover open.

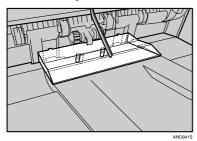


Close the front cover of the finisher. The Z-fold support tray is lowered to complete the installation.

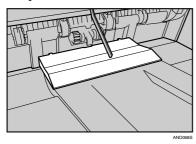

Note

□ Remove the Z-fold support tray when outputting prints to the finisher's shift tray without using the Z-fold function. If you leave the Z-fold support tray in place, prints are not stacked properly.

 Z-fold positions and Z-folding Copies



The above table shows Z-folding positions. The orientation of the paper does not indicate direction of delivery.

1 Press [Finishing].



2 Select the folding direction, and then press [OK].




Place the originals, and then press the [Start] key.

Duplex

There are two types of duplex copies:


$\ \, \textbf{1} \,\, \text{Sided} \rightarrow \textbf{2} \,\, \text{Sided} \\$

Copies 2 one-sided pages onto 1 two-sided page.

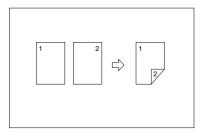

❖ 2 Sided \rightarrow 2 Sided


Copies 1 two-sided page onto 1 two sided page.

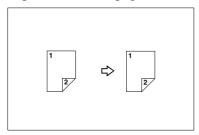


Original orientation and completed copies

Copy images differ according to the orientation in which you place the originals (\Box or \Box).


The table shows the orientation of images on the front and back of copies, not the orientation of delivery.

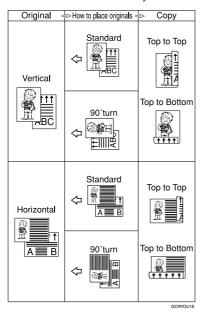

1 Press [Dup./Combine/Series].

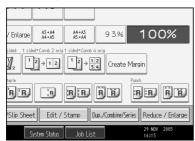

2 Select [1 Sided→2 Sided] or [2 Sided→2 Sided].

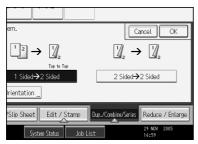

- Press [OK].
- Place the originals, and then press the [Start] key.

Note

- \square You cannot use the bypass tray with this function.
- □ The maximum paper weight that can be used with duplex copying is $64-127.9 \text{ g/m}^2 (17.1-34.1 \text{ lb.})$.
- ☐ When placing originals on the exposure glass, start with the first page to be copied. When placing originals in the ADF, set the first page on top.
- \square You can also select "1 Sided \rightarrow 2 Sided" or "2 Sided \rightarrow 2 Sided" directly by pressing the copy function key in step \square . In that case, proceed to step \square .
- ☐ To change originals and copy orientation in step ♠, press [Orientation].
- □ When placing originals on the exposure glass or in the ADF using the Batch function, press the [#] key after all the originals have been scanned.

₽ Reference

p.91 "Margin Adjustment"

"Edit", General Settings Guide.

Originals and copy orientation

 
The orientation can be selected when copying Duplex job.

• Top to Top



Duni

• Top to Bottom



Duplex2

Select orientation [Top to Top] or [Top to Bottom], and then press [OK].



𝒯 Note

☐ The default setting is **[Top to Top]**. You can change the default orientation with Copier Features.

"General Features", General Settings Guide


One-Sided Combine

Combine several pages onto one side of a sheet.

There are six types of One-Sided Combine.


$\ \, \textbf{1} \,\, \textbf{Sided} \,\, \textbf{2} \,\, \textbf{Pages} \rightarrow \textbf{Combine} \,\, \textbf{1} \,\, \textbf{Side} \\$

Copies 2 one-sided originals to one side of a sheet.

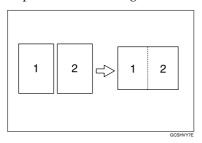

❖ 1 Sided 4 Pages → Combine 1 Side


Copies 4 one-sided originals to one side of a sheet.

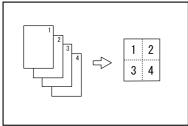

SCSHVV8

$\ \, \textbf{1 Sided 8 Pages} \rightarrow \textbf{Combine 1 Side}$


Copies 8 one-sided originals to one side of a sheet.

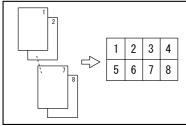

GCSHVY3


❖ 2 Sided 1 Page → Combine 1 Side

Copies 1 two-sided original to one side of a sheet.

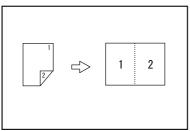


❖ 2 Sided 2 Page → Combine 1 Side

Copies 2 two-sided originals to one side of a sheet.

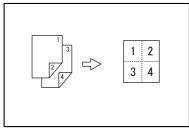


❖ 2 Sided 4 Page → Combine 1 Side


Copies 4 two-sided originals to one side of a sheet.

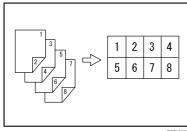

 Orientation of the original and combine image position Open to left (\square) originals



Open to top (\Box) originals

 


Placing originals and copying


• Originals read from left to right



 • Originals read from top to bottom



1 Press [Dup./Combine/Series].

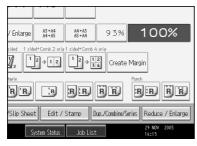

- Press [Combine].
- Select [1 Sided] or [2 Sided] for original, and then press [Combine 1 Side] for Copy.



4 Select the number of originals to combine.

- **5** Select the paper.
- Press [OK].
- Place the originals, and then press the [Start] key.

- ☐ You cannot use the bypass tray with this function.
- ☐ You can also select [1 sided→Comb 2 orig] or [1 sided→Comb 4 orig] directly by pressing the copy function key in step ①. In that case, proceed to step ②.

p.73 "Originals and copy orientation"

"Edit", General Settings Guide


Two-Sided Combine

Combine various pages of originals into one sheet with two sides.

There are six types of Two-Sided Combine.


❖ 1 Sided 4 Pages → Combine 2 Sides

Copies 4 one-sided originals to one sheet with two pages per side.

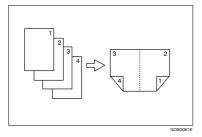

❖ 1 Sided 8 Pages → Combine 2 Sides


Copies 8 one-sided originals to one sheet with four pages per side.

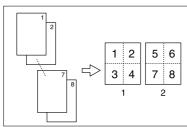

77


❖ 1 Sided 16 Pages → Combine 2 Sides

Copies 16 one-sided originals to one sheet with eight pages per side.

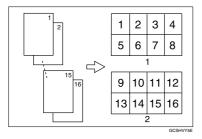


\clubsuit 2 Sided 4 Pages \rightarrow Combine 2 Sides

Copies 2 two-sided originals to one sheet with two pages per side.

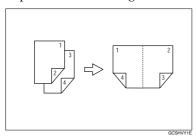

\clubsuit 2 Sided 8 Pages \rightarrow Combine 2 Sides


Copies 4 two-sided originals to one sheet with four pages per side.

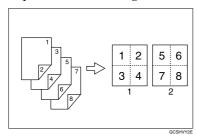


- ① Front
- ② Back

❖ 2 Sided 16 Pages → Combine 2 Sides

Copies 8 two-sided originals to one sheet with eight pages per side.

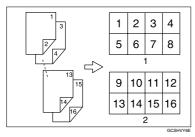

- ① Front
- ② Back
- 1 Press [Dup./Combine/Series].

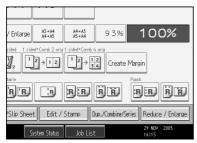

- Press [Combine].
- Select [1 Sided] or [2 Sided] for Original, and then press [Combine 2 Sides] for Copy.



- **A** Select the number of originals to combine.
- **5** Select the paper.
- Press [OK].
- Place the originals, and then press the [Start] key.

Note

☐ You cannot use the bypass tray with this function.

p.73 "Originals and copy orientation"

"Edit", General Settings Guide

Series Copies

This function copies the front and back of a two-sided original separately, or the two facing pages of a bound original onto two sheets.

There are two types of Series Copies.

∰Important

- ☐ You cannot use the Series Copies function with the ADF.
- ☐ The following table shows the paper sizes of two facing pages of a bound original (book) and one-sided copy (when copying at a ratio of 100%).

Metric version

Original	Paper for 1-sided copy
A3 □	A4
B4 JIS⊡	B5 JIS × 2 sheets
A4 □	A5 × 2 sheets

AMA020


Inch version

Original	Paper for 1-sided copy	
11" × 17" □¬	8 ¹ / ₂ ×11"	
8 ¹ / ₂ × 11"□	5 ¹ / ₂ ×8 ¹ / ₂	

AMA0275


❖ Book → 1 Sided

You can make one-sided copies from two facing pages of a bound original (book).

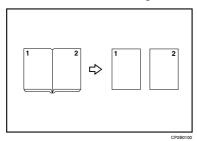


❖ 2 Sided → 1 Sided

You can make one-sided copies from two-sided originals.

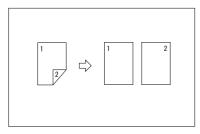

Press [Dup./Combine/Series].

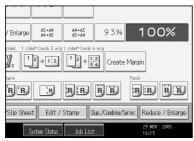

- Press [Series].
- 3 Select [2 Sided→1 Sided] or [Book→1 Sided], and then press [OK].

 If you selected [2 Sided→1 Sided], you can change the orientation.
- Press [OK].
- Place the original on the exposure glass, and then press the [Start] key.
 - Note
 - □ If you selected [Book→1 Sided], press the [#] key after all originals have been scanned.

Booklet/Magazine

Copies two or more originals in page order.

There are six types of Booklet/Magazine.

The following table shows the paper sizes of two-sided original and two-sided copy (when copying at a ratio of 100%).

❖ Metric version

Original	Paper for 1-sided copy
A3 □	A4 🕽 (2-sided)
B4 JIS⊡	B5 JIS ☐ (2-sided)
A4 □	A5 (2-sided)

❖ Inch version


Original	Paper for 1-sided copy	
11" × 17" □	8 ¹ / ₂ ×11" (2-sided)	
8 ¹ / ₂ × 11" □	5 ¹ / ₂ ×8 ¹ / ₂ (2-sided)	

ANP0615


\clubsuit 1 Sided \rightarrow Booklet

Make copies in page order for a folded booklet as shown.

• Open to left

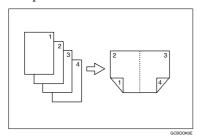


· Open to right

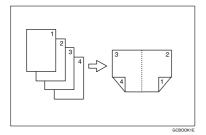


❖ 2 Sided → Booklet

Make two-sided originals to copies in page order for a folded booklet as shown.

• Open to left

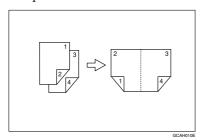


• Open to right

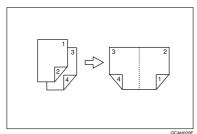


❖ 1 Sided → Magazine

Copies two or more originals to make copies in page order when they are folded and stacked.

• Open to left

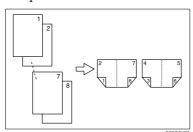


• Open to right

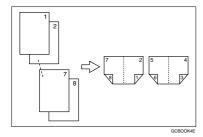

$\ \, \textbf{ 2 Sided} \rightarrow \textbf{Magazine}$


Copies two or more originals of two-sided to make copies in page order when they are folded and stacked. $\,$

• Open to left

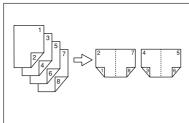


GCAH030

• Open to right

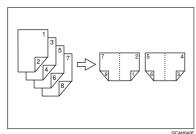

❖ Book → 2 Sided


Copies a two-page spread original onto one sheet with one page per side.

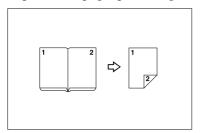

You cannot use the bypass tray with "Book \rightarrow 2 Sided" or "Front&Back \rightarrow 2 Sided".


❖ Front & Back → 2 Sided

Copies each two-page spread original as it is onto both sides of a sheet.

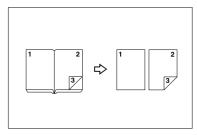

How to fold and unfold copies to make a booklet

As shown below, fold a copy along the centreline, and open.

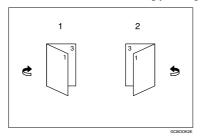


- ① Open to left
- ② Open to right


How to fold and unfold copies to make a magazine

As shown below, fold and stack copies to make a magazine, and open.

• Open to left

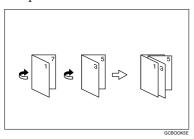


Open to right

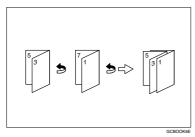

#Important

- ☐ Before using this function, select [Open to Left] or [Open to Right] with [Orientation: Booklet, Magazine] in advance. See "General Features", General Settings Guide.
- 1 Press [Dup./Combine/Series].

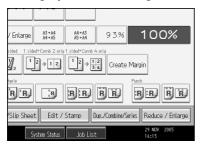

- Press [Book].
- Select a book type separately for the original ([1 Sided] or [2 Sided]) and copy ([Booklet] or [Magazine]), or select a book type from [Book-2 Sided] and [Front&Back-2 Sided].
- Select the paper.
- Press [OK].

6 Place the originals, and then press the [Start] key.

- **𝒜** Note
- ☐ You cannot use the bypass tray with this function.
- □ When placing originals on the exposure glass or in the ADF using the Batch function, press the [#] key after all the originals have been scanned.
- $\ \square$ The machine automatically selects the reproduction ratio automatically to the paper size.
- **₽** Reference


"Copier/Document Server Features", General Settings Guide

3 Edges Full Bleed

You can make full image copy by cutting down the margin of top, bottom, and right sides. This function is useful for originals full of image.


∰Important

☐ Before using this function, register [3 Edges Full Bleed] as a copy function key. See "General Features", General Settings Guide.

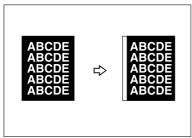

GCBLEE1E

1 Press [3 Edges Full Bleed].

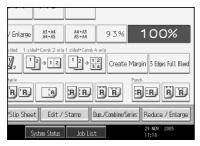


2 Place the originals, and then press the [Start] key.

"General Features", General Settings Guide

Mix 1 & 2 Sided

You can copy two types of original, one-sided and two-sided, onto one or both sides of a sheet.

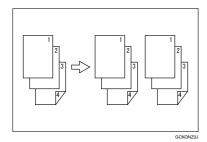

- 1 Press [Dup./Combine/Series].
- Press [Mix 1&2 Sid.].
- Select [1 Sided] or [2 Sided] for the original.



If you select [2 Sided], you can select the orientation.


- Select [1 Sided] or [2 Sided] for the copy.
- E Place the originals, and then press the [Start] key.
- If you have selected [1 Sided] for the original and [2 Sided] for the copy, press [Change Setting] to specify an odd number of originals or change the copy page manually.

Place the next originals, and then repeat steps **3** to **5**.

□ When placing originals on the exposure glass or in the ADF using the Batch function, press the [#] key after all the originals have been scanned.

Scanning Position


You can move the scanning position of originals.

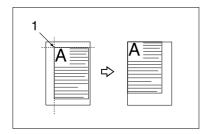

① Point from which the machine begins scanning


Note

 ☐ You can move the scanning position up to 30 mm (in 1 mm increments) upward, downward, to left and to right.



- ① Top: 0 30 mm, 0" 1.2"
- ② Right: 0 30 mm, 0" 1.2"
- ③ Bottom: 0 30 mm, 0'' 1.2''
- ④ Left: 0 − 30 mm, 0" − 1.2"

Press [Edit / Stamp].

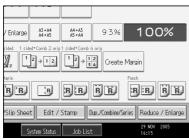

Press [Scan Position].


3 Set the scanning position for the front of the original. Press $[\uparrow]$ or $[\downarrow]$ to set the top or bottom position. Press $[\leftarrow]$ or $[\rightarrow]$ to set the left or right position.




- Set the scanning position for the back of the original. Press [↑] or [↓] to set the top or bottom position. Press [←] or [→] to set the left or right position. Then press [OK].
- Delace the originals, and then press the [Start] key.
 - Note
 - \square If you have incorrectly set the position, readjust with $[\uparrow]$, $[\downarrow]$, $[\leftarrow]$ or $[\rightarrow]$.
 - ☐ If you don't need to set the scanned position of the back of the original, press [OK] and go to step ⑤.
 - ☐ The scanning position for the back is valid only when you are copying 2-sided originals.

Margin Adjustment

You can make a binding margin.

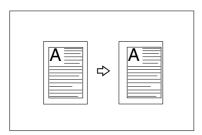

Press [Edit / Stamp].

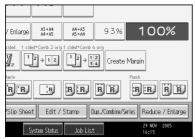

- Press [Margin Adj.].
- Set a binding margin for a front page. Press $[\leftarrow]$ and $[\rightarrow]$ when setting the left and right margins, and $[\downarrow]$ and $[\uparrow]$ when setting the top and bottom margins.
- Set a binding margin for the back side pages. Press [←] and [→] when setting the left and right margins, and [↓] and [↑] when setting the top and bottom margins, and then press [OK].

Margin on the back side of the page is valid when [1 Sided \rightarrow 2 Sided] or [Combine 2 Sides] is selected.

Delace the originals, and then press the [Start] key.

Note

- ☐ You can set the binding margin up to 30 mm (in 1 mm increments).
- □ If you make a mistake, press [←], [→], [\downarrow], [\uparrow], or press [Clear] to set a new value.
- ☐ If you do not need to specify the margins for the back side pages in step ②, press [OK] and proceed to step ⑤.

"Edit", General Settings Guide

 
Erase

You can erase the centre and/or all four sides of the original image.

This function comes in the following modes:


❖ Border

Erases the original's edge margin from the copy.




Centre

 Erases the original's centre margin from the copy.




❖ Centre/Border

 Erases both the original's centre and edge margins from the copy.




❖ Inside

 Erases a designated area of the copy image.




❖ Outside

 Erases all areas of the copy image other than the area you have selected.



𝚱 Note

- ☐ The erase width is set to 10 mm (0.4 inch) as a default. You can change this setting with Edit under User Tools Menu (Copier and Document Server Features).
- ☐ The relationship between the original orientation and the erased part is as follows:

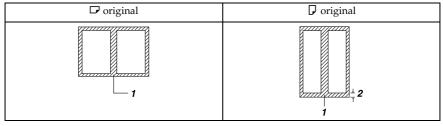

- ① Erased part
- ② 2-99 mm (0.1"-3.9")


₽ Reference

"Edit", General Settings Guide

Border Erase (same width)

This mode erases the edge margin of the original image.

Press [Edit / Stamp].

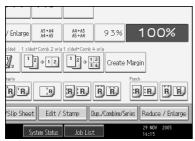

- 2 Press [Erase].
- Press [Erase Centre / Border].
- Press [Same Width].
- **5** Set an erase border width with [+] or [-].

Pressing [+] or [-] changes the width in increments of 1 mm (0.1 inch). Pressing and holding down the relevant key changes the width in increments of 10 mm (0.4 inch).

If you select to erase the image on the back of the original, press [2 Sided Setting] and [Back].




- 6 Press [OK] twice.
- Place the originals, and then press the [Start] key.

 - \square To change the value entered in step \P , press \P and \P to set a new value.

Border Erase (different width)

This mode erases the edge margin of the original image.


1 Press [Edit / Stamp].

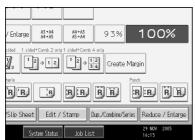

- Press [Erase].
- Press [Erase Centre / Border].
- Press [Different Width].
- Press the key for the border you want to change and set an erase width with [+] and [-].

Pressing [+] or [-] changes the width in increments of 1 mm (0.1 inch). Pressing and holding down the relevant key changes the width in increments of 10 mm (0.4 inch).

If you select to erase the image on the back of the original, press [2 Sided Setting] and [Back].

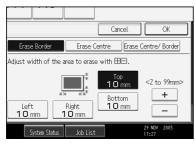


- Press [OK] twice.
- Place the originals, and then press the [Start] key.

Centre Erase

This mode erases the centre margin of the original image.

Press [Edit / Stamp].

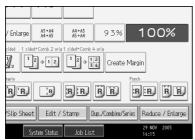

- Press [Erase].
- Press [Erase Centre / Border].
- Press [Erase Centre].
- **5** Set the erase centre width with [+] and [-].

Pressing [+] or [-] changes the width in increments of 1 mm (0.1 inch). Pressing and holding down the relevant key changes the width in increments of 10 mm (0.4 inch).


If you select to erase the image on the back of the original, press [2 Sided Setting] and [Back].

- Press [OK] twice.
- Place the originals, and then press the [Start] key.

Centre/Border Erase (same width)

This mode erases both the centre and edge margins of the original image.

1 Press [Edit / Stamp].

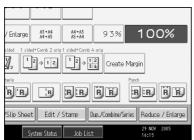


- Press [Erase].
- Press [Erase Centre / Border].
- Press [Erase Centre/ Border].
- Press [Same Width].
- f 6 Press [Centre], and then set the erase centre width with [m +] and [m -].

Pressing [+] or [-] changes the width in increments of 1 mm (0.1 inch). Pressing and holding down the relevant key changes the width in increments of 10 mm (0.4 inch).

If you select to erase the image on the back of the original, press [2 Sided Setting] and [Back].

Erasing the image on the back is valid when you copy 2-Sided originals.

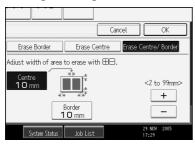

Press [Border], and then set the erase border width with [+] and [-].

Pressing [+] or [-] changes the width in increments of 1 mm (0.1 inch). Pressing and holding down the relevant key changes the width in increments of 10 mm (0.4 inch).


Press [OK] twice.

Place the originals, and then press the [Start] key.

Centre/Border Erase (different width)

This mode erases both the centre and edge margins of the original image.


1 Press [Edit / Stamp].

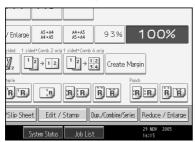

- Press [Erase].
- Press [Erase Centre / Border].
- 4 Press [Erase Centre/ Border].
- Press [Different Width].
- Press the key for the order you want to change and set an erase width with [+] and [-].

Pressing [+] or [-] changes the width in increments of 1 mm (0.1 inch). Pressing and holding down the relevant key changes the width in increments of 10 mm (0.4 inch).

If you select to erase the image on the back of the original, press [2 Sided Setting] and [Back].

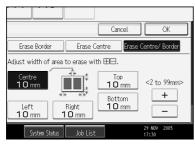


- Press [OK] twice.
- Place the originals, and then press the [Start] key.

Inside Erase


Specify the point where the machine starts scanning (X1, Y1) and where it stops scanning (X2, Y2).

You can input lengths of 0 - 432 mm, 0 - 17".

Press [Edit / Stamp].

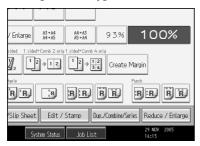

- Press [Erase].
- Press [Erase Inside 1] [Erase Inside 5].
- **5** Enter the value of [X1] with the number keys, and then press [#].

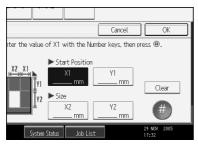

- **6** Enter the value of [Y1] with the number keys, and then press [#].
- Enter the value of [X2] with the number keys, and then press [#].
- Enter the value of [Y2] with the number keys, and then press [#].

 If you select to erase the image on the back of the original, press [2 Sided Setting] and [Back].

Erasing the image on the back is valid when you copy 2-Sided originals.

Press [OK].

If you want to go on to erase another area, repeat from steps 4 to 9.


- Press [OK].
- Place the originals, and then press the [Start] key.

Outside Erase


Specify the point where the machine starts scanning (X1, Y1) and where it stops scanning (X2, Y2).

You can input lengths of 0 - 432 mm, 0 - 17".

Press [Edit / Stamp].

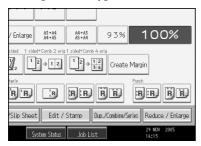

- Press [Erase].
- Press [Erase Outside].
- Enter the value of [X1] with the number keys, and then press [#].

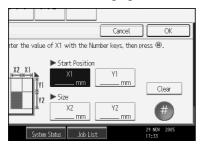

- **6** Enter the value of [Y1] with the number keys, and then press [#].
- Enter the value of [X2] with the number keys, and then press [#].
- Enter the value of [Y2] with the number keys, and then press [#].

 If you select to erase the image on the back of the original, press [2 Sided Setting] and [Back].


- Press [OK] twice.
- Place the originals, and then press the [Start] key.

Background Numbering


Use this function to have numbers printed on the background of copies. If this function is used in conjunction with Sort, same numbers are printed on a department basis, helping you to keep track of confidential documents.

#Important

☐ You cannot use the bypass tray with this function.

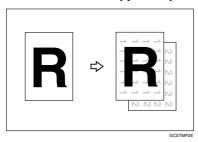

1 Press [Edit / Stamp].

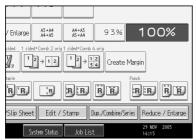

- 2 Press [Stamp].
- Press [Background Numbering].
- Enter the number to start counting from with the number keys, and then press the [#] key.
- Press [OK] twice.
- Delace the originals, and then press the [Start] key.
 - Note
 - ☐ To change the value entered in step ②, press [Clear] or the [Clear/Stop] key to set a new value.


"Stamp", General Settings Guide

Preset Stamp

Frequently used massages can be stored in memory and stamped on copies.

#Important


- ☐ You cannot use the bypass tray with this function.
- ☐ Only one message can be stamped at a time.

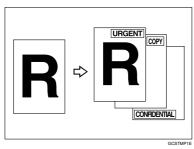


The following eight messages are available for stamping.
 "COPY", "URGENT", "PRIORITY", "For Your Info.", "PRELIMINARY",
 "For Internal Use Only", "CONFIDENTIAL", "DRAFT"

Stamp position and original orientation

The stamp positions differ according to the orientation in which you place your originals.

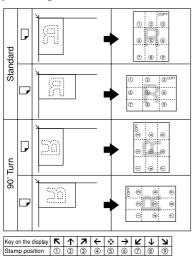

Press [Edit / Stamp].

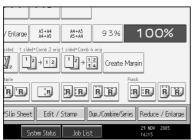

- Press [Stamp].
- Press [Preset Stamp].
- Select the desired message.
 You can change the position, size, and density of the stamp.
- Press [All Pages] or [1st Page Only] to select the print page.




- **6** After you specify all desired settings, press [OK].
- Press [OK] twice.
- Place the originals, and then press the [Start] key.

"Stamp", General Settings Guide

Changing the stamp position, size and density

Changes the stamp position, size and density.

- Press [Change].
- 2 Select the position for print, size, and density, and then press [OK].

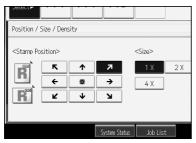


User Stamp

Prints a registered stamp onto copies. Letters or images you use frequently can be registered.


∰Important

- ☐ You have to program a user stamp before using this function.
- ☐ You cannot use the bypass tray with this function.
- ☐ Only one message can be stamped at a time.

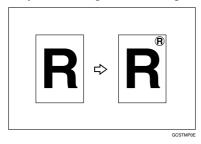


Stamp position and original orientation

The user stamp positions differ according to the orientation in which you place your originals.

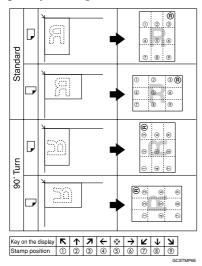


Press [Edit / Stamp].

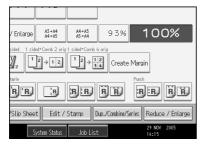

- Press [Stamp].
- Press [User Stamp].
- 4 Select the desired stamp type.

You can change the stamp position.

Press [All Pages] or [1st Page Only] to select the print page.

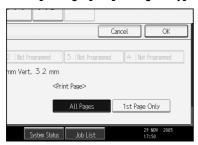

- 6 After you specify all desired settings, press [OK].
- Press [OK].
- Place the originals, and then press the [Start] key.

"Stamp", General Settings Guide

Changing the user stamp position

Changes the stamp position.

 
- 1 Press [Change] under Stamp Position.
- 2 Select the desired position, and then press [OK].



To program the user stamp


This function scans an image that is used as a user stamp.

The range of stamp images for readability is 10-297 mm (0.4"-11.7") high and 10-432 mm (0.4"-17.0") wide. However, if the value exceeds the maximum value of the area (5.000 mm^2 , 7.75 inch^2), it is corrected within the range of the area automatically.




∰Important

- \square Up to four frequently used images can be stored in memory.
- **1** Make sure that the machine is in copier mode.
- Press the [User Tools/Counter] key.

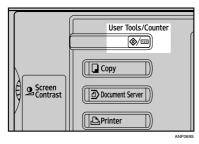

Press [Copier / Document Server Features].

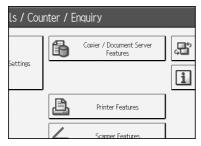

- Press [Stamp].
- Press [User Stamp].
- Press [Program / Delete Stamp].

- Press [�Program], and then press the stamp number you want to program.
- Enter the user stamp name (up to ten characters) with the letter keys, and then press [OK].
- Enter the horizontal size of the stamp with the number keys, and then press the [#] key.
- Enter the vertical size of the stamp with the number keys, and then press the [#] key.
- Place the original for user stamp on the exposure glass, and then press [Start Scanning].

The original will be scanned, and the stamp will be registered.

- Press [Exit].
- Press [Exit].

The display returns to the User Tools/Counter/Enquiry menu screen.

Press [Exit].

Exits settings and gets ready to copy.

𝒜 Note


- ☐ Stamp numbers with � already have settings in them. Stamp numbers that are not registered yet are marked with "Not Programmed".
- ☐ If the user stamp number is already being used, the machine will ask you if you want to overwrite it. To overwrite it, press [Yes]; otherwise, press [No].
- ☐ Originals cannot be scanned from the ADF when programming the user stamp.

To delete the user stamp


Deletes an image registered as a user stamp.

You cannot restore a deleted stamp.

- **1** Make sure that the machine is in Copy mode.
- Press the [User Tools/Counter] key.

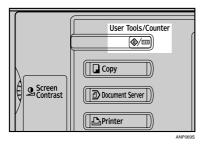

Press [Copier / Document Server Features].

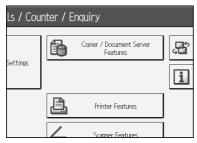

- 4 Press [Stamp].
- Press [User Stamp].
- Press [Program / Delete Stamp].
- Press [Delete], and then press the stamp number you want to delete.
- Select [Yes], and then press [Exit].
- 9 Press [Exit].


The display returns to the User Tools/Counter/Enquiry menu screen.

Press [Exit].

Exits settings and gets ready to copy.

Date Stamp

You can use this function to print dates onto copies.

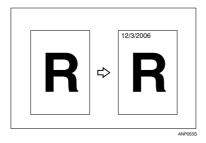


The following five date print styles are available.

- MM/DD/YYYY
- MM.DD.YYYY
- DD/MM/YYYY
- DD.MM.YYYY
- YYYY.MM.DD

Stamp position and original orientation


The date stamp positions differ according to the orientation in which you place your originals.

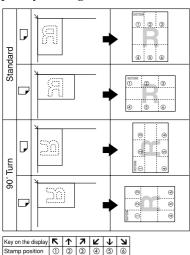


∰Important

 \square You cannot use the bypass tray with this function.

Press [Edit / Stamp].

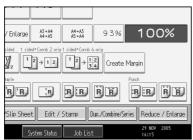

- Press [Stamp].
- Press [Date Stamp].
- Press [Change Format], and then press [OK].
 You can change the Stamp, style and position of the date to be stamped.
- Press [All Pages] or [1st Page Only] to select the print page.

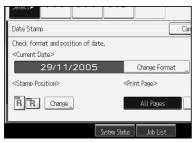


- **6** After you specify all desired settings, press [OK].
- Press [OK].
- Place the originals, and then press the [Start] key.

"Stamp", General Settings Guide

To change the format of date

Changes the style of date to be stamped.

Press [Change Format] under Current Date.

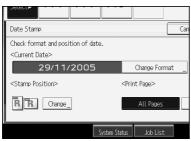

2 Select the date format, and then press [OK].

To change the date stamp position

Changes the stamp position.

Press [Change] under Stamp Position.




2 Select the desired position, and then press [OK].



Page Numbering

You can use this function to print page numbers onto copies.

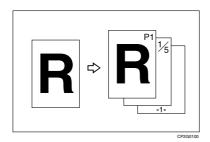


There are six types of page numbering.

- P1,P2,...
- 1/5,2/5,...
- -1-,-2-,...
- P.1,P.2,...
- 1, 2, ...
- 1-1,1-2,...

Original orientation and stamp position

The page stamp positions differ according to the orientation in which you place your originals.

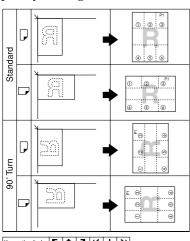


 Key on the display
 ↑ ⊅ ∠ ↓ ∆

 Stamp position
 ①
 ②
 ③
 ④
 ⑤
 ⑥


CSTMP8E

∰Important

- ☐ You cannot use the bypass tray with this function.
- Press [Edit / Stamp].

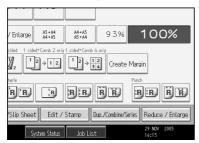

- Press [Stamp].
- Press [Page Numbering].
- 4 Select the format.

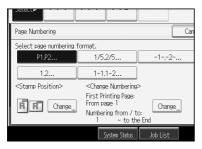

You can specify the stamp, position, pages to be stamped, and numbering.

- 5 After you specify all desired settings, press [OK].
- 6 Press [OK].
- Place the originals, and then press the [Start] key.

"Stamp", General Settings Guide

Changing the stamp position

Changes the stamp position.

- 1 Press [Change] under Stamp Position.
- 2 Select the desired position, and then press [OK].




- 3 After you specify all desired settings, press [OK].
- 4 Place the originals, and then press the [Start] key.

Specifying the first printing page and start number ("P1,P2...", "-1-,-2-...", "P.1,P.2...", "1,2...")

Below explains the example when "P1, P2 \dots " is selected. The steps are the same for other cases.


Press [Change] under Change Numbering.

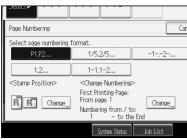


Press [First Printing Page], enter the original sheet number from which to start printing from, and then press the [#] key.

Press [First Printing Number], enter the number of page from which to start numbering from with the number keys, and then press the [#] key.

 The example below shows when the first printing page is "2" and the start number is "3".



Press [Last Number], enter the number of the page at which to stop numbering with the number keys, and then press the [#] key.

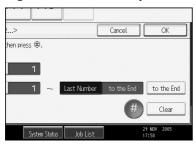

If you want to number all pages to the end, press [to the End].

- When page designation is complete, press [OK].
- 6 Press [OK] twice.
- Place the originals, and then press the [Start] key.

Specifying the first printing page and start number ("1/5,2/5...")

- 1 Press [Change] under Change Numbering.
- Press [First Printing Page]. Enter the original sheet number from which to start printing, and then press the [#] key.



You can enter between 1 and 9999 for the original sheet number from which to start printing.

- Press [First Printing Number], enter the number of page from which to start numbering from with the number keys, and then press the [#] key.
- To change the number to end numbering, press [Last Number], enter that number with the number keys, and then press the [#] key.

Proceed to step 5 when not changing.

If you want to number all pages to the end, press [to the End].

The last number is the last page number to print. For example, if Total Pages is ten, if you want to print up to seven pages and do not want to print from page 8 on, enter "7" for Last Number. Normally, you do not need to enter the number.

- Press [Total Pages], enter the total number of original pages with the number keys, and then press the [#] key.
- **6** When page designation is complete, press [OK] three times.
- Place the originals, and then press the [Start] key.

𝒯 Note

- ☐ To change the number entered in step ②, press [Clear] or the [Clear/Stop] key, and then enter a new number.
- □ To change the settings (the first printing page, the number of page from which to start numbering, or total number of pages) after pressing [OK] in step ③, press [Change] and then enter the numbers again.
- ☐ To change a page number, press [StartPage], and then enter the number with number keys.

Specifying the first printing page and start number ("1-1,1-2...")

- 1 Press [Change] under Change Numbering.
- Press [First Printing Page], enter the original sheet number from which to start printing, and then press the [#] key.



Press [First Chapter No.], enter the chapter number from which to start numbering with the number keys, and then press the [#] key.

You can enter between 1 and 9999 for the chapter number from which to start numbering.


- Press [First Printing Number], enter the page number from which to start printing with the number keys, and then press the [#] key.
- **5** When page designation is complete, press [OK].
- Press [OK] twice.
- Place the originals, and then press the [Start] key.


Note

- ☐ To change the number entered in step ②, press [Clear] or the [Clear/Stop] key, and then enter a new number.
- ☐ To change the settings (the first printing page, the chapter form which to start numbering, or the page from which to start numbering) after pressing **[OK]** in step **⑤**, press **[Change]** and then enter the numbers again.

Stamp Text


You can stamp important text on copies up to 64 letters.

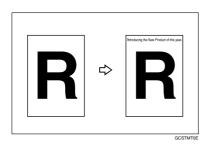

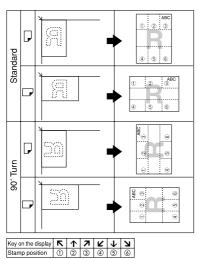

AFU109S

Press [Edit / Stamp].

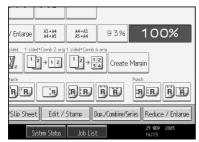

- Press [Stamp].
- Press [Stamp Text].
- Press [Change Text].
- **5** Enter stamp text, and then press [OK].
- Press [All Pages] or [1st Page Only] to select the print page.
- Press [OK].
- Place originals, and then press the [Start] key.
 - Ø Note
 - $\hfill \square$ If the Main Power is turned off, the text is cleared. To save the typed text, you can program them.

"Stamp", General Settings Guide


Changing the stamp position

- 1 Press [Change].
- **2** Select the desired position, and then press [OK].




Image Repeat

The original image is copied repeatedly.

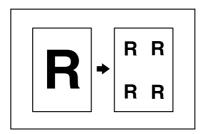


The number of repeated images depends on the original size, copy paper size, and reproduction ratio. For example, see the following table.

 
❖ Original: A5 □/Copy paper: A4 □ or Original: A5 □/Copy paper A4 □



 ❖ Original: A5 □/Copy paper: A4□ or Original: A5□/Copy paper A4 □



- Select the size of copy paper and the reproduction ratio.
- Press [Edit / Stamp].

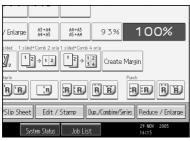


- Press [Edit Image].
- Press [Image Repeat].
- Press [OK].
- 6 Place the originals, and then press the [Start] key.

"Edit", General Settings Guide

Double Copies

One original image is copied twice onto one sheet, as shown.

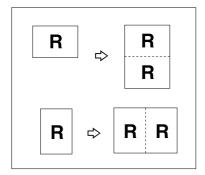

#Important

- ☐ You cannot use the bypass tray with this function.
- \square Originals with a size of A5 \square , B6 JIS \square \square , $5^1/_2$ " \times $8^1/_2$ " \square cannot be detected properly on the exposure glass. Be sure to select the copy paper manually or place the originals in the ADF.
- ☐ The following table shows original and copy paper sizes (when copying at a ratio of 100%).

❖ Metric version

Original size and Orientation	Copy paper size and Orientation
A5 □	A4 🕽
A4 🕽	A3 □
A5 🖵	A4 🗗
B5 JIS D	B4 JIS □
B6 JIS □	B5 JIS □


ANIDO

❖ Inch version

Original size and Orientation	Copy paper size and Orientation
5 ¹ / ₂ " × 8 ¹ / ₂ " □	8 ¹ /2" × 11" 🖵
5 ¹ /2" × 8 ¹ /2" 	8 ¹ /2" × 11" □ 7
8¹/2"×11"	11"×17" □

AMG016

Press [Edit / Stamp].

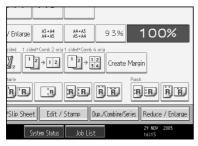


- Press [Edit Image].
- Press [Double Copies].
- Press [OK].
- **5** Select the paper.
- Place the originals, and then press the [Start] key.

 - ☐ "Double Copies Separation Line", General Settings Guide.

Centring

You can make copies with the image moved to the centre of the copy paper.

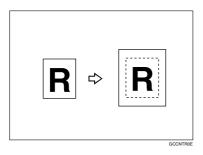

∰Important

- \square You cannot use the bypass tray with this function.
- ☐ The original sizes and directions for centring are listed below.

❖ Metric version


Original location	Original size and orientation
Exposure glass	A3□, B4 JIS□, A4□□, B5 JIS□□, A5□, 8¹/2" × 13"□
ADF	A3□, B4 JIS□, A4□□, B5 JIS□□, A5□□, B6 JIS□□, 8¹/2" × 13"□, 8K□, 16K□□

❖ Inch version

Original location	Original size and orientation
Exposure glass	$11" \times 17" \square 7, 8^1/_2" \times 14" \square 7, 8^1/_2" \times 11" \square \square 7, 8^1/_2" \times 5^1/_2" \square 7$
ADF	A3 \square , A4 \square \square , 11" × 17" \square , 8 ¹ / ₂ " × 14" \square , 8 ¹ / ₂ " × 11" \square \square , 5 ¹ / ₂ " × 8 ¹ / ₂ " \square \square , 10" × 14" \square , 7 ¹ / ₄ " × 10 ¹ / ₂ " \square

Select the paper.


Press [Edit / Stamp].

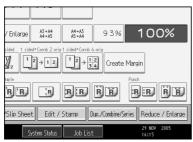


- Press [Edit Image].
- Press [Centring].
- Press [OK].
- 6 Place the originals, and then press the [Start] key.

Positive/Negative

If your original is black and white, copy images are inverted.

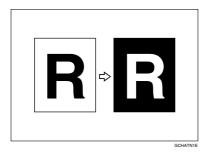

Press [Edit / Stamp].

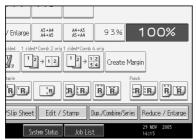

- Press [Edit Image].
- Press [Positive / Negative].
- Press [OK].
- **5** Select the paper.
- 1 Place the originals, and then press the [Start] key.

Covers

You can use this function to create cover sheets by adding additional pages of different paper, or copying existing pages onto different paper.

#Important

 
- ☐ You can set neither the copy paper for originals nor cover sheets in the bypass tray.
- ☐ If you have selected "Interposer" for "Cover Sheet Tray", in System Settings, you cannot copy on the cover sheets that you have specified for this function.
- □ When selecting **[Copy]**, select whether the front and back covers are copied 1 Sided or 2 Sided.

Covers function includes Front Cover and Front/Back Covers.


Front cover

The first page of your originals is copied on specific paper sheet for covers, or a cover sheet is inserted before the first copy.

Copy




Blank

 

❖ Back Cover


The last page of originals is copied onto a specified cover sheet paper, or a cover sheet is inserted after the last page.

 • Copy



ADB00

 
• Blank




Front/Back Covers

The first and last pages of your original are copied on separate paper for use as covers, or a cover sheet is inserted before the first copy and after the last copy.

 Copy



• Blank

 

1 Set the tray for the front cover or back cover sheet.

You can select the tray for the front or back cover sheet using the Tray Paper Settings in System Settings.

The cover sheet should be the same size and direction as the copy paper.

Press [Cover/Slip Sheet].




Select [Copy] or [Blank] for the front or back cover sheet, and then press [OK].

- **4** Select the paper tray that contains the sheet paper to copy the originals.
- Delace the originals, and then press the [Start] key.
 - **₽** Reference

"Tray Paper Settings", General Settings Guide

Designate

Use this function to have certain pages of your original copied onto slip sheets or to insert a slip sheet for each page specified.

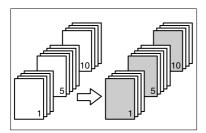


#Important

- \square You cannot place the copy paper in the bypass tray.
- ☐ If you have selected "Interposer" for "Designation Sheet 2 Tray" in System Settings, you cannot copy on the slip sheets that you have specified for this function.
- **1** Set the tray you want to use for slip sheets.

The paper for slip sheets should be of the same size as the copy paper and also be set in the same direction.

Press [Cover/Slip Sheet].

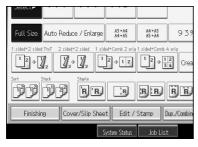


- Press [Designate / Chapter].
- 4 Select [Designate: Copy] or [Designate: Blank].

- **5** Press the key to select the chapter number.
 - To select pages 11 to 20 (chapter), press [11-20].
- 6 Enter the page number of the original's location you want to copy onto a slip sheet with the number keys, and then press the [#] key.
- To specify another page location, repeat steps 5 to 6.
 Up to 100 pages can be specified.
- 8 Select the paper tray that contains the sheet paper to copy the originals.
- **9** When you finish specifying pages, press [OK] twice.
- Place the originals, and then press the [Start] key.

"Tray Paper Settings", General Settings Guide

Chapters


The pages you specify with this function will appear on the front of copy sheets.

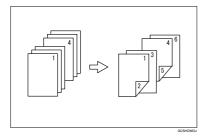

#Important

- □ Before selecting this function, press [Dup./Combine/Series] and select "1 Sided→2 Sided" or "Combine".
- ☐ This function can be used only when you use the Duplex (1 Sided→2 Sided) or Combine function.

1 Press [Cover/Slip Sheet].

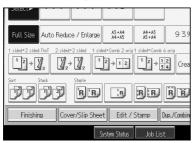

- Press [Designate / Chapter].
- Press [Chapter].
- **1** Press the key to select the chapter number.

To select pages 11 to 20 (chapter), press [11-20].


Enter the page location of the first page of the first chapter with the number keys, and then press the [#] key.

Up to 100 chapter locations can be specified.

- To specify another page location, repeat steps 4 to 5.
- **2** Select the paper tray that contains the sheet paper to copy the originals.
- 8 When you finish specifying page location, press [OK] twice.
- Place the originals, and then press the [Start] key.

Blank Slip Sheets

You can insert a blank slip sheet before or after a specified page.

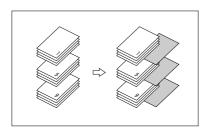


1 Set the tray for the blank slip sheet.

The paper for slip sheets should be of the same size as the copy paper and also be set in the same direction.

Press [Cover/Slip Sheet].



- Press [Designate / Chapter].
- Press [Insert Sheet].
- **5** Press the key to select the chapter number.

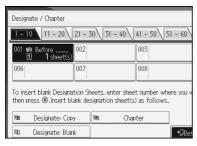

- **6** Select the paper tray for slip sheets.
- Select [Before] to insert slip sheets before the desired page. Select [After] to insert slip sheets after the desired page. Enter the page number with the number keys.
- Press [Number of Sheets], and use the number keys to enter the number of sheets you wish to insert, and then press the [#] key.
- D To specify another location where to insert sheets, repeat steps 5 to 8.
- $f \Omega$ Select the paper tray containing the paper to copy the originals onto.
- When you have finished specifying all settings, press [OK] twice.
- Place originals, and then press the [Start] key.


₽ Reference

"Tray Paper Settings", General Settings Guide.

Slip Sheets

Every time an original page changes, a slip sheet is inserted. This function can be used to automatically insert a slip sheet between OHP transparencies, or as a stacking function.


You can also copy onto slip sheets.

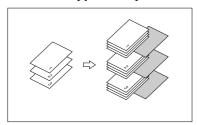


∰Important

 \square If [1 Sided \rightarrow 2 Sided] is set, change it to [1 Sided \rightarrow 1 Sided].

 - When placing OHP transparencies in the bypass tray
 - Copy




Blank

 

1 Set the tray for the slip sheet.

The paper for slip sheets should be of the same size as the copy paper and also be set in the same direction.

Press [Cover/Slip Sheet].

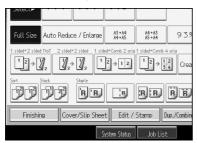

- 3 Select [Copy] or [Blank], and then press [OK].
- Select the paper tray that contains the sheet paper to copy the originals. When using OHP transparencies, open the bypass tray.
- Delace the originals, and then press the [Start] key.
 - Note
 - ☐ When loading OHP transparencies, press the [#] key and then select [OHP (Transparency)] in the special paper settings.

p.40 "When copying onto OHP Transparencies"


"Tray Paper Settings", General Settings Guide

Storing Originals in the Document Server


Using the Document Server enables you to store documents being read with the copy feature on the hard disk of this machine. Thus you can print them later applying necessary conditions.

∰Important

- ☐ Machine failure can result in data loss. Important data stored on the hard disk should be backed up. The manufacturer shall not be responsible for any damage that might result from loss of data.
- 1 Press [Store File].

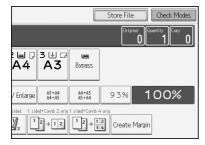

2 Enter a user name, file name, or password if necessary.

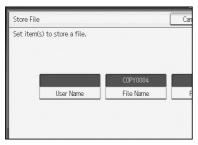

- Press [OK].
- 4 Place your originals.

5 Make scanning settings for the original.



6 Press the [Start] key.

Copies are delivered and scanned data is stored in the hard disk.

Note

- □ When interrupting the scan, press the [Clear/Stop] key. Pressing [Continue] from the confirmation screen resumes the scan. Pressing [Stop] deletes the scanned images and the original on the automatic document feeder (ADF) will be ejected.
- □ When placing originals on the exposure glass, press the [#] key after all originals are scanned.
- □ According to the factory default, the documents stored on the Document Server are deleted three days (72 hours) after the storing date. You can cancel the automatic document deletion or select other period than three days for the automatic deletion. For more information about changing settings, see "Administrator Tools", General Settings Guide.
- ☐ To check if the document has been stored, press the [Document Server] key to display the document selection screen.
- ☐ If you want to store another document, do so after copying is complete.
- ☐ For further information about the Document Server, see "Document Server".
- ☐ For details about printing stored documents, see "Printing a Stored Document".
- ☐ For details about setting user name, file name, and password, see "Storing Data".
- ☐ Depending on the security settings, [Access Privileges] is displayed instead of [User Name].
- $\hfill \Box$ For details about procedure for setting **[Access Privileges]**, ask the administrator.

p.166 "Using the Document Server"

p.176 "Printing a Stored Document"

p.166 "Storing Data"

"Administrator Tools", General Settings Guide.

Programs

You can store the frequently used copy job settings in the machine memory and recall them for future use.

You can store up to 10 programs.



- ☐ Paper settings are stored based on paper size. So if you place more than one paper tray of the same size, the paper tray prioritized with the Copier Features will be selected first. See "Tray Paper Settings", General Settings Guide.
- Programs are not cleared by turning the power off or by pressing the [Clear Modes] key.

p.139 "Programming Defaults in Initial Display" "Tray Paper Settings", General Settings Guide.

Storing a Program


Stores a program.

- 1 Edit the copy settings.
- Press the [Program] key.




ANP07

Press [Program].

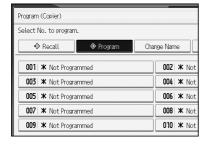

- **1** Press the program number you want to store.
- **5** Enter the program name.

You can enter up to 40 characters.

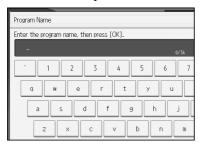

6 Press [OK].

The screen returns to the program screen, showing the program number followed by the program name. The screen returns to the initial copy display after a short time.



☐ Program numbers with � against them already have settings made for them.

Changing a Stored Program

Changes program settings.

- 1 Check the program settings.
- 2 Set the contents of a program.
- Press the [Program] key.
- 4 Press [Program].
- **b** Press the program number you want to store.
- Press [Yes].
- **2** Enter the program name.

You can enter up to 40 characters.

Press [OK].


The screen returns to the program screen, showing the program number followed by the program name. The screen returns to the initial copy display after a short time.

- Note
- \square When you want to check the contents of a program, recall the program.
- \square When it is overwritten, the previous program is deleted.

Deleting a Program

Erases the contents of program.

- 1 Press the [Program] key.
- 2 Press [Delete].

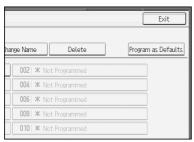

- **3** Press the program number you want to delete.
- 4 Press [Yes].

The program is deleted, and the screen returns to the copy screen.

Recalling a Program

Recalls a stored program and copies its contents.

- 1 Press the [Program] key.
- 2 Press [Recall].



3 Press the program number you want to recall.

The stored settings are displayed.

- 4 Place the originals, and then press the [Start] key.
 - Note
 - ☐ Only programs with � against them contain a program in step 3.

Programming Defaults in Initial Display

This section describes how to program defaults for the initial display when modes are cleared or reset, or immediately after the operation switch is turned.

The default settings you can program are Paper Tray, Original Type, Density, Special Original, Original Orientation, Cover/Slip Sheet, Dup./Combine/Series, Reduce / Enlarge, Finishing.

- Specify scan settings and any other settings you require in the initial display.
- Press the [Program] key.
- Press [Program as Defaults].
- Press [Program].
- **5** When a confirmation dialog appears, press [Yes].

The current settings are programmed as defaults. The screen returns to the initial display.

Note

- ☐ To restore the factory default settings on the initial display, press [Restore Factory Defaults].
- ☐ The default settings can be programmed separately for the normal screen and simplified screens.

3. Connect Copy

This section explains how to make copies using two machines connected via the Copy Connector (optional).

What is Connect Copy?


Connect Copy allows you to connect two machines together via a cable. When you set up a copy job on one machine (the main machine), data is transferred to the other (the sub-machine) so copies can be made on both simultaneously.

High-speed copying for greater productivity

Large volume copy runs can be completed in shorter time. For instance, when two 75 copies/minute machines are connected together, a speed of 150 copies/ minute can be achieved (paper size of A4 \square , $8^1/2^n \times 11^n \square$).

Reducing time loss

Even if one machine stops due to a paper jam, or runs out of toner or paper, the other machine can automatically take over and finish the job.

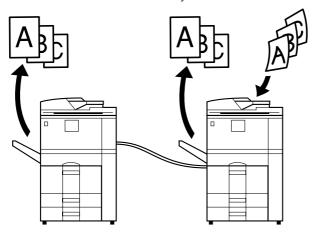


ANO045S

How It Works

After the original is scanned, the data is stored on the hard disk of the main machine. As soon as the main machine starts copying, the data is transferred to the hard disk of the sub-machine, and the sub-machine then starts copying.

In this manual, the two machines connected are referred to as main machine and sub-machine.

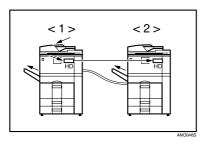

- Main machine
- ② Sub-machine

The main machine is the one on which you press [Connect Copy] to make Connect Copy settings. The other machine becomes the sub-machine.

Machine Types and Options

- Both machines need not be of the same type.
- You can still use Connect Copy without an optional finisher or Large Capacity Tray (LCT). However, to use the Staple and Punch functions, the optional finisher and punch unit must be installed on both machines. To use the Saddle Stitch function, the optional booklet finisher must be installed on both machines. To use the Z-fold function, the optional Z-folding unit and booklet finisher must be installed on both machines.

Interrupt Copy

- You can use the Interrupt function on the sub-machine, but not on the main machine.
- You cannot use Connect Copy when a job has been paused using the Interrupt function.

Before You Start

Both machines must have paper trays loaded with paper of the same size, type and orientation.

To ensure the same copy results from both machines,


- Copy Quality settings in the User Tools should be the same on each machine.
- Both main and sub machines should be installed with the same type of finisher.

"General Features", General Settings Guide

Connect Copy Display Panel

The display panel shows machine status, error messages and function menus.

Initial copy display

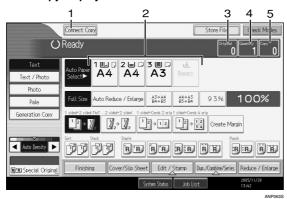

1. [Connect Copy]

Press to switch from the initial copy display to the Connect Copy display.

2. Paper Select

Displays the size, type and orientation of the paper set on both machines.

3. Numbers of originals

Displays the number of originals scanned into memory of the main machine.

Display during Connect Copy



4. Number of sets

Displays the number of sets of copies.

Number of copies

Display the number of copies for the main machine.

Press this part of the display to display the total number of copies for two machines.


Note

☐ The connect copy function is not available from the simplified display on the main machine.

Display panel of the sub-machine

Even if Connect Copy has been selected on the main machine, the sub-machine will still continue to show the initial copy display. To switch to the Connect Copy initial display, follow the procedure below.

Press the [Other Function] key.

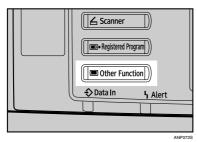

2 The Connect Copy initial display is shown on the sub-machine.



Using Connect Copy

You can select Connect Copy from either machine by pressing **[Connect Copy]**. The machine on which you pressed **[Connect Copy]** and made Connect Copy settings becomes the main machine, and the other the sub-machine.

#Important

- □ When user authentication is set, use the number keys to enter a user code (up to 8 digits) that is registered on the main machine, and then press the [#] key. See "Administrator Tools", General Settings Guide.
- □ When Basic Authentication, Windows Authentication, LDAP Authentication, or Integration Server Authentication is set, enter a login user name and login password. For the login user name and the login password, consult your Administrator. See "When the Authentication Screen is Displayed", About this Machine.
- ☐ In Connect Copy mode, use the main machine to perform this function. See "General Features", General Settings Guide.
- 1 Make sure "Ready" is shown on the display.



ŋ

Press [Connect Copy] on the machine that you want to use as the main. [Connect Copy] becomes highlighted, and the two machines are connected.

Main machine



Sub-machine



- **3** Set the originals on the main machine.
- Make the necessary settings using the main machine.

If you have made any copy settings before using Connect Copy, the settings remain effective. However, if optional finishers are not installed on both main and sub machines, the Stack, Staple, Punch and Z-fold functions are automatically disabled.

E Enter the required number of copies using the number keys.

The maximum copy quantity that can be set is 999.

When the number of originals or copies is small, copying will be done on only the main machine.

Press the [Start] key on the main machine.

When placing originals page by page on the exposure glass, press the [#] key after you have finished scanning all the originals. When placing multiple originals in the ADF, wait till an original has been fed before placing the next.

Copying starts if the main machine is not in use. The sub-machine starts copying after data transfer from the main machine is completed.

Collect your copies from both the main and sub machines.

Note

- ☐ If you cancel Connect Copy mode, press [Connect Copy], which is highlighted on the main machine.
- ☐ The number of copies might differ on the main and sub machines.
- \square Both machines may not finish copying at the same time.
- ☐ When using the Sort/Staple function, copying is divided between the two machines by the number of sets. If a paper misfeed occurs when processing a set of copes, it is not possible for the other machine to take over the remainder of that particular set.
- ☐ To interrupt ADF scanning, press the **[Clear/Stop]** key on the main machine, and then select **[Stop]** in response to the message that appears.
- ☐ To stop copying, press the [Clear/Stop] key on the main machine, and then select [Stop] in response to the message that appears.
- ☐ When the memory to store originals exceeds the maximum, an error message appears. For details, see "When Memory is full", Troubleshooting.

p.20 "Batch mode"

"When the Authentication Screen is Displayed", About this Machine


"Administrator Tools", General Settings Guide

"When Memory is full", Troubleshooting

Order of Copy Output

When copying with the Sort/Staple function

(Example) Copying 6 sets of a three-page original

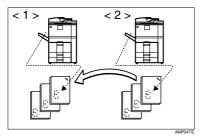


- ① Main machine
- ② Sub-machine

Copies are delivered face-down on both the main and sub machines. When using the Sort/Staple function, the processing of one copy set cannot be divided between the two machines.

When copying with the Stack function

(Example) Making 2 copies of each page of a six-page original

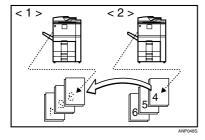

- ① Main machine
- ② Sub-machine

Copies are delivered face-down on both the main and sub machines. Copies are delivered as shown in the above illustration.

Auto Reset when using Connect Copy

The machine exits Connect Copy mode automatically and returns to the initial condition after a certain period of time has lapsed after job completion. This is called "Auto Reset".

Note

☐ When the Auto Reset time of the sub-machine lapses when it is processing an Interrupt Copy job, the sub-machine will return to its original position and the Interrupt Copy job will be cancelled.

"Timer Settings", General Settings Guide

Auto Off

The machine automatically turns itself after a certain period of time has lapsed after job completion. This is called "Auto Off". In Connect Copy mode, the submachine will not turn off automatically.


"Timer Settings", General Settings Guide

Exiting Connect Copy

This section explains how to cancel Connect Copy mode and return to standard copying mode.

Press [Connect Copy] on the main machine.

The machine returns to standard copying mode.

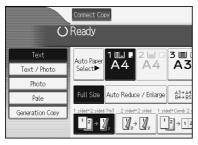

Note


- ☐ Settings made on the main machine during Connect Copy mode remain effective.
- ☐ If you press the **[Clear Modes]** key on the main machine, Connect Copy mode is cancelled and the main machine returns to its initial condition.

Copying Stored Documents Using Connect Print

You can print a document stored in the Document Server using the Connect Print function.

- **∅** Note
- ☐ The main machine is the one on which the document is stored.
- Press the [Document Server] key.
- **2** Select the document to be printed.

The selected document is highlighted.

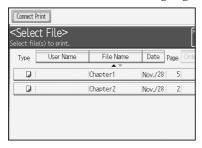


B Repeat step if you want to select more documents.

The documents will be printed in the order that they have been selected.

4 If you need to change the print settings, press [To Printing Screen].

If you do not need to change any settings, proceed to step 3.

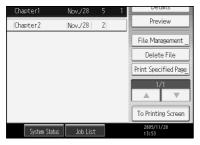

Press [Connect Print].

The key is highlighted and the two machines are connected.

6 Enter the required number of copies using the number keys.

The maximum copy quantity that can be set is 999.

Press the [Start] key.


p.59 "Sample copy"

Note ☐ Some documents may not be displayed, depending on the security function settings. ☐ To change the printing order, press the highlighted documents to cancel your selection. Select again in the desired order. ☐ You can also cancel all your selections by pressing the [Clear Modes] key. ☐ To register new printing conditions or numbers of copies in step ♠, press [Save Print Settings]. $\hfill \square$ If you are selecting multiple files, you can check the file names and printing order by pressing $[\mathbf{V}]$ and $[\mathbf{A}]$ to scroll through the list. ☐ Press [Select File] to return to the Select Files to Print display. ☐ If you have entered a wrong value, press the [Clear/Stop] key and enter again. ☐ When using the Sort function, you can check the print results by making a sample copy on the main machine. See "Sample copy". ☐ Sample copies can only be made on the main machine only. The main machine begins making copies from the document stored in the Document Server. Copying on the sub-machine starts when the document is transferred from the main machine. ☐ To stop the printing, press the [Clear/Stop] key on the main machine, and then follow the instructions on the display. ☐ The number of copies might differ on the main and sub machines. ☐ Both machines may not finish copying at the same time.

Using Job Preset in Connect Copy

You can make settings for the next Connect Copy job when the current job is still in progress on the main machine. When the current job finishes, the next job begins automatically.

On the main machine, confirm that "Press [New Job] to make reservation." is displayed, and then press [New Job].

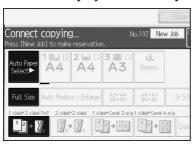

- 2 Confirm that "Ready" is displayed, and then press [Connect Copy].
- Place the originals in the main machine.
- Confirm that "Ready" is displayed, and then make settings for the job.



5 Press the [Start] key on the main machine.

Press the [#] key when you have finished scanning all the originals.

When placing multiple originals in the ADF, wait till the first original has been fed before placing the next.

Scanning begins. As soon as the current job is finished, the next job starts automatically.

- ☐ You can preset a maximum of eight jobs.
- ☐ Preset jobs in Connect Copy mode can only be changed when the main machine has finished scanning the originals.
- Preset jobs in Connect Copy mode can only be changed when copying has yet to begin on either machine.

\mathcal{P} Reference


p.31 "Job Preset"

Connect Copy Job Flow

The job flow depends on the status of the two machines.


When One of the Two Machines is Idle

One of the machines is copying Original A.

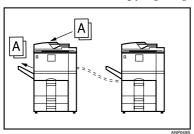


Using the idle machine as the main machine (Connect Copy)

Make Connect Copy settings for Original B on machine <2> (the idle machine).

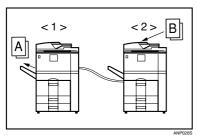


Machine <2> begins copying Original B. Machine <1> also starts copying Original B when it has finished with Original A.

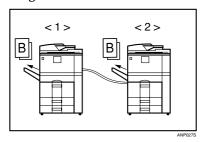


- ① Sub-machine
- ② Main machine

Using the machine currently copying as the main machine (Connect Copy: Job Preset)

Make Connect Copy settings for Original B on machine <1> (the machine currently in use).

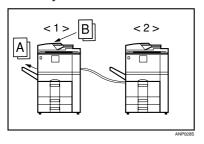


When machine <1> has finished with Original A, Connect Copy is activated and both machines begin copying Original B.

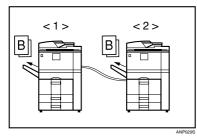

- Sub-machine
- ② Main machine


When Both Machines are in Use

One machine is copying Original A and the other Original B.

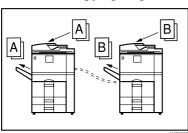


When both machines are copying the same number of originals (Connect Copy: Job Preset)


Make Connect Copy settings for Original C on machine <1>.

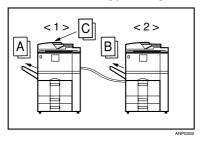

When machine <1> has finished with Original A, it begins copying Original C.

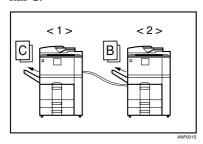


When machine <2> has finished with Original B, it also begins copying Original C.

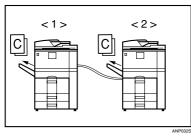


- ① Sub-machine
- ② Main machine

When one machines is copying a larger number of originals (Connect Copy: Job Preset)

Make Connect Copy settings for Original C on machine <1>.

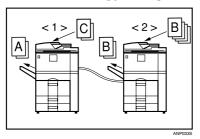

When machine <1> has finished with Original A, it begins copying Original C. If machine <1> finishes copying it allotment of Original C before machine <2> finishes with Original B, machine <1> will take over to copy the remainder of Original C.

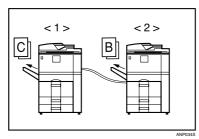

- ① Sub-machine
- ② Main machine

ŋ

4. Document Server

Using the Document Server enables you to store documents being read with the copy feature on the hard disk of this machine. Thus you can print them later applying necessary conditions.

Relationship between Document Server and Other Functions

State of the Document Server varies depending on the function used.

Copier Functions

Storing method: Copy/Document Server

List display: AvailablePrinting: Available

• Transmission: Unavailable

Printer Functions

• Storing method: Personal computer

List display: AvailablePrinting: Available

• Transmission: Unavailable

Scanner Functions


- Storing method: Scanner
- List display: Unavailable
 When documents are stored with the scanner feature, you can confirm
 them from the scanner feature screen. See "Displaying the List of Stored
 Files", Scanner Reference.
- Printing: Unavailable
- Transmission: Available
 Transmission is done by use of the stored document transmission of the scanner feature. See "When Using E-mail, Folder Sending, Storing or Network Delivery Function", Scanner Reference.

"Displaying the List of Stored Files", "When Using E-mail, Folder Sending, Storing or Network Delivery Function", Scanner Reference

Document Server Display

Following explains the screens and icons displayed in the Document Server function.

Document Server initial display

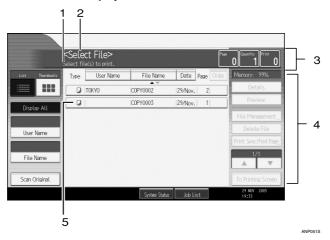

- 1. The operational status or message is displayed.
- 2. The currently selected screen's title is displayed.
- 3. The number of the originals being read with the memory as well as the number of paper sets and copied are displayed.
- 4. Keys for the operation are displayed.
- 5. An icon that corresponds to a stored function is displayed.

The list display of the Document Server shows the following icons depending on the stored function selected.

Function	Copying	Printer
Icons		Ą



☐ All the stored documents may not be displayed depending on the security function specified.

Simplified Display


This section explains how to switch to the simplified display.

When you press the [Simplified Display] key, the screen changes from the initial display to the simplified display.

Letters and keys are displayed at a larger size, making operations easier.



Example of a simplified display

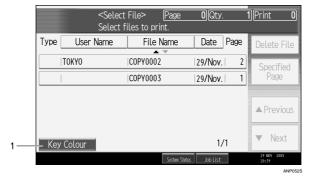

1. [Key Colour]

Press to change the key colour and increase the brightness of the display panel.

Note

- ☐ To return to the initial display, press the [Simplified Display] key, again.
- ☐ Certain keys do not appear on the simplified display.


Preview Display

Following explains the preview display displaying procedure and the items displayed on this screen.

The Preview Display appears after scanning completes. You can also display stored documents on the preview display. For details, see "Displaying the List of Stored Files", Scanner Reference.

The preview display denotes the screen that allows confirming contents of the scanned documents.

Preview Display

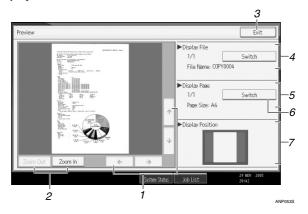

1. $[\leftarrow][\rightarrow][\uparrow][\downarrow]$

They are used to move the portion to be displayed.

2. [Zoom Out], [Zoom In]

Used to scale up or down the document to be displayed.

3. [Exit]

The login screen will appear.

4. Display File

Used to display the document name.

[Switch] is displayed on the preview screen for the stored documents. Above key is used to switch the document to be displayed in the preview.

5. Display Page

Used to display the currently opened page number, total number of pages, and page size.

6. [Switch]

Used to turn the page of the selected document.

7. Display Position

When the image is enlarged, the position on the document indicated by this key is displayed.

Note

- ☐ When the preview is already selected from another function, the preview screen function may become unusable.
- $\ \square$ The preview display is also not available when the paper size is larger than A3.
- \square If the image file is corrupt, store it again.

"Displaying the List of Stored Files", Scanner Reference

Using the Document Server

Following describes how to use the Document Server.

Storing Data

Following describes the procedure for storing documents on the Document Server.

#Important

- Data stored in the machine might be lost if some kind of failure occurs. The manufacturer shall not be responsible for any damage resulting from loss of data.
- ☐ Be careful not to let anyone know your password, especially when entering a password or recording it. Keep any record of your password in a secure place.
- □ Avoid using a single number or consecutive numbers for a password such as "0000" or "1234", since the numbers like this are easy to guess, so using them will not provide a worthwhile level of security.
- ☐ A document accessed with a correct password remains selected even after operations are complete, and it can be accessed by other users. To stop this, be sure to press the **[Clear Modes]** key to cancel the document selection.
- ☐ The user name used when adding a document to the Document Server is to identify the document creator and type. It is not to protect confidential documents from others.

❖ File Name

Stored documents are automatically named "COPY0001", "COPY0002". You can change assigned file names.

User Name


You can register a user name to identify the user or user group that stored the documents. To assign it, you can register the user name using the name assigned to the user code, or by entering the name directly.

Password


To prevent unauthorized printing, you can set a password for any stored file. A protected file can only be accessed if its password is entered. When a password is set for the documents, the lock icon appears next to the documents.

4


1 Press the [Document Server] key.

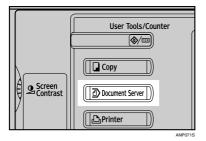

Press [Scan Original].

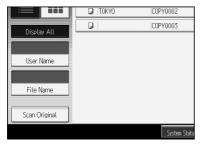

- Above operation sets up the user name, document name and password. When not changing a document name, the name will be automatically set.
- **2** Set the original.
- **5** Specify the original scanning conditions.

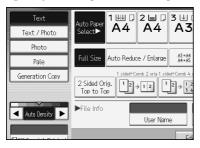

6 Press the [Start] key.

The original is scanned. The document is saved in the Document Server.

∅ Note

- ☐ Enter a four- to eight-digit password.
- ☐ By default, data stored in the Document Server is deleted after three days (72 hours). You can specify the time taken for the stored data to be deleted automatically. See "Auto delete File in Document Server", General Settings Guide.
- ☐ If you do not want stored data to be automatically deleted, select [Off] in Auto Delete File before storing a document. If you select [On] later, data stored after will be automatically deleted.
- ☐ When the machine is printing a document stored using the copier function, wait until printing has finished before you store a document in the Document Server.
- ☐ To stop scanning, press the [Clear/Stop] key. To restart a paused scanning job, press [Continue] in the confirmation display. To delete saved images and cancel the job, press [Stop].
- ☐ When a password is set, the lock icon appears on the left side of the file name.
- ☐ After scanning, stored documents appear on the Select Files to Print display. If this display does not appear, press [Scanning Complete].
- ☐ When placing an original on the exposure glass, press [Scanning Complete] after all the originals have been scanned.

"Administrator Tools", General Settings Guide

To register or change a user name (When using a user name registered to the Address Book)

Following describes the procedure for registering or changing a user name to be attached to a stored document.

- Display the original scan screen.
- Press [User Name].




The user name input screen appears.

To register or change a user name (When using a user name not registered to the Address Book)


Following describes the procedure for registering or changing a user name to be attached to a stored document.

- 1 Display the original scan screen.
- Press [User Name].

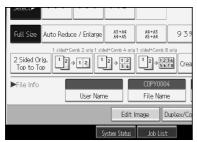

The user name input screen appears.

Select the user name and then press [Manual Entry].

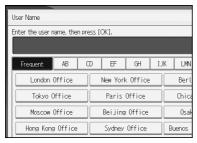


The user name change screen will appear.

4 Enter the user name and then press [OK].

To register or change a user name (When no name is registered to the Address Book)

Following describes the procedure for registering or changing a user name to be attached to a stored document.

- 1 Display the original scan screen.
- Press [User Name].

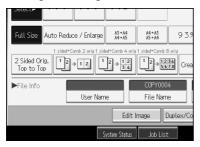


The user name input screen will appear.

Enter the user name and then press [OK].

To change a file name

Following describes the procedure for changing a name to be attached to a stored document.

- **1** Display the original scan screen.
- Press [File Name].

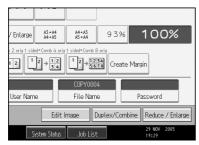

The document name change screen will appear.


- Press [Delete All] to delete the document name to be automatically set.
- 4 Enter the document name and then press [OK].

- Note
- ☐ In step [3], pressing [Backspace] allows you to delete up to any desired location.
- ☐ You can enter up to 20 characters for a document name. In the list, however, up to 16 characters are displayed as the document name. If above limits are exceeded, the list will display up to 15 characters for the document name.

To set or change a Password

Following describes the procedure for setting or changing a password to be attached to a stored document.

- 1 Display the original scan screen.
- 2 Press [Password].

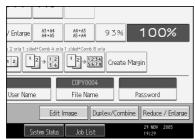


- Enter the password using the number keys and then press [OK]. You can use four to eight digits for specifying the password.
- 4 Enter the password again and then press [OK].

Changing User Name, File Name or Password of a Stored Document


Following describes the procedure for changing a user name, document name or password.

- Press the [Document Server] key.
- 2 Select the document whose user name, document name or password is to be changed.

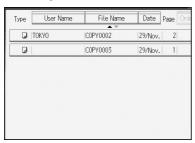

When a password is set, enter it and then press [OK].

- Press [File Management].
- Press [Change User Name], [Change File Name] or [Change Password].

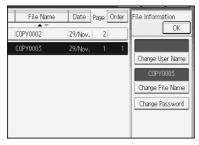


- From the respective change screens, enter the new user name, document name or password and then press [OK].
- Press [OK].
 - **𝚱** Note
 - ☐ Depending on the security settings, [Change Access Priv.] is displayed instead of [Change User Name].
 - ☐ For details about procedure for setting [Change Access Priv.], ask the administrator.

Checking the Details of a Stored Document

Following describes the procedure for displaying details of a stored document.

- Press the [Document Server] key.
- **2** Select the document whose details are to be displayed.

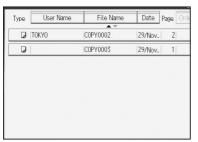

When a password is set, enter it and then press [OK].

Press [Details].

Details of the document will be displayed.



- Note
- ☐ When you have selected two or more documents, you can view the information of the documents in the order of [▲][▼].
- \square Pressing **[Exit]** restores the document selection screen.

Searching for a Stored Document

Following describes the procedure for searching a stored document from user name or document name.

You can rearrange the currently chronologically ordered documents in any desired order.

❖ To search by file name

Following describes the procedure for searching a stored document from the document name.

To search by user name

Following describes the procedure for searching a stored document from the user name.

- Installing DeskTopBinder Lite enables search and reordering of stored documents from PC.
- ☐ For more information about DeskTopBinder Lite, see Instruction Manual and Help of DeskTopBinder Lite.

To search by file name

Following describes the procedure for searching a stored document from the document name.

- 1 Press the [Document Server] key.
- Press [File Name].



Enter the document name to be searched and then press [OK].

A document name that matches completely from the starting character will be searched and displayed on the document selection screen.


Note

☐ Pressing [Display All] displays ever stored document.

To search by user name

Following describes the procedure for searching a stored document from the user name.


- Press the [Document Server] key.
- Press [User Name].

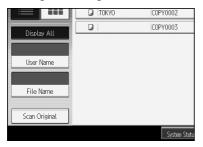

When specifying a registered user name, select the user name and then press [OK].

When using a not-registered user name, proceed to the next step.

When the user name is not registered, press [Manual Entry] and then enter the user name to be displayed from the input screen. Then press [OK].

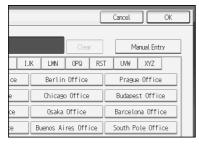

Press [OK].

A document name that matches completely from the starting character will be searched and displayed on the document selection screen.

Note

☐ Pressing [Display All] displays ever stored document.

Printing a Stored Document

Following describes the procedure for printing a stored document.

Using Web Image Monitor allows you to print a document stored in the Document Server from your PC.

- Press the [Document Server] key.
- **2** Select the document to be printed. When a password is set, enter it and then press [OK].
- When printing two or more documents at a time, repeat the operation in **2**. Up to 30 documents can be printed.
- When specifying printing conditions, press [To Printing Screen].

 The printing condition screen will appear. User name of the document, document name and the order of printing of this document will be displayed.



5 Enter the number of print copies using the number keys.



Up to 999 copies are specifiable.

Press the [Start] key.

Printing will be started.

Note ☐ You can search the target document using, in step ②, [User Name] or [File **Name**] situated in the upper left side of the screen. \square Some of the selected document may not be printed due to the difference in the size or resolution. ☐ When changing the printing order, cancel the highlight and then specify the order correctly. ☐ Pressing the [Clear Modes] key cancels every selection. ☐ Pressing [Order] displays the selected documents in the printing order. ☐ The copy and printer features holds the specified printing conditions after the operation is over and applies them at the next printing. ☐ When two or more documents are specified, the printing conditions are stored on the first document but not on the succeeding documents. ☐ Following settings are available for the printing conditions. For respective printing results, see "Copier Functions". Book binding style (2 Sided Top to Top, 2 Sided Top to Bottom, Magazine, Booklet) • Treatment of front cover (Cover/Slip Sheet, Edit / Stamp) Finish (Sort, Rotate Sort, Stack, Staple, Punch) ☐ When printing two or more copies while selecting the sort function, you can confirm the finish by printing only one copy. ☐ When printing two or more documents at a time, you can print them as a single continuous document by specifying the order of their printing. ☐ When printing two or more documents at a time, the printing conditions set for the first document are applied to all the remaining documents. ☐ When two or more documents are selected, pressing [♠][▼] allows you to confirm the user name, document name and printing order being designated for deletion in step 2. ☐ Pressing [Select File] restores the document selection screen. p.42 "Copier Functions" When Interrupting Printing Following describes the procedure for interrupting printing work. Press the [Clear/Stop] key

Press [Suspend].

Changing Number of Print Copies while Printing is in Progress

Following describes the procedure for changing the number of print copies after printing is stared.

∰Important

- ☐ This feature is enabled when the sort function is selected in the printing conditions.
- Press the [Clear/Stop] key.
- Press [Change Quantity].
- Enter the number of print copies anew using the number keys.
- Press the [#] key.
- Press [Continue].

Printing will be resumed.

Note


☐ The range of print copies enterable in step ② depends on the timing of your pressing the 【Clear/Stop】 key.

Sample Print

When print copies are massive, you can print a single copy in advance to check appropriateness of the printing order of the selected documents and the printing conditions.

#Important

- $\hfill\square$ This feature is enabled when the sort function is selected in the printing conditions.
- **1** Select the document to be printed.

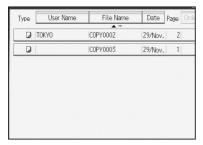

When a password is set, enter it and then press [OK].

Press the [Sample Copy] key.

Only one copy will be printed.

Press [Continue].

Printing will be resumed.

Note

- ☐ You can search the target document using, in step ①, [User Name] or [File Name] situated in the upper left side of the screen.
- ☐ In the display order field of step ①, you can sort the documents by [User Name], [File Name], [Date]. Press the item to be used for the sorting.
- ☐ To cancel the selection in step **①**, press the highlighted document again.
- ☐ To cancel the printing, press **[Suspend]**. The print screen will appear, enabling to set another item.

Printing the First Page


In order to confirm the print results, you can print the first page alone of the document selected from the document selection screen.

When two or more documents are selected, the first page of the respective documents is printed.

Select the document to be printed (confirmed).

When a password is set, enter it and then press [OK].

- Press [Print Specified Page].
- Press [1st Page].

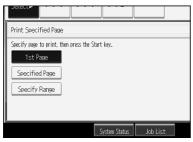

4 Press the [Start] key.

- ☐ You can search the target document using, in step ①, [User Name] or [File Name] situated in the upper left side of the screen.
- ☐ In the display order field of step ¶, you can sort the documents by [User Name], [File Name], [Date]. Press the item to be used for the sorting.
- ☐ To cancel the selection in step ①, press the highlighted document again.

You can print the specified page alone of the document selected from the document selection screen.

When two or more documents are selected, the specified page of the respective documents is printed.

1 Select the document to be printed.

When a password is set, enter it and then press [OK].

- Press [Print Specified Page].
- Press [Specified Page].



- Specify the page to be printed using the number keys, and then press the [#] key.
- Press the [Start] key.
 - Note
 - ☐ You can search the target document using, in step ①, [User Name] or [File Name] situated in the upper left side of the screen.
 - ☐ In the display order field of step ①, you can sort the documents by [User Name], [File Name], [Date]. Press the item to be used for the sorting.
 - ☐ To cancel the selection in step **①**, press the highlighted document again.

1

Printing a Specified Range

You can print the pages in the specified range alone of the document selected from the document selection screen.

When two or more documents are selected, pages in the specified range of the respective documents is printed.

- **1** Select the document to be printed.
 - When a password is set, enter it and then press [OK].
- Press [Print Specified Page].
- Press [Specify Range].




- Specify the printing start page using the number keys, and then press the [#] key.
- Specify the printing end page using the number keys, and then press the [#] key.
- Press the [Start] key.
 - Note
 - ☐ You can search the target document using, in step ①, [User Name] or [File Name] situated in the upper left side of the screen.
 - ☐ In the display order field of step ①, you can sort the documents by [User Name], [File Name], [Date]. Press the item to be used for the sorting.
 - ☐ To cancel the selection in step **①**, press the highlighted document again.

Following describes the procedure for deleting a stored document.

#Important

- ☐ The Document Server can store up to 2000 documents. As the number of stored documents reaches 2000, storing of a new document becomes unavailable. Thus, you should delete unnecessary documents as much as practicable.
- 1 Press the [Document Server]key.
- Select the document to be deleted.

 When a password is set, enter it and then press [OK].
- Press [Delete File].

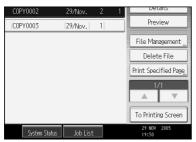

4 Press [Yes].

Note

- You can delete the stored documents at a time. See "Administrator Tools", General Settings Guide.
- ☐ Using Web Image Monitor allows you to delete a document stored in the Document Server from your PC.
- \square It is also possible to select two or more documents and delete them.
- ☐ You can search the target document using, [File Name] or [User Name] situated in the upper left side of the screen.
- ☐ In the display order field, you can sort the documents by [User Name], [File Name], [Date]. Press the item to be used for the sorting.
- ☐ When you could not identify the target document from the document name, print the first page alone of the document in order to confirm the print results.
- $\hfill \square$ To cancel your selection, press the highlighted document again.
- ☐ For the Web Image Monitor starting procedure, see "Displaying a Document in Document Server with Web Image Monitor".

1

p.183 "Displaying a Document in Document Server with Web Image Monitor" $\,$

"Administrator Tools", General Settings Guide

Displaying a Document in Document Server with Web Image Monitor

Following describes the procedure for confirming contents of a stored document on the PC screen by use of Web Image Monitor.

- 1 Start Web browser.
- Enter "http:// (IPv4 address of this machine) /" to the address. Top page of Web Image Monitor will be displayed.
- Click [Document Server].

The list of documents in the Document Server will be displayed

4 Click of the document you want to confirm. Information of the document will be displayed.

- **5** Confirm contents of the document.
 - Ø Note
 - ☐ You can change the document list display format in step 3. Click ⊞ (Thumbnails), Ⅲ (Icons), or (Details) for the display format.
 - ☐ When you want to enlarge the preview display in step ⑤, click [Enlarge Image].

Following describes the procedure for downloading a stored document to the PC by use of Web Image Monitor.

#Important

- ☐ When downloading a document stored with the copy feature, you must prepare the extended data conversion board.
- 1 Start Web browser.
- 2 Enter "http://(IPv4 address of this machine)/" to the address. Top page of Web Image Monitor will be displayed.
- Click [Document Server].

List of the documents will be displayed.

- Click of the document you want to download.
- **5** Select [PDF], [JPEG], or [Multi-page TIFF] for the file format.
- Click [OK].
- **7** Click [OK] in the confirmation window.

𝒯 Note

- ☐ You can change the document list display format in step ④. Click ⊞ (Thumbnails), Ⅲ (Icons), or (Details) for the display format.
- ☐ In step **⑤**, you cannot select **[JPEG]** for a document being stored with the scanner.
- ☐ In step **⑤**, you cannot select **[Multi-page TIFF]** for a document being stored with the copy or printer.
- ☐ When downloading a document with [Multi-page TIFF] in step ⑤, you must prepare a Printer/Scanner Unit and File Format Convertor.

4

5. Appendix


Following describes the copy machine's specifications and the function compatibility.

Function Compatibility

A given combination of the copy features may or may not be available depending on the order of its setup.

Blank space: Combination available

- ×: Combination unavailable (Precedence is given to the function selected earlier)
- •: Combination unavailable (Precedence is given to the function selected later) Following lists the combinations of functions.

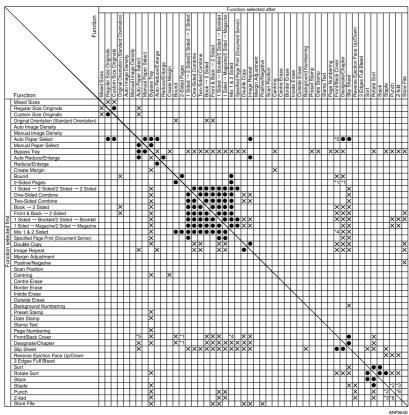

The following combinations are not possible.

- *1 Front/Back Cover or Designate/Chapter with 2 Sided → 1 Sided
- *2 Top 2 of Staple with 2 holes left of Punch. Top/ Top Slant/ Bottom of Staple with 2 holes top of Punch.
- *3 Top 2 of Staple with Right Fold. Left 2 of Staple with Bottom Fold. Bottom of Staple with Bottom Fold. Top Slant of Staple with Bottom Fold. Saddle Stitch of Staple with Z-fold.
- *4 Front Cover with 2 Sided \rightarrow 1 Sided.
- *5 Auto Paper Select with Back Cover.
- *6 Left of punch with Bottom Fold. Top of punch with Right Fold.

Supplementary Information

 
Following describes the detailed specifications of the respective functions.

Batch mode

You cannot switch between 1-sided and 2-sided originals during copying.

Mixed Size mode

- Since small originals may not be correctly aligned with the original guide, the copy image may be slanted.
- You can place originals of two different sizes at a time.
- Copying speed and scanning speed will be reduced.
- When using with 1 Sided→2 Sided mode, always ensure that the originals of each size are in even numbers. If you have an odd number of originals, insert blank sheets to adjust the total.



Bypass Tray Copy

- Following paper sizes can be selected as the standard sizes: A3\$\subset\$, B4 JIS\$\subset\$, A4\$\subset\$\supset\$, B5 JIS\$\supset\$\supset\$, A5\$\supset\$\supset\$\supset\$, B6 JIS\$\supset\$, A6\$\supset\$, 8\$^1/2" \times 13"\$\supset\$\supset\$, 8\$^1/4" \times 10\$^1/2"\$\supset\$\supset\$\supset\$, 8\$^1/4" \times 10\$^1/2"\$\supset\$\suppet\$\supset\$\suppet\$\supset\$\suppet\$
- When the beeper is turned off, it will not sound if you insert paper into the bypass tray. See "System Settings on Main and Submachines", General Settings Guide.
- The number of sheets you can set in the bypass tray depends on the paper type. If the number set exceeds that in the table below, paper misfeeds may occur or copies may be skewed.

Paper type	Number of sheets
Thick paper (105-157 g/m², 28-42 lb.)	30 sheets
Thick paper (157-216 g/m², 42-57.8 lb.)	20 sheets
Translucent paper	50 sheets
OHP transparencies	50 sheets

❖ Preset Enlarge/Reduce

- You can select one of 12 preset ratios (5 enlargement ratios, 7 reduction ratios).
- Following shows the relation between the original's size and copied-to paper size at respective scaling factors.
 - Metric version
 400% (Area ratio 16 times):200% (Area ratio 4 times): A5 → A3, B6 JIS → B4 JIS
 141% (Area ratio 2 times): A4 → A3, A5 → A4, B5 JIS → B4 JIS, B6 JIS →
 B5 JIS
 122%: A4 → B4 JIS, A5 → B5 JIS
 115%: B4 JIS → A3, B5 JIS → A4, B6 JIS → A5
 93%:85%: B4 JIS → A4, B5 JIS → A5
 78%: B4 JIS→F4, B4 JIS→F
 73% (Area ratio ¹/₂times): A3 → A4, A4 → A5, B4 JIS → B5 JIS, B5 JIS →
 B6 JIS
 65%: A3→F

• Inch version

25%:-

```
\begin{array}{l} 400\% (\text{Area ratio 16 times}): -\\ 200\% (\text{Area ratio 4 times}): 5^1/_2" \times 8^1/_2" \to 11" \times 17"\\ 155\% (\text{Area ratio 2 times}): 5^1/_2" \times 8^1/_2" \to 8^1/_2" \times 14"\\ 129\%: 8^1/_2" \times 11" \to 11" \times 17"\\ 121\%: 8^1/_2" \times 14" \to 11" \times 17"\\ 93\%: -\\ 85\%: F \to 8^1/_2" \times 11"\\ 78\%: 8^1/_2" \times 14" \to 8^1/_2" \times 11"\\ 73\%: 11" \times 15" \to 8^1/_2" \times 11"\\ 65\%: 11" \times 17" \to 8^1/_2" \times 11"\\ 50\% (\text{Area ratio }^1/_4 \text{times}): 11" \times 17" \to 5^1/_2" \times 8^1/_2"\\ 25\%: -\\ \end{array}
```

50% (Area ratio $^{1}/_{4}$ times): A3 \rightarrow A5, B4 JIS \rightarrow B6 JIS

You can select a ratio regardless of the size of an original or copy paper.
 With some ratios, parts of the image might not be copied or margins will appear on copies.

Zoom

- The reproduction ratios you can specify are 25-400%.
- You can select a ratio regardless of the size of an original or copy paper.
 With some ratios, parts of the image might not be copied or margins will appear on copies.

❖ Size Magnification

• The reproduction ratios you can specify are 25-400%.

Directional Size Magnification

- The reproduction ratios you can specify are 25-400%.
- When entering a percentage ratio, you can specify any value in the permitted range, regardless of original or copy paper size. However, depending on settings and other conditions, part of the image may not be copied, or margins will appear on copies.
- When entering a size in mm, if the calculated ratio is over the maximum or under the minimum ratio, it is automatically adjusted to within available range. However, with some ratios, parts of the image might not be copied or margins will appear on copies.

Sort, Stack

 Paper sizes and orientations that can be used with the Stack function are as follows:

A3
$$\square$$
 - A6 \square , B6 \square , 11" × 17" - 5 $^{1}/_{2}$ " × 8 $^{1}/_{2}$ ", 12" × 18"

- Paper sizes and orientations that can be used in the Rotate Sort function are A4 □ □, B5 JIS □ □ and 8¹/2" × 11" □ □.
- The following table shows you the numbers of copies than the tray can hold. Remove copies from the tray when the maximum is exceeded.
 Copy tray

Paper Size and Direction	Number of Copies	
A3, B5 JIS or smaller	250 sheets (80 g/m², 20 lb.)	
B4 JIS or smaller	500 sheets (80 g/m², 20 lb.)	

3,000Sheet-100Sheet Staple Finisher (upper tray)

Paper Size and Direction	Number of Copies	
$A4, 8^1/_2$ " × 11" or smaller	500 sheets (80 g/m ² , 20 lb.)	
B4 JIS, $8^1/2$ " × 14" or larger	250 sheets (80 g/m², 20 lb.)	

3,000Sheet-100Sheet Staple Finisher (shift tray)

Paper Size and Direction	Number of Copies	
$A4 \ \square$, B5 JIS $\ \square$, $8^1/_2$ " × 11" $\ \square$	3000 sheets (80 g/m², 20 lb.)	
A3¬, B4 JIS¬, A4¬, B5 JIS¬, 11" × 17"¬, 81/2" × 14"¬, 81/2" × 11"¬, 12" × 18"¬	1500 sheets (80 g/m², 20 lb.)	
A5 \Box , 5 ¹ / ₂ " × 8 ¹ / ₂ " \Box	500 sheets (80 g/m², 20 lb.)	
A5D, 5 ¹ / ₂ " × 8 ¹ / ₂ "D	100 sheets (80 g/m², 20 lb.)	

5

3,000Sheet-50Sheet Staple Finisher (upper tray)

Paper Size and Direction	Number of Copies	
$A4, 8^1/2$ " × 11" or smaller	250 sheets (80 g/m², 20 lb.)	
B4 JIS, $8^1/2$ " × 14" or larger	50 sheets (80 g/m², 20 lb.)	

3,000Sheet-50Sheet Staple Finisher (shift tray)

Paper Size and Direction	Number of Copies	
$A4 \square$, $8^1/_2$ " × 11" \square	3000 sheets (80 g/m², 20 lb.)	
A3D, B4 JISD, A4D, B5 JISD, 11" × 17"D, 8 ¹ / ₂ " × 14"D, 8 ¹ / ₂ " × 11"D, 12" × 18"D	1500 sheets (80 g/m², 20 lb.)	
A5 [J	500 sheets (80 g/m², 20 lb.)	
A5 \Box , B6 JIS \Box , $5^{1}/_{2}$ " × $8^{1}/_{2}$ " \Box , A6 \Box	100 sheets (80 g/m², 20 lb.)	

Booklet Finisher (upper tray)

Paper Size and Direction	Number of Copies	
$A4, 8^1/2$ " × 11" or smaller	250 sheets (80 g/m², 20 lb.)	
B4 JIS, 8 ¹ / ₂ " × 14" or larger	50 sheets (80 g/m², 20 lb.)	

Booklet finisher (shift tray)

Paper Size and Direction	Number of Copies	
$A4 \square$, $8^1/_2$ " × 11 " \square	2000 sheets (80 g/m ² , 20 lb.)	
A3 \square , B4 JIS \square , A4 \square , B5 JIS \square , 11" × 17" \square , 8 ¹ / ₂ " × 14" \square , 8 ¹ / ₂ " × 14" \square , 12" × 18" \square	1000 sheets (80 g/m², 20 lb.)	
A5 []	500 sheets (80 g/m ² , 20 lb.)	
A5□, B6 JIS□, 5 ¹ / ₂ " × 8 ¹ / ₂ "□	100 sheets (80 g/m², 20 lb.)	

When using the Rotate Sort or Staple functions, the capacity may be reduced.

Staple

- The following types of paper cannot be stapled:
 - Postcard
 - Translucent paper
 - OHP transparencies
 - Label paper (adhesive labels)
 - Thick paper
 - Curled paper
 - Paper of low stiffness
 - Paper of mixed sizes

- In the following cases, copies will be delivered to the shift tray without stapling:
 - When the number of sheets for one set is over stapler capacity.
 - When memory reaches 0% during copying.
- When using the Staple function with [1 Sided→1 Sided], [1 Sided→2 Sided], [2 Sided→1 Sided], [2 Sided→2 Sided], [Double Copies], select □ original for □ and □ original for □ copy.
- When using the Staple function with [1 sided→Comb 2 orig], [1 sided→2 sided:TtoB], [1 sided→2 sided:TtoT], [Double Copies], select □ paper for □ original and □ for □ original.
- When using the Staple function [Staple: Left 2] or [Staple: Top 2] with the Combine function [1 Sided→1 Sided], [1 Sided→2 Sided], [2 Sided→1 Sided], [2 Sided→2 Sided], [Double Copies], select □ paper for □ original and □ paper for □ original.
- If a finisher is installed, the mixed size function and the auto paper selection function become available. These functions make it possible to choose the paper appropriate for stapling from the mixed sizes. Prior to the operation, you should set on the feed tray the paper of the size to be used. Following sizes allow the stapling when mixed with other sizes.
 - A3 \square and A4 \square
 - B4 JIS□ and B5 JIS□
 - A4□ and A5□
 - $11'' \times 17'' \square$ and $8^1/_2'' \times 11'' \square$
 - $8^{1}/_{2}$ " × 11" \square and $5^{1}/_{2}$ " × $8^{1}/_{2}$ " \square
- Paper sizes and orientations that can be used in the Staple function and the stapler capacity are as follows:
 3,000Sheet-100Sheet Staple Finisher

Paper Size and Orientation	Stapler Capacity	
A3□, B4 JIS□, 11" × 17"□, 8 ¹ / ₂ " × 14"□	50 sheets (80 g/m ² , 20 lb.)	
A4 □ □, B5 JIS □ □, 8 ¹ / ₂ " × 11" □ □	100 sheets (80 g/m², 20 lb.)	

3,000Sheet-50Sheet Staple Finisher, Booklet finisher (upper tray/ shift tray)

Paper Size and Orientation	Stapler Capacity
A3□, B4 JIS□, 11" × 17"□, 8 ¹ / ₂ " × 14"□	30 sheets (80 g/m ² , 20 lb.)
A4 □ □, B5 JIS □ □, 8¹/2" × 11" □ □	50 sheets (80 g/m ² , 20 lb.)

Booklet finisher (booklet tray)

Paper Size and Orientation	Stapler Capacity
A3 \square , B4 JIS \square , A4 \square , B5 JIS \square , 11" × 17" \square , 8 ¹ / ₂ " × 14" \square , 8 ¹ / ₂ " × 11" \square , 12" × 18" \square	15 sheets (80 g/m², 20 lb.)

- When stapling B4 JIS \square , A3 \square , Legal $8^1/2^{"} \times 14^{"}\square$, $11^{"} \times 17^{"}\square$, be sure to extend the paper support plate of the finisher tray.
- When the number of copies exceeds tray capacity, copying stops. If this happens, remove the copies from the shift tray, and then resume copying. The tray capacity for the stapled sheets is as follows: (paper weight: 80 g/m², 20 lb.)
 3,000Sheet-100Sheet Staple Finisher (Finisher shift tray without Z-folding unit)

Paper Size and Orientation	Number of Sheets	Number of Stapled Copies
A4 □ □, B5 S □ □, 8 ¹ /2" × 11" □ □	2- to 9-leaf binding	150 sets (Max. 3000 sheets)
A400,00 ji300,0 /2 × 11	10- to 100-leaf binding	200 to 30 sets (Max. 3000 sheets)
3□, B4 JIS□, 11" × 17"□,		150 sets (Max. 1500 sheets)
$8^{1}/_{2}$ " × 14" \Box "	10- to 50-leaf binding	150 to 30 sets (Max. 1500 sheets)

3,000Sheet-100Sheet Staple Finisher (Finisher shift tray with Z-folding unit)

Paper Size	Number of Z-folded Sheets	Number of Stapled Copies
Z-folded A3 \bigstar A4 Z-folded B4 JIS \bigstar B5 JIS Z-folded 11" × 17" \bigstar 8 $^{1}/_{2}$ " × 11"	2 to 10	15 to 3 sets (Max. 30 sheets for Z-folded paper)

3,000Sheet-50Sheet Staple Finisher

Paper Size and Orientation	Number of Sheets	Number of Stapled Copies
A4\$\overline{\mathcal{D}}\$, 8\$^1/2" \times 11"\$\overline{\mathcal{D}}\$	2- to 19-leaf binding	150 sets (Max. 3000 sheets)
	20- to 50-leaf binding	150 to 60 sets (Max. 3000 sheets)
A4□, B5 JIS □□, 8¹/2" × 11"□	2- to 14-leaf binding	100 sets (Max. 1500 sheets)
	15- to 50-leaf binding	100 to 30 sets (Max. 1500 sheets)
Other sizes	2- to 14-leaf binding	100 sets (Max. 1500 sheets)
	15- to 30-leaf binding	100 to 33 sets (Max. 1500 sheets)

Paper weight: 80 g/m^2 (20 lb.)

Booklet finisher

Paper Size and Orientation	Number of Sheets	Number of Stapled Copies
A4\$\overline{\mathcal{D}}\$, 8\$^1/2" \times 11"\$\overline{\mathcal{D}}\$	2- to 12-leaf binding	150 sets (Max. 2000 sheets)
	13- to 50-leaf binding	150 to 40 sets (Max. 2000 sheets)
A4□, B5 JIS □□, 8¹/2" × 11"□	2- to 9-leaf binding	100 sets (Max. 1000 sheets)
	10- to 50-leaf binding	100 to 20 sets (Max. 1000 sheets)
Other sizes	2- to 9-leaf binding	100 sets (Max. 1000 sheets)
Outer sizes	10- to 30-leaf binding	100 to 33 sets (Max. 1000 sheets)

Paper weight: 80 g/m^2 (20 lb.)

- You cannot change stapling positions during copying.
- When the original image is rotated, the staple orientation changes by 90°.
- When [Top] or [Bottom] is selected and the paper with the same orientation
 as the original is not loaded, the image is rotated and the paper with the
 same size and the different orientation is selected.
- With certain stapling settings, you cannot use the Rotate function.
- If you select the Saddle Stitch function with the Booklet finisher, the machine staples and folds the paper in the centre, then delivers the paper folded.
- If you select the Saddle Stitch function in Magazine mode, the machine staples the paper, and folds it like a book, then delivers the paper folded.

Punch

- When using Punch and Combine, Double Copies, or Auto Reduce/Enlarge, the message "Blank part will appear. Check orientation." may appear because of the orientation of the original and the copy paper. If this occurs, change the orientation of the copy paper.
- Punchable paper sizes are as follows:

Punch Unit Type	Position	Paper Size
2 holes type	₽	A3 – A5, 11" × 17", 8 ¹ / ₂ " × 11"
	D	A4 – A5, 8 ¹ / ₂ " × 11"
3 holes type	₽	A3, B4 JIS, 11" × 17"
	D	A4, B5 JIS, 8 ¹ / ₂ " × 11"
4 holes type	₽	A3, B4 JIS, 11" × 17"
	D	A4, B5 JIS, 8 ¹ / ₂ " × 11"


❖ Z-fold

- You cannot use the following copy paper with this function:
 - Recycled paper
 - · Special paper
 - Translucent paper
 - Letterhead
 - Thick paper
 - Colour paper 1
 - Colour paper 2
 - Tab stock
 - OHP transparencies
 - Label paper (adhesive labels)
 - Postcards
- Paper fed from the interposer cannot be Z-folded.
- Paper sizes that can be Z-folded are as follows:
 - Booklet Finisher / 3,000Sheet-100Sheet Staple Finisher
 A3□, B4 JIS□, A4□, 11" × 17"□, 8¹/2" × 14", □, 8¹/2" × 11"□,
 12" × 18"□
- The number of Z-folded copies that can be stacked on the finisher trays are as follows. When the number of copies exceeds capacity, remove them from the trays.

3,000Sheet-100Sheet Staple Finisher (Finisher upper/shift tray)	30 sheets
Booklet Finisher (Finisher upper/shift tray)	B4 JIS, $8^1/_2$ " × 14" :30 sheets A4, $8^1/_2$ " × 11" or smaller :20 sheets

5

 - The paper sizes that can be stapled after being Z-folded are A3□, B4 JIS□ and 11" × 17"□.
- Even if you place different size originals in the ADF, appropriate size of copy paper can be automatically selected and stapled using the Mixed Size mode and Auto Paper Select function. Load the paper you want to use in the paper trays beforehand. Paper sizes that can be stapled when using the Mixed Size mode are as follows:
 - A3□ and A4□
 - A4□ and A5□
 - B4 JIS□ and B5 JIS□
 - $11" \times 17" \square$ and $8^1/_2" \times 11" \square$
 - $8^{1}/_{2}$ " × 11" \square and $5^{1}/_{2}$ " × $8^{1}/_{2}$ " \square



- Depending on the Z-fold settings, you may not be able to use Rotate Sort.
- Even if you have selected [Face Up] for Eject Copy Face up/Down in Glass Mode, the copies will be delivered face down.

❖ Duplex

- Following paper sizes and directions allow the double-side copy.

 A3□, B4 JIS□, A4□□, B5 JIS□□, A5□□, 11" × 17"□, 8¹/2" × 14"□,

 8¹/2" × 11"□□, 5¹/2" × 8¹/2"□□, 8¹/2" × 13"□, 8¹/4" × 13"□, 8" × 13"□,

 
 7¹/4" × 10¹/2"□, 11" × 15"□, 11" × 14"□, 10" × 15"□, 10" × 14"□,

 8¹/4" × 14"□, 8" × 10¹/2"□, 210 × 340 mm□, 210 × 182 mm□,

 210 × 170 mm □, 8K□, 16K□□
- You cannot use the following copy paper with this function:
 - paper of a size smaller than A5, $5^1/2^{"} \times 8^1/2^{"}$
 - Translucent paper
 - Label paper (adhesive labels)
 - OHP transparencies
 - Paper thicker than 105 g/m², 28 lb.
 - Paper thinner than 64 g/m², 17 lb.
 - Postcards
 - Tab stock
- When an odd number of originals is placed in the ADF, the back of the last page of copied paper is blank.
- During copying, the image is shifted to allow for the binding margin.
- Front and back image quality of copies may differ.

Combine

- In this mode, the machine selects the reproduction ratio automatically.
 This reproduction ratio depends on copy paper sizes and the number of originals.
- The reproduction ratios you can specify are 25-400%.
- If the calculated ratio is under the minimum ratio, it is automatically adjusted to within available range. However, with some ratios, parts of the image might not be copied.
- You cannot use custom size paper.
- If the orientation of originals is different from that of the copy paper, the machine will automatically rotate the image by 90° to make copies properly.
- If the number of originals placed is less than the number specified for combining, the last page segment is left blank as shown.




❖ Booklet/Magazine

- The machine sets the reproduction ratio automatically to meet the paper size and copies the originals together onto the paper.
- The reproduction ratios you can specify are 25-400%.
- If the calculated ratio is under the minimum ratio, it is automatically adjusted to within available range. However, with some ratios, parts of the image might not be copied.
- If the orientation of originals is different from that of the copy paper, the machine will automatically rotate the image by 90° to make copies properly.
- You cannot copy with originals different in size and orientation.
- If the number of originals scanned is less than a multiple of 4, the last page is copied blank.
- In Magazine mode, the copying may take some time after scanning originals.
- When the optional booklet finisher is installed, if you select Saddle Stitch function in Magazine mode, the machine staples and folds the paper in the centre, then delivers the paper folded.

Image Repeat

 - Depending on the paper size, ratio, and orientation, parts of repeated images may not be copied.
- If you use this function with "Custom Size", you can copy repeatedly the
 image in the area you want by specifying the vertical and horizontal
 lengths from the base point. In this case, place your original on the exposure glass.



- ① Base point
- ② Horizontal length
- ③ Vertical length

Centring

• Though the original is set to a different orientation from the paper loaded, the machine will not rotate the image by 90° (Rotate copy).

Erase

- The width of the erased margin varies depending on the reproduction ratio.
- If the size of the original is different from sizes listed in the following chart, the erased margin might be shifted:
 - Metric version
 Exposure glass: A3□, B4 JIS□, A4□□, B5 JIS□□
 ADF: A3□, B4 JIS□, A4□□, B5 JIS□□, A5□□
 - Inch version Exposure glass: 11" × 17" , 81/2" × 14" , 81/2" × 11" , 10" × 14" ADF: 11" × 17" , 81/2" × 14" , 81/2" × 11" , 51/2" × 81/2" , 10" × 14" , 10" × 14" .
- By combining "Erase Inside 1" "Erase Inside 5", you can erase up to 5 areas at the same time.

Background Numbering

• The numbers appear to overlap the copied image in some cases.

❖ Margin Adjustment

- If you set a binding margin that is too wide, part of the image may not be copied.
- When making copies in the Combine mode, the binding margin is added to the copies after the combination is finished.

 
- You can change the size and density of the stamp with User Tools. Depending on the setting, density may change.
- Depending on paper size, if you change the stamp size, parts of the stamp might not be printed.
- When you use this function with the Magazine or Booklet function, you can print the stamp only on the first page.

Date Stamp

- When using Combine mode, the date stamp is printed as follows:
 - With the Combine function




With the Magazine or Booklet function




Page Numbering

 
- When page numbering is used with Combine mode, page numbers are printed as follows:
- Page Numbering per original: With 1 Sided / 2 Sided using the Combine function




With the Magazine or Booklet function

 

 Page Numbering per copy:
 With 1 Sided/2 Sided using the Combine function



 If you combine this function with the Duplex (Top to Top) function and select [P1,P2...] or [1/5,2/5...], page numbers on the back are printed as follows:



- Front
- ② Back

Front Cover, Front/Back Cover

- If Blank mode is selected, the cover will not be counted as a copy.
- Front and back covers are two-sided copied depending on the settings made in Display Time in Cover Sheet Tray of User Tools (System Settings).
 - At Mode Selected... Depends on the setting done from Cover Sheet Tray.
 - Full Time... Depends on the setting done from Paper Type. See "Tray Paper Settings", General Settings Guide.

Designate

 When "Combine (1 Sided→2 Sided)" has been selected, specified pages will always be copied on the front of copies in the same way as in Chapters mode.

Slip sheet

• If you do not copy onto slip sheets, they are excluded from the number of copies counted.

Connect Copy

#Important

- ☐ Do not use the connecting cable with other equipment.
- Always turn off the main power of the main and sub-machines when before disconnecting the cable. Otherwise it might lead to malfunctioning of the two machines.
- You can store on a program whether or not to use Connect Copy.
- Select the copy paper using the main machine.
 - When [Connect Copy] is pressed, only the paper trays common to both machines will be displayed. The other paper trays appear faded out and cannot be selected.
 - When two or more trays hold the desired paper size, the paper tray will be selected according to the Paper Tray Priority settings made on the respective machine. See "Tray Paper Settings", General Settings Guide.
- If the [Clear Modes] key is pressed on the main machine while you are making settings, Connect Copy will be cancelled.
- Even if the sub-machine is in Energy Saver mode, the main machine can still connect to make copies.
- When an Interrupt job on the sub-machine has finished, press the [Interrupt] key.
- Connect Copy jobs are displayed on the Job List of the sub-machine. However, they cannot be deleted from the sub-machine.
- In Connect Copy, both machines follow the user authentication settings of the main machine.
 - You cannot manage the number of copies according to machine. The number of copies is shown as a total of the two machines, and is monitored on the main machine
 - Even if user codes are set and you enter a user code before using the sub-machine, you cannot manage the number of copies made on the sub-machine.
 - If user codes are set on only the sub-machine, you need not enter a user code in order to use the sub-machine for Connect Copy. In this case, you cannot manage the number of copies according to user.

INDEX

Blank Slip Sheets, 130

Book \rightarrow 1 Sided, 80

Book \rightarrow 2 Sided, 82 Booklet, 82

Bypass tray, 38, 39 Bypass Tray Copy, 187

Booklet/Magazine, vi, xi, 82, 187 Border Erase, 92, 94, 95, 97, 98

1 Sided 16 Pages → Combine 2 Sides, 77 1 Sided 2 Pages → Combine 1 Side, 74 1 Sided 4 Pages → Combine 1 Side, 74 1 Sided 4 Pages → Combine 2 Sides, 77 1 Sided 8 Pages → Combine 2 Sides, 77 1 Sided 8 Pages → Combine 2 Sides, 77 1 Sided → 2 Sided, 70 1 Sided → Booklet, 82 1 Sided → Magazine, 82 2 Sided 16 Pages → Combine 2 Sides, 77 2 Sided 1 Page → Combine 1 Side, 74 2 Sided 2 Page → Combine 1 Side, 74 2 Sided 4 Page → Combine 1 Side, 74 2 Sided 4 Pages → Combine 2 Sides, 77 2 Sided 4 Pages → Combine 2 Sides, 77 2 Sided 8 Pages → Combine 2 Sides, 77 2 Sided → 1 Sided, 80 2 Sided → 2 Sided, 70 2 Sided → Booklet, 82 3 Edges Full Bleed, 87	Centre, 96, 97, 98, 124 Centre/Border Erase, 92, 97 Centre Erase, 92, 96 Centring, 124, 187 Changing a Stored Program, 137 Changing Number of Print Copies while Printing is in Progress, 178 Changing the Number of Sets, 60 Changing the order of jobs, 34 Changing the stamp position, 120 Changing User Name, File Name or Password of a Stored Document, 172 Chapters, 129 Checking Job History, 35 Checking jobs in the print queue, 33 Checking the Details of a Stored Document, 173 Check the copy, 59 Combine, 187 Combined auto and manual image density, 42, 43
Adjusting Copy Image Density, 42 Administrator Tools, 6 Auto Document Feeder, 12 Auto image density, 42 Auto Off, 150 Auto Paper Select, 45, 46 Auto Reduce/Enlarge, 51 Auto Reset when using Connect Copy, 150 Auto Start, 30	Connect Copy, 141, 142, 145, 149, 155, 156, 157, 187 Connect Copy: Job Preset, 157, 158, 159 Connect Copy Display Panel, 144 Connect Copy Job Flow, 155 Copier Functions, 42, 161 Copy Face Up, 27 Copying, 25 Copying, 25 Copying 2-Sided Pages, xii Copying from the Bypass Tray, 36 Copying onto OHP Transparencies, 40 Copying onto Tab Stock, 28 Copying onto Thick Paper, 41
Background Numbering, 101, 187 Basic Procedure, 25 Batch mode, 20, 187 Before You Start, 143 Binding margin, 91	Copying onto Thick Paper, 41 Copying onto Thin Paper, 40 Copying Originals Such as Books, xi Copying Stored Documents Using Connect Print, 151 Covers, 126 Create Margin function, 49

Create Margin function, 49

Custom size, 39

Custom sizes, 24

С

D

Date, 112 Date Stamp, 110, 187 Default, 139 Deleting a Document, 182 Deleting a Program, 138 Deleting jobs, 35 Density, 104 Designate, 128, 187 Detect, 14 Different sizes, 22 Directional Magnification, 53, 54 Directional Size Magnification (mm), 55 Display, 4 Displaying a Document in Document Server with Web Image Monitor, 183 Display panel of the sub-machine, 145 Document Server, 161 Document Server Display, 162 Double Copies, 122 Downloading Stored Documents, 184 Duplex, iii, 70, 187

Ε

Edit, 6 Erase, 92, 187 Exiting Connect Copy, 150

F

First printing number, 115, 117, 118
First printing page, 115, 117, 118
Format of date, 112
Front & Back → 2 Sided, 82
Front/Back Covers, 126
Front cover, 126
Front Cover, Front/Back Cover, 187
Function Compatibility, 185

G

General Features, 6 Generation Copy, 44

н

Holding print jobs, 34 How to fold, 82 How to fold and unfold copies to make a booklet, 82 How to fold and unfold copies to make a magazine, 82 How to Read This Manual, 2 How to unfold, 82

ı

Image density, 42 Image Repeat, 121, 187 Initial Display, 139 Input / Output, 6 Inside Erase, 99 Interrupt Copy, 26, 142 Interrupting Printing, 177 Invert, 125

J

Job List, 32 Job List screen, 32 Job Preset, 31

Κ

Key Colour, 5

L

Last Number, 115, 117 Left Original Beeper, 27

M

Machine Types and Options, 142
Magazine, 82
Manual image density, 43
Manual Paper Select, 46
Manuals for This Machine, i
Map, 44
Margin Adjustment, 91, 187
Missing image area, 15
Mix 1 & 2 Sided, 88
Mixed size mode, 22, 187

N

Notice, 1 Number keys, 50, 54 One-Sided Combine, ix, 74
onto 1-Sided Pages, xii
Option, 3
Order of Copy Output, 149
Orientation, 104
Original, 11
Original Orientation, 16
Original orientation, 61, 102, 104, 110, 113
Original orientation and completed copies, 70
Original orientation position, 64
Originals, 11, 15
Originals and copy orientation, 73
Original size, 23
Outside Erase, 100

P

Page Numbering, 113, 115, 117, 118, 187 Pale, 44 Photo, 44 Placing, 11 Placing Originals, 16 Placing Originals in the Auto Document Feeder, 18 Placing Originals on the Exposure Glass, 18 Position, 61, 104 Positive/Negative, 125 Preset Enlarge/Reduce, 187 Preset Reduce/Enlarge, 47 Preset Stamp, 102, 104, 187 Preview Display, 164 Printer Functions, 161 Printing a Specified Page, 180 Printing a Specified Range, 181 Printing a Stored Document, 176 Printing the First Page, 179 Program, 107, 139 Programs, 136 Punch, 64 Punch holes, 64

R

Ratio, 50 Recalling a Program, 138 Regular sizes, 23 Repeat, 121 Reproduction Ratio, 6 Revers, 125 Rotate Sort, 57

S

SADF, 21 SADF mode, 21 Sample copy, 59 Sample Print, 178 Scanner Functions, 161 Scanning Position, 89 Searching for a Stored Document, 174 Selecting Copy Paper, 45 Series Copies, 80 Simplified Display, 163 Simplified display, 5 Simplified Display key, 5 Size, 104 Size Magnification, 52, 187 Sizes, 14 Sizes and Weights of Recommended Originals, 11 Sizes Detectable, 13 Slip Sheet, 187 Slip Sheets, 132 Sort, 57, 187 Specified Area Repeat, 121 Stack, 60, 187 Stamp, 6 Stamp position, 102, 104, 106, 110, 112, 113, 115 Stamp Text, 119 Staple, 61, 187 Stapler, 61 Storing a Program, 136 Storing Data, 166 Storing Originals in the Document Server, 134 Symbols, 2

Т

Tab stock, 28
Text, 44
Text/Photo, 44
To change a file name, 170
To delete the user stamp, 109
To register or change a
user name, 168, 169, 170
To search by file name, 174
To search by user name, 175
To set or change a Password, 171
Two-Sided Combine, 77

User Stamp, 104, 106, 107, 109 Using Connect Copy, 146 Using Job Preset in Connect Copy, 153 Using the Document Server, 166 Using the idle machine as the main machine, 156 Using the machine currently copying as the main machine, 157 Using the Z-fold Support Tray, 67

Various sizes, 22

W

What You Can Do with This Machine, iii When both machines are copying the same number of originals, 158 When Both Machines are in Use, 157 When copying onto Regular Size Paper, 38 When no name is registered to the Address Book, 170 When one machines is copying a larger number of originals, 159 When One of the Two Machines is Idle, 155 When using a user name not registered to the Address Book, 169 When using a user name registered to the Address Book, 168 Whole Area Repeat, 121

Z

Z-fold, 66, 187 Z-folding Copies, 69 Z-fold positions, 69 Zoom, 49, 187

In accordance with IEC 60417, this machine uses the following symbols for the main power switch:

- means POWER ON.
- () means STAND BY.

Trademarks

PostScript®, Acrobat® are registered trademark of Adobe Systems Incorporated.

Other product names used herein are for identification purposes only and might be trademarks of their respective companies. We disclaim any and all rights to those marks.





Type for MP 5500/Aficio MP 5500/IS2255 Type for MP 6500/Aficio MP 6500/IS2265 Type for MP 7500/Aficio MP 7500/IS2275 Printed in Japan

AE (AE) B246-7608

