

U.S.A.

RICOH CORPORATION

Phone: +1-973-882-2000

West Caldwell, New Jersey 07006

Groenelaan 3, 1186 AA, Amstelveen

1 Plane Tree Crescent, Feltham,

RICOH DEUTSCHLAND GmbH Mergenthalerallee 38-40,

383, Avenue du Général de Gaulle BP 307-92143 Clamart Cedex Phone: +33-(0)-821-01-74-26

Phone: +44-(0)20-8261-4000

65760 Eschborn Phone: +49-(0)6196-9060

RICOH FRANCE S.A.

5 Dedrick Place

The Netherlands

United Kingdom

RICOH UK LTD.

Ricoh House,

Germany

France

RICOH EUROPE B.V.

Middlesex, TW13 7HG

Phone: +31-(0)20-5474111

RICOH COMPANY, LTD. 15-5, Minami Aoyama 1-chome, Minato-ku, Tokyo 107-8544, Japan Phone: +81-(0)3-3479-3111

Aficio Aficio 1224C/1232C 1224C/1232C **Operating Instructions Operating Instructions General Settings Guide General Settings Guide**



Operating Instructions General Settings Guide



1 What You Can Do With This Machine

lasics

Combined Function Operations

Document Server

User Tools (System Settings)

6 Troubleshooting

7 REMARKS

8



U '
2 E
30
4 C

5

Specification





Overseas Affiliates

Spain

Italy

RICOH ESPAÑA S.A.

08005 Barcelona

RICOH ITALIA SpA

37139 Verona

Hong Kong

Singapore

Via della Metallurgia 12,

Phone: +39-045-8181500

RICOH HONG KONG LTD.

RICOH ASIA PACIFIC PTE.LTD.

21/F., Tai Yau Building,

181. Johnston Road.

260 Orchard Road,

Singapore 238855

#15-01/02 The Heeren,

Phone: +65-830-5888

Wan Chai, Hong Kong Phone: +852-2862-2888

Avda. Litoral Mar, 12-14,

Phone: +34-(0)93-295-7600



For safe and correct use of this machine, please be sure to read the Safety Information before you use it.

Introduction

This manual describes detailed instructions on the operation and notes about the use of this machine. To get maximum versatility from this machine all operators are requested to read this manual carefully and follow the instructions. Please keep this manual in a handy place near the machine.

Notes:

Some illustrations may be slightly different from your machine.

Certain options may not be available in some countries. For details, please contact your local dealer.

Laser Safety:

This machine is considered a class 1 laser device, safe for office/EDP use. The machine contains two AlGaInP laser diodes, 7-milliwatt, 645-660 nanometer wavelength for each emitter. Direct (or indirect reflected) eye contact with the laser beam might cause serious eye damage. Safety precautions and interlock mechanisms have been designed to prevent any possible laser beam exposure to the operator.

The following label is attached on the back side of the machine.



Warning:

Use of controls or adjustment or performance of procedures other than those specified in this manual might result in hazardous radiation exposure.

Notes:

The model names of the machines do not appear in the following pages. Check the type of your machine before reading this manual. (For details, see P.13 *"Machine Types"*.)

- Type 1: Aficio 1224C
- Type 2: Aficio 1232C

Certain types might not be available in some countries. For details, please contact your local dealer.

Two kinds of size notation are employed in this manual. With this machine refer to the metric version.

For good copy quality, Ricoh recommends that you use genuine Ricoh toner.

Ricoh shall not be responsible for any damage or expense that might result from the use of parts other than genuine Ricoh parts with your Ricoh office products.

Power Source

220 - 240V, 50/60Hz, 8A or more

Please be sure to connect the power cord to a power source as above. For details about power source, see P.139 *"Power Connection"*.

In accordance with IEC 60417, this machine uses the following symbols for the main power switch:

I means POWER ON. O means POWER OFF. O means STAND BY.

TABLE OF CONTENTS

Notice	1
Copyrights and Trademarks	2
Trademarks	2
Information about Installed Software	3
How to Read this Manual	6
Safety Information	7
Safety During Operation	7
Positions of Labels and Hallmarks for MWARNING and MCAUTION	9
ENERGY STAR Program	10
Manuals for this Machine	12
Machine Types	13

1. What You Can Do With This Machine

Additional Functions Provided by Internal Options	15
Copy Mode	
Facsimile Mode (Option)	
Printer Mode (Option)	
Scanner Mode (Option)	
Document Server Mode	
User Management	

2. Basics

Guide To Components	
External Options	
Control Panel	
Display Panel	24
Connecting the Machine (Network Connections)	25
Requirements	
Connecting the Network Cable to the Network	
Turning On the Power	
Turning On the Main Power	
Turning On the Power	
Turning Off the Power	
Turning Off the Main Power	
Configuring the Network	
Configuring the Network	
Configuring the Network with the Operation Panel	

3. Combined Function Operations

Changing Modes	45
Saving Energy	
Multi-Access	

4. Document Server

Relationship between the Document Server and Other Functions	53
Document Server Display	
Using the Document Server	55
Scanning and Saving Originals	55
Changing the File Name, User Name, or Password	
Selecting a Document	58
Searching Saved Documents	59
Printing Saved Documents	60
Deleting Saved Documents	
Settings for the Document Server	

5. User Tools (System Settings)

User Tools Menu (System Settings)	65
Accessing User Tools (System Settings)	70
Changing Settings	
Exiting from User Tools	
Settings You Can Change with the User Tools	71
General Features	
Tray Paper Settings	
Timer Setting	
Interface Settings/Network	
Interface Settings/Parallel Interface	
Interface Settings/IEEE 1394 (Option)	
Interface Settings/IEEE 802.11b (Option)	
File Transfer	
Key Operator Tools	
User Code	
Registering the New User Code	
Changing a User Code	
Clearing a User Code	
Displaying the Number of Prints for Each User Code	
Printing the Number of Prints for Each User Code	
Clearing the Number of Prints	
E-mail Destination	
Registering an E-mail Destination	
Changing a Registered E-mail Destination	
Clearing a Registered E-mail Address	
Registering E-mail Destinations to a Group	
Registering a New Group	
Registering the E-mail Destinations to a Group	
Deleting an E-mail Destination from a Group	
Displaying the E-mail Destinations	
Deleting a Group	
Changing a Group Name	
Entering Text	
Available Characters	
Keys	
How to Enter Text	107

6. Troubleshooting

If Your Machine Does Not Operate as You Want1	09
General1	09
Printing Problems1	11
Document Server1	12
🖆 Loading Paper1	13
Loading Paper in Tray 1 and 21	
Loading Paper in Tray 3 and 4 (option)1	13
Loading Paper in the Large Capacity Tray (option)1	14
🖞 Adding Toner1	15
Removing Toner1	16
Inserting Toner1	
84r Clearing Misfeeds1	
Checking paper jams around the heating roller	
Changing the Paper Size1	24
Changing the Paper Size of Tray 1 and 21	24
Changing the Paper Size of Tray 3 and 4 (option)1	26
Specifying Custom Paper Size1	27
🖨 Adding Staples1	29
500-Sheet Finisher1	
1000-Sheet Finisher1	30
A Removing Jammed Staples1	32
500-Sheet Finisher1	
1000-Sheet Finisher1	33

7. REMARKS

Do's And Don'ts	35
Saving Colour Copies	6
Toner	
Handling Toner	
Toner Storage	
Used Toner	
Where to Put Your Machine	38
Machine Environment	
Moving	
Power Connection	
Access to the Machine	39
Maintenance14	10
Cleaning the Exposure Glass14	
Cleaning the Exposure Glass Cover14	
Cleaning the Document Feeder14	
Cleaning and Adjusting Internal Parts14	11
Cleaning the Dustproof Glass14	
Other Functions	12
Inquiry	
Changing the Display Language14	
Changing Paper Thickness Settings14	
Counter	
Displaying the Total Counter	

8. Specification

Mainframe	145
Options	
Document Feeder	
500-Sheet Finisher	
1000-Sheet Finisher	
Bridge Unit	
Shift Sort Tray	
Duplex Unit	
Internal tray 2 (1 bin tray)	
Bypass Tray	
Large Capacity Tray (LCT)	
Paper tray unit	
Copy Paper	
Recommended Paper Sizes and Types	
Non-recommended Paper	
Paper Storage	
INDEX	

Notice

Important

Do not make copies of any item for which copying is prohibited by law.

Copying the following items is normally prohibited by local law:

Bank bills, revenue stamps, bonds, stock certificates, bank drafts, checks, passports, driver's licenses.

The color copy samples in this book may differ slightly from the actual copies due to printing effects.

The color on each Color key may differ slightly from that of the actual copy.

This machine is equipped with a function that prevents making counterfeit bank bills. Due to this function the original images similar to bank bills may not be copied properly.

Copyrights and Trademarks

Trademarks

Ethernet[®] is a registered trademark of Xerox Corporation.

 $\mathsf{PostScript}^{\texttt{B}}$ and $\mathsf{Acrobat}^{\texttt{B}}$ are registered trademarks of Adobe Systems Incorporated.

Apple Talk, Apple, Macintosh are registered trademarks of Apple Computer, Incorporated.

Novell, and Netware are registered trademarks of Novell, Inc.

Microsoft[®], Windows[®] and Windows NT[®] are registered trademarks of Microsoft Corporation in the United States and/or other countries.

🖉 Note

□ The proper names of the Windows operating systems are as follows:

- Microsoft[®] Windows[®] 95 operating system
- Microsoft[®] Windows[®] 98 operating system
- Microsoft[®] Windows[®] Millennium Edition (Windows Me)
- Microsoft[®] Windows[®] 2000 Professional
- Microsoft[®] Windows[®] XP Professional
- Microsoft[®] Windows[®] XP Home Edition
- Microsoft[®] Windows[®] 2000 Server
- Microsoft[®] Windows NT[®] Server operating system Version 4.0
- Microsoft[®] Windows NT[®] Workstation operating system Version 4.0

Information about Installed Software

expat

- The software including controller, etc. (hereinafter "software") installed on this product uses the expat Version 1.95.2 (hereinafter "expat") under the conditions mentioned below.
- The product manufacturer provides warranty and support to the software of the product including the expat, and the product manufacturer makes the initial developer and copyright holder of the expat, free from these obligations.
- Information relating to the expat is available at: http://expat.sourceforge.net/

Copyright (c) 1998, 1999, 2000 Thai Open Source Software Centre, Ltd. and Clark Cooper.

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AU-THORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAG-ES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFT-WARE.

NetBSD

Copyright Notice of NetBSD

For all users to use this product:

This product contains NetBSD operating system:

For the most part, the software constituting the NetBSD operating system is not in the public domain; its authors retain their copyright.

The following text shows the copyright notice used for many of the NetBSD source code. For exact copyright notice applicable for each of the files/binaries, the source code tree must be consulted.

A full source code can be found at http://www.netbsd.org/.

Copyright © 1999, 2000 The NetBSD Foundation, Inc.

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- ① Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- ② Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- ③ All advertising materials mentioning features or use of this software must display the following acknowledgement: This product includes software developed by the NetBSD Foundation, Inc. and its contributors.
- ④ Neither the name of The NetBSD Foundation nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE NETBSD FOUNDATION, INC. AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MER-CHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DIS-CLAIMED. IN NO EVENT SHALL THE FOUNDATION OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEM-PLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMIT-ED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CON-TRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTH-ERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Authors Name List

All product names mentioned herein are trademarks of their respective owners.

The following notices are required to satisfy the license terms of the software that we have mentioned in this document:

- This product includes software developed by the University of California, Berkeley and its contributors.
- This product includes software developed by Jonathan R. Stone for the NetB-SD Project.
- This product includes software developed by the NetBSD Foundation, Inc. and its contributors.
- This product includes software developed by Manuel Bouyer.
- This product includes software developed by Charles Hannum.
- This product includes software developed by Charles M. Hannum.
- This product includes software developed by Christopher G. Demetriou.
- This product includes software developed by TooLs GmbH.

- This product includes software developed by Terrence R. Lambert.
- This product includes software developed by Adam Glass and Charles Hannum.
- This product includes software developed by Theo de Raadt.
- This product includes software developed by Jonathan Stone and Jason R. Thorpe for the NetBSD Project.
- This product includes software developed by the University of California, Lawrence Berkeley Laboratory and its contributors.
- This product includes software developed by Christos Zoulas.
- This product includes software developed by Christopher G. Demetriou for the NetBSD Project.
- This product includes software developed by Paul Kranenburg.
- This product includes software developed by Adam Glass.
- This product includes software developed by Jonathan Stone.
- This product includes software developed by Jonathan Stone for the NetBSD Project.
- This product includes software developed by Winning Strategies, Inc.
- This product includes software developed by Frank van der Linden for the NetBSD Project.
- This product includes software developed for the NetBSD Project by Frank van der Linden
- This product includes software developed for the NetBSD Project by Jason R. Thorpe.
- The software was developed by the University of California, Berkeley.
- This product includes software developed by Chris Provenzano, the University of California, Berkeley, and contributors.

JPEG LIBRARY

• The software installed on this product is based in part on the work of the Independent JPEG Group.

How to Read this Manual

Symbols

In this manual, the following symbols are used:

\land WARNING:

This symbol indicates a potentially hazardous situation that might result in death or serious injury when you misuse the machine without following the instructions under this symbol. Be sure to read the instructions, all of which are included in the Safety Information section.

A CAUTION:

This symbol indicates a potentially hazardous situation that might result in minor or moderate injury or property damage that does not involve personal injury when you misuse the machine without following the instructions under this symbol. Be sure to read the instructions, all of which are included in the Safety Information section.

* The statements above are notes for your safety.

Important

If this instruction is not followed, paper might be misfeed, originals might be damaged, or data might be lost. Be sure to read this.

Preparation

This symbol indicates the prior knowledge or preparations required before operating.

🖉 Note

This symbol indicates precautions for operation or actions to take after misoperation.

Limitation

This symbol indicates numerical limits, functions that cannot be used together, or conditions in which a particular function cannot be used.

This symbol indicates a reference.

[]

Keys that appear on the machine's display panel.

[]

Keys built into the machine's control panel.

Notice

• B4 JIS D, B5 JIS D, B6 JIS are referred to as B4 D, B5 D, B6 in this manual.

Safety Information

When using this machine, the following safety precautions should always be followed.

Safety During Operation

In this manual, the following important symbols are used:

A WARNING:

Indicates a potentially hazardous situation which, if instructions are not followed, could result in death or serious injury.

A CAUTION:

Indicates a potentially hazardous situation which, if instructions are not followed, may result in minor or moderate injury or damage to property.

A WARNING:


- Connect the power cord directly into a wall outlet and never use an extension cord.
- Disconnect the power plug (by pulling the plug, not the cable) if the power cable or plug becomes frayed or otherwise damaged.
- To avoid hazardous electric shock or laser radiation exposure, do not remove any covers or screws other than those specified in this manual.
- Turn off the power and disconnect the power plug (by pulling the plug, not the cable) if any of the following occurs:
 - You spill something into the machine.
 - You suspect that your machine needs service or repair.
 - The external housing of your machine has been damaged.
- Do not incinerate spilled toner or used toner. Toner dust might ignite when exposed to an open flame.
- Disposal can take place at our authorized dealer.
- Dispose of the used toner bottle in accordance with the local regulations.

▲ CAUTION:

- Protect the machine from dampness or wet weather, such as rain and snow.
- Unplug the power cord from the wall outlet before you move the machine. While moving the machine, you should take care that the power cord will not be damaged under the machine.
- When you disconnect the power plug from the wall outlet, always pull the plug (not the cable).
- Do not allow paper clips, staples, or other small metallic objects to fall inside the machine.
- Keep toner (used or unused) and toner bottle out of the reach of children.
- For environmental reasons, do not dispose of the machine or expended supply waste at household waste collection points. Disposal can take place at an authorized dealer.
- The inside of the machine could be very hot. Do not touch the parts with a label indicating the "hot surface". Otherwise, an injury might occur.

Positions of Labels and Hallmarks for ▲ WARNING and ▲ CAUTION


This machine has labels and hallmarks for <u>AWARNING</u>, <u>ACAUTION</u> at the positions shown below. For safety, please follow the instructions and handle the machine as indicated.

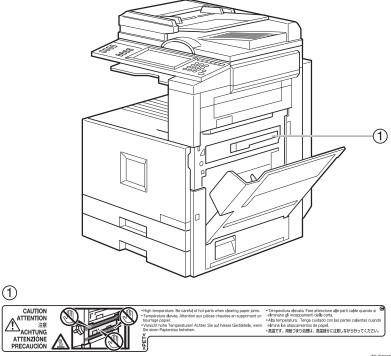

ZGJS836E

ENERGY STAR Program

The machine model which meets the Guidelines is Type 2.

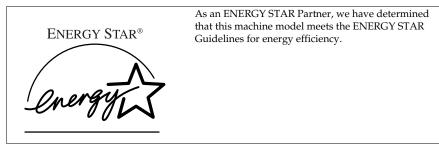

The ENERGY STAR Guidelines intend to establish an international energy-saving system for developing and introducing energy-efficient office equipment to deal with environmental issues, such as global warming.

When a product meets the ENERGY STAR Guidelines for energy efficiency, the Partner shall place the ENERGY STAR logo onto the machine model.

This product was designed to reduce the environmental impact associated with office equipment by means of energy-saving features, such as Low-power mode.

Low Power Mode

This product automatically lowers its power consumption 15 minutes after the last copy or print job has finished. Printing is still possible in Low Power Mode, but if you wish to make copies press the **[Energy Saver]** key first.

PReference

For details about how to change the default interval, see \Rightarrow p.77 "Energy Saver Timer".

• Off Mode(Copier only)

To conserve energy, this product automatically turns off 60 minutes after the last copying or printing job has been completed. This function is called "Auto Off". Printing is available in this mode, but if you use the copier, press the operation switch.

✓ Reference

For details about how to change the default interval, see \Rightarrow p.77 "Auto Off Timer".

• Duplex Priority

The ENERGY STAR Program recommends use of the Duplex function. By conserving paper, this function helps the environment. For applicable machines, duplex function (one-sided original \rightarrow two-sided copies) can be selected for when the operation switch or the main power switch is turned on, the **[Energy Saver]** key is pressed, or when the machine resets automatically.

To change the settings of the Duplex Priority mode, see "Duplex Mode Priority" in the Copy Reference.

Specification

		Copier or	nly
Low Power Mode	Power consump	tion 128.2W of	less
	Default interval	15 minute	es
	Recovery Time	30 sec. or	less
Off Mode	Power consump	ion 15 W or le	ess
	Default interval	60 minute	es
Duplex Priority		Sided→1 Sided	

Recycled Paper

In accordance with the ENERGY STAR Program, we recommend use of recycled paper which is environmentally friendly. Please contact your sales representative for recommended paper.

Manuals for this Machine

This is a multi-functional machine combining copier, facsimile, printer and scanner functions. This manual describes procedures common to these functions. Each function's reference describes the operational procedures for that functions. Please consult the relevant parts of manual.

General Settings Guide (this manual)

Provides an overview of the machine. This manual introduces the functions of the machine. It also introduces the options that allow you to use additional functions and describes how to access the system user tools to make the machine easier to use.

When using as a copier

• Copy Reference

Describes the various copying functions from basic copying to more advanced functions such as reducing/enlarging copies or combining originals onto one sheet.

When using as a facsimile

• Facsimile Reference (option) Describes the operational procedures and functions to use the machine as a facsimile.

When using as a printer

• Printer Reference (option) Describes the system settings, procedures and functions for using the machine as a printer.

When using as a scanner

• Scanner Reference (option) Describes the system settings, procedures and functions for using the machine as a scanner.

Machine Types


This machine comes in two models which vary in copy speed. To ascertain which model you have, see the inside front cover of this manual.

	Type 1	Type 2
Copy speed/Single Colour	24 copies/minute (A4 \square , 8 ¹ / ₂ "×11" \square)	32 copies/minutes (A4 \square , 8 ¹ / ₂ "×11" \square)
Copy speed/Full Colour	8 copies/minute (A4 \square , 8 ¹ / ₂ "×11" \square)	10 copies/minutes (A4 \square , 8 ¹ / ₂ "×11" \square)

1. What You Can Do With This Machine

Additional Functions Provided by Internal Options

You can expand the capabilities of this machine to include fax functions. When you want to add a function, contact your sales or service representative.

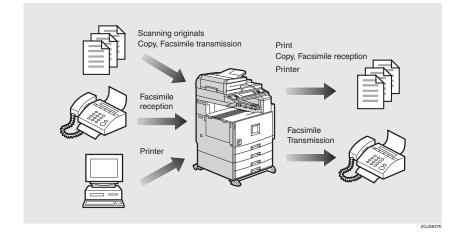

Copy Mode

In copy mode you can make basic copies and also copy using more sophisticated techniques, such as reduction/enlargement or combining several originals onto one copy. You can install optional expansion memory for storage of document images, thereby making the best use of memory with various copy functions.

Facsimile Mode (Option)

You can send and receive fax messages in facsimile mode. Installation of optional expansion memory allows more functions to be used and more data to be stored.

Printer Mode (Option)

You can print documents in colour under various environments. Installation of optional expansion memory allows more data to be stored, enabling automatic copy stapling.

Scanner Mode (Option)

1

You can use this machine as a scanner.


It is also possible to E-mail scanned image as attached files via a LAN, or the Internet.

You can also E-mail to ScanRouter V2 Lite/Professional.

Document Server Mode

You can save documents from copy functions, facsimile transactions, the printer, and the scanner to the hard disk. Documents can be printed later ^{*1}, sent later ^{*2}, or you can transfer the document data to a PC ^{*3}. The machine can be controlled from a PC.

- ^{*1} You cannot print documents saved with the scanner.
- ^{*2} Only documents stored in facsimile mode can to be sent as faxes.
- ^{*3} To transfer documents to a PC, DeskTopBinder V2 Professional/Lite must be installed. \Rightarrow p.17 "Operation from a Computer"

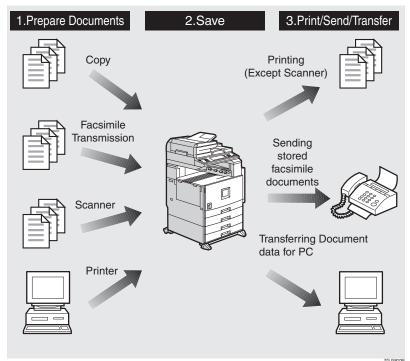

16

🖉 Note

□ You can save the following:

- Data from documents scanned using the document feeder
- Data from documents scanned using the exposure glass
- Data sent from a computer

Important

- Do not turn off the main power switch when the Operation Switch is on or the On indicator is lit or blinking. If you turn it off during an operation, the memory or hard disk might be damaged.
- Avoid any strong shocks to the machine. This could damage the hard drive or delete stored files. For precautionary reasons, files should be copied to another local computer.
- Unauthorized access is possible to the Document Server when the network is connected to the Internet. To prevent the revelation of stored confidential documents, set a firewall between the network and the Internet.

On Demand Printing

If you save your document in the Document Server, you can print it out at any time with print settings such as duplex and stapling.

File Merge Printing

You can merge documents created with different applications or created separately on different computers.

You can merge documents sent from a computer with scanned paper originals.

Facsimile Resend

You can send data stored in memory when necessary. You can merge and send data stored from previous faxes with additional scanned originals.

PReference

For details, see the "Facsimile Reference."

Operation from a Computer

If you install DeskTopBinder V2 Professional or DeskTopBinder V2 Lite on your computer you can check the contents of stored documents, print copies for confirmation and perform other operations.

You can also perform tasks on data stored in the Document Server from your computer, rather than from the machine. These functions are available when the printer or the scanner function is installed.

✓ Reference

For more detailed information, refer to DeskTopBinder V2 Professional/Lite manuals.

User Management

You can limit the users of the machine, and restrict their use of certain functions using user codes.

Using the User Code

The user is requested to enter a registered user code to operate the machine. You can check the use of the machine by each user.

Managing items

- You can set allowed functions for each user as shown below.
- You can output a list of usage amounts for each user.

The functions you can limit are as follows:

Function	Mode	Functions available to set the usage limit	Functions which the usage amounts can be managed
Сору	Black & White	0	0
	Single Colour	0	0
	Two-colour	0	0
	Full Colour	0	0
Facsimile	Facsimile transmission	0	0
	Printing (when the document server is used) *2		O *1
Printer	Black & White	0	0
	Colour	0	0
Scanner	Scanner mode	0	0
Document server	Document server mode	0	(depending on the mode to store the document) *2

^{*1} The counter shows the number of copies when you print a document for transmission that is stored in the document server.


^{*2} When you print documents by pressing the **[Document Server]** key, the copy counter shows the number of copies for documents stored in copy mode, and for documents stored in facsimile mode or printer mode.

Reference

 \Rightarrow p.86 "User Code Management" \Rightarrow p.92 "User Code"

2. Basics

Guide To Components

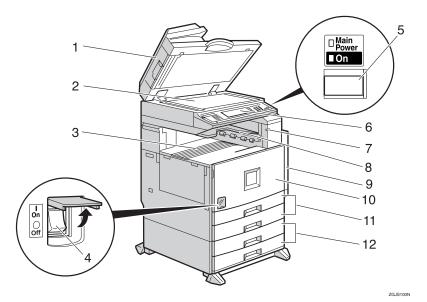

1. Exposure glass cover (option) or Document feeder (ADF) (option)

Lower the exposure glass cover over originals placed on the exposure glass for copying. If you have the document feeder, load a stack of originals here. They will be fed automatically, one by one.

(The illustration shows the document feeder.)

2. Exposure glass

Place originals face down here for copying.

3. Internal tray

Copied, printed paper or fax messages are delivered here.

4. Main power switch

If the machine does not operate after turning on the operation switch, check the main power switch is turned on. \Rightarrow p.30 "Turning On the Power"

5. Operation switch

Press this switch to turn the power on (the **On** indicator lights up). To turn the power off, press this switch again (the **On** indicator goes off). \Rightarrow p.30 "Turning On the Power"

6. Control panel

 \Rightarrow p.22 "Control Panel"

7. Remove Paper Indicator

The indicator is lit when paper is output to the internal tray 2 (1 bin tray). If the internal tray 2 has not been installed, the indicator does not light.

8. Internal tray 2 (1 bin tray) (option)

9. Duplex unit (Unit for two-sided copies) (option)

10. Front cover


Open to access the inside of the machine.

11. Paper tray (upper: tray 1, lower: tray 2)

Load paper here.

12. Paper tray unit (option <upper: tray 3, lower: tray 4>)

Load paper here.

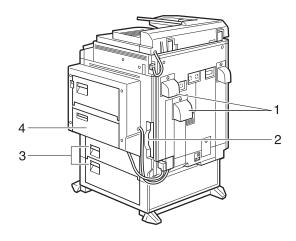

ZGJS840E

1. Ventilation holes

Prevent overheating. Do not obstruct the ventilation holes by placing objects near it or leaning things against it. If the machine overheats, a fault might occur.

2. Interface for network connections

 \Rightarrow p.25 "Connecting the Machine (Network Connections)"


3. Paper tray cover

Open this cover to remove jammed paper.

4. Bypass tray (option)

Use when copying onto OHP transparencies, label paper (adhesive labels), translucent paper, postcards, envelopes and non-standard size paper.

External Options

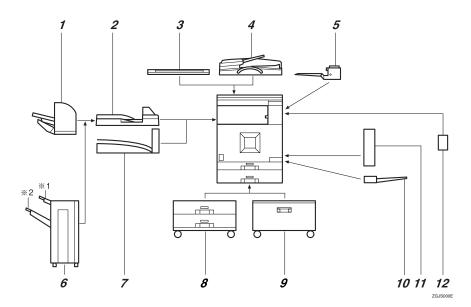

1. 500-Sheet Finisher

Sorts, stacks and staples copies.

2. Bridge unit

Relays copies to the finisher.

3. Exposure glass cover

Lower this over originals for copying.

4. Document feeder (ADF)

Load a stack of originals here. They will be fed automatically.

5. Internal tray 2 (1 bin tray)

If you select this as the output tray, copied paper will be delivered here face down.

6. 1000-Sheet Finisher

Sorts, stacks and staples copies.

- *1 : Finisher proof tray
- ^{*2} : Finisher shift tray

🖉 Note

When you use the 1000-sheet Finisher, the adjustment table is required.

7. Shift sort tray

Sorts and stacks copies.

8. Paper tray unit

Consists of two paper trays.

9. Large Capacity Tray (LCT)

Holds 2000 sheets of paper.

10. Bypass tray

Use when copying onto OHP transparencies, label paper (adhesive labels), translucent paper, envelopes and nonstandard size paper.

11. Duplex unit

Use to make two-sided copies and prints.


12. Interchange unit

Required when installing the internal tray 2 (1 bin tray) and duplex unit.

Control Panel

🖉 Note

This illustration shows the Control Panel of the machine with options fully installed.

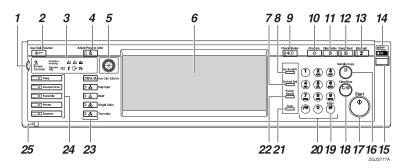

1. Screen contrast knob

Adjusts the brightness of the display panel.

2. [User Tools/Counter] key

• User Tools

Press to change the default settings and conditions to meet your requirements. \Rightarrow p.70 "Accessing User Tools (System Settings)"

- Counter Press to check or print the counter value.
- Inquiry Press to check where to contact for machine repairs and ordering toner.

3. Indicators

Show errors and machine status.

4. [Adjust/Program Color] key (copy mode)

Use to control the colour balance and contrast for printing.

5. Colour circle

Use as reference for colour control. \Rightarrow "Colour Adjustment" in the Copy Reference

6. Display panel

Shows operation status, error messages, and function menues.

7. [On Hook Dial] key (facsimile mode)

Press when the manual facsimile reception is set, or when using the facsimile information services.

8. [Start Manual RX] key (facsimile mode)

Press to start manual facsimile reception.

9. [Check Modes] key

Press this key to check settings.

10. [Program] key

Press to register frequently used settings, or to recall registered settings.

11. [Clear Modes] key

Press to clear previously entered copy job settings.

12. [Energy Saver] key

Press to switch to and from Energy Saver mode.

13. [Interrupt] key (copy mode)

Press to make interrupt copies during a copy run.

14. Main power indicator and power indicator

The main power indicator goes on when you turn on the main power switch.

The power indicator lights when the power is on.

Important

Do not turn off the power while the power indicator is blinking. Doing so may damage the hard disk.

15. Operation switch

Press this switch to turn the power on (the **On** indicator goes on). To turn the power off, press this switch again (the **On** indicator goes off).

16. [Sample Copy] key

Press to make a single set of copies or prints to check for poor copying or printing before making multiple sets of copies or prints.

17. [Start] key

Press to start copying, scanning, or printing documents stored on the Document Server.

18. [Clear/Stop] key

Clear

Press to delete a number entered.

• Stop

Press to stop a job such as scanning facsimile, or printing in progress.

19. **[#]** key

Press to enter a value.

20. Number keys

Use to enter the desired number of copies and data for selected modes.

21. **[Tone]** key (facsimile mode)

Press to send tonal signals down a pulse dialing line.

22. [Pause/Redial] key (facsimile mode)

• Pause Insert a pause when

Insert a pause when you are dialing or storing a fax number. A pause cannot be inserted as the first digit.

• Redial Press to redial the last numbers.

23. Colour function keys (copy mode)

Press to select colour for copying.

24. Function keys/Function Status indicator

Press to select the following functions:

- Copy
- Document Server
- Facsimile
- Printer
- Scanner

The followings show the status of the above functions:

- Yellow: the function is selected.
- Green: the function is active.
- Red: the function has been interrupted.

25. 🚯 indicator

The data indicator shows the status of data reception from a personal computer.

Display Panel

The display panel shows machine status, error messages and function menus.

Important

□ A force or impact of more than 30 N (about 3kgf) might damage the display panel.

The copying screen is displayed as default following power on.



The function items displayed serve as selector keys. You can select or specify an item by lightly pressing them.

When you select or specify an item on the display panel, it is highlighted like rese. Keys appearing as OK cannot be used.


Common Key Operations

The following keys are common for all screens.

Key list

[ОК]	Acknowledges a selected function or entered values, and then returns to the previous screen.
[Cancel]	Deletes a selected function or entered values, and then returns to the previous screen.
[▲Previous],[▼Next]	Moves to the previous page or the next page when all the functions cannot be displayed on one page.
[OK] [Yes]	Closes the message screens.
[Clear]	Clears entered values and does not change the screen.
[Exit]	Returns to the previous screen.

Connecting the Machine (Network Connections)

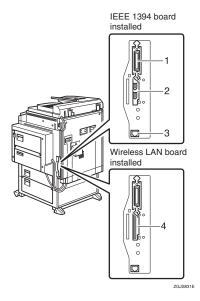

- **1.** Parallel port
- 2. IEEE 1394 ports (option)
- 3. 10BASE-T/100BASE-TX
- 4. Wireless LAN port (option)

Requirements

Requirements

Before using this machine, make sure that all appropriate environmental and electrical requirements are satisfied. Connect the machine to the host computer using the parallel port, Network Interface Board, or both.

Make sure you have all the cables, connectors, and electrical outlets necessary to attach the machine to the host computer or network.

∰Important

□ The interface cable is not supplied. User is required to provide an interface cable suitable for the computer being used.

Network cable requirements

The Network Interface Board can be installed to allow direct connection to an Ethernet network.

The Network Interface Board supports 10BASE-T or 100BASE-TX connections.

The IEEE 1394 Board (option) supports the IEEE 1394 interface cable.

You can use the machine in the following network environments:

- Using the appropriate network management software and printer driver
- · Attaching the machine to a network computer set up as a server

Client	Windows 95/98/Me, Windows 2000, Windows NT 4.0 *1 , Mac OS *2 (optional PostScript 3 Board Type 1232 is required), UNIX *4
Driver	PCL 5c, RPCS [™] , PostScript 3
File Server	NetWare 3.x, NetWare 4.x, NetWare 5/5.1
Protocol	TCP/IP, IPX/SPX, NetBEUI *3 , AppleTalk

^{*1} Under Windows NT 4.0, only \times 86 CPU is supported.

- ^{*2} For information about usable versions of the Mac OS, see the "PostScript Supplement".
- *3 Under Windows 95/98/Me, Windows 2000 and Windows NT 4.0 only. Only for Peer-Peer Printing. The SmartNetMonitor for Client is required to use this protocol.
- *4 Concerning UNIX printing information, please visit our web site or consult your authorized dealer.

In a mixed network environment, the protocols switch automatically.

Reference

For more information about network connection settings, see p.65 "User Tools (System Settings)".

🖉 Note

- Consult your network administrator before connecting the machine to a network.
- □ Make sure to use a properly shielded and grounded cable (UTP, STP, Category/Type5) for the connection to the host computer (and/or HUB) in order to meet FCC and EMC Directive 89/336/EEC emission guidelines.

When the Wireless LAN Board (option) is installed

When using the Wireless LAN Interface on the network, keep the following points in mind:

Attach both antennas as a unit.

When moving the machine

Detach the antennas when relocating the machine locally.

After moving the machine, reattach the antennas, ensuring that:

- The antennas are positioned clear of obstacles.
- There is 40 to 60 mm between the antennas, so they do not touch.
- The exposure glass cover and Document Feeder (ADF) do not knock the antennas.

If the network area provides poor radio environment

Where radio wave conditions are bad, the network may not function due to interrupted or failed connections. When checking the Wireless LAN Signal and the access point, follow these steps to improve the situation:

- Position the access point nearer to the machine.
- Clear the space between access point and machine of obstructions.
- Move radio wave generating appliances, such as microwaves, away from the machine and access point.

Reference

To check the machine's radio wave status, press **[Wireless LAN Signal]** in System Settings. See p.84 "Wireless LAN Signal".

For more information about access point radio wave conditions, refer to the access point manual.

Connecting the Network Cable to the Network

Limitation

The IEEE 1394 Board (option) and the Wireless LAN Board (option) cannot be installed at the same time.

🖉 Note


Connect the machine to the computer. Set the network connection settings, then install any necessary software such as the printer driver. For details, see the Printer Reference.

Connecting to the Ethernet Interface

1 Turn off the main power switch.


2 Loop the cable approximately 5 cm (2") and 35 cm (14") from the machine end connector.

House the loops using the supplied cores.

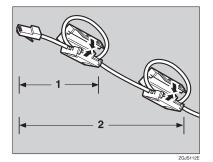


- 1. About 5 cm (2")
- 2. About 35 cm (14")

3 Attach the Ethernet interface cable to the jack on the board.

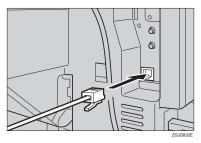

4 Turn on the main power switch.

Indicators on Network Interface Board

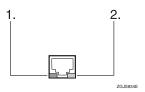

1. Indicator (green)

Remains green when the machine is connected to the network correctly.

2. Indicator (yellow)

Turns yellow when 100 BASE-TX is operating. Turns off when 10 BASE-T is operating.

Connecting to the IEEE 1394 Interface (option)


∰Important

Before making the connection, touch the metallic part to dissipate static electricity.

🖉 Note

- **Use the interface cable supplied with the IEEE 1394 Board.**
- □ The interface cable should not be looped.

1 Attach the IEEE 1394 cable to the jack on the board.

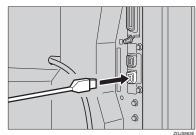


Turning On the Power

This machine has two power switches.


Operation switch (right side of the control panel)

Press this switch to activate the machine. When the machine has warmed up, you can make copies.

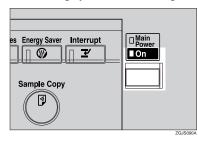

Main power switch (left side of the machine)

When the machine is not to be used for an extended period of time, turn off the main power switch.

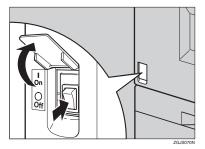

🖉 Note

□ This machine automatically enters Energy Saver mode or turns itself off if you do not use the machine for a while. See p.77 "Auto Off Timer" and p.77 "Energy Saver Timer".

Turning On the Main Power

- 1 Make sure that the power cord is firmly plugged into the wall outlet.
- 2 Open the switch cover and turn on the main power switch (make sure that the Main Power indicator goes on).

∰Important

Do not switch off the main power immediately after it has been switched on. Failure to observe this may result in damage to the hard disk or memory, leading to malfunctions.

Turning On the Power

1 Press the operation switch to make the On indicator go on.

🖉 Note

□ If the power is not turned on when the operation switch is pressed, check if the main power switch is on. If off, turn it on.

Turning Off the Power

1 Make sure that the exposure glass cover or the document feeder is in the right position.

2 Press the operation switch to make the On indicator go off.

🖉 Note

- Even if you press the operation switch, the indicator does not go off and blinks in the following cases:
 - When the exposure glass or the document feeder is open
 - When communication is in progress with external equipment
 - When the hard disk is operating

Turning Off the Main Power

Important

- Do not turn off the main power switch when the On indicator is on or blinking. Failure to observe this may result in damage to the hard disk or memory.
- Pull out the power plug after you turn off the main power switch. Failure to observe this may result in damage to the hard disk or memory.

Make sure that the On indicator is off.

2 Open the switch cover, and turn off the main power switch to make the Main Power indicator go off.

When a facsimile unit (option) is installed

When the main power switch is turned off while using the fax function, waiting fax jobs and print jobs may be canceled, and incoming fax documents cannot be received. When you have to turn off this switch for some reason, follow the procedure below.

Important

- □ Make sure that 100% is shown on the display before you turn the main power switch is off or unplug the power cord. Fax files programmed in memory will be deleted an hour after you turn the main power switch off or unplug the power cord.
- □ The On indicator does not go off and blinks in dial-in mode even if you press the operation switch. In such a case, check the items below, and turn the main power switch off.
 - When the exposure glass cover or the document feeder is open
 - When the computer is controlling the machine

Configuring the Network

Configuring the Network

Preparation

This section describes the network settings using the System Settings menu. Required setting items depend on the mode to be used.

Mode	Network	Network Settings	Reference
	Environment		
Distribute re- ceived fax doc- uments *1	TCP/IP	IP Address, Sub-net Mask, Gateway Address, Network Boot, Effective Protocol, Interface Select, Fax RX File Transmission	⇒ p.36 "When using TCP/IP", p.36 "Acquiring the IP Address from the DHCP Server", p.41 "File Transfer Settings"
	IEEE 1394 *6	IP Address, Sub-net Mask, Gateway Address, Effective Protocol (TCP/IP) IP over 1394, Fax RX File Transmission	⇒ p.36 "When using TCP/IP", p.37 "When using the IEEE 1394 Interface (option)", p.41 "File Transfer Settings"
	Wireless LAN *7	IP Address, Sub-net Mask, Gateway Address, Network Boot, Effective Protocol, Interface Select, Communication Mode, Channel ^{*9} WEP, SSID ^{*8} , Fax RX File Transmission	⇒ p.36 "When using TCP/IP", p.39 "When using the Wireless LAN Interface (option) in Ad hoc Mode", p.40 "When using the Wireless LAN Interface (op- tion) in Infrastructure Mode", p.41 "File Transfer Settings"
Scanner (Net- work Twain Scanner) ^{*2}	TCP/IP	IP Address, Sub-net Mask, Gateway Address, Network Boot, Effective Protocol, Interface Select	\Rightarrow p.36 "When using TCP/IP", p.36 "Acquiring the IP Address from the DHCP Server"
	IEEE 1394 *6	IP Address, Sub-net Mask, Gateway Address, Effective Protocol (TCP/IP), IP over 1394	\Rightarrow p.36 "When using TCP/IP", p.37 "When using the IEEE 1394 Interface (option)"
	Wireless LAN *7	IP Address, Sub-net Mask, Gateway Address, Network Boot, Effective Protocol, Interface Select, Communication Mode, Channel ^{*9} , WEP, SSID ^{*8}	\Rightarrow p.36 "When using TCP/IP", p.39 "When using the Wireless LAN Interface (option) in Ad hoc Mode", p.40 "When using the Wireless LAN Interface (op- tion) in Infrastructure Mode"

Mode	Network Environment	Network Settings	Reference
Scanner (Net- work Delivery Scanner) ^{*3}	TCP/IP	IP Address, Sub-net Mask, Gateway Address, Network Boot, Effective Protocol, Interface Select, Delivery Option	\Rightarrow p.36 "When using TCP/IP", p.36 "Acquiring the IP Address from the DHCP Server"
	IEEE 1394 *6	IP Address, Sub-net Mask, Gateway Address, Effective Protocol (TCP/IP), IP over 1394, Delivery Option	⇒ p.36 "When using TCP/IP", p.37 "When using the IEEE 1394 Interface (option)"
	Wireless LAN *7	IP Address, Sub-net Mask, Gateway Address, Network Boot, Effective Protocol, Interface Select, Communication Mode, Channel ^{*8} , WEP, SSID ^{*9} , Delivery Option	⇒ p.36 "When using TCP/IP", p.39 "When using the Wireless LAN Interface (option) in Ad hoc Mode", p.40 "When using the Wireless LAN Interface (op- tion) in Infrastructure Mode"
Printer	TCP/IP *4	IP Address, Sub-net Mask, Gateway Address, Network Boot, Effective Protocol, Interface Select	\Rightarrow p.36 "When using TCP/IP", p.36 "Acquiring the IP Address from the DHCP Server"
	NetWare *4 *5	Effective Protocol, NW Frame Type	\Rightarrow p.36 "When using NetWare"
	IEEE 1394 *6	IP Address, Sub-net Mask, Gateway Address, Effective Protocol (TCP/IP), IP over 1394	⇒ p.36 "When using TCP/IP", p.37 "When using the IEEE 1394 Interface (option)"
	Wireless LAN *7	IP Address, Sub-net Mask, Gateway Address, Network Boot, Effective Protocol, Interface Select, Communication Mode, Channel ^{*9} , WEP, SSID ^{*8}	⇒ p.36 "When using TCP/IP", p.39 "When using the Wireless LAN Interface (option) in Ad hoc Mode", p.40 "When using the Wireless LAN Interface (op- tion) in Infrastructure Mode", p.38 "When using the Wireless LAN Interface (option) in 802.11 Ad hoc Mode"

^{*1} To use this function, you'll need ScanRouter V2 Lite (packaged with optional Printer/Scanner Controller or ScanRouter V2 Professional). In addition to the network settings, you must set the "Delivery Server IP Address" and "Fax RX File Transmission" for file transfer.

^{*2} You will need to specify the settings for a network TWAIN scanner and network delivery scanner when using the scanner function.

^{*3} When you use this function, you need to have an optional 128MB or 256MB memory, or ScanRouter V2 Lite which is bundled with the optional Printer/Scanner Controller. If you need to have ScanRouter V2 Professional, see the Scanner Reference.

^{*4} Make necessary settings for your network environment. For details about settings, see the Printer Reference.

- ^{*5} Configure the TCP/IP when you use pure IP of NetWare 5/5.1.
- ^{*6} You will need the IEEE 1394 Interface Board (option).
- ^{*7} You will need the IEEE 802.11b Interface Kit (option).
- ^{*8} Make the necessary settings when the communication mode is infrastructure mode or 802.11b Ad hoc mode.
- *9 Make necessary settings when the communication mode is in 802.11b Ad hoc mode or Ad hoc mode.

🖉 Note

- For a network environment that uses TCP/IP, you can use SmartNetMonitor to configure IP addresses for Admin and the web browser packaged with the Printer/Scanner Controller. For details about Smart Net Monitor, see the Network Printing Guide.
- □ For details on the setting values, see p.71 "Settings You Can Change with the User Tools".

Configuring the Network with the Operation Panel

This section describes the basic procedures. Please make the settings appropriate for the network you are using.

₿Important

□ These settings should be made by your systems administrator or after consulting your systems administrator.

🖉 Note

In this manual, minimum settings for network connections are described. For more details, see the Network Printing Guide.

For default settings, see p.71 "Settings You Can Change with the User Tools".

♦ "Interface Settings/Network" ⇒ p.79

♦ "Interface Settings/IEEE 1394 (Option)" ⇒ p.82


- ♦ "Interface Settings/IEEE 802.11b (Option)" ⇒ p.83
- ♦ "File Transfer" ⇒ p.84

Network Settings

The following describes the settings required to use the machine in a network. For more information about the settings, see p.79 "Interface Settings/Network".

Press the [User Tools/Counter] key.

	User Tools/Counter	Adjust/Progra
É	Screen Contrast File	_
	Сору	00 %
	Document Server	ZGJS002A

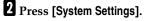

🗞 User Tools/Count	er/Inquiry	Bet
ति System Settings	Copies/Document Server Features	ç⊟* Français
Die obeen onwelp	Facsimile Features	
Maintenance	Printer Features	i inquiry
	Scamer Fedures	Counter

3 Press [Interface Settings].



4 Make [Effective Protocol] settings.

🖉 Note

- You must configure the IP Address for using TCP/IP protocol. Consult the network administrator for help with the Address. You don't have to configure it if Network Boot is DHCP.
- □ Press [Invalid] for redundant protocols.
- □ Press **[Effective]** for TCP/IP protocol when you use pure IP of NetWare 5/5.1.

Press [Effective Protocol].



2 Press [Invalid] or [Effective] for each protocol.

Press [OK].

The following operation will be different, according to each protocol.

When using TCP/IP

Make sure that [Network] is pressed, and then press [IP Address].

t one of the follow	ing detauit settings.			
General Features	Tray Paper Settings	Timer Setting	Interface Settings File Tra	enster Key Operator Tools
Network	Parallel In	lertace El	E 802.11b	
IP Add	ress	192.168.000.070	Effective Protect	ol
Sub-net	Mask	255.255.255.000	NH Frame Typ	e Auto select
Gateway	Address	192.168.000.001	LAN Type	Ethernot
Network	Beet	NONE	Ethernet Speed	Auto select

2 Use the number keys to enter the IP address.

- Press [OK].
- (2) Make the [Sub-net Mask] and [Gateway Address] settings. For each item, press the corresponding button on the screen shown in step (), and then perform the same procedure as described in steps (2) and (3).

Acquiring the IP Address from the DHCP Server

To use the DHCP server to acquire the IP address, select **[DHCP]** from **[Network Boot]**.

Note 🖉

- □ You need to make the settings when you use DHCP. See "Using DHCP" in the Network Printing Guide.
- To always assign the same IP address to the machine, reserve the IP address for the machine on the DHCP server. See "Using DHCP" in the Network Printing Guide.
- □ Use the default IP address.

• Make sure that [Network] is selected, and then press [Network Boot].

System	Settings			Ed
	ing default settings. Tray Paper Settings	Timer Setting	Interface Settings File Transf	ter Key Operator Tools
Network	Parallel In		E 802.110	
IP Add	ress	192.168.000.070	Effective Profacol	
Sub-net	Mask	255.255.255.000	N// Frame Type	Auto select
Gateway/	Address	192.168.000.001	LAN Type	Ethernot
Network	Beet	NONE	Bhernet Speed	Auto select

2 Press [DHCP] and then press [OK].

When using NetWare

To use the machine on NetWare, be sure to select the type of **[NW Frame Type]**. You can select the following frame types:

- Auto select (Default)
- Ethernet II
- Ethernet 802.2
- Ethernet 802.3
- Ethernet SNAP

🖉 Note

□ Select a file server and a frame type with the same connection.

- When you select Auto select, the frame type detected upon startup is automatically set. Therefore, your desired frame type may not be selected by the system, which supports multiple frame types. Select the desired frame type.
- □ To use the machine in a pure IP environment on NetWare 5/5.1, select [Effective] for TCP/IP in step [].
- Make sure that [Network] is selected, and then press [NW Frame Type].




2 Select the Frame Type, and then press [OK].

When using the IEEE 1394 Interface (option)

🔗 Note

- □ When you use the IEEE 1394 Interface, you cannot use the DHCP. You must set the fixed IP address.
- □ Be sure to set the IP over 1394 to "Active". The factory default is set to "Active".
- Make sure that [Network] is selected, and then press [IEEE 1394].

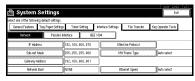

Press [IP Address].



3 Use the number keys to enter the IP address, and then press [OK].

- Press [Sub-net Mask].
- **3** Use the number keys to enter the Sub-net Mask, and then press [OK].
- **6** Press [IP over 1394].
- Make sure that [Active] is selected, and then press [OK].

🖉 Note

□ If [Active] is not selected, press [Active], and then press [OK].

When using the Wireless LAN Interface (option) in 802.11 Ad hoc Mode

🖉 Note

- □ You can set the 802.11 Ad hoc Mode from your computer when setting SSID (Network Name).
- □ The network administrator must check the environment and set the Communication mode, WEP key and SSID correctly. For details on settings, see "Using the IEEE 802.11b (Wireless LAN)" in the Network Printing Guide.
- □ Characters used for setting SSID are <ASCII 0x20 to 0x7e> which are casesensitive. You can enter up to 32 characters.
- □ You can also set the 802.11 Ad hoc mode from the Web browser. For details on settings, see the Network Printing Guide.

🗟 System Settings etting Interface Settings File Transfe

Make sure that [Network] is selected, and then press [LAN Type].

Press [IEEE 802.11b], and then press [OK].

3 Press [IEEE 802.11b].

System	Settings				E
one of the followi	ng detauit settings.				
General Features	Tray Paper Setting	Timer Settin	g Interface Settings	File Transfer	Key Operator Tools
Network	Parallel I	tertace	IEEE 802.11b		
IP Add	ess	133.139.146.	132 Ette	tive Protocol	
Sub-net	Mask	255.255.255.	100 NH	Frame Type	Auto select
Gate way A	ódress	133.139.146.0	101	LAN Type	EEE 802.11b
Network	Beet	NONE	Bt	ernet Speed	Auto select

Press [Communication Mode].

្នំ System Set	tings		Eef
ect one of the following defa			· · · · · · · · · · · · · · · · · · ·
	Paper Settings Timer	<u> </u>	File Transfer Key Operator Tools
Network	Parallel Interface	IEEE 802.110	
Communication Mo	3e 802.11 Ad h	0C	
SSID Setting	ASSID		
Channel	10	W	ineless LAN Signal
WEP (Encryption) Set	ing Inactive		1/2 A Provider View

- S Press [802.11 Ad hoc], and then press [OK].
- 6 Press [SSID Setting].
- Press [Enter SSID] and enter the SSID, and then press [OK].
- 8 Press [Channel].
- Use the number keys to enter the channel to be used, and then press [OK].
- Press [WEP (Encryption) Setting], if setting is required.
- D Press [Active].
- Press [Enter WEP Key] and enter the WEP key, and then press [OK].
- B Press [OK].

When using the Wireless LAN Interface (option) in Ad hoc Mode

🖉 Note

- You can set the Ad hoc Mode when you do not set SSID (Network Name) from your computer. In this case, setting SSID from this machine is ineffectual.
- □ The network administrator must check the environment and set the Communication mode and Channel correctly. For details on settings, see "Using the IEEE 802.11b (Wireless LAN)" in the Network Printing Guide.
- □ You can set the Ad hoc mode from the control panel or using the Web browser. For details on settings, see the Network Printing Guide.

• Make sure that [Network] is selected, and press [LAN Type].

🗟 System	Settings				Eef
elect one of the followi	ing default settings.				
General Features	Tray Paper Settings	Timer Setting	Interface Settings	File Traster	Key Operator Tools
Network	Parallel Inte	etace I	EEE 802.11b		
IP Add	ress	192.168.000.070	Ette	ctive Pretacol	
Sub-net	Mask 2	255.255.255.000	Ni	V Frame Type	Auto select
Gateway A	Address 1	192.168.000.001		LAN Type	Ethernot
Network	Beet	NONE	Bt	hernet Speed	Auto select

Press [IEEE 802.11b], and then press [OK].
Press [IEEE 802.11b].

System	Settings			Ed
ect one of the follow	ing detauit settings.			
General Features	Tray Paper Settings	Timer Setting	Interface Settings File Te	anster Key Operator Tools
Network	Parallel In	ertace E	EE 802.11b	
IP Add	ress	133.139.146.232	Effective Proto	col
Sub-net	Mask	255.255.255.000	NW Frame Ty	e Auto select
Gateway	Address	133.138.146.001	LAN Type	EEE 802.11b
Network	Bout	NONE	Ethernet Spee	d Auto select

4 Press [Communication Mode].



5 Press [Ad hoc], and then press [OK].

O Press [Channel].

Use the number keys to enter the channel to be used, and press [OK].

When using the Wireless LAN Interface (option) in Infrastructure Mode

🖉 Note

- □ The network administrator must check the environment and set the Communication mode, WEP key, and SSID correctly. For details on settings, see "Using the IEEE 802.11b (Wireless LAN)" in the Network Printing Guide.
- Enter the WEP key in hexadecimal. You can enter 10 digits for 64-bit data or 26 digits for 128-bit data.
- □ Characters used for setting SSID are <ASCII 0×20 to 0×7e> which are case -sensitive. You can enter up to 32 characters.
- You can also set the Infrastructure mode from the Web browser. For details on settings, see the Network Printing Guide.

🗟 System	Settings			Exit
ielect one of the tollow				
General Features	Tray Paper Settings	Timer Setting	Interface Settings File Transfer	Key Operator Tools
Nebecik	Parallel In	lertace li	EE 902.11b	
IP Add	ess	192.168.000.070	Effective Protocol	
Sub-net	Mask	255.255.255.000	NW Frame Type	Auto select
Gateway/	uddress	192.168.000.001	LAN Type	Ethernet
Network	Beet	NONE	Bhernet Speed	Auto select

• Make sure that [Network] is selected, and then press [LAN Type].

Press [IEEE 802.11b], and then press [OK].

3 Press [IEEE 802.11b].

System	Settings			Đ
t one of the follow	ing default settings.			
General Features	Tray Paper Setting	: Timer Setting	Interface Settings File Transfer	Key Operator Tools
Network	Parallel I	tertace	IEEE 802.11b	
IP Add	ress	133.139.146.23	2 Effective Protocol	
Sub-net	Mask	255.255.255.00	0 NW Frame Type	Auto select
Gateway	Address	133.139.146.00	1 LAN Type	EEE 802.11b
Network	Beet	NONE	Bhernet Speed	Auto select

4 Press [Communication Mode].




- **6** Press [Infrastructure], and then press [OK].
- Press [SSID Setting].
- Press [Enter SSID].
- **8** Enter the SSID, and then press [OK].
- Press [WEP (Encryption) Setting] if setting is required.
- Press [Active].
- **①** Press [Enter WEP Key] and enter the WEP key.
- Press [OK].

5 Press [Exit].

6 Print out the list of the entered settings if necessary.

For details about List/Test Print, see "Printer Features Menu" in the Printer Reference.

Press [Printer Features].

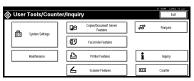

2 Press [Config. Page].


7 Press the **[User Tools/Counter]** key.

The new settings become effective and the display returns to the main function menu.

File Transfer Settings

The following describes the file transfer settings required for sending received facsimile files and the scanner function. For more information about the settings, see p.84 "File Transfer".

Press the [User Tools/Counter] key.

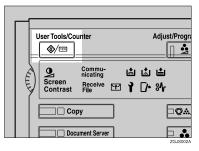

2 Press [System Settings].



B Press [File Transfer].

When using a delivery server

🖉 Note

□ You must set the delivery server IP address from the ScanRouter V2 Lite/Professional. You cannot set the address from the machine.

Press [Delivery Option].



2 Press [ON].3 Press [OK].

🗟 System	Settings			Delhery Option
Select one of the follow	ing detault settings.			Select item, then press (OK).
General Features Delivery	Tray Paper Settings Optice	Timer Setting	Interface Sett	OFF OFF
Fax RX File Tr	sensen lission			Cancel OK

Note

The delivery server IP address set from the ScanRouter V2 Lite/Professional will be displayed on the machine.

Making settings to transmit received facsimile files

Press [Fax RX File Transmission].



2 Make the following settings as required:

- Setting per Line
- Print at Delivery
- File to Deliver
- Dlvry Failure File

OPress [OK].

Setting the recall interval time

Press [Scanner Recall Interval Time].

	g default settings. Tray Paper Settings	Timer Setting	Interface Settings	File Transfer	Key Operator Tools
reatures	Tray Paper Settings	Timer second	interface settings	FILE I FALLSHOP	Key Operator Tools
Delivery O	tion Of	FF	Scamer Rec	all Interval Time	3 0 0 second
			Number of	Scanner Recalls	3 time(s)
			Number of	Scanner Recalls	3 time(s

② Use the number keys to enter the recall interval time, and then press [OK].

Setting the number of recalls

Press [Number of Scanner Recalls].



2 To resend files to the delivery server, press [ON].

③ Use the number keys to enter the number of recalls, and then press [OK].

4 Press [Exit].

5 Press the **[User Tools/Counter]** key.

The new settings become effective and the display returns to the main function menu.


3. Combined Function Operations

Changing Modes

🖉 Note

□ You cannot switch modes in any of the following situations:

- When scanning in a fax message for transmission
- During immediate transmission
- When accessing the user tools
- During interrupt copying
- During On hook dialing for fax transmission
- While scanning an original ⇒ p.71 "Function Priority"
- □ The copying screen is displayed as default following power on.

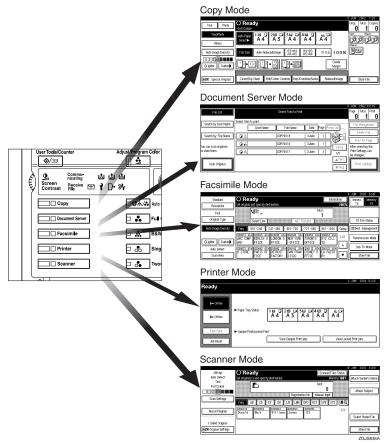

Saving Energy

🖗 Energy Saver Mode

If you do not operate the machine for a certain period after an operation or when you press the **[Energy Saver]** key, the display disappears and the machine enters Energy Saver mode. When you press the **[Energy Saver]** key again, the machine returns to the ready condition. In Energy Saver mode, the machine uses less electricity.

🖉 Note

- □ You can set the power consumption in Energy Saver mode and the time to return to ready status from Energy Saver mode in three steps. ⇒ p.87 "Panel Off Level"
- \square You can also change the setting of the Panel Off Timer. \Rightarrow p.77 "Panel Off Timer"

• System Reset

The machine returns to its initial condition automatically when your job is finished, after a certain period of time. This function is called "System Reset".

🖉 Note

 \Box You can change the System Reset time. \Rightarrow p.77 "System Reset Timer"

Auto Off

The machine turns itself off automatically after your job is finished, after a certain period of time. This function is called "Auto Off".

🖉 Note

 \Box You can change the Auto Off time. \Rightarrow p.77 "Auto Off Timer"

□ Auto Off Timer function will not operate in the following cases:

- When a warning message is displayed
- When the service call message is displayed
- When paper is jammed
- When the cover is open
- When "Add Toner" message is displayed
- When the toner is being replenished

- When the User Tools/Counter screen is displayed
- When fixed warm-up is in progress
- When the facsimile, printer or other functions are operating
- When operations have been suspended during printing
- When the On-hook dialing function is in use
- When a recipient is being registered in the address list or group dial list

- When the Data In indicator is on or blinking
- When the sample print or confidential print screen is displayed

Multi-Access

You can carry out another job using a different function while the current job is being performed. Performing multiple functions simultaneously like this is called Multi-accessing.

This allows you to handle your jobs efficiently, regardless of how the machine is being used. For example:

- While making copies, you can scan documents to store in the Document Server.
- While printing documents saved in the Document Server, the machine can receive print data.
- You can make copies while receiving fax data.
- While printing print data, you can make operations for copying.

🖉 Note

- You can set the priority of functions on p.71 "Print Priority". As default, the display function is set to first priority.
- When the optional Internal Tray, Shift Sort Tray, 500-Sheet Finisher, or 1000-Sheet Finisher is installed on the machine, you can specify the output tray to which documents are to be delivered. For more information about how to specify the output tray for each function, see the following descriptions:
 - p.72 "Output: Copier (Copy mode)"
 - p.73 "Output: Document Server (Document server)"
 - p.73 "Output: Facsimile (Facsimile)"
 - p.73 "Output: Printer"

What you can do with the Multi-Access Function

The multi-access function enables you to do the operations below.

- Copying during fax transmission You can copy originals while sending documents by fax.
 - Set documents for sending by fax, enter the fax number, and press the [Start] key.
 - ② Press the **[Copy]** key. The copy screen appears. At the top of the screen, the destination name and fax number appears.
 - ③ Set originals, and then press the **[Start]** key.
- Receiving printer data while printing a document saved in the Document Server

The machine can receive printer data while copying or printing a document saved in the Document Server. Received data will be printed when the printer function is enabled.

① Select the document to be printed on the Document Server screen, and then press the **[Start]** key.

② When the machine receives the printer data, the data-in indicator blinks. When printing the document is finished, the machine starts printing the printer data.

Sample operations

The chart below shows the sample operations of when the "Print priority" is set to "Interleave". \Rightarrow p.71 "Print Priority"

 \triangle : Simultaneous operations are available.

•: Operation is enabled when the relevant function key is pressed and remote switching (of the scanner) is done.

O: Operation is enabled when the **[Interrupt]** key is pressed to interrupt the preceding operation.

 \rightarrow : Operation is performed automatically once the preceding operation ends.

×: The operation must be started once the preceding operation ends. (Simultaneous operations are not possible.)

	Mode after you select	Co	ру		20		Fa	csiı	nile	•			Pri	inte	r						/2	
					Interrupt Copying		uo	Transmission			Reception			Print		Scanner		Document Server			DeskTopBinder V2	Professional/Lite
Mode	before you select	Operations for Copying	Stapling	Sort	Operations for Copying	Copying	Transmission Operation/Manual Reception Operation	Scanning an Original for Memory Transmission	Memory Transmission	Immediate Transmission	Memory Reception	Printing Received Data	Data Reception	Printing	Stapling	Operations for Scanning	Scanning	Operations for Document Server	Scanning a Document to Store in Document Server	Printing from Document Server	Printing from Document Server	Sending a Facsimile from Document Server
	Operations for Copying	×	×	×	0	0	•	•	Δ	•	Δ	Δ	Δ	Δ	Δ	•	•		•		Δ	Δ
	Stapling	∆ *1	→ *1	→ *1	0	O *5	•	• *2	Δ	• *2	Δ	Δ	Δ	Δ	\rightarrow	•	• *2	•	• *2	∆ *4	∆ *4	Δ
Copy	Sort	∆ *1	→ *1	→ *1	0	0	•	• *2	Δ	• *2	Δ	Δ	Δ	Δ	Δ	•	• *2	•	• *2	Δ	Δ	Δ
e pt	Operations for Copying	0	0	0	×	×	×	×	Δ	×	Δ	Δ	Δ	Δ	Δ	×	×	×	×	×	Δ	Δ
Interrupt Copying	Copying	0	0	0	×	×	×	×	Δ	×	Δ	\rightarrow	Δ	\rightarrow	\rightarrow	×	×	×	×	×	\rightarrow	Δ

		Mode after you select	Co	ру		20		Fa	csir	nile	•			Pri	inte	r						2	
						Interrupt Copying		ion	Transmission			Reception			Print		Scanner		Document Server			DeskTopBinder V2	Professional/Lite
м	ode	before you select	Operations for Copying	Stapling	Sort	Operations for Copying	Copying	Transmission Operation/Manual Reception Operation	Scanning an Original for Memory Transmission	Memory Transmission	Immediate Transmission	Memory Reception	Printing Received Data	Data Reception	Printing	Stapling	Operations for Scanning	Scanning	Operations for Document Server	Scanning a Document to Store in Document Server	Printing from Document Server	Printing from Document Server	Sending a Facsimile from Document Server
		ansmission Operation/Manual Re- ption Operation	•	•	•	0	0	×	×	Δ	×	Δ	Δ	Δ	Δ	Δ	•	•	•	•	•	Δ	Δ
		Scanning an original for Memory Transmission	×	×	×	×	×	×	×	Δ	×	Δ	Δ	Δ	Δ	Δ	×	×	×	×	×	Δ	Δ
	Transmission	Memory Transmission	Δ	Δ	Δ	Δ	Δ	Δ	Δ	∆ *3	∆ *3	∆ *3	∆ *7	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	\rightarrow
	Transr	Immediate Transmission	×	×	×	×	×	×	×	∆ *3	×	∆ *3	Δ	Δ	Δ	Δ	×	×	×	×	×	Δ	\rightarrow
ile		Memory Reception	Δ	Δ	Δ	Δ	Δ	Δ	Δ	∆ *3	∆ *3	∆ *3	∆ *7	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ
Facsimile	Reception	Printing Received Data	Δ	Δ	Δ	Δ	Δ	Δ	Δ	∆ *7	Δ	∆ *7	×	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ
	Da	ta Reception	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	\rightarrow	\rightarrow	\rightarrow	Δ	Δ	Δ	Δ	Δ	Δ	Δ
1		Sort Print	Δ	Δ	Δ	0	0	Δ	Δ	Δ	Δ	Δ	Δ	Δ	\rightarrow	\rightarrow	Δ	Δ	Δ	Δ	Δ	Δ	Δ
Printer	Print	Stapling	Δ	\rightarrow	Δ	0	O *5	Δ	Δ	Δ	Δ	Δ	Δ	Δ	\rightarrow	\rightarrow	Δ	Δ	Δ	Δ	∆ *4	∆ *4	Δ
	•	Operations for Scanning	•	•	•	0	0	•	•	0	•	Δ	Δ	Δ	Δ	Δ	×	×	•	•	•	Δ	Δ
Scanner		Scanning	×	×	×	×	×	×	×	Δ	×	Δ	Δ	Δ	Δ	Δ	×	×	×	×	×	Δ	Δ
		Operations for Document Server	•	•	•	0	0	•	•	Δ	•	Δ	Δ	Δ	Δ	Δ	•		×	×	×	Δ	Δ
nent	L-	Scanning a Document to Store in Document Server	•	×	×	0	0	•	×	Δ	×	Δ	Δ	Δ	Δ	Δ	•	×	×	×	×	Δ	Δ
Document	Server	Printing from Document Server	•	∆ *4	Δ	0	0	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	∆ *6	∆ *6	∆ *6	Δ	Δ
ar V2		Printing from Document Server	Δ	∆ *4	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	×	Δ
DeskTopBinder V2	Professional/Lite	Sending a Facsimile from Docu- ment Server	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	×

- ^{*1} Simultaneous operations are only possible once the preceding job documents are all scanned and **[Next Job]** appears.
- ^{*2} You can scan a document once the preceding job documents are all scanned.
- *3 Simultaneous operations are only possible with an additional line installed and when the facsimile function is not using the line given line priority in the facsimile settings.
- ^{*4} During stapling, printing automatically starts after the current job.
- *5 Stapling is not available.
- ^{*6} Simultaneous operations become available after you press [Next Job].
- *7 During parallel reception, any subsequent job is suspended until reception is completed.

Limitation

□ Stapling cannot be used at the same time for multiple functions.

🖉 Note

- □ A machine with the 500-Sheet Finisher installed cannot accept other jobs while printing with the stapling operation.
- □ A machine with the 1000-Sheet Finisher installed, that is printing with the stapling operation on paper larger than A4 size starts the subsequent job (for which Internal Shift Tray is specified as the output tray) only after the current print job finishes.
- □ While printing is in progress, scanning a document using another function may take more time.

4. Document Server

Relationship between the Document Server and Other Functions

The following table describes the relationship between the Document Server and other machine functions.

Function name	From where to store documents	Displaying a list	Printing saved documents	Sending documents
Сору	Copy/Document Server	Enabled	Enabled	Disabled
Printer	Personal computer	Enabled	Enabled	Disabled
Facsimile	Facsimile	Enabled	Enabled	Enabled *1
Scanner	Scanner	Disabled *2	Disabled	Enabled *3


^{*1} See the "Facsimile Reference (option) <Advanced Features>".

^{*2} You can display the stored documents from the Scanner Mode.

*³ See the "Scanner Reference".

Document Server Display

Document Server Main Display

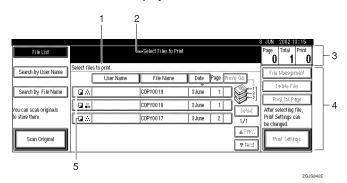

1. Operating status and messages appear.

3. The numbers of originals, copies, and printed pages appears.

2. The title of the currently selected screen appear.

4. The operation keys appear.

5. The modes in which the documents were stored are displayed.

The icons below show the operation mode when documents have been stored in the Document Server.

Function	Copier	Facsimile	Printer	Scanner
Icon		¢	b	

Using the Document Server

Scanning and Saving Originals

File name

The saved documents will automatically be named as "COPY001", "COPY002". You can change assigned file names.

User name

You can register a user name to distinguish the person or department that saved the documents. To assign it, you can register the user name by using the name assigned to the user code or by entering the name.

For more information about the user codes, see \Rightarrow p.92 "User Code".

Password

You can set a password for the saved documents, and use the password to prevent others from printing the saved documents. When a password is set for the documents, **1** is added to the documents.

To store documents in a mode other than Document Server mode, see References for the respective functions.


Important

Data stored in the machine might be lost if some kind of failure occurs. The supplier shall not be responsible for any damage that might result from the loss of data.

🖉 Note

□ Data stored in the Document Server is set to be deleted after 3 days (72 hours) by the factory default value. You can specify the period after which the stored data is deleted automatically. ⇒ p.91 "Auto Delete File"

Press the [Document Server] key.

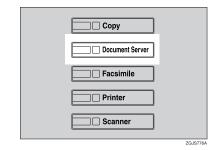

2 Press [Scan Original].

FileList		Select Files to Print	L	Page Total Print
Search by User Name	Select files to print.			File Moroesner/
	User Name	File Name	Date Page Frield (3)	
Search by File Name		COP10019	3.June 1	(elete File
'au can scan originals	Q .4	COP10318	3.June 1	Prol 15 Page After selecting file,
o store them.	□ A	COP10017	3 June 2 1/1	Print Settings can
Scan Original			▲ Prov. ▼ Nect	Prof Settings

Enter a file name, user name, or password if necessary.

🖉 Note

□ If you do not register a file name, one is automatically assigned.

PReference

 \Rightarrow p.56 "To register or change the user name"

 \Rightarrow p.57 "To change the file name"

 \Rightarrow p.57 "To set or change the password"

4 Place your originals either on the exposure glass or in the document feeder.

Reference

For more information about how to place the types of originals that can be placed, see the Copy Reference.

5 Make any desired settings.

Text Photo	O Ready Scan Original	Page 0
Test,Photo Others		Note User Name
Auto Image Density	FullSter Adv ReducedSnikrge R3+04 R4+R5 R4+R3 R5+R4 9 3 x 1 0 0 %	COPYOUTS File Name None
(Lighter Darker)	2 Sided Origit Top to Top	Password
GCD Special Original	Edit/Colour Creation Combine Reduce/Enlarge	Scanning Finished

P Reference

For details, see the Copy Reference.

6 Press the [Start] key.

The document is saved in the Document Server.

Note 🖉

- □ To stop scanning, press the [Clear/Stop] key. To resume the paused scanning job, press [Continue] in the confirmation dialog box. To delete the saved images and cancel the job, press [Stop].
- □ When a password is stored, appears on the left side of the file name.
- □ The saved documents are displayed on the "Select Files to Print" display.

To register or change the user name

Display the "Scan Original" display.

2 Press [User Name].

Test Photo	O Ready Scan Original Hilden & White-	Page O
Text/Photo Others		None User Name
Auto Image Density	Full Size Auto ReducedEnlarge 85+04 84+83 9 3 x 1 0 0 %	COPY0015 File Name None
(Ligtter Darter)	Z SUB4 OrgL P+12 P+12 P+12 P+12 P+12 P+12 P+12 P+12	Passverd
ECE Special Original	Edit/Colour Credian Cambine Reduce/Enlarge	Scanning Finished

If user names have already been registered, the "Change User Name" display appears.

If the user names registered are used

1 To change your user name to a registered user name, select a registered user name from the list, and then press [OK].



To change your user name to an unregistered user name, go to the next step.

P Reference

 \Rightarrow p.93 "Registering the New User Code"

- 2 To enter an unregistered user name, press [Non-programmed Name].
- 3 Enter the new user name, and then press [OK].

✓ Reference

 \Rightarrow p.106 "Entering Text"

If user names have not been registered

• Enter the new user name, and then press [OK].



 $\begin{array}{c} & & \\ & & \\ & \Rightarrow p.106 \text{ "Entering Text"} \end{array}$

To change the file name

1 Display the "Scan Original" display.

2 Press [File Name].



The "Change File Name" display appears.

3 Press [Delete All] to delete the old file name.

🖉 Note

□ You can also use **[Backspace]** to delete unnecessary characters.

4 Enter a new file name, and then press [OK].

🖉 Note

A string of up to 10 characters can be entered as a file name. Note that only eight characters of each file name are displayed in the document list.

\mathcal{P} Reference

 \Rightarrow p.106 "Entering Text"

To set or change the password

Display the "Scan Original" display.

2 Press [Password].

		0 JUN 2012 10:03
Text Photo	Scan Original +Black & White+	Passward
Text/Photo Others		Enter new password with Number keys, then press (OK).
Auto Image Density	Full Size Auto Reduce Enlarge R3+R4 R4+R5	
Q.ighter Darker)	2 Sided Origi. Top to Top	Clear
GCE Special Original	Est,Colour Crestian Co	Cancel

B Enter the password using the number keys (4 digits), and then press [OK] or the [#] key.

Changing the File Name, User Name, or Password

- Press the [Document Server] key.
- 2 Select the document for which the user name, file name, or password is to be changed.

FileList			Select Files to Prin	1			Page 0	Total Print
Search by User Name	Select files	to print.						
seachbyose mane	1 0	User Name	File Name	Date	Page Frid	Q-20		Morogeneral
Search by File Name	Q.A.		COPY0819	3.June	1	۱) 😂		elele File
'au can scan originals	Q		COP10318	3 June	1	(etail		nii 15i Page electing file,
o store them.	a		COPY0017	3 June	2	1/1		ettings can
Scan Original						ia Pres. ⊯Nect		ni Satings

🖉 Note

- □ If a password has already been set for the document, enter the password, and then press **[OK]**.
- B Press [File Management].

4 Press [Change File Name], [Change User Name], or [Change Password].

FileList	() Re	ady	Select Files to Print				Pape 7	Total	Print
Search by User Name	Two or mo	re files can be prints	ed continuously.						
seach by oser mane		User Name	File Name	Date	Page Prin	tg 00r		Manage	
Search by File Name	Q A		COP10019	3.June	1	SE 1		Delete F	
au can scan originals	Q		COP10318	3 June	1	Detail		int 1st P electing	-
o store them.	۵Å		COPY0017	3 June	2 1	1/1		settings i	
Scan Original						▲PRK. ▼Nett	—	rivi. Setti	ngs

 \Rightarrow p.56 "To register or change the user name"

 \Rightarrow p.57 "To change the file name"

 \Rightarrow p.57 "To set or change the password"

6 Press [OK].

Selecting a Document

Press the [Document Server] key.

2 Select a document to be printed.

FileList						Page Total Print	
Search by User Name	Select files	to print.			_		F de testaerned
Seaunity die Hale	1 0	User Name	File Name	Date	Page Planks	04	
Search by File Name			COP10313	3.June	1 8	2	Coloio Frie
fou can scan originals	Q.4		COPY0818	3.June		9-1	Prof 1st Page After selecting file,
o store them.	∎.∧.		00PY0817	3 June	2	(eb) 1/1	Print Settings can be changed.
Scan Original					l	aPes. ≢Ned	Prol Sattings

🖉 Note

- □ If a password has been set for the document, enter the password, and then press **[OK]**.
- □ You can search for the document using **[Search by User Name]** or **[Search by File Name]** at the left top of the display. ⇒ p.59 "Searching Saved Documents"
- You can sort document names in the list by user name, file name or date. To sort the documents, press [User Name], [File Name] or [Date].
- □ If you cannot determine the contents of a document by its file name, you can print just the first page of the document for checking purposes. ⇒ p.62 "Print First Page"

- □ To cancel document selection, press the highlighted line for the selected document.
- **B** To print multiple documents, repeat step **2** in the order of documents to be printed.

🖉 Note

- □ You can select up to 30 documents.
- □ If the sizes or resolution of the selected documents are not the same, the documents may not be printed.
- □ If you wish to change the order of printing, cancel the selection, and select documents again in the desired order.
- □ If you press the **[Clear Modes]** key, selection of all documents will be canceled.
- If you press [Printg Odr], the documents will be displayed in the order of printing.

To Check the Details of Stored Documents

1 Select the document for which you want detailed information.



🖉 Note

□ If a password has been set for the document, the password entry dialog box appears. Enter the password and then press **[OK]**.

4

2 Press [Detail].

Detailed information about the document is displayed.

🖉 Note

- ☐ If you have selected several documents, use [▲] and [▼] to view the details of each.
- □ Press **[OK]**. The "Select Files to Print" display appears.

Searching Saved Documents

You can use either **[Search by File Name]** or **[Search by User Name]** to search for documents stored on the Document Server. You can also list the stored documents in the order you prefer.

🖉 Note

If you install DeskTopBinder V2 Professional or DeskTopBinder V2 Lite on your computer, you can search and rearrange the documents from your computer.

℅ Reference

For more detailed information refer to DeskTopBinder V2 Professional/Lite manuals.

To Search by File Name

- Press the [Document Server] key.
- **2** Press [Search by File Name].

FileList		Select Files to Pri	¥.	Page Total Print
Search by User Name	Select files to print. User Na	me File Name	Date Page Findq (33	Erie Mortogerneni
Seach by File Name		COPYD0 19	3.009 1	[Celefe File Prol 1sl Page
lou can scan originals o store them.	D.A.	COPY0018 COPY0017	3June 1 (e) 3June 2 1/1	After selecting file, Print Settings can be changed.
Scan Original			4 P7	And Setting

B Enter the file name using the letter keys, and then press [OK].

Only the files beginning with the name entered appear in the "Select Files to Print" display.

 \Rightarrow p.106 "Entering Text"

🖉 Note

To display all the files saved in the Document Server, press [File List].

To Search by User Name

1 Press the [Document Server] key.

2 Press [Search by User Name].

FileList			Select Files to Print	t			Page O	Total Print
Search by User Name	Select files to prin	L						Estatemed
	Us	er Name	File Name	Date	Page	Piniq 04		
Search by File Name			COPYDD19	3.June	1			eible File
ou can scan originais 🛛 🛌	Q		COPYOB18	3 June	1			el 1sl Page electing tile,
			COPY0817	3 June	2	1/1		Settings can
Scan Original						▲Pres. ▼Ned		ni Setlings

B To specify a registered user name, select the user name from the displayed list, and then press [OK].

🖉 Note

- To specify an unregistered user name, follow the procedure below.
- 4 To specify an unregistered user name, press [Non-programmed Name]. The entry dialog box below appears. Enter the unregistered user name in the entry dialog box, and then press [OK].



Reference $\Rightarrow p.106$ "Entering Text"

5 Press [OK].

Only the files beginning with the name entered appear in the "Select Files to Print" display.

🖉 Note

To display all the files saved in the Document Server, press [File List].

Printing Saved Documents

1 Press the line for the document you want to print.

FileList		Select Files to Print		Page Total Print
Search by User Name	Select files to print.			F de Estimation
Seeuroy use rielle	User Name	File Name	Date Page Prinkpita	
Search by File Name		COP10319	3.June 1	Ceblo File
ou can scan originais 🛛 🔚	Q	COPY0018	3June 1	After selecting file,
	∎ A.	00P10017	3June 2 1/1	Print Settings can be changed.
Scan Original			A PRO	Prol Setting

🖉 Note

- □ If a password has been set for the document, the password entry dialog box appears. Enter the password, and then press **[OK]**.
- □ You can print multiple documents. \Rightarrow p.58 "Selecting a Document"
- **2** If you need to change any of the print settings, press [Print Settings].

The "Print Settings" display appears. User names, file names, and print order of documents appear.



🖉 Note

- Print settings made for printing in copier or printer mode are stored after printing and applied to the next printing. Print settings made in facsimile mode, however, are not stored.
- □ If you select multiple documents, print settings remain in the first document, but they do not remain in the other documents.
- Print setting items are listed below. For more information about the print results according to each setting, see the Copy Reference.
 - Binding format
 - 2 Sided Copy Top to Top
 - 2 Sided Copy Top to Bottom
 - Cover handling
 - Cover/Slip Sheet
 - Edit Image

Finish

- Sort
- Stack
- Staple
- □ If you print more than one set using the Sort function, you can check the print result by printing out only the first set. ⇒ p.61 "Sample Copy"
- When multiple documents are printed at the same time, the print settings made for the document printed first are applied to all other documents.

- □ If you select multiple files, you can confirm the file names or print order of the files selected in step **1** by scrolling through the list with **[▼]** and **[▲]**.
- Press [Select File] to return to the "Select Files to Print" display.
- □ "Stamp" cannot be set for documents saved in facsimile mode.

3 Enter the required number of prints using the number keys.



🖉 Note

□ Up to 99 can be entered.

4 Press the **[Start]** key.

The machine starts printing.

Stop printing

Press the [Clear/Stop] key.

2 Press [Stop].

Changing the number of copies during printing

Limitation

□ The number of copies can only be changed when the Sort function is selected in the print settings.



- Press the [Clear/Stop] key.
- **2** Press [Change Quantity].
- **3** Use the number keys to enter a new number of copies.
- 4 Press the **(#)** key.

5 Press [Continue].

Printing restarts.

Sample Copy

If you print multiple sets using the Sort function, you can check if the print order or the print settings are correct by printing out only the first set using the **[Sample Copy]** key.

Limitation

□ This function can be used only when the Sort function is selected.

1 Select the document to be printed.

File List		Select Files to Print				Page Total Print
Search by User Name	Select files to print. User Name	File Name	Date	Page Prior	1.11	0 1 0
Search by File Name		COPYOUTS	a June	1		Ceble Frie Prol 1st Page
fou can scan originals o store them.			3 June 3 June	1	(elp)	After selecting file, Print Settings can
Scan Original		·			APRS.	Prof Satilitys

Note

- □ If a password has been set for the document, the password entry dialog box appears. Enter the password, and then press [OK].
- You can search for a document by user or file name using [Search by User Name] or [Search by File Name] respectively. \Rightarrow p.59 "Searching Saved Documents"
- □ You can sort document names in the list by user name, file name, or date. To sort documents, press [User Name], [File Name], or [Date].
- □ To cancel a document selection, press the highlighted line for the selected document.

2 Press the **[Sample Copy]** key.

The first set is printed out.

3 Press [Continue].

Printing restarts.

🖉 Note

Press [Suspend] to cancel printing and return to the "Print Settings" menu to change settings.

Print First Page

You can print the first page of the document selected in the "Select Files to Print" display to check content.

If more than one document is selected, the first page of each is printed.

1 Select the document to be printed.

🖉 Note

□ If a password has been set for the document, the password entry dialog box appears. Enter the password, and then press **[OK]**.

🖉 Note

- □ You can search for a document by user or file name, using [Search by User Name] or [Search by File Name] respectively. ⇒ p.59 "Searching Saved Documents"
- You can sort document names in the list by user name, file name, or date. To sort documents, press [User Name], [File Name], or [Date].
- To cancel a document selection, press the highlighted line for the selected document.

2 Press [Print 1st Page].



3 Press the **[Start]** key.

Deleting Saved Documents

∰Important

You can save up to 1,000 documents in the Document Server. No more documents can be saved when there are 1,000 documents in the Document Server. You should delete unnecessary documents.

🖉 Note

□ You can delete all the saved documents at once with the User Tools.
 ⇒ p.91 "Delete All Files"

Press the [Document Server] key.

2 Select the document to be deleted.

🖉 Note

□ If a password has been set for the document, the password entry dialog box appears. Enter the password, and then press **[OK]**.

🖉 Note

- □ You can delete multiple documents at once. ⇒ p.58 "Selecting a Document"
- □ You can search for a document by user or file name, using [Search by User Name] or [Search by File Name] respectively. ⇒ p.59 "Searching Saved Documents"

- You can sort document names in the list by the user name, file name, or date. To sort documents, press [User Name], [File Name], or [Date].
- □ If you cannot find the document using the name, you can print the first page of a document to check its contents. ⇒ p.62 "Print First Page"
- Press the selected line again to cancel the print job.

Baseling Research Research

Press [Delete] to delete the document.

Settings for the Document Server

♦ Copier/Document Server Features ⇒ "General Features 4/5" in Copy Reference

Items		Default settings
Copy Settings	Document Server Storage Key:F1	2 Sided Original Top to top
	Document Server Storage Key:F2	1 Sided \rightarrow 1 Sided Combine
	Document Server Storage Key:F3	1 Sided \rightarrow 1 Sided Combine:4 originals
	Document Server Storage Key:F4	1 Sided \rightarrow 1 Sided Combine:8 originals
	Document Server Storage Key:F5	Create Margin

♦ System Settings ⇒ p.71 "General Features", ⇒ p.74 "Tray Paper Settings", p.77 "Timer Setting", p.68 "Key Operator Tools"

	Items	Default settings
General Features	Warm Up Notice	ON
	Copy Counter Display	Up
	Output:Document Server	Internal tray
Tray Paper Settings	Paper Tray Priority: Document Server	Tray 1
	Cover Sheet Tray	OFF
	Slip Sheet Tray	OFF
Timer Settings	Copier/Document Server	60 seconds
	Auto Reset Timer	
Key Operator Tools	Auto Delete File	Yes After 3 day(s)
	Delete All Files	
	Display Password with Stored File	OFF

5. User Tools (System Settings)

User Tools Menu (System Settings)

• These items must be set to use the function. Be sure to set them before using the corresponding function.

O These items must be set if required.

♦ General Features ⇒ p.71 "General Features"

	Default	Copier	Facsimile	Printer	Scanner
Panel Tone	ON	О	О	0	О
Warm Up Notice	ON	О	0		
Copy Count Display	Up	О			
Function Priority	Copier	0	0	О	О
Print Priority	Display mode	0	0	О	
Function Reset Timer	3 seconds	0	0	О	
Output: Copier	Internal Tray 1	0			
Output: Document Server	Internal Tray 1				
Output: Facsimile	Internal Tray 1		0		
Output: Printer	Internal Tray 1			О	

♦ Tray Paper Settings ⇒ p.74 "Tray Paper Settings"

	Default	Copier	Facsimile	Printer	Scanner
Paper Tray Priority: Copier	Tray 1	0			
Paper Tray Priority: Printer	Tray 1			0	
Tray Paper Size: Tray 1	Auto Detect	О	О	О	
Tray Paper Size: Tray 2	Auto Detect	О	О	О	
Tray Paper Size: Tray 3	Auto Detect	О	О	О	
Tray Paper Size: Tray 4	Auto Detect	О	О	О	
Paper Type: Bypass tray	No display	О		О	
Paper Type: Tray 1	No display/2 Sided Copy/Auto Paper Select	О		0	

	Default	Copier	Facsimile	Printer	Scanner
Paper Type: Tray 2	No display/2 Sided Copy/Auto Paper Select	0		0	
Paper Type: Tray 3	No display/2 Sided Copy/Auto Paper Select	О		0	
Paper Type: Tray 4	No display/2 Sided Copy/Auto Paper Select	О		0	
Cover Sheet Tray	OFF	0		0	
Slip Sheet Tray	OFF	0		0	

♦ Timer Setting ⇒ p.77 "Timer Setting"

	Default	Copier	Facsimile	Printer	Scanner
Auto Off Timer	60 minute(s)	О	0		
Energy Saver Timer	15 minute(s)	О	0		
Panel Off Timer	60 seconds	О	0		0
System Reset Timer	60 seconds	О	О	О	0
Copier/Document Server Auto Reset Timer	60 seconds	0			
Facsimile Auto Reset Timer	30 seconds		0		
Scanner Auto Reset Timer	60 seconds				0
Set Date		•	•		
Set Time		•	•		

Interface Settings ⇒ p.79 "Interface Settings/Network", p.81 "Interface Settings/Parallel Interface", p.82 "Interface Settings/IEEE 1394 (Option)", p.83 "Interface Settings/IEEE 802.11b (Option)"

		Default	Copier	Facsimile	Printer	Scanner
Network	IP Address	011.022.033.044		О	О	O *3
Sub-	Sub-net Mask	000.000.000.000		О	0	O *3
	Gateway Address	000.000.000.000		0	О	O *3
	Network Boot	NONE		0	О	O *3
	Effective Protocol	(all effective)		0	О	O *3 *4
	NW Frame Type	Auto select		0	О	
	LAN Type	Ethernet		О	0	O *3
	Ethernet Speed	Auto select		0	О	O *3
Parallel interface	Parallel Timing	ACK outside		0	О	
	Parallel Com- munication Speed	High speed		0	0	
	Selection Sig- nal Status	High		0	О	
	Input Prime	Invalid		О	0	
	Bidirectional Communica- tion	ON		0	0	
	Signal Control	Job acceptance priority		0	О	
IEEE 1394	IP address	000.000.000.000		О	О	O *3
*1	Sub-net Mask	000.000.000.000		0	0	O *3
	IP over 1394	Active		0	0	O *3
	SCSI Print (SBP-2)	Active			О	
	Bidirectional SCSI print	ON			0	

		Default	Copier	Facsimile	Printer	Scanner
IEEE 802.11b *2	Communica- tion Mode	802.11 Ad hoc		0	0	O *3
	SSID Setting	ASSID		О	О	O *3
	Channel	11		О	О	O *3
	WEP (En- cryption) Set- ting	Inactive		0	О	O *3
	Wireless LAN Signal					
	Transmis- sion Speed	Auto		0	0	O *3
	Return to Defaults					

- ^{*1} Displayed when the IEEE1394 board (option) is installed.
 ^{*2} Displayed when the Wireless LAN board (option) is installed.
- ^{*3} Settings are required when using the delivery, TWAIN, store file, or mail delivery functions.
- ^{*4} Effective Protocol setting is required when using TCP/IP.

File Transfer

	Default	Copier	Facsimile	Printer	Scanner
Delivery Option	OFF		0		0
Fax RX File Transmission			0		
Scanner Recall Interval Time	300 seconds				0
Number of Scanner Recalls	3 time(s)				0

Key Operator Tools

	Default	Copier	Facsimile	Printer	Scanner
User Code Management	OFF	0	0	0	0
Key Counter Management	All OFF	0	0	0	0
External Charge Unit Management		О	О	О	0
Key Operator Code	OFF	0	0	0	0
Panel Off Level	Level 1	0	0		
Display/Print Counter		0	0	0	0
Display/Clear/Print Counter per User Code		О	О	О	О

	Default	Copier	Facsimile	Printer	Scanner
Address Book Management		0	0	0	0
Address Book: Program/Change /Delete Group					0
Address Book: Change Order					0
Address Book: Edit Title		О	0	О	0
Address Book: Select Title	Title 1	О	0	О	0
Auto Delete File	Yes After 3 day(s)	0	0	0	О
Delete All Files		0	0	0	О
Display Password with Stored File	OFF	0	0	0	0
Key Operator's E-mail Address					0
AOF (Always ON)	ON				

Accessing User Tools (System Settings)

This section is the key operators in charge of this machine. You can change or set the machine's default settings.


🖉 Note

- Operations for system settings are different from normal operations. After using User Tools, be sure to exit.
- Any changes you make with User Tools remain in effect even if the main power switch or operation switch is turned off, or the [Energy Saver] or [Clear Modes] key is pressed.

Changing Settings

🖉 Note

□ If a key operator code has been set, the key operator code entry dialog box appears. Enter the key operator code, and then press [OK]. ⇒ p.86 "Key Operator Code"

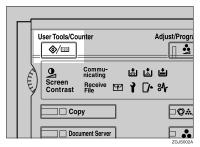

Press the [User Tools/Counter] key.

2 Press [System Settings].

⊗ User Tools/Count	er/Inquiry	Edt
यत्री System Settings	Copier/Document Server Features	ç⊟* Français
Dial ologies agointio	Facsimile Features	
Maintenance	Printer Features	i hquiry
	Scatter Features	Counter

3 Select the desired menu and press the desired key.

🗟 System Settings			Evit
Select one of the tollowing default settings.			
General Features Tray Paper Sett In	ys Timer Setting	Interface Settings File Transfer Ka	ay Operator Tools
Panel Tone	ON	Function Reset Timer	3 seconds
Warm Up Notice	ON	Output: Copier	Internal tray 1
Copy Count Display	Up	Output: Document Server	Internal tray 1
Function Priority	Copier	Output: Facsimile	Internal tray 1
Print Priority	Display mode	Output: Printer	Intenal tray I

4 Change settings by following instructions on the display panel. Then press [OK].

🖉 Note

□ To cancel changes made to settings and return to the normal function display, press the **[User Tools/Counter]** key.

Exiting from User Tools

Press the [User Tools/Counter] key.

Changing the system setting is finished, and the machine returns to Copy or Print mode.

🗞 User Tools/Counte	r/Inquiry	Eet
System Settings	Copier/Document Server Features	ç⊖° Français
Les System Security	Facsimile Features	
Maintenance	Printer Features	i inquity
	Scamer Features	Counter

🖉 Note

□ You can also exit from User Tools by pressing **[Exit]**.

Settings You Can Change with the User Tools

PReference

For how to access User Tools, see p.70 "Changing Settings".

General Features

Panel Tone

The beeper (key tone) sounds when a key is pressed.

🖉 Note

Default: ON

Warm Up Notice (Copier/Document Server)

Specify whether the beeper sounds when the machine becomes ready for copying after Energy Saver mode is deactivated or the power is turned on.

🖉 Note

□ If the "Panel Tone" setting is "OFF", the beeper does not sound, whatever the "Warm Up Notice" setting.

□ Default: ON

Copy Count Display (Copier/Document Server)

The copy counter can be set to show the number of copies made (count up) or the number of copies remaining to be made (count down).

🖉 Note

□ Default: *Up* (count up)

Function Priority

You can specify the mode to be displayed immediately after the operation switch is turned on or System Reset mode is turned on.

🖉 Note

Default: Copier

Print Priority

Print priority is given to the mode selected.

Reference

⇒ p.48 "Multi-Access"

🖉 Note

- Default: *Display mode*
- □ When "Interleave" is selected, the current print job will be interrupted after maximum of 5 sheets.
- When the optional Internal Tray, Shift Sort Tray, 500-Sheet Finisher, or 1000-Sheet Finisher is installed on the machine, you can specify an output tray to which documents are delivered. For more information about how to specify an output tray for each function, see the following descriptions:
 - p.72 "Output: Copier (Copy mode)"
 - p.73 "Output: Document Server (Document server)"
 - p.73 "Output: Facsimile (Facsimile)"
 - p.73 "Output: Printer"

Function Reset Timer


You can set the length of time the machine waits before changing modes when using the multi-access function (\Rightarrow p.48 "Multi-Access"). This is useful if you make many copies and you have to change the settings for each copy. If you set a large value, you can prevent jobs from other functions interrupting the copy job.

🖉 Note

- Default: 3 Seconds
- □ The Function Reset Timer setting is ignored if "Interleave" is set for "Print Priority" (\Rightarrow p.71).
- □ When you select "Set Time", enter the time (3~30 seconds by 1 second steps) with the number keys.

Output: Copier (Copy mode)

You can specify a tray to which documents are delivered.

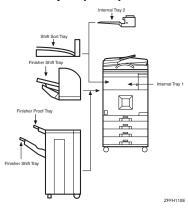

NoteDefault: Internal Tray 1

Output: Document Server (Document server)

You can specify a tray to which documents are delivered.

🖉 Note

- Default: Internal Tray 1
- □ For details about output trays, refer to p.72 "Output: Copier (Copy mode)".

Output: Facsimile (Facsimile)

You can specify a tray to which documents are delivered.

🖉 Note

- Default: *Internal Tray* 1
- □ For details about output trays, refer to p.72 "Output: Copier (Copy mode)".

Output: Printer

You can specify a tray to which documents are delivered.

🖉 Note

- Default: Internal Tray 1
- □ The output trays set on the Printer Driver have priority over the output tray specified above.
- □ For details about output trays, refer to the illustration in p.72 "Output: Copier (Copy mode)".

Output tray settings

Limitation

- You cannot interrupt the current stapling job even when a stapling job is specified with a different function.
- When the 500-Sheet Finisher or 1000-Sheet Finisher is installed and stapling or shift-sorting is specified for a job, the job will be delivered to the Finisher Shift Tray regardless of the output tray specified.
- The output tray used can be changed, when a stapling job of a different function is interrupted by copying, as in the following cases:
 - When the 500-Sheet Finisher is installed and the finisher tray is specified for the output tray:
 - The interrupting job will be delivered to Internal Tray 1.
 - When the 1000-Sheet Finisher is installed and the finisher tray is specified for the output tray:
 - The interrupting job will be delivered to Finisher Proof Tray.

5

Tray Paper Settings

Paper Tray Priority:Copier (Copier/Document Server)

You can specify the tray to supply paper for output.

🖉 Note

Default: *Tray* 1

Paper Tray Priority:Printer (Printer)

You can specify the tray to supply paper for output.

🖉 Note

Default: Tray 1

Tray Paper Size: (Tray 1–4)

Select the size of the copy paper set in the paper tray.

- The paper sizes you can set for trays 1 and 2 are as follows:
 - Auto Detect, A3, B4, A4, A4, A4, B5, B5, A5, A5, A5, A6, A6, 8K, 16K, 16K, 16K
 - 11"×17", 8¹/₂"×14", 8¹/₂"×13", 8¹/₂"×11", 8¹/₂"×11", 8¹/₂"×11", 8¹/₄"×13", 8"×13", 7¹/₄"×10¹/₂, 7¹/₄"×10¹/₂", 5¹/₂"×8¹/₂", 5¹/₂"×8¹/₂", 5¹/₂"×8¹/₂", 5¹/₂"×8¹/₂", custom size (100.0-297.0 mm (3.94"-11.69") wide × 148.0-432.0 mm (5.83"-17.00") long)
- The paper sizes you can set for trays 3 and 4 are as follows:
 - Auto Detect, A3, B4, A4, A4, A4, B5, B5, A5, A5, A5, 8K, 16K, 16K
 - 11"×17"□, 8¹/₂"×14"□, 8¹/₂"×13"□, 8¹/₂"×11"□, 8¹/₂"×11"□, 8¹/₄"×13"□, 8"×13"□, 7¹/₄"×10¹/₂"□, 5¹/₂"×8¹/₂"□, 5¹/₂"×8¹/₂"□, custom size (148.0-297.0 mm (5.83"-11.69") wide × 148.0-432.0 mm (5.83"-17.00") long)

Important

If the specified paper size differs from the size of paper actually set in the paper tray, a paper misfeed might occur because the paper size is not detected correctly.

🖉 Note

- □ The tray fence for the optional large capacity tray (LCT) is fixed. If you need to change the paper size, contact your service representative.
- Default: Auto Detect

 \Rightarrow p.124 "Changing the Paper Size"

Paper Type:Bypass Tray

Sets the display so you can see what type of paper is loaded in the bypass tray.

- The paper types you can set for the bypass tray are as follows:
 - Thick Paper, Recycled Paper, Special Paper, Colour Paper, Letterhead, Preprinted Paper, OHP, Label Paper, Punched Paper, Bond Paper, Cardstock, Plain: Dup. Back, Thick: Dup. Back

🖉 Note

- Paper size which can be detected automatically, will be detected in D direction.
- Default: No display

Paper Type:Tray1–4

Sets the display so you can see what type of paper is loaded in each of the paper trays. This information is used by the print function to automatically select the paper tray.

- The paper types you can set for trays 1 and 2 are as follows:
 - Recycled Paper, Special Paper, Colour Paper, Letterhead, Preprinted Paper, Punched Paper, Label Paper, Bond Paper, Cardstock, OHP, Thick Paper
- The paper types you can set for trays 3 and 4 are as follows:
 - Recycled Paper, Special Paper, Colour Paper, Letterhead, Preprinted Paper, Punched Paper, Bond Paper, Cardstock

🖉 Note

Default:

- Paper Type: No display
- Copying Method: 2 Sided Copy
- Apply Auto Paper Select: Yes
- □ A is displayed next to the paper tray if "No" is selected in "Auto Paper Select".

Limitation

"Auto Paper Select" can only be selected for the Copy function if "No display" and "Recycled Paper" are selected. If "No" is selected, "Auto Paper Select" will not be valid for the tray.

Cover Sheet Tray

Allows you to specify and display the paper tray to set cover sheets. After selecting the paper tray, you can also specify the display timing and copy method for two-sided copying.

🖉 Note

- Default:
 - Tray to program: NONE
- □ The functions that use the Cover Sheet Tray setting are the front cover function and front/back cover function.
- When "At Mode Selected" is selected, the Cover Sheet Tray settings are only displayed when the cover function is selected.
- □ When "Full Time" is selected, the Cover Sheet Tray is always displayed.
- □ You can set the Copying Method in Duplex setting only when "At Mode Selected" is selected.

 \Rightarrow "Covers" in the Copy Reference

Slip Sheet Tray

Allows you to specify and display the paper tray to set slip sheets. After selecting the paper tray, you can also specify the display timing and copy method for two-sided copying.

🖉 Note

□ Default:

- Tray to program: NONE
- □ When "At Mode Selected" is selected, the Slip Sheet Tray settings are only displayed when the cover function is selected.

□ When "Full Time" is selected, the Slip Sheet Tray is always displayed.

Reference

"Slip Sheets" in the Copy Reference

Timer Setting

Auto Off Timer

The machine turns off automatically to conserve energy after a specified amount of time has passed following job completion. This function is called "Auto Off".

The machine status after the Auto Off operation is called "Off mode" or "Sleep mode". For the Auto Off Timer, specify the time to elapse before the Auto Off function is activated.

The time can be set from 1 minute to 240 minutes using the number keys.

🖉 Note

- □ Default: 60 minute(s)
- □ When in "Off mode" or "Sleep mode", the machine can be ready for use within 99 seconds.
- □ Auto off may not work when errors are displayed.

Energy Saver Timer

Set the amount of time the machine waits before switching to lower-power mode after copying has finished or the last operation is performed. The time can be set from 1 minute to 240 minutes using the number keys.

🖉 Note

□ Default: 15 minute(s)

Panel Off Timer

Set the amount of time the machine waits before switching the panel off after copying has finished or the last operation is performed.

🖉 Note

- □ The warm up time for making a copy from standby mode is 3 seconds for Panel off Level 1 and 10 seconds for Panel off Level 2.
- □ Default: 60 seconds
- □ Enter a time interval between 10 seconds and 999 seconds using the number keys.

System Reset Timer

The System Reset setting is a setting that automatically switches to the screen for the function set in Function Priority. This happens if no operations are performed or when an interruputed job is cleared. This setting sets the system reset interval. \Rightarrow p.71 "Function Priority"

🖉 Note

- □ Default: 60 seconds
- □ The time can be set from 10 to 999 seconds by 1 second steps using the number keys.

Copier/Document Server Auto Reset Timer (Copier/Document Server)

Specifies the time to elapse before the copier and Document Server functions reset.

🖉 Note

- □ If **[No]** is selected, the machine will not automatically switch to the user code entry screen.
- Default: 60 seconds
- \Box The time can be set from 10 to 999 seconds using the number keys.

Facsimile Auto Reset Timer (Facsimile)

Specifies the time to elapse before the facsimile function is reset.

🖉 Note

- □ Default: 30 seconds
- □ The time can be set from 30 to 999 seconds using the number keys.

Scanner Auto Reset Timer (Scanner)

Specifies the time to elapse before the scanner function resets.

🖉 Note

- □ If **[No]** is selected, the machine will not automatically switch to the user code entry screen.
- Default: 60 seconds
- □ The time can be set from 10 to 999 seconds using the number keys.

Set Date

Set the date for the copier's internal clock using the number keys.

🖉 Note

 \Box To change between year, month and day, press [-] and [-].

Set Time

Set the time for the copier's internal clock using the number keys.

🖉 Note

 \Box To change between minutes and seconds, press [\leftarrow] and [\rightarrow].

Interface Settings/Network

IP Address

Before using this machine with the network environment, you must configure the IP address.

🖉 Note

- Default: 011.022.033.044
- Do not use an IP address that is used for another machine. To get the addresses, contact your network administrator.
- If you install the IEEE 1394 board (option) and use the IEEE 1394 interface, you must set the address of the domain, different from the IP address of [IEEE 1394]. If you intend to set the address for the same domain, set a different value for the Sub-net Mask.
- \Box Press [-] or [-] to move between each group of three numbers.

Sub-net Mask

This is a number used to mathematically "mask" or hide an IP address on the network by eliminating those parts of the address that are alike for all the machines on the network.

🖉 Note

- **D** Default: 000.000.000.000
- \Box Press [-] or [-] to move between each group of three numbers.

Gateway Address

A gateway is a connection or interchange point connecting two networks. Configure the gateway address for the router or host computer used as a gateway.

🖉 Note

D Default: 000.000.000.000

- \Box Press [\leftarrow] or [\rightarrow] to move between each group of three numbers.
- □ To get the address, contact your network administrator.

Network Boot

Select how to set an IP address from a client.

🖉 Note

□ Default: NONE

□ For details about settings, consult your network administrator.

Reference

For details, see the Printer Reference

Effective Protocol

Select the protocol to use in the network.

🖉 Note

□ Default: TCP/IP:Effective, NetWare:Effective, NetBEUI:Effective, AppleTalk: Effective

NW Frame Type

Select the frame type when you use NetWare.

🖉 Note

Default: Auto Select

LAN Type

When you have installed the Wireless LAN board (option), select the interface, Wireless LAN (IEEE 802.11b) or Ethernet.

🖉 Note

Default: Ethernet

Ethernet Speed

Set the access speed for networks.

Select a speed that matches your network environment. "Auto Select" should usually be specified.

🖉 Note

Default: Auto Select

Interface Settings/Parallel Interface

Parallel Timing

Specifies the timing setting for the parallel interface. Under normal circumstances, you will not need to change this setting.

🖉 Note

Default: ACK outside

Parallel Communication Speed

Specifies the communication speed of the parallel interface. If the communication speed is set too fast, data transfer may not flow smoothly. If this occurs, change the setting to "Standard".

🖉 Note

Default: High speed

Selection Signal Status

Specifies the signal setting of the parallel interface.

🖉 Note

Default: *High*

Input Prime

Specifies whether the prime signal is active or inactive when an input prime signal is sent. Under normal circumstances, you will not need to change this setting.

🖉 Note

Default: Invalid

Bidirectional Communication

Specifies the printer's response mode and so forth for a status request when using the parallel interface. If you experience problems when using other manufacturers' printers, set this to "OFF".

Limitation

□ If this is set to "OFF", asynchronous functions will not work.

🖉 Note

□ Default: ON

Signal Control

Specifies the error processing settings for when an error occurs when printing from a computer or sending faxes. Under normal circumstances, you will not need to change this setting.

🖉 Note

Default: *Job acceptance priority*

Interface Settings/IEEE 1394 (Option)

Preparation

You must install the IEEE 1394 board (option) into the machine.

The Wireless LAN board (option) cannot be installed at the same time.

IP Address

When you connect this machine to a network using the IEEE 1394 board (option), you must configure the IP address.

🖉 Note

- **D** Default: 000.000.000.000
- □ When you use the IEEE 1394 interface on a network, you cannot use the Ethernet interface in the same domain. To use it in the same domain, set a different value for the Sub-net Mask.

Sub-net Mask

This is a number used to mathematically "mask" or hide an IP address on the network by eliminating those parts of the address that are alike for all the machines on the network.

🖉 Note

- **D** Default: 000.000.000.000
- When you use the IEEE 1394 interface on a network, you cannot use the Ethernet interface in the same domain. To use it in the same domain, set the different value for the Sub-net Mask.
- \Box Press [\leftarrow] or [\rightarrow] to move between each group of three numbers.

IP over 1394

When you use the IP over 1394 function of the IEEE 1394 interface to connect the machine to the network, or you print using a personal computer with the IP over 1394 driver, you must set the IP over 1394. This function is supported by Windows Me or Windows XP.

🖉 Note

- Default: Active
- When using the IP over 1394 function, set the IP Address and the Sub-net Mask.

For details, see the Printer Reference.

SCSI Print (SBP-2)

When you print using the SCSI Print client function supported by Windows 2000 or Windows XP, you must set SCSI Print. For details, see the Network Reference.

🖉 Note

- □ Default: Active
- When using the SCSI Print (SBP-2), setting the IP Address and the Sub-net Mask is not required.

Bidirectional SCSI Print

Specifies the printer's response mode and so forth for a status request when using the IEEE 1394 interface.

Note

□ Default: ON

□ If this is set to "OFF", asynchronous functions will not work.

Interface Settings/IEEE 802.11b (Option)

Preparation

You must install the Wireless LAN board (option) into the machine. The IEEE 1394 board (option) cannot be installed at the same time.

🖉 Note

□ Be sure to make all settings simultaneously.

Communication Mode

Specifies the communication mode of the Wireless LAN.

🖉 Note

Default: 802.11 Ad hoc

SSID Setting

Specifies SSID to distinguish the access point in the Infrastructure mode.

🔗 Note

- Default: ASSID
- □ If SSID is left blank for the 802.11b Ad hoc Mode or Ad hoc Mode, "ASSID" is displayed.

Channel

Specifies a channel when you select 802.11b Ad hoc mode or Ad hoc mode.

🖉 Note

- \Box The channel can be set from 1 13.
- 🗖 Default: 11

83

Wireless LAN Signal

Shows the radio-wave status of the access point connected in Infrastructure mode.

Radio wave status is shown when you press [Wireless LAN Signal].

WEP (Encryption) Setting

Specifies encryption of the Wireless LAN. If this is set to effective, you must enter the WEP key.

🖉 Note

□ Default: Inactive

Transmission Speed

Specifies the communication speed of the Wireless LAN.

Note 🖉

- Default: Auto
- Return to Defaults

You can return Wireless LAN settings to the factory default value.

File Transfer

Make these settings as required when using ScanRouter V2 Lite/Professional.

🖉 Note

□ The optional ScanRouter V2 Professional is required for distributing received fax documents.

Delivery Option

If **[ON]** is selected, the delivery server IP address will be displayed.

🖉 Note

- Default: OFF
- □ The delivery server IP address can only be set from ScanRouter V2 Lite/Professional.

Fax RX File Transmission

Setting per Line

Specifies whether or not received fax documents should be sent to Scan-Router V2 Professional for each of the fax lines.

🖉 Note

Default: G3 Port 1/Do not Deliver, G3 Port 2/Do not Deliver, G3 Port 3/Do not Deliver

• Print at Delivery

Specifies whether or not received fax documents that are sent to ScanRouter V2 Professional should also be printed by the machine at the same time.

🖉 Note

□ Default: No

• File to Deliver

Specifies whether all received fax documents or only received fax documents that include delivery codes (documents with an ID and F code) should be sent to ScanRouter V2 Professional.

🖉 Note

□ Default: *File with Dlvry Code*

• Delivery Failure File

If a received fax document cannot be sent to ScanRouter V2 Professional, the document is stored in the machine's memory. To print this stored data, select "Print File"; to delete the data, select "Delete File".

🖉 Note

- □ If the machine can send data to ScanRouter V2 Professional, data is sent automatically.
- □ If you delete the data, you will not be able to distribute or print the data.

Delivery Server IP Address

Note

Default: 000.000.000.000

Scanner Recall Interval Time

Specifies the interval period waits before resending data or a document, if it could not be sent to ScanRouter V2 Lite/Professional.

🖉 Note

- □ Default: 300 seconds
- □ Enter an interval within the range of "60-900 seconds" (in one second intervals) with the number keys.
- □ This setting is for the Scanner function. Received faxes continue to be distributed.

Number of Scanner Recalls

🖉 Note

- □ Default: 3 time(s)
- □ Enter the number of times within the range of "1 to 99" using the number keys.
- □ This setting is for the Scanner function. The distribution of received fax documents will still be performed.

Key Operator Tools

The key operator must set the following items. For settings or more information, contact the key operator.

User Code Management

Allows you to control who uses the machine by setting codes for users. User codes must be registered for user code management. \Rightarrow p.92 "User Code"

🖉 Note

- □ Default: Copier/OFF, Document Server/OFF, Facsimile/OFF, Scanner/OFF, Printer/PC Control:ON
- □ By selecting "PC Control:ON" for the printer, you can keep a print log for each user code entered from the driver.

Key Counter Management

Use the key counter to specify whether users are limited or not.

🔗 Note

□ Default: Copier/OFF, Document Server/OFF, Facsimile/OFF, Scanner/OFF, Printer/OFF

External Charge Unit Management

Use the external charge unit to limit the user's charge and to manage the use.

🖉 Note

□ Default: Copier/OFF, Document Server/OFF, Facsimille/OFF, Scanner/OFF, Printer/OFF

Key Operator Code

This specifies whether or not to use passwords (max. 8 digits) to control use of the "Key Operator Tools" settings for access codes.

🖉 Note

- Default: OFF
- If you select "ON", enter the access code (max. 8 digits) with the number keys, and then select "Partial" or "All Initial Settings" to set the access limit.
 - If you selected "Partial"
 - An access code is only required for the "Timer Setting", "Key Operator Tools" initial settings and for "Key Operator Tools" for the fax initial settings. "MENU PROTECT" will be set for "CHANGE/CONTROL" in the printer initial settings. If you set "MENU PROTECT", you can set the key operator code under of the printer initial settings. \Rightarrow "Printer Features Parameters" in the Printer Reference

• If you selected "All Initial Settings"

An access code will be required to access all the items in the System Settings, Copier/Document Server Features, Facsimile Features, Printer Features, and Scanner Features.

□ If you select "All Initial Settings", you will need to enter the access code to access the Key Operator Code screen.

Panel Off Level

Specifies the panel off level.

Level	Warm-up time
Level 1	about 3 second
Level 2	about 10 seconds

🖉 Note

Default: Level 1

Display/Print Counter

Allows you to view and print the number of prints.

- Display/Print Counter
 Displays the number of prints for each functions (Total, Copier (Full Colour/Black & White/Single Colour/Two-colour), Facsimile (Single Colour/Black & White), and Printer (Colour/Black & White), A3/DLT, Duplex, Staple).
- Print Counter List Prints out a list of the number of prints for each functions.
- To print the counter list
 - ① Press the **[User Tools/Counter]** key.
 - Press [System Settings].
 - ③ Press [Key Operator Tools].
 - ④ Press [Display/Print Counter].
 - ⑤ Press [Print Counter List].

DisplayPrint Counter					0.000	2012 10.41
► Total	0024880					
► Copier		► Printer		► Facsimile		
Full Colour:	0006555	Colour:	0000000	Single Colour:	000	0000
Black & White:	0017188	Black & White:	0000051	Black & White:	000	0002
Single Colour:	0000973	► 43/0LT	0010708	► Staple	000	0392
Two-colter:	0000000	► Duplex	0004077			
Print Counte	rList					Ext

O Press the [Start] key.

⑦ Press [Exit].

Display/Clear/Print Counter per User Code

Allows you to view and print the number of prints accessed with user codes and to set the values to 0.

🖉 Note

□ Press [▲] and [▼] to show all the number of prints.

- Print Counter per User Code Prints the number of prints for each of the user codes.
- Clear Counter per User Code Sets the number of prints for each of the user codes to 0.
- The number of prints may differ from the counter value of Total Counter in the User Tools.

🖉 Note

- □ Print List for Each User Code ⇒ p.96 "Printing the Number of Prints for Each User Code".
 - Print Counter for All User Codes Prints the number of prints for all the user codes.
 - Clear Counter for All User Codes Sets the number of prints for all the user codes to 0.

Address Book Management

Adds, changes or deletes user codes (max 8 digits). For details on operations, see p.92 "User Code".

🖉 Note

- □ You can register up to 2000 user names.
- □ You can register up to 80 user codes. If you add the optional functions, you can register up to 200 user codes.
- □ You can also register user codes from SmartNetMonitor for Admin (printer option required).
- D Even if you change user codes, number of prints are not cleared.
- □ If you clear a user code, its number of prints associated with it are also automatically cleared.
 - [Program/Change]

This registers new user codes. You can register and change user codes and user names.

- User name User (destination) name, key display, registeration number, title selection
- User code User code, available functions
- By E-mail Address E-mail address, sender's password, enter password
- [Delete] Deletes a user.

Address Book: Program/Change/Delete Group

You can register multiple users in a group. Then you can easily control the registered users for each group.

• [Program/Change]

This registers new groups, or changes the group name, key display, title selection, or registration number.

• **[Delete]** Deletes a group.

Address Book: Change Order

Changes the order of the registered user (destination).

🖉 Note

- □ You can rearrange the order of items on the same page, but you cannot move the items to another page. For example, you cannot move an item from "PLANNING" ([OPQ]) to "DAILY" ([CD]).
- ① Press the **[User Tools/Counter]** key.
- Press [System Settings].
- ③ Press [Key Operator Tools].
- (4) Press [Address Book: Change Order].

🗟 System	Settings					1 30	Ect
Select one of the follow	ving detault settings.						
General Features	Tray Paper Settings	Timer Setting	W	erface Settings	File Transfer	Key Operator	Fooks
	Address Book Manageme	nt		Hđ	co Delate File	After	1 day(s)
Address	Address Book: Program/Change/Delete Group			De	lete All Files		
Address Book: Change Order				Display Pas	sword with Stored Fi	le OFF	
	Address Book : Edit Title	e					
Address Book	Select Title	tle 1			2/3	Previous	▼ Neod

⑤ Press the user (destination) key to be moved.

Address Book: Change On	(er						_	11 JUN 2022 0105
Select user (destination)	or enter No. v	th Numberk	eys to move.		E			
All Upper By User Code By E-mail Address		000023 DEV	Group 1	[000001] #48		UVY XrZ C000033 ### C000123 Drothy		Switch Title Programed: 18/2100
							Ш	Edt

🖉 Note

- □ You can select a user with the number keys.
- (6) Press the user destination key which is in the place, you want to move to.

Address Book Change Order Select user (destinction) or reter No. with Number Jays to specify where to more to.
Allians Free AS CC: EF Dr. CJC LINK DPD RCC UMY SCC. Switch fills
By User Code Control C
By Enail Address Treesers forcess forcess forcess forcess forces for the force force force for the force for

The user (destination) selected in step (5) moves to the place selected in step (6), and the keys for the other users will shift.

Address Book: Change O	rder						
Select user (destination)	or enter No. v	th Number ka	ys to move.		E		
All USES By User Code By E-mail Address	Free H C000022 DEV DEV C000073 ### Alex Alex	COCCESS AND Group 1		T000043 Frank T000103	0P0 RST 000003140 0000113 Ethel	<u></u> ∠ ∠ ∠	Switch Title Programed: 18/2100
						 :::	Edt

🖉 Note

□ You can select a user using the number keys.


Address Book: Edit Title

You can edit the title to find a desired user easily.

- ① Press the **[User Tools/Counter]** key.
- ② Press [System Settings].
- 3 Press [Key Operator Tools].
- ④ Press [Address Book: Edit Title].



③ Press the title key to be changed.

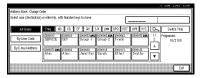

6 Enter the new name, and then press [OK].

⑦ Press [Exit].

Address Book: Select Title

Specifies the title to select a user.

🖉 Note

□ Default: *Title* 1

Auto Delete File

Specifies whether the documents stored in the document server are to be deleted or not after a specified period of time.

🖉 Note

- □ Default: Yes After 3 day(s)
- □ If you select Yes, the documents stored after this setting will be deleted.
- □ If you select No, documents will not be deleted automatically.
- □ If you select Yes, enter the number of days within the range of 1 180.
- □ The factory setting is 3 days, which means documents will be deleted 3 days (72 hours) after they are stored.

Delete All Files

All documents stored in document server will be deleted.

🖉 Note

- □ Even if a password has been set, all documents will be deleted.
- □ A confirmation dialog box will appear. To delete all documents, select **[OK]**.

Display Password with Stored File

Specifies whether the password for the documents stored in the document server is temporarily displayed or not.

🖉 Note

- □ Default: OFF
- □ Only when you forget the password, select **[Yes]**. After you confirm the password, be sure to return the setting to **[No]**.

Key Operator's E-mail Address

By registering the operator's E-mail Address, you can send an E-mail if problems arise. Specifies whether or not to use this function. The default setting is blank, the E-mail address is not installed.

AOF (Always ON)

Specifies to keep the Auto Off function ON.

🖉 Note

- □ Default: ON
- □ For details of this function, contact your service representative.

User Code

By registering user codes, you can limit users to particular functions and check their use of each function. By installing an optional external charge unit in the machine, you can summarize and manage data on each function and monitor function usage in more detail.

User codes can also be registered using SmartNetMonitor for Admin (printer option required). ⇒Network Printing Guide

The management and control items for each function are as follows:

Copier

When you set User Code Management, entering the user code is requested before using the Copy function. This enables you to limit users for each colour settings.

The number of copies for each colour settings is counted for each user code. So you can check the usage for each user.

🖉 Note

□ Select the colour in User Code Management. ⇒ p.86

Document Server

When you set User Code Management, entering the user code is requested before using the Document Server function. This enables you to limit the users of the Document Server.

The number of copies in Document Server mode is counted for each user code as the accumulated printings.

🖉 Note

□ Select the Document Server function in User Code Management. ⇒ p.86

Facsimile

When you set User Code Management, entering the user code is requested before using the Facsimile function. This enables you to limit the users of the facsimile transmission. The number of copies for the document stored in the document server in facsimile mode is counted for each user code. So you can check the usage for each user.

🖉 Note

□ Select the Facsimile function in User Code Management. ⇒ p.86

Printer

When you set User Code Management, you can print documents from the printer driver with the user code registered.

Black & White documents are counted as Black & White print, and documents which includes any of the colours are counted as colour print for each user code. You can check usage for each user.

🖉 Note

□ To register the user code of the printer driver automatically, select PC Control:ON for the printer in User Code Management. If you use the user code set in User Tools, select PC Control:OFF and set the user code for each colour. Set the user codes registered in User Tools for the printer driver ⇒ p.86.

Scanner

Limits users who can use the Scanner function and manages the use of each user code.


🖉 Note

□ Select the Scanner function in User Code Management settings (\Rightarrow p.86).

Important

□ The functions associated with each user code are the same. If you change or delete user codes, management data and limits of that code will become invalid.

Registering the New User Code

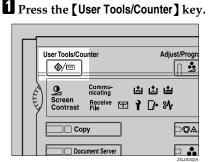



\$ User	Tools/Coun	iter/Inquir	у		Eef
ß	System Settings	D e	Copier/Document Server Features	·8ª	Français
Ца	system securgs	ø	Facsimile Features]	
	Maintenance	b	Printer Features] [i	inquiry
		6	Scanner Features	123	Counter



B Press [Key Operator Tools].

4 Press [Address Book Management].

5 Press [New Program].

Note

□ To register a user code to a registered user, press the user key whose user code is to be registered, or enter the registered number using the number keys.

6 Set the user information.

Note

□ To register a user code to a registered user, skip to step 7.

To register the user name and key name

1 Press [Change] on the right of the user name or key name.

The user name or key name entry dialog box appears.

2 Enter the user name or key name, and then press [OK].

Note

□ You can use the same user name as that assigned to the documents in document server mode. In this case, entry of the user code is not required. \Rightarrow p.53 "Document Server"

 \Rightarrow p.106 "Entering Text"

To select the title

Press the key for the classification you want to use from "Select Title".



🖉 Note

- The keys you can select are as follows:
 - [Freq.]... Added to the page that is displayed first.
 - [AB],[CD],[EF],[GH],[IJK],[LM N],[OPQ],[RST],[UVW],[XYZ]
 Added to the list of items in the title selected.
- □ You can only select one page for "Select Title".

7 Press [User Code].

8 Enter the user code using the number keys and then press [#].



🖉 Note

- □ If you make a mistake, press [Clear] or the [Clear/Stop] key, and then enter the code again.
- 9 Select the functions to be used with the user code from "Available Functions".

To continue registering user codes, press [Continue to Program], and then repeat the procedures from step **6**.



Press [OK].

Press [Exit].

Press the [User Tools/Counter] key.

Changing a User Code

- Press the [User Tools/Counter] key.
- **2** Press [System Settings].
- B Press [Key Operator Tools].
- 4 Press [Address Book Management].
- 5 Press [Program/Change].
- **6** Select the registered user code you want to change.

You can also enter the registered number using the number keys.

2 Enter the new information for the item you want to change.

To change the user (destination) name or key name

- Press [Change] on the right of the user (destination) name or key name.
- 2 Enter the user (destination) name, and press [OK].
 - $\begin{array}{c} & & \\ & & \\ & \Rightarrow p.106 \text{ "Entering Text"} \end{array}$

To change the title

Press the key for the classification you want to use from "Select Title".

Changing the user code

Press [User Code].

Press [Change], and then enter the new user code using the number keys.



3 Press [#].

To change the available functions

Press [User Code].

Press the key to select the functions to be enabled.

🖉 Note

- Press the key to make it highlighted, and the key will be enabled.
- 8 Press [OK].
- 9 Press [Exit].
- Press the [User Tools/Counter] key.

Clearing a User Code

Important

- □ This operation also deletes user codes registered for multiple functions. User control with the deleted user code will be disabled.
- Press the [User Tools/Counter] key.
- **2** Press [System Settings].
- B Press [Key Operator Tools].
- Press [Address Book Management].

To clear a user (destination)

Press [Delete].

Select the user (destination) you want to delete.

Press the user (destination) key, or enter the registered number using the number keys.

③ Press [Yes] in the confirmation screen.

To delete the user code

Select a user (destination) whose user code is to be deleted.

Press the user (destination) key, or enter the registered number using the number key.

- **2** Press [User Code].
- ③ Press [Change] to delete the user code, and then press [#].

Program/Change Address Bor	*				Continue to Program
► User Code	1111	Change			
 Available Functions 	Copier:	Fell Colour	Black & White	Single Colour	Two-colour
	Printer:	Celour	Black & White		
	Others:	Documen	t Sener	Facsir	nile TX
		Scar	ner		
Name	Jser Code E-ma	il Address Gro	φ	0	ncel OK

Press [OK].

5 Press [Exit].

6 Press the **[User Tools/Counter]** key.

Displaying the Number of Prints for Each User Code

You can check the number of prints for each function's user code.

Press the [User Tools/Counter] key.

2 Press [System Settings].

B Press [Key Operator Tools].

4 Press [Display/Clear/Print Counter per User Code].

5 Press [Print Counter].

The individual function counters for each user code are displayed.

Printing the Number of Prints for Each User Code

You can print out the number of prints for each user code using **[Copy Counter]** or **[Print Counter]**. Also, you can print out by using both of them together.

- Press the [User Tools/Counter] key.
- **2** Press [System Settings].
- B Press [Key Operator Tools].
- 4 Press [Display/Clear/Print Counter per User Code].

To print the number of prints for each user code

• Select a User Code from the left side of the display.

Select all on the page		ist, then select funct			
Select su cu die belle	Full Colour	Black & White	Single Colour	Two-colour	_
1111	000000	000000	000000	DDDDDD	► All User Codes
12345	000000	000000	000000	000000	Print Counter List Clear
2222	000000	000000	000000	DDDDDD	► Per User Code
					Buy Cewler List Clea
					1/ 1 APR: The

🖉 Note

- Press [Select all on the page] if you want to select all user codes on the page.
- Press [Print Counter List] of "Per User Code".



🖉 Note

Enter the user code, and then press [#] if the user code is registered.

To print the number of prints for all user codes

Press [Print Counter List] of "All User Codes".

Select all on the page		irst, then select fund			
24100 SLIDILLING belle	Full Colour	Black & White	Single Colour	Two-colter	
1111	000000	000000	000000	DDDDDD	► All User Codes
12345	000000	000000	000000	000000	Print Counter List Clear
2222	000000	000000	000000	DDDDDD	► Per User Code
	·				Port ConterList Crea
					1/ 1 APRS TRO

🖉 Note

 Enter the user code, and then press [#] if the user code is registered. **5** Press [Print Counter].

6 Press [Print].

Clearing the Number of Prints

1 Press the **[User Tools/Counter]** key.

- **2** Press [System Settings].
- B Press [Key Operator Tools].
- 4 Press [Display/Clear/Print Counter per User Code].
- **5** Select the User Code to clear.

To clear the number of prints for each user code

• Select a User Code from the left side of the display.



🖉 Note

- Press [All on The Page] if you want to select all user codes on the page.
- Press [Clear] for "Per User Codes".

						082 0102
Display/Clean/Print Count					Programed Co	des 3
Select all on the page	Select user code 1 Full Colour	rst, then select func Black & White	tion. Single Colour	Two-colter		
1111	000000	000000	000000	DDDDDD	All User Codes Print Counter List	Clear
12345	000000	000000	000000	000000		Ciear
2222	000000	000000	000000	DDDDDD	Per User Code	
					Print Counter List	Clear
					1/ 1 APRY.	
Copy Counter	Print	Counter	Transmission Court	er 🛛 Scano	er Counter	Edt

To clear the number of prints for all user codes

Press [Clear] for "All User Codes".

	n Select user code t	irst, then select fund	tion.		
Select all on the page	Full Colour	Black & White	Single Calour	Two-colour	
1111	000000	000000	000000	DDDDDD	► All User Codes
12345	000000	000000	000000	000000	Print Counter List Clear
2222	000000	000000	000000	DDDDDD	► Per User Code
	·				Biol CoulerList Clea
					1/ 1 APR: TR

6 Press [Print Counter].

7 Press [Print].

5


E-mail Destination

By registering an E-mail destination, you can send scanned documents by E-mail.

- It is easy to select the E-mail destination if you register "User (Destination) Name" and "Key Display" for the E-mail destination.
- You can register an E-mail destination as a group.
- You can use the E-mail destination as the Sender's address. In this case, you can set a password in order to prevent the use of other people.

E-mail destinations can also be registered using SmartNetMonitor for Admin (printer option required). ⇒Network Printing Guide

Registering an E-mail Destination

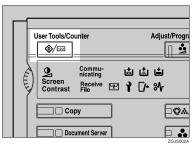

Press the [User Tools/Counter] key.

2 Press [System Settings].

\$ User	Tools/Coun	ter/Inquir	у		Edi
CA.	System Settings	Qe	Copier/Document Server Features		Français
0.9	oyoten oekings	60	Facsimile Features		
	Maintenance	Ð	Printer Features] [i	inquiry
		6	Scatter Features		Counter

- B Press [Key Operator Tools].
- Press [Address Book Management].
- 5 Press [New Program].

🖉 Note

To register an E-mail address to a registered user, press the user key you want to register, or enter the registered number using the number keys.

6 Set the user's information.

 User (Destination) Name 		Ch	ange		istration No				
► Key Display		Ch	arge	00	003	Change			
► Select Title	The 1:	FID: AB	CD E	F DH	IJK L	N OPO	RST	UVI	XYZ
	Title 2:	Feq. 1	2	1	5	7	8	3	10
	Title 3:	Fred.	1	2	3	1	1	5	

🖉 Note

- To register an E-mail address to a registered user, skip to step 2.
- Registration No. will automatically be set to the minimum number which is not used.

To register the user (destination) name and key name

Press [Change] on the right of the user (destination) name or key name.

The user (destination) name or key name entry dialog box appears.

Enter the user (destination) name or key name, and then press [OK].

🖉 Note

- □ You can use the user name when selecting an address to send an E-mail to.
- □ You can register the user code following the user name. For more details, refer to "User Code" ⇒ p.92.

 \Rightarrow p.106 "Entering Text"

To select the title

• To classify the user with the title, press the title key from "Select Title".

🖉 Note

- The keys you can select are as follows.
 - [Freq.]... Added to the page that is displayed first.
 - [AB], [CD], [EF], [GH], [IJK], [LMN], [OPQ], [RST], [UVW], [XYZ],... Added to the list of items in the title selected.
- You can only select one page for "Select Title".

7 Press [E-mail Address].

B Press [Change] on the right of the "E-mail Address".

Program, Change Address Boo	k.	
► E-mail Address		Change
 Register as Sender 	OFF ON	
 Sender's Password 	08F (3N	
 Enter Password 	Chorage	
Name L	ker Code E-meil Address Group	Cancel OK

The E-mail address entry dialog box appears.

9 Enter the E-mail address.

🖉 Note

- You can use the E-mail address as the Sender's address. In this case, you can set a password in order to prevent the use of other people.
- E-mail address can be set in "name" or "name@domain" form. You can enter up to 128 characters for one address. Enter more than one character from the followings:
 - Numerals
 - Alphabets (uppercase and lowercase)
 - Symbols (! # \$ % & ' * + / = ? ^ _ ` { | } ~)
 - periods

You cannot enter periods continuously, or as the first or the last character.

 \Rightarrow p.106 "Entering Text"

Using as a sender

• Press [ON] on the right of "Register as Sender".

Setting a password

- Press [ON] on the right of "Sender's Password".
- **2** Press [Change] on the right of the "Enter Password".
- Enter the password using the number keys and then press [#].


10 Press [OK].

🖉 Note


□ When a group is registered, other E-mail destinations can be added to the group. (⇒ p.103 "Registering the E-mail Destinations to a Group")

Changing a Registered E-mail Destination

Press the [User Tools/Counter] key.

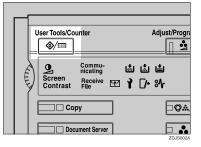

2 Press [System Settings].

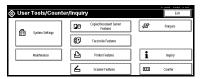

B Press [Key Operator Tools].

Press [Address Book Management].

The registered user list appears.

5 Select the user of the registered Email address you want to change.

Press the user key you want to change, or enter the registered number using the number keys.




- 6 Press [E-mail Address].
- **7** Enter the items.

To change the E-mail address

- Press [Change] on the right of the E-mail address.
- 2 Enter the E-mail address, and then press [OK].
 - PReference
 - \Rightarrow p.106 "Entering Text"

To change the password

Press [Change] on the right of the password.

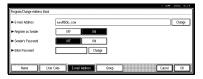

Enter the new password using the number keys and then press [#].


8 Press [OK].

🖉 Note


- □ To change the user name, refer to ⇒ p.94 "To change the user (destination) name or key name".
- □ To clear the user name, refer to ⇒ p.95 "To clear a user (destination)"

Clearing a Registered E-mail Address

Press the [User Tools/Counter] key.

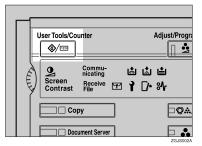

2 Press [System Settings].

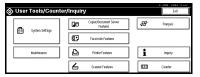




B Press [Key Operator Tools].


Press [Address Book Management].


To clear only the E-mail address

Select the user of the E-mail address you want to clear.

Press the user key you want to clear or enter the registered number using the number keys.

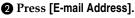

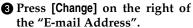

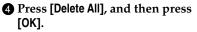

To clear all user information

Press [Delete].

2 Select the user you want to clear.

Press the user key you want to clear or enter the registered number using the number keys.

3 Press [Yes].

5 Press [Exit].

Registering E-mail Destinations to a Group

Registered groups can be used as followings:


- To easily control registered E-mail destinations for each group.
- To send the same messages to multiple addresses in a group.

To divide E-mail destinations into groups, the groups must be registered beforehand.

E-mail destinations can also be registered into groups using SmartNetMonitor for Admin (printer option required). ⇒Network Printing Guide

Registering a New Group

Press the [User Tools/Counter] key.

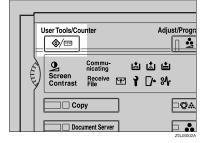

2 Press [System Settings].

User Tools/Count	er/Inquiry	Ed
यित्रे System Settings	Copier/Document Server Features	ç⊖* Fançais
Dial oforen security	Facsimile Features]
Maintenance	Printer Features	i inquiry
	Scanner Features	Counter

3 Press [Key Operator Tools].

4 Press [Address Book: Program/Change /Delete Group].

5 Press [New Program].

6 Press [Change] on the right of the Group Name.

 Group Name 		Change Pegistratia											
► Key Display	Charge 00005 Charge												
► Select Title	The 1:	Freq.	AB	CD	EF	QН	IJK	LMN	OPO	RST	UVI	XYZ	
	Title 2:	Freq.		2	3	4	5	8	7	8	8	10	
	Title 3:	Fred.				2				1		5	

- **2** Enter the group name, and press [OK].
- 8 When you want to change the key name, press [Change] on the right of the key name. Enter the key name and then press [OK].


The Key Display name is automatically set.

- Press the keys of "Select Title" to classify the group. Go to step **()** if you do not need to classify.
- Press [OK].


Registering the E-mail Destinations to a Group

🖉 Note

When registering new E-mail destinations, you can also register groups at the same time.

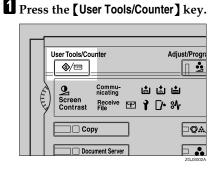



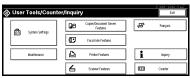



B Press [Key Operator Tools].

Press [Address Book Management].


- **5** Press the user (destination) key which you want to register in a group.
- 6 Press [Group].

2 Select a group to which you want to register the E-mail destinations.

Program,Change Address Book	
Select group(s) to program. Group(s) assigned: O	
Croup 1 Group 2	Atch Title Programad: 2/100 toolion No. A T
Name User Code E-mail Address Group	Cancel

Deleting an E-mail Destination from a Group

Press the [User Tools/Counter] key.

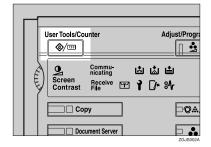

2 Press [System Settings].

User Tools/Count	er/Inquiry	e ouv zona nu z Exit
ित्री System Settings	Copies/Document Server Features	🕫 Français
Col System Security	Facsimile Features	
Maintenance	Printer Features	i inquiry
	Scamer Features	Counter

- B Press [Key Operator Tools].
- Press [Address Book Management].
- **5** Select the user (destination) to delete from a group.

Press the user (destination) key which you want to delete or enter the registered number using the number keys.

- 6 Press [Group].
- **7** Press the highlighted group key.



The user is deleted.


8 Press [OK].

8 Press [OK].

Displaying the E-mail Destinations

You can confirm the user (destination) of each group.

Press the [User Tools/Counter] key.

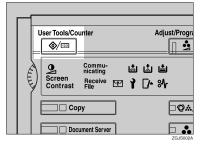

2 Press [System Settings].

🐼 User Tools/Counter	r/Inquir	у			Ext
यित्री System Settings	Qe	Copier/Document Server Features		ф°	Français
- Jone acuto	Ø	Facsimile Features]		
Maintenance	Ъ	Printer Features]	i	inquiry
	6	Scamer Features]	123	Counter



B Press [Key Operator Tools].

- Press [Address Book: Program/Change /Delete Group].
- **5** Select a group where the data you want to confirm is registered.

6 Press [Programed Users].


All the user names (E-mail destinations) are displayed.

 Group Name 	Group 1		Ch	rçe		► Regi				_		
► Key Display	Group 1		Ch	rçe		00	005		Change			
► Select Title	The 1:	Freq.	AB	CD	EF	QH	IJK	LMN	OPO	RST	UVI	XYZ
	Title 2:	Freq.		2	8	4	5	6	7	8	3	10
	Title 3:	Fred.	1	1		2			· ·	1		

Press [OK].

Deleting a Group

Press the [User Tools/Counter] key.

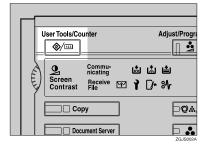


2 Press [System Settings].

🗞 User Tools/Counte	r/Inquiry	Ed
System Settings	Copier/Document Server Features	ç⊖* Français
Di ologija garado	Facsimile Features	
Maintenance	Printer Features	i inquiry
	Scanner Features	Counter

- **3** Press [Key Operator Tools].
- 4 Press [Address Book: Program/Change /Delete Group].
- 5 Press [Delete].
- **6** Press the group key you want to delete.
- 7 Press [Yes].

Changing a Group Name

Press the [User Tools/Counter] key.

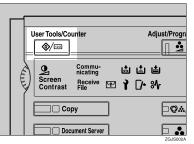

2 Press [System Settings].

🗞 User Tools/Count	er/Inquiry	Bet
System Settings	Copier/Document Server Features	🖓 Français
Dill ologi seculo	Facsimile Features	
Maintenance	Printer Features	1 inquiry
	Scamer Features	Counter

B Press [Key Operator Tools].

4 Press [Address Book: Program/Change /Delete Group].

Press the group key you want to change.

6 Press [Change] on the right of the group name.

2 Enter the new group name, and then press [OK].

Program/Change Group									2 000		0.03
 Group Name 	Group 1	0	arçe		► Reg						
► Key Display	Group 1	a	arçe		00	005		Change			
► Select Title	Title 1:	East. AB	CD	EF	ШH	IJK	LMN	OPO	RST	Uni	XYZ
	Title 2:	Freq. 1	2	\$	4	5	6	7	8	3	10
	Title 3:	Freq.	1		2		1		1		
Group Name	Programed Users			H				C	Cancel	JC	Ж

8 Press [OK].

The group name is changed.

Entering Text


This section describes how to enter characters. When you enter a character, it is shown at the position of the cursor. If there is a character at the cursor position, the entered character is shown before that character.

Available Characters

- Alphabetic characters
 ABCDEFGHIJKLMNOPQRSTUVWXYZabcdefghijklmnopqrstuvwxyz
- Symbols
- Numerals 0123456789

Keys

5

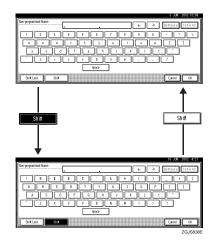

🖉 Note

□ When entering uppercase or lowercase letters continuously, use [Shift Lock] to lock the case.

How to Enter Text

Entering letters

1 Press [Shift] to switch between uppercase and lowercase.

2 Press the letters you want to enter.

Deleting characters

Press [Backspace] or [Delete All] to delete characters.

6. Troubleshooting

If Your Machine Does Not Operate as You Want

General

Machine Status	Problem/Cause	Action
Please wait.	This message appears when you turn on the oper- ation switch or change the toner bottle.	Wait for the machine to get ready.
The display panel is off.	The screen contrast knob is turned to the dark position.	Set the screen contrast knob to the light position for proper viewing of the display panel.
	The machine is in Panel Off mode or Energy Saver mode.	Press the [Energy Saver] key to can- cel Energy Saver mode.
	The operation switch is turned off.	Turn on the operation switch.
Nothing happens when the operation switch is turned on.	The main power switch is turned off.	Turn on the main power switch.
Memory is full.	The number of scanned pages, the number of files, or capacity of the hard disk has exceeded.	Press [Delete File] to delete unneces- sary documents.
The function status indica- tor is red.	The function associated with the red indicator has been interrupted.	Press the function key correspond- ing to the indicator. Follow the in- structions displayed in the operation panel.
The user code entry dialog box is displayed.	Users are restricted by user management.	Enter the user code (up to 8 digits), and press [#] .
"Self checking.", "Colour is being adjusted." appears.	The machine is preforming image adjustment opera- tions.	The machine may perform periodic maintenance during operations. The frequency and duration of mainte- nance depends on the humidity, temperature, and printing factors such as number of prints, paper size, and paper type. Wait for the machine to get ready.

Machine Status	Problem/Cause	Action
The main power indicator continues blinking and does not turn off when pressed.	 This occurs in the following cases: The exposure glass cover or document feeder (ADF) is open. The machine is in communication with external equipment. The hard disk is in operation. 	Wait till the blinking stops, and then turn off the operation switch.
The original images are printed on the reverse side of the paper.	You may have loaded the paper incorrectly.	Load paper into trays 1, 2, 3, and 4, and the large capacity tray with the print side up, or into a bypass tray with the print side down. \Rightarrow p.113 " Loading Paper"
Misfeeds occur frequently.	The tray's side guides may not be locked.	Check that the side guides are locked. \Rightarrow p.124 "Changing the Pa- per Size"
	The tray's end guide may not be locked.	Check that the end guide is locked. \Rightarrow p.124 "Changing the Paper Size"
	You may have loaded pa- per whose size cannot be detected automatically.	When you use paper of a size that cannot be detected automatically, set the paper size. \Rightarrow p.74 "Tray Pa- per Size: (Tray 1–4)" \Rightarrow p.157 "Copy Paper"
An error message remains, even if misfed paper is re- moved.	When a misfeed message appears, it remains until you open and close the cov- er, as required.	Clear misfed paper and open and close the front cover. ⇒ p.118 " % Clearing Misfeeds"
Cannot print in duplex mode.	You cannot use the paper in the bypass tray for du- plex printing.	For duplex printing, select Tray 1 - 4 in Copier mode or with the printer driver.
	If you select thick paper, thick dup. back paper, OHP or label paper as the paper type, duplex print- ing is disabled.	Select another paper type. ⇒ p.74 "Tray Paper Size: (Tray 1–4)"
	The setting for the Paper Type: Tray 1-4 is "1 Side copy".	Select "2 Sided copy" for Paper Type:Tray 1-4 ⇒ p.75 "Paper Type:Tray1-4"

Problem	Action
Colours are missing in some parts.	Perform [Clean / Adjust] in the Maintenance menu. See ⇒ p.141 "Cleaning and Adjusting Internal Parts".
White lines appear.	Clean the dustproof glass. See \Rightarrow p.141 "Cleaning the Dustproof Glass".
	Perform [Clean / Adjust] in the Maintenance menu. See ⇒ p.141 "Cleaning and Adjusting Internal Parts".
Colour lines appear.	Perform [Clean / Adjust] in the Maintenance menu. See ⇒ p.141 "Cleaning and Adjusting Internal Parts".

Printing Problems

Document Server

Problem	Action			
"Scanned pages exceeded max. number. Do you want to store the scanned pages as a file?"	The number of scanned pages exceeds the ca- pacity per file of the Document Server.			
appears.	If you want to store scanned originals as a file, press [Store File] . The originals are stored as a file in the Document Server. If you don't want any scanned originals to be stored, press [No] . The scanning data will be cleared.			
You forgot your password.	You can confirm your password.			
	Press [ON] temporarily for "Display Password with Stored File" in the User Tools. You can check the password when you have selected the file. \Rightarrow p.91 "Display Password with Stored File"			
	You can delete all the saved documents at once with the User Tools. \Rightarrow p.91 "Delete All Files"			
	Make sure that no important documents are saved in the Document Server before deleting all saved documents.			
You cannot find out what is saved in a file.	Check the date or time column in the "Docu- ment Server: Files" display.			
	Check the contents of the document by print- ing the first page of it. Press the line for the de- sired document in the "Document Server: Files" display, and press [Print 1st Page] fol- lowed by the [Start] key.			
Memory becomes full frequently.	Press [Delete File] to delete selected documents, thereby increasing available memory.			
You want to check print quality before making a large print run.	Check print quality by printing out only the first set using the [Sample Copy] key.			
You want to save documents so they will not be deleted automatically.	Turn "Auto Delete File" off, and then save the documents in the Document Server. \Rightarrow p.91 "Auto Delete File"			
	If you turn on "Auto Delete File" after, the function is only applied to subsequent documents.			
"Cannot copy. Original is being scanned by other functions." appears.	The Copy function is in use. To cancel the job in process, first press [Exit]. and then press the [Copy] key. Next press the [Clear/Stop] key. When the message " [Stop] was pressed. Stop printing?" appears, press [Stop] .			

Loading Paper


Reference

Regarding Paper types and sizes, \Rightarrow p.157 "Copy Paper".


Loading Paper in Tray 1 and 2

🖉 Note


- □ You can change the paper size \Rightarrow p.124 "Changing the Paper Size".
- Pull out the paper tray slowly until it stops.

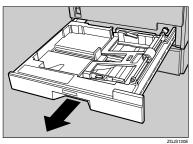

2 Lower the base panel by pushing "Push". When paper is set in the tray, push down on the paper.

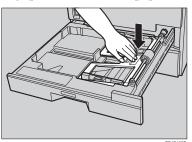

3 Load paper into the tray with the print side up.

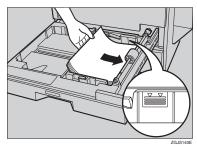


∰Important


- Confirm that the top of the stack is not higher than the limit mark inside the tray.
- 4 Slide the paper tray into the printer carefully until it stops.

Loading Paper in Tray 3 and 4 (option)

1 Pull out the paper tray slowly until it stops.

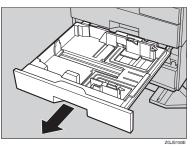

2 Load paper into the tray with the print side up.

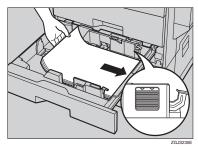

Important


- Check that the top of the stack is not higher than the limit mark inside the tray.
- **3** Slide the paper tray into the printer carefully until it stops.

Loading Paper in the Large Capacity Tray (option)


🖉 Note

Load copy paper of the same size and direction in both left and right side trays.

1 Pull out the large capacity tray.

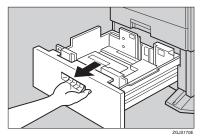

2 Align the paper and load it in the tray with the print side up.

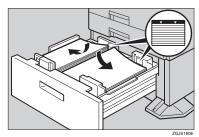

Important

- Align the right edge of the right copy paper stack to the right edge of the tray.
- □ Align the left edge of the left copy paper stack to the left edge of the tray.
- Do not stack paper over the limit mark.

🖉 Note

- □ Shuffle the paper before loading it in the tray.
- Straighten curled or warped paper before placing it in the tray.
- **B** Push the paper tray in until it stops.

📩 Adding Toner

When 📩 is displayed, it is time to add toner.

🛆 WARNING:

 Do not incinerate used toner or toner containers. Toner dust might ignite when exposed to an open flame. Dispose of used toner containers in accordance with local regulations.

A CAUTION:

• Keep toner (used or unused) and toner containers out of reach of children.

Important

- □ If you use toner other than that recommended, an error might occur.
- □ When adding toner, do not turn off the operation switch.
- □ Always add toner after the machine instructs you.
- Do not install and remove the toner cartridges over and over. This could result in a toner leak.
- Do not shake the removed toner cartridge. The remaining toner might scatter.

🖉 Note

- □ You can still make about 50 copies after the messages "▲ Toner is almost empty.", "Replace Toner Cartridge(s).", and "Black, Yellow, Magenta, Cyan" appear cyclically, but replace toner early to prevent poor copy quality.
- Change all four colour-toner cartridges in the same way.
- □ If "Toner Cartridge is not set properly." appears, slide the toner cartridge back and forth twice, and push it until it stops.
- The consumption of toner depends on the humidity, temperature and printing factors such as image size, density, number of prints, paper size, and paper type. Moreover, to preserve print quality, this machine automatically performs periodic maintenance using the toner.

✓ Reference


Regarding toner storage, \Rightarrow p.137 "Toner Storage".

6

Removing Toner





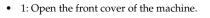

• 2: Pull the lever and open the green cover.

• 3: Gently pull out the toner cartridge.



Inserting Toner



• 1: Hold a new cartridge and shake it 10~12 times.

🖉 Note

- Do not touch the "metal contact point" of the cartridge, or it may be damaged.
- 2: Insert the cartridge horizontally, and gently push it in completely.
- 3: Close the green cover.
- 4: Close the front cover of the machine.





ZGJS792E-03

6

% Clearing Misfeeds

A CAUTION:

• The fusing section of this machine might be very hot. Caution should be taken when removing misfed paper.

Important

- When clearing misfeeds, do not turn off the operation switch. If you do, your copy settings are lost.
- □ To prevent misfeeds, do not leave any torn scraps of paper inside the machine.
- □ If paper misfeeds occur repeatedly, contact your service representative.

🖉 Note

- □ More than one misfeed area may be indicated. In such cases, check every applicable area. See the following charts: A, B, C, D, P, R, Y, Z
- You can find a sticker explaining how to remove misfed paper inside the front cover or inside the finisher.

Checking paper jams around the heating roller

Generally, the orange heating roller should be visible when you open the right side cover. Check it once in a while, and if you find any misfed paper, call your service representative.



- 2 Contraction
- 3

• 1: Open the Duplex unit.

• 2: Open the right cover.

3: See if there is any misfed paper inside.

D When D is lit



1. Open the Bridge unit cover.



2. Remove the misfed paper.





3. Close the cover.



4. If you cannot remove the misfed paper, open the right cover of the Bridge unit.



- 5. Remove the misfed paper
- 6. Close the cover.

B When B is lit



1. Open the Duplex unit and the front cover of the machine.



4. To remove the paper from the top feed,slowly turn the blue dial to the left or right and remove the paper.

🔗 Note

- If you cannot see the paper, look at the right side of the machine from a lower angle.
- If you still cannot remove the paper, contact your service representative.



3. Remove the misfed paper.



 Close the Duplex unit.

6. Close the front cover of the machine.

C When C is lit 1. Open the Duplex unit 2. Open the right cover. 3. Open the upper right 4. Slowly turn the blue and the front cover of cover. dial to the left or right the machine and remove the misfed paper. 🔗 Note □ If you cannot see the paper,look at the right side of the machine from a lower angle. □ If you still cannot remove the paper, 5. If you cannot remove contact your service the misfed original, representative. turn the blue dial to the left and remove the misfed paper from the internal tray. 6. Close the Duplex unit A When A is lit and front cover of the machine. D 1. Open the upper right 2. Remove the misfed cover and the front paper. cover of the machine. Ά (Y) When Y is lit 1. Open the right cover. 2. Remove the misfed paper. 3. Close the cover.

You can make an enlarged copy of this page and stick it on the walls.





 Open the cover of the auto document feeder (ADF) and remove the misfed original.



2. Lift the lever.



3. Open the cover and remove the misfed original.




 If you cannot remove the misfed original, open the ADF external cover and remove the misfed original.



Open the auto document feeder (ADF).



Pull the green lever in the upper left corner and remove the misfed original.

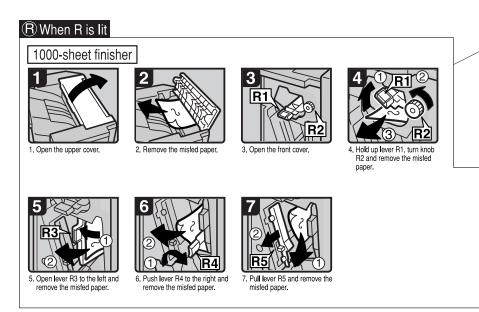

Z When Z is lit



 Open the Duplex unit cover and remove the misfed paper.




 Open the Duplex unit and the front cover of the machine.



3. Raise the cover Z.



 Remove the misfed original and close the unit.

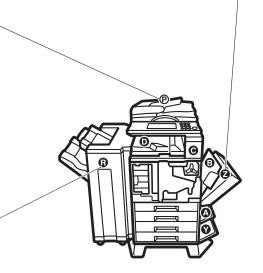



Changing the Paper Size

Preparation

Be sure to select the paper size with the user tools. Otherwise, misfeeds might occur. \Rightarrow p.74 "Tray Paper Size: (Tray 1–4)"


∰Important

- If you wish to change the paper size set in the optional large capacity tray (LCT), contact your service representative.
- □ The procedures for changing the paper size are different depending on the tray (paper tray 1, paper tray 2 or the optional paper tray units). Check that you are following the appropriate procedure before you start.


For paper sizes, and types \Rightarrow p.157 "Copy Paper".

Changing the Paper Size of Tray 1 and 2


Pull out the paper tray slowly until it stops.

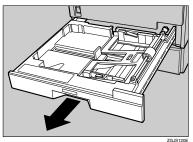


2 Lower the base panel by pushing "Push". When paper is set in the tray, push down on the paper.

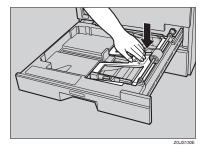


- **B** When paper is set in the tray, remove them.
- 4 Set the paper guide lock to the "unlocked" position.

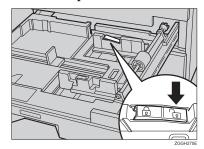


5 Pushing the green lever of the side guide (①), move the side guide toward you to open it (②).

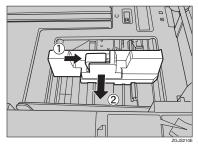

6 Pinching both sides of the end guide (①), move the end guide in the direction of the arrow (②) to open it.

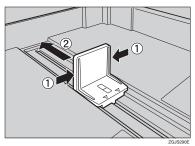


2 Load paper into the tray with the print side up.

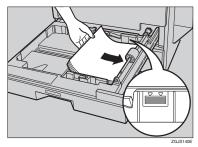


∰Important


Confirm that the top of the stack is not higher than the limit mark inside the tray. B Pushing the green lever of the side guide (①), move the side guide toward the paper stack until it stops (②).

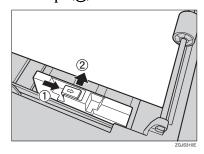

9 Confirm that the paper is fixed in place, and then lock the side guides.

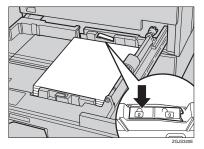

Pinching both sides of the end guide (①), move the end guide toward the paper stack until it stops (②).

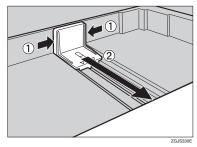


1 Slide the paper tray into the printer carefully until it stops.


6

Changing the Paper Size of Tray 3 and 4 (option)


1 Pull out the paper tray slowly until it stops.

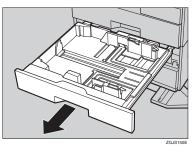


- **2** When paper is set in the tray, remove them.
- Set the paper guide lock to the "unlocked" position.

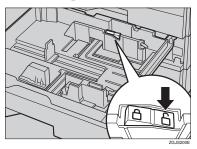


Pushing the green lever of the side guide (①), move the side guide toward you to open it (②).

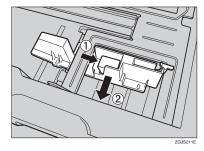

5 Pinching both sides of the end guide (①), move the end guide in the direction of the arrow (②) to open it.

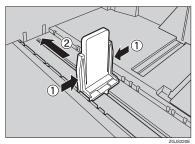


6 Load paper into the tray with the print side up.

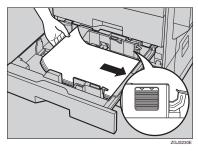


₿Important


Confirm that the top of the stack is not higher than the limit mark inside the tray. Pushing the green lever of the side guide (①), move the side guide toward the paper stack until it stops (②).

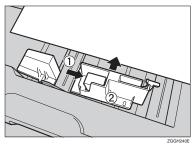

8 Confirm that the paper is fixed in place, and then lock the side guides.

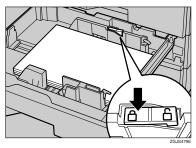

Pinching both sides of the end guide (①), move the end guide toward the paper stack until it stops (②).

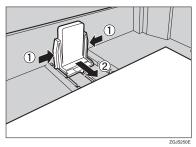


D Slide the paper tray into the printer carefully until it stops.

Specifying Custom Paper Size

To use paper of a custom size, follow the procedure below to specify the custom paper size.

Press the [User Tools / Counter] key.

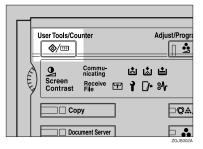

2 Press [System Settings].

User Tools/Count	er/Inquiry	Edit
ति System Settings	Copier/Document Server Features	🖓 Français
Col System Security	Facsimile Features	
Maintenance	Printer Features	i inquiry
	Scamer Features	Counter

3 Press [Tray Paper Settings].

🗟 System	Eet				
ielect one of the tolkre	ing detauit settings.				
General Features	Tray Paper Settings	Timer Setting	Interface Settings	File Transfer	Key Operator Tools
Panel Tone		ON	Function Reset Timer		3 seconds
Warm Up Notice		ON	0	Output: Capier	
Copy Court Display		Up	Output:	Output: Document Server	
Function Priority		Copier	Output: Facsimile		Internal tray 1
Print Priority		Display mode	0	dput: Printer	Intenal tray I

- 4 Select the tray to customize the paper size.
- **5** Press [Custom Size] on the "Tray Paper Size" display.

System Se TrayPaper Sin: Tray 1									
Select one of the following di	elect item, then press [OK].								
General Features Tra	Ado Detect	AL2	ASC2	16803					
Paper Tray Priority:	CICA	BS JIS 🕽	HICO	1/2					
Paper Tray Priority	B4 JISC2	85 JISCA	802	▲ Previous					
	A4 🖓	AS D	16K 🖓	Viesd					
	Oustom Size	1	- 🕨 - Chicego Sice						
				Cancel OK					
				Cancel OK					

6 Press [Vertical] or [Horizontal] to specify the vertical or horizontal size respectively. Then enter the size with the number keys, and then press [#].



🖉 Note

□ To correct the entered value, press [Clear], and then enter the correct value.

7 Press [OK].

- 8 Press [EXIT].
- Press the [User Tools / Counter] key.

📩 Adding Staples

∰Important

□ If you use a staple cartridge other than that recommended, staple failure or staple jams might occur.

PReference


For the type of finisher, refer to "External Options" \Rightarrow p.21.

500-Sheet Finisher







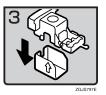



GJS798E


• 1: Open the side cover.

• 2: Remove the cartridge.

• 3: Take out the empty refill in the direction of the arrow.

• 4: Push in the new refill until it clicks.

6

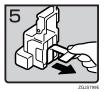



• 5: Pull out the ribbon.

- 6: Reinstall the cartridge.
- 7: Close the side cover.

1000-Sheet Finisher








• 1: Open the front cover of the finisher and pull out the staple unit.

• 2: Hold the green lever and pull out the cartridge gently.

- 3: Hold both sides of the cartridge.
- 4: Pull up the upper unit of the cartridge.





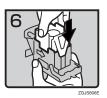





- 5: Take out the empty refill in the direction of the arrow.
- 6: Align the arrows on the new refill and the cartridge, and then push in the refill until it clicks.
- 7: Push down the upper unit into the cartridge gently.

- 8: Pull out the ribbon.
- 9: Hold the green lever and reinstall the cartridge until it clicks.
- 10: Push back the staple unit and close the front cover of the finisher.

6

💩 Removing Jammed Staples

🖉 Note

- □ Staples might jam because of curled copy paper. In such a case, try turning the copy paper over in the tray. If there is no improvement, change to a copy paper with less curl.
- □ When the 500-Sheet Finisher is installed, after removing jammed staples, staples might not be ejected the first few times you try to use the stapler.

PReference

For the type of finisher, refer to "External Options" \Rightarrow p.21.

500-Sheet Finisher



• 1: Open the side cover.







ZGJS811E

• 2: Remove the cartridge.

• 3: Open the face plate.

• 4: Remove jammed staples.



- 5: Reinstall the cartridge.
- 6: Close the side cover.

1000-Sheet Finisher









ZGJS814E

• 1: Open the front cover of the finisher and pull out the staple unit.

• 2: Hold the green lever and pull out the cartridge gently.

• 3: Open the face plate of the cartridge.

• 4: Remove jammed staples.





- 5: Pull down the face plate of the cartridge until it clicks.
- 6: Hold the green lever and reinstall the cartridge until it clicks.
- 7: Push back the staple unit and close the front cover of the finisher.

7. REMARKS

Do's And Don'ts

A CAUTION:

• Unplug the power cord from the wall outlet before you move the machine. While moving the machine, you should take care that the power cord will not be damaged under the machine.

Important

- □ If you want to unplug the power cord or turn off the main power switch, make sure that the remaining memory space indicates 100% on the display for facsimile mode.
- While the machine is unplugged, you can neither send nor receive a fax.

For details, see the Facsimile Reference.

- When you use this machine for a long time in a confined space without good ventilation, you may detect an odd smell. To keep the workplace comfortable, we recommend that you keep it well ventilated.
- Do not touch areas on or around the fusing unit. These areas get hot.
- After making copies continuously, the exposure glass may become warm—this is not a malfunction.
- The area around the ventilation hole might feel warm. This is caused by exhaust air and is not a malfunction.

- Do not turn off the operation switch while copying or printing. Make sure that all copying or printing has finished.
- The machine might fail to produce good copy images if condensation forms inside due to rapid temperature change.
- Do not open the covers of the machine while copying or printing. If you do, misfeeds might occur.
- Do not move the machine while copying or printing.
- If you operate the machine improperly or a failure occurs with the machine, your machine settings might be lost. Be sure to make a note of your machine settings.
- The supplier shall not be liable for any loss or damage resulting from a failure with the machine, loss of machine settings, or use of the machine.

Saving Colour Copies

- There is no difference between colour prints and colour copies in terms of fading. However, for long-term storage, make sure to store them in a binder away from direct sunlight.
- Toner may melt if a print and a half-dried print are put on top of each other.
- Toner may also melt when using solvent type adhesive agents for pasting prints.
- When folding prints, toner in the folds will come off.
- Toner may melt if it is placed on mats made of chlorinated plastic in locations of high temperature for long periods of time.
- Toner may melt if prints are placed in places of extremely high temperatures, such as near heaters.

Toner

Handling Toner

\land WARNING:

• Do not incinerate used toner or toner containers. Toner dust might ignite when exposed to an open flame. Dispose of used toner containers in accordance with local regulations.

A CAUTION:

• Keep toner (used or unused) and toner containers out of reach of children.

Important

□ If you use toner other than the recommended type, a fault might occur.

Reference

If you want to add toner. \Rightarrow p.115 "📩 Adding Toner"

Toner Storage

When storing toner, the following precautions should always be followed:

- Store toner containers in a cool, dry place free from direct sunlight.
- Store on a flat surface.

Used Toner

🖉 Note

□ Toner cannot be re-used.

Where to Put Your Machine

Machine Environment

Your machine's location should be carefully chosen because environmental conditions greatly affect its performance.

Optimum environmental conditions

A CAUTION:

- Keep the machine away from humidity and dust. Otherwise a fire or an electric shock might occur.
- Do not place the machine on an unstable or tilted surface. If it topples over, an injury might occur.

A CAUTION:

- If you use the machine in a confined space, make sure there is a continuous air turnover.
- Temperature: 10 32°C (50 89.6°F)(humidity to be 54% at 32°C, 89.6°F)
- Humidity: 15 80% (temperature to be 27°C, 80.6°F at 80%)
- A strong and level base.
- The machine must be level within 5mm, 0.2" both front to rear and left to right.
- To avoid possible buildup of ozone, be sure to locate this machine in a large well ventilated room that has an air turnover of more than 30 m³/hr/person.

Environments to avoid

- Locations exposed to direct sunlight or strong light (more than 1,500 lux).
- Locations directly exposed to cool air from an air conditioner or heated air from a heater. (Sudden temperature changes might cause condensation within the machine.)
- Locations close to machines generating ammonia such as a diazo copy machine.
- Places where the machine might be subjected to frequent strong vibration.
- Dusty areas.
- Areas with corrosive gases.

Moving

A CAUTION:

 Unplug the power cord from the wall outlet before you move the machine. While moving the machine, you should take care that the power cord will not be damaged under the machine.

#Important

- □ If you move the machine, you must be careful. Keep the following in mind:
 - Turn off the main power
 - Unplug the power cord from the wall. When you pull out the plug from the socket, grip the plug to avoid damaging the cord and causing fire or electric shock.

• Close all covers and trays including the front cover and bypass tray.

Limitation

- Carefully move the machine. If you do not, the machine might be damaged or a stored file might be deleted.
- □ Do not take off the holding stand.
- Protect the machine from strong shock. This could damage the hard disk and cause stored files to be deleted. As a precautionary measure, files should be copied to another computer.

Power Connection

A WARNING:

- Connect the machine only to the power source described on the inside front cover of this manual. Connect the power cord directly into a wall outlet and do not use an extension cord.
- Do not damage, break or make any modifications to the power cord. Do not place heavy objects on it. Do not pull it hard nor bend it more than necessary. These actions could cause an electric shock or fire.

A CAUTION:

• Unplug the power cord from the wall outlet before you move the machine. While moving the machine, you should take care that the power cord will not be damaged under the machine.


A CAUTION:

• When you disconnect the power plug from the wall outlet, always pull the plug (not the cable).

- When the main switch is in the Stand-by position, the optional anti-condensation heaters are on. In case of emergency, unplug the machine's power cord.
- When you unplug the power cord, the anti-condensation heaters turn off.
- Make sure that the plug is firmly inserted in the outlet.
- Voltage must not fluctuate more than 10%.
- The socket-outlet should be installed near the equipment and should be easily accessible.

Access to the Machine

Place the machine near the power source, providing clearance as shown.

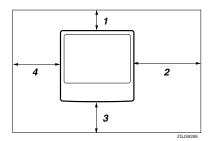

- **1.** Rear ^{*1}: more than 10 cm (4")
- 2. Right: more than 55 cm (22")
- 3. Front: more than 75 cm (29.6")
- 4. Left: more than 10 cm (4")
- ^{*1} The space required at the rear is from the outside of the ventilation holes to the wall.

🖉 Note

□ For the required space when options are installed, contact your service representative.

Maintenance

If the machine is dirty, you might not be able to make clean copies and prints. Clean the following parts when you find them dirty.


Cleaning the machine

Wipe the machine with a soft, damp cloth. Then, wipe it with a dry cloth to remove the water.

∰Important


- Do not use chemical cleaner or organic solvents, such as thinner or benzene. If they get into the machine or melt plastic parts, a failure might occur.
- Do not clean parts other than those specified in this manual. Other parts should be cleaned by your service representative.

Cleaning the Exposure Glass

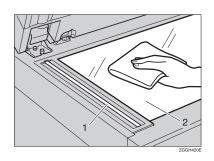


Clean 1 and 2.

Cleaning the Exposure Glass Cover

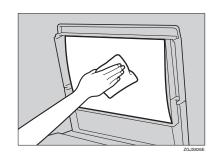

Cleaning the Document Feeder

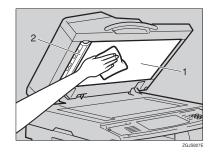

Clean 1 and 2.

7

Cleaning and Adjusting Internal Parts

Perform the following procedure when missing colours and lines appear on copies and prints.

Press the [User Tools/Counter] key and then [Maintenance].



Maintenance		_
Select item.		
Auto Color Calibration	Clean / Adjust	
Plain Paper Type		
		Ext

3 Press [Yes].


🖉 Note

- □ Cleaning may take a while.
- Do not open the cover or turn off the power while the following display is shown and the machine is cleaning.
- 4 The display will return to [Maintenance] automatically when cleaning is finished. Press the [User Tools/Counter] key and exit User Tools.

Cleaning the Dustproof Glass

The dustproof glass may require cleaning if white lines appear on copies and prints.

- **1** Turn off the main power switch.
- **2** Open the front cover of the machine.
- **3** Slide the cleaning brush with the blue handle in and out, slowly 8 to 10 times.

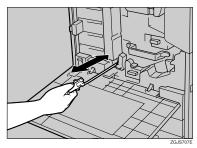

Important

- Do not insert the brush roughly, or you might damage the machine.
- 4 Return the cleaning brush to its original position.

5 Close the front cover of the machine.

6 Turn on the main power switch.

Other Functions

Inquiry

The inquiry function lets you confirm the telephone numbers to contact for repairs or to order toner. Be sure to contact your service engineer to verify the following:

Consumables

- Telephone No. for ordering
- Toner

Diagnostics

- Telephone No. for ordering
- Machine No.

Service office

• Telephone No.

User Tools/Counter Adjust/Progra

Press the [User Tools/Counter] key.



2 Press [Inquiry].

🗞 User Tools/Count	User Tools/Counter/Inquiry			
System Settings	Copier/Document Server Features	∳₽° Français		
System Settings	Facsimile Features			
Maintenance	Printer Features	i inquiry		
	Scanner Features	Counter		

Inquiry information is displayed.

Printing inquiry information

Press [Print Inquiry List].




Press the [Start] key. Inquiry information is printed.

- **3** Press [Exit].
- 4 Press [Exit].

Changing the Display Language

You can change the language used on the display. English is set as default.

Press the [User Tools/Counter] key.

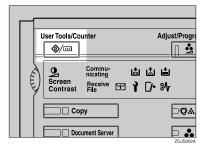

2 Press [Français].

\$	User Tools/Counter/Inquiry						
Con System Settings		Qe	Copier/Document Server Features] [5,	Français	
		Ø	Facsimile Features]			
		Maintenance	₽	Printer Features		i	itquity
			6	Scamer Features] [123	Counter

The display language is changed to French.

3 Press [Exit].

The menu appears in French.


Changing Paper Thickness Settings

Select [Normal] or [Middle Thick/90-105g/m2] for plain paper type, depending on the thickness of the paper to be set.

🖉 Note

- □ Settings will be saved even when the **[Clear Modes]** key is pressed or the power is turned off.
- □ All trays are set to **[Normal]** as default.

1 Press the **[User Tools/Counter]** key.

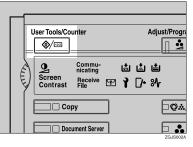

2 Press [Maintenance].



B Press [Plain Paper Type].

- 4 Select the plain paper type for each tray depending on the paper to be set and press [OK].
 - 🔗 Note
 - □ When printing on paper more than 90 g/m² (24lb.), select [Mid-dle Thick/90-105g/m2].
- 5 Press [OK].

6 Press [Exit].

Counter

Displaying the Total Counter

You can display the total counter value used for all functions.

Press the [User Tools/Counter] key.

2 Press [Counter].



To print a counter list, press [Print Counter List].



4 Press the [Start] key.

A counter list is printed.



8. Specification

Mainframe

- Configuration: Desktop
- Photosensitivity type: OPC belt
- Original scanning: One-dimensional solid scanning system through CCD
- Copy process:
 2 laser beam & dry electrostatic transfer system
- Development: Mono component system
- Fusing: Belt fusing system
- Resolution: 600 dpi
- Exposure glass: Stationary original exposure type
- Original reference position: Rear left corner
- Warm-up time:
 - Main power switch: Less than 99 seconds (23°C, 73°F)
 - Operation switch: Less than 99 seconds (23°C, 73°F)
- Originals: Sheet/book/objects
- ◆ Maximum original size: A3□, 11" × 17"□
- Copy paper size:
 - Tray 1, 2: A3 \square A6 \square , 11" × 17" \square 5¹/₂" × 8¹/₂" \square \square
 - Bypass: A3 \Box A6 \Box , 12" × 18" \Box 5¹/₂" × 8¹/₂" \Box \Box
 - Tray 1, 2 (custom size): Vertical: 100 – 297mm, 3.94" – 11.69" Horizontal: 148 – 432mm, 5.83" – 17.00"

- Bypass (custom size): Vertical: 90 – 305mm, 3.55" – 12.00" Horizontal: 148 – 457.2mm, 5.83" – 18.00"
- Duplex: A3 \square A5 \square \square , 11" × 17" \square 5¹/₂" × 8¹/₂" \square (impossible on 5¹/₂" × 8¹/₂" \square)
- LCT: A4 \Box , $8^1/_2$ " × 11" \Box

Copy paper weight:

- Tray 1, 2: 64 163g/m², 17 43.6 lb.
- Bypass tray: 64 163g/m², 17 43.6 lb.
- Duplex: $64 105g/m^2$, 17 28 lb.

Non-reproduction area:

- Leading edge: Less than 4 ± 2mm
- Trailing edge: Less than 2 ± 2mm/1.5mm
- Left edge: Less than 2 ± 2mm
- Right edge: Less than 2 ± 2mm

First copy time:

	Standard mode	OHP/Thick mode *1	Auto Colour Select mode *1
Full Colour (4 colours)	18 seconds or less	25 seconds or less	20 seconds or less
Black, Yellow, Magenta, Cyan	7.8 seconds or less	16 seconds or less	9.5 seconds or less

(A4 D, $8^{1}/{_2}$ " × 11 D", when setting an original on the exposure glass and full size copying fed from Tray 1.)

^{*1} When you use the bypass tray, it takes a few more seconds.

Full Colour (4 colours)

		Standard mode	Thick mode	OHP mode
A4 🖓	Type 1	8 copies/minute	4 copies/minute	2 copies/minute
	Type 2	10 copies/minute		
A3 □	Type 1	4 copies/minute	2 copies/minute	1 copies/minute
	Type 2	5 copies/minute		

(When copying continuously in full size.)

		Standard mode	Thick mode	OHP mode
A4 🖓	Type 1	24 copies/minute	6.5 copies/minute	3.2 copies/minute
	Type 2	32 copies/minute		
A3₽	Type 1	12 copies/minute	3.2 copies/minute	1.6 copies/minute
	Type 2	16 copies/minute		

Black, Yellow, Magenta, Cyan

(When copying continuously in full size.)

Reproduction ratio:

Preset reproduction ratios:

	Metric version	Inch version
Enlargement	400%	400%
	200%	200%
	141%	155%
	122%	129%
	115%	121%
Full Size	100%	100%
Reduction	93%	93%
	82%	85%
	75%	78%
	71%	73%
	61%	65%
	50%	50%
	25%	25%

Zoom: From 25 to 400% in 1% steps.

Maximum continuous copy run: 100 sheets

Copy paper capacity:

- Tray 1, 2: 250 sheets (80g/m², 20 lb.)
- Bypass tray: 100 sheets (80g/m², 20 lb.)

Power consumption:

• Mainframe only

	Type 1/Type 2
Warm-up	less than 1.5 kW
Stand-by	less than 200 W
During copying	less than 1.0 kW
Maximum	less than 1.5 kW

• Complete system *1

	Type 1/Type 2
Warm-up	less than 1.5 kW
Stand-by	less than 200 W
During copying	less than 1.1 kW
Maximum	less than 1.5 kW

*1 The Complete System consists of the mainframe, document feeder, 1000-sheet finisher, duplex unit, internal tray 2, paper tray unit, fax unit, ISDN, extra G3 interface unit, expansion memory, JBIG function upgrade unit, printer unit, and memory unit.

Dimensions (W × D × H up to exposure glass):

Type 1, 2: 550 × 670 × 781mm, 21.7" × 26.4" × 30.8"

Space for mainframe (W × D):

Type 1, 2: 550 × 670mm, 21.7" × 26.4"

Noise Emission ^{*1}:

Sound Power Level:

• Mainframe only

	Type 1/Type 2
Stand-by	Less than 45 dB (A)
Copying	Less than 67 dB (A)

• Complete system *2

	Type 1/Type 2
Stand-by	Less than 50 dB (A)
Copying	Less than 70 dB (A)

- ^{*1} The above measurements made in accordance with ISO 7779 are actual value.
- *2 The Complete System consists of the mainframe, document feeder, 1000-sheet finisher, duplex unit, internal tray 2 and paper tray unit.

Weight:

Type 1, 2: Approx. 85 kg, 188 lb.

♦ HDD:

about 40 GB

- Capacity for Document Server about 15 GB
- Capacity for Memory sorting 7.5-15 GB
- Capacity for others 5 GB or more

Options

Document Feeder

Mode:

ADF mode, Batch mode, SADF mode, Mixed Size mode, Custom Size originals mode

Original size:

- A3 A5 A5
- $11" \times 17" \square 5^1/_2" \times 8^1/_2" \square \square$
- Vertical: 105 297mm, 4.2" 11.6"
- Horizontal: 128 1,200mm, 5.1" 47.0" (128 – 432mm, 5.1" – 17.0" for Copier and Scanner functions)

Original weight:

- 1-sided originals: 40 128g/m² (11 34 lb.)
- 2-sided originals: 52 105g/m² (14 28 lb.) (Duplex)

Maximum number of originals: 50 sheets (80g/m², 20 lb.) or less than 11mm, 0.43"

Maximum power consumption: Less than 50W (power is supplied from the mainframe)

Dimensions (W×D×H):

550 × 470 × 130mm, 21.7" × 18.5" × 5.1"

Weight:

Approx. 10 kg, 22.1 lb.

🖉 Note

□ Specifications are subject to change without notice.

500-Sheet Finisher

Paper size:

A3D, B4D, A4D, B5D, b, A5D, 11" × 17"D, $8^1/_2$ " × 14"D, $8^1/_2$ " × 11"D, $8^1/_2$ " × 13"D, $8^1/_2$ " × 51/2"D, $8^1/_4$ " × 13"D, $8^* \times 13$ "D, $7^1/_4$ " × 10¹/2"D, 8KD, 16KD

Paper weight:

 $64 - 128 g/m^2$, 17 - 34 lb.

Stack capacity:

- 500 sheets (A4 □ □, 8¹/₂" × 11" □ □ or smaller) (80g/m², 20 lb.)
- 250 sheets (B4, 8" × 13" or larger) (80g/m², 20 lb.)

Staple capacity:

• 30 sheets (80g/m², 20 lb.)

♦ Staple paper size: A3□, B4□, A4□□, B5□, 11" × 17"□, 8¹/₂" × 14"□, 8¹/₂" × 13"□, 8¹/₂" × 11"□, 8K□, 16K□

- ♦ Staple paper weight: 64 - 128g/m², 17 - 34 lb.
- Staple position: 1 position (upper left)

Power consumption: 40W (power is supplied from the mainframe)

Dimensions (W × D × H): 350 × 490 × 230mm, 13.8" × 19.3" × 9.1"

Weight:

Approx. 10kg, 22.1 lb.

8

1000-Sheet Finisher

Finisher Tray 1:

Paper size:

A3D, B4D, A4, D, B5, D, A5, D, B6D, A6D, 12" × 18"D, 11" × 17"D, $8^{1}/{2}$ " × 14"D, $10^{1}/{2}$ " × $7^{1}/{4}$ " D, $8^{1}/{2}$ " × 13"D, $8^{1}/{2}$ " × 11" D, 8" × 13"D, $8^{1}/{4}$ " × 13"D, $8^{1}/{2}$ " × 11" D, 8" × 13"D, $8^{1}/{4}$ " × 13"D, $8^{1}/{2}$ " × 16K D

♦ Paper weight: 64 - 163g/m², 17.0 - 43.6 lb.

Stack capacity:

- 250 sheets (A4 \$\mathbb{D}\$, 8¹/₂" × 11" \$\mathbb{D}\$ or smaller) (80g/m², 20 lb.)
- 50 sheets (B4□, 8" × 13"□ or larger) (80g/m², 20 lb.)

Finisher Tray 2:

Paper size:

A3D, B4D, A4 D, B5 D, A5 D, 12" × 18" D, 11" × 17" , $8^{1}/{2}$ " × 14" , $10^{1}/{2}$ " × $7^{1}/{4}$ " , $8^{"} \times 13$, $8^{1}/{4}$ " × 13" , $5^{1}/{2}$ " × $8^{1}/{2}$ " , 8KD, 16K D

Paper weight: 64 - 163g/m², 17.0 - 43.6 lb.

Stack capacity:

- 1,000 sheets (A4 □ □, 8¹/₂"×11" □ □ or smaller) (80g/m², 20 lb.)
- 500 sheets (B4□, 8" × 13"□ or larger) (80g/m², 20 lb.)

Staple capacity:

- 50 sheets (A4 $\Box \Box$, $8^{1}/_{2}$ " × 11" $\Box \Box$ or smaller) (80g/m², 20 lb.)
- 30 sheets (B4□, 8" × 13"□ or larger) (80g/m², 20 lb.)

Staple paper size:

A3D, B4D, A4, D, B5, D, $12" \times 18"$, $11" \times 17"$, $8^{1}/{_2"} \times 14"$, $8^{1}/{_2"} \times 11"$, 11", $10^{1}/{_2"} \times 7^{1}/{_4"}$, $8" \times 13"$, $8^{1}/{_2"} \times 13"$, $8^{1}/{_4"} \times 13"$, 8KD, 16K, D

Staple paper weight:

 $64 - 90g/m^2$, 17 - 24 lb.

Staple position:

- 1 staple 2 positions
- 2 staples 2 positions

8

Power consumption:

Less than 50W (power is supplied from the mainframe)

• Dimensions ($W \times D \times H$):

527 × 520 × 790mm, 20.7" × 20.5" × 31.1"

Weight:

Approx. 25kg, 55.2 lb.

Bridge Unit

Paper Size:

- Internal tray: A3 \Box A6 \Box , 12" × 18" \Box 5¹/₂" × 8¹/₂" \Box
- 500-Sheet Finisher: A3 \square A5 \square , 11" × 17" \square 5¹/₂" × 8¹/₂" \square
- 1000-Sheet Finisher: A3 $\Box A5 \Box \Box$, 12" × 18" $\Box 5^{1}/{_{2}}$ " × $8^{1}/{_{2}}$ " $\Box \Box$

Paper weight:

 $64 - 163g/m^2$, 17.0 - 43.6 lb.

- Stack Capacity: 250 sheets
- Dimentions: 418 × 446 × 128mm, 16.47" × 17.57" × 50.40"
- Weight:

3.3kg, 7.29 lb.

Shift Sort Tray

Paper capacity:

250 sheets (A4 $\Box \Box$, $8^{1}/{_{2}"} \times 11" \Box \Box$ or smaller) (80g/m², 20 lb.) 125 sheets (B4 \Box , $8" \times 13"\Box$ or larger) (80g/m², 20 lb.)

Power consumption:

3.6 W (power is supplied from the mainframe)

Dimensions (W × D × H) 430 × 372 × 148 mm, 17" × 15" × 6"

Weight:

Approx. 1.6kg, 3.5 lb.

Duplex Unit

Paper size:

A3D, B4D, A4, D, B5, D, A5, D, $5^{1}/{_{2}^{"}} \times 8^{1}/{_{2}^{"}}$, $7^{1}/{_{4}^{"}} \times 10^{1}/{_{2}^{"}}$, $8^{1}/{_{2}^{"}} \times 11^{"}$, $8^{1}/{_{2}^{"}} \times 13^{"}$, $8^{1}/{_{2}^{"}} \times 13^{"}$, $8^{1}/{_{2}^{"}} \times 14^{"}$, $8^{1}/{_{4}^{"}} \times 13^{"}$, $11^{"} \times 17^{"}$, 8KD, 16K, D

- ◆ Paper weight: 64 - 105g/m², 17 - 28 lb.
- Power consumption (Max):

35W (power is supplied from the mainframe)

Dimensions (W × D × H):

121 × 479 × 510mm, 4.8" × 18.9" × 20.1"

Weight:

Approx. 6kg, 13.3 lb.

Internal tray 2 (1 bin tray)

- Number of bins: 1
 - 1
- Available paper size:

A3D, B4D, A4D, B5D, A5D, A6D, A6D, 11" × 17", $8^{1}/{2}$ " × 14", $8^{1}/{2}$ " × 11", $10^{1}/{2}$ " × $7^{1}/{4}$ ", $8^{1}/{2}$ ", $8^{1}/{2}$ " × 13", $8^{1}/{2}$ " × 13", $8^{1}/{4}$ " × 13", $5^{1}/{2}$ " × $8^{1}/{2}$ ", $8^{1}/{2}$ ", $8^{1}/{4}$ " × 13", $5^{1}/{2}$ " × $8^{1}/{2}$ ", $8^{1}/{2}$ ", $8^{1}/{4}$ ", 13^{1} , $8^{1}/{4}$ ", 13^{1} , $5^{1}/{2}$ ", $8^{1}/{2}$ ", $8^{1}/{2}$ ", $10^{1}/{2}$ ", $8^{1}/{2}$ ", $10^{1}/{2}$ ", $10^{1}/{2}$ ", $7^{1}/{4}$ ", $10^{1}/{2}$ ", $8^{1}/{2}$ ", 13^{1} , $8^{1}/{4}$ ", 13^{1} , $5^{1}/{2}$ ", $8^{1}/{2}$ ", $10^{1}/{2$

- Paper capacity: 125 sheets (80g/m², 20 lb.)
- ♦ Copy paper weight: 64 - 105g/m² (17 - 28 lb.)
- Maximum power consumption: Less than 0.5 W (power is supplied from the mainframe)
- ♦ Dimensions (W × D × H): 530 × 435 × 120mm, 20.9" × 17.1" × 4.7"
- Weight: Approx. 1.1 kg, 2.5 lb.
- 🖉 Note
- □ Specifications are subject to change without notice.

Bypass Tray

Paper size:

- Standard size: A3 \square A6 \square , 12" × 18" \square 5¹/₂" × 8¹/₂" \square \square
- Custom size: Vertical (90.0 305.0mm, 3.55" 12.00"), Horizontal (148.0 457.2mm, 5.83" 18.00")
- ♦ Copy paper weight: 64 - 163g/m², 17 - 43.6 lb.
- Dimensions (W × D × H): 310 × 380 × 275mm, 12.4" × 15.2" × 11"
- Paper capacity:
 - $64 90g/m^2$, 17 20 lb: 100 sheets
- Weight:

Approx. 3kg, 6.6 lb.

Large Capacity Tray (LCT)

- Paper size: A4 \Box , $8^1/_2$ " × 11" \Box
- ♦ Paper weight: 64 - 105g/m², 17 - 34 lb.
- Paper capacity: 2,000 sheets (80g/m², 20 lb.)
- Power consumption Maximum. 30 W (power is supplied from the mainframe)
- Dimensions (W × D × H, option unit): 540 × 600 × 270mm, 21.3" × 23.6" × 10.6"
- ♦ Weight: Approx. 25 kg, 55 lb.
- 🖉 Note
- □ Specifications are subject to change without notice.

8

Paper tray unit

- ♦ Copy paper weight: 64 - 128g/m² (17 - 34 lb.)
- ♦ Available paper size: A3□, B4□, A4□□, B5□□, A5□□, 11"×17"□, 8¹/₂"×14"□, 8¹/₂"× 13"□, 8¹/₂"×11"□□, 8¹/₄"×13"□, 8"×13"□, 7¹/₄"×10¹/₂"□, 5¹/₂"×8¹/₂"
 □, 8K□, 16K□□

Maximum power consumption:

Less than 30 W (power is supplied from the mainframe)

- Paper capacity: 500 sheets (80g/m², 20 lb.) × 2 trays
- Dimensions (W × D × H): 540 × 600 × 270mm, 21.3" × 23.6" × 10.6"
- Weight:

Approx. 25 kg, 55.2 lb.

🖉 Note

□ Specifications are subject to change without notice.

Copy Paper

Recommended Paper Sizes and Types

Tray Type	Paper Type and Weight	Metric Version	Inch Version	Paper Capacity
Tray 1, 2	64-105g/m ² (17-28 lb.)	A3 D , B4 D , A4 DD , B5 DD , A5 D , 8 ¹ / ₂ "× 11" D	A4 \Box , B5 \Box , 11" × 17" \Box , 8 ¹ / ₂ " × 14" \Box , 8 ¹ / ₂ " × 11" \Box \Box	250 sheets
		^{*1} A5D, A6D, 11" × 17"D, $8^{1}/_{2}$ " × 14"D, $8^{1}/_{2}$ " × 11"D, $5^{1}/_{2}$ " × $8^{1}/_{2}$ "DD, $7^{1}/_{4}$ " × $10^{1}/_{2}$ "DD, $8^{"}$ × 13"D, $8^{1}/_{2}$ " × 13"D, $8^{1}/_{4}$ " × 13"D, 8KD, 16KDD	^{*1} A3D, B4D, A4D, A5DD, A6D, $5^{1}/_{2}$ "× $8^{1}/_{2}$ "DD, $7^{1}/_{4}$ "× $10^{1}/_{2}$ "DD, $8^{"} \times 13^{"}$ D, $8^{1}/_{2}$ "× 13"D, $8^{1}/_{4}$ "× 13"D, 8KD, 16KDD	
		*2 Custom size	*2 Custom size	
		Vertical: 100.0-297.0 mm	Vertical: 3.94"-11.69"	
		Horizontal: 148.0-432.0 mm	Horizontal: 5.83"-17.00"	
	Thick paper ^{*8} 106-163g/m ² (28.3-43.6 lb.)	A3D, B4D, A4DD, B5DD, A5D, 8 ¹ / ₂ " × 11"D	A4 \Box , B5 \Box \Box , 11" × 17" \Box , 8 ¹ / ₂ " × 14" \Box , 8 ¹ / ₂ " × 11" \Box \Box	50 sheets
		^{*1} A5D, A6D, 11" × 17"D, 8 ¹ / ₂ " × 14"D, 8 ¹ / ₂ " × 11"D, 5 ¹ / ₂ " × 8 ¹ / ₂ "DD, 7 ¹ / ₄ " × 10 ¹ / ₂ "DD, 8" × 13"D, 8 ¹ / ₂ " × 13"D, 8 ¹ / ₄ " × 13"D, 8KD, 16KDD	^{*1} A3D, B4D, A4D, A5DD, A6D, $5^{1}/_{2}$ "× $8^{1}/_{2}$ "DD, $7^{1}/_{4}$ "× $10^{1}/_{2}$ "DD, $8^{"} \times 13^{"}$ D, $8^{1}/_{2}$ "× 13"D, $8^{1}/_{4}$ "× 13"D, 8KD, 16KDD	
		^{*2} Custom size Vertical: 100.0-297.0 mm Horizontal: 148.0-432.0 mm	^{*2} Custom size Vertical: 3.94"-11.69" Horizontal: 5.83"-17.00"	
	OHP transparencies *8	A4 🕽 *1	·	20 sheets

The following limitations apply to each tray:

Tray Type	Paper Type and Weight	Metric Version	Inch Version	Paper Capacity
Paper tray unit (op- tion)	64 - 105g/m ² (17-28 lb.)	A3D, B4D, A4DD, B5D, A5D, 11"×17"D, 11"×8 ¹ / ₂ "D	A3D, A4D, 11"×17"D, $8^{1}/{_{2}}$ "×14"D, $8^{1}/{_{2}}$ "× 11"DD, $8^{1}/{_{2}}$ "×51/ ${_{2}}$ "D	500 sheets × 2
		$ \begin{tabular}{lllllllllllllllllllllllllllllllllll$	*1 B4D, A4D, B5, D, A5, D, 5 ¹ / ₂ " × 8 ¹ / ₂ " D, 7 ¹ / ₄ " × 10 ¹ / ₂ " D, 8" × 13" D, 8 ¹ / ₂ " × 13" D, 8 ¹ / ₄ " × 13" D, 8KD, 16K, D	
		^{*2} Custom size Vertical: 148.0 - 297.0 mm Horizontal: 148.0 - 432.0 mm	^{*2} Custom size Vertical: 5.83" - 11.69" Horizontal: 5.83" - 17.00"	
Bypass Tray (op- tion)	64-105g/m ² (17-28 lb.)	A3, A4, 8" × 13", A5,	$\begin{array}{c} 11"\times 17" \square, 8^{1}/_{2}" \times \\ 11" \square, 5^{1}/_{2}" \times 8^{1}/_{2}" \square \end{array}$	100 sheets
		$ \begin{array}{c} {}^{*3} \text{ B4D}, \text{ A4} \overrightarrow{\textbf{P}}, \text{ B5} \overrightarrow{\textbf{D}}, \\ \text{A5} \overrightarrow{\textbf{P}}, \text{ B6} \overrightarrow{\textbf{P}}, \text{ A6} \overrightarrow{\textbf{P}}, 11" \times \\ 17" \overrightarrow{\textbf{P}}, 8^{1}/_2" \times 14" \overrightarrow{\textbf{P}}, \\ 8^{1}/_2" \times 11" \overrightarrow{\textbf{D}}, 5^{1}/_2" \times \\ 8^{1}/_2" \overrightarrow{\textbf{D}}, 7^{1}/_4" \times \\ 10^{1}/_2" \overrightarrow{\textbf{D}}, 8^{1}/_2" \times \\ 13" \overrightarrow{\textbf{D}}, 8^{1}/_4" \times 13" \overrightarrow{\textbf{D}}, 12" \\ \times 18" \overrightarrow{\textbf{P}}, 8 \text{ KD}, 16 \text{ K} \overrightarrow{\textbf{D}} \overrightarrow{\textbf{D}} \end{array} $	^{*3} A3D, B4D, A4 B5 D, A5 D, B6D, A6D, $8^{1}/_{2}$ " × 14"D, $8^{1}/_{2}$ " × 11"D, $8^{1}/_{2}$ " × $5^{1}/_{2}$ "D, $7^{1}/_{4}$ " × $10^{1}/_{2}$ "D, 8^{n} × 13"D, $8^{1}/_{2}$ " × 13"D, $8^{1}/_{4}$ " × 13"D, 12 " × 18"D, 8KD, 16K DD	
		*4 Custom size	*4 Custom size	
		Vertical: 90.0-305.0 mm Horizontal: 148.0-457.2 mm	Vertical: 3.55"-12.00" Horizontal: 5.83"-18.00"	
	Thick paper *9 106-163g/m ² (28.3-43.6 lb.)	A3₽, A4₽, 8"×13"₽, A5₽	$\begin{array}{c} 11" \times 17" \square, 8^{1}/_{2}" \times \\ 14" \square, 8^{1}/_{2}" \times 11" \square, \\ 5^{1}/_{2}" \times 8^{1}/_{2}" \square \end{array}$	30 sheets
		$ \begin{array}{c} {}^{*3} \text{ B4D}, \text{A4D}, \text{B5DD}, \\ \text{A5D}, \text{B6D}, \text{A6D}, 11" \times \\ 17" \text{D}, 8^{1}/_{2}" \times 14" \text{D}, \\ 8^{1}/_{2}" \times 11" \text{DD}, 5^{1}/_{2}" \times \\ 8^{1}/_{2}" \text{DD}, 7^{1}/_{4}" \times \\ 10^{1}/_{2}" \text{DD}, 8^{1}/_{2}" \times \\ 13" \text{D}, 8^{1}/_{4}" \times 13" \text{D}, 12" \\ \times 18" \text{D}, 8 \text{KD}, 16 \text{K} \text{DD} \end{array} $	$ \begin{array}{c} {}^{*3} \text{ A3D, B4D, A4} \begin{tabular}{lllllllllllllllllllllllllllllllllll$	
		*4 Custom size	*4 Custom size	
		Vertical: 90.0-305.0 mm Horizontal: 148.0-457.2 mm	Vertical: 3.55"-12.00" Horizontal: 5.83"-18.00"	

Tray Type	Paper Type and Weight	Metric Version	Inch Version	Paper Capacity
Bypass Tray (op- tion)	Translucent paper			50 sheets
	OHP transparen- cies ^{*9}	A4 🖵 *3		50 sheets
	Label paper (adhesive labels)	B4□, A4□□		1 sheet
	Envelope *3	$3^7/_8$ " × $7^1/_2$ " \square , $4^1/_8$ " × $9^1/_2$ " \square , C5 Env \square , C6 Env \square , DL Env \square		-
Large Capaci- ty Tray (LCT) (op- tion)	64-105g/m ² (17-28 lb.)	A4, D , 8 ¹ / ₂ " × 11" D *6		2000 (1000 + 1000) sheets

- ^{*1} Select the paper size in System Settings. \Rightarrow p.74 "Tray Paper Size: (Tray 1–4)"
- ^{*2} Specify the paper size. \Rightarrow p.74 "Tray Paper Size: (Tray 1–4)"
- *3 Place the paper in the bypass tray, and select the paper size. ⇒ "Copying from the Bypass Tray" in Copy Reference
- *4 Place the paper in the bypass tray, and specify the paper size. ⇒ "Copying from the Bypass Tray" in Copy Reference With paper longer than 457mm, misfeeds, jams and creasing is more likely. Make
- sure paper is placed correctly so that it is fed straight.
 ^{*5} It is recommended to place one sheet at a time.
- ^{*6} The paper tray fence is immovable. If you wish to change the size of paper placed in
- this tray, contact your service representative.
- ^{*7} When loading translucent papers, set the paper direction along its recommendation.
- ^{*8} Select the paper type in System Settings. \Rightarrow p.75 "Paper Type:Tray1–4"
- *9 Select the paper type in System Settings. ⇒ p.75 "Paper Type:Bypass Tray", "Copying from the Bypass Tray" in Copy Reference

Important

□ If you use damp or curled paper, a misfeed may occur.

🖉 Note

- □ When loading paper, make sure the stack height does not exceed the lower limit mark of the paper tray. ⇒ p.113 " Loading Paper"
- □ When loading copy paper in the paper tray 1-4 and the large capacity tray (LCT), place the copy side of the paper face up.
- □ When printing on paper less than 90g/m²(24lb.), select [Normal] in the control panel. When printing on paper between 90 to 105g/m²(24 to 28lb.), select [Mid-dle Thick/90-105g/m2] in the control panel. ⇒ p.143 "Changing Paper Thickness Settings"
- □ When using thick paper, the machine may produce a different sound.
- When loading copy paper in the bypass tray, place the copy side of the paper face down.

- When you use the bypass tray, it is recommended to set the copy paper direction to D.
- □ When you load the OHP transparencies, check the front and back of the sheets, and place them correctly, or a misfeed might occur. When using OHP transparencies with a taped edge, set them so the taped edge is fed last. Set the paper direction to □ and select A4□, 8¹/₂"×11" □ as paper size, ⇒ p.74 "Tray Paper Size: (Tray 1–4)", "Copying from the Bypass Tray" in Copy Reference.
- When you use OHP transparencies, shuffle them for each use. If you store the sheets in the tray, they may adhere and may cause feeding problems.
- □ If multiple-sheet jams occur, load the paper sheet by sheet.
- □ Envelopes should be fed using the bypass tray.

When copying onto envelopes

- Be sure to set the size of the envelope before copying. For details, see "When Copying onto Envelopes" in the Copy Reference.
- If you are printing onto the envelope from the printer driver, set the size of the envelope from the printer driver.
- When you are copying or printing on envelopes, select "Thick Paper" for the paper type.
- The minimum vertical length of envelopes that can be loaded is 140 mm, including opened flap.
- Do not print on both sides.
- Do not stack more than 10 envelopes in the output tray.
- Do not use double-flapped envelopes.
- Do not use envelopes with released tabs attached to the sealed part.
- Some kinds of envelopes might wrinkle or the print quality may be affected, especially on overlaps.
- Load envelopes bottom side first and flaps open.
- Before loading envelopes, flatten opened flaps.
- □ If you load paper of the same size in the same direction in two or more trays, the machine automatically shifts to the other tray when the first tray in use runs out of paper. This function is called Auto Tray Switching. (However, if one tray has recycled or special paper, the settings of the other trays must be the same for Auto Tray Switching.) This saves interrupting a copy run to replenish paper when making a large number of copies.
- □ The paper types you can select in System Settings are only general classifications. The copy quality for every kind of paper in a classification is not guaranteed. See ⇒ p.161 "Non-recommended Paper" for more information.

Non-recommended Paper

A CAUTION:

• Do not use aluminum foil, carbon paper, or similar conductive paper to avoid a fire or machine failure.

∰Important

To prevent faults, do not use any of the following kinds of paper:

- Papers for inkjet printers
- Thermal fax paper
- Art paper
- Aluminum foil
- Carbon paper
- Conductive paper
- Paper with perforated lines
- Hemmed-edge paper
- Do not use paper that is meant for an inkjet printer or it may stick to the Fusing Unit and cause a paper misfeed.
- Do not copy onto a side that already has copy on, or a fault might occur.

🖉 Note

□ To prevent misfeeds, do not use the following kinds of paper:

- Bent, folded, or creased paper
- Torn paper
- Slippery paper
- Perforated paper
- Rough paper
- Thin paper with little stiffness
- Paper with a dusty surface

□ If you copy onto rough grain paper, the image might be blurred.

Paper Storage

🖉 Note

- □ When storing paper, the following precautions should always be followed:
 - Do not store paper where it will be exposed to direct sunlight.
 - Avoid storing paper in humid areas (humidity: 70% or less).
 - Store on a flat surface.
- □ Do not store paper vertically.
- Under high temperature and humidity conditions, or low temperature and humidity conditions, store paper in a vinyl bag.

INDEX

1000-sheet finisher, 21 10BASE-T/100BASE-TX, 25 500-Sheet Finisher, 21

Α

Access to the Machine, 139 Adding Staples, 129 Adding Toner, 115 Adjust/Program Color key (copy mode), 22 Auto Off, 46

В

Bridge unit, 21 Bypass tray, 20, 21, 155

С

Changing Paper Tray 1 and 2, 124 Changing paper size Tray3 or Tray4, 126 Changing the Display Language, 142 Changing the Paper Size, 124 Check Modes key, 22 Clearing Misfeeds, 118 Clear Modes key, 22 Clear/Stop key, 23 Colour circle, 22 Colour function keys (copy mode), 23 Combined Function Operations, 45 Common key operations, 24 Configuring the Network, 32 Control Panel, 22 Control panel, 19 Copy Mode, 12 Copy Paper, 157

D

Displaying the Total Counter, 144 Display panel, 22, 24 Document Feeder, 150 Document feeder, 19 *Cleaning*, 140 Document feeder (ADF), 21 Document Server, 53 *Deleting*, 62 *Printing*, 60 *Using the Document Server*, 55 Do's And Don'ts, 135 Duplex unit, 21, 154

Ε

Energy Saver key, 22 Environment, 138 Exposure glass, 19 *Cleaning*, 140 Exposure glass cover, 21 External Options, 21

F

Facsimile Mode, 12 Finisher 1000-Sheet Finisher, 21 500-Sheet Finisher, 21 Front cover, 20

I

IEEE 1394 ports, 25 Iinterface, 20 Indicators, 22 Inquiry, 142 Internal tray, 19 Internal tray 2 (1 bin tray), 21 Interrupt key, 23

L

Large Capacity Tray (LCT), 21, 155 Loading Paper, 113 Large Capacity Tray (option), 114 Tray 1 and 2, 113

М

Machine Environment, 138 Mainframe, 145 Main power indicator, 23 Main power switch, 19, 30 Messages, 109 Misfeeds, 118 Multi-Access, 48

Ν

Network Connections, 26 Number keys, 23

0

On Hook Dial key, 22 Operation switch, 23, 30 Options, 150

Ρ

Paper Changing, 124 Loading, 113 Paper tray, 20 Paper tray unit, 21 Parallel port, 25 Power Connection, 139 Power indicator, 23 Program key, 22

R

Remarks, 135 Remove Paper Indicator, 19 Removing Jammed Staples, 132 Safety information, 7 [Sample Copy] key, 23 Saving Colour Copies, 136 Saving Energy, 46 Screen contrast knob, 22 Specification, 145 Document Feeder, 150 Duplex unit, 154 Internal tray 2 (1 bin tray), 154 Large Capacity Tray (LCT), 155 Mainframe, 145 Paper tray unit, 156 Shift Sort Tray, 153 Staples, 129 Removing Jammed Staples, 132 [Start] key, 23 Start Manual RX key (facsimile mode), 22 System Reset, 46

Т

Tone keys, 23 Tone keys (facsimile mode), 23 Toner, 137 Toner Bottle *Storage*, 137

U

User Code, 92 [User Tools/Counter] key, 22 User Tools (System Settings), 65

V

Ventilation holes, 20

W

Wireless LAN port (option), 25