

Clearing Z2 Misfeeds

⚠ CAUTION:

- The inside of the machine becomes very hot. Do not touch the parts with a label indicating a "hot surface". Touching a "hot surface" could result in a burn.


When "Z2" Is Indicated (1)

When a paper misfeed occurs in the area indicated by Z2, the machine automatically delivers the misfed paper to the lower right cover. Follow the procedure below to clear the paper misfeed.


1 Open the lower right cover.



2 Move the blue lever (A) up and down to remove the misfed paper.

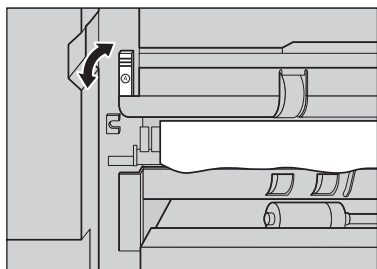

3 Press the part labelled "PUSH" to close the lower right cover.

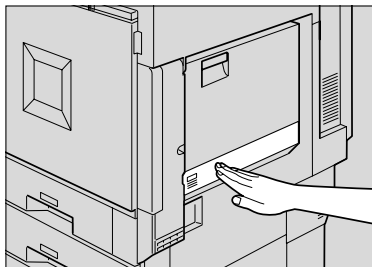


4 If "Z2" is still indicated, open the duplex reversal unit.

Note

- ☐ If the finisher is installed, first detach it from the machine.

5 Check if there is any paper in the opening to the duplex reversal unit.

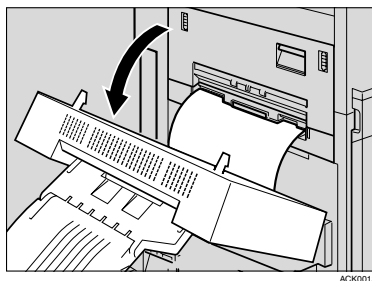

6 Close the duplex reversal unit.

Note

- ☐ If the finisher is installed, reattach it to the machine.

When “Z2” Is Indicated (2)

If “Z2” is still indicated even though you have gone through the steps in “When “Z2” Is Indicated (1)”, follow the procedure below to check for misfed paper.


1 Turn off the power, and then unplug the power cable.

2 Slowly open the front cover of the machine, and remove the green screwdriver.

Note

- There is a green screwdriver inside the front cover for use when attaching the duplex feed unit. By setting the top of the screw into the screwdriver, you can work without having to worry about dropping the screw.

3 Carefully pivot the waste oil bottle outward, in the direction of the arrow.

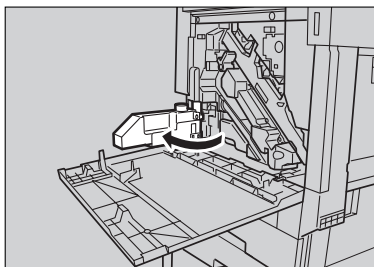


ZJKY380J

CAUTION:

- Keep the waste oil bottle away from flames. There is a risk of fire or burns.


4 With the screwdriver, remove the screw holding the duplex feed unit.

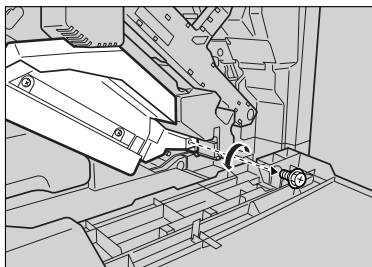

ZHXH320J


You will need this screw when you reattach the duplex feed unit.

5 Grip the upper left area of the duplex feed unit, and slowly pull it halfway out.

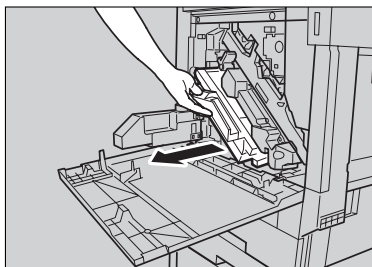


ZJKY390J

6 Hold the duplex feed unit with both hands, and slide it straight out.

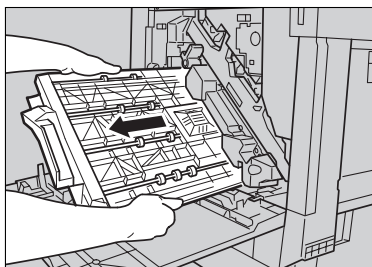

ZJKY400J

- 7** Place the duplex feed unit gently on the floor. Slowly open it, and remove the misfed paper.

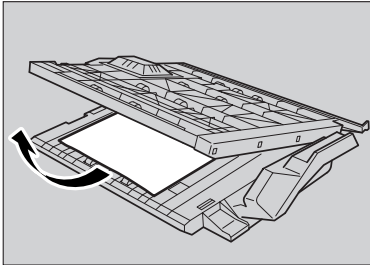


ZHXH660J

Important

- ☐ Do not forcefully open the duplex feed unit. Otherwise it might damage the unit.


- 8** Close the duplex feed unit.

- 9** Hold the duplex feed unit with both hands, place it on the vertical rail, and then slowly slide it in until it stops.

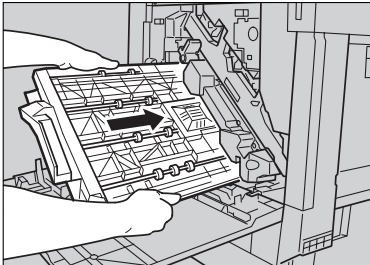


ZJKY410J

The vertical rail is in the position shown below.

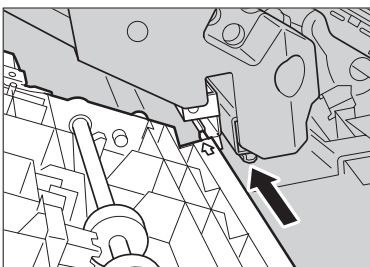

ZHXH600J

- 10** Reattach the duplex feed unit using the screw removed in step 4.

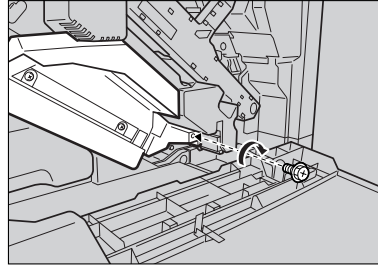


ZHXH310J

Note


- ☐ Always return the screwdriver to its original position inside the front cover.

- 11** Slowly close the waste oil bottle in the direction of the arrow.

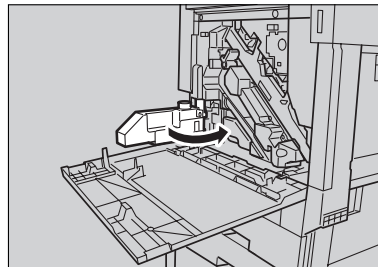

ZJKY420J

- 12** Slowly close the front cover by pushing the two areas on the left and right.

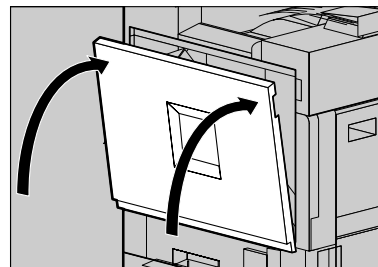

ZDJH041E

- 13** Plug in the power cable, and then turn on the power.

