


Attaching the Ferrite Core for the USB Cable

Supplement to "Connecting the Machine to the Host Using
a USB Cable", *Printer Reference*.

A ferrite core for the USB cable is supplied with this machine. The USB cable loop should be about 15 cm (6 in.) (①) from the machine end of the cable.

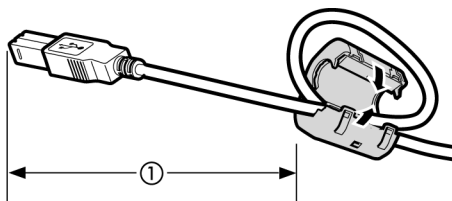

AKP001S



B7678618

Copyright ©2005
Printed in Japan
EN (USA) B767-8618