# **Quick Reference Printer Guide**

# $\Rightarrow$ Please use this duide from behind vour PC $\Leftrightarrow$

#### By installing the Printer/Scanner option, printer function is enabled.

## How to install a printer driver...

- Insert the CD-Rom 'Printer Drivers and Utilities' into the CD-Rom drive.
- 2 Select a language and click [OK].
- **B** Select [Quick Install]. (PCL and RPCS printer driver plus SmartDeviceMonitor are installed)
- Click [I accept the agreement], click [Next >].
- **5** Select the required model.
- Click [Install].
- Click [Finish], click [Exit].

## How to prepare printing...

- Select [Start], [Settings], [Printers].
- 2 Select the required printer and RPCS driver by right-clic
- B Select [Set as Default Printer].
- Select [Printing Preferences].
- 9 You get a message 'Configure...', press [OK].
- G Select the options in [Change Accessories] that have be installed on the machine and press [OK].
- **1** The next screen opens. Set original paper size.
- Press [Add/Change Custom Settings]. Make your setting under [Setup], [Edit], [Finishing], [Cover/Slip Sheet] and [Misc].
- D Press [Save as], give custom setting a name and press [OK].

## How to print...

- Open your document.
- **2** Press directly the 'Print' icon, or - Press [File], [Print], [Properties].
- **B** Choose one of the pre-settings or make a new setting.
- Press [OK].
- D Press [Number of copies].
- D Press [OK].

Tean Information * P Info Tean Information * P Info Tean Information * P Info © Information © Informatio © Informatio © Information © Informatio © Information © I
Inglish 💽 Viceprost Savek
C Index
Sile Conste Sile Sile Conste Sile Siles * Vers Informatis * 7 Hulp Spint Sile Scott See A
See
الله Canada والمحالية المحاليمالية المحالية المحالية المحالية المحالية المحالية المحالية المحالية المحالية المحالية المحالية المحالية المحالية المحاليمالية المحالية المحالية المحالية المحالية المحالية المحالية المحالية المحالية المحالية الممالية الممالية الممالية الممالية الممالية الممالية المماليمامالممالية الممالية الممالية الممالية الممالية الممالية الممالية الممالية الممالية الممالية المماليمامالمامالممالمامالممالمامالممالم
Section 2015 Section 2015 S
I He Consent I He Consent I I I I I I I I I I I I I I I I I I I
المَال Company المَالي مَالي مَال المَالي مُالي مالي مالي مالي مالي مالي مالي مالي م
a de la constantia esta esta esta esta esta esta esta est
entin Information > ? Holp
Person Information * ? Help nglish 💽 🍳 Keywood Search
nglish 🔳 🤇 Keywood Search
0
Refresh
le No. Doursional
0432 PDF TIFF
0431 PDF TTP
My Computer
disk (Stored Pri
,
ed Print].
sary (for passwo
.' from step 3

- Press [Locked Print Job List].
- Select your document and press [Print].
- Enter your password and press [OK]. Reconfirm by pressing [Yes].
- File is being printed and also deleted.

Select your document and press [Print]. Hold Print file is being printed and also deleted.

protected Stored Print documents).

Press [Hold Print Job List] or [Stored Print Job List].

Press ID and enter password if necessary (for password)

Stored Print file is being printed.



#### How to use Web Image Monitor...

- Start a Web browser.
- 2 Enter IP address of your machine as an URL.
- **B** Choose from one of the following functions:
  - Status
- Document Server
- Fax Received File
- Job
- Address Book
- Configuration

#### Why use it?

- To have access to the machine anywhere via the web.
- To manage certain functions from your pc, which is easier to use.

#### How to receive a fax to download

- Settings must be made before you can receive fax documents. Please take a look at the bundled CD; Facsimile Reference <Advanced Features> chapter 6.
- **1** Start a Web browser.
- 2 Enter IP address of your machine as an URL.
- I Click [Fax Received File].
- Click Property Icon of Fax message.
- **5** View contents of fax message.
- **I** To download fax message, click [PDF] or [Multipage TIFF].
- Press [Download], press [OK].

#### How to monitor your machine in the network...

- Use SmartDeviceMonitor, which is automatically installed with your printer driver.
- **1** Right-click the green PC icon at the bottom of your screen.
- 2 Select [Options], [Network Devices] and press [Browse].
- **B** Select your machine and press [OK].
- Select a machine in [Printers Folder] and select [To be monitored]. Select [Displayed on Task Bar].
- If you select this machine from the SmartDeviceMonitor icon, you can see the [Status], [Configuration] and [Job History]. Next time you print, you get a message on your pc in case of any failure.