FAX Option Type 3245

Operating Instructions Facsimile Reference <Basic Features>



- 1 Getting Started
- 2 Faxing
- 3 Using Internet Fax Functions
- 4 Programming
- 5 Troubleshooting

Read this manual carefully before you use this machine and keep it handy for future reference. For safe and correct use, be sure to read the Safety Information in the "General Settings Guide" before using the machine.

Introduction

This manual contains detailed instructions and notes on the operation and use of this machine. For your safety and benefit, read this manual carefully before using the machine. Keep this manual in a handy place for quick reference.

Notes

Some illustrations in this manual might be slightly different from the machine.

Certain options might not be available in some countries. For details, please contact your local dealer.

Two kinds of size notation are employed in this manual. With this machine refer to the metric version.

Important

Contents of this manual are subject to change without prior notice. In no event will the company be liable for direct, indirect, special, incidental, or consequential damages as a result of handling or operating the machine.

Trademarks

Microsoft[®] and Outlook[®] are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

Adobe® and Acrobat® are registered trademarks of Adobe Systems Incorporated.

Other product names used herein are for identification purposes only and might be trademarks of their respective companies. We disclaim any and all rights to those marks.

NOTICE TO USERS (NEW ZEALAND)

- ① The grant of a Telepermit for any item of terminal equipment indicates only that Telecom has accepted that the item complies with minimum conditions for connection to its network. It indicates no endorsement of the product by Telecom, nor does it provide any sort of warranty. Above all, it provides no assurance that any item will work correctly in all respects with another item of Telepermitted equipment of a different make or model, nor does it imply that any product is compatible with all of Telecom's network services.
- ② This equipment is not capable, under all operating conditions, of correct operation at the higher speeds for which it is designed. Telecom will accept no responsibility should difficulties arise in such circumstances.
- ③ This equipment shall not be set up to make automatic calls to the Telecom "111" Emergency Service.
- ④ If a charge for local calls is unacceptable, the "Dial" button should NOT be used for local calls. Only the 7-digits of the local number should be dialled from your telephone. DO NOT dial the area code digit or the "0" prefix.
- (5) This equipment may not provide for the effective hand-over of a call to another device connected to the same line.
- ③ This device may be subject to ringing or bell tinkle when calls are made from another device on the same line. If this occurs, the problem <u>should not</u> be referred to the Telecom Faults Service.
- ⑦ This equipment should not be used under any circumstances, which may constitute a nuisance to other Telecom customers. For example, repeated attempts to make unsolicited sales offers to the same number or group of numbers, such as when a block of numbers terminate on the same PABX.
- The call log incorporated in this equipment does not record all answered calls. The call log, therefore may not agree with the Telecom account which may include calls not shown on the log.
- Not all telephones will respond to incoming ring when connected to the extension socket.

Manuals for This Machine

The following manuals describe the operational procedures of this machine. For particular functions, see the relevant parts of the manual.

🖉 Note

- □ Manuals provided are specific to machine type.
- □ Adobe Acrobat Reader/Adobe Reader is necessary to view the manuals as a PDF file.
- □ Two CD-ROMs are provided:
 - CD-ROM 1"Operating Instructions"
 - CD-ROM 2"Scanner Driver and Document Management Utility"

General Settings Guide

Provides an overview of the machine and describes System Settings (such as Tray Paper Settings), Document Server functions, and troubleshooting. Refer to this manual for Address Book procedures such as registering fax numbers, e-mail addresses, and user codes.

Security Reference

This manual is for administrators of this machine. It describes security functions that the administrators can use to protect data from being tampered, or prevent the machine from unauthorized use. Also refer to this manual for the procedures for registering administrators, as well as setting user and administrator authentication.

Network Guide (PDF file - CD-ROM1)

Provides information about configuring and operating the printer in a network environment or using software.

This manual covers all models, and therefore contains functions and settings that may not be available for your model.

Images, illustrations, functions, and supported operating systems may differ from those of your model.

Copy Reference

Describes operations, functions, and troubleshooting for the machine's copier function.

Facsimile Reference < Basic Features>(this manual)

Describes operations, functions, and troubleshooting for the machine's facsimile function.

Facsimile Reference<Advanced Features>

Describes advanced facsimile functions such as line settings and procedures for registering IDs.

Printer Reference

Describes system settings, operations, functions, and trouble shooting for the machine's printer function.

Scanner Reference (PDF file - CD-ROM1)

Describes operations, functions, and troubleshooting for the machine's scanner function.

Manuals for DeskTopBinder Lite

DeskTopBinder Lite is a utility included on the CD-ROM labeled "Scanner Driver and Document Management Utility".

- DeskTopBinder Lite Setup Guide (PDF file CD-ROM2) Describes installation of, and the operating environment for DeskTop-Binder Lite in detail. This guide can be displayed from the **[Setup]** dialog box when DeskTopBinder Lite is installed.
- DeskTopBinder Introduction Guide (PDF file CD-ROM2) Describes operations of DeskTopBinder Lite and provides an overview of its functions. This guide is added to the **[Start]** menu when DeskTopBinder Lite is installed.
- Auto Document Link Guide (PDF file CD-ROM2) Describes operations and functions of Auto Document Link installed with DeskTopBinder Lite. This guide is added to the **[Start]** menu when Desk-TopBinder Lite is installed.

Other manuals

- PostScript 3 Supplement (PDF file CD-ROM1)
- Unix Supplement (Available from an authorized dealer, or as a PDF file on our Web site.)

🖉 Note

□ The following software products are referred to using a general names:

- DeskTopBinder Lite and DeskTopBinder Professional → DeskTopBinder
- ScanRouter V2 Lite and ScanRouter EX Professional (optional) → the Scan-Router delivery software
- SmartDeviceMonitor for Admin and SmartDeviceMonitor for Client \rightarrow SmartDeviceMonitor for Admin/Client

TABLE OF CONTENTS

NOTICE	i
Manuals for This Machine	ii
How to Read This Manual	1
Symbols	
-,	

1. Getting Started

Control Panel	3
Reading the Display	5
Reading the display panel and using keys	6
User Authentication	8
User Code Authentication (using the Control Panel)	8
User Code Authentication (Using a Printer Driver)	8
Login (Using the Control Panel)	8
Log Off (Using the Control Panel)	9
Login (Using a Printer Driver)	9
Login (Using Web Browser)	
Log Off (Using Web Browser)	9

2. Faxing

Placing Originals	.11
Setting a Scan Area	.13
Transmission Modes	.16
Switching between Memory Transmission and Immediate Transmission	. 16
Memory Transmission	
Canceling a Memory Transmission	.21
Before the Original Is Scanned	
While the Original Is Being Scanned	
While the Original Is Being Transmitted	
Before the Transmission Is Started	22
Immediate Transmission	.24
Canceling an Immediate Transmission	.26
Before You Have Pressed the [Start] Key	.26
After You Have Pressed the [Start] Key	26
Confirming Transmission	.27
Confirming on Display	27
Confirming by Report	.27
Memory Transmission	
Immediate Transmission	
Confirming by E-mail	.27
Scan Settings	.28
Resolution	-
Original Type	
Image Density (Contrast)	
Mixing Scan Settings for a Multiple Page Original	
When placing originals on the exposure glass	
When placing originals in the optional Auto Document Feeder	. 32

Specifying a Destination	33
Entering a Fax Number	
Pause	
Tone	34
Entering an E-mail Address	34
Entering an IP-Fax Destination	35
Registering Entered Destinations to the Address Book	
Using Destination Lists	
Searching for a Destination	41
Search by Destination Name	
Search by Fax Number	
Search by E-mail Address	
Search by IP-Fax Destination	
Search by LDAP Server	45
Specifying a Registration Number	47
Reception	
Switching the Reception Mode	
Receiving a Fax in Manual Reception Mode	

3. Using Internet Fax Functions

Internet Fax Functions (by E-Mail)	51
Internet Fax Precautions	52
Functions Not Supported by E-mail Transmission	
Functions Not Supported by E-mail Reception	
T.37 Full Mode	53
Sending Internet Fax Documents	55
Confirming Reception	60
Canceling a Transmission of an Internet Fax	62
Before the Original Is Scanned	
While the Original Is Being Scanned In	62
After the Original Has Been Scanned In	63
Receiving Internet Fax	
Auto E-mail Reception	64
Manual E-mail Reception	
Received Images	
IP-Fax Function	
Notes on Using IP-Fax	
Functions not Available for IP-Fax Transmission	
Sending by IP-Fax	70

4. Programming

Initial Settings and Adjustments	73
Programming	
Editing	75
Deleting	
Programming Fax Destinations and Folder Destinations in the A	ddress Book78

5. Troubleshooting

Adjusting the Volume	79
When the [Facsimile] Key Is Lit in Red	81
When Toner Runs Out	82
Error Messages and Their Meanings	
Solving Problems	
When Things Don't Go as Expected	92
INDEX	93

How to Read This Manual

Symbols

In this manual, the following symbols are used:

A WARNING:

This symbol indicates a potentially hazardous situation that might result in death or serious injury when you misuse the machine without following the instructions under this symbol. Be sure to read the instructions, all of which are included in "Safety Information", *General Settings Guide*.

A CAUTION:

This symbol indicates a potentially hazardous situation that might result in minor or moderate injury or property damage that does not involve personal injury when you misuse the machine without following the instructions under this symbol. Be sure to read the instructions, all of which are included in "Safety Information", *General Settings Guide*.

* The statements above are notes for your safety.

∰Important

If this instruction is not followed, paper might be misfed, originals might be damaged, or data might be lost. Be sure to read this.

Preparation

This symbol indicates information or preparations required prior to operating.

🖉 Note

This symbol indicates precautions for operation, or actions to take after abnormal operation.

Limitation

This symbol indicates numerical limits, functions that cannot be used together, or conditions under which a particular function cannot be used.

PReference

This symbol indicates a reference.

[

Keys that appear on the machine's display panel.

[

Keys and buttons that appear on the computer's display.


[]

Keys built into the machine's control panel.

1. Getting Started

Control Panel

The actual machine control panel may differ from this illustration depending on installed optional units. This illustration has all options installed.

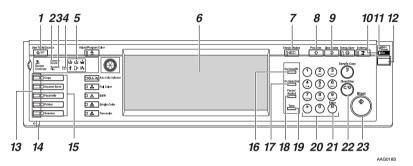

1. [User Tools/Counter] key

User Tools:

Press to enter User Tools mode. These tools allow you to customize default settings. See p.141 "Facsimile Features", *Facsimile Reference <Advanced Features>*.

Counter:

Displays and prints the total number of copied or printed pages.

2. Communicating indicator

Lights during transmission or reception.

3. Receive File indicator

Lights when a message other than a Confidential Reception or Memory Lock file is received. See p.85 "Substitute Reception", *Facsimile Reference <Advanced Features>*.

When Reception File Setting is set to Store, also lights when a message is received. See p.193 "Storing or Printing Received Documents", *Facsimile Reference <Advanced Features>*.

4. Confidential file indicator

Lights when a message is received into memory with Confidential Reception or Personal Box. See p.41 "Printing Personal Box Messages", *Facsimile Reference <Advanced Features>*.

Blinks when a Memory Lock file is received into memory. See p.38 "Printing a File Received with Memory Lock", *Facsimile Reference <Advanced Features>*.

5. Indicators

Shows errors and machine status.

- P: Service Call indicator
- ₩: Misfeed indicator
- 🗗: Open Cover indicator
- 📩: Add Staple indicator
- La: Add Toner indicator
- 🛓: Paper run-out indicator

See "Control Panel", General Settings Guide.

6. Display Panel

This guides you through tasks and displays the machine status. Messages appear here. p.5 "Reading the Display"

7. [Check Modes] key

Press before pressing the **[Start]** key to check the settings selected for the fax about to be sent. See p.20 "Checking the transmission settings"

8. [Program] key

Enables you to program frequently used settings and recall previously programmed settings. See p.129 "Programs", Facsimile Reference <Advanced Features>.

9. [Clear Modes] key

Press to cancel the current settings.

10. On indicator

This indicator lights when the operation switch is turned on.

∰Important

Do not turn off the main power switch while the On indicator stays lighted or is blinking. Neglecting this may damage the hard disk.

🖉 Note

□ If the main power switch is on even when the On indicator is off, the machine will receive a fax message.

11. Main Power indicator

This indicator lights when the main power switch is turned on. See "Turning On the Power", *General Settings Guide*.

12. Operation switch

Press to turn the power on (the On indicator lights). To turn the power off, press this switch again (the On indicator goes off). See p.198 "Turning Off the Main Power / When a Power Failure Occurs", Facsimile Reference <Advanced Features>.

🖉 Note

The Operation switch does not function when the [User Tools/Counter/Inquiry] display is shown.

13. Function status indicators

- When lit green, the corresponding function is active.
- When lit red, the corresponding function is interrupted. Press the respective key and then follow the instructions that appear on the screen.

14. ♦ Data In indicator

Blinks when transmission, printing, storing to Document Server are performed with using the LAN-Fax Driver.

15. Function keys

Press the **[Copy]**, **[Document Server]**, **[Facsimile]**, **[Printer]**, or **[Scanner]** key to activate the respective function. The display content changes accordingly.

The indicator for the selected function lights up.

16. [Start Manual RX] key

Press when Manual Reception is set. See p.49 "Receiving a Fax in Manual Reception Mode".

17. [On Hook Dial] key

Press when you want to dial while hearing tone from the internal speaker. See p.56 "On Hook Dial", *Facsimile Reference <Advanced Features>*.

18. [Pause/Redial] key

Pause:

Inserts a pause when you are dialing or storing a fax number. A pause cannot be inserted as the first digit. See p.33 "Pause".

Redial:

Press to redial one of the last ten numbers. See p.47 "Redial", Facsimile Reference <Advanced Features>.

19. [Tone] key

Press to send tonal signals down a pulse dialing line. See p.34 "Tone".

20. Number keys

Use to dial fax numbers, or enter the number of copies.

21. [#] key (Enter key)

Registers entered contents or settings.

22. [Clear/Stop] key

Clear:

Cancels entered numbers or characters. Stop:

Interrupts the current operation (transmission, scanning, copying, or printing).

Reading the Display

The display guides you through operations, shows messages, you machine status, and destinations registered in the destination lists. See "Fax Destination", *General Settings Guide*.

If you press the **[Facsimile]** or **[Clear Mode]** key during operation, this machine enters fax standby mode.

Each function name displayed acts as a selection key, which you can touch to select or specify the function.

When a function is selected or specified, the function name is highlighted like this **Stop Treamission**. When a function cannot be selected or specified, the function name is grayed out like this **Predictive**.

🖉 Note

- This machine automatically returns to standby mode if you do not use the machine for a certain period of time. You can select the period using the Fac-simile Auto Reset Timer. See "Timer Settings", *General Settings Guide*.
- □ You can have the machine return to default mode after each transmission using [Scan End Reset] under Gen. Settings/ Adjust. See p.144 "General Settings/Adjustment", *Facsimile Reference <Advanced Features>*.


23. [Start] key

Press to start faxing, or printing reports, or lists.

Reading the display panel and using keys

Display contents will differ depending on installed optional units.

Initial Display

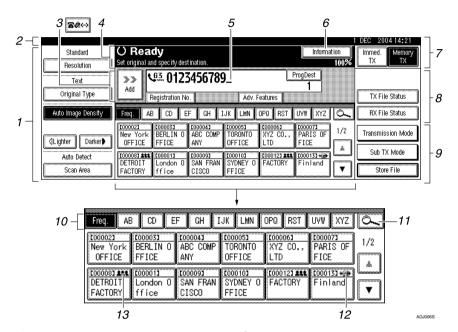

1. Allows you to select scanning conditions and sizes.

2. Displays the date and time, the name and facsimile number of a destination when transmitting, and the size of the original.

When user authentication is set, a login user name appears.

3. Press this button to enter or add fax number, e-mail address, or IP-Fax number.

- Internet Fax setting "ON":
- IP-Fax, H.323, SIP setting "ON":
- Internet Fax setting "ON" and IP-Fax, H.323, SIP setting "ON": ■

🖉 Note

- You can change Internet Fax setting under E-mail Settings in Fax Features. See p.148 "E-mail Settings", Facsimile Reference <Advanced Features>.
- □ You can change IP-Fax Settings under IP-Fax Setting in Fax Features. See p.150 "IP-Fax Settings", Facsimile Reference <Advanced Features>.

1

4. Displays messages and the machine status.

5. Displays the entered number of a destination. When adding destinations using the number keys, press [Add].

6. Press to display various information about transmission.

7. Switches transmission mode between Memory Transmission and Immediate Transmission. See p.16 "Switching between Memory Transmission and Immediate Transmission"

8. Displays Quick Operation keys set for frequently used functions. [TX File Status] and [RX File Status] are preset. See p.144 "General Settings/Adjustment", Facsimile Reference <Advanced Features>. 9. Displays various sending functions. See p.16 "Transmission Modes", p.61, Facsimile Reference <Advanced Features>, p.134 "Storing a Document", Facsimile Reference <Advanced Features>.

10. Title word keys appear. Allows you to switch from one page (display) to another on the destination list. See p.39 "Switching the titles of destination lists".

11. Allows you to search for a destination by destination name, fax number, e-mail address or registration number.

12. Appears on Quick Dial keys programmed as a transfer station.

13. Appears on Quick Dial keys programmed with a group of destinations. See "Registering Names to a Group", *General Settings Guide*.

To return to standby mode, do one of the following:

- If you have placed the original in the optional Auto Document Feeder (ADF) and have not pressed the **[Start]** key, remove the original.
- If you have not placed an original, press the [Clear Modes] key.
- If you are in User Tools mode, press the [User Tools/Counter] key.

User Authentication


When user authentication (User Code Authentication, Basic Authentication, Windows Authentication, or LDAP Authentication) is set, the authentication screen is displayed. Unless a valid user name and password are entered, operations are not possible with the machine. Log on to operate the machine, and log off when you are finished operations. Be sure to log off to prevent unauthorized users from using the machine.

🖉 Note

- Consult the User Administrator about your login user name, password, and user code. For details about the various types of user authentication, consult the appropriate administrators.
- For user code authentication, enter a number that is registered in the Address Book as a login user name as the user code.

User Code Authentication (using the Control Panel)

When user authentication is set, the following screen appears.

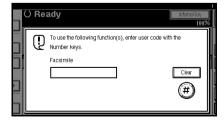

Enter a user code (eight digit), and then press **[#]**.

User Code Authentication (Using a Printer Driver)

When user authentication is set, specify the user code in the printer properties of a printer driver. For details, see the printer driver Help.

Login (Using the Control Panel)

Follow the procedure below to log in when Basic Authentication, Windows Authentication, or LDAP Authentication is set.

Press [Enter] for [Login User Name].

() Re	ady Botomecilion 1009
	Erter login user name and login password, then press [Login]. Login User Name Enter Login Password Enter Cancel Login

- 2 Enter a login user name, and then press [OK].
- B Press [Enter] for [Login Password].
- 4 Enter a login password, and then press [OK].

5 Press [Login].

When the user is authenticated, the screen for the function you are using appears.

Log Off (Using the Control Panel)

Follow the procedure below to log off when Basic Authentication, Windows Authentication, or LDAP Authentication is set.

Press [User Tools/Counter].

2 Press [Logout].

nq	uiry	↔ Logout	1 DEC 2004 14:24
0	Copier / Document Server Features	් දි	Français
7	Facsimile Features]	
Ъ	Printer Features	i	Inquiry
	Scanner Features	123	Counter

B Press [Yes].

4 Press [User Tools/Counter].

Login (Using a Printer Driver)

When Basic Authentication, Windows Authentication, or LDAP Authentication is set, make encryption settings in the printer properties of a printer driver, and then specify a login user name and password. For details, see the printer driver Help.

🖉 Note

□ When logged on using a printer driver, logging off is not required.

Login (Using Web Browser)

Follow the procedure below to log on when user authentication is set.

Click [Login].

2 Enter a login user name and password, and then click [OK].

🖉 Note

- □ For user code authentication, enter a user code in **[User Name]**, and then click **[OK]**.
- The procedure may differ depending on the Web browser used.

Log Off (Using Web Browser)

Click [Logout] to log off.

2. Faxing


Placing Originals

Some types of originals are unsuitable for the Auto Document Feeder (ADF), so they must be placed on the exposure glass or the ADF as shown in the illustrations.


For details about original types and how to set original sizes, see *Copy Reference*. You cannot use **[Special Original**] under Copy Function. See "Placing Originals", *Copy Reference*.

Note that original sizes that can be automatically detected differ slightly to those sizes listed in "Sizes Detectable by Auto Paper Select", *Copy Reference*. See p.209 "Original sizes difficult to detect", *Facsimile Reference <Advanced Features>*.

How to place A4, B4 JIS (Japanese Industrial Standard), A3, 8¹/₂"×11", 8¹/₂"×14", and 11"×17" size originals

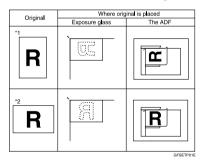

How to place A5 and B5 JIS size originals

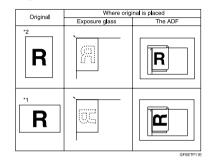

🖉 Note

- When you place originals as shown in the above illustrations, the fax header will be printed on received faxes at the destination as follows:
 - *1 On the top of the fax
 - *2 On the left side of the fax

PReference

p.73 "Initial Settings and Adjustments"

Limitation

□ If you place A5 size documents on the exposure glass, they will not be detected. A5 size documents placed in the ADF are sent. See p.209 "Original sizes difficult to detect", *Facsimile Reference <Ad*vanced Features>.

🖉 Note

- When you scan originals using the Auto Document Feeder (ADF), set originals in a stack.
- When sending a fax, the image that is output at the other end depends on the size and orientation of paper used in the receiver's terminal. If the receiver does not use paper of the same size and orientation as that of the original, the fax image may be reduced in size, trimmed at both edges, or divided across two or more sheets. When sending an important original, ask the receiver about the size and orientation of the paper used in their terminal.
- When sending an original of irregular (i.e. custom) size or part of a large original, you can specify the scan area precisely. See p.13 "Setting a Scan Area".
- Custom size documents are scanned as regular size documents, so the receiver may find extra blank margins or edges of images missing. If you specify a scan area, only that area will be scanned regardless of actual document size.
- □ To send an original longer than 420mm (17"), specify the area to be scanned under "Scan Size" and select Long Document mode with the User Parameters before scanning the original using the ADF. If a jam occurs, the document might be damaged because scanning will not stop in this mode. See p.13 "Setting a Scan Area". See p.166 "User Parameters", *Facsimile Reference <Advanced Features>* (switch 14, bit 1).
- Documents longer than 800mm (32") must be sent by memory transmission (immediate transmission may not be possible).

- □ If an original jam, press the **[Clear/Stop]** key, and then carefully remove the original.
- Make sure that all ink, correcting fluid etc., has completely dried before placing your original. If it is still wet, the exposure glass will be marked and those marks will appear on the received image.
- □ If you place an A4 size original in the portrait orientation, the machine rotates the image by 90 degrees before sending. See p.78 "Transmission with Image Rotation", Facsimile Reference <Advanced Features>.
- □ You can send the first page from the exposure glass then the remaining pages from the ADF. You cannot change from the ADF to the exposure glass. When transmitting from memory, see p.19 "Sending originals using the exposure glass". When sending immediately, see p.25 "Sending originals using the exposure glass".
- When using the Internet Fax function, documents are sent at A4 width. Documents larger than A4 are reduced to A4 width. If the receiver's terminal is compliant with the T.37 full mode, documents are sent at the width specified in the Address Book. See p.53 "T.37 Full Mode".
- □ When setting bound originals (books, magazines, etc.), you can select to have either the left page or right page sent first with the User Parameters. See p.61 "Book Fax", *Facsimile Reference <Advanced Features>* . See p.166 "User Parameters", *Facsimile Reference <Advanced Features>* (switch 06, bit 6).

Reference

For how to place two-sided documents, see p.62 "Two-Sided Transmission (Double-Sided Transmission)", Facsimile Reference <Advanced Features>.

For acceptable types of originals, see p.207 "Acceptable Types of Originals", *Facsimile Reference <Advanced Features>*.

Setting a Scan Area

Normally, a placed document is scanned according to the automatically detected size. If a scan area is specified, the document is scanned accordingly. Thus, documents can be sent without extra space or blank margins. See p.209 "Original sizes difficult to detect", *Facsimile Reference <Advanced Features>*.

Auto Detect

Detects the size of the first page and scans all pages using that size. If you want to scan originals of different sizes, use the Mixed Original Sizes function.

🖉 Note

If the machine cannot detect the original size, a confirmation message appears. Replace the original.

Regular

The placed document is scanned according to specified size regard-less of actual size.

The sizes that can be specified are A4 \Box \Box , B4 JIS \Box , A3 \Box , 8¹/₂"×11" \Box \Box , 8¹/₂"×14" \Box , and 11"×17" \Box .

Area

Enter the area to be scanned. Only the area in the specified size is scanned regardless of the actual size of a placed document. See p.160 "Programming, Changing and Deleting a Scan Size", *Facsimile Reference <Advanced Features>*.

Mixed Original Sizes

Select this to individually scan the size of originals loaded in the ADF. For example, when A4 and B4 JIS size originals are sent together, usually all are sent using the size of the first original. By selecting Mixed Original Sizes, the machine scans and sends each document according to its size.

🔗 Note

- □ To cancel the selected scan area, select **[Auto Detect]**. See p.15 "Specifying Auto Detect".
- When using the Mixed Original Sizes, the machine sends the originals by memory transmission.
- □ When using the Mixed Original Sizes, rotation transmission is disabled. See p.78 "Transmission with Image Rotation", *Facsimile Reference <Advanced Features>*.
- **1** Place the originals, and then select any scan settings you require.

🖉 Note

- When placing different size originals into the ADF, adjust the document guide to the largest original.
- Small-size originals may be sent at a slight slant since they do not match the document guide.

2 Press [Scan Area].

Standard	() Rea				
Resolution	Set original ar		tination.		
Text	8 &↔ \	63_			
Original Type	Ē	legistration No). Esnal l	içut 🛛 Adiy, F	edures
Auto Image Density	Freq. AE	CD E	F GH I	JK LMN I	OPQ F
QLighter Darker▶	1000021 New York OFFICE	COODOSI BERLIN O FFICE	ABC COMP ANY	TORONTO OFFICE	<u>000006</u> XYZ C LTD
Auto Detect Scan Area	DETROIT FACTORY	London 0 ffice	COOOO93 SAN FRAN CISCO	COODIDI SYDNEY O FFICE	<u>000012</u> FACTO

3 Select the scan area.

Specifying standard sizes

Press [Regular].

Scan Area.	O Rea Set original a	nd specify des			
Auto Detect	B #~> \	<u>63</u> _			
Regular	L	Registration No). Honsail	içus Adel F	edures.
Area 1	Freq. AB	B CD E	F GH 1	JK LMN	OPQ F
Area 2	1000021	£000031	£000043	£000051	100006
	New York OFFICE	FFICE	ABC COMP ANY	OFFICE	LTD
Mixed Original Sizes	1000081	2000013	[000003	2000103	£00012
ОК	DETROIT FACTORY	London O ffice	SAN FRAN CISCO	SYDNEY O FFICE	FACTO

2 Press the size of the originals to be sent, and then press [OK].

Regular	() Ready
A4E	Set original and specify destination.
	雷律↔ 16 3
B4 JIS A3 C	
8 1/2 x 11f	Registration No. Economic Park Adv. Factures
8 1/2 x 11 🗂	Freq. AB CD EF GH IJK LMN OPQ F
8 1/2 × 14⊡	1000021 [000031 [000041 [000051 [00006
	New York BERLIN 0 ABC COMP TORONTO XYZ C
11 × 17€⊐	OFFICE FFICE ANY OFFICE LTD
	[000083] [000013] [000093] [000103] [00012
OK	DETROIT London 0 SAN FRAN SYDNEY 0 FACTO FACTORY ffice CISCO FFICE
li	FACTURE FILE

🖉 Note

□ 8¹/₂"×11" indicates LT. 8¹/₂"×14" indicates LG. 11"×17" indicates DLT.

• Press [OK].

Scan Area	() Ready
Auto Detect	Set original and specify destination.
A4(1)	
Regular	Registration No. Internal input Adv. Festures
Area 1	Freq. AB CD EF GH IJK LMN OPQ F
Area 2	L000023 L000033 L000043 L000053 L000064 New York BERLIN 0 ABC COMP TORONTO XYZ 0 OFFICE FFICE ANY OFFICE LTD
Mixed Original Sizes	
ОК	DETROIT London 0 SAN FRAN SYDNEY 0 FACTO FACTORY ffice CISCO FFICE

The selected size is shown above the highlighted **[Scan Area]**.

Specifying programmed sizes

Press [Area 1] or [Area 2].

Scan Area	() Ready
Auto Detect	Set original and specify destination.
Regular	Registration No. Essential light Adv. Fastures
Area 1	Freq. AB CD EF GH IJK LMN OPQ F
Area 2	C000021 C000031 C000041 C000051 C000061 New York BERLIN 0 ABC COMP TORONTO XYZ 0 OFFICE FFICE ANY OFFICE LTD
Mixed Original Sizes	C000083 C000013 C000093 C000103 C00012
ОК	DETROIT London 0 SAN FRAN SYDNEY 0 FACTO FACTORY ffice CISCO FFICE

2 Press [OK].

Scan Area	O Rea Set original ar		tination.		
Auto Detect		63). Estal	tole Adv. F	www.
Regular Area 1	Freq. AE	<u> </u>	1 1	JK LMN	OPQ F
Area 2 Mixed Original Sizes	New York OFFICE	BERLIN O FFICE	ABC COMP ANY	TORONTO OFFICE	XYZ C LTD
СК	DETROIT FACTORY	London 0 ffice	COOCO93 SAN FRAN CISCO	COODID3 SYDNEY O FFICE	<u>00012</u> FACTO

"Area 1" or "Area 2" is shown above the highlighted **[Scan Ar-ea]**.

Specifying Mixed Original Sizes

Press [Mixed Original Sizes].

Scan Area	O Ready Set original and specify destination.				
Auto Detect	Begistration №	o. – Honsel Boot – Ac	u. Faslans		
Area 1		F GH IJK LMM	I OPQ		
Area 2	C000023 C000033 New York BERLIN 0 OFFICE FFICE	C000043 C000051 ABC COMP TORONT ANY OFFICE	0 XYZ I LTD		
Mixed Original Sizes	C000003 DETROIT London 0 FACTORY ffice	C000093 C000103 SAN FRAN SYDNEY CISCO FFICE	0 FACT		

Press [OK].

Scan Area	O Rea Set original a		tination.		
Auto Detect	8 ¢↔ \	63 _). Estea	ante 🛛 anto s	www.
Regular Area 1	Freq. A		1 1	1 1	OPQ F
Area 2 Mixed Orininal Sizes	New York OFFICE	BERLIN O FFICE	ABC COMP ANY	TORONTO OFFICE	XYZ C LTD
ОК	DETROIT FACTORY	<u>toocon</u> London O ffice	COODODI SAN FRAN CISCO	C000101 SYDNEY O FFICE	<u>00012</u> FACTO

"Mixed Original Sizes" is shown above the highlighted **[Scan Area]**.

Specifying Auto Detect

• Make sure that [Auto Detect] is selected.

Scan Area.	O Ready Set original and specify destination.				
Auto Detect	B #~> \	<u>63</u> _			
Regular		Registration No). Hongal I	igen (AGEL)	edure)
Area 1	Freq. At	B CD E	F GH I	JK LMN	OPQ F
Area 2	1000021	1000031	2000041	£000051	100006
	New York OFFICE	FFICE	ABC COMP ANY	OFFICE	XYZ U LTD
Mixed Original Sizes	2000082	[00001]	[00009]	[00010]	00012
ОК	DETROIT FACTORY	London O ffice	SAN FRAN CISCO	SYDNEY 0 FFICE	FACTO

If it is not, press [Auto Detect].

Press [OK].

Scan Area Arto Defect	O Ready Set original and specify destination.				
		<u>63</u> _			
Regular		legistration No	1	nput Adv. F	ssiures.
Area 1	Freq. AB			JK	OPQ F
Area 2	1000023 New York OFFICE	ECODODICAL BERLIN O FFICE	ABC COMP ANY	TORONTO OFFICE	<u>200006</u> XYZ C LTD
Mixed Original Sizes	LOOOOSI DETROIT FACTORY	COODD13 London O ffice	COODODI SAN FRAN CISCO	CODO 103 SYDNEY O FFICE	<u>000012</u> FACTC

"Auto Detect" is shown above **[Scan Area]**.

4 Specify a destination and press the [Start] key.


Transmission Modes

There are two types of transmission:

- Memory Transmission
- Immediate Transmission


Memory Transmission

Transmission starts automatically after the original has been stored in memory. It is a convenient method for when you are in a hurry and want to take the document away with you. You can also send the same original to several destinations. See p.20 "Broadcasting Sequence".

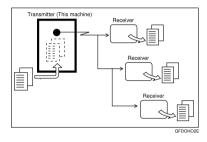

Immediate Transmission

Immediately dials the destination number, and while reading the original, sends it. It is very convenient when you want to send an original quickly or when you want to check the destination you are sending to. When using this type of transmission, the original is not stored in memory. You can only specify one address.

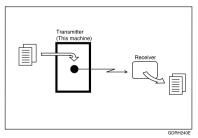

Switching between Memory Transmission and Immediate Transmission

Check the display to see which mode is currently active. You can change transmission mode by pressing [Immed. TX] or [Memory TX].

				DEC 2004 14:26
		Informat i		Immed. Memory
ecify destination.			100%	TX TX
-	Total			
tration No. Manual	input 🛛 Adiv. Faciliares			TX File Status
CD EF GH	IJK LMN OPO RST U	/W XYZ	β	RX File Status
0033 [0000043 RLIN 0 ABC COMP	TORONTO XYZ CO., P	ARIS OF	1/2	Transmission Mode
ICE ANY 0013 [0000093		10E	*	Sub TX Mode
ndon O SAN FRAN ice CISCO	SYDNEY O FACTORY F FFICE	inland	¥	Store File

🖉 Note

□ You can set the machine enter to Memory Transmission mode or Immediate Transmission mode after the power is turned on or the **[Clear Modes]** key is pressed. See p.144 "General Settings/Adjustment", *Facsimile Reference <Ad*vanced Features>.

2

Memory Transmission

Memory transmission mode has standard fax, Internet Fax and IP-Fax.

∰Important

- □ If there is a power failure (the main power switch is off) or the machine is unplugged out for more than one hour, all the documents stored in memory are deleted. As soon as the main power switch is turned, the Power Failure Report is printed to help you identify deleted files. If you turn only the operation switch off, documents are not deleted. See p.198 "Turning Off the Main Power / When a Power Failure Occurs", *Facsimile Reference* <*Advanced Features*>.
- We recommend you call the receiver and confirm with them when sending important messages.

Limitation

□ If memory is full (0% appears on the display), Memory Transmission is disabled. Use Immediate Transmission instead.

🖉 Note

- Maximum number of destinations per Memory Transmission: 500.
- Combined total number of destinations of standby messages stored in memory: 500.
- □ After the total number of programmed destination numbers exceeds 500, you can perform only Immediate Transmission.
- □ The number of documents you can store is 400.

- The number of pages you can store in memory depends on the original images and the scan settings. You can store up to 320 standard pages (ITU-T #4 chart, Resolution: Standard, Original Type: Text). You can store up to 2,240 standard pages, with the optional expansion memory installed.
- □ When E-mail TX Results is programmed in a Quick Operation key, you can select whether Communication Result Report e-mail is sent to specified e-mail addresses. The destination for notification is selected from Internet Fax destinations in the destination list. See p.80 "Communication Result Report (Memory Transmission)", Facsimile Reference <Advanced Features> and p.144 "General Settings / Adjustment", Facsimile Reference <Advanced Features>.
- Allows you to specify a fax number, e-mail address and IP-Fax number simultaneously.
- When you add a destination for incorrect operation prevention, you can select to surely press [Add] with User Parameters. See p.166 "User Parameters", *Facsimile Reference <Advanced Features>* (switch 17, bit 2).


PReference

p.55 "Sending Internet Fax Documents"

p.70 "Sending by IP-Fax"

2

1 Make sure that Memory TX is selected.

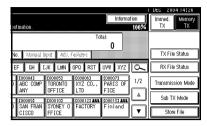

2 Place the original.

🖉 Note

□ The original can be placed either in the ADF or on the exposure glass, until the **[Start]** key is pressed.

PReference

p.11 "Placing Originals"

B Make the settings you require.

Standard	() Rea	dy			
Resolution	Set original a	nd specify des	tination.		
Text	8 ¢↔ \	<u>63</u>			
Original Type	ľ	Registration No). Esperi	nput 🛛 Adie, F	edure:
Auto Image Density	Freq. A	B CD E	F GH I	JK LMN	OPQ F
	[00002]	£000031			£00006
(Lighter Darker)	New York OFFICE	BERLIN O FFICE	ABC COMP ANY	TORONTO OFFICE	XYZ C LTD
Auto Detect	1000083	2000013	£000093	1000101	200012
Scan Area	DETROIT	London O ffice	SAN FRAN CISCO	SYDNEY O FFICE	FACTO


PReference

p.28 "Scan Settings"

p.29 "Original Type"

p.30 "Image Density (Contrast)"

4 Specify a destination.

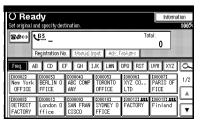

🖉 Note

□ If you make a mistake, press the **[Clear/Stop]** key, and then enter the correct number.

p.33 "Entering a Fax Number"

p.34 "Entering an E-mail Address"

p.35 "Entering an IP-Fax Destination"

p.38 "Using Destination Lists"

p.47 "Chain Dial", Facsimile Reference <Advanced Features>

p.47 "Redial", Facsimile Reference <Advanced Features>

5 When sending the same original to several destinations (broad-casting), press [Add] to specify the destinations.

Standard	() Rea				
Resolution		nd specify des			
Text	8 ¢↔ \	<u>93.</u> 0123	345678.	-	
Original Type	Add	Registration No). Hanual I	işiid 🛛 Adv. F	eatures
Auto Image Density	Freq. At	B CD E	F GH I	JK LMN	OPQ F
(]Lighter Darker	1000021 New York OFFICE	COODOSI BERLIN O FFICE	COODO43 ABC COMP ANY	TORONTO OFFICE	<u>200006</u> XYZ C LTD
Auto Detect Scan Area	DETROIT FACTORY	<u>COODD13</u> London O ffice	COOOD93 SAN FRAN CISCO	CODO 103 SYDNEY O FFICE	<u>00012</u> FACTO

🖉 Note

- You do not have to press [Add] when adding a destination using the destination list.
- If you do not want to do a broadcast transmission, proceed to step 2.

6 Specify a destination.

O Rea Set original a	idy and specify des	tination.			Informa	
8¢ ↔	Registration N). Matal	ena a antes		tal: 1	⊾ Prev. ♥ Next
Freq. 4	B CD E	FGH	IJK LHN	OPQ RST	UVW XYZ	6
1000021 New York OFFICE	ECOCOUNT BERLIN O FFICE	LOOOO43 ABC COMP ANY	COODOSI TORONTO OFFICE	1000061 XYZ CO., LTD	COODO73 PARIS OF FICE	1/2
DETROIT FACTORY	London 0 ffice	COODO93 SAN FRAN CISCO	COODIO3 SYDNEY O FFICE	COOD123 ARE FACTORY	<u>000133 ###</u> Finland	

🖉 Note

- Pressing switches the destination list between fax number, e-mail address, and IP-Fax number.
- If you want to specify another destination, repeat steps 3 and 3.

7 Press the **[Start]** key.

🖉 Note

Do not lift the ADF during scanning.

After scanning, the standby display appears.

Sending originals using the exposure glass

- Make sure that Memory TX is selected.
- ② Place the first page of your original face down on the exposure glass.
- Dial a destination.
- ④ Make the scan settings you require.
- ⑤ Press the 【Start】 key. The machine starts scanning.
- ③ Place the next original on the exposure glass within 60 seconds after the machine has finished scanning the first original.



- ⑦ Repeat steps ④ to ⑥ for all originals.
- Place the last original, and then press [
 Place is a constructed by the press begin by the press by the pr

Checking the transmission settings

You can check the transmission settings (e.g. destination and transmission mode) on the display.

① Press the **[Check Modes]** key.

Check Modes	Program	Clear Modes	Energy Saver	
			71.00	104011

The following display appears.

			I DEC 2004 14:47
estination.		Informal lan	
345678	Change	Dest. 1 sets	
		J	
			Transmission Mode
			Book Fax
			Sub TX Mode
			StorFite

🖉 Note

- Pressing switches the destination list between fax number, e-mail address, and IP-Fax number.
- ② After checking the settings on the display, press the [Check Modes] key.

The display before the **[Check Modes]** key was pressed appears.

WBroadcasting Sequence

If you dial several destinations for the same message (broadcasting), the messages are sent in the order in which they were dialed. If the fax message could not be transmitted, the machine redials that destination after the last destination specified for broadcasting. For example, if you specify four destinations, A through D, for broadcasting, and if the lines to destinations A and C are busy, the machine dials the destinations in the following order: A, B, C, D, A, and C. See p.78 "Simultaneous Broadcast", Facsimile Reference < Advanced Features>

Checking the transmission progress

To check the transmission progress, print the TX file list. See p.25 "Printing a List of Files in Memory (Print TX File List)", Facsimile Reference <Advanced Features>.

Canceling a Memory Transmission

You can also cancel the mode using the same procedure in the following cases:

- Fax Destination, Internet Fax Destination, and IP-Fax Destination are specified simultaneously.
- Only either Internet Fax Destination or IP-Fax Destination is specified.

Before the Original Is Scanned

Use this procedure to cancel a transmission before pressing the **[Start]** key.

1 Press the **[Clear Modes]** key.




🔗 Note

When documents are placed in the ADF, you can cancel transmission simply by removing them.

While the Original Is Being Scanned

Use this procedure to cancel a transmission after pressing the **[Start]** key.

Press the [Clear/Stop] key.

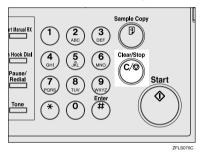

The machine stops scanning.

🖉 Note

- You can also cancel scanning by pressing [Stop Scanning].
- Scanning may be completed while you are performing the cancel operation.


While the Original Is Being Transmitted

🖉 Note

- If the transmission finishes while you are carrying out this procedure, it will not be canceled.
- □ If you cancel a message while it is being sent, the transmission is halted as soon as you finish the cancellation procedure. However, some pages of your message may have already been sent and received at the other end.

2

Press the [Clear/Stop] key.

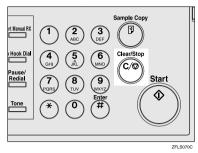

🖉 Note

You can also cancel a Memory Transmission by pressing [Change / Stop TX File].

2 Select the file you want to cancel.



🖉 Note

- □ If the desired file is not shown, press [▲ Prev.] or [▼ Next] to find it.
- There are cases when a destination may not be selected as the destination appears as "*", depending on the security settings.

B Press [Stop Transmission].



🖉 Note

- □ To cancel another file, repeat steps 2 and 3.
- □ To cancel stopping transmission, press **[Save]**.

4 Press [Exit].



The standby display appears.

Before the Transmission Is Started

Use this procedure to cancel a transmission after the original has been scanned.

Press [Change / Stop TX File].

() Rea			Change / S	Stop TX File	Informa	tion
Set original a	nd specify des	tination.				99%
8 #↔ \	<u>63</u> _				al: 0	
	Registration N	4 4	<u> </u>		-	
FIRE, AB CD EF GH IJK LMN OPQ RST UVW XYZ C						l G
000023 New York	BERLIN O	LOOCO41 ABC COMP	COODOSI TORONTO	1000061 XYZ CO.,	COODO71 PARIS OF	1/2
OFFICE	FFICE	ANY	OFFICE	LTD	FICE	*
DETROIT FACTORY	London 0 ffice	COODODI SAN FRAN CISCO	COODIDI SYDNEY O FFICE	E000123 ARE FACTORY	<u>0000133 #88</u> Finland	▼

The list of stored files being transmitted or waiting for transmission appears.

2 Select the file you want to cancel.

Change / Stop TX File		transmission		
Scanning Date / Time	Transmission Mode	Destination	Dest.	10
1Dec. 15:49	Confidential TX	New York OFFICE	Ttl 1	Ι
1Dec. 15:48	Memory TX	BERLIN OFFICE	Ttl 1	Ι
1Dec. 15:48	Memory TX	ABC COMPANY	Ttl 1	L
1Dec. 15:48	Memory TX	London Office	Ttl 1	Ι
Check / Change Settir	ngs Print File	Stop Transmissi	on	Tr

🖉 Note

- □ If the desired file is not shown, press [▲ Prev.] or [▼ Next] to find it.
- There are cases when a destination may not be selected as the destination appears as "*", depending on the security settings.


B Press [Stop Transmission].



🖉 Note

- □ To cancel another file, repeat steps 2 and 3.
- To cancel stopping transmission, press [Save].

4 Press [Exit].

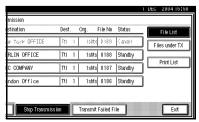

The standby display appears.

Immediate Transmission

Limitation

□ Internet Fax is executed in only Memory Transmission that starts transmission automatically after storing documents in memory. If you specify Immediate Transmission in Internet Fax, the mode is switched to Memory Transmission while an e-mail address is being entered.

🖉 Note

- Documents are not stored in memory.
- You cannot send the same document to multiple destinations (broadcasting). Memory Transmission allows this function.
- □ When E-mail TX Results is programmed in a Quick Operation key, you can send notification of Immediate TX Result Report to specified e-mail addresses. The destination for notification is selected from Internet Fax destinations in the destination list. See p.81 "Immediate TX Result Report (Immediate Transmission)", Facsimile Reference <Advanced Features> and p.144 "General Settings/Adjustment", Facsimile Reference <Advanced Features>.

1 Make sure that Immed. TX is selected.

- Information 100%	DEC 2004 14:26 Immed. Memory TX TX
Total: O No. Edenial Eyect Addr. Faceures	TX File Status
EF GH IJK LMN OPO RST UVW XYZ 🕰	RX File Status
COCODA1 COCODA1 <t< th=""><th>Transmission Mode</th></t<>	Transmission Mode
[000093] [000103] [000123 Att [000133 Att]	Sub TX Mode
D SAN FRAN SYDNEY O FACTORY Finland CISCO FFICE	Store File

2 Place the original.

🖉 Note

□ The original can be placed whenever, before the **[Start]** key is pressed.

p.11 "Placing Originals"

B Select the scan settings you require.

Standard	() Rea				
Resolution	Set original a				
Text	8 &↔ \	<u>63</u>			
Original Type	F	Registration No). Esnal l	nput 🛛 Adiy, F	wine:
Auto Image Density	Freq. AB CD EF GH IJK LMN OPO F				
	1000021 New York OFFICE	COODOSI BERLIN O FFICE	ABC COMP ANY	TORONTO OFFICE	<u>C00006</u> XYZ C LTD
Auto Detect Scan Area	COODORS DETROIT FACTORY	<u>coccoll</u> London O ffice	1000093 SAN FRAN CISCO	COODID3 SYDNEY O FFICE	<u>000012</u> FACTO

p.28 "Scan Settings"

4 Dial a destination.

O Rea Set original a	dy nd specify des	tination.			Informa	
B #~~) (63 Registration N). Manual I	ngat 🛛 Adv. F	adara	ial:	
Freq. At CO00021 New York OFFICE	B CD E	F GH 1 ABC COMP ANY	LJK LMN TORONTO OFFICE	0P0 RST 10000063 XYZ CO., LTD	UVW XYZ COOOO73 PARIS OF FICE	1/2
COODOSI DETROIT FACTORY	1000013 London O ffice	COODO93 SAN FRAN CISCO	COODID3 SYDNEY O FFICE	FACTORY	<u>0000133 #88</u> Finland	LÅ I V

Limitation

Group cannot be used for Immediate Transmission. The machine automatically changes to Memory Transmission.

🖉 Note

□ If you make a mistake, press the **[Clear/Stop]** key, and then enter the correct number.

2

PReference

p.33 "Entering a Fax Number"

p.35 "Entering an IP-Fax Destination"

p.33 "Specifying a Destination"

p.47 "Chain Dial", Facsimile Reference <Advanced Features>

p.47 "Redial", Facsimile Reference <Advanced Features>

5 Press the **[Start]** key.

🖉 Note

Do not lift the ADF during scanning.

After transmission, the standby display appears.

Sending originals using the exposure glass

- Make sure that Immed. TX is selected.
- ② Place the first page face down on the exposure glass.
- Dial a destination.
- ④ Make the scan settings you require.
- ⑤ Press the [Start] key.
- ③ Place the next original on the exposure glass within 10 seconds after the machine has finished scanning the first original.

		A3=>A3	۲.	101	
	smitting.		5	Transmission	Memory:
Place next	original within	O sec., then pres	ss [Start]. If none,		100%
Original:	V ⁶³ 0122	45678			Dest.
1					1 sets
				,	
					<u>~</u>
					(<u>#</u>)

- ⑦ Repeat steps ④ to ⑥ for all originals.
- Place the last original, and then press [
 Place is a structure of the press press [
 Place is a structure of the press pres

25

Canceling an Immediate Transmission

Before You Have Pressed the [Start] Key

Press the [Clear Modes] key.




🖉 Note

When the original is placed in the ADF, you can also cancel an Immediate Transmission by removing the original.

After You Have Pressed the [Start] Key

1 Press the **[Clear/Stop]** key, and then remove the original.

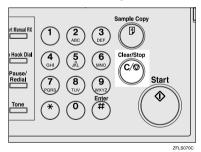

🔗 Note

- You can also cancel an Immediate Transmission by pressing [Stop Transmission].
- If the transmission finishes while you are carrying out this procedure, it will not be canceled.

Confirming Transmission

You can confirm transmission on the display, by report, or by e-mail.

Confirming on Display

Use the TX File Status. See p.31 "Checking the Transmission Result (TX File Status)", *Facsimile Reference <Advanced Features>*.

Confirming by Report

Print an Immediate TX Result Report for confirmation.

Memory Transmission

If a document cannot be sent, a Communication Failure Report is automatically printed. Or, you can use the Communication Result Report to check each transmission result regardless of status.

This report is printed each time a Memory Transmission is completed if you turn this report on with User Parameters. See p.166 "User Parameters", *Facsimile Reference <Advanced Features>* (switch 03, bit 0).

If you turn the Communication Result Report on, the Communication Failure Report is not print. See p.81 "Communication Failure Report", Facsimile Reference <Advanced Features>. See p.80 "Communication Result Report (Memory Transmission)", Facsimile Reference <Advanced Features>.

Immediate Transmission

You can confirm the result with an Immediate TX Result Report.

Select to print this report in User Parameters. A report is printed after every Immediate Transmission is completed. See p.166 "User Parameters", *Facsimile Reference <Advanced Features>* (switch 03, bit 5).

See p.81 "Immediate TX Result Report (Immediate Transmission)", *Facsimile Reference <Advanced Features>*.

Confirming by E-mail

Use the E-mail TX Results function, to send the contents of Communication Result Report and Immediate TX Result Report as a Journal by e-mail to your PC.

You must set this function for each communication.

🖉 Note

□ You can use the Sender Settings function to send the contents of Communication Result Report and Immediate TX Result Report as a Journal by e-mail to a specified user. See p.5 "Sender Settings", Facsimile Reference <Advanced Features>.

✓ Reference

The user code and e-mail address of the destination must be registered in the Destination List. See "Fax Destination", *General Settings Guide*.

E-mail TX Results must be programmed in a Quick Operation key. See p.144 "General Settings/Adjustment", *Facsimile Reference <Advanced Features>*.

Scan Settings

You may want to send many different types of fax messages. Some of these may be difficult to reproduce at the receiver's end. However, your machine has three settings that you can adjust to help you transmit your document with the best possible image quality.

Resolution:

Standard, Detail, Super Fine (optional)

Original Type:

Text, Text / Photo, Photo

Image Density (Contrast):

Auto Image Density, Manual Image Density (seven levels), Combined Auto and Manual Image Density

Resolution

Images and text are scanned into the machine by converting them to sequences of dots. The density of the dots determines the quality of the image and how long it takes to transmit. Therefore, images scanned at high resolution (Super Fine) have high quality but transmission takes longer. Conversely, low resolution (Standard) scanning results in lower quality but your original is sent more quickly. Select the setting that matches your needs based upon this trade off between speed and image clarity.

Standard (8 x 3.85 lines/mm, 200 x 100dpi) Select for originals containing normal size characters. Detail (8 x 7.7 lines/mm, 200 x 200dpi) Select for originals containing small characters or when you require greater clarity. This resolution is twice as fine as Standard.

Super Fine (optional expansion memory required: 16 x 15.4 lines/mm, 400 x 400dpi)

Select for originals with very fine details or when you require the best possible image clarity. This resolution is eight times finer than Standard.

Limitation

- □ If the other party's machine does not support the resolution at which you are sending, this machine automatically switches to a resolution that is supported. You can check the resolution at which you sent actually. See p.162 "Printing Journal", Facsimile Reference <Advanced Features>.
- Sending with Super Fine resolution requires that your machine has the optional expansion memory, and the other party's machine has the capability to receive fax messages at Super Fine resolution.

🖉 Note

- The machine supports Standard, Detail, and (with the optional expansion memory) Super Fine resolutions.
- □ You can select the resolution type that is selected right after the machine is turned on or modes are cleared with **[Scan End Reset]** under Gen. Settings/ Adjust. See p.144 "General Settings/ Adjustment", *Facsimile Reference <Advanced Features>*.

When using Internet Fax transmission, documents are sent at "Detail" resolution, even if you have specified "Fine". To send a document at "Super Fine" or "Fine", configure the Full Mode when registering the destinations in the Address Book. See p.53 "T.37 Full Mode".

1 Press [Resolution].

Standard	() Rea					
Resolution	Set original and specify destination.					
Text	<u></u> 8 &↔ (<u>63</u> _				
Original Type	Ï	Registration No). Hendal I	içud. 🛛 Adiy, F	sdure:	
Auto Image Density	Freq. AB CD EF GH IJK LMN OPO F					
(]Lighter Darker	1000021 New York OFFICE	COODO31 BERLIN O FFICE	C000043 ABC COMP ANY	TORONTO OFFICE	<u>200006</u> XYZ C LTD	
Auto Detect		1000013	1000093 SAN FRAN	1000101 SYDNEY 0	E00012 FACTO	
Scan Area	FACTORY	ffice	CISCO	FFICE		

2 Select the resolution you require, and then press [OK].

Resolution	O Ready Set original and specify destination.					
Standard Detail	<u>84</u> 0)	6 3 _		u na 🛛 nati - d'	whow s	
Super Fine	Registration No. Essential lague Adv. F Freq. AB CD EF GH IJK LMN I					
	C000023 New York OFFICE	E000031 BERLIN O FFICE	COOOD41 ABC COMP ANY	COODOSI TORONTO OFFICE	<u>000006</u> XYZ C LTD	
ОК	LOOODEL DETROIT FACTORY	<u>COODD13</u> London O ffice	COOOD91 SAN FRAN CISCO	CODD103 SYDNEY O FFICE	100012 FACTO	

🖉 Note

□ If you install the optional expansion memory, "Super Fine" will be displayed in the Resolution box.

Original Type

If your original contains photographs, illustrations, or diagrams with complex shading patterns or grays, select the appropriate original type to optimize image clarity.

Text

Select **[Text]** to send high-contrast black-and-white image originals. Use this setting even if your original contains text and photographs, or if you only want to send clearer text.

Text / Photo

Select **[Text / Photo]** to send an original containing both a high-contrast black-and-white image, such as text, and a halftone image, such as a photograph.

Photo

Select **[Photo]** to send an original containing a halftone image, such as a photograph or a colour original.

- □ If you select **[Text / Photo]** or **[Photo]**, the transmission will take longer than when **[Text]** is selected.
- □ If you send a fax message with **[Text / Photo]** or **[Photo]** and the background of the received image is dirty, reduce the density setting and resend the fax. See p.30 "Image Density (Contrast)".
- □ You can set the original type that is selected right after the machine is turned on or modes are cleared, with **[Original Type Priority]** under Gen. Settings/Adjust. See p.144 "General Settings/Adjustment", Facsimile Reference <Advanced Features>.

Press [Original Type].

Standard	() Ready						
Resolution	Set original and specify destination.						
Text	B &↔ 1 ⁰³						
Original Type	Ĩ	Registration No). Harai I	işidi. Adır. F	sine:		
Auto Image Density	Freq. A	B CD E	F GH I	JK LMN	OPQ F		
⊈Lighter Darker	1000021 New York OFFICE	COODO33 BERLIN O FFICE	COODELL ABC COMP ANY	TORONTO OFFICE	<u>100006</u> XYZ C LTD		
Auto Detect Scan Area	COODORS DETROIT FACTORY	<u>coccoll</u> London O ffice	1000093 SAN FRAN CISCO	COODID3 SYDNEY O FFICE	100012 FACTO		

2 Select the original type you require, and then press [OK].

Original Type	O Ready Set original and specify destination.				
Text / Photo	Registration No.	ual host Adv. Fedures			
Photo	Registration No. Essaval Equit Addr. Foodure Freq. AB CD EF GH IJK LMN OPQ				
	C000023 C000033 C00004 New York BERLIN 0 ABC C OFFICE FFICE ANY	OMP TORONTO XYZ C OFFICE LTD			
ОК	C000081 C000011 C00009 DETROIT London 0 SAN F FACTORY ffice CISCO	RAN SYDNEY 0 FACTO FFICE			

Image Density (Contrast)

The text and diagrams on originals should stand out clearly from the paper they are on. If your original has a darker background than normal (for example, a newspaper clipping), or if the writing is faint, adjust the image density.

Auto Image Density

The appropriate density setting for the original is automatically selected.

Manual Image Density

Use manual image density to set image density yourself.

You can select one of seven image density levels.

Combined Auto and Manual Image Density

You can only adjust image density for photographs, illustrations, or diagrams if the original has a dark background.

You can select one of seven image density levels.

🖉 Note

- Selecting [Text] or [Text / Photo] for the original type causes [Auto Image Density] to be selected.
- □ You can set the image density that is selected right after the machine is turned on or modes are cleared, with **[Auto Image Density]** under Gen. Settings/ Adjust. See p.144 "General Settings/ Adjustment", Facsimile Reference <Advanced Features>.
- **1** Select the type of image density.

Auto Image Density

 Make sure that [Auto Image Density] is selected.

Standard	O Ready				
Resolution	Set original and specify destination.				
Text	≊ ≉↔ € ³				
Original Type	Registration	No. Honial light Adv. Federes			
Auto Image Density	Freq. AB CD	EF GH IJK LMN OPQ F			
] (Lighter] Darker	C000023 C000033 New York BERLIN OFFICE FFICE	0 ABC COMP TORONTO XYZ C ANY OFFICE LTD			
Auto Detect Scan Area	C000081 C000013 DETROIT London FACTORY ffice	0 SAN FRAN SYDNEY 0 FACTO CISCO FFICE			

Manual Image Density

Make sure that [Auto Image Density] is not selected. If it has been selected, press [Auto Image Density] to turn it off.

Press [Lighter] or [Darker] to adjust the density.

The square moves.

Standard	() Ready
Resolution	Set original and specify destination.
Text	8 ₡↔ 1
Original Type	Registration No. Exclusion Input Adv. Exclusion
Auto Image Density	Freq. AB CD EF GH IJK LMN OPQ F
QLighter Darker	C000023 C000033 C000043 C000053 C000064 New York BERLIN 0 ABC COMP TORONTO XYZ C OFFICE FFICE ANY OFFICE LTD
Auto Detect Scan Area	C000091 C000011 C000091 C00012 C00012 DETRDIT London 0 SAN FRAN SYDNEY 0 FACTO FACTORY ffice CISCO FFICE

Combined Auto and Manual Image Density

• Select the [Auto Image Density].

The square moves.

Standard	O Ready Set original and specify destination.					
Resolution Text	8 ¢↔ €3					
Original Type	Registration No. Estabal laport Adv. Facility	20				
Auto Image Density	Freq. AB CD EF GH IJK LMN OPO					
QLighter Darker	C000021 C000031 C000043 C000053 C000 New York BERLIN 0 ABC COMP TORONTO XYZ OFFICE FFICE ANY OFFICE LTD	3 <u>06</u> Z C				
Auto Detect	2000083 2000013 2000093 2000103 2000 DETRUIT London 0 SAN ERAN SYDNEY 0 EAC					
Scan Area	FACTORY ffice CISCO FFICE					

Mixing Scan Settings for a Multiple Page Original

When sending an original of several pages, you can select a different image density, resolution, and original type setting for each page.

Place the original, select the scan settings for the first page, dial, and then press the **[Start]** key as you would normally. Then follow one of the following two procedures.

🖉 Note

It is recommended that originals be placed on the exposure glass when mixing scan settings for a multiple page original.

When placing originals on the exposure glass

- While the machine is beeping, you have about 60 seconds (10 seconds for Immediate Transmission) to select density, resolution, and original type. The remaining time is shown on the display.
- **1** Check which pages you want to scan with different settings.
- **2** Remove the previous page and place the next page.
- **3** Select the image density, resolution, and original type.

	Scanning 🚳					
	Place next original within 6 O sec., then press [Start]. If none,					
lext	Driginal: 1 012345678					
Auto Image Density						
↓] Lighter Darker						
Auto Detect						
Scan Area						

🖉 Note

□ Adjust the settings for each page before you press the **[Start]** key.

When placing originals in the optional Auto Document Feeder

🖉 Note

Depending on what time the scan settings are adjusted, the settings may not be reflected in the resulting operation.

1 Check which pages you want to scan with different settings.

2 Select the image density, resolution, and original type before the next page is scanned.

Standard Resolution Text Original Type Auto Image Density (Lighter Darker) Auto Detect St de Arco

Specifying a Destination

You can specify the destination using one of four methods.

Fax number

p.33 "Entering a Fax Number"

E-mail address p.34 "Entering an E-mail Address"

Entering an IP-Fax Destination

p.35 "Entering an IP-Fax Destination"

Destination list

p.38 "Using Destination Lists"

This section covers these functions and others in more detail.

🖉 Note

The display shows the percentage of free memory space for storing originals. Since fax numbers and email addresses are programmed in separate memory, dialing fax numbers using the number keys does not change the percentage on the display.

Entering a Fax Number

Enter numbers directly using the key pad on the right side of the control panel.

🖉 Note

- Maximum length of a fax number: 128 digits.
- You can insert pauses and tones in a fax number. See p.33 "Pause", p.34 "Tone".

1 Enter the fax number using the number keys.

O Rea Set original a	dy nd specify des	tination.			Informa	ition 100%	
B #~~} \	<u>83.</u> 0123	345678.	-	linn	ProgDest 1		
Registration No. Excelle light Adv. Features							
COODO23 New York OFFICE	COODOSS BERLIN O FFICE	ABC COMP ANY	COODOSI TORONTO OFFICE	1000063 XYZ CO., LTD	1000073 PARIS OF FICE	1/2	
COODOSI DETROIT FACTORY	London 0 ffice	CODOD93 SAN FRAN CISCO	COODIO3 SYDNEY O FFICE	FACTORY	<u>0000133 Att</u> Finland		

🖉 Note

- If you make a mistake, press the [Clear/Stop] key, and then enter again.
- □ If the optional extra G3 interface unit is installed, select G3 before you proceed to the next step. See p.59 "Changing the Line Port", Facsimile Reference <Advanced Features>.
- Press [ProgDest] after entering the fax number to store the fax number in the destination list.
- □ See p.37 "Registering Entered Destinations to the Address Book".

Pause

Press the **[Pause/Redial]** key when dialing or storing a number to insert a pause of about two seconds.



🖉 Note

- □ If you press the **[Pause/Redial]**key at the first digit, a redial occurs. See p.47 "Redial", *Facsimile Reference* <*Advanced Features*>.
- □ A pause is shown as a "-" on the display.

O Rea					Informa	tion
Set original ar ■ &↔ ヽ	63.0	tination.				100)
Add F	egistration No	4 4	<u> </u>	eatures OPQ RST	UWWXYZ	[a
COODO23 New York OFFICE	ECOCOUNT BERLIN O FFICE	COODO43 ABC COMP ANY	COODOSI TORONTO OFFICE	1000061 XYZ CO. LTD	PARIS OF FICE	1/2
COOCORD DETROIT FACTORY	<u>COOCOID</u> London O ffice	COODODI SAN FRAN CISCO	COODIO3 SYDNEY O FFICE	6000123 48 FACTORY	t <u>COOD 133 #88</u> Finland	

🖉 Note

You can also program numbers including pauses in destination lists.

Tone

This function allows a machine connected to a pulse dialing line to send tonal signals (for example if you want to use a special service on a tone dialing line). When you press the **[Tone]** key, the machine dials the number using tonal signals.

Limitation


Certain services may be unavailable when using the [Tone] key.

🖉 Note


□ A tone is shown as a "•" on the display.

Using the **[Tone]** key with On Hook Dial

1 Press the **[On Hook Dial]** key.

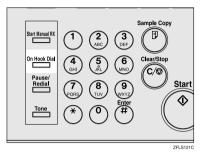

- 2 Enter the fax number using the number keys.
- **3** Press the **[Tone]** key.

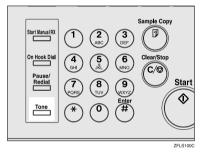

4 Enter the number you want to tone dial using the number keys.

Entering an E-mail Address

When using Internet Fax transmission, specify the e-mail address in place of the fax number. See p.51 "Internet Fax Functions (by E-Mail)".

🖉 Note

□ You can enter up to 128 characters.

1 Press **■***d*↔ to switch the destination to e-mail address.

O Rea Set original ar		tination.			Informa	
	G3 Registration N					
Freq. AB	1 1	1 1	IJK LMN	opq RST	UVW XYZ	[۵
C000021 New York OFFICE	COODD33 BERLIN O FFICE	COODO43 ABC COMP ANY	TORONTO OFFICE	<u>C000063</u> XYZ CO., LTD	COODO73 PARIS OF FICE	1/2
DETROIT FACTORY	<u>COOOD13</u> London O ffice	CODOD93 SAN FRAN CISCO	COODIDI SYDNEY O FFICE	E000123 ARE FACTORY	<u>0000133 ARR</u> Finland	


2 Press [Manual Input].

Ī	O Rea					Informa	tion
1	Set original ar	nd specify des	tination.				100%
	B &~> (🅭 То:			Tot	· ·	
		Registration N). Manual I	nput 🛛 Adiv. A	adure -		
	Freq. AE	CD E	F GH I	JK LMN	OPQ RST	UVW XYZ	a.
	C000213 LONDON 0	2000223 Donald	1000233 LEGAL DI	COOO333 NEWYORK	COOO243 PARIS BR	COOO253 ABC_NET	1/3
	FFICE		٧	BRANCH	ANCH		
1	[00026]	000271	[00028]	[00029]	[00030]	2000313	L
	Alex	Allen	ABC_NET	Dorothy	Frank	Jones	T

🖉 Note

 Depending on security settings, [Manual Input] may not be displayed, and be unable to input.

B Enter the e-mail address destination and then press [OK].

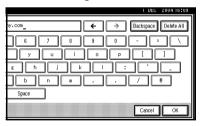

🖉 Note

- If you enter an incorrect character, press [Backspace] or [Delete All]. Then, re-enter the characters correctly.
- To change the e-mail address after pressing [OK], press [Edit Dest.], re-enter an e-mail address, and then press [OK].

PReference

"Entering Text", General Settings Guide

The destination is specified.

O Rea					Inform	
8 ¢↔	nd specify des To: al Registration No	bc8defcomp		länne	ProgDest 1	100%
Freq. AE	CD E	F GH I	JK	OPQ RST	UVW XYZ	ام
LONDON 0 FFICE	1000223 Donald	1000231 LEGAL DI V	LOOO333 NEWYORK BRANCH	COOO243 PARIS BR ANCH	1000251 ABC_NET	1/3
1000261 Alex	<u>000273</u> Allen	6000283 ABC_NET	<u>00029</u> 1 Dorothy	<u>2000303</u> Frank	1000311 Jones	

🖉 Note

 Press [ProgDest] in this order to store the entered e-mail address in the address book. See p.37 "Registering Entered Destinations to the Address Book".

Entering an IP-Fax Destination

When using IP-Fax transmission, specify the IP-Fax destination (IP address, host name, or alias telephone number) in place of the fax number. See p.67 "IP-Fax Function".

🖉 Note

□ You can enter up to 128 characters.

1 Press **■***d*↔ to switch the destination to IP-Fax destination.

Standard	O Rea					
Resolution	Set original and specify destination.					
Text	8 &↔ ₹	<u>63</u> _				
Original Type	1	Registration No). Hongai i	nput Adiv. A	्रव्याल्ड	
Auto Image Density	Freq. At	B CD E	F GH I	IJK LMN	OPQ F	
[]Lighter Darker	1000021 New York OFFICE	E000033 BERLIN O FFICE	COODO43 ABC COMP ANY	LOOOOSI TORONTO OFFICE	<u>200006</u> XYZ C LTD	
Auto Detect Scan Area	DETROIT FACTORY	<u>coocons</u> London O ffice	COODODI SAN FRAN CISCO	CODO 101 SYDNEY O FFICE	<u>00012</u> FACTO	

2 Press [Manual Input].

Standard	() Rea					
Resolution	······	Set original and specify destination.				
Text	8 &↔ (÷>_				
Original Type	ľ	Registration No	o. Manual I	nput 🛛 Adie, P	edure:	
Auto Image Density	Freq. AB CD EF GH IJK LMN OPO F					
QLighter Darker	1000021 New York OFFICE	COODO33 BERLIN O FFICE	COODO41 ABC COMP ANY	COODOSI TORONTO OFFICE	<u>000006</u> XYZ C LTD	
Auto Detect Scan Area	LOOOOSI DETROIT FACTORY	<u>coccois</u> London O ffice	1000093 SAN FRAN CISCO	COODIO SYDNEY O FFICE	£00012 FACTO	

🖉 Note

 Depending on security settings, [Manual Input] may not be displayed , and be unable to input.

Enter the IP-Fax destination and then press [OK].

🖉 Note

- □ If you have set both of "Enable H.323" and "Enable SIP" parameters to "On" with "IP-Fax Settings" under "Facsimile Features", **[Protocol]** appears. Press this button to select a protocol to be used.
- If you enter an incorrect character, press [Backspace] or [Delete All]. Then, re-enter the characters correctly.
- □ To change the IP-Fax destination after pressing **[OK]**, press **[Edit Dest.]**, re-enter an IP-Fax destination, and then press **[OK]**.

Reference

"Entering Text", General Settings Guide

The destination is specified.

Standard	O Rea	dy			
Resolution	Set original and specify destination.				
Text	≊&↔ <··> 192.168.0.11_				
Original Type	Add Registration No. Edit Dest. Adv. Features				
Auto Image Density	Freq. AB CD EF GH IJK LMN OPQ F				
[]Lighter Darker	1000021 New York OFFICE	COODOSI BERLIN O FFICE	ABC COMP ANY	TORONTO OFFICE	<u>C00006</u> XYZ C LTD
Auto Detect Scan Area	DETROIT FACTORY	COODD13 London O ffice	COOOD93 SAN FRAN CISCO	CODD101 SYDNEY O FFICE	<u>000012</u> FACTO

🖉 Note

Press [ProgDest] in this order to store the entered IP-Fax destination in the Address Book. See p.37 "Registering Entered Destinations to the Address Book".

VIP-Fax Destination

Depending on the network to which this machine is connected or this machine's configuration, enter the IP-Fax destination as follows:

When not using a gatekeeper/SIP server

- From IP-Fax to IP-Fax Specify the IP address or host name of the receiving machine. Example: IP address: 192.168.1.10 Example: Host name: tokyo.abc.co.jp
- From IP-Fax to G3 fax Specify the G3 fax telephone number of the receiving machine.
 Example :0312345678

When using a gatekeeper/SIP server

- From IP-Fax to IP-Fax Specify the alias telephone number of the receiving machine. Example: 0311119999 (alias telephone number) Example: 9999 (ID number)
- From IP-Fax to G3 fax Specify the G3 fax telephone number of the receiving machine.
 Example) 0312345678

🖉 Note

- □ When you enter a destination via a gateway (G3 fax connected to the public telephone line, etc.) into the Address Book or Destination List, you must specify its terminal telephone number. To send from an IP-Fax to G3 fax without using gatekeeper or SIP server, you must register the gateway also. See p.150 "IP-Fax Settings", Facsimile Reference <Advanced Features>
- □ When you specify a destination with IP-Fax, depending on the receiver's network configuration, you may need to specify the IP address and number of the receiving machine. For example, if the receiver's IP address is "192.168.1.10" and the port number is "2100", specify "192.168.1.10:2100". Ask the network administrator for details.
- When you specify a host name, depending on the receiver's network configuration, you may need to specify the host name and port number of the receiving machine. For example, if the receiver's host name is "tokyo.abc.co.jp" and the port number is "2100", specify "tokyo.abc.co.jp". Ask the network administrator for details.
- □ An alias telephone number is a telephone number available in the network registered in the gatekeeper.
- An ID number identifies the gateway registered in this machine.
- Pay attention to the number of telephone number digits set in the gateway/IP-address conversion table to avoid transmission error.

Registering Entered Destinations to the Address Book

You can register a fax number, e-mail address, or IP-Fax destination to the Address Book.

When registering a destination directly entered or displayed on the Redial screen in the Address Book, **[ProgDest]** appears in the destination field.

See "Fax Destination" and "E-mail Destination", *General Settings Guide*.

🖉 Note

- Depending on security settings, [ProgDest] may not be displayed, and not be registered.
- □ When you press the **[Facsimile]** key after changing the contents of the Address Book, the "Destination list/machine settings have been updated" message appears. Press **[Exit]**. The standby display appears.


Reference

"Fax Destination", General Settings Guide

"E-mail Destination", General Settings Guide

"Registering Names to a Group", *General Settings Guide*

1 Press [ProgDest].

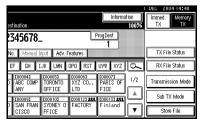

2 Press [Names] and enter any necessary information.



3 Press [OK].

Using Destination Lists

When you program a destination number into a destination list, you can specify the destination by just selecting the Quick Dial key from the destination list.

The programmed name appears on Quick Dial key.

Pressing **E** witch the destination list between fax number, e-mail address, and IP-Fax number.

If you program multiple destinations into a Group, you can send messages to all destinations in that Group using just a few keystrokes. Destinations programmed in a group are indicated by **444**.

Preparation

In the destination list, program an individual fax number, IP-Fax number, e-mail address and/or groups of destinations. See "Fax Destination", "E-mail Destination", and "Registering Names to a Group", General Settings Guide.

Limitation

- Group Dial can be used only for Memory Transmission; it cannot be used for Immediate Transmission. The machine automatically changes to Memory Transmission when you use Group Dial.
- A total of 500 destinations (per message) can be programmed for Group Dial.

🖉 Note

- To check the contents of Quick Dial, print the destination list. See "Administrator Tools", General Settings Guide.
- □ A stored name can be printed out on the first page of a received fax at the other end. See p.73 "Label Insertion", *Facsimile Reference <Advanced Features>*.
- □ To check the contents of the Groups, print the list. See "Administrator Tools", *General Settings Guide*.
- Press **■***d* to switch the destination between fax number, e-mail address, and IP-Fax number.
- **2** Press the title key where the desired destination is programmed.

For example, if you want to specify "NEW YORK OFFICE" programmed in "LMN", press [LMN].

	O Ready Information Set original and specify destination. 100%						
KGTO Registration No. Exercise Adv. Foodures							
Freq.	AB CD E	FGH	IJK LMN	OPQ RST	UVW XYZ	6	
COODD21 New Yorl OFFICE	K BERLIN O FFICE	COODO41 ABC COMP ANY	COODOSI TORONTO OFFICE	1000063 XYZ CO., LTD	COODO73 PARIS OF FICE	1/2	
DETROIT FACTORY	London 0 ffice	COODO93 SAN FRAN CISCO	COODIO1 SYDNEY O FFICE	COODI23 ALL FACTORY	<u>000133488</u> Finland		

🖉 Note


There are three types of title for destination lists; "Title 1", "Title 2", and "Title 3". The above display shows "Title 1".

Switching the titles of destination lists

- Press 💁
- **2** Press [Switch Title].

3 Select the type of the title, and then press [Exit].

3 Select a destination.

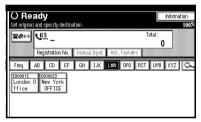


🖉 Note

Pressing switches the destination list between fax number, e-mail address, and IP-Fax number.

Specifying a single destination

Press the Quick Dial key programmed with the desired destination.

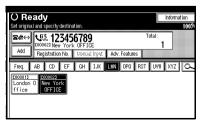

- 🖉 Note
- □ If the desired Quick Dial key is not shown, press [▲] and
 [▼] to look through the list.
- To cancel the selection, press the selected Quick Dial key again. You can also press the [Clear/Stop] key to cancel the selection.
- □ To select more destinations, repeat steps 2 and 3.

Specifying a group of destinations

Press the Quick Dial key programmed with the desired group.

O Rea Set original a	ı dy ınd specify des	tination.			Informa	ition 98%
	000013 Londo Registration N			To eatures	^{tal:} 3	Nect
Freq.	B CD E	F GH I	JK LMN	OPQ RST	UVW XYZ	امہ
COODO23 New York OFFICE	ECODODICIA BERLIN O FFICE	COUDDAD ABC COMP ANY	COODOSI TORONTO OFFICE	1000061 XYZ CO., LTD	COODO73 PARIS OF FICE	1/2
DETROIT FACTORY	London 0 ffice	COODO92 SAN FRAN CISCO	COODID3 SYDNEY O FFICE	6000123 411 FACTORY	[10001331.444 Finland	

- The Destination List registered in the group selected in appears.
- □ To cancel any destination(s) among the group, press [▲Prev.] and [▼Next] to display the desired destination. Then, press the [Clear/Stop] key.

- \Box If a destination where a fax number, e-mail address, or IP-Fax number is not programmed is included in the specified group, the "The specified group contains some invalid destination(s). Do you want to select only valid destination(s)?" message appears. Press [Select] to specify destinations where the fax number, the e-mail address, or IP-Fax is programmed. Press [Cancel] to change the destination. If the destination in destination type does not exist, you can prioritize a destination you want to quote. See p.166 "User Parameters", Facsimile Reference <Advanced Features> (switch 32, bit 0).
- □ To select more groups, repeat steps ② and ③.

4 Press the [Start] key.

Searching for a Destination

Use this procedure to search through the destination lists for a particular destination.

- Search by Destination Name p.41 "Search by Destination Name"
- Search by Fax Number p.42 "Search by Fax Number"
- Search by E-mail Address p.43 "Search by E-mail Address"

Search by IP-Fax Destination

p.44 "Search by IP-Fax Destination"

- Search by LDAP Server p.45 "Search by LDAP Server"
- Specifying a Registration Number p.47 "Specifying a Registration Number"

 
🖉 Note


- If you press [Fax], [E-mail] or [IP-Fax] on the search result display, you can switch between fax destination, e-mail destination and IP-Fax destination.
- The search returns only destinations whose beginnings match the entered name.
- A warning appears if the search returns more than 100 items. Press
 [OK] and change the destination name to view fewer destinations.

Search by Destination Name

🖉 Note

This function distinguishes between small and capital letters.



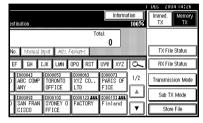

2 Press [Advanced Search].

Search / Switch List	Select item.		
Advanced Search			
Switch Title		Search I DAP	1

3 Press [Search by Dest. Name].

Search / Switch List	Advanced Search	Enter the following details to se
	Search by Dest. Name	
	[]	
	E-mail Address	
	Search IP-Fax Dest.	
Advanced Search		
Switch Title		

4 Enter a destination name to search for, and then press [OK].



🖉 Note

□ If you enter a wrong destination name, press [←] / [→] and [Backspace] / [Delete All], and then enter the destination name again.

5 Confirm the entered character and press [OK].

٦	Advanced Search	Enter the following details to search.	
ſ	Search by Dest. Name	8	
	Fax Number E-mail Address Search IP-Fax Dest.		
1			

When the search is finished, a result appears.

6 Select a destination.

Select item.		
[00009]	SAN FRANCISCO	0123456789
[00010]	SYDNEY OFFICE	012345678
[00016] ###	Spain	
Search Add		ch LDAP

🖉 Note

□ If the desired destination does not appear, use [▲] or [▼] to scroll through the list.

Search by Fax Number

1 Press , the magnifier icon.

					DEG 2004 14.26
estination.			Informa		Immed. TX TX
			tal:		
No. 🛛 Menual I	YHR ADH F				TX File Status
EF GH I	JK LMN	OPQ RST	UVW XYZ	0	RX File Status
ABC COMP	TORONTO OFFICE	1000061 XYZ CO.,	COOCO71 PARIS OF	1/2	Transmission Mode
[ANT]	L000101	LIU (000123 ###	E000133 488		Sub TX Mode
D SAN FRAN CISCO	SYDNEY O FFICE	FACTORY	Finland	▼	Store File

2 Press [Advanced Search].

Search / Switch List	Select item.		
Advanced Search			
Switch Title	Search Address Book	Search LDAP	

B Press [Fax Number].

	Advanced Search	Enter the following details to search.	
	Search by Dest. Name		
	Fax Number		
	E-mail Address Search IP-Fax Dest.		
3			

4 Enter a number to search for, and then press [OK].

	I DEC	2004 16:24
Enter the following detai	Search by Fax No.	
	Enter Fax number with the Number keys, then press [OK].	
	0123_	
	€⇒	Clear
	Cancel	ОК

🖉 Note

□ If you enter a wrong number, press [←] / [→] and [Clear], and then enter the number again.

5 Confirm the entered fax numbers and press [OK].

Enter the following details to search.		
123		
	Cancel	OK
		123

A search-in-progress message appears.

When the search is finished, a result appears.

6 Select a destination.

Select ite	m.							
[00001]	London Office	0123456780						
[00007]	PARIS OFFICE	012345786						
[00008]	DETROIT FACTORY	0123456788						
[00009]	SAN FRANCISCO	0123456789						
[00010]	SYDNEY OFFICE	012345678						
· · · · · · · · · · · · · · · · · · ·								

🖉 Note

□ If the desired destination does not appear, use [▲] or [▼] to scroll through the list.

Search by E-mail Address

Limitation

- You can search by e-mail address only. To search by fax number, see p.42 "Search by Fax Number".
- Press , the magnifier icon.

estination.			Inform	100%	IDEC 2004 14:28
No. 🛛 Matual II	yer Adv. F		tal:		TX File Status
EF GH I	JK LMN	OPQ RST	UVW XYZ	6	RX File Status
ABC COMP ANY	TORONTO OFFICE	1000063 XYZ CO., LTD	COODO71 PARIS OF FICE	1/2	Transmission Mode
COODO93 SAN FRAN CISCO	COODID3 SYDNEY O FFICE	FACTORY	Finland		Sub TX Mode Store File


2 Press [Advanced Search].

Search / Switch List	Select item.	
Advanced Search		
Control Tall	1	
Switch Title		

3 Press [E-mail Address].

Search / Switch List	Advanced Search	Enter the following details to sea
	Search by Dest. Name	
	Fax Number E-mail Address Search IP-Fax Dest	
Advanced Search	Search IP-Pac Dest.	
Switch Title		

4 Enter an e-mail address to search for, and then press [OK].

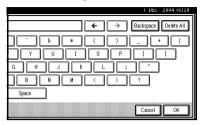

🖉 Note

□ If you enter a wrong e-mail address, press [←] / [→] and [Backspace] / [Delete All], and then enter the e-mail address again.

5 Confirm the entered characters and press [OK].

_		I DEC	2004 16:28
	Enter the following details to search.		
parameter (
3			
7			
200			
	X		
]			
	ſ	Cancel	
		Calcol	

A search-in-progress message appears.

When the search is finished, a result appears.

6 Select a destination.

Sele	Select item.								
C 000	06]	XYZ CO.,LTD		3333333333					
G									
[000]	07]	PARIS OFFICE		012345786					
r 000	193	X STORE		0123456781					
L		IT OTOTIC		0120100101					
			Search I Da	v I					
	a cir maan		Search ED						
_									

🖉 Note

□ If the desired destination does not appear, use [▲] or [▼] to scroll through the list.

Search by IP-Fax Destination

Press , the magnifier icon.

estination.			Informa	100%	DEC 2004 14:26
4		To	tal:		TX File Status
EF GH I	JK LMN	OPQ RST	UVW XYZ	٩	RX File Status
ABC COMP	TORONTO DEFICE	1000061 XYZ CO.,	FICE	1/2	Transmission Mode
COUCOUSE COUCOUSE CISCO	COODID3 SYDNEY O FFICE	2000123 #88 FACTORY	<u>1000133488</u> Finland		Sub TX Mode Store File


2 Press [Advanced Search].

Search / Switch List	Select item.
Advanced Search	
Switch Title	Search Address Book Search LDAP

B Press [Search IP-Fax Dest.].

	Advanced Search	Enter the following details to search.	
Î	Search by Dest. Name		
	Fax Number		
	E-mail Address		
	Search IP-Fax Dest.		
L			
			ſ

4 Enter an IP-Fax destination to search for, and then press [OK].

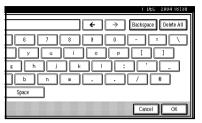

🖉 Note

□ If you enter a wrong destination, press [←] / [→] and [Backspace] / [Delete All] and then enter the destination again.

5 Confirm entered IP-Fax destination and press [OK].

		I DEC	2004 16:30
	Enter the following details to search.		
-			
2			
3			
1			
	192		
		.	1 <u> </u>

A search-in-progress message appears.

When the search is finished, a result appears.

6 Select a destination.

Select item	l.					
[00001]	London Office	0123456780				
[00003]	BERLIN OFFICE	987654321				
[00004]	ABC COMPANY	111111111				
[00005]	TORONTO OFFICE	222222				
[00006]	XYZ CO.,LTD	888888888				
Search Address Book Search LDAP						

🖉 Note

□ If the desired destination does not appear, use [▲] or [▼] to scroll through the list.

Search by LDAP Server



estination.			Informa	100%	Immed. Memory TX TX
		Τσ	tal:		
No. Manual I	YHR ADH F				TX File Status
EF GH 1	JK LMN	OPQ RST	UVW XYZ	<u>a</u>	RX File Status
D ABC COMP	TORONTO	1000061 XYZ CO.,	2000073 PARIS OF	1/2	Transmission Mode
E000093	OFFICE	LIU (00012] ###	FICE		Sub TX Mode
D SAN FRAN CISCO	SYDNEY O FFICE	FACTORY	Finland	T	Store File

- 2 Press [Search LDAP].
- B Press [Select Server].
- 4 Select the LDAP server to search for.

🖉 Note

- □ LDAP servers can be programmed under System Setting. See *Network Guide* for the details.
- Make sure at least one LDAP server is highlighted. If no LDAP server is selected, an error message appears after you start searching.

5 Press [OK].

6 Press [Advanced Search].

Search / Switch List	Select item.
Select Server	
Advanced Search	
Switch Title	Search Address Book Search LDAP

2 Enter a partial string for each search condition.

Name	Search Beginning Word
	Search beginning word
E-mail Address	Search Beginning Word
FaxNumber	Search Beginning Word
Company Name	Search Beginning Word
Department Name	Search Beginning Word

🖉 Note

- Conditions (Name, E-mail Address, Fax Number, Company Name, and Department Name) are those programmed in the LDAP server.
- Press each condition to display the entry field, where you enter necessary information.
- You can add one additional search condition for LDAP servers by specifying the Arbitrary Search Condition under Program/Change/Delete LDAP Server under System Settings. See Network Guide for the details.
- The string you enter in the [Name] condition field is read as the first or last name, depending on the administrative setting. For example, to search for the name "John Doe", ask the system administrator whether you should enter "John" or "Doe".

8 Press [Search Criteria] for each condition, and then select the search criteria.

ll.	_		
	Search Beginning Word	Search Criteria	Search Beginning Word
	Search Beginning Word	Search Criteria	Search End Word
	Search Beginning Word	Search Criteria	Exact Match
	Search Beginning Word	Search Criteria	Include One of Words
	Search Beginning Word	Search Criteria	Exclude Words
			Fuzzy Search

- The meanings of the search criteria are as follows:
 - **[Search Beginning Word]**: Search for strings that start with the specified character. Example) When searching for "ABC", enter "A".
 - **[Search End Word]**: Search for strings that end with the specified character. Example) When searching for "ABC", enter "C".
 - **[Exact Match]**: Search for strings that fully match the specified character. Example) When searching for "ABC", enter "ABC".
 - [Include One of Words]: Search for strings that include the specified character. Example) When searching for "ABC", enter "A", "B", or "C".
 - **[Exclude Words]**: Search for strings that do not include the specified character. Example) When searching for "ABC", enter "D".
 - **[Fuzzy Search]**: Perform a fuzzy search (according to the searching method supported by the LDAP server).

9 Press [OK].

🖉 Note

- □ Although one user can program multiple e-mail addresses, only one address can be retrieved by the search. The address retrieved by the search depends on the searching method supported by the LDAP server. However, the address programmed first is normally retrieved.
- Press [Detail] to display the detailed information of the selected destination.

When the search is finished, the search result appears.

 
1 Select a destination.

🖉 Note

☐ If the required destination does not appear, press [▲] or [▼] to display it.


Specifying a Registration Number

Use this procedure to select a destination by specifying a registration number.



2 Press [Registration No.].

The registration number entry display appears. **B** Enter a registration number using the number keys.

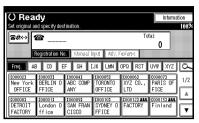

🖉 Note

□ You do not need to enter the first zeros of a registration number when the display prompts you to enter five digits. If you do not enter 5 digits, press the **[#]** key to complete the entry.

The corresponding destination appears.

	O Ready Information						
Set original ar	nd specify des	tination.				100%	
	toooosa toronto Office 1						
Add	Add Registration No. Advanced input Adv. Features						
Freq. A							
L000021 New York	E000033 BERLIN O	LOOOO41 ABC COMP	COODOSI TORONTO	1000061 XYZ CO.,	COODO71 PARIS OF	1/2	
OFFICE	FFICE	ANY	OFFICE	LTD	FICE		
DETROIT FACTORY	London 0	COODO93 SAN FRAN CISCO	COODION SYDNEY O FFICE	E000123 ARE FACTORY	<u>1000133 488</u> Finland		

- Title word key is switched to the one that the specified destination is programmed in.
- □ If the "Cannot find the specified Registration No." message appears, the specified registration number is wrong. Press [Exit], check the registration number again, and then follow the procedure from step **①**. If the "No valid destination under the specified No." message appears, the **■** key is wrong. Press [Exit], and then follow the procedure from step **①**.

Reception

There are two ways you can set up your machine to handle incoming calls:

- Manual Reception (external telephone required)
- Auto Reception

You can change the reception mode only if a standard G3 line is used.

You cannot change the reception mode when a line other than the standard G3 line (G3-2 or G3-3) is used.

Manual Reception

When a telephone call comes in, the machine rings. If the call is a fax message, you must switch manually to facsimile mode.

Auto Reception

When a telephone call comes in, the machine automatically receives it as a fax message. Use this setting on a dedicated fax line.

🖉 Note

□ The external telephone is required to use this machine as a telephone.

Switching the Reception Mode

You can switch reception modes using the Reception Settings menu (under Facsimile Features). See p.147 "Reception Settings", Facsimile Reference <Advanced Features>.

If you program a Quick Operation key with Switch Reception Mode, you can switch reception mode quickly.


Preparation

You can only use this function after programming a Quick Operation key as the reception mode switch with **[Quick Operation Key 1]**, **[Quick Operation Key 2]**, or **[Quick Operation Key 3]** under Gen. Settings/ Adjust. See p.144 "General Settings/Adjustment", *Facsimile Reference <Advanced Features>*.

1 Press the [Switch RX Mode] Quick Operation key.

				1	DEC	2004 15:30
estination.			Inform	mation 10.0%	Imme TX	1. Memory TX
		To			Swit	ch RX Mode
No. Monual I	nyar 🛛 Adiya ƙ				TX	File Status
EF GH 1	JK LMN	OPQ RST	UVW XYZ	z l Q	RX	File Status
ABC COMP	TORONTO	1000061 XYZ CO.,	COODO73 PARIS OF		Transi	mission Mode
L000093	0FFICE 2000102	LIU 2000123 #88	FICE 2000133.28		Su	b TX Mode
D SAN FRAN CISCO	SYDNEY O FFICE	FACTORY	Finland			store File

2 Select the reception mode, and then press [OK].

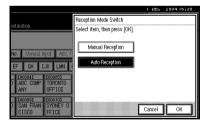

The standby display appears.

🔗 Note

□ To cancel the selection, press [Cancel].

Receiving a Fax in Manual Reception Mode

- When the machine rings, pick up the handset of the external telephone.
- 2 If you hear beeps, press the [Start] key or the [Start Manual RX] key. (The [Start] key is only available in facsimile mode when an original is not placed.)
- **B** Replace the handset of the external telephone. The machine will start receiving.

Limitation

 When printing documents stored in the Document Server, the [Start Manual RX] key or the [Start] key cannot be used to switch to facsimile mode. Press the [2] key of the external telephone.

3. Using Internet Fax Functions

There are two types of Internet Fax function.


- Internet Fax Functions (by E-Mail). See p.51 "Internet Fax Functions (by E-Mail)".
- IP-Fax Function. See p.67 "IP-Fax Function".

Internet Fax Functions (by E-Mail)

This machine converts scanned document images to e-mail format and transmits the data over the Internet.

The e-mail sent by this machine can be received by another Internet Fax machine. Instead of dialing the telephone number of the destination you want to send to, you enter the relevant e-mail address.

You can also print or forward received e-mail messages.

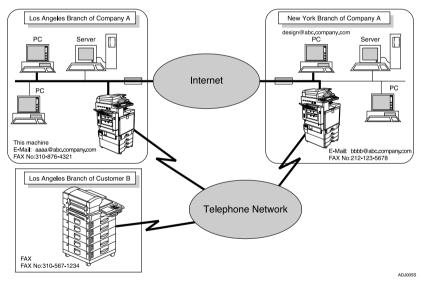

- In the following explanation, Internet Fax Functions (by E-Mail) is referred to as "Internet Fax".
- □ This machine must be connected to a LAN and set up correctly in order to use its Internet Fax functions. See "Connection and Setup", *Network Guide*.
- □ The Internet Fax function supported by this machine is compliant with ITU-T Rec. T.37. See p.206 "Compatible Machines", *Facsimile Reference <Advanced Features>*.
- □ You can receive e-mail messages with an attached TIFF-F image from computers.

Internet Fax Precautions

- Internet Fax communicates with a server over a LAN. It cannot communicate directly with other parties.
- If a transmission is not successful, this machine usually receives an e-mail error notification. See p.199 "Server-Generated Error E-mail", *Facsimile Reference <Advanced Features>*. However, e-mail error notifications may not be transmitted for various reasons. We recommend you confirm receipt of important document by calling the other party.
- The level of security for Internet communications is low. We recommend you use the telephone network for confidential communications.
- Voice communication is not supported over a LAN.
- Internet Fax delivery might be delayed due to network congestion. Use a standard fax whenever communication is time sensitive.
- If you use this machine with dial-up connection, the Auto E-mail Reception function accesses the provider's server via telephone line and may incur call charges even if you do not receive e-mail. To reduce the frequency of server access, specify a large E-mail Reception Interval. For the E-mail Reception Interval setting, see "File Transfer", *Network Guide*.
- You cannot place pages on the exposure glass after you have started using the ADF.

Functions Not Supported by E-mail Transmission

The following functions are supported with standard fax transmission, but not with Internet Faxing.

- Immediate Transmission
- Confidential Transmission
- ID Transmission
- Polling Transmission
- Chain Dial
- Transmission by SUB Code
- On Hook Dial
- Manual Dial
- JBIG Transmission
- Batch Transmission
- ECM (Error Correction Mode)
- Memory File Transfer

Functions Not Supported by E-mail Reception

The following functions are supported with standard fax reception, but not with Internet Faxing.

- Confidential Reception
- Memory Lock Reception
- Polling Reception
- SUB Code reception
- Authorized Reception
- Reception File Print Quantity

T.37 Full Mode

This machine is T.37 full mode compatible. T.37 full mode is an international standard for Internet Fax transmission. (ITU-T announcement, RFC2532)

When an Internet Fax communication is made between T.37 full mode compatible machines, the receiver side sends the return receipt (dispatched) in response to the reception confirmation request attached to the sent e-mail. This return receipt includes the receiver's reception capability information (compression type, paper size, and resolution). When the receiver is programmed in the Address Book as the full mode destination, the sender side automatically registers the received information in the Address Book. This allows you to send subsequent an Internet Fax document to that receiver based on this information.

🖉 Note

- When you program a destination in the Address Book via a Web Image Monitor, program the T.37 full mode supporting machine as the T.37 full mode destination. See p.125 "Programming Destination Information from Web Browser", *Facsimile Reference <Advanced Features>*.
- When you use Internet Fax transmission, you can send a document to multiple destinations at once. However, when you specify full mode destinations, since each destination may have a different reception capability, transmission is done one by one in the specified transmission order.

Returning a Return Receipt

When an e-mail is received, if the sender requests reception confirmation, the receiver sends a return receipt that includes the receiving machine's capability (compression type, paper size, and resolution).

Registering the Received Reception Confirmation Contents

When the sender receives the return receipt that includes the receiver's reception capability, the sender checks the sent final recipient address is programmed in the Address Book. If it is programmed as a full mode destination, the sender automatically registers the receiver's reception capability. The registered reception capability is updated each time the sender receives new reception capability information. The sender can send documents to the receiver based on this information.

Requesting a Reception Confirmation

When the receiver's machine supports T.37 full mode and is programmed as a full mode machine and its reception capability is set in the Address Book, the machine requests the reception confirmation from the receiver. Then, the machine will receive the return receipt (sent) that includes the receiver's reception capability.

- □ If the receiver is programmed as the simple mode machine or not programmed in the Address Book, the receiver's reception capability cannot be registered.
- □ If you know the receiver's reception capability, you can set it manually. However, this setting will be overwritten when the machine receives the return receipt. See p.125 "Programming Destination Information from Web Browser", *Facsimile Reference <Advanced Features>*.

Sending Internet Fax Documents

You can send Internet Fax documents only by Memory Transmission. If you specify Immediate Transmission in Internet Fax, the mode is switched to Memory Transmission when one email address or more is specified.

Preparation

You need to make System Settings beforehand. See "Connection and Setup", *Network Guide*.

When sending documents, you can set e-mail options using [Sub TX Mode].

You can set the following options:

Enter Subject

Allows you to enter a subject for the document you want to send.

🖉 Note

- For convenience, program frequently-used subjects. "[Urgent]", and "[High]" are programmed as default. See "Connection and Setup", Network Guide.
- □ You can enter up to 128 characters in total.
- □ If you send e-mail without setting a subject/text in "E-mail Options" under "Sub TX Mode", a subject is automatically inserted. For details about how the subject is automatically inserted, see p.60 "About the Email Subject" and p.66 "Received Images".
- You cannot send a subject only as e-mail without an original.

Enter Text

Allows you to enter the text to be transmitted.

🖉 Note

- To enter text, program it beforehand. See "Connection and Setup", Network Guide.
- You cannot send a text only without an original.

Reception Notice

You can confirm sent documents were properly received using email or Journal.

BCC Transmission

E-mails are sent to all specified destinations as bcc.

Important

- □ If power outage lasts about an hour, or the machine is disconnected from the power outlet for about an hour, documents stored in the fax machine's memory are deleted. If any document is deleted, the Power Failure Report is automatically printed out when the main power switch is turned on. Use this report to check which documents were deleted. Simply turning off the power by pressing the Operation switch does not delete stored documents. See p.198 "Turning Off the Main Power / When a Power Failure Occurs", Facsimile Reference < Advanced Features>.
- You may not be able to send large files as e-mail, depending on email environment conditions.
- □ The level of security for Internet communications is low. Use of the telephone network is recommended for confidential communications.

Limitation

- When available memory is low, you may not be able to send Internet Fax documents.
- Depending on security settings, you must specify a sender name so the receiving party can recognize the sender. Specify the sender name using one of the following methods:
 - Under [E-mail Account], set the sending machine's mail address and [Administrator's E-mail Address], and set [Auto Specify Sender Name] to [On]. See "File Transfer", Network Guide.
 - Specify a sender whose mail address is registered under Sender Settings. See "Fax Destination", General Settings Guide and p.5 "Sender Settings", Facsimile Reference <Advanced Features>

🖉 Note

- Because the machine sends documents as e-mail messages with an attached TIFF-F image, viewer applications are required in order to view documents when they are received on a computer.
- You can limit the size of transmitted e-mail messages in "E-mail Settings" of "Fax Features". See p.148
 "E-mail Settings", Facsimile Reference <Advanced Features>.
- See p.66 "Received Images" for how e-mail is actually received by the computer when it is sent with mail options selected.
- When you send Internet Fax documents specifying a user code, and the e-mail address is set as the routing destination of the specified user code, a Communication Result Report is sent after the transmission is completed. This makes it possible to verify the result of a transmission.

- You can specify fax destination and Internet Fax destination simultaneously.
- You cannot send e-mails to a destination as cc.
- 1 Press **■** to switch the destination to e-mail address.

	O Ready Get original and specify destination.						
8¢ ↔				To	tal:		
Freg. 1	Incension	D. Monual F. CH	işer Adv. F	OPO RST			
LOODO21 New Yor	LOODOSI k BERLIN O	LOODO41 ABC COMP	2000051 TORONTO	1000061 XYZ CO.,	COODO71 PARIS OF	1/2	
OFFICE	FFICE 10000013 London 0	ANY <u> 1000093</u> SAN FRAN	OFFICE COODIO3 SYDNEY O	LTD COODI23 ALL FACTORY	FICE <u> £000133</u> £1	L	
FACTORY	ffice	CISCO	FFICE			Y	

2 When you set an e-mail option, press [Sub TX Mode].

	DEG 2004 16:07
estination. 100%	Immed. Memory TX TX
Total: O	
No. Manual Input Adv. Factures	TX File Status
EF GH IJK LMN OPQ RST UVW XYZ 🕰	RX File Status
	Transmission Mode
[C000283] [C000293] [C000303] [C000313]	Sub TX Mode
ABC_NET Dorothy Frank Jones 🔻	Store File


If you are not setting e-mail options, proceed to step **G**.

B Press [E-mail Options].

	DEC 2004 16:38
estination.	Immed. Memory TX TX
Total:	
No. Manual Input Adv. Fasters	TX File Status
ок	RX File Status
2 Sided Original Stamp E-mail Options	Transmission Mode
	Sub TX Mode
Auto Document Select Stored File Options	Store File


To enter the subject

Press [Change] for Enter Subject.

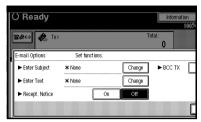

There are two methods of entering a subject: Selecting from programmed subjects, or entering characters directly. If you are entering characters, proceed to step **3**.

2 Select the subject from the displayed list.

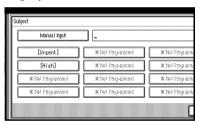

The selected subject appears in the manual input column.

Subject		
Manual Input	[High]_	
[Urgent]	* Nel Propansed	* Nel Freguenn
[High]	* Net Programmed	* Nel Fregenn
* Noi Frequenced	* Noi Programmed	* Nol Program
* Noi Emplanmed	* Ni impanned	* Nei Program


🖉 Note

You can enter extra characters after the selected subject.
 If you do not need to enter extra characters, proceed to step **6**.

Press [Manual Input].

Subject		
Manual Input	[Hish]_	
[Urgent]	* Nei Programmed	* Nel Propann
[Hish]	* Net Programmed	* Nel Programm
* Noi Programmed	* Not Programmed	* Noi Programm
* Nei Pregrammed	* Not Programmed	* Nei Preși anni

After entering the subject, press [OK].

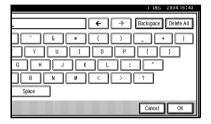

PReference

"Entering Text", General Settings Guide

Entered characters appear in the manual input column.




🖉 Note

You can add a programmed subject after the entered subject. Select the subject from the displayed subjects.

6 Press [OK].

[High]REPORT_	
* Nel Propensed	* Net Programmed
* Nel Programmed	* Nel Programmed 1/2
* Noi Frogrammed	* Nol Programmed
* No Programmed	* Not Programmed

To enter the text

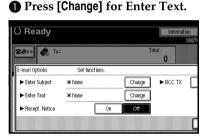


2 Select a text, and then press [OK].



To set reception notice


Select [On] or [Off] for Recept. Notice.

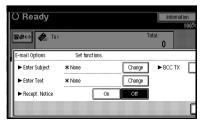


p.60 "Confirming Reception"

To set BCC transmission


Select [Yes] or [No] for BCC TX.

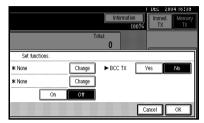

4 Press [OK].

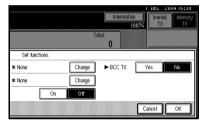

5 Press [OK].

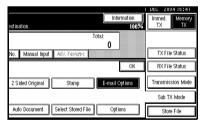

6 Place the original.

🖉 Note

- Place the original in the same manner as a standard fax. See p.11 "Placing Originals".
- Use any method to place the original, and then press the [Start] key.

p.11 "Placing Originals"

2 Select the scan settings you require.

Standard	() Ready						
Resolution	Set original and specify destination.						
Text	宮怨 ↔ 於 TO:						
Original Type	Registration No. Manual Input Adv. Fastures						
Auto Image Density	Freq. AB CD EF GH IJK LMN OPQ F						
	C000213 C000223 C000233 C00024 LONDON 0 Donald LEGAL DI NEWYORK PARIS FFICE V BRANCH ANCH						
Auto Detect Scan Area	1000263 1000273 1000283 1000293 100030 Alex Allen ABC_NET Dorothy Frank						

🖉 Note

When using Internet Fax transmission, documents are sent at "Detail" resolution, even if you specify "Super Fine". To send documents at "Super Fine", specify this resolution when registering the destination in the Address Book. See p.53 "T.37 Full Mode".

PReference

p.28 "Resolution"

p.29 "Original Type"

p.30 "Image Density (Contrast)"

8 Enter the e-mail address.

O Read	dy 1d specify des	tination.			Informa	
≅ ¢↔ (ዾ To: legistration Ni). Manual I	nput 🛛 Aliv. A	To Solumo	tal: O	
Freq. AE	CD E	FGHJ	JK	OPQ RST	UVW XYZ	l a
LONDON 0 FFICE	<u>0000223</u> Donald	<u>C000233</u> LEGAL DI V	COOD333 NEWYORK BRANCH	C000243 PARIS BR ANCH	000253 ABC_NET	1/3
<u>1000263</u> Alex	1000273 Allen	LOOO283 ABC_NET	1000293 Dorothy	<u>1000303</u> Frank	1000313 Jones	

If there is only one destination, proceed to step **[]**.


✓ Reference

p.34 "Entering an E-mail Address"

p.38 "Using Destination Lists"

p.45 "Search by LDAP Server"

p.47 "Redial", Facsimile Reference <Advanced Features> **9** To send the same document to multiple destinations, press [Add].

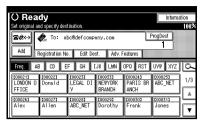

🖉 Note

□ It is not necessary to press **[Add]** when adding destinations using the destination list.

D Specify the next destination.

O Rea Set original ar	dy 1d specify des	tination.			Inform	
8 ¢↔ (🕭 To: Registration N	o, 📕 Manual I	nnut 🛙 Adv. S		tal: 1	≜ Prev ♥ Ned
Freq. AE		F GH I	JK LMN	OPQ RST	UVW XYZ	la
LONDON O FFICE	C000223 Donald	1000233 LEGAL DI V	LOOO333 NEWYORK BRANCH	C000243 PARIS BR ANCH	1000253 ABC_NET	1/3
1000263 Alex	<u>0000273</u> Allen	1000281 ABC_NET	<u>100029</u> 1 Dorothy	<u>0000303</u> Frank	<u>1000313</u> Jones	

🖉 Note

- Pressing switches the destination list between fax number, e-mail address, and IP-Fax number.
- □ To specify more destinations, repeat steps **①** and **①**.

1 Press the [Start] key.

This starts reading the document into memory. The e-mail send operation starts after the read operation is complete. When scanning is complete, the Communicating indicator lights and transmission starts.

🖉 Note

- With a large volume of document, it may take some time before transmission starts. This is due to the time the machine requires to convert the data in memory.
- To cancel transmission of an Internet Fax, see p.62 "Canceling a Transmission of an Internet Fax".

🎖 About the E-mail Subject

If you send an E-mail without specifying a subject, a subject is automatically inserted. Subjects differ depending on Stamp Sender Name settings. See p.5 "Sender Settings", Facsimile Reference <Advanced Features>

When Stamp Sender Name is set to [On]:

From Stamp Sender Name (Fax Message NO.xxxx)

- When Stamp Sender Name is set to [Off]:
 - If Own Fax Number and Own Name are programmed: From "Own Fax Number" ("Own Name") (Fax Message NO.xxxx)
 - If only Own Fax Number is programmed: From "Own Fax Number" (Fax Message NO.xxxx)
 - If only Own Name is programmed: From "Own Name" (Fax Message NO.xxxx)
 - If neither Own Fax Number nor Own Name are programmed: Fax Message NO.xxxx

🖉 Note

"xxxx" is the document number that appears in the Journal.

₽ Reference

p.74 "Selecting transmission options for a single transmission", Facsimile Reference <Advanced Features>

•••••••••••••••••

. VE-mail Text

When Internet Fax e-mail is sent to computer, the following information is always inserted in the e-mail text. To check the host name and e-mail address, see "Setting Up the Machine on a Network", *Network Guide*.

This e-mail was sent from "Host Name" (product name)

Queries to: "Administrator's e-mail address"

Confirming Reception

When Reception Notice is set under "E-mail Options", the receiver sends back a reception notice message. Once the reception notice message has been received, "OK" appears in the Result column of Journal, allowing the originator to verify that the transmission has been received.

Limitation

The Reception Notice feature is only available if the receiver supports MDN (Message Disposition Notification).

🖉 Note

If your fax is not received normally, "Error" appears in the Result column.

- □ Information regarding the last 250 messages is recorded, but only the last 50 communications appear in Journal. If you do not receive a reception notice message for one of the last 50 communications from the receiver's machine, you may not be able to confirm that the email has been received by the Journal's Result column.
- □ If you specify mailing list addresses, do not set for Reception Notice. Otherwise, you will receive multiple reception notice messages from e-mail recipients, and the Result column will be overwritten each time a new notice message is received. However, if you receive a reception notice message indicating an error, "Error" appears in the Result column and will not be overwritten, even if you subsequently receive a reception notice message as "OK" following the error message.
- Reception notice results are only shown in Journal. The Result column in all other files, lists, and transmission reports show "--".
- Reception notice messages themselves are not recorded in Journal.
- □ You can select whether or not to print the Reception Notice. This can be set with User Parameters. See p.166 "User Parameters", Facsimile Reference <Advanced Features> (switch 21, bit 0).
- You cannot send e-mails using Reception Notice.

Canceling a Transmission of an Internet Fax

When fax, Internet Fax, and IP-Fax destinations are specified simultaneously, as well as only a fax or IP-Fax destination is specified, you can cancel transmission using the same method.

🖉 Note

You cannot cancel transmission once the document has been scanned.

Before the Original Is Scanned

Use this procedure to cancel a transmission before pressing the **[Start]** key.

Press the [Clear Modes] key.




🖉 Note

When documents are placed in the ADF, you can cancel transmission simply by removing them.

While the Original Is Being Scanned In

Use this procedure to cancel a transmission after pressing the **[Start]** key.

Press the [Clear/Stop] key.

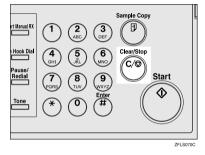

The machine stops scanning.


- □ You can also cancel scanning by pressing [Stop Scanning].
- □ Scanning may be completed while you are performing the cancel operation.
- □ If the transmission finishes while you are carrying out this procedure, it will not be canceled.

After the Original Has Been Scanned In

🖉 Note

Depending on the paper size and time when you cancel the transmission, you cannot cancel transmission of an Internet Fax.

Press [Change / Stop TX File].

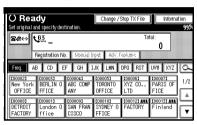

The list of stored files being transmitted or waiting for transmission appears.

2 Select the file you want to cancel.

Change / Stop TX File	Select file to stop	transmission		
Scanning Date / Time	Transmission Mode	Destination	Dest.	Or
1Dec. 18:08	Memory TX	abc@defcompany.com	Ttl 1	Ι
1Dec. 18:07	Memory TX	xyz@defcompany.com	Ttl 1	Γ
1Dec. 18:07	Memory TX	012345678	Ttl 1	I
1Dec. 18:05	Memory TX	ABC COMPANY	Ttl 1	Γ
1Dec. 18:04	Memory TX	London Office	Ttl 1	Ι
Check / Change Setti	ngs Print File	Stop Transmissi	on 🛛	Tra

🖉 Note

- □ If the desired file is not shown, press [▲ Prev.] or [▼ Next] to find it.
- There are cases when a destination may not be selected as the destination appears as "*", depending on the security settings.

B Press [Stop Transmission].



🖉 Note

- □ To cancel a transmission of another file(s), repeat the steps **2** and **3**.
- To cancel [Stop Transmission], press [Save].

4 Press [Exit].

stination	Dest		Org.	File No	Status	File List
ic@def.company.com	Ĩti	i	Lante	0217	Cancel	Files under TX
z8def.company.com	Ttl	1	1 shts	0216	Standby	
2345678	Tti	1	1 shts	0215	Standby	Print List
ic company	Tti	1	1 shts	0212	Standby]
ndon Office	Tti	1	1 shts	0211	Standby	7

The standby display appears.

Receiving Internet Fax

You can receive e-mail documents by Internet Fax.

There are two methods of receiving email: Auto E-mail Reception and Manual E-mail Reception.

Limitation

- □ E-mail with attachments other than TIFF-F format files cannot be received. Senders receive an Error Mail Notification if their e-mail contains attachments. You can select whether or not the machine sends this message with User Parameters. See p.166 "User Parameters", *Facsimile Reference <Advanced Features>* (switch 21, bit 7). However, TIFF-F documents created by the Saving function of DeskTop-Binder Professional Lite can be received.
- □ If "Require Secure Password Authentication (SPA) for all client connections" is selected in Windows Server 2003, reception is not possible.

🖉 Note

- When Reception Protocol is set to POP3 or IMAP4, you can set the machine to retain incoming e-mail or delete it from the server in "System Settings". See "File Transfer", Network Guide.
- □ With User Parameters, you can have the machine return the acknowledgment of e-mail to the sender. See p.166 "User Parameters", *Facsimile Reference < Advanced Features>* (switch 21, bit 1).

Auto E-mail Reception

When this function is turned on, the machine periodically checks the email server for incoming e-mail and downloads it as necessary.

E-mail auto-reception should be set in "System Settings". When you select auto-reception, set the reception interval in minutes.

See "File Transfer", Network Guide.

🖉 Note

If memory runs out, e-mail will not be received at the specified intervals. Reception will resume when sufficient memory becomes available.

Manual E-mail Reception

The following operation allows you to receive e-mail at all times.

Preparation

Program the Manual E-mail RX function to a Quick Operation key beforehand. See p.144 "General Settings/Adjustment", *Facsimile Reference* <*Advanced Features*>.

1 Press [Manual E-mail RX].

				1	DEC 200418:08
estination.			Informa	tion 10.0%	Immed. Memory TX TX
					Manual E-mail RX
No. Monual I	njed 🛛 Adv. P	wiere 👘	•		TX File Status
EF GH I	JK LMN	OPQ RST	UVW XYZ	<u>a</u>	RX File Status
0000041 ABC COMP ANY	TORONTO OFFICE	1000061 XYZ CO.,	COODO71 PARIS OF FICE	1/2	Transmission Mode
[CO00093	1000101		C000133.288		Sub TX Mode
D SAN FRAN CISCO	SYDNEY O FFICE	FACTORY	Finland	▼	Store File

Access the server to check for email. Receive any saved e-mails. 2 Check the message, and then press [Exit].



The standby display appears.

Received Images

Here is an example of an Internet Fax message sent from this machine and received on a computer using Outlook e-mail software.

The received image varies according to e-mail software.

ц.	nbox - Ou	utlook Expre	\$\$								_ 🗆 ×			
<u> </u>	le <u>E</u> dit	⊻iew <u>T</u> ool	ls <u>M</u> essage	<u>H</u> elp							E			
N	ew Mail	- <i>⊈</i> ⊋ Reply	😡 Reply All	<u>∳</u> Forward	Print) Delete	Send/Re	• •	Addresses	्रि Find	-			
ø	Inbox													
	ers Iutlook Ex) Local F () Inb	olders	9 0 0		OFFICE F	ubject rom LONDON rom ''0123456 Jrgent'Minutes	78"(Fax Mess						-1	2
	- 🖒 Ou		<u> </u>											
<u>Cor</u>	Eile	 	Iools M ∳©	essage <u>H</u> e		Previous	⊘≻ Next	Addres		_		×		
Dù '	From: Date:		ay, March 0	3, 2005 7:42	PIN								- 3	-4
	To: Subjed	London I											- 5	- 6
	Attach												- 8	0
	This I	E-mail was	sent from '	InternetFa	xB" (xxx	^{(x).}						<u>~</u>	-7	
	Queri	es to: <u>miller</u>	@abcdco	mpany.com	<u>n</u>								'	
3 me								_				T		
												_///	۵r	0.11015

1. E-mail transmitted without specifying a subject in "E-mail Options".

2. E-mail transmitted with a subject specified in "E-mail Options".

3. From

The name (e-mail address) of the sender

🖉 Note

The display format of the sender name differs according to that of the Stamp Sender Name setting and other functions.

4. Date

The date and time of e-mail transmission

5. То

The e-mail address of the recipient

6. Subject

Shows the subject specified in "E-mail Options" at the time of transmission. If no subject is specified, one is automatically assigned in the format shown in 1 above.

🖉 Note

□ The format varies according to Stamp Sender Name and other settings. See p.60 "About the E-mail Subject".

7. The message is inserted in all emails. "xxxx" is the product name.

8. Attachment File

Any message included by the sender is displayed as an attached document.

IP-Fax Function

The IP-Fax function sends/receives documents between two facsimiles directly connected to a TCP/IP network.

IP-Fax uses SIP and H.323 as the network protocol.

Specify an IP address or host name instead of a fax number for sending. When using a gate keeper, specify its alias telephone number. Specify addresses of the gatekeeper or SIP server (proxy serer, registrar, redirect server) as appropriate in "Setting IP-Fax" Facsimile Initial Settings. See p.150 "IP-Fax Settings", *Facsimile Reference <Advanced Features>*. You can also send to a G3 facsimile connected to the public switched telephone network (PSTN) via a gateway (T.38-compliant).


When using an SIP server, you can send by specifying SIP User Name.

You can also transmit to a G3 facsimile connected to the public switched telephone network (PSTN) via a gateway (T.38-compliant).

Since your machine and the receiver's machine are on the same network, no mail server is necessary. You can communicate with the receiver directly. Transmission speed is higher than with the G3 network.

To cancel IP-Fax transmission, see p.21 "Canceling a Memory Transmission".

You can receive IP-Faxes in the same manner as standard faxes. See p.48 "Reception"

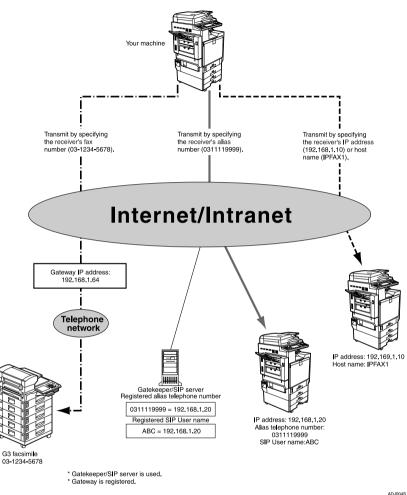

🖉 Note

- □ To use IP-Fax functions, this machine must be connected to a LAN and set up correctly under "Setting IP-Fax." See p.150 "IP-Fax Settings", *Facsimile Reference <Advanced Features>*.
- □ IP-Fax supported by this machine is ITU-T Rec. T.38 compliant to.

ÖTerminology

H.323

A protocol that specifies the compression/decompression method of audio, images, and data files sent or received via one-to-one communication over a LAN or Internet.

SIP

A communication control protocol for Internet telephone that utilizes VoIP (which converts voice information to IP packets) and is equipped with functions such as transfer and caller number display similar to telephone network compared to other protocols such as H.323.

Gatekeeper (VoIP gatekeeper)

A gatekeeper manages devices connected to an IP network and converts alias telephone numbers to IP addresses and performs authentication functions. In addition, a gatekeeper governs band (transmission rate assignment) and access control.

Gateway (VoIP gateway)

A gateway connecting a telephone network and IP network, it has functions such as protocol conversion for connect these different network, and also connects communication devices (telephones, facsimiles, etc.) to a LAN or other network.

SIP server

A SIP server mediates connection requests between devices connected to an IP network and is composed mainly of servers that have the following three functions:

- · Proxy server: Issues requests and relays responses.
- Registrar server: Receives registration of a users positional information within an IP network.
- Redirect server: Used to inquire the destination of a request.

Notes on Using IP-Fax

- You cannot send to a firewall-protected network.
- You cannot use telephones on a LAN.

Functions not Available for IP-Fax Transmission

You can use the following functions with standard fax transmission, but not IP-Fax transmission:

- Batch transmission
- Manual dial

Sending by IP-Fax

IP-Fax function uses TCP/IP (LAN or Internet), and the same procedures as the standard fax function. Functions available in both standard and IP-Fax transmission can be used in generally same manner.

By connecting your machine to a gateway (T.38-compliant) or gatekeeper, you can send to a standard G3 facsimile connected to the public switched telephone network (PSTN) via TCP/IP.

Preparation

Make the necessary System Settings beforehand. See "Network Guide."

🖉 Note

- If you have set "Enable H.323" and "Enable SIP" parameters to "On" with "IP-Fax Settings" under "Facsimile Features", [Protocol] appears. Press this button to select a protocol to be used.
- To send via the Internet, the receiver's machine must also be connected to the Internet. You cannot send to a firewall-protected network.
- For a list of gateways (T.38-compliant) or gatekeepers that are certified as operable with this machine, contact your local reseller or service provider.
- □ When using the transfer request function, you can specify the IP-Fax destination to the transfer station. See p.88 "Sending the Transfer Result Report", *Facsimile Reference <Advanced Features>*.

- □ When under Sender Settings Email TX Results is set to "Yes" and IP-fax transmission is specified, a transmission result notification mail is sent to the destination. See p.80 "Communication Result Report (Memory Transmission)", *Facsimile Reference <Advanced Features>*.
- **1** Press **readed** to switch the destination to IP-Fax number.

O Rea Set original a	i dy ind specify des	tination.			Informa	
B &~>	Q <u>3*</u> _			Tot		
	Registration N B CD E	1 1	IJK LMN	opiumes Sel OPQ RST	UVW XYZ	۱a
1000023 New York OFFICE	E000032 BERLIN O FFICE	LOOOO43 ABC COMP ANY	TORONTO OFFICE	1000061 XYZ CO., LTD	COODO73 PARIS OF FICE	1/2
COODORD DETROIT FACTORY	<u>toooons</u> London O ffice	1000091 SAN FRAN CISCO	1000103 SYDNEY O FFICE	1000123 att FACTORY	<u>0000133488</u> Finland	LÂ V

2 Specify the IP-Fax destination of the receiver.

O Rea	i dy nd specify des	tination			Informa	
<u>Г . </u> Г	···> _			To	tal: O	10.2
	Registration N		nput 🛛 Adiv. P	ociures F	rotocol	La
Freq. A	BCDE	FGHJ	JK	OPU RST	UVW XYZ	
1000263 Alex	1000313 Jones	<u>COOOO21</u> New York OFFICE	ECOCORES BERLIN O FFICE	ABC COMP ANY	TORONTO OFFICE	1/2
<u>1000061</u> XYZ CO., LTD	<u>COOCO73</u> PARIS OF FICE	LOOOO83 DETROIT FACTORY	<u>toocons</u> London O ffice	COODOD SAN FRAN CISCO	COODIOD SYDNEY O FFICE	

p.35 "Entering an IP-Fax Destination"

p.38 "Using Destination Lists"

p.47 "Redial", Facsimile Reference <Advanced Features>

🖉 Note

 When both the H.323 setting and SIP setting are set to ON under [IP-Fax Setting of Fax Initial Settings], [Protocol] appears. Press [Protocol] to select the protocol you want to use.

3 To add a destination, press [Add].



If you do not want to add a destination, proceed to Step **5**.

🖉 Note

When using a destination list, multiple destinations are added automatically and you need not press [Add].

4 Specify the next destination.



🖉 Note

- Press do switch the destination between fax number, email address, and IP-Fax number.
- □ To add another destination, repeat Steps 3 and 4.

5 Press the **[Start]** key.

The machine starts to scan the original and stores it in memory. When scanning ends, the Communicating indicator lights and transmission starts.

4. Programming

Initial Settings and Adjustments

You can send information to the other party when transmitting or receiving a fax message. This information is shown on the display of the other machine and printed as a report. The following information can be sent.

Important

□ You can confirm programmed settings from the User Parameter List. We recommend that you print and keep the User Parameter List when you program or change settings. See p.171 "Printing the User Parameter List", Facsimile Reference <Advanced Features>.

Fax Header

The Fax Header is printed as the header of every fax you send. You should include your name in the Fax Header.

You can program Fax Header1 or Fax Header2. When you send originals using Quick Dial, you can select which Fax Header will be printed on the message received by the other party.

🖉 Note

- □ You can register up to 32 characters in the Fax Header.
- You can use characters, symbols, numbers, and spaces.
- □ You can set whether or not to print a Fax Header using **[Fax Header Print]** under Options . See p.73 "Fax Header Print", Facsimile Reference <Advanced Features> .

□ In program No. 1 you can register a preference about whether or not the Fax Header is always printed. You will then switch the setting using the Fax Header Print function only when necessary. See p.130 "Registering a priority function using a program", Facsimile Reference <Advanced Features>.

p.73 "Fax Header Print", Facsimile Reference <Advanced Features>

p.130 "Registering a priority function using a program", Facsimile Reference <Advanced Features>

Own Name

The Own Name is sent to the other party when you send or receive a fax using a G3 line. This name should include your name. The Own Name is shown on the display of the other machine and printed in a report.

Limitation

Own Name works only when the other machine is of the same manufacturer, and has the Own Name function.

🖉 Note

- □ You can use characters, symbols, numbers, and spaces.
- □ You can register up to 20 characters as an Own Name.

Own Fax Number (facsimile number of sender)

The sender's Own Fax Number is sent to the other party when sending a fax using a G3 line. The received facsimile number is shown on the display of the other machine and printed in a report. This function is available regardless of the manufacturer of the other party's machine.

🖉 Note

□ You can register up to 20 characters in Own Fax Number.


Programming

Press the [User Tools/Counter] key.

User Tools/Counter	
()/123	



 2 Press [Facsimile Features].



3 Make sure the [Gen. Settings/ Adjust] screen is displayed.

4 Press [Program Fax Information].

		1 DEG 2004 17:22
		Exit
ull Settings	IP-Fax Settings Administrator Tools	
Transmission	Select Title	Fitle 1
	Change Initial Mode	Standard
	Adjust Sound Volume	
	Program Fax Information	
	1/2	Prev. 🔍 Next

5 Program the name and facsimile number.

Programming a Fax Header

Press [First Name] or [Second Name].

🕒 Facsimile I	Program Fax Information
Select one of following defau	Select item to program.
Gen. Settings/Adjust Re	First Name * Not Programmed
Memory / Immed. Transmi	Second Name * Not Programmed
Text Size Priori	
Original Type Pri	
Auto Image Dens	
Adjust Scan Den:	Fax Header Own Name Own Fax Nu

2 Enter a fax header, and then press [OK].



Reference

"Entering Text", General Settings Guide

Programming an Own Name


Press [Own Name].

(💽 Facsimile	Program Fax Information
Select one of following defau	Select item to program.
Gen. Settings/Adjust	First Name * Not Programmed
Memory / Immed. Transmi	Second Name * Not Programmed
Text Size Priori	
Original Type Pri	
Auto Image Dens	
Adjust Scan Den	Fax Header Own Name Own Fax Nu

2 Press [Own Name].

🕒 Facsimile l	Program Fax Information
Select one of following defau Gen. Settings/Adjust Re Memory / Immed. Transmi	Select item to program. Own Name
Text Size Priori	
Original Type Pri Auto Image Dens	
Adjust Scan Den:	Fax Header Own Name Own Fax Nu

3 Enter an own name, and then press [OK].

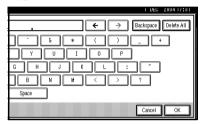

"Entering Text", General Settings Guide

Programming an Own Fax Number

Press [Own Fax Number].

Facsimile Program Fax Information Select item to program. ne of following defa Settings/Adjust R First Name * Not Programmed Second Name * Not Programmed Text Size Prid Original Type Pr Auto Image De Own Fax Nu Adjust Scan D Fax Header Own Name

2 Select line type to program.

Program Fax Information
Select item to program.
 Fax Header Own Name Own Fax Number

🖉 Note

- The display differs depending on the optional units installed on your machine.
- Senter your own facsimile's number using the number keys, and then press [OK].



🔗 Note

- □ To enter a + sign or a space, press [+] or [Space].
- □ If you make a mistake, press [Clear] or the [Clear / Stop] key, and then enter the fac-simile number again.

6 Press [Exit].

7 Press the **[User Tools/Counter]** key.

The standby display appears.

Editing


🖉 Note

- The following procedure explains how to edit Own Name, as an example of editing.
- Press the [User Tools/Counter] key.

User Tools/Co	unter

ZFLS110N

2 Press [Facsimile Features].

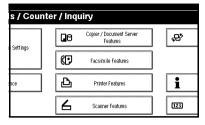

3 Make sure the [Gen. Settings/ Adjust] screen is displayed.

4 Press [Program Fax Information].

		I DEG 2004 17:22
		Exit
ull Settings	IP-Fax Settings Administrator Tools	
Transmission	Select Title	Title 1
	Change Initial Mode	Standard
	Adjust Sound Volume]
	Program Fax Information	1
	1/2	.≰Prev. ▼Next

5 Press [Fax Header], [Own Name], or [Own Fax Number] to edit.




6 Press the item you want to edit.

	Program Fax Information
IJ	Select item to program.
ei ni	Own Name DEF COMPANY
ri	
	Fax Header Own Name Own Fax Number

2 Press [Backspace] or [Delete All], and then re-enter the name or number.



8 Press [OK].

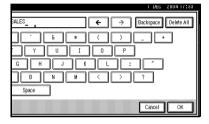

9 Press [Exit].



Press the [User Tools/Counter]key.

The standby display appears.


Deleting

🖉 Note

The following procedure explains how to delete Own Name, as an example of deleting.

Press the [User Tools/Counter] key.

User Tools/Cou	Inter
	ZEL S111

 

s / Counter / Inquiry				
Settinas	08	Copier / Document Server Features		ţ\$°
Securitys	¢₽	Facsimile Features		
nce	Ъ	Printer Features		i
	6	Scanner Features		123

Make sure the [Gen. Settings/ Adjust] screen is displayed.

Features	S		
ult settings.			
eception Settings	E-mail Settings	IP-Fax Settings	Administrator Tools
nission Switch	Memory Transmission		Select Title
rity	Standard	Cha	nge Initial Mode
riority	Text	Adju	st Sound Volume
nsity	On	Progra	n Fax Information
nsity	Level 4		1/2

4 Press [Program Fax Information].

	I DEG 200417:22
uil Settings	IP-Fax Settings Administrator Tools
Transmission	Select Title Title 1
	Change Initial Mode Standard
	Adjust Sound Volume
	Program Fax Information
	1/2 ▲Frev. ▼Next

5 Press [Fax Header], [Own Name], or [Own Fax Number] to delete.

I	Program Fax Information
u	Select item to program.
91	First Name DEF COMPANY
11 Ti	Second Name SELES DIV.
-	
15	
1	Fax Header Own Name Own Fax Number

6 Press the item you want to delete.

Program Fax Information
Select item to program.
Own Name DEF COMPANY SALES
Fax Header Own Name Own Fax Number

Press [Backspace] or [Delete All], and press [OK].



8 Press [Exit].

	I DEL	2004 17:3	8
			٦
Own Name			
- Own Manie			
Own Name			7
Own Name Own Fax Number			

9 Press the **[User Tools/Counter]**key.

The standby display appears.

Programming Fax Destinations and Folder Destinations in the Address Book

You can program fax numbers, e-mail addresses, IP-Fax numbers, and folder destinations using Address Book Management in the Administrator Tools menu under System Settings. You can also register programmed fax numbers, e-mail addresses, IP-Fax numbers, and folder destinations in a Group.

🖉 Note

- When you press the [Facsimile] key to show the facsimile initial display after changing the contents of the Address Book, the "Destination List/Device Settings have been updated" message appears. Press [Exit] to bring up the facsimile's initial display.
- You can register in the Address Book using Web Image Monitor or SmartDeviceMonitor for Admin. For details about installation, see "Monitoring and Configuring the Printer", *Network Guide*, or, for information about the Address Book, see the relevant Help.

PReference

"Fax Destination", General Settings Guide

- "E-mail Destination", General Settings Guide
- "Registering Names to a Group", General Settings Guide

5. Troubleshooting

Adjusting the Volume

You can change the volume of the following sounds that the machine makes.

On Hook Mode

Heard when the **[On Hook Dial]** key is pressed.

At Transmission

Heard when the machine sends a message.

At Reception

Heard when the machine receives a message.

At Dialing

Heard after pressing the **[Start]** key, until the line connects to the destination.

 
At Printing

Heard when a received message is printed. See p.96 "Print Completion Beep", *Facsimile Reference <Advanced Features>*.

🖉 Note

□ You can adjust the On Hook volume when you press the **(On Hook Dial)** key. See p.56 "On Hook Dial", *Facsimile Reference <Advanced Features>*.

Press the [User Tools/Counter] key.




2 Press [Facsimile Features].

0.00	0	Copier / Document Server Features	\$	
Settings	ø	Facsimile Features		
nce	Ð	Printer Features	i	
	6	Scanner Features	123	

- B Make sure the [Gen. Settings/ Adjust] screen is displayed.
- 4 Press [Adjust Sound Volume].

ult settings.					
eception Settings	E-mail Settings	IF	P-Fax Settings	Administrator Tools	
nission Switch	Memory Transmission			Select Title	
rity	Standard		Cha	nge Initial Mode	
riority	Text		Adju	st Sound Volume	
nsity	On		Progra	m Fax Information	
nsity	Level 4			1/2	Γ

 5 Press [Lower] or [Louder] for each item, and then press [OK].



🖉 Note


- □ You can hear the actual volume by pressing **[Check]**.
- □ If you press **[Cancel]**, the volume setting is canceled. The display returns to that of step **[**.

6 Press the **[User Tools/Counter]** key.

The standby display appears.

When the [Facsimile] Key Is Lit in Red

If this key is lit, press the key to enter the facsimile mode. Then, refer to the table below and take the appropriate action.

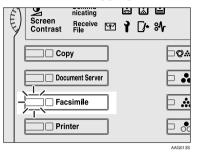

Problem	Solutions
The paper output tray is full.	Remove the paper from the tray.
A facsimile error has occurred.	The facsimile has a problem. Contact your service representative. See p.83 "Error Mes- sages and Their Meanings" The copier will still function normally.
Out of paper	Add more paper.
	"Loading Paper", General Settings Guide
A network error has occurred.	• Check the displayed message. See p.83 "Error Messages and Their Meanings".
	• Check the machine is correctly connected to the network, and the machine is correctly set. See <i>Network Guide</i> .
	Consult your network administrator.
	• When the key is still lit in red even if you take the measures above, please contact your service representative.

When Toner Runs Out

When the machine has run out of toner, the symbol appears on the display. Note that even if there is no toner left, you can still send fax messages.


∰Important

The number of communications, that have been executed after the toner has run out and that automatically-output Journal has not list, exceeds 200, communication will not be possible.

Limitation

The Memory Storage Report, Polling RX Reserve Report, and Confidential File Report are not printed.

1 Make sure that the machine is in facsimile mode.

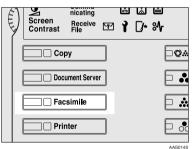

🖉 Note

□ If the standby screen is not displayed, press the **[Facsimile]** key.

2 Press [Exit], and then perform transmission operation.

The error message disappears.

✓ Reference

- p.17 "Memory Transmission"
- p.24 "Immediate Transmission"

Error Messages and Their Meanings

If there is an error, one of the following messages may appear on the display. If other message appears, follow the message.

[
Message	Causes and solutions
You do not have the privileges to use this function.	Use of this function is restricted. Ask the ad- ministrator.
Authentication has failed.	Wrong login user name or password. Confirm correct login user name or password.
	Authentication is not possible from this ma- chine. Ask the administrator.
Selected files contain file(s) that the user does not have ac- cess privileges to. Please note that only the files with access privileges will be deleted. [OK]	You tried to delete a document for which you do not have permission for deletion. Only your document administrator can deleted this document. Contact your document adminis- trator if you want to delete a document for which you do not have permission for dele- tion.
Put original back, check it and press [Start].	Original jammed during Memory Transmis- sion. Place originals that have not been scanned again.
Error occurred, and transmis- sion was canceled.	A document jam occurred during Immediate Transmission. Press [OK] , and then resend the pages that have not been sent.
	An error occurred during Immediate Trans- mission. Press [OK] , and then resend the origi- nal.
	Note
	 There may be a problem with the machine or the telephone line (for example noise or cross talk). If the error reoccurs frequently, contact your service representative.
Cannot detect original size. Place original again, then press [Start].	The machine failed to detect the size of the original. Place originals again, and then press the [Start] key.
Ì Call Service	There is a problem with the fax. Record the
Functional problems with fac- simile. Please call service.	code number shown in the display and contact your service representative. The copy function will still work normally.
Memory is full. Cannot scan more. Transmitting only scanned pages.	If you press [Exit] , the machine returns to standby mode and starts transmitting the pages that have been stored.
Following output tray is full. Remove paper.	The paper output tray is full. Remove paper from the tray indicated in the display.

Message	Causes and solutions
Cannot scan to send fax message as scanner is in use for other function.	The Copy or Document Server function is in use. To cancel the job in process, do the follow- ing, and then try faxing again. Press [Exit], and then press the [Copy] or [Doc- ument Server] key. Next press the [Clear/Stop] key. When the message "[Stop] key was pressed. Stop copying? [Stop] key was pressed. Stop stor- ing?[Stop] key was pressed. Stop copying?" or "[Stop] key was pressed. Stop storing?" appears, press [Stop].
Updating the destination list Please wait. Specified destination(s) or sender's name has been cleared. Please re-select after the up- date finishes.	Wait with the main power switch on. The ma- chine will enter standby mode after it exits from RDS mode.
Check whether there are any network problems. [13-10]	 Check if the alias telephone number is correctly programmed. Check the alias telephone number is correctly programmed using the Web Image Monitor. See the Web Image Monitor's Help. Consult your network administrator.
Check whether there are any network problems. [13-11]	 Cannot access gatekeeper. Use your Web Image Monitor to check the gatekeeper address is correctly programmed. See the Web Image Monitor's Help. Consult your network administrator.
Check whether there are any network problems. [13-17]	 Registering of user name is rejected by SIP server. Use your Web Image Monitor to check the SIP server address and user name are correctly programmed. See the Web Image Monitor's Help. Consult your network administrator.
Check whether there are any network problems. [13-18]	 Cannot access to SIP server. Use your Web Image Monitor to check the SIP server address is correctly programmed. See the Web Image Monitor's Help. Consult your network administrator.

Message	Causes and solutions	
Check whether there are any network problems.	Cannot find the DNS server, SMTP server or folder for transfer.	
[14-01]	• Check the DNS server's IP address is cor- rectly programmed using the Web Image Monitor. See the Web Image Monitor's Help.	
	• Check the DNS server is correctly pro- grammed using the Web Image Monitor. See the Web Image Monitor's Help.	
	• Check the host name or IP address of the SMTP server is correctly programmed using the Web Image Monitor. See the Web Image Monitor's Help.	
	• Check the SMTP server is correctly pro- grammed using the Web Image Monitor. See the Web Image Monitor's Help.	
	• Check the folder for transfer is correctly specified.	
	• Check the PC in which the folder for trans- fer is specified is operating correctly.	
	• Check the LAN cable is correctly connected to the machine. See "Connection and Set-up", <i>Network Guide</i> .	
	Consult your network administrator.	

Message	Causes and solutions	
Check whether there are any network problems. [14-09]	E-mail transmission was refused by SMTP au- thentication, POP before SMTP authentication or login authentication of the PC in which the folder for transfer is specified.	
	• Check the user name and password for SMTP authentication or POP before SMTP authentication are correctly programmed from File Transfer under System Settings. See "File Transfer", <i>Network Guide</i> . You can also use the Web Image Monitor for confir- mation. See the Web Image Monitor's Help.	
	• Check the user name and password of the e-mail account are correctly programmed from File Transfer under System Settings. See "File Transfer", <i>Network Guide</i> . You can also use the Web Image Monitor for confir- mation. See the Web Image Monitor's Help.	
	• Check the login user ID and password for PC in which folder for transfer is specified are correctly programmed.	
	• Check the folder for transfer is correctly specified.	
	• Check the PC in which folder for transfer is specified is correctly operated.	
	Consult your network administrator.	
Check whether there are any network problems. [14-33]	 No machine's e-mail address is programmed. Check the machine's e-mail address is correctly programmed from File Transfer under System Settings. See "File Transfer", <i>Network Guide</i>. You can also use the Web Image Monitor for confirmation. See the Web Image Monitor's Help. Consult your network administrator. 	
Check whether there are any	No POP3/IMAP4 server's address is pro- grammed.	
network problems. [15-01]	 Check the host name or IP address of the POP3/IMAP4 server is correctly pro- grammed using the Web Image Monitor. See the Web Image Monitor's Help. Consult your network administrator. 	

Message	Causes and solutions
Check whether there are any network problems. [15-02]	 Cannot log on to the POP3/IMAP4 server. Check the user name and password of the e-mail account are correctly programmed from File Transfer under System Settings. See "File Transfer", <i>Network Guide</i>. You can also use the Web Image Monitor for confirmation. See the Web Image Monitor's Help. Consult your network administrator.
Check whether there are any network problems. [15-03]	 No machine's e-mail address is programmed. Check the machine's e-mail address is correctly programmed from File Transfer under System Settings. See "File Transfer", <i>Network Guide</i>. You can also use the Web Image Monitor for confirmation. See the Web Image Monitor's Help.
Check whether there are any network problems. [15-11]	 Cannot find the DNS server or POP3/IMAP4 server. Check the DNS server's IP address is correctly programmed using the Web Image Monitor. See the Web Image Monitor's Help. Check the DNS server is correctly programmed using the Web Image Monitor. See the Web Image Monitor. See the Web Image Monitor's Help. Check the host name or IP address of the POP3/IMAP4 server is correctly programmed using the Web Image Monitor. See the Web Image Monitor's Help. Check the POP3/IMAP4 server is correctly programmed using the Web Image Monitor. See the Web Image Monitor's Help. Check the POP3/IMAP4 server is correctly programmed using the Web Image Monitor. See the Web Image Monitor's Help. Check the LAN cable is correctly connected to the machine. Consult your network administrator.

Message	Causes and solutions
Check whether there are any network problems. [15-12]	 Cannot log on to the POP3/IMAP4 server. Check the user name and password of the e-mail account are correctly programmed from File Transfer under System Settings. See "File Transfer", <i>Network Guide</i>. You can also use the Web Image Monitor for confirmation. See the Web Image Monitor's Help. Check the user name and password for POP before SMTP authentication are correctly programmed from File Transfer under System Settings. See "File Transfer", <i>Network Guide</i>. You can also use the Web Image Monitor's Help. Check the user name and password for POP before SMTP authentication are correctly programmed from File Transfer", <i>Network Guide</i>. You can also use the Web Image Monitor for confirmation. See the Web Image Monitor's Help. Consult your network administrator.

$\widetilde{\mathbf{V}}$ Out of paper display message

If the paper tray runs out of paper, "No paper. Load it. then press [Exit]." appears on the display, asking you to add more paper.

.

🖉 Note

- □ If there is paper left in the other paper trays, you can receive messages as usual, even if the message appears on the display.
- □ You can turn this function on or off with the User Parameters. See p.166 "User Parameters", *Facsimile Reference <Advanced Features*> (switch 05, bit 7).

Vetwork error display message

If the "Check whether there are any network problems." message appears, the machine is not correctly connected to the network or the settings of the machine is not correct. If you do not need to connect the machine to the network, you can select so that the message disappear and the key goes out with User Parameters. See p.166 "User Parameters", *Facsimile Reference <Advanced Features>* (switch 21, bit 6).

🖉 Note

□ When you restart connecting the machine to the network, make sure to set "Display" with User Parameters.

Solving Problems

Problem	Causes and solutions	Reference
Image background appears dirty when received at the other end. Images from the back page appear.	Adjust scan density.	p.30 "Image Density (Con- trast)"
Printed or sent image contains spots.	The ADF or exposure glass is dirty. Clean them.	"Maintaining Your Machine", General Settings Guide
	Make sure that ink or correc- tion fluid is dry before placing originals.	
Received image is too light.	Request the sender to increase image density.	
	When using moist, rough, or processed paper, the printed image may be partly invisible. Only use recommended pa- per.	"Copy Paper", General Set- tings Guide
	When 🛓 appears on the dis- play, toner is beginning to run out. Replace the toner car- tridge soon.	"LAdding Toner", General Settings Guide
The machine failed to print re- ceived fax messages.	If this happened when the re- ceive file indicator was lit, a problem such as run out of pa- per or toner might disable printing.	p.85 "Substitute Reception", Facsimile Reference <advanced Features></advanced
	Store has been selected for Re- ception File Setting. Print the fax messages using a Web browser or the Print Stored RX File function.	p.124 "Printing fax informa- tion using a Web browser", Facsimile Reference <advanced Features> p.34 "Printing Received and Stored Documents", Facsimile Reference <advanced features=""></advanced></advanced
	When 🖆 is lit, load paper into the tray.	"Loading Paper", General Set- tings Guide
Message appears blank at the other end.	The original was placed up- side down. Place it properly.	p.11 "Placing Originals"
Both transmission and receiv- ing are impossible.	Make sure that the modular cord is correctly connected.	p.201 "Connecting the Ma- chine to a Telephone Line and Telephone", <i>Facsimile Refer-</i> <i>ence <advanced features=""></advanced></i>
	The terminal adaptor setting is incorrect. Check the setting.	

This table lists some common problems and their solutions.

Problem	Causes and solutions	Reference
Transmission is possible, though receiving is impossi- ble.	The optional terminal adaptor setting is incorrect. Check the setting.	
Receiving is possible, though transmission is impossible.	The optional terminal adaptor setting is incorrect. Check the setting.	
When using On Hook Dial or Manual Dial, "Receiv- ing" appears and trans- mission is not allowed.	If the machine fails to detect the size of the original when the [Start] key is pressed, it performs a receiving opera- tion. Press [Scan Area] , select the scan area, and then resend the document.	p.13 "Setting a Scan Area"
LAN-Fax Driver does not work.	The entered login user name, login password, or driver en- cryption key is incorrect. Check your login user name, login password, or driver en- cryption key, and enter them correctly.	Ask the administrator.
	A high security level is set by the extended security func- tion. Consult your administra- tor about appropriate security settings.	Ask the administrator.
All fax messages stored in memory have been lost. Those messages include ones stored through Memory Transmis- sion/Reception, Confidential Reception, Substitute Recep- tion, or Auto Document.	When about one hour passes after power of the machine is turned off, all fax messages stored in memory are lost. If any messages have been lost for this reason, a Power Fail- ure Report is automatically printed when the machine is turned on. If fax messages stored for Memory Transmis- sion have been lost, check the destinations and resend the messages. If fax messages re- ceived through Memory, Con- fidential or Substitute Reception have been lost, ask the senders to resend the mes- sages. If Auto Documents have been lost, reprogram them.	p.198 "Turning Off the Main Power / When a Power Fail- ure Occurs", Facsimile Refer- ence <advanced features=""></advanced>

Problem	Causes and solutions	Reference
Transmission failed due to "Exceeded max. E-mail size." error.	If the e-mail size specified on the machine is too large, the Internet Fax document cannot be sent. Set Max. E-mail Size to [Off] , or set the maximum e- mail size to a larger value. Then, re-send the document.	p.148 "E-mail Settings", Fac- simile Reference <advanced fea-<br="">tures></advanced>
When a correct password is entered, you cannot print doc- uments that appear in the con- fidential box or bulletin board box, or transmit / print out stored documents.	Documents are locked by a se- curity function when incorrect passwords are entered a cer- tain number of times. Contact the administrator.	Ask the administrator.
[ProgDest] or [Manual Input] does not appear.	This function is made unavail- able by the enhanced security function. Consult your user administrator.	Ask the administrator.
The following functions are not available: Transfer Box, Forwarding, Store File in the Information Box, SMTP Re- ception Using Internet Fax and Polling Transmission.	This function is made unavail- able by the enhanced security function. Consult your user administrator.	Ask the administrator.
Other party reception is not possible after group specifica- tion and memory transfer.	Check whether 500 or more destinations in total are registered in a group.	Ask the administrator.
Although a group specifica- tion has been done to the fol- lowing parties, the reception was not possible. Transfer Box, Forwarding, Forwarding of Special Sender, Reception File Setting, E-mail TX Results, SMTP Reception Using Internet Fax.	A maximum of 500 parties can be specified for a group. Check if there are registered over the specified numbers in the address book. If a group has been registered in another group, it will not transmitted even in case of specifying in the 1 to 5 of the transfer box in spite that it will not be dis- played as error at time of spec- ifying.	"Registering a Destination to a Group", <i>General Settings Guide</i>

When Things Don't Go as Expected

I Want	Operation	Reference
to cancel a Memory Transmis- sion.	nis- If the original is being scanned, press [Stop Scanning] or the [Clear/Stop] key.	p.21 "Canceling a Memory Transmission"
	If the original is being sent or if it is in standby, press [Change / Stop TX File] or the [Clear/Stop] key.	p.21 "Canceling a Memory Transmission" p.19 "Canceling a Transmis- sion", Facsimile Reference <ad- vanced Features></ad-
to cancel an Immediate Trans- mission.	Press [Stop Transmission] or the [Clear/Stop] key.	p.26 "Canceling an Immediate Transmission"

INDEX

A

Adjusting The Volume, 79 At Dialing, 79 At Printing, 79 At Reception, 79 At Transmission, 79 On Hook Mode, 79 Authorized Reception, 53 Auto E-mail Reception, 64 Auto Reception, 48

В

Batch Transmission, 52 BCC Transmission, 55 Broadcasting Sequence, 20

С

Chain Dial, 52 Check Modes key, 4 Clear Modes key, 4 Clear/Stop key, 5 Communicating indicator, 3 Confidential file indicator, 3 Confidential Reception, 53 Confidential Transmission, 52 Control Panel, 3 CSI->Own Fax Number, 74

D

Destination list, 33, 38 Detail, 28 Display, 5 Display Panel, 4

Е

ECM (Error Correction Mode), 52 Entering a fax number, 33 Entering an e-mail address, 34 Enter key (# key), 4 Enter Text, in e-mail, 55 Error Messages, 83

F

Facsimile key, 81 Fax Header, 73 Deleting, 77 Editing, 75 Programming, 74 Faxing, 11 Function keys, 4 Functions Not Supported by e-mail Reception, 53 Functions Not Supported by e-mail Transmission, 52

G

Getting Started, 3 Groups Specifying a Destination, 33

L

ID Transmission, 52 Image Density (Contrast), 28, 30 Immediate Transmission, 16, 24, 52 *Canceling*, 26 Internet Fax, 51 *Canceling*, 62 *Precautions*, 52 *Receiving*, 64 *Sending*, 55

J

JBIG Transmission, 52

М

Main Power indicator, 4 Manual Dial, 52 Manual Reception, 48 Memory File Transfer, 52 Memory Lock Reception, 53 Memory Transmission, 16, 17 *Canceling*, 21

Ν

Number keys, 4

0

On Hook Dial, 52 On Hook Dial key, 4 On indicator, 4 Operation switch, 4 Original Type, 28, 29 Own Fax Number, 74 *Deleting,* 77 *Editing,* 75 *Programming,* 74 Own Name, 73 *Deleting,* 77 *Editing,* 75 *Programming,* 74

Т

Text, 29 Text / Photo, 29 Tone, 34 Tone key, 4 Toner, 82 Transmission by SUB Code, 52 TTI->Fax Header, 73

U

User Tools/Counter key, 3

Ρ

Pause, 33 Pause/Redial key, 4 Photo, 29 Placing Originals, 11 Polling Reception, 53 Polling Transmission, 52 Program key, 4 Programming, 73

Q

Quick Dial Specifying a Destination, 33

R

Received Images, 66 Receive File indicator, 3 Reception, 48 *Auto Reception*, 48 *Manual Reception*, 48 Reception File Print Quantity, 53 Reception Notice, 55, 60 Resolution, 28 RTI->Own Name, 73

S

Scan Settings, 28 Stamp Sender Name, 60 Standard, 28 Start key, 5 Start Manual RX key, 4 SUB Code reception, 53 Subject, in e-mail, 55, 60 Super Fine, 28



FAX Option Type 3245 Operating Instructions Facsimile Reference <Basic Features>

ŗ,



