

Errata for General Settings Guide and Copy Reference

C6045/SDC555

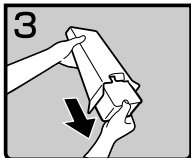
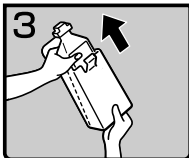
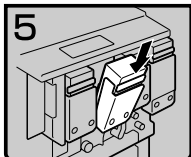
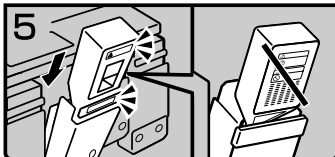
DSc460/CS555

LD160c/LC155

Aficio™ 3260C/Aficio Color™ 5560

Operating Instructions

Please note the following corrections to these manuals.

Page	Error	Corrections
<i>General Settings Guide</i>		
p.104 Action of “Mis-feeds occur frequently”	Select the appropriate paper type with User Tools, or use the appropriate paper.	Press the [Clear/Stop] key. When copying <u>stops</u> , select the appropriate paper type with User Tools, or use the appropriate paper.
p.114 “Replacing Toner” Step 3	 <small>AFU003S</small>	 <small>AFU208S</small>
p.114 “Replacing Toner” Step 5	 <small>AFU005S</small>	 <small>AFU209S</small>
	Hold the toner cartridge <u>mouth downward</u> and install it in the case.	Hold the toner cartridge color label <u>facing forward</u> and install it in the case.

Page	Error	Corrections
<i>Copy Reference</i>		
p.123 Solutions of “Paper type or thickness does not match.”	Select the appropriate paper type with User Tools, or use the appropriate paper.	Press the 【Clear/Stop】 key. When <u>copying stops</u> , select the appropriate paper type with User Tools, or use the appropriate paper.
p.130 Solutions of “Paper jams occur frequently.”	Select the appropriate paper type with User Tools, or use the appropriate paper.	Press the 【Clear/Stop】 key. When <u>copying stops</u> , select the appropriate paper type with User Tools, or use the appropriate paper.

