Errata for General Settings Guide and Copy Reference

Please note the following corrections to these manuals.

♦ General Settings Guide

Page	Error	Corrections
p.60 Note of "Tray Paper Size: (Tray 2-3)"	Incomplete Information	To make "Custom Size" selectable, contact your service representative.
p.60 Note of "Paper Type: By- pass Tray"	Incomplete Information	When loading prepunched paper into the bypass tray, load them with the punched sides head into the bypass tray.
p.61 "Paper Type: (Tray 1–3, LCT)"	Plain paper (No Display), Recycled Paper, Special Pa- per, Letterhead, Color Pa- per 1, Color Paper 2, Tab Stock (2–3 tray), Bond Pa- per, Prepunched Paper, Preprinted Paper, Card- stock	Plain paper (No Display), Recycled Paper, Special Paper, Letterhead, Color Paper 1, Color Paper 2, Tab Stock (2–3 tray), Bond Paper (1–3 tray), Prepunched Paper (1–3 tray), Preprinted Paper (1–3 tray), Card- stock (1–3 tray)
p.61 Note of "Paper Type: (Tray 1–3, LCT)"	Incomplete Information	When using prepunched paper, make sure to select "Prepunched Paper". Load them so that the sides punched are against the right side of the paper tray.
p.66 Note of "Weekly Timer Code"	Incomplete Information	This setting is only available when the machine administrator is logged on.
p.104	Problem/Cause	Problem/Cause
"Misfeeds occur frequently"	The end guide of the paper tray may not be <u>locked</u> .	The end guide of the paper tray may not be set properly.
	Action	Action
	Check that the end guide is <u>locked</u> .	Check that the end guide is <u>set properly</u> .
p.104 "Problem/Cause" of "Misfeeds occur frequent- ly"	The specified paper <u>size</u> differs from the actual <u>size</u> of the paper loaded in the paper tray.	The specified paper type differs from the actual type of the paper loaded in the paper tray.

Page	Error	Corrections
p.127 "If Custom Size Sheets are Loaded"	Incomplete Information	 Note □ To make "Custom Size" selectable, contact your service representative.
p.154 "Earth Leakage Breaker"	Confirm that the earth leakage breaker switch moves to the off position.	Confirm that the earth leakage breaker switch stops in the middle.
	Turn the switch to the on position.	Turn the switch to the off position (O), and then move it back to the on position (—).
p.162 "Copy paper size"	Bypass (custom size): Horizontal: 148–437.2 mm, 5.9"–17.3"	Bypass (custom size): Horizontal: 148–457. 2 mm, 5.9"–18"
p.178 "Tab sheets" of Tray 2,3	163 g/m ² (43.4 lb.Bond, 60.2 lb.Cover, 90 lb.Index), 199 g/m ² (53.1 lb.Bond, 73.6 lb.Cover, 110 lb.Index)	127.9 g/m ² (34 lb. Bond, 47 lb. Cover, 71 lb. Index)
p.179 "Custom size" of Bypass Tray	Metric Version Horizontal: 148–437.2 mm Inch Version Horizontal: 5.9"–17.3"	Metric Version Horizontal: 148–457.2 mm Inch Version Horizontal: 5.9"–18"
p.179 "Tab sheets" of Bypass Tray	Tab sheets	Tab sheets 163 g/m² (43.4 lb.Bond, 60.2 lb.Cover, 90 lb.Index), 199 g/m² (53.1 lb.Bond, 73.6 lb.Cover, 110 lb.Index)
p.179 "Envelopes" of Bypass Tray	Envelopes	Envelopes*6
p.180 Note of "Copy Paper"	Incomplete Information	To select custom size paper for Tray 2,3, contact your service representative.
p.180 Note of "Copy Paper"	Incomplete Information	When using translucent paper or label paper, make sure to select the appropriate paper type. See p.60 "Paper Type: Bypass Tray".
p.180 Note of "Copy Paper"	When loading paper in the large capacity tray (LCT), place the copy side <u>face</u> <u>down</u> .	When loading paper in the large capacity tray (LCT), place the copy side face up.

Page	Error	Corrections
p.180 Note of "Copy Paper"	To prioritize image quality when printing on OHP transparencies, make sure you adjust the guides in the tray to "A4D" or "81/2"×11"D", and specify [Tray Paper Size:] in User Tools menu.	To prioritize image quality when printing on OHP transparencies, make sure you adjust the guides in the tray to "A4\(\D\)" or "8\(^1/_2\)" \(^1\)\". Press [Bypass], and the [#] key, and then select the paper size.
p.180 Note of "Copy Paper"	Incomplete Information	When copying onto prepunched paper, the copy speed is slower than usual.
p.182 "Envelopes"	With a type ④ envelope, as shown below, fold the flap and load the envelope with the fold of the flap against the side guide and the flap underneath.	With a type (4) (162×229 mm (C5)) envelope, as shown below, fold the flap and load the envelope with the fold of the flap against the side guide and the flap underneath.

♦ Copy Reference

Page	Error	Corrections
p.25	Metric version	Metric version
Note of "Copying from the Bypass Tray" (the first table)	Horizontal: 148–437.2 mm Inch version Horizontal: 5.9"–17.3"	 Horizontal: 148–457.2 mm Inch version Horizontal: 5.9"–18"
p.25 Note of "Copying from the Bypass Tray" (the second table)	• Inch version 11"×17"□, 8½/2"×11"□, 5½"×8½"□	• Inch version 11"×17"□, 8½/2"×14"□, 5½"×8½"□
p.25 Note of "Copying from the Bypass Tray"	When printing on OHP transparencies, make sure you adjust the guides in the tray to "A4 \(\overline{D}\)" or "8\(^1/2\)" x11" \(\overline{D}\)", and specify \([\overline{IPaper}\) Size] in User Tools.	When printing on OHP transparencies, make sure you adjust the guides in the bypass tray to "A4 \square " or "8 1 /2" x11" \square ", and specify the paper size.

All rights reserved © 2005 Printed in Japan EN B132-8524

