RICOH



Operating Instructions **General Settings Guide**



- 1 Getting Started
- 2 Combined Function Operations
- 3 Document Server
- 4 User Tools (System Settings)
- (5) Registering Addresses and Users
- 6 Troubleshooting
- 7 Remarks
- 8 Entering Text
- 9 Specifications

Introduction

This manual contains detailed instructions and notes on the operation and use of this machine. For your safety and benefit, read this manual carefully before using the machine. Keep this manual in a handy place for quick reference.

Important

Contents of this manual are subject to change without prior notice. In no event will the company be liable for direct, indirect, special, incidental, or consequential damages as a result of handling or operating the machine.

•

Notes:

Some illustrations in this manual might be slightly different from the machine.

Certain options might not be available in some countries. For details, please contact your local dealer.

Operator Safety

This machine contains LED Array in scanner and writing units.

The machine is considered a class 1 LED device, safe for both office and EDP use.

Notes:

Two kinds of size notation are employed in this manual. With this machine refer to the metric version.

For good copy quality, Ricoh recommends that you use genuine Ricoh toner.

Ricoh shall not be responsible for any damage or expense that might result from the use of parts other than genuine Ricoh parts with your Ricoh office products.

Power Source

220 - 240V. 50/60Hz. 10A or more

Please be sure to connect the power cord to a power source as above. For details about power source, see P.120 "Power Connection".

Manuals for This Machine

The following manuals describe the operational procedures of this machine. For particular functions, see the relevant parts of the manual.

- ☐ Manuals provided are specific to machine type.
- ☐ Adobe Acrobat Reader / Adobe Reader is necessary to view the manuals as a PDF file.
- ☐ Two CD-ROMs are provided:
 - CD-ROM 1 "Operating Instructions"
 - CD-ROM 2 "Scanner Driver and Utilities"

General Settings Guide (this manual)

Provides an overview of the machine and describes System Settings (such as Tray Paper Settings), Document Server functions, and troubleshooting. Refer to this manual for Address Book procedures such as registering e-mail address, and user codes.

Security Reference

This manual is for administrators of this machine. It describes security functions that the administrators can use to protect data from being tampered, or prevent the machine from unauthorized use.

Also refer to this manual for the procedures for registering administrators, as well as setting user and administrator authentication.

Network Guide (PDF file - CD-ROM1)

Provides information about configuring and operating the scanner (Type 480) in a network environment.

For details about network settings of the scanner (RW480) and printer (RW480), see the manual that comes with the related option.

Copy Reference

Describes operations, functions, and troubleshooting for the machine's copier function.

Scanner Reference (Scanner Unit Type 480) (PDF file - CD-ROM1)

Describes operations, functions, and troubleshooting for the machine's scanner function.

Manuals for DeskTopBinder Lite

DeskTopBinder Lite is a utility included on the CD-ROM labeled "Scanner Driver and Utilities".

- DeskTopBinder Lite Setup Guide (PDF file CD-ROM2)
 Describes installation of, and the operating environment for DeskTopBinder Lite in detail. This guide can be displayed from the [Setup] display
 when DeskTopBinder Lite is installed.
- DeskTopBinder Introduction Guide (PDF file CD-ROM2)
 Describes operations of DeskTopBinder Lite and provides an overview of its functions. This guide is added to the [Start] menu when DeskTopBinder Lite is installed.
- Auto Document Link Guide (PDF file CD-ROM2)
 Describes operations and functions of Auto Document Link installed with DeskTopBinder Lite. This guide is added to the [Start] menu when Desk-TopBinder Lite is installed.

Other manuals

- Manuals for Printer (RW480) function.
- Manuals for Scanner (RW480) function.


What You Can Do with This Machine

The following introduces the functions of this machine, and the relevant manuals containing detailed information about them.

Products marked with * are optional. For details about optional products, see p.20 "Options", or contact your local dealer.

- \square For functions of printer (RW480) and scanner (RW480), see manuals that come with those options.
- ☐ Scanner functions stated below apply to Scanner Unit Type 480 only.


Copier, Printer, and Scanner Functions

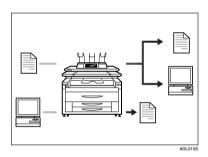

This machine provides copier, printer* and scanner* functions.


- You can make copies of originals. See Copy Reference.
- You can print documents created using applications. See the relevant manuals of the printer.
- You can scan originals and send the scan file to a computer. See Scanner Reference.

Utilizing Stored Documents

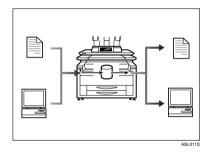


- You can store files of originals scanned by this machine, or files sent from other computers, onto the hard disk of the machine. You can print the stored documents, as well as change print settings and print multiple documents (Document Server). See p.37 "Document Server".
- With DeskTopBinder Professional*/Lite, you can search, check, print, and delete stored documents using your computer. You can also retrieve stored documents scanned in scanner mode. With File Format Converter*, you can even download documents stored in copy and printer functions to your computer. See *Network Guide* and *Scanner Reference*.

Using the Scanner in a Network Environment

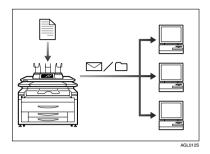


- You can send scanned documents to other network computers using e-mail (Sending stored scan file by e-mail). See Scanner Reference.
- With the ScanRouter delivery software, you can store scanned documents in specified destinations on network computers (File storage).
 See Scanner Reference.
- You can send scanned documents to other network folders (Scan to Folder). See Scanner Reference.

Administrating the Machine/ Protecting Documents (Security Functions)

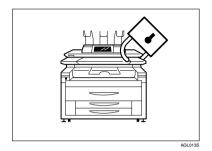

- You can protect documents from unauthorized access and stop them from being copied without permission. See Security Reference.
- You can control the use of the machine, as well as prevent machine settings from being changed without authorization. See Security Reference.
- By setting passwords, you can prevent unauthorized access via the network. See Security Reference.
- You can erase the data on the hard disk to prevent the information from leaking out. See the manual for the DataOverWriteSecurity Unit* and Security Reference.

Monitoring the Machine Via Computer

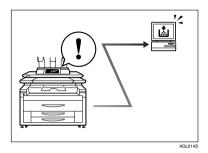

You can monitor machine status and change settings using a computer.

- Using SmartDeviceMonitor for Admin, or a Web browser, you can use a computer to view the machine's status, such as checking on paper quantities or misfeeds. See *Network Guide*.
- You can use a Web browser to make network settings. See Network Guide.
- You can also use a Web browser to register and manage items such as user codes, e-mail addresses, and folders in the Address Book. See the Web browser's Help.

TABLE OF CONTENTS

Manuals for This Machine	i
What You Can Do with This Machine	iii
Copier, Printer, and Scanner Functions	
Utilizing Stored Documents	iii
Using the Scanner in a Network Environment	
Administrating the Machine/ Protecting Documents (Security Functions)	
Monitoring the Machine Via Computer	
Notice	1
Copyrights and Trademarks	2
Trademarks	
Information about Installed Software	3
How to Read This Manual	9
Symbols	
Names of Major Options	
Terms	10
Safety Information	11
Safety During Operation	
Positions of ⚠WARNING and ⚠CAUTION Labels	13
ENERGY STAR Program	15
ENERGY STAR Program	
ENERGY STAR Program 1. Getting Started Guide to Components	17
ENERGY STAR Program 1. Getting Started Guide to Components	17
ENERGY STAR Program 1. Getting Started Guide to Components Options Control Panel	17 20
I. Getting Started Guide to Components Options Control Panel Display Panel	20 23
I. Getting Started Guide to Components Options Control Panel Display Panel When the Authentication Screen is displayed	202324
I. Getting Started Guide to Components Options Control Panel Display Panel When the Authentication Screen is displayed Turning On the Power	
I. Getting Started Guide to Components Options Control Panel Display Panel When the Authentication Screen is displayed Turning On the Power Turning On the Main Power	1720242527
I. Getting Started Guide to Components Options Control Panel Display Panel When the Authentication Screen is displayed Turning On the Power	
ENERGY STAR Program 1. Getting Started Guide to Components	
ENERGY STAR Program 1. Getting Started Guide to Components Options Control Panel Display Panel When the Authentication Screen is displayed Turning On the Power Turning On the Main Power Turning On the Power Turning Off the Power Turning Off the Power Turning Off the Power Saving Energy	
ENERGY STAR Program 1. Getting Started Guide to Components	
ENERGY STAR Program 1. Getting Started Guide to Components Options Control Panel Display Panel When the Authentication Screen is displayed Turning On the Power Turning On the Main Power Turning On the Power Turning Off the Power Turning Off the Power Turning Off the Power Authentication Operations	17202425272728282930
I. Getting Started Guide to Components Options Control Panel Display Panel When the Authentication Screen is displayed Turning On the Power Turning On the Power Turning On the Power Turning Off the Power Turning Off the Power Saving Energy Anti-humidity Heater Switch	
ENERGY STAR Program 1. Getting Started Guide to Components Options Control Panel Display Panel When the Authentication Screen is displayed Turning On the Power Turning On the Main Power Turning On the Power Turning Off the Power Turning Off the Power Turning Off the Power Authentication Operations	17202425272728282930

3. Document Server

Relationship between Document Server and Other Functions	37
Document Server Display	
Using the Document Server	
Storing Data	
Changing a Stored Document's File Name, User Name, or Password	
Searching for Stored Documents	
Deleting Stored Documents	
Viewing Stored Documents Using a Web Browser	
Downloading Stored Documents	
Settings for the Document Server	
•	
4. User Tools (System Settings)	
User Tools Menu (System Settings)	
Accessing User Tools (System Settings)	
Changing Default Settings	
Exiting User Tools	
Settings You Can Change with User Tools	
General Features	
Tray Paper Settings	
Timer Settings	
Administrator Tools	63
5. Registering Addresses and Users	
Address Book	69
Registering Names	
Registering Names	72
	72
Registering a Name	72
Registering a Name	72 73 73
Registering a Name Changing a Registered Name Deleting a Registered Name	727373
Registering a Name Changing a Registered Name Deleting a Registered Name Registering User Codes Registering a New User Code Changing a User Code	
Registering a Name Changing a Registered Name Deleting a Registered Name Registering User Codes Registering a New User Code Changing a User Code Deleting a User Code	
Registering a Name Changing a Registered Name Deleting a Registered Name Registering User Codes Registering a New User Code Changing a User Code Deleting a User Code Displaying the Counter for Each User Code	
Registering a Name Changing a Registered Name Deleting a Registered Name Registering User Codes Registering a New User Code Changing a User Code Deleting a User Code Displaying the Counter for Each User Code Printing the Counter for Each User Code.	
Registering a Name Changing a Registered Name Deleting a Registered Name Registering User Codes Registering a New User Code Changing a User Code Deleting a User Code Displaying the Counter for Each User Code Printing the Counter for Each User Code Clearing the Number of Prints	
Registering a Name Changing a Registered Name Deleting a Registered Name Registering User Codes Registering a New User Code Changing a User Code Deleting a User Code Displaying the Counter for Each User Code Printing the Counter for Each User Code Clearing the Number of Prints E-mail Destination	
Registering a Name Changing a Registered Name Deleting a Registered Name Registering User Codes Registering a New User Code Changing a User Code Deleting a User Code Displaying the Counter for Each User Code Printing the Counter for Each User Code Clearing the Number of Prints E-mail Destination Registering an E-mail Destination	
Registering a Name Changing a Registered Name Deleting a Registered Name Registering User Codes Registering a New User Code Changing a User Code Deleting a User Code Displaying the Counter for Each User Code Printing the Counter for Each User Code Clearing the Number of Prints E-mail Destination Registering an E-mail Destination Changing a Registered E-mail Destination	
Registering a Name Changing a Registered Name Deleting a Registered Name Registering User Codes Registering a New User Code Changing a User Code Deleting a User Code Displaying the Counter for Each User Code Printing the Counter for Each User Code Clearing the Number of Prints E-mail Destination Registering an E-mail Destination Changing a Registered E-mail Destination Deleting a Registered E-mail Destination	
Registering a Name Changing a Registered Name Deleting a Registered Name Registering User Codes Registering a New User Code Changing a User Code Deleting a User Code Displaying the Counter for Each User Code Printing the Counter for Each User Code Clearing the Number of Prints E-mail Destination Registering an E-mail Destination Changing a Registered E-mail Destination Deleting a Registered E-mail Destination Registering Folders	
Registering a Name Changing a Registered Name Deleting a Registered Name Registering User Codes Registering a New User Code Changing a User Code Deleting a User Code Displaying the Counter for Each User Code Printing the Counter for Each User Code Clearing the Number of Prints E-mail Destination Registering an E-mail Destination Changing a Registered E-mail Destination Deleting a Registered E-mail Destination Registering Folders Using SMB to Connect	
Registering a Name Changing a Registered Name Deleting a Registered Name Registering User Codes Registering a New User Code Changing a User Code Deleting a User Code Displaying the Counter for Each User Code Printing the Counter for Each User Code. Clearing the Number of Prints E-mail Destination Registering an E-mail Destination Changing a Registered E-mail Destination Deleting a Registered E-mail Destination Registering Folders Using SMB to Connect Using FTP to Connect	
Registering a Name Changing a Registered Name Deleting a Registered Name Registering User Codes Registering a New User Code Changing a User Code Deleting a User Code Displaying the Counter for Each User Code Printing the Counter for Each User Code Clearing the Number of Prints E-mail Destination Registering an E-mail Destination Changing a Registered E-mail Destination Deleting a Registered E-mail Destination Registering Folders Using SMB to Connect Using FTP to Connect Registering Names to a Group	
Registering a Name Changing a Registered Name Deleting a Registered Name Registering User Codes Registering a New User Code Changing a User Code Deleting a User Code Displaying the Counter for Each User Code Printing the Counter for Each User Code Clearing the Number of Prints E-mail Destination Registering an E-mail Destination Changing a Registered E-mail Destination Deleting a Registered E-mail Destination Registering Folders Using SMB to Connect Using FTP to Connect Registering Names to a Group Registering a New Group	
Registering a Name Changing a Registered Name Deleting a Registered Name Registering User Codes Registering a New User Code Changing a User Code Deleting a User Code Displaying the Counter for Each User Code Printing the Counter for Each User Code Clearing the Number of Prints E-mail Destination Registering an E-mail Destination Changing a Registered E-mail Destination Deleting a Registered E-mail Destination Registering Folders Using SMB to Connect Using FTP to Connect Registering Names to a Group Registering Names to a Group	
Registering a Name Changing a Registered Name Deleting a Registered Name Registering User Codes Registering a New User Code Changing a User Code Deleting a User Code Displaying the Counter for Each User Code Printing the Counter for Each User Code Clearing the Number of Prints E-mail Destination Registering an E-mail Destination Changing a Registered E-mail Destination Deleting a Registered E-mail Destination Registering Folders Using SMB to Connect Using FTP to Connect Registering Names to a Group Registering Names to a Group Registering Names to a Group Adding a Group to Another Group	
Registering a Name Changing a Registered Name Deleting a Registered Name Registering User Codes Registering a New User Code Changing a User Code Deleting a User Code Displaying the Counter for Each User Code Printing the Counter for Each User Code Clearing the Number of Prints E-mail Destination Registering an E-mail Destination Changing a Registered E-mail Destination Deleting a Registered E-mail Destination Registering Folders Using SMB to Connect Using FTP to Connect Registering Names to a Group Registering Names to a Group	

Deleting a Group within a Group	
Changing a Group Name	
Deleting a Group	92
Registering a Protection Code	93
Registering a Protection Code for a Name in the Address Book	93
Registering a Protection Code for a Group	
Registering SMTP and LDAP Authentication	
SMTP Authentication	95
LDAP Authentication	
6. Troubleshooting	
If Your Machine Does Not Operate As You Want	99
General	
Document Server	101
Loading Paper	103
Loading Paper Roll	
Loading Cut Paper	105
LAdding Toner	106
%rClearing Misfeeds	
Original Misfeeds (P)	
Paper Misfeeds in the Paper Tray (A1, A2)	
Paper Misfeeds in the Paper Bypass (A3, B)	
Paper Misfeeds in the Rear Paper Output (C)	
Changing the Paper Size	
Changing the Paper Roll Size	
Changing the Cut Paper Size	
7. Remarks	
Dos and Don'ts	
Toner	
Handling Toner	
Toner Storage	
Used Toner	
Where to Put Your Machine	
Machine Environment	
Moving	
Power Connection	
Clearance Around the Machine	
Maintaining Your Machine	121
Cleaning inside the Original Cover	121
Cleaning the Imaging Unit	122
Other Functions	123
Inquiry	123
Changing the Display Language	124
Counter	
Displaying the Total Counter	

8. Entering Text

Entering Text	127
Available Characters	
Keys	
Entering Text	128
9. Specifications	
Main Unit	129
Options	133
Roll Feeder Type 480	
Paper Cassette Type 480	
Carrier Sheet	
Paper Cassette Type 480	
Original Tray Type G	
Copy Paper	
Recommended Size and Type	135
Unusable Paper	
Paper Storage	
Handling paper	
INDEX	141

Notice

Notice To Wireless LAN Interface (optional) Users

((0)

Notice to Users in EEA Countries

This product complies with the essential requirements and provisions of Directive 1999/5/EC of the European Parliament and of the Council of 9 March 1999 on radio equipment and telecommunications terminal equipment and the mutual recognition of their conformity.

The CE Declaration of Conformity is available on the Internet at URL:

http://www.ricoh.co.jp/fax/ce_doc/.

This product is only for use in EEA or other authorized countries. Outdoor use of this product in Belgium, France, Germany, Italy, or the Netherlands is prohibited.

Copyrights and Trademarks

Trademarks

Microsoft[®], Windows[®] and Windows NT[®] are registered trademarks of Microsoft Corporation in the United States and/or other countries.

Acrobat® is a registered trademark of Adobe Systems Incorporated.

Other product names used herein are for identification purposes only and might be trademarks of their respective companies. We disclaim any and all rights to those marks.

The proper names of the Windows operating systems are as follows:

- The product name of Windows[®] 95 is Microsoft[®] Windows[®] 95
- The product name of Windows[®] 98 is Microsoft[®] Windows[®] 98
- The product name of Windows® Me is Microsoft® Windows® Millennium Edition (Windows Me)
- The product names of Windows[®] 2000 are as follows: Microsoft[®] Windows[®] 2000 Advanced Server Microsoft[®] Windows[®] 2000 Server Microsoft[®] Windows[®] 2000 Professional
- The product names of Windows[®] XP are as follows: Microsoft[®] Windows[®] XP Professional Microsoft[®] Windows[®] XP Home Edition
- The product names of Windows ServerTM 2003 are as follows: Microsoft[®] Windows ServerTM 2003 Standard Edition Microsoft[®] Windows ServerTM 2003 Enterprise Edition Microsoft[®] Windows ServerTM 2003 Web Edition
- The product names of Windows[®] NT are as follows: Microsoft[®] Windows NT[®] Server 4.0 Microsoft[®] Windows NT[®] Workstation 4.0

Information about Installed Software

expat

- The software including controller, etc. (hereinafter "software") installed on this product uses the expat under the conditions mentioned below.
- The product manufacturer provides warranty and support to the software of the product including the expat, and the product manufacturer makes the initial developer and copyright holder of the expat, free from these obligations.
- Information relating to the expat is available at: http://expat.sourceforge.net/

Copyright © 1998, 1999, 2000 Thai Open Source Software Centre, Ltd. and Clark Cooper.

Copyright © 2001, 2002 Expat maintainers.

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

NetBSD

1. Copyright Notice of NetBSD

For all users to use this product:

This product contains NetBSD operating system:

For the most part, the software constituting the NetBSD operating system is not in the public domain; its authors retain their copyright.

The following text shows the copyright notice used for many of the NetBSD source code. For exact copyright notice applicable for each of the files/binaries, the source code tree must be consulted.

A full source code can be found at http://www.netbsd.org/.

Copyright © 1999, 2000 The NetBSD Foundation, Inc.

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- ① Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- ② Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- ③ All advertising materials mentioning features or use of this software must display the following acknowledgment: This product includes software developed by The NetBSD Foundation, Inc. and its contributors.
- 4 Neither the name of The NetBSD Foundation nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE NETBSD FOUNDATION, INC. AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE FOUNDATION OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

2. Authors Name List

All product names mentioned herein are trademarks of their respective owners. The following notices are required to satisfy the license terms of the software that we have mentioned in this document:

- This product includes software developed by the University of California, Berkeley and its contributors.
- This product includes software developed by Jonathan R. Stone for the NetB-SD Project.
- This product includes software developed by the NetBSD Foundation, Inc. and its contributors.
- This product includes software developed by Manuel Bouyer.
- This product includes software developed by Charles Hannum.
- This product includes software developed by Charles M. Hannum.
- This product includes software developed by Christopher G. Demetriou.
- This product includes software developed by TooLs GmbH.
- This product includes software developed by Terrence R. Lambert.
- This product includes software developed by Adam Glass and Charles Hannum.
- This product includes software developed by Theo de Raadt.

- This product includes software developed by Jonathan Stone and Jason R. Thorpe for the NetBSD Project.
- This product includes software developed by the University of California, Lawrence Berkeley Laboratory and its contributors.
- This product includes software developed by Christos Zoulas.
- This product includes software developed by Christopher G. Demetriou for the NetBSD Project.
- This product includes software developed by Paul Kranenburg.
- This product includes software developed by Adam Glass.
- This product includes software developed by Jonathan Stone.
- This product includes software developed by Jonathan Stone for the NetBSD Project.
- This product includes software developed by Winning Strategies, Inc.
- This product includes software developed by Frank van der Linden for the NetBSD Project.
- This product includes software developed for the NetBSD Project by Frank van der Linden
- This product includes software developed for the NetBSD Project by Jason R. Thorpe.
- The software was developed by the University of California, Berkeley.
- This product includes software developed by Chris Provenzano, the University of California, Berkeley, and contributors.

Sablotron

Sablotron (Version 0.82) Copyright © 2000 Ginger Alliance Ltd. All Rights Reserved

- a) The application software installed on this product includes the Sablotron software Version 0.82 (hereinafter, "Sablotron 0.82"), with modifications made by the product manufacturer. The original code of the Sablotron 0.82 is provided by Ginger Alliance Ltd., the initial developer, and the modified code of the Sablotron 0.82 has been derived from such original code provided by Ginger Alliance Ltd.
- b) The product manufacturer provides warranty and support to the application software of this product including the Sablotron 0.82 as modified, and the product manufacturer makes Ginger Alliance Ltd., the initial developer of the Sablotron 0.82, free from these obligations.
- c) The Sablotron 0.82 and the modifications thereof are made available under the terms of Mozilla Public License Version 1.1 (hereinafter, "MPL 1.1"), and the application software of this product constitutes the "Larger Work" as defined in MPL 1.1. The application software of this product except for the Sablotron 0.82 as modified is licensed by the product manufacturer under separate agreement(s).
- d) The source code of the modified code of the Sablotron 0.82 is available at: http://support-download.com/services/device/sablot/notice082.html

- e) The source code of the Sablotron software is available at: http://www.gingerall.com
- f) MPL 1.1 is available at: http://www.mozilla.org/MPL/MPL-1.1.html

JPEG LIBRARY

 The software installed on this product is based in part on the work of the Independent JPEG Group.

SASL

CMU libsasl

Tim Martin

Rob Earhart

Rob Siemborski

Copyright © 2001 Carnegie Mellon University. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- ① Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- ② Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- ③ The name "Carnegie Mellon University" must not be used to endorse or promote products derived from this software without prior written permission. For permission or any other legal details, please contact:

Office of Technology Transfer Carnegie Mellon University 5000 Forbes Avenue Pittsburgh, PA 15213-3890 (412) 268-4387, fax: (412) 268-7395 tech-transfer@andrew.cmu.edu

Redistributions of any form whatsoever must retain the following acknowledgment:

"This product includes software developed by Computing Services at Carnegie Mellon University (http://www.cmu.edu/computing/)."

CARNEGIE MELLON UNIVERSITY DISCLAIMS ALL WARRANTIES WITH REGARD TO THIS SOFTWARE, INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS, IN NO EVENT SHALL CARNEGIE MELLON UNIVERSITY BE LIABLE FOR ANY SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES OR ANY DAMAGES WHATSOEVER RESULTING FROM LOSS OF USE, DATA OR PROFITS, WHETHER IN AN ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS ACTION, ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THIS SOFTWARE.

MD4

Copyright © 1990-2, RSA Data Security, Inc. All rights reserved.

License to copy and use this software is granted provided that it is identified as the "RSA Data Security, Inc. MD4 Message-Digest Algorithm" in all material mentioning or referencing this software or this function.

License is also granted to make and use derivative works provided that such works are identified as "derived from the RSA Data Security, Inc. MD4 Message-Digest Algorithm" in all material mentioning or referencing the derived work.

RSA Data Security, Inc. makes no representations concerning either the merchantability of this software or the suitability of this software for any particular purpose. It is provided "as is" without express or implied warranty of any kind.

These notices must be retained in any copies of any part of this documentation and/or software.

MD₅

Copyright © 1991-2, RSA Data Security, Inc. Created 1991. All rights reserved.

License to copy and use this software is granted provided that it is identified as the "RSA Data Security, Inc. MD5 Message-Digest Algorithm" in all material mentioning or referencing this software or this function.

License is also granted to make and use derivative works provided that such works are identified as "derived from the RSA Data Security, Inc. MD5 Message-Digest Algorithm" in all material mentioning or referencing the derived work.

RSA Data Security, Inc. makes no representations concerning either the merchantability of this software or the suitability of this software for any particular purpose. It is provided "as is" without express or implied warranty of any kind.

These notices must be retained in any copies of any part of this documentation and/or software.

RSA BSAFE®



- This product includes RSA BSAFE® cryptographic or security protocol software from RSA Security Inc.
- RSA and BSAFE are registered trademarks of RSA Security Inc. in the United States and/or other countries.
- RSA Security Inc. All rights reserved.

Samba(Ver 2.2.2-ja-1.1)

For SMB transmission, this machine uses Samba ver 2.2.2-ja-1.1 (hereinafter referred to as Samba 2.2.2-ja-1.1).

Copyright © Andrew Tridgell 1994-1998

This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 675 Mass Ave, Cambridge, MA 02139, USA

Note

☐ The source code for SMB transmission by this machine can be downloaded from the following website: http://support-download.com/services/scbs

How to Read This Manual

Symbols

This manual uses the following symbols:

↑ WARNING:

This symbol indicates a potentially hazardous situation that might result in death or serious injury if you misuse the machine by not following these instructions under this symbol. Be sure to read these instructions, all of which are included in the Safety Information section.

↑ CAUTION:

This symbol indicates a potentially hazardous situation that might result in minor or moderate injury or property damage not involving bodily injury, if you misuse the machine by not following these instructions under this symbol. Be sure to read the instructions, all of which are included in the Safety Information section.

* The above statements are for your safety.

∰Important

If this instruction is not followed, paper might be misfed, originals damaged, or data lost. Be sure to read this.

Preparation

This symbol indicates the prior knowledge or preparation required before operation.

This symbol indicates precautions for operation, or actions to take following mal-operation.

Limitation

This symbol indicates numerical limits, functions that cannot be used together, or conditions under which a particular function cannot be used.

This symbol indicates where further relevant information can be found.

[]

Keys that appear on the machine's display.

Keys built into the machine's control panel.

Names of Major Options

Major options for this machine are referred to as follows:

- Roll Holder Unit Type $A \rightarrow Roll$ holder
- Roll Feeder Type 480 → Lower Tray
- Paper Cassette Type 480→ Cut paper tray
- Original Tray Type $G \rightarrow$ Original tray

Terms

• Long length original/paper Original/paper length longer than 1,189 mm, 46.8".

Safety Information

When using this machine, the following safety precautions should always be followed.

Safety During Operation

In this manual, the following important symbols are used:

↑ WARNING:

Indicates a potentially hazardous situation which, if instructions are not followed, could result in death or serious injury.

↑ CAUTION:

Indicates a potentially hazardous situation which, if instructions are not followed, may result in minor or moderate injury or damage to property.

↑ WARNING:

- Connect the machine only to the power source described on the inside front cover of this manual. Connect the power cord directly into a wall outlet and do not use an extension cord.
- Do not damage, break or make any modifications to the power cord.
 Do not place heavy objects on it. Do not pull it hard nor bend it more than necessary. These actions could cause an electric shock or fire.
- Disconnect the power plug (by pulling the plug, not the cable) if the power cable or plug becomes frayed or otherwise damaged.
- To avoid hazardous electric shock or laser radiation exposure, do not remove any covers or screws other than those specified in this manual.
- Turn off the power and disconnect the power plug (by pulling the plug, not the cable) if any of the following occurs:
 - · You spill something into the machine.
 - You suspect that your machine needs service or repair.
 - The external housing of your machine has been damaged.
- Do not incinerate used toner or toner containers. Toner dust might ignite when exposed to an open flame. Dispose of used toner containers in accordance with local regulations.
- Dispose of the used toner bottle in accordance with the local regulations.
- Keep the machine away from flammable liquids, gases, and aerosols.

 A fire or an electric shock might occur.


↑ CAUTION:

- Keep the machine away from humidity and dust. Otherwise a fire or an electric shock might occur.
- Do not place the machine on an unstable or tilted surface. If it topples over, an injury might occur.
- If you use the machine in a confined space, make sure there is a continuous air turnover.
- Unplug the power cord from the wall outlet before you move the machine. While moving the machine, you should take care that the power cord will not be damaged under the machine.
- When you disconnect the power plug from the wall outlet, always pull the plug (not the cable).
- Do not allow paper clips, staples, or other small metallic objects to fall inside the machine.
- Keep toner (used or unused) and toner bottle out of the reach of children.
- For environmental reasons, do not dispose of the machine or expended supply waste at household waste collection points. Disposal can take place at an authorized dealer.
- If toner or used toner is inhaled, gargle with plenty of water and move into a fresh air environment. Consult a doctor if necessary.
- If toner or used toner gets into your eyes, flush immediately with large amounts of water. Consult a doctor if necessary.
- If toner or used toner is swallowed, dilute by drinking a large amount of water. Consult a doctor if necessary.
- Avoid getting toner on your clothes or skin when removing a paper jam or replacing toner. If your skin comes into contact with toner, wash the affected area thoroughly with soap and water.
- If toner gets on your clothing, wash with cold water. Hot water will set the toner into the fabric and may make removing the stain impossible.
- Do not reuse stapled paper. Do not use aluminum foil, carbon-containing paper or other conductive paper. If you do, there is a danger of fire.
- Be careful when replacing the roll paper or removing misfed paper by following the operating instructions properly. Otherwise, an injury may result from the paper cutter inside.
- The inside of the machine could be very hot. Do not touch the parts with a label indicating the "hot surface". Otherwise, an injury might occur.
- The fusing section of this machine might be very hot. Caution should be taken when removing misfed paper.
- Hold the paper roll horizontally with both hands. When you grab the paper holder and hold the paper roll vertically, the paper roll may fall off and injury may result.

Positions of <u>MWARNING</u> and <u>MCAUTION</u> Labels


This machine has labels for \triangle WARNING and \triangle CAUTION at the positions shown below. For safety, please follow the instructions and handle the machine as indicated.



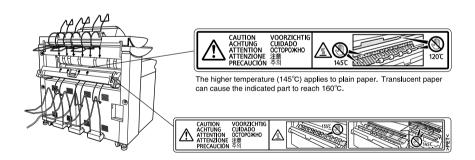

AHD016S



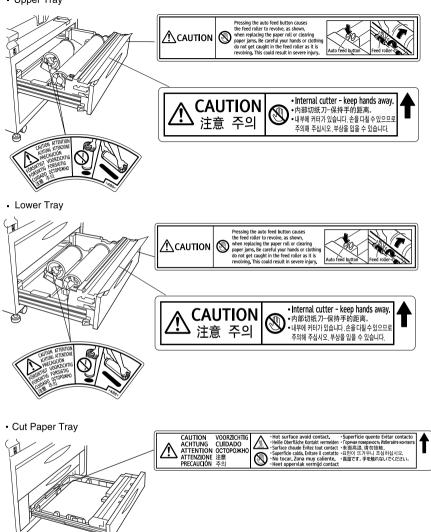

AHD017S

ENERGY STAR Program



As an ENERGY STAR Partner, we have determined that this machine model meets the ENERGY STAR Guidelines for energy efficiency.

The ENERGY STAR Guidelines intend to establish an international energy-saving system for developing and introducing energy-efficient office equipment to deal with environmental issues, such as global warming.

When a product meets the ENERGY STAR Guidelines for energy efficiency, the Partner shall place the ENERGY STAR logo onto the machine model.

This product was designed to reduce the environmental impact associated with office equipment by means of energy-saving features, such as Low-power mode.

Low power mode

This product automatically lowers its power consumption when it is not operated for a fixed time (default setting: 15 minutes). Printing is possible in this mode, but to use the copier, press the **[Energy Saver]** key.

For details about changing the default interval before entering Low power mode, see p.62 "Energy Saver".

Auto Off mode (Copier only)

To conserve energy, this product automatically turns off when it is not operated for a fixed time (default setting: 60 minutes). To use the copier, press the operation switch.

For details about changing the default interval before entering Auto Off mode, see p.61 "Auto Off Timer".

Sleep mode (Printer installed)

This product automatically lowers its power consumption even further when it is not operated for a fixed time (default setting: 60 minutes). Printing is still possible in this mode, but if you want to make copies, press the operation switch.

For details about changing the default interval before entering Sleep mode, see p.62 "Energy Saver".

Specification

		Copier only	Printer and Scanner installed
Low power mode Power consumption Default interval	Power consumption	195Wh	_
	Default interval	15 mir	15 minutes
	Recovery time	60 seconds	
Auto Off mode	Power consumption	45 W	_
	Default interval	60 minutes	_
	Recovery time	120 seconds	_
Sleep mode	Power consumption	_	_
	Default interval	_	60 minutes
	Recovery time	_	120 seconds


Recycled paper

In accordance with the ENERGY STAR Program, we recommend using environmentally friendly recycled paper. Contact your sales representative for recommended paper.

1. Getting Started

Guide to Components

Front

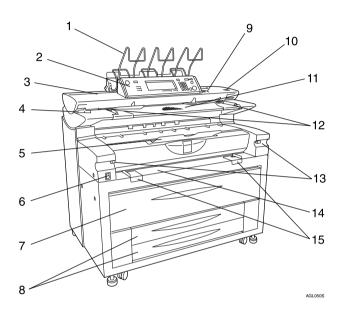

1. Upper output stacker

When the top original exit is selected, originals are stacked here. See "Original Output Locations", Copy Reference.

2. Control panel

See p.23 "Control Panel".

3. Original cover

This protects the original feed mechanism and the exposure glass.

4. Original cover release lever

Use to open the original cover to clear jammed originals or to clean the machine.

5. Front output auxiliary tray

Use to receive copy paper. When copying rolled originals, this can also serve as an original tray.

6. Main power switch

Use to turn the main power on or off. If you will not use the machine for a long time, disconnect the power cord. Normally, the machine should be left on.

7. Upper tray

Includes Tray 1 (front) and Tray 2 (rear).

8. Lower tray (optional) or Cut paper trays (optional)

The illustration shows the cut paper trays. See p.20 "Options".

9. Operation switch

Use to turn the power on or off. The power indicator lights when the power is on. See p.27 "Turning On the Power".

10. [Scanner Stop] key

Use if originals are feeding in slanted, or to cancel scanning while an original is feeding in. You can also use this to release the paper edge hold function.

11. Original table

Place originals here scanning side up.

12. Original guide

Set to the width of your originals.

13. Imaging unit release lever

Use this lever to open the imaging unit when clearing paper jams inside or cleaning the machine.

#Important

☐ Do not leave the imaging unit open more than 10 minutes, otherwise copy quality may deteriorate.

Note

While holding down the imaging unit, pull the release lever to open it.


14. Paper Bypass

Use to feed paper in manually. Load paper print side up. See "Copying from the Paper Bypass", Copy Reference.

15. Paper bypass's paper guide

Set to the width of the paper for bypass copying.

Rear

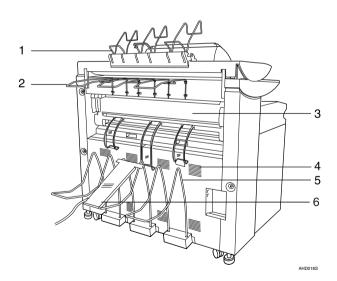

1. Document roller

Rolls and stacks long length or rolled originals here.

2. Rear original exit (straight)

Holds originals ejected at the back of the machine. See "Original Output Locations", Copy Reference.

3. Fusing unit cover

Protects the fusing unit.

4. Ventilation holes

Prevent overheating. Do not obstruct them by placing anything near or leaning objects against them. If the machine overheats, a failure might occur.


5. Rear output

Stacks copies delivered to the rear output.

6. Copy output (rear) auxiliary guide

When ejecting A0(E) size paper to the rear output, this guide prevents the leading edge of the paper to be caught in the copy output tray.

Upper Tray (Tray 1, Tray 2)

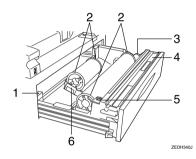

1. Anti-humidity heater switch

When humidity is high, paper in the paper tray may absorb moisture, which can affect copy quality. The anti-humidity heater prevents this. Turn this switch on when humidity is high. See p.30 "Anti-humidity Heater Switch".

2. Paper holder

The two paper holders grip the paper roll and are mounted on the paper roll tray's roll holder.

3. Paper feed knob

Use when loading paper rolls or clearing paper jams. See p.103 "Loading Paper" and p.108 "% Clearing Misfeeds".

4. Cutter knob

Use to manually cut paper if there are paper jams in the cutter area of the machine. Always return the cutter knob to the left or right end.

5. Auto feed button


Use this to clear misfeeds in the paper feed area. Keep this button pressed to feed the roll paper continuously. When approximately 100 mm, 3.9" of paper length is fed, release the button so that paper will be cut automatically.

6. Roll holder

Adjust this to the size of the paper roll you are using. See p.113 "Changing the Paper Size".

Options

Trays

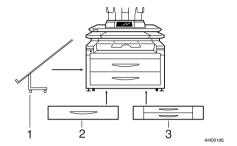

1. Original tray

This can stack originals that consist of many sheets.

2. Lower tray (paper roll tray)

You can load two paper rolls. See p.133 "Roll Feeder Type 480".


3. Cut paper trays

Load cut paper here. You can load up to 250 sheets of A2 size paper for each. See p.133 "Paper Cassette Type 480".

Note

 $\hfill \square$ You cannot install the lower tray and the cut paper trays at the same time.

♦ Lower tray (Paper roll tray)

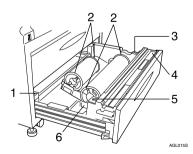

1. Anti-humidity heater switch

When humidity is high, paper in the paper tray may absorb moisture, which can affect copy quality. The anti-humidity heater prevents this. Turn this switch on when humidity is high. See p.30 "Anti-humidity Heater Switch".

2. Paper holder

The two paper holders grip the paper roll and are mounted on the paper roll tray's roll holder.

3. Paper feed knob


Use when loading paper rolls or clearing paper jams. See p.103 "Loading Paper" and p.108 "% Clearing Misfeeds".

4. Cutter knob

Use to manually cut paper if there are paper jams in the cutter area of the machine. Always return the cutter knob to the left or right end.

Cut paper trays



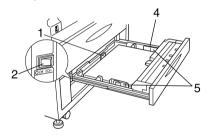

1. Back fence

Adjust to the paper length.

2. Anti-humidity heater switch

When humidity is high, paper in the paper tray may absorb moisture, which can affect copy quality. The anti-humidity heater prevents this. Turn this switch on when humidity is high. See p.30 "Anti-humidity Heater Switch".


5. Auto feed button

Use this to clear misfeeds in the paper feed area. Keep this button pressed to feed the roll paper continuously. When approximately 100 mm, 3.9" of paper length is fed, release the button so that paper will be cut automatically.

6. Roll holder

Adjust this to the size of the paper roll you are using. See p.113 "Changing the Paper Size".

Tray 4

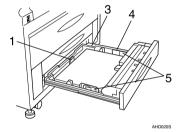

3. Side guide pocket

Use the side guide inside here to align translucent paper. Keep covered when not in use.

4. Side lever

Use to fix the position of the side fences.

5. Side fences

Adjust to the paper width.

Other Options

Printer unit

Allows you to use the printer function.

Scanner unit

Allows you to use the scanner function. You can install either Type 480 or RW480 scanner unit.

♦ IEEE 802.11 Wireless LAN board (option of Scanner Unit Type 480) *1

You can install a wireless LAN interface.

♦ IEEE 1394 interface board (option of Scanner Unit Type 480) *1


Connects to an IEEE 1394 cable.

DataOverWriteSecurity Unit

Allows you to erase data on the hard disk.


Carrier sheet

Use to load bent, folded, creased, thin or pasted originals. See "Setting the Carrier Sheet", *Copy Reference*.

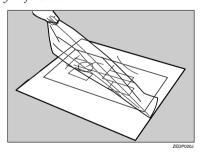

Paper holder


Use to set a paper roll in the paper roll tray's roll holder. This is useful to change quickly to a different size paper roll from the paper holder.

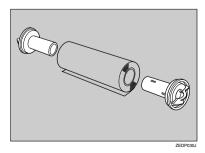

You cannot install both of the options at the same time below: IEEE 1394 interface board, and IEEE 802.11 Wireless LAN board.

Control Panel

This illustration shows the control panel of a machine that has all options fully installed.

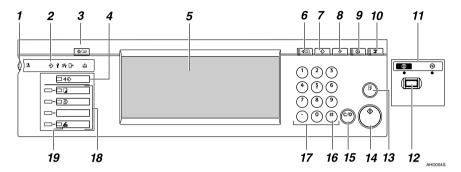

1. Screen contrast knob

Adjusts the brightness of the screen.

2. Indicators

Show errors or machine status.

- ♦: Data In indicator
- 1: Service Call indicator
- **%**: Misfeed indicator. See p.108 "**%** Clearing Misfeeds".
- Den Cover indicator
- 🕍: Add Toner indicator. See p.106 "🕍 Adding Toner".

3. [User Tools/Counter]

- Press to change default settings and operating conditions to your requirements. See p.49 "User Tools (System Settings)".
- Counter
 Press to check or print the counter value. For details, see p.125 "Counter".

4. [Job List] key

Shows the job list. See p.31 "Job List".

5. Display panel

Shows operation status, error messages, and function menus.

6. [Check Modes] key

Press to check the entered copying settings.

7. [Program] key (copier mode)

Press to store or select the program mode. See "Programs", Copy Reference.

8. [Clear Modes] key

Press to clear a setting's contents. The number of copies is cleared when you press and hold down this key for three seconds.

9. [Energy Saver]key

Press to switch to and from the Energy Saver mode. For details, see p.29 "Energy Saver mode".

10. [Interrupt] key

Press to make interrupt copies during copying or printing. See "Interrupt Copy", Copy Reference.

11. Main power indicator and On indicator

The main power indicator lights when the main power switch is turned on. The **On** indicator lights when the operation switch is on.

#Important

Do not turn off the main power switch while On indicator is lit. Doing so may damage the hard disk.

12. Operation switch

Press to turn the power on (the **On** indicator goes on). To turn the power off, press it again (the **On** indicator goes off).

13. [Sample Copy] key

Press to make a single sample copy before starting a long copy run. By checking the sample copy and making any necessary changes to the image quality settings before you make multiple copies, you can save time and paper. See "Sample Copy", Copy Reference.

14. [Start] key

Press to start copying or scanning. Press to start scanning and printing in Document Server mode.

15. [Clear/Stop] key

- Clear Press to clear a number entered.
- Stop
 Press to stop a copy job in progress.

 Press to stop scanning and printing in Document Server mode.

16. [#] key

Press to confirm values entered.

17. Number keys

Press to enter a value, such as the number of copies.

18. Function keys

Press to select the following functions:

- Copy:
- Document Server:
- Scanner:

19. Function Status indicator

These show the status of the above functions:

- · Yellow: selected
- · Green: active
- Red: interrupted

Display Panel

The display panel shows machine status, error messages, and function menus.


The function items displayed serve as selector keys. You can select or specify an item by lightly pressing them.

When you select or specify an item on the display panel, it is highlighted like Keys appearing as OK cannot be used.


∰Important

☐ A force or impact of more than 30 N (about 3 kgf) will damage the display panel. The copying screen is displayed as default when the power is turned on.

When the lower tray (paper roll) is installed

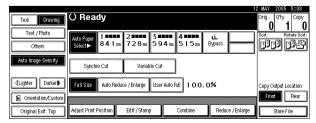

When the cut paper trays are installed

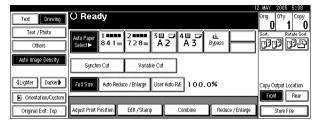

Common Key Operations

The following keys are common to all screens:


♦ Key list

[OK]	Acknowledges a selected function or entered values, and then returns to the previous display.
[Cancel]	Deletes a selected function or entered values, and then returns to the previous display.
[▲Prev.] [▼Next]	Moves to the previous or next display when all items cannot be shown on the display at once.
[OK] [Yes]	Closes displayed messages.
[Clear]	Clears entered values and does not change the settings.
[Exit]	Returns to the previous display.

When the Authentication Screen is displayed

When Basic Authentication, Windows Authentication, or LDAP Authentication is set, the authentication screen is displayed. Unless a valid user name and password are entered, operations are not possible with the machine.

- Consult the User Administrator about your login user name and login password. For details of the various types of user authentication, consult the respective administrators.
- When User Code Authentication is set, the screen for entering a user code is displayed instead.
- 1 Press [Enter] for Login User Name.

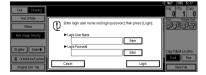

- 2 Enter a login user name, and then press [OK].
- 3 Press [Enter] for Login Password.
- 4 Enter a login password, and then press [OK].
- Press [Login].

When the user is authenticated, the screen for the function you are using appears.

𝚱 Note


 \square If authentication fails, "Authentication has failed." appears. Check the login user name and password.

If the user code information has been specified, a different screen appears. For details, see p.74 "Registering User Codes".

Log Off

∰Important

- ☐ To prevent unauthorized users from using the machine, always log off when you have finished using the machine.
- 1 Press (User Tools /Counter).

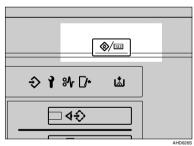

2 Press [Logout].



- Press [Yes].
- 4 Press [User Tools /Counter].

Turning On the Power

This machine has two power switches:

Operation switch (right side of the control panel)

Press to activate the machine. When the machine finishes warming up, you can make copies.

Main power switch (left side of the machine)


Turning off this switch makes the main power indicator on the right side of the control panel go off. When this is done, machine power is completely off.

Ø Note

☐ This machine automatically enters Energy Saver mode, Low power mode, or turns itself off if you do not use it for a certain amount of time when the main power switch is on. See p.61 "Auto Off Timer", p.62 "Energy Saver" and p.62 "Panel Off Timer".

Turning On the Main Power

- Make sure the power cord is firmly plugged into the wall outlet.
- **2** Turn on the main power switch.

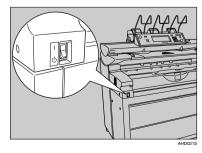

The main power indicator lights.

Important

Do not turn off the main power switch immediately after turning it on. Doing so may result in damage to the hard disk or memory, leading to malfunctions.


Note

☐ After switching off the power, wait at least three seconds before turning the power switch back on. Switching back on immediately after power off may inactivate the machine.

Turning On the Power

Press the operation switch on the right side of the control panel.

The **On** indicator lights.

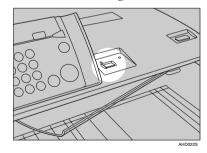

Note

- ☐ If the power does not come on when the operation switch is pressed, check the main power switch is on. If it is off, turn it on.
- ☐ The machine can be used about two minutes after it has been turned on.


☐ Immediately after the machine is turned on, or if the temperature is low, or if making a lot of continuous copies (more than 30 sheets/A0(E) size), the continuous copy speed may be reduced to ensure the toner fuses to the paper.

Turning Off the Power

Limitation

- ☐ You cannot turn the power off by pressing the operation switch while the message "Now loading..." is displayed.
- For eight seconds after the power is turned on and the screen is displayed, you cannot turn the power off by pressing the operation switch.
- ☐ For ten seconds after copying is finished and the machine stops, you cannot turn the power off by pressing the operation switch.
- 1 Press the operation switch.

The **On** indicator goes off.

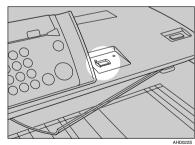


𝚱 Note

- ☐ In the following cases, the indicator will not go off but will instead blink when you press the operation switch:
 - During communication with external equipment.
 - When the hard disk is active.

Turning Off the Main Power

∰Important

- ☐ When the **On** indicator lights, do not turn off the main power switch. Doing so may result in damage to the hard disk or memory, leading to malfunctions.
- ☐ Make sure to turn off the main power switch before pulling out the power plug. Not doing this may result in damage to the hard disk or memory.
- Make sure the On indicator is not lit.
- 2 Turn off the main power switch on the left side of the machine.

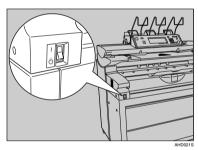

The main power indicator goes off.

Saving Energy

Energy Saver mode

If you do not use the machine for a certain period (default: 60 seconds) after an operation, or when you press the **[Energy Saver]** key, the display disappears and the machine goes into Energy Saver mode. When you press the **[Energy Saver]** key again, the machine returns to standby. The machine uses less electricity in Energy Saver mode.

∅ Note

☐ You can change the amount of time the machine waits before switching to Energy Saver mode after copying finishes or the last operation is performed. See p.62 "Panel Off Timer".

Low power mode

If you do not use the machine for a certain period (default: 15 minutes), it automatically lowers its power consumption. When you press the **[Energy Saver]** key, the machine returns to standby.

Note

☐ You can change the Low power mode. See p.62 "Energy Saver".

Auto Off mode

If you do not use the machine for a certain period (default: 60 minutes), it automatically turns itself off. This function is called "Auto Off". When you press the operation switch, the machine returns to standby.

Note

- ☐ You can change the Auto Off mode. See p.61 "Auto Off Timer".
- ☐ Specify whether or not to use the Auto Off Timer function. See p.68 "AOF (Always On)".
- ☐ The Auto Off Timer function will not operate in the following cases:
 - When a warning message appears.
 - When the service call indicator is lit.
 - When paper is jammed.
 - When the cover is open.
 - When the "Add Toner" message appears.
 - When toner is being replenished.
 - When the User Tools screen is displayed.
 - When fixed warm-up is in progress.
 - When the scanner, or other functions are active.
 - When operations are suspended during printing.
 - When the Data In indicator is on or blinking.
 - When the sample print display appears.
 - If copying is interrupted.
 - During copying (if only one original is inserted when using Format Overlay).
 - During copying (if all paper in the paper bypass has not been copied).


Anti-humidity Heater Switch

During winter or humid periods when there can be sudden changes in temperature, the paper in the paper roll tray, or the cut paper tray can absorb moisture. This may cause copy quality to deteriorate.


To prevent this, the machine has a built-in anti-humidity heater.

There is a switch for the anti-humidity heater in the left side of paper trays. Turn this switch on if the humidity level becomes high and copy quality is affected. Turn the switch off at other times. See p.140 "Handling paper".

Upper tray and lower tray (paper roll trays)

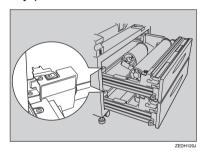

Cut paper trays

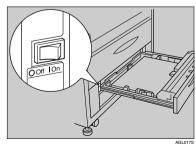

ſ

2. Combined Function Operations

Switching between Functions

You can use this machine not only as a copier, but also as a printer or scanner.

The default setting is to display the screen for copying when you turn the power on. You can change the setting. For details about settings, see p.54 "Function Priority".

☐ Depending on the options you have installed, you may not be able to switch to some functions.

Limitation

- ☐ You cannot switch functions in the following circumstances:
 - · While copying.
 - While adjusting system settings.
 - While the machine is warming up.
 - When the machine has been turned off automatically.

System Reset

The machine returns automatically to its initial condition when the job is finished, after a certain period of time has elapsed. This function is called "System Reset".

Note

☐ You can change the System Reset time. See p.62 "System Auto Reset".

Job List


You can check the contents of jobs in printing as well as those waiting in order, and also delete them.

Ø Note

- □ In the Job List, jobs reserved using Copy mode and Document Server mode are displayed. When [Print Priority] in the System Settings is set to [Job Order], jobs reserved using Copy mode, Document Server mode or Netfile mode are displayed.
- ☐ For details on printing in the Netfile mode, see the manuals for DeskTopBinder Professional/Lite.

Checking the Job List

1 Press the [Job List] key.

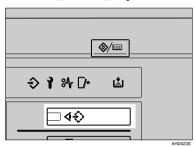


2 Select the job number of the list you want to check.



The job list is displayed.

The icons below show the operation mode of stored documents.

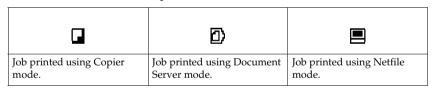


Note

- ☐ If more than six jobs are registered, press the [▲Prev.] or [▼Next] to scroll down the screen.
- Press [Detail].
- 4 Check the contents of the list.
- Press [OK].

The display returns to the job list menu.

Deleting Jobs

- **𝚱** Note
- $\hfill \square$ If you are unable to delete the job, contact the administrator.
- 1 Press the [Job List] key.

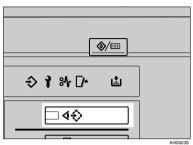

2 Select the job number to be deleted.



- Press [Delete Job].
- 4 Press [Yes].

The display returns to the job list menu.

Multi-Access

You can carry out another job using a different function while the current job is being performed. Performing multiple functions simultaneously in this manner is called "Multi-Access".

This allows you to handle your jobs efficiently, regardless of how the machine is being used. For example, while making copies, you can scan documents to store in the Document Server.



☐ See p.54 "Function Priority" to set function priority. By default, the [Display Mode] is set to first priority.

Function Compatibility

The chart below shows sample operations when "Print Priority" is set to "Interleave". See p.54 "Print Priority".

- △: Simultaneous operations are possible.
- Operation is enabled when the relevant function key is pressed and remote switching (of the scanner) is done.
- O: Operation is enabled when the **[Interrupt]** key is pressed to interrupt the preceding operation.
- →: Operation is performed automatically once the preceding operation ends.
- ×: The operation must be started once the preceding operation ends. (Simultaneous operations are not available.)

Function you want to select											al/Lite	
		Copy		Interrupt Copying		Scanner		Document Server			DeskTopBinder Professional/Lite	Web Document Server
Function i	n progress	Operations for Copying	Sort	Operations for Copying	Copying	Operations for Scanning	Scanning	Operations for Document Server	Scanning a Document to Store in Document Server	Printing from Document Server	Printing from Document Server	Printing
	Operations for Copying	×	×	Ö	Ö	Ŏ	•	Ŏ	● *5	•	Δ	Δ
Cop	Sort	△ *1	\rightarrow *1	0	0	•	● *2	•	● *2	Δ	Δ	Δ
pt 18	Operations for Copying	0	О	×	×	×	×	×	×	×	Δ	Δ
Scanner Interrupt Copy Copying	Copying	0	О	×	×	×	×	×	×	×	\rightarrow	\rightarrow
er	Operations for Scanning	•	•	0	0	×	×	•	•	•	Δ	Δ
Scant	Scanning	×	×	×	×	×	×	×	×	Δ	Δ	Δ
	Operations for Document Server			0	0	lacktriangle		×	×	×	Δ	Δ
Document	Scanning a Document to Store in Document Server	• *4		О	О	•	×	×	×	×	Δ	Δ
Do	Printing from Document Server		Δ	0	0	Δ	Δ	△ *3	Δ *3	△ *3	Δ	Δ
Web Document DeskTopBinder Docum Server Professional/Lite Server	Printing from Document Server	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ
Web Document Server	Printing	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ	Δ

^{*1} Simultaneous operations are only available after the preceding job documents are all scanned and [New Job] appears.

^{*2} You can scan a document after the preceding job documents are all scanned.

^{*3} Simultaneous operations are possible once you press [New Job].

^{*4} Depending on the scanner type installed, you may not be able to make copies while the scanner is scanning data to store into the Document Server.

^{*5} Depending on the scanner type installed, you may not be able to scan and store data into the Document Server when copying is in progress.

𝚱 Note

- \square When using paper of A0(E) or above size, operations shown in the table above may not be enabled.
- $\hfill\square$ While printing is in progress, scanning a document using another function may take more time.

3. Document Server

Relationship between Document Server and Other Functions

The following table describes the relationship between the Document Server and other machine functions.

Function name	Where to store documents	Displaying a list	Printing stored documents	Sending documents
Сору	Copy/Docu- ment Server	Available	Enabled	Not Available
Scanner *1	Scanner	Not available *2	Disabled	Available *3


^{*1} Depending on the scanner type installed, functions of Document Server may not be available.

^{*2} You can display stored documents using the scanner function. See "Displaying the List of Stored Files", *Scanner Reference*.

^{*3} You can send stored documents using the scanner function. See "Sending Stored Files by E-mail or Scan to Folder, or Delivering", Scanner Reference.

Document Server Display

Document Server Main Display

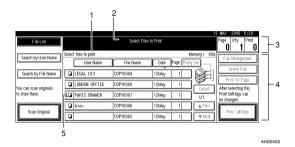

- 1. Operating status and messages are displayed.
- 2. The title of the currently selected screen is displayed.
- 4. The operation keys are displayed.
- 5. The stored operation mode is displayed.

3. The numbers of originals, copies, and printed pages are displayed.

The icons below show the operation mode when documents have been stored in the Document Server.

Function	Copier	Scanner
Icon	ū	



☐ Depending on your security settings not all stored documents may be displayed.

Using the Document Server

Storing Data

File Name

Stored documents will automatically be named as "COPY0001", "COPY0002". You can change assigned file names.

User Name

You can register a user name to distinguish the user or user group that stored the documents. To register, you can either enter a name or use the one assigned to the user code.

For more information about the user name, see p.72 "Registering Names".

Password

You can set a password for stored documents, and use it to prevent others printing them. When a password is set for the documents, mark appears next to the documents.

To store documents in a mode other than Document Server, see the manuals for the respective modes.

∰Important


- Data stored in the machine might be lost if some kind of failure occurs. The supplier shall not be responsible for any damage that might result from the loss of data.
- ☐ Be careful not to let anyone know your password, especially when entering a password or recording it. Keep any record of your password in a secure place.

- ☐ Avoid using a single number or consecutive numbers for a password such as "0000" or "1234", since the numbers like this are easy to guess, so using them will not provide a worthwhile level of security.
- ☐ A document accessed with a correct password remains selected even after operations are complete, and it can be accessed by other users. To stop this, be sure to press the **[Clear Modes]** key to cancel the document selection.
- □ The user name used when adding a document to the Document Server is to identify the document creator and type. It is not to protect confidential documents from others.

Note

- \square Enter a four- to eight-digit password.
- ☐ By default, data stored in the Document Server is deleted after three days (72 hours). You can specify the time taken for the stored data to be deleted automatically. See p.68 "Auto Delete File".
- ☐ If you do not want stored data to be automatically deleted, select [No] in Auto Delete File before storing a document. If you select [Yes] later, data stored afterward will be automatically deleted.
- ☐ When the machine is printing a document stored using the copier function, wait until printing has finished before you store a document in the Document Server.
- ☐ Before scanning documents using the scanner function, make sure all other operations have finished.

1 Press the [Document Server] key.

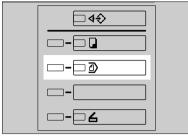

AHD024

2 Press [Scan Original].

				11	
File List		Select File	s to Print		Page O'ty Print
Search by User Name	Select files to print.			Memory: 39%	0 1 0
Seachity Cole Haire	User Name	File Name	Date Page Pur	lq (30	File Horogement
Search by File Name	LEGAL DIY	COPYOTOS	12May 1		Prof (st Page
You can scan originals	LONDON OFFICE	COPYOTOR	12May 1] (stail	After selecting file,
to store them.	PARIS BRANCH	C0P10107	12May 1	1/1	Print Settings can be changed.
	☐ Alex	COPYOTOE	12May 1	A PRV.	Prof Settings
Scan Original	O	C0PY0102	12May 1	Wiles	HIN Strings

Enter a file name, user name, or password if necessary.

- If you do not enter a file name, one will be automatically assigned.
- 4 Place your originals.

For information on the types of originals and how to place them, see "Placing Originals", Copy Reference.

Make settings as desired.



For details, see Copy Reference.

6 Press the [Start] key.

The document is stored in the Document Server.

- ☐ To stop scanning, press the **[Clear/Stop]** key. To resume a paused scanning job, press **[Continue]** in the confirmation dialog box. To delete stored images and cancel the job, press **[Stop]**.
- ☐ When a password has been set, ☐ mark appears on the left side of the file name.
- ☐ The Select Files to Print display appears when all the originals have been scanned. If it is not displayed, press [Scanning Finished].

To register or change a user name

Press [Scan Original].

The Scan Original display appears.

2 Press [User Name].



If user names have already been registered, the Change User Name display appears. To use an unregistered user name, press [Non-programmed Name].

If no names are registered in the Address Book, the User Name entry display appears.

₽ Reference

p.72 "Registering Names".

When using a name registered in the Address Book

• Select a name from the list, and then press [OK].



To change to an unregistered user name, proceed to the next step.

When using an unregistered user name

- Press [Non-programmed Name].
- Enter a new user name, and then press [OK].
 - **₽** Reference

p.127 "Entering Text".

When no names are registered in the Address Book

• Enter a new user name, and then press [OK].



p.127 "Entering Text".

To change a file name

1 Press [Scan Original].

The Scan Original display appears.

2 Press [File Name].



The Change File Name display appears.

- Press [Delete All] to delete the old file name.

 - ☐ You can also use [Backspace] to delete unwanted characters.
- Enter a new file name, and then press [OK].
 - Note
 - ☐ Up to 20 characters can be entered as a file name, but only 16 characters of each file name will be displayed in the document list.

p.127 "Entering Text".

To set or change a password

1 Press [Scan Original].

The Scan Original display appears.

2 Press [Password].



- Enter a four- to eight-digit password using the number keys, and then press the [#] key.
- Reenter the password (four- to eight- digits) for verification, and then press the [#] key.
- **5** Press [OK].

Changing a Stored Document's File Name, User Name, or Password

- 1 Press the [Document Server] key.
- 2 Select the document with the user name, file name, or password you want to change.



Note

- ☐ If a password has been set for the document, enter the password and press [OK].
- Press [File Management].
- Press [Change File Name], [Change User Name], or [Change Password].



5 Enter the new file name, user name, or password, and then press [OK].

p.40 "To register or change a user name".

p.41 "To change a file name".

p.41 "To set or change a password".

6 Press [OK].

Searching for Stored Documents

You can use either [Search by File Name] or [Search by User Name] to search for documents stored in the Document Server. You can also list stored documents in your order of preference.

𝒯 Note

☐ If you install DeskTopBinder Professional or DeskTopBinder Lite on your computer, you can search and rearrange the documents from your computer.

Manuals for DeskTopBinder Professional/Lite or Help

To Search by File Name

- 1 Press the [Document Server] key.
- Press [Search by File Name].



Enter the file name, and then press [OK].

Files beginning with the name entered appear in the Select Files to Print display.

p.127 "Entering Text".

Note

 To display all files stored in the Document Server, press [File List].

To Search by User Name

- 1 Press the [Document Server] key.
- 2 Press [Search by User Name].

File List		Select File	s to Print		Page OTY Print 0 1 0
Search by User Name	Select files to print. User Name	File Name	Date Pag	Memory: 993 e Frield (3)	
Search by File Name	LEGAL DIY	COPYOROS	12May		Post 1st Page
You can scan originals to store them	LONDON OFFICE	COPYOLOS	12May 12May	[6(0)]	After selecting file, Print Settings can
	Alex	COPYOROS	12May	1/1 1 a Park	te changed
Scan Original	G	C0PY0102	12May	1 wheat	Pint Settings

To specify a registered user name, select the user name from the displayed list, and then press [OK].

Note

- ☐ To specify an unregistered user name, go to the next step.
- To specify an unregistered user name, press [Non-programmed Name]. Enter the name, and then press [OK].



p.127 "Entering Text".

5 Press [OK].

Files beginning with the name entered appear in the Select Files to Print display.

☐ To display all files stored in the Document Server, press [File List].

To Check Details of Stored Documents

1 Select the document.

☐ If a password has been set for the document, enter the password, and then press [OK] or the [#] key.

2 Press [Detail].

Detailed information about the document is displayed.

- ☐ If you have selected several documents, use [▲] and [▼] to view the details of each.
- ☐ Press **[0K]**. The Select Files to Print display appears.

Printing Stored Documents

1 Select the document to be printed.



Ø Note


- ☐ If a password has been set for the document, enter the password and then press [OK] or the [#] key.
- □ You can search for a document using [Search by User Name] or [Search by File Name]. See p.42 "Searching for Stored Documents".
- ☐ You can sort document names in the list by user name, file name or date. To sort documents, press [User Name], [File Name] or [Date].

- ☐ If you cannot determine the contents of a document by its file name, you can print only the first page of the document for checking purposes. See p.46 "Printing the First Page".
- ☐ To cancel a selection, press the highlighted document again.
- 2 To print multiple documents, repeat step 1 in the order that you want to print.

𝒯 Note

- ☐ You can select up to 30 documents.
- If sizes or resolutions of selected documents are not the same, the documents may not be printed.
- If you wish to change the order for printing, cancel the selection, and reselect in the desired order.
- ☐ If you press the **[Clear Modes]** key, selection of all documents will be canceled.
- If you press [Printg Odr], the documents will be displayed in the order of printing.
- If you need to change the print settings, press [Print Settings].

The Print Settings display appears, and user names, file names and printing order of the documents are shown.

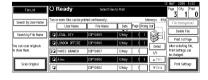

- ☐ The print settings made for printing in copier mode remain effective after printing and are applied to the next job.
- ☐ When multiple documents are selected, print settings made for the first document will be effective for only that document, and not the subsequent ones.
- ☐ Print setting items are listed below. For details about the print results, see *Copy Reference*.
 - Auto Image Density
 - Auto Reduce/Enlarge
 - Preset Reduce/Enlarge
 - Zoom
 - Fine Magnification
 - Stamp
 - Adjust Print Position
 - Copy Output Locations
- ☐ When multiple documents are printed at the same time, you can combine them into a single set by adjusting the print order.
- ☐ When multiple documents are printed at the same time, print settings made for the first document will apply to all the subsequent ones.
- ☐ If you select multiple files, you can confirm file names or print order you selected in step ① by scrolling through the list with [▼] and [▲].
- ☐ Press [Select File] to return to the Select Files to Print display.
- 4 Enter the required number of copies using the number keys.



 \square Up to 99 can be entered.

5 Press the [Start] key.

The machine starts printing.

To stop printing

- 1 Press the [Clear/Stop] key.
- 2 Press [Stop].

To change the number of copies during printing

Limitation

- ☐ The number of copies can only be changed when the Sort function is selected in print settings.
- Press the [Clear/Stop] key.
- 2 Press [Change Quantity].
- 3 Use the number keys to enter a new number of copies.
- 4 Press the [#] key.
- 6 Press [Continue].

Printing restarts.

Sample Copy

If you are printing multiple sets, you can check if the print settings or sorting order is correct by first printing out a sample set.

Preparation

Select [Press Start Key] in the Feed Start Method under System Settings. You cannot make sample copy if [Auto] is selected. See p.56 "Feed Start Method".

Limitation

☐ This function can be used only when the Sort function is selected.


Select the document to be printed.



Note

- ☐ If a password has been set for the document, enter the password and then press [OK] or the [#] key.
- ☐ You can search for a document using [Search by User Name] or [Search by File Name]. See p.42 "Searching for Stored Documents".
- ☐ You can sort document names in the list by user name, file name, or date. To do so, press [User Name], [File Name] or [Date].
- ☐ To cancel a selection, press the highlighted document again.

Press the [Sample Copy] key.

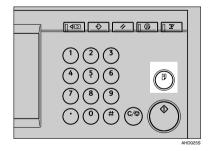

The first set is printed.

To print the remaining sets, press [Print].

Note

☐ To change the settings, press [Suspend] to return to the Print Settings menu.

Printing the First Page

You can print the first page of a document selected in the Select Files to Print display to check its contents.

If more than one document is selected, the first page of each is printed.

1 Select the document.

Note

☐ If a password has been set for the document, enter the password and then press [OK] or the [#] key.

- ☐ You can search for a document using [Search by User Name] or [Search by File Name]. See p.42 "Searching for Stored Documents".
- ☐ You can sort document names in the list by user name, file name, or date. To do so, press [User Name], [File Name], or [Date].
- ☐ To cancel a selection, press the highlighted document again.

2 Press [Print 1st Page].



Press the (Start) key.

Deleting Stored Documents

#Important

☐ You can store up to 3,000 documents in the Document Server. No more documents can be stored when the limit is reached, and you should delete unnecessary documents.

Note

- ☐ You can delete all stored documents at once with User Tools. See p.68 "Delete All Files".
- ☐ You can also delete documents via a Web browser from a computer in the network. For details on how to start the Web browser, see *Network Guide*.
- 1 Press the [Document Server] key.
- **2** Select the document.

☐ If a password has been set for the document, enter the password and then press [OK] or the [#] key.

Note

- ☐ You can delete multiple documents at once.
- ☐ You can search for a document using [Search by User Name] or [Search by File Name]. See p.42 "Searching for Stored Documents".
- ☐ You can sort document names in the list by user name, file name, or date. To do so, press [User Name], [File Name] or [Date].
- ☐ If you cannot determine the document by its name, you can print the first page to check its contents. See p.46 "Printing the First Page".
- ☐ To cancel a selection, press the highlighted document again.

3 Press [Delete File].



4 Press [Delete] to delete the document.

Viewing Stored Documents Using a Web Browser

- ☐ The optional scanner unit (Type 480) is required to use this function.

The Web browser's Help

- **1** Start a Web browser.
- Enter "http:// (IP address of this machine) /" in the [Address] box.

The top page appears on the Web browser.

Click [Document Server].

The "Document Server File List" appears.

- ☐ To switch the display format, click [Details], [Thumbnails] or [Icons] from the [Display method] list.
- 4 Click the properties button of the document you want to check.

Information about that document appears.

Check the contents of the document.

- ☐ To enlarge the document preview, click [Enlarge Image].

Downloading Stored Documents

- Note
- ☐ The optional scanner unit (Type 480) is required to use this function.
- 1 Start a Web browser.
- 2 Enter "http:// (IP address of this machine) /" in the [Address] box.

The top page appears on the Web browser.

3 Click [Document Server].

The "Document Server File List" appears.

- Note
- ☐ To switch the display format, click [Details], [Thumbnails] or [Icons] from the [Display method] list.
- 4 Click the properties button of the document you want to download.
- 5 Select [PDF], [JPEG], or [Multi-page TIFF] in the [File format] list.
 - Note
 - ☐ [JPEG] can only be selected for documents stored in scanner mode.
 - [Multi-page TIFF] cannot be selected for documents stored in copier mode.
- 6 Click [Download].
- 7 Click [0K].

3

Settings for the Document Server

System Settings (See p.49 "User Tools (System Settings)".)

	Items	Default settings
General Features	Warm Up Notice	On
	Copy Count Display	Up
	Paper Output Exit: Document Server	Front
Tray Paper Settings	Paper Tray Priority: Copier	Tray 1
Timer Settings	Copier / Document Server Auto Reset Timer	On, 60 seconds
Administrator Tools	Auto Delete File	Yes, After 3 day(s)
	Delete All Files	

4. User Tools (System Settings)

User Tools Menu (System Settings)

Ø Note

☐ Depending on the options installed, not all items listed below may be displayed.

For details about Interface Settings and File Transfer, see "Setting Up the Machine on a Network", *Network Guide*.

To register addresses and users, specify them under Address Book Management. See p.69 "Address Book".

♦ General Features (see p.54 "General Features")

User Tools item menu	Default
Panel Tone	On
Warm Up Notice	On
Copy Count Display	Up
Function Priority	Copier
Print Priority	Display Mode
Function Reset Timer	3 seconds
Interleave Print	10 sheet(s)
Original Feed Delay 1	1 second(s)
Original Feed Delay 2	1 second(s)
Feed Start Method	Auto
Original Output Exit	Тор
Paper Thickness: Paper Tray	Plain Paper: 2
	Translucent Paper: 2
	Film: 3
	Recycled Paper: 2
Paper Thickness: Paper Bypass	Plain Paper: 2
	Translucent Paper: 2
	Film: 3
	Recycled Paper: 2
Paper Volume	Paper Roll 1: New (Full)
	Paper Roll 2: New (Full)
	Paper Roll 3: New (Full)
	Paper Roll 4: New (Full)

User Tools item menu	Default
Fine Ratio Adjustment: Copier	_
Fine Ratio Adjustment: Printer	_
Paper Output Exit: Copier	Front
Paper Output Exit: Document Server	Front
Job List Time Display	On, 15 seconds

❖ Tray Paper Settings (see p.60 "Tray Paper Settings")

User Tools item menu	Default	
Paper Tray Priority: Copier	Tray 1	
Tray Paper Size: Tray 1	Metric version A0 Width (841 mm) Inch version Engineering: : 34 inch Architecture: 36 inch	
Tray Paper Size: Tray 2	Metric version A0 Width (841 mm) Inch version Engineering: : 34 inch Architecture: 36 inch	
Tray Paper Size: Tray 3	Metric version Paper Roll Tray: A0 Width (841 mm) Cut Paper Tray: Auto Inch version (Engineering) Paper Roll Tray: 34 inch Cut Paper Tray: Auto Inch version (Architecture) Paper Roll Tray: 36 inch Cut Paper Tray: Auto	
Tray Paper Size: Tray 4	 Metric version Paper Roll Tray: A0 Width (841 mm) Cut Paper Tray: Auto Inch version (Engineering) Paper Roll Tray: 34 inch Cut Paper Tray: Auto Inch version (Architecture) Paper Roll Tray: 36 inch Cut Paper Tray: Auto 	
Paper Type: Bypass tray	No Display	
Paper Type: Tray 1	No Display / Auto Paper Select On	
Paper Type: Tray 2	No Display / Auto Paper Select On	
Paper Type: Tray 3	No Display / Auto Paper Select On	
Paper Type: Tray 4	No Display / Auto Paper Select On	

♦ Timer Settings (see p.61 "Timer Settings")

User Tools item menu	Default
Auto Off Timer	60 minute(s)
Energy Saver Timer	15 minute(s)
Panel Off Timer	1 minute
System Auto Reset Timer	On, 60 seconds
Copier/Document Server Auto Reset Timer	On, 60 seconds
Scanner Auto Reset Timer	On, 60 seconds
Set Date	-
Set Time	-
Auto Logout Timer	On, 60 seconds

♦ Interface Settings

See "Interface Settings", Network Guide.

❖ File Transfer

See "File Transfer", Network Guide.

◆ Administrator Tools (see p.63 "Administrator Tools")

For details about Address Book Management, Address Book: Program/Change/Delete Group, see p.69 "Address Book".

User Tools item menu	Default
User Authentication Management	Off
Administrator Authentication Management	Off
Program /Change Administrator	_
Key Counter Management	_
Extended Security	_
Display/Print Counter	_
Display/Clear/Print Counter per User	_
Address Book Management	_
Address Book: Program/Change/Delete Group	_
Address Book: Change Order	_
Print Address Book: Destination List	_
Address Book: Edit Title	_
Address Book: Select Title	Title 1
Auto Delete File	Yes, After 3 day(s)
Delete All Files	_
Program/Change/Delete LDAP Server	_
Use LDAP Server	Off
AOF (Always On)	On
Firmware Version	_

4


Accessing User Tools (System Settings)

User Tools allow you to change or set defaults.


- ☐ Operations for System Settings differ from normal operations. Always quit User Tools when you finish making settings. See p.53 "Exiting User Tools".
- □ Any changes you make with User Tools remain in effect even if the main power switch or operation switch is turned off, or the [Energy Saver] or [Clear Modes] key is pressed.

Changing Default Settings

- If the Administrator Authentication is specified, contact your administrator.
- 1 Press the [User Tools/Counter] key.

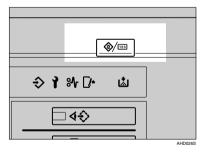

2 Press [System Settings].

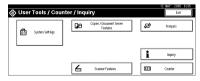

3 Select the desired menu, and then press the desired key.

p.49 "User Tools Menu (System Settings)"


A Change settings by following instructions on the display panel, and then press [OK].

Note

☐ To cancel changing settings and return to the initial display, press the [Use Tools / Counter] key.

Exiting User Tools

1 Press the [User Tools/Counter] key.

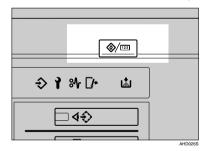

𝒯 Note

☐ You can also exit User Tools by pressing [Exit].



Settings You Can Change with User Tools

To access User Tools, see p.53 "Accessing User Tools (System Settings)".

General Features

Panel Tone

The beeper (key tone) sounds when a key is pressed.



□ Default: On

Warm Up Notice

You can have the beeper sound when the machine becomes ready to copy after leaving Energy Saver mode or when the power is turned on.

□ Default: On

☐ If the Panel Tone setting is [Off], the beeper does not sound, regardless of the Warm Up Notice setting.

Copy Count Display

You can specify the copy count display format.

If you press [Up], the display counts upward, if you press [Down], the display counts downward.

☐ Default: *Up*

Function Priority

You can specify the mode to be displayed immediately after the operation switch is turned on, or when System Reset mode is turned on.

Note

□ Default: Copier

Print Priority

Print Priority is given to the mode selected.

p.34 "Multi-Access"

☐ Default: Display Mode

☐ When **[Interleave]** is selected, the current print job will be interrupted after the number of sheets specified in Interleave Print has been output.

- You can specify an output tray for each function. See the following sections:
 - p.60 "Paper Tray Priority: Copier"

Function Reset Timer

You can set the length of time the machine waits before changing modes when using the multi-access function (see p.34 "Multi-Access"). This is useful if you are making many copies and have to change settings for each copy. If you set a longer reset period, you can prevent interruption from other functions.

Note

- ☐ Default: *Set Time* (3 seconds)
- ☐ The Function Reset Timer setting is ignored if [Interleave Print] is set for Print Priority (see p.54 "Print Priority").
- □ When you select **[Set Time]**, enter the time (3–30 seconds, in 1 second increments) using the number keys.

Interleave Print

You can set the timing for changing modes when [Print Priority] has been set to [Interleave].

Note

- ☐ Default: 10 sheet(s)
- \square You can set the number from 1 to 20 sheets using the number keys.
- \square Values set may change depending on the timing of printing.

Original Feed Delay 1

You can specify the duration of delay before an original is fed into the machine after being set. If originals frequently feed in slanted, or you are using special originals, set the delay accordingly.

- ☐ Default: 1 second
- \square The time can be set from 0 to 5 seconds.

Original Feed Delay 2

You can specify the duration of the pause immediately after originals are first fed into the machine. If originals frequently feed in slanted, or you are using special originals, set the delay accordingly.

Note

- □ Default: 1 second
- \square The time can be set from 1 to 5 seconds.

Feed Start Method

You can specify whether feeding starts automatically or after pressing the **[Start]** key.

Ø Note

☐ Default: Auto

Original Output

You can specify the original output tray to use when the power is turned on or the **[Clear Modes]** key is pressed.

□ Default: *Top*

Paper Thickness: Paper Tray

You can specify the thickness of paper loaded in the paper trays. If the image on copies is scratched, or the paper wrinkles when using translucent paper, you can change the setting to get better copies.

• Default: 2 (Plain Paper, Translucent paper, and Recycled Paper), 3 (Film) The paper thickness can be set from 1 (Thicker) to 5 (Thinner).

Note

☐ Refer to the chart below when selecting the mode for the paper thickness.

Thickness	1	2	3	4	5
Paper type					
Plain paper	110 g/m ² (29.3 lb)	90 g/m ² (23.9 lb) (Standard mode)	70 g/m ² (18.6 lb)	60 g/m ² (15.9 lb)	50 g/m ² or less (13.3 lb)
Translucent paper	70 – 90 g/m ² (18.6 – 23.9 lb)	70 – 80 g/m ² (18.6 – 21.3 lb)(Stand- ard mode)	70 - 80 g/m ² (18.6 - 21.3 lb)	50 – 70 g/m ² (13.3 – 18.6 lb)	Hemmed paper *1
	* If the paper wrinkles when using mode 2, try using mode 1.				
Film	0.07 mm – 0.095 mm (2.8 Mil – 3.7 Mil)	0.07 mm – 0.095 mm (2.8 Mil – 3.7 Mil)	0.07 mm – 0.095 mm (2.8 Mil – 3.7 Mil) (Stand- ard mode)	0.07 mm – 0.095 mm (2.8 Mil – 3.7 Mil)	_
Recycled pa- per	110 g/m ² (29.3 lb)	90 g/m ² (23.9 lb) (Standard mode)	70 g/m ² (18.6 lb)	60 g/m ² (15.9 lb)	50 g/m ² or less (13.3 lb)

^{*1} Out of guarantee

- □ Depending on paper type, operating conditions (low temperature and humidity), and paper feeding settings (multiple copies on paper of 542 mm, 22" width or less), toner fusing conditions vary. To improve toner fusing, change the thickness level to 3→2→1.
- □ When using thin, soft, or limp paper, toner fusing may appear wrinkled or the image may be blurred. If this happens, change the thickness level to 3→4→5.
- □ When level 1 or 2 are selected for translucent paper , and you change the paper type from plain or film to translucent, it may take longer for the machine to get ready for copying (up to two minutes).
- ☐ When level 1 or 2 are selected for translucent paper, and you make copies on paper of size A1(D) or above continuously, the interval between each copying may take longer. Even if you make copy on one sheet only, it may takes 1 minute until the next copy job starts.

Paper Thickness: Paper Bypass

You can specify the thickness of paper placed in the paper bypass. If the image on copies is scratched, or the paper wrinkles when using translucent paper, you can change the setting to get better copies.

Note


- ☐ Default: 2 (Plain Paper, Translucent paper, and Recycled Paper), 3 (Film)
- ☐ The paper thickness can be set from 1 (Thicker) to 5 (Thinner). See p.56 "Paper Thickness: Paper Tray". The results for hemmed paper cannot be guaranteed.

◆ Paper Volume

You can specify how the paper volume should be displayed when a paper roll is loaded in the paper roll tray. You can specify this setting for each paper roll tray. When a new roll is loaded, the display is "New (Full)".

☐ Default: New (Full)


Fine Ratio Adjustment: Copier

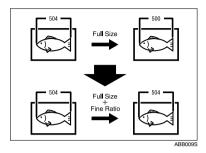

Depending on paper type, environment, and humidity, copy paper can expand or shrink slightly. This means that the size of the copy and the original do not match. If this happens, specify the vertical and horizontal correction ratio. You can specify this setting for each paper type (plain, translucent, film and recycled paper)

𝚱 Note

- □ Default: 0.0%
- \square From -1.0% to 1.0% (in 0.1% increments)
- ☐ To set the Fine Ratio setting, measure the length of the original and the copy image to calculate the ratio.

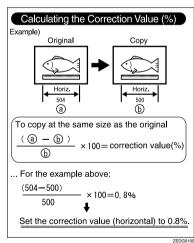

58

Fine Ratio Adjustment: Printer

Specifies the fine ratio when the optional printer is installed. Depending on paper type, environment, and humidity, copy paper can expand or shrink slightly. This means that the size of the copy and the original do not match. When the horizontal ratios are almost the same and there are differences between the vertical ratios, you can specify the vertical correction ratio. You can make this setting for each paper type (plain, translucent, film and recycled paper).

☐ Default: 0.0%

 \square From -1.0% to 1.0% (in 0.1% increments)

☐ For details about how to set the fine ratio, see p.58 "Fine Ratio Adjustment: Copier".

Paper Output Exit: Copier

You can specify a tray to which copies are delivered.

- Front
- Rear
- Note
- □ Default: Front

Paper Output Exit: Document Server

You can specify a tray to which documents are delivered.

- Front
- Rear
- Note
- ☐ Default: Front

Job List Display Time

You can set the length of time that the job list display is shown before the display reverts back to the default screen.

Note

☐ Default: On

□ When you select **[0n]**, enter the time from 10 to 999 seconds (in 1 second increments) using the number keys.

☐ The default time is 15 seconds.

Tray Paper Settings

◆ Paper Tray Priority: Copier

You can specify the tray to supply paper for output.

Note

☐ Default: *Tray 1*

Tray Paper Size: Tray 1, Tray 2

You can specify the size of paper in Tray 1 and Tray 2

- Metric version:
 - A Series: A0 Width (841 mm), A1 Width (594 mm), A2 Width (420 mm), A3 Width (297 mm), A4 Width (210 mm)
 - JIS B Series: B1 JIS Width (728 mm), B2 JIS Width (515 mm), B3 JIS Width (364 mm), B4 JIS Width (267 mm)
 - Others: 880 mm, 800 mm, 680 mm, 660 mm, 490 mm, 440 mm Inch version:
 - Engineering: 34 inch, 22 inch, 17 inch, 11 inch, $8^{1}/_{2}$ inch
 - Architecture: 36 inch, 24 inch, 18 inch, 12 inch, 9 inch
 - Others: 30 inch

Note

- ☐ Default: metric version: A0 Width (841 mm)
- ☐ Default: inch version: 34 inch (Engineering), 36 inch(Architecture)

Tray Paper Size: Tray 3, Tray 4 (when Paper Roll Trays are installed)

You can specify the size of paper in Tray 3 and Tray 4 Metric version:

- A Series: A0 Width (841 mm), A1 Width (594 mm), A2 Width (420 mm), A3 Width (297 mm), A4 Width (210 mm)
- JIS B Series: B1 JIS Width (728 mm), B2 JIS Width (515 mm), B3 JIS Width (364 mm), B4 JIS Width (267 mm)
- Others: 880 mm, 800 mm, 680 mm, 660 mm, 490 mm, 440 mm
 Inch version:
- Engineering: 34 inch, 22 inch, 17 inch, 11 inch, $8^{1}/_{2}$ inch
- Architecture: 36 inch, 24 inch, 18 inch, 12 inch, 9 inch
- Others: 30 inch



- ☐ Default: metric version: A0 Width (841 mm)
- ☐ Default: inch version: 34 inch (Engineering), 36 inch(Architecture)

◆ Tray Paper Size: Tray 3, Tray 4 (when Cut Paper Trays are installed)

You can specify the size of paper in Tray 3 and Tray 4.

- The paper sizes you can select are as follows:
 - Auto, A2 \square , A3 \square , A3 \square , A4 \square , A4 \square , B3 JIS \square , B4 JIS \square , B4 JIS \square , 18"×24" \square , 17"×22" \square , 12"×18" \square , 12"×18" \square , 12"×14\dagged_2" \square , 11"×17" \square , 11"×15" \square , 11"×14" \square , 11"×14" \square , 10"×14" \square , 9"×12" \square , 9"×12" \square , 8\dagged_2"×14" \square , 8\dagged_2"×14" \square , 8\dagged_2"×13" \square , 8\dagged_2"×12" \square , 8\dagged_2"×11" \square , 8\dagged_2"×11" \square

Note

☐ Default: Auto

Paper Type: Bypass tray

You can specify the paper type in the paper bypass.

- The paper types you can set for the paper bypass are as follows:
 - No Display, Recycled Paper, Translucent Paper, Film

☐ Default: No Display

◆ Paper Type: Tray 1–4

You can specify the paper type in Tray 1 to Tray 4.

- The paper types you can set for the trays are as follows:
 - No Display, Recycled Paper, Translucent Paper, Film

- ☐ Default:
 - Paper Type: No Display
 - Apply Auto Paper Select: Yes
- ☐ When Cut Paper Trays are installed, you cannot select [Film] in Tray 3 and Tray 4.
- ☐ A **1** mark appears next to the paper tray if **[No]** is selected in Auto Paper Select.

Timer Settings

Auto Off Timer

After a specified period, following job completion, the machine automatically turns off, in order to conserve energy. This function is called "Auto Off". The machine status after Auto Off is referred to as "Off mode". You can specify the time to elapse before Auto Off is activated.

Note

- ☐ Default: 60 minutes
- $\hfill\Box$ Enter a time interval between 10 seconds and 240 minutes using the number keys.
- ☐ Auto Off may not work when error messages appear.

Energy Saver

When no other key operations are performed, the machine switches to low power mode after a specified period.

Note

□ Default: 15 minutes

☐ Enter a time interval between 1 and 240 minutes in one minute increments using the number keys.

Panel Off Timer

Set the amount of time the machine waits before switching the panel off after copying has finished or the last operation is performed.

□ Default: On, 1 minute

☐ When selecting **[On]**, enter a time interval between 10 seconds to 240 minutes using the number keys.

System Auto Reset

The System Reset setting automatically switches the display to its initial condition when no operations are in progress, or when an interrupted job is cleared. This setting determines the system reset interval. See p.54 "Function Priority".

Ø Note

□ Default: On, 60 seconds

☐ The time can be set from 10 to 999 seconds, in one second increments, using the number keys.

Copier / Document Server Auto Reset Timer

Specifies the time to elapse before copier and Document Server modes reset.

Note

 If [Off] is selected, the machine does not automatically switch to the user code entry screen.

☐ Default: *On*, 60 seconds

☐ The time can be set from 10 to 999 seconds, in one second increments, using the number keys.

Scanner Auto Reset Timer

Specifies the time to elapse before the scanner function resets.

Note

If [Off] is selected, the machine does not automatically switch to the user code entry screen.

□ Default: On, 60 seconds

☐ The time can be set from 10 to 999 seconds, in one second increments, using the number keys.

Set Date

Set the date for the machine's internal clock using the number keys.

- \square To change between year, month, and day, press [\leftarrow] and [\rightarrow].
- ☐ Enter the date using the number keys.

Set Time

Set the time for the machine's internal clock using the number keys.

Note

- \square To change between hours, minutes and seconds, press[\leftarrow] and [\rightarrow].
- \square Enter the time using the number keys.

Auto Logout Timer

You can specify whether or not to automatically log out a user when the user does not operate the machine for a specified period of time after logging in.

∅ Note

- □ Default: On, 60 seconds
- □ When **[0n]** is selected, the time can be set from 10 to 999 seconds, in one second increments, using the number keys.

Administrator Tools

Administrator Tools are used by the administrator. To change these settings, contact the administrator.

We recommend specifying Administrator Authentication before making Administrator Tools settings.

See "Administrator Authentication", Security Reference.

User Authentication Management

• User Code Authentication

Using User Code Authentication, you can limit the available functions and supervise their use.

When using User Code Authentication, register the user code. See p.74 "Registering User Codes".

- Copy
- Document Server
- Scanner
- Basic Authentication
- Windows Authentication
- LDAP Authentication
- Off

Note

□ Default: Off

For details about Basic Authentication, Windows Authentication, and LDAP Authentication, see *Security Reference*.

Administrator Authentication Management

See Security Reference.

Program / Change Administrator

See Security Reference.

Key Counter Management

You can specify that functions that you want to manage with the key counter.

Extended Security

You can specify whether or not to use the extended security functions. For details about the extended security functions, see *Security Reference*.

Display / Print Counter

Allows you to view and print the various counters.

- Display/Print Counter
 Displays counters for each functions (Total, Copier, Printer).
- Print Counter List
 Prints out a list of counters for each functions.
- To print the counter list
 - ① Press the [User Tools/Counter] key.
 - ② Press [System Settings].
 - ③ Press [Administrator Tools].
 - Press [Display / Print Counter].
 - ⑤ Press [Print Counter List].



- 6 Press the [Start] key.
- ⑦ Press [Exit].

Display / Clear / Print Counter per User

Allows you to view and print the various counters accessed with users and to set the values to 0.

- ☐ Press [▲Prev.] and [▼Next] to show all counters.
- ☐ The number of prints may differ from the counter value shown in Display/Print Counter.
- Print Counter for All Users
 Prints the counter values for all the users.
- Clear Counter for All Users
 Sets the counter value for all the users.
- Print Counter per User
 Prints the counter values for each user.
- Clear Counter per User
 Sets the counter value for each user.

☐ To print a list for each user, see p.76 "Printing the Counter for Each User Code".

Address Book Management

You can add, change or delete information registered in the Address Book. For details, see p.69 "Registering Addresses and Users".

• [Program / Change]

You can register and change names as well as user codes.

Names

You can register a name, key display, registration number, and title selection.

Auth, Info

You can register a user code, and specify the functions available to each user code. You can also register user names and passwords to be used when sending e-mail, sending files to folders, or accessing an LDAP server.

Protection

You can register a protection code.

• E-mail

You can register an e-mail address.

Folder

you can register the protocol, path, port number, and server name.

Add to Group

You can put names registered in the Address Book into a group.

• [Delete]

You can delete a name from the Address Book.

Note

- \square You can register up to 2,000 names.
- ☐ You can register up to 500 user codes.
- ☐ You can also register user codes from SmartDeviceMonitor for Admin.

Address Book: Program / Change / Delete Group

Names registered in the Address Book can be added into a group. You can then easily manage the names registered in each group. For details, see p.88 "Registering Names to a Group".

• [Program / Change]

You can register new groups, or changes a group name, key display, title selection or registration number.


• Delete You can delete a group.

- ☐ You can register up to 100 groups.
- ☐ You can also group users using a Web browser. For more information, see the Web Browser help.

Address Book: Change Order

You can change the order of the names in the Address Book.


- ☐ You can rearrange the order of items that are on the same page, but you cannot move the items to another page. For example, you cannot move an item from "PLANNING" ([OPQ]) to "DAILY" ([CD]).
- ① Press the [User Tools/Counter] key.
- ② Press [System Settings].
- ③ Press [Administrator Tools], and then press [▼Next].
- Press [Address Book: Change Order].
- ⑤ Press the name key to be moved.

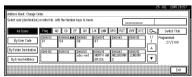


Note

☐ You can also select a name using the number keys.

Press the name key in the place that you want to move to.

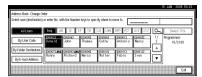

The name selected in step ⑤ moves to the place selected in step ⑥, and the keys for other names will be shifted accordingly.

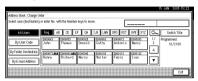

∅ Note

☐ You can also select a name using the number keys.

Print Address Book: Destination List

You can print the list of names registered in the Address Book.

- Print in Title 1 Order
 Prints a list of the names according to the order in Title 1.
- Print in Title 2 Order
 Prints a list of the names according to the order in Title 2.
- Print in Title 3 Order
 Prints a list of the names according to the order in Title 3.
- Print Group Dial List Prints a list of the groups registered.
- ① Select the print format.
- ② Press the **[Start]** key. The list is printed.

Address Book: Edit Title

You can edit the title to locate the desired user easily.

- ① Press the [User Tools/Counter] key.
- ② Press [System Settings].
- ③ Press [Administrator Tools], and then press [▼Next].
- ④ Press [Address Book: Edit Title].
- ⑤ Press the title key to be changed.



- The Enter the new name, and then press [OK].
- ⑦ Press [OK].

Address Book: Select Title

You can specify the title to select a name.

Note

☐ Default: Title 1

Auto Delete File

You can specify whether documents stored in the Document Server will or will not be deleted after a specified period of time.

- ☐ Default: Yes After 3 day(s)
- ☐ If you select **[Yes]**, documents stored subsequently will be deleted.
- ☐ If you select **[No]**, documents will not be deleted automatically.
- ☐ If you select **[Yes]**, enter a number of days in the range of 1 180.
- ☐ The default setting is three days, which means documents will be deleted three days (72 hours) after they have been stored.

Delete All Files

All documents stored in Document Server will be deleted.

Note

- ☐ Even if a password has been set, all documents will be deleted.
- ☐ A confirmation dialog box will appear. To delete all documents, select [Yes].

Program / Change / Delete LDAP Server

See "Program / Change / Delete LDAP Server", Network Guide.

Use LDAP Server

You can specify whether or not to use the LDAP server.

Note

- ☐ Default: Off
- When Use LDAP Server is set to Off, [Search LDAP] will not appear on the searching display.

AOF (Always On)

You can specify whether or not to use Auto Off Timer.

Ø Note

- ☐ Default: On
- ☐ For details about this function, contact your service representative.

Firmware Version

You can check the version of the software installed in this machine.

Registering Addresses and Users

Address Book

Registering information such as the names of users and their e-mail addresses in the Address Book allows you to manage them easily.

#Important

☐ Address Book data is stored on the hard disk. It can be lost if there is some kind of hard disk failure. The manufacturer shall not be responsible for any damages resulting data loss.

Ø Note

- You can also use a Web browser to register names in the Address Book. With the SmartDeviceMonitor for Admin, you can register multiple names at the same time.
- ☐ Using [Address Management Tool] in SmartDeviceMonitor for Admin, you can backup Address Book data. We recommend backing up data when using the Address Book.

For details about using a Web browser, see the Web browser Help.

For details about SmartDevice-Monitor for Admin and how to install it, see *Network Guide*.

For operating instructions, see SmartDeviceMonitor for Admin Help. You can register and manage the following items in the Address Book:

Name

You can register the name of the user and the key display. This is the basic information required for managing user of the machine.



Authentication Information

You can register user codes in order to restrict particular functions to certain users, and to check their use of each function. You can also register login user names and login passwords to be used when sending e-mail, sending to folders, or accessing an LDAP server.



₽ Reference

For details about each authentication, see the following:

SMTP Authentication p.95 "SMTP Authentication"

Folder Authentication p.81 "Registering Folders"

LDAP Authentication p.96 "LDAP Authentication"

Protection

You can set protection codes to stop sender's name from being used or folders from being accessed without authorization.



E-mail

You can register e-mail destinations in the Address Book.



Folder

You can register the protocol, path name and server name.

SMB



FTP



Add to Group

You can put registered e-mail and folder destinations into a group for easier management.



Managing names in the Address Book

By registering a name and key display beforehand, you can specify email and folder destinations simply by selecting the name key.

See p.72 "Registering Names".

Sending e-mail by Quick Dial

By registering e-mail addresses in the Address Book, you can specify e-mail destinations simply by selecting them from the scanner initial display when sending a document using the scanner function.

A registered e-mail address can be used as the sender's address, and the sender's address are automatically entered in the "From" field of an e-mail header.

See p.78 "E-mail Destination".

Sending scanned files to a shared folder directly

After registering the path name, user name and password, you can connect to a shared folder simply by selecting the destination shown on the initial scanner display whenever sending files using the scanner function to a shared folder.

To share the folder using Windows, select the SMB protocol.

To register the folder to the FTP server, select the FTP protocol.

See p.81 "Registering Folders".

Preventing unauthorized user access to shared folders from the machine

After registering a protection code, you can specify the object of protection to prevent an e-mail destination from being used without permission.

You can prevent unauthorized access to registered folders. See p.93 "Registering a Protection Code".

Managing users and machine usage

Register user codes to limit users to the following functions and check their use of each function:

- Copier
- Document Server
- Scanner


See p.74 "Registering User Codes".

Registering Names


If you register data such as a name or title in advance, you can enter additional associated information such as an e-mail address or a folder later by selecting the registered names.

Registering a Name

1 Press the [User Tools/Counter] key.

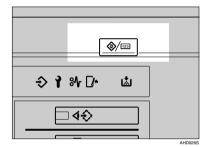

2 Press [System Settings].

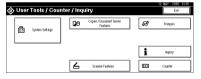

- Press [Administrator Tools], and then press [▼Next].
- 4 Press [Address Book Management].
- Press [New Program].
- Press [Change] on the right of the Name.

The name entry display appears.

Enter the name, and then press [OK].

Note

- ☐ The name can be used for documents in the Document Server. For details about the Document Server, see p.39 "Using the Document Server".
- **₽** Reference

p.127 "Entering Text"

Press the key for the classification you want to use under Select Title.



- ☐ The keys you can select are as follows:
 - [Freq.]... Added to the page that is displayed first.
 - [AB], [CD], [EF], [GH], [IJK], [LMN], [OPQ], [RST], [UVW], [XYZ], [1] to [10]... Added to the list of items in the selected title.
- ☐ You can select **[Freq.]** and one more page for each title.
- To continue registering the name, press [Continue to Program], and then repeat the procedure from step 6.
- Press [OK].
- Press [Exit].
- Press the [User Tools/Counter] key.

5

Changing a Registered Name

- 1 Press the [User Tools/Counter] key.
- 2 Press [System Settings].
- Press [Administrator Tools], and then press [VNext].
- 4 Press [Address Book Management].
- Select the registered name you want to change.

Press the name key, or enter the registered number using the number keys.

Note

☐ If you press ☒, you can search by the registered name, user code, folder name or e-mail address.

To change the name or key display

- 1 Press [Change] on the right of the name or key display.
- 2 Enter the name or key display, and then press [OK].

p.127 "Entering Text"

To change the title

- Press the key for the classification you want to use from Select Title.
- 6 Press [OK].
- **7** Press [Exit].
- 8 Press the [User Tools/Counter] key.

Deleting a Registered Name

If you delete a name, data associated with that name, such as e-mail addresses and folder name, are also deleted.

- Press the [User Tools/Counter] key.
- 2 Press [System Settings].
- Press [Administrator Tools], and then press [▼Next].
- 4 Press [Address Book Management].
- Press [Delete].
- **6** Select the name you want to delete.

Press the key, or enter the registered number using the number keys.

- 7 Press [Yes].
- 8 Press [Exit].
- Press the [User Tools/Counter] key.

Registering User Codes

Register user codes to limit users to the following functions and check their use of each function:

- Copier
- Document Server
- Scanner (when Type 480 is installed)

Note


☐ The number of copies scanned using the scanner function is counted for each user code. This allows you to check each user's usage.

∰Important

☐ The functions associated with each user code are the same. If you change or delete user codes, management data and limits associated with that code become invalid.

Registering a New User Code

1 Press the [User Tools/Counter] key.

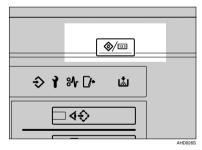

2 Press [System Settings].



Press [Administrator Tools], and then press [▼Next].

- 4 Press [Address Book Management].
- Press the name whose code is to be registered, or enter the registered number using the number key.

Note

- ☐ To register the name, see p.72 "Registering Names".
- 6 Press [Auth. Info].
- Tenter the user code using the number keys, and then press [#].



You can enter a one- to eight-digit user code.

- ☐ If you make a mistake, press [Clear] or the [Clear/Stop] key, and then enter the code again.
- 8 Press [▼Next] twice.
- Select the functions to be used with the user code from Available Functions.



Press [OK].

𝒯 Note

☐ To continue registering user codes, press [Continue to Program], and then repeat the procedure from step ⑤.

5

- 1 Press [Exit].
- Press the [User Tools/Counter] key.

Changing a User Code

- ☐ Even if you change a user code, the counter value will not be cleared.
- 1 Press the [User Tools/Counter] key.
- 2 Press [System Settings].
- Press [Administrator Tools], and then press [▼Next].
- 4 Press [Address Book Management].
- **5** Select the registered user code you want to change.

Press the name key, or enter the registered number using the number keys.

Note

- ☐ If you press ☒, you can search for a user by name/index, user code, or e-mail address.
- ☐ To change the name, key display and title, see p.73 "Changing a Registered Name".
- 6 Press [Auth. Info].
- Press [Change], and then enter the new user code using the number keys.



8 Press [#].

To change the available functions

- Press [▼Next] twice.
- 2 Press the key to select the functions to enable them.

𝚱 Note

- ☐ Press the key to highlight it, and then the function is enabled. To cancel a selection, press the highlighted key.
- 9 Press [OK].
- Press [Exit].
- Press the [User Tools/Counter] key.

Deleting a User Code

#Important

 This operation deletes user codes registered to multiple functions. User control via the deleted user code is disabled.

Note

- ☐ After clearing the user code, the counter is automatically cleared.
- ☐ To delete a name from the Address Book entirely, see p.73 "Deleting a Registered Name".
- 1 Press the [User Tools/Counter] key.
- 2 Press [System Settings].
- Press [Administrator Tools], and then press [▼Next].
- 4 Press [Address Book Management].
- **5** Select the name whose code is to be deleted.

Press the name key, or enter the registered number using the number keys.

- 6 Press [Auth. Info].
- Press [Change] to delete the user code, and then press [#].



- 8 Press [OK].
- 9 Press [Exit].
- Press the [User Tools/Counter] key.

Displaying the Counter for Each User Code

- 1 Press the [User Tools/Counter] key.
- 2 Press [System Settings].
- Press [Administrator Tools].
- Press [Display / Clear / Print Counter per User].
- Select [Print Counter], or [Scanner Counter].

Counters for individual function usage under each user code appear.

Printing the Counter for Each User Code

- 1 Press the [User Tools/Counter] key.
- 2 Press [System Settings].
- 3 Press [Administrator Tools].
- Press [Display / Clear / Print Counter per User].

Select a user code from the left side of the display.



- ☐ Press [Select All on the Page] to select all user codes on the page.
- Press [Print Counter List] under Per User.



- ☐ Enter the user code, and then press [#] if the user code is registered.
- Select the function usage you want to print from [Print Counter] and [Scanner Counter].
- 8 Press [Print].

To print the number of prints for all user codes

- Press the [User Tools/Counter] key.
- 2 Press [System Settings].
- 3 Press [Administrator Tools].
- 4 Press [Display / Clear / Print Counter per User].

Press [Print Counter List] under All Users.



- **𝚱** Note
- ☐ Enter the user code, and then press [#] if the user code is registered.
- 6 Select the function usage you want to print from [Print Counter] and [Scanner Counter].
- Press [Print].

Clearing the Number of Prints

- 1 Press the [User Tools/Counter] key.
- 2 Press [System Settings].
- 3 Press [Administrator Tools].
- Press [Display / Clear / Print Counter per User].
- **5** Select the user code to clear.

To clear the number of prints made under a user code

- Select the user code from the left side of the display.
 - Note
 - Press [Select All on the Page] to select all user codes on the page.
- 2 Press [Clear] under Per User.
- Select the function usage you want to clear from [Print Counter] and [Scanner Counter].
- 4 Press [OK].

To clear the number of prints for all user codes

1 Press [Clear] under All Users.



- Select the function usage you want to clear from [Print Counter] and [Scanner Counter].
- 3 Press [OK].
- 6 Press [Exit].
- Press the [User Tools/Counter] key.

E-mail Destination


Register e-mail destinations so you do not need to enter an e-mail address every time, and can send scan files from scanner function by e-mail.

- It is easy to select the e-mail destination if you register "Name" and "Key Display" as the e-mail destination.
- You can register e-mail destinations as a group.
- You can use the e-mail address as the sender's address when sending scan files in scanner mode. If you want to do this, set a protection code on the sender address to prevent unauthorized access. See p.93 "Registering a Protection Code for a Name in the Address Book".

- ☐ This registration is applicable when Scanner Unit Type 480 is installed.
- ☐ You can select an e-mail address from an LDAP server, and then register it in the Address Book. See "Sending Scan File by E-mail", Scanner Reference.

Registering an E-mail Destination

1 Press the [User Tools/Counter] key.

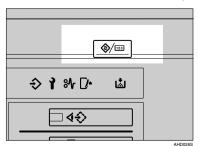

2 Press [System Settings].



- Press [Administrator Tools], and then press [VNext].
- 4 Press [Address Book Management].
- Select the name whose e-mail address you want to register.

Press the name key, or enter the registered number using the number keys.

- Note
- ☐ To register a name in the Address Book, see p.72 "Registering a Name".
- 6 Press [E-mail].
- Press [Change] under E-mail Address.



- 8 Enter the e-mail address, and then press [OK].
 - Note
 - ☐ You can enter an e-mail address up to 128 characters.
 - Reference p.127 "Entering Text"

Using the e-mail address as the sender


To enable this selection, you have to register a user code in advance. See p.74 "Registering a New User Code".

- Press [Protection].
- 2 Press [Sender] on the right side of Use Name as.
- 9 Press [OK].

 - ☐ When a group is registered, you can add the e-mail destinations to the group. See p.88 "Registering Names to a Group".
- 10 Press [Exit].
- Press the [User Tools/Counter] key.

Changing a Registered E-mail Destination

1 Press the [User Tools/Counter] key.

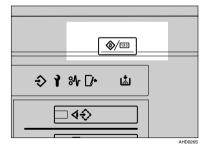

2 Press [System Settings].



- Press [Administrator Tools], and then press [VNext].
- 4 Press [Address Book Management].
- Select the name whose e-mail address you want to change.

Press the name key, or enter the registered number using the number keys.

- Note
- ☐ If you press ☒, you can search by the registered name, user code, folder name or e-mail address.
- ☐ To change the name, key display, and title, see p.73 "Changing a Registered Name".
- 6 Press [E-mail].
- **7** Press [Change] under E-mail Address.



Enter the e-mail address, and then press [OK].

p.127 "Entering Text"

- Press [OK].
- 10 Press [Exit].
- Press the [User Tools/Counter] key.

Deleting a Registered E-mail Destination

To delete a name entirely, see p.73 "Deleting a Registered Name".

- 1 Press the [User Tools/Counter] key.
- 2 Press [System Settings].
- Press [Administrator Tools], and then press [▼Next].
- 4 Press [Address Book Management].
- Select the name whose e-mail address you want to delete.

Press the name key, or enter the registered number using the number keys.

- 6 Press [E-mail].
- Press [Change] under E-mail Address
- Press [Delete All], and then press [OK].
- 9 Press [OK].
- Press [Exit].
- Press the [User Tools/Counter] key.

5

Registering Folders

By registering a shared folder, you can send scan files to it directly.

There are two types of protocol you can use:

- SMB
 For sending files to shared Windows folders
- FTP
 Use when sending files to an FTP
 server

- ☐ This registration is applicable when Scanner Unit Type 480 is installed.
- ☐ For details about protocols, server names, and folder levels, consult your network administrator.
- ☐ You can prevent unauthorized users from accessing folders from the machine. See p.93 "Registering a Protection Code".
- You can only select either SMB or FTP. If you change protocol after finishing your settings, all previous entries are cleared.
- ☐ You can register folders as a group.

For details about network settings, see "Setting Up the Machine on a Network", Network Guide.


For details about Scan to Folder, see "Sending Scan Files by Scan to Folder", *Scanner Reference*.

Using SMB to Connect

☐ To register a folder in an FTP server, see p.85 "Using FTP to Connect".

To register an SMB folder

1 Press the [User Tools/Counter] key.

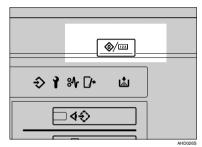

2 Press [System Settings].



- Press [Administrator Tools], and then press [▼Next].
- 4 Press [Address Book Management].
- **5** Select the name whose folder you want to register.

Press the name key, or enter the registered number using the number keys.

Ø Note

☐ To register a name in the Address Book, see p.72 "Registering a Name".

- 6 Press [Auth. Info], and then press [▼Next].
- Press [Specify Other Auth. Info] on the right side of Folder Authentication.

𝚱 Note

- □ When [Do not Specify] is selected, the SMB User Name and SMB Password that you have specified in Default User Name / Password (Send) of File Transfer settings applies. For details, see "File Transfer", Network Guide.
- If User Authentication is specified, contact your administrator.
- 8 Press [Change] under Login User Name.



Enter the login user name, and then press [OK].

Ø Note

☐ You can enter up to 128 characters for the login user name.

p.127 "Entering Text"

- Press [Change] under Login Password.
- Enter the password, and then press [OK].

Note

☐ You can enter up to 128 characters for the password.

- Enter the password again for confirmation, and then press [OK].
- Press [Folder].
- Confirm that [SMB] is selected.



☐ To specify a folder, you can either enter the path manually or locate the folder by browsing the network.

₽ Reference

p.82 "To locate the folder manually"

p.83 "Using Browse Network to locate the folder"

To locate the folder manually

- 1 Press [Change] under Path.
- 2 Enter the path where the folder is located.

Note

- ☐ Enter the path using this format: "\\ServerName\\Share-\Name\\Path\Name".
- ☐ You can also enter an IP address.
- ☐ You can enter a path using up to 128 characters.

3 Press [OK].



☐ If the format of the entered path is not correct, a message appears. Press [Exit], and then enter the path again.


Using Browse Network to locate the folder

Press [Browse Network].

The client computers sharing the same network as the machine appear.

Note

- The Browse Network display only lists client computers you are authorized to access.
- 2 Select a client computer.

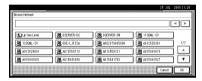

Shared folders under it appear.

Note

- ☐ You can press [Up One Level] to switch between levels.
- **3** Select the folder you want to register.

The Logon display appears.

- ☐ If you have logged in with an authenticated user name and password, the Logon display will not appear. Proceed to step.
- 4 Enter the user name.

Note

- ☐ This is a user name which is authorized to access the folder.
- **5** Enter the user's password, and then press [OK].

The Browse Network display reappears.

Note

- ☐ If the entered user name or password is not correct, a message appears. Press [Exit], and then enter the user name and password again.
- 6 Press [OK].
- Press [Connection Test] to check the path is set correctly.
- 16 Press [Exit].

- ☐ If the connection test fails, check the settings, and then try again.
- Press [OK].
- 18 Press [Exit].
- Press the [User Tools/Counter] key.

Changing a registered folder

- Press the [User Tools/Counter] key.
- 2 Press [System Settings].
- Press [Administrator Tools], and then press [▼Next].
- 4 Press [Address Book Management].
- Select the name whose folder you want to change.

Press the user name key, or enter the registered number using the number keys.

- ☐ If you press ☒, you can search by the registered name, user code, folder name or e-mail address.
- ☐ To change the name, key display, and title, see p.73 "Changing a Registered Name".
- 6 Press [Folder].

7 Select the items you want to change.

To change the protocol

• Press [FTP].



- **2** A confirmation message appears. Press [Yes].
 - Note
 - ☐ Changing the protocol will clear all settings made under the previous protocol.
- 3 Enter each item again.
 - **₽** Reference

p.81 "To register an SMB folder".

Changing items under SMB

- 1 Press [Change] under Path.
- Enter the new path where the folder is located, and then press [OK].

 - ☐ You can also use Browse Network to specify a new folder. For details, see p.83 "Using Browse Network to locate the folder".
- Press [Connection Test] to check the path is set correctly.
- 9 Press [Exit].

 - ☐ If the connection test fails, check the settings, and then try again.
- Press [OK].

- Press [Exit].
- 12 Press the [User Tools/Counter] key.

Deleting a registered folder

- Note
- ☐ To delete a name entirely, see p.73 "Deleting a Registered Name".
- 1 Press the [User Tools/Counter] key.
- 2 Press [System Settings].
- Press [Administrator Tools], and then press [Vext].
- 4 Press [Address Book Management].
- Select the name whose folder you want to delete.

Press the name key, or enter the registered number using the number keys.

- 6 Press [Folder].
- Press the protocol which is not currently selected.

A confirmation message appears.


- 8 Press [Yes].
- Press [OK].
- 10 Press [Exit].
- Press the [User Tools/Counter] key.

Using FTP to Connect


☐ To register a shared folder configured in Windows, see p.81 "Using SMB to Connect".

To register an FTP folder

1 Press the [User Tools/Counter] key.

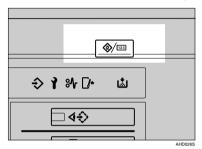

2 Press [System Settings].

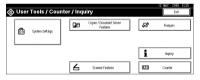

- Press [Administrator Tools], and then press [Vext].
- 4 Press [Address Book Management].
- Select the name whose folder you want to register.

Press the name key, or enter the registered number using the number keys.

Note

- ☐ To register a name in the Address Book, see p.72 "Registering a Name".
- 6 Press [Auth. Info], and then press [▼Next].

Press [Specify Other Auth. Info] on the right side of Folder Authentication.

- □ When [Do not Specify] is selected, the SMB User Name and SMB Password that you have specified in Default User Name / Password (Send) of File Transfer settings applies. For details, see "File Transfer", Network Guide.
- ☐ If User Authentication is specified, contact your administrator.
- Press [Change] under Login User Name.



Enter the login user name, and then press [OK].

Note

- ☐ You can enter up to 128 characters for the login user name.
- Reference p.127 "Entering Text"
- Press [Change] under Login Password.
- Enter the password, and then press [OK].

Note

- ☐ You can enter up to 128 characters for the password.
- Enter the password again for confirmation, and then press [OK].
- Press [Folder].

Press [FTP].



Press [Change] under Server Name.



- Enter the server name, and then press [OK].

 - ☐ You can enter a server name using up to 64 characters.
- 17 Press [Change] under Path.
- 18 Enter the path.

 - ☐ You can enter an absolute path, using this format: "/user/home/username"; or a relative path, using this format: "directory/sub-directory".
 - ☐ If you leave the path blank, the login directory is assumed to be the current working directory.
 - ☐ You can also enter an IP address.
 - ☐ You can enter a path using up to 128 characters.
- Press [OK].
 - Ø Note
 - ☐ To change the port number, press [Change] under Port No.. Enter the port number using the number keys, and then press [#].
 - \square You can enter 1 to 65535.

- Press [Connection Test] to check the path is set correctly.
- 21 Press [Exit].

 - ☐ If the connection test fails, check the settings, and then try again.
- Press [OK].
- 23 Press [Exit].
- Press the [User Tools/Counter] key.

Changing a registered folder

- Press the [User Tools/Counter] key.
- 2 Press [System Settings].
- Press [Administrator Tools], and then press [Vext].
- 4 Press [Address Book Management].
- Select the name whose folder you want to change.

Press the name key, or enter the registered number using the number keys.

- Note
- ☐ If you press ☒, you can search for a user by name/index, user code, folder name, or e-mail address.
- ☐ To change the name, key display, and title, see p.73 "Changing a Registered Name".
- 6 Press [Folder].

7 Select the items you want to change.

To change the protocol

1 Press [SMB].



- **2** A confirmation message appears. Press [Yes].
 - Note
 - Changing the protocol will clear all settings made under the previous protocol.
- 3 Enter each item again.

p.85 "To register an FTP folder".

Changing items under FTP

- Press [Change] under Port No.
- 2 Enter the new port number, and then press [#].
- **3** Press [Change] under Server Name.
- 4 Enter the new server name, and then press [OK].
- 6 Press [Change] under Path.
- **6** Enter the new path, and then press [OK].
- Press [Connection Test] to check the path is set correctly.
- 9 Press [Exit].
 - Note
 - ☐ If the connection test fails, check the settings, and then try again.
- Press [OK].

- Press [Exit].
- Press the [User Tools/Counter] key.

Deleting a registered folder

- Note
- ☐ To delete a name entirely, see p.73 "Deleting a Registered Name".
- Press the [User Tools/Counter] key.
- **2** Press [System Settings].
- Press [Administrator Tools], and then press [▼Next].
- 4 Press [Address Book Management].
- Select the name whose folder you want to delete.

Press the name key, or enter the registered number using the number keys.

- 6 Press [Folder].
- **7** Press the protocol which is not currently selected.

A confirmation message appears.

- 8 Press [Yes].
- Press [OK].
- 10 Press [Exit].
- Press the [User Tools/Counter] key.

Registering Names to a Group

You can register names to a group to enable easy management of e-mail addresses and folders for each group.


To add names to a group, the groups must be registered beforehand.



- ☐ You can register up to 500 names for each group.
- When using Scan to Folder function, you cannot send scan files to a group with over 50 folders registered.
- ☐ You can set a protection code to prevent unauthorized access to the folders registered in a group. For details, see p.94 "Registering a Protection Code for a Group".

Registering a New Group

1 Press the [User Tools/Counter] key.

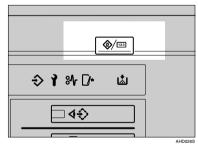

2 Press [System Settings].



Press [Administrator Tools], and then press [Next].

- Press [Address Book: Program / Change / Delete Group].
- Press [New Program].
- 6 Press [Change] under Group Name.



2 Enter the group name, and then press [OK].

The Key Display name is set automatically.

Reference
p.127 "Entering Text"

- 8 Press the title key under Select Title, if necessary.
 - Note
 - ☐ The keys you can select are as follows:
 - [Freq.]... Added to the page that is displayed first.
 - [AB], [CD], [EF], [GH], [IJK], [LMN], [OPQ], [RST], [UVW], [XYZ], [1] to [10]... Added to the list of items in the selected title.
 - ☐ You can select [Freq.] and one more page for each title.
- When you want to change the key display, press [Change] under Key Display. Enter the key display, and then press [OK].
- Press [OK].
- 11 Press [Exit].
- Press the [User Tools/Counter] key.

Registering Names to a Group

You can put names that have been registered in the Address Book into a group.

When registering new names, you can also register groups at the same time.

- 1 Press the [User Tools/Counter] key.
- 2 Press [System Settings].
- Press [Administrator Tools], and then press [Vext].
- 4 Press [Address Book Management].
- **5** Select the name to register in a group.

Press the name key, or enter the registered number using the number keys.

∅ Note


- ☐ If you press ☒, you can search by the registered name, user code, folder name or e-mail address.
- 6 Press [Add to Group].
- Select a group to which you want to add the name to.



Note

☐ If you press ⑤, you can search for a group by entering the group name.

The group keys that you have selected becomes highlighted, and the name is added to them.

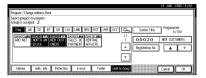

To remove the name, press the highlighted group again.

- 8 Press [OK].
- 9 Press [Exit].
- Press the [User Tools/Counter] key.


Adding a Group to Another Group

You can add a group to another group.

- Press the [User Tools/Counter] key.
- 2 Press [System Settings].
- Press [Administrator Tools], and then press [VNext].
- Press [Address Book: Program / Change / Delete Group].
- Select the group that you want to put into another group.

Press the group key, or enter the registered number using the number keys.

- 6 Press [Add to Group].
- Select the group which you want to add to.

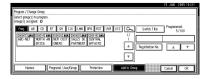

The group key that you have selected becomes highlighted, and the group is added to it.



- 8 Press [OK].
- 9 Press [Exit].
- Press the [User Tools/Counter] key.

Displaying Names Registered in Groups

You can check the names or groups registered in each group.

- Press the [User Tools/Counter] key.
- 2 Press [System Settings].
- Press [Administrator Tools], and then press [▼Next].
- Press [Address Book: Program / Change / Delete Group].
- **5** Select the group where the members you want to check is registered.
- 6 Press [Programd. User/Group].

All the names registered will be displayed.




- 7 Press [OK].
- 8 Press [Exit].
- Press the [User Tools/Counter] key.

Removing a Name from a Group

- 1 Press the [User Tools/Counter] key.
- 2 Press [System Settings].
- Press [Administrator Tools], and then press [Vext].
- 4 Press [Address Book Management].
- **5** Select the name to remove from a group.


Press the name key, or enter the registered number using the number keys.

- 6 Press [Add to Group].
- Select the group from which you want to remove the name.

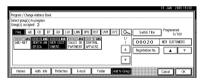

- Highlighted keys indicate groups in which the name has been registered.

The name is removed from the group.

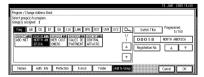

- 8 Press [OK].
- 9 Press [Exit].
- Press the [User Tools/Counter] key.

Deleting a Group within a Group

- Press the [User Tools/Counter] key.
- 2 Press [System Settings].
- Press [Administrator Tools], and then press [VNext].
- Press [Address Book: Program / Change / Delete Group].
- Within the group, select the groups you want to delete.

Select groups either by pressing their keys or entering their registration numbers.


6 Press [Add to Group].

Keys of groups that contain those groups you selected in step appear reversed and in black.

Select the groups you want to delete. Keys of selected groups appear reversed and in white.



8 Press [OK].

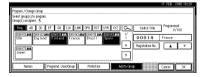

The groups you selected in step**5** are deleted from the groups that appear reversed and in white.

Changing a Group Name

- 1 Press the [User Tools/Counter] key.
- 2 Press [System Settings].
- Press [Administrator Tools], and then press [VNext].
- Press [Address Book: Program / Change / Delete Group].
- Press the group key you want to change.
- 6 Enter the items.

To change the group name and key display

1 Press [Change] under Group Name or Key Display.



2 Enter the new group name or key display, and then press [OK].

To change the title

• Press the title key under Select Title.

To change the registration number

- 1 Press [Change] under Registration No..
- Enter the new registration number using the number keys
- **3** Press [#].

- **7** Press [OK].
- 8 Press [Exit].
- **9** Press the [User Tools/Counter] key.

Deleting a Group

- 1 Press the [User Tools/Counter] key.
- 2 Press [System Settings].
- Press [Administrator Tools], and then press [VNext].
- Press [Address Book: Program / Change / Delete Group].
- 5 Press [Delete].
- 6 Press a group key you want to delete.
- **7** Press [Yes].
- 8 Press [Exit].
- Press the [User Tools/Counter] key.

Registering a Protection Code

You can stop sender's names or folders being accessed by setting a protection code.

You can use this function to protect the following:


- Folders
 You can prevent unauthorized access to folders.
- Sender's names
 You can prevent misuse of sender's
 names.



☐ To protect the mail sender's name, the user code must be registered in advance. For details, see p.74 "Registering a New User Code".

Registering a Protection Code for a Name in the Address Book

1 Press the [User Tools/Counter] key.

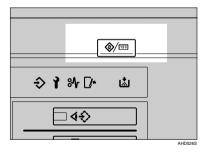

2 Press [System Settings].




Press [Administrator Tools], and then press [▼Next].

- 4 Press [Address Book Management].
- Select the name whose protection code you want to register.

Press the name key, or enter the registered number using the number keys.

6 Press [Protection].

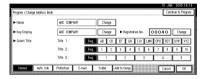

Press [Destination] or [Sender] under Use Name as.



- Note
- ☐ Both **[Destination]** and **[Sender]** can be selected at the same time.
- **8** Select Protection Object.

To protect the folder

- Press [Folder Destination] under Protection Object.
 - Note
 - ☐ You have to select [Destination] under Use Name as in advance.

To protect the sender

Press [Sender] under Protection Object.


Note

- ☐ You have to select [Sender] under Use Name as in advance
- Press [Change] under Protection Code.
- Enter a protection code using the number keys, and then press [#].

 - ☐ You can enter up to eight digits.
- Press [OK].
- Press [Exit].
- Press the [User Tools/Counter] key.

Registering a Protection Code for a Group

1 Press the [User Tools/Counter] key.

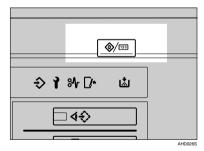


2 Press [System Settings].



- Press [Administrator Tools], and then press [▼Next].
- Press [Address Book: Program / Change / Delete Group].

- Press the group key you want to protect or enter the registered number using the number keys.
- 6 Press [Protection].

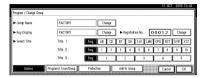

- Press [Folder Destination] under Protection Object.
- Press [Change] under Protection Code.
- **9** Enter a protection code using the number keys, and then press [#].
 - Note
 - ☐ You can enter up to eight digits.
- Press [OK].
- Press [Exit].
- Press the [User Tools/Counter] key.


Registering SMTP and LDAP Authentication

SMTP Authentication

For each user registered in the Address Book, you can register a login user name and login password to be used when accessing an SMTP server.

To use an SMTP server, you need to program it beforehand. For details, see "File Transfer", *Network Guide*.

- □ When [Do not Specify] is selected for SMTP Authentication, the User Name and Password that you have specified in SMTP Authentication of File Transfer settings applies. For details, see "File Transfer", Network Guide.
- If User Authentication has been specified, contact the administrator.
- 1 Press the [User Tools/Counter] key.

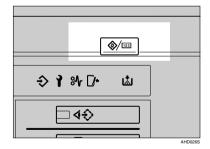

2 Press [System Settings].




- Press [Administrator Tools], and then press [VNext].
- 4 Press [Address Book Management].
- Press the name you want to set SMTP authentication to.

You can also enter the registered number using the number keys.

Note

- ☐ To register a name in the Address Book, see p.72 "Registering a Name".
- 6 Press [Auth. Info].
- Press [Specify Other Auth. Info] on the right side of SMTP Authentication.
- 8 Press [Change] under Login User Name.

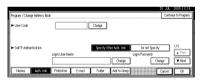

Enter the login user name, and then press [OK].

- ☐ You can enter up to 191 characters.
- When using POP before SMTP Authentication, you can enter up to 63 alphanumeric characters.

₽ Reference

p.127 "Entering Text"

Press [Change] under Login Password.

Enter the password, and then press [OK].

Note

- ☐ You can enter up to 64 characters for the password.
- Enter the password again to confirm, and then press [OK].
- Press [OK].

Ø Note

☐ To change the SMTP Authentication settings, repeat steps ② to ③.

LDAP Authentication


For each user registered in the Address Book, you can register a login user name and login password to be used when accessing an LDAP server.

To use an LDAP server, you need to program it beforehand. For details, see "LDAP Server Settings", *Network Guide*.

Note

□ When [Do not Specify] is selected for LDAP Authentication, the User Name and Password that you have specified in Program/Change LDAP Server of Administrator Tools settings applies. For details, see "Program / Change / Delete LDAP Server", Network Guide.

1 Press the [User Tools/Counter] key.

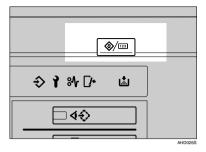

2 Press [System Settings].



- Press [Administrator Tools], and then press [▼Next].
- 4 Press [Address Book Management].
- Press the name you want to set LDAP authentication to.

You can also enter the registered number using the number keys.

- ☐ To register a name in the Address Book, see p.72 "Registering a Name".
- Press [Auth. Info], and then press [▼Next].
- Press [Specify Other Auth. Info] on the right side of LDAP Authentication.
- 8 Press [Change] under Login User Name.



- Enter the login user name, and then press [OK].
 - Note
 - ☐ You can enter up to 128 characters for the user name.
 - **₽** Reference

p.127 "Entering Text"

- Press [Change] under Login Password.
- Enter the password, and then press [OK].

 - ☐ You can enter up to 128 characters for the password.
- Enter the password again to confirm, and then press [OK].
- Press [OK].
 - **𝒯** Note
 - ☐ To change the LDAP Authentication settings, repeat steps ③ to ⑤.

6. Troubleshooting

If Your Machine Does Not Operate As You Want

The following chart gives explanations of common problems and messages. If other messages appear, follow the instructions displayed.

☐ If you cannot make copies as you want because of paper type, paper size, or paper capacity problems, use recommended paper. See p.135 "Copy Paper".

General

Problem	Causes	Solutions
"Please wait." appears.	This message appears when you turn on the operation switch.	Wait for the machine to get ready.
	This message appears when you change the toner cartridge.	
The display is off.	The screen contrast knob is turned to the dark position.	Set the screen contrast knob to the light position so that the display panel can be seen properly.
	The machine is in Energy Saver mode.	Press the [Energy Saver] key to cancel Energy Saver mode.
	The operation switch is turned off.	Turn on the operation switch.
Nothing happens when the operation switch is turned on.	The main power switch is turned off.	Turn on the main power switch.
The main power indicator continues blinking and does not turn off when pressed.	This occurs in the following cases: The machine is communicating with external equipment. The hard disk is active.	When you turn the main power off, check if the machine is not communicating with a computer.
Memory is full.	The number of scanned pages exceeds the capacity of the hard disk.	Follow the instructions displayed on the control panel.
The function status indicator is red.	The function associated with the red indicator is interrupted.	Press the function key corresponding to the indicator. Follow the instructions that appear on the control panel.

Problem	Causes	Solutions
Original images are printed on the reverse side of the paper.	You may have loaded the paper incorrectly.	Load paper correctly. Load paper into the cut paper tray print side down, and into the paper bypass print side up. See p.103 "Loading Paper".
Misfeeds occur frequently.	There are folds or wrinkles in the paper.	Remove any folds or wrinkles from the paper.
	Jammed or torn paper is inside the machine.	Remove the paper, as necessary. See p.108 "% Clearing Misfeeds".
	The cut paper tray's side guide or back fence may not be set properly.	Check the side guide or back fence is set properly. See p.105 "Loading Cut Paper".
	You may have loaded paper of a size different from the paper size settings.	When using paper of a size that cannot be detected automatically, use Tray Paper Size Settings to set the paper size. See p.60 "Tray Paper Size: Tray 1, Tray 2", p.60 "Tray Paper Size: Tray 3, Tray 4 (when Paper Roll Trays are installed)" and p.61 "Tray Paper Size: Tray 3, Tray 4 (when Cut Paper Trays are installed)".
Originals jam frequently.	Originals are curled.	Smooth out any curls and try again.
An error C message remains, even if misfed paper is removed.	You did not open and close the upper section of the fusing unit.	When a misfeed C message appears, it remains until you open and close the upper section of the fusing unit. Open the fusing unit cover in the back, and then the upper section of the fusing unit to check if any paper remains inside.
The user code entry display appears.	Users are restricted by user management.	Enter the user code (max.eight digits), and then press [#].
The Authentication screen appears.	Basic Authentication, Windows Authentication, or LDAP Authentication is set.	Enter your login user name and user password. See p.25 "When the Authentication Screen is displayed".
"You do not have	This user code is not al-	Contact the administrator.
the privileges to use the following function(s)." continues to be displayed even though you have entered a valid user code.	lowed to use the function selected.	Press the [Energy Saver] key. Confirm that the display goes off, and then press the [Energy Saver] key again. The display will return to the user code entry display.
"Authentication has failed." is displayed.	The entered login user name or login password is not correct.	Ask the user administrator for the correct login user name and password.
	The machine cannot perform authentication.	Contact your administrator.

Problem	Causes	Solutions
"Selected files contain file(s) that the user does not have access privileges to. Please note that only the files with access privileges will be deleted." is displayed.	You have tried to delete files without the authority to do so.	Files can be deleted by the file creator or file administrator. To delete a file which you are not authorized to delete, contact the file creator.

Document Server

Problem	Action
"Scanned pages exceeded max. number. Do you want to store the	The number of scanned pages exceeds the capacity per file of the Document Server.
scanned pages as a file?" appears.	If you want to store scanned originals as a file, press [Yes]. The originals are stored as a file in the Document Server.
	If you don't want scanned originals to be stored, press [No] . The scanning data will be cleared.
You forgot your password.	Contact the administrator.
You cannot find out what is stored in a file.	Check the date or time column in the Document Server: Files display.
	Check document content by printing its first page. Press the line of the document in the Document Server: Select Files to Print display, and then press [Print 1st Page] followed by the [Start] key.
Memory becomes full frequently.	Press [Delete File] to delete selected documents to increase available memory.
	Delete documents stored using the scanner function. See <i>Scanner Reference</i> .
You want to check print quality before making a large print run.	First print out one set using the [Sample Copy] key.
You want to store a document so it will not be deleted automatically.	Select [No] for Auto Delete File, and then store the document in the Document Server. See p.68 "Auto Delete File".
	If you later switch your selection to [On] , the change will apply only to documents stored after the change.

Problem	Action
"Original is being scanned by another function." appears.	The Copy function is in use. To cancel the job in process, first press [Exit], and then press the [Copy] key. Next press the [Clear/Stop] key. When the message "[Stop] key was pressed. Stop printing?" appears, press [Stop].

Loading Paper

↑ CAUTION:

Be careful when replacing the roll paper or removing misfed paper by following the operating instructions properly. Otherwise, an injury may result from the paper cutter inside.

A CAUTION:

The fusing section of this machine might be very hot. Caution should be taken when removing misfed paper.

A CAUTION:

 Hold the paper rolls horizontally with both hands. When you grab the paper holder and hold the paper roll vertically, the paper roll may fall off and an injury may result.

#Important

☐ When removing paper rolls, lift the paper holders on either side of the paper roll before removing. Do not lift one side only. This could damage the machine.



For details about paper sizes and types that can be loaded, see p.135 "Copy Paper".

For details about changing the paper size, see p.113 "Changing the Paper Size".

Loading Paper Roll



 Hold both sides of the empty paper roll and remove it from the unit.




- 2. Raise the lever on the paper holder (1).
- Remove the empty paper roll core from the paper holder (2).

<Note>

Remove both sides.
Depending on the paper type, the paper core may be difficult to pull out if it is caught on the claw of the paper holder. If this happens, raise the lever, and then hold the paper holder while turning it from side to side two or three times. Then, gently pull out the paper roll core.



- Set the paper holder in the new paper roll (1).
 Note>
 - Insert the paper holder firmly, until it stops.
- 5. Lower the lever.
 - Set both sides

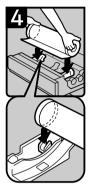

- Hold both sides of the paper roll and set it securely in the paper holder.
 - <Note>
 - The edge of the paper roll should be on the bottom



- Rotate the paper roll slowly until the paper edge is almost fed into the rubber part of the roller (①).
 Note>
 - Make sure the paper is not loose.
- Make sure the paper is straight.8. While feeding the edge of the
- paper roll into the rubber part of the roller, turn the paper knob clockwise (②).
 - <Note>
 - Watch carefully to make sure that the edge of the paper is inserted between the feeder and the roller.




- Press the auto feed button until the edge of the paper emerges from the cutter section (①).
 Note>
 - The paper will be cut automatically when you release the feed button.
 Be careful not to get your fingers or cloths trapped in the roller.
- 10. Remove the cut piece of paper(2).
- 11. Close the paper tray.

AHD027S

- ☐ Set the paper volume again after loading the paper roll. See p.57 "Paper Volume".
- ☐ When you change the paper size or paper type, make settings under System Settings, see p.60 "Tray Paper Size: Tray 1, Tray 2", p.60 "Tray Paper Size: Tray 3, Tray 4 (when Paper Roll Trays are installed)" and p.61 "Paper Type: Tray 1–4".


Loading Cut Paper

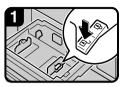

 Pulling out the cut paper tray, and then release the side lever to the "unlocked" position.



2. Set the back fence again.

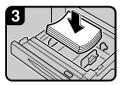

Square the paper and load it into the tray.




- 4. While pressing the release lever (1), adjust the side fences to the paper size (2).
- 5. Lock the side lever (3).
- 6. Close the paper tray.

☐ When you load paper of size that cannot be detected automatically, select the paper size in System Settings. See p.61 "Tray Paper Size: Tray 3, Tray 4 (when Cut Paper Trays are installed)".

When using translucent paper

☐ Load the translucent paper into Tray 4.

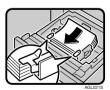

Make sure to set the side guides before loading paper.

Ø Note

☐ After loading paper into the tray, make sure the paper is placed straightly and the side guides are set securely onto it.

△Adding Toner

riangle WARNING:

Do not incinerate used toner or toner containers. Toner dust might ignite when exposed to an open flame. Dispose of used toner containers in accordance with local regulations.

A CAUTION:

· Keep toner (used or unused) and toner containers out of reach of children.

↑ CAUTION:

 If toner or used toner is inhaled, gargle with plenty of water and move into a fresh air environment. Consult a doctor if necessary.

A CAUTION:

 If toner or used toner gets into your eyes, flush immediately with large amounts of water. Consult a doctor if necessary.

A CAUTION:

If toner or used toner is swallowed, dilute by drinking a large amount of water. Consult a doctor if necessary.

A CAUTION:

- Avoid getting toner on your clothes or skin when removing a paper jam or replacing toner. If your skin comes into contact with toner, wash the affected area thoroughly with soap and water.
- If toner gets on your clothing, wash with cold water. Hot water will set the toner into the fabric and may make removing the stain impossible.

∰Important

- ☐ Faults may occur if you use non-recommended toner.
- ☐ Replace toner while the machine is turned on. If you turn the machine off, your settings will be lost and you will not be able to resume copying.
- ☐ Always replace toner when the message appears.


Note

- \square When the indicators blink, replace the toner as soon as possible.
- ☐ If toner runs out, the message "♣Add Toner" appears and you cannot make copies.


For details about toner storage, see p.118 "Toner".




1. Open the toner supply cover.

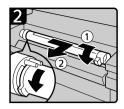

While sliding the toner cartridge to the right, roll it towards you (1).
 Pull the toner cartridge towards you, and out of the machine (2).

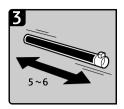


 Remove the new toner cartridge and gently shake it five or six times.

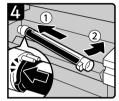

5. Insert the ends of the toner cartridge into the toner holder on the left (①).

- 6. Insert the toner cartridge into the right, as indicated by the arrow (②).
- <Note>
 - Remove the tape from the cartridge without rotating the cartridge as follows.

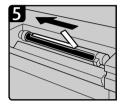

7. Slowly remove the tape from the toner cartridge.




 Rotate the toner cartridge so the arrows are at the top and secure it firmly in place.

9. Close the toner supply cover.

ZEDX120E

% Clearing Misfeeds

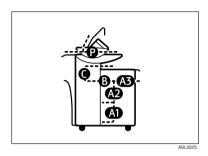

A CAUTION:

 The fusing section of this machine might be very hot. Caution should be taken when removing misfed paper.

A CAUTION:

 Be careful when replacing the roll paper or removing misfed paper by following the operating instructions properly. Otherwise, an injury may result from the paper cutter inside.


#Important

- ☐ Do not turn off the operation switch when removing jammed originals. If you do, your settings will be lost.
- ☐ Remove jammed originals completely, taking care not to tear them. If scraps of paper remain inside, originals will jam again and may cause damage to the machine.
- ☐ If the original misfeeds again, call your service representative immediately.

Note


- ☐ Paper jam locations may be displayed in more than one place at a time. If this happens, check all the locations indicated.
- ☐ Instructions for clearing paper jams in the copy output area and paper roll tray are contained in the stickers on the machine.

Original Misfeeds (P)

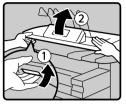

- Lift the original cover release lever

 (1), and open the original cover(2).
 Note>
 - Always hold the original cover on both sides when opening it.

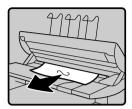


2. Remove the jammed original.




Gently close the original cover with both hands.

AHD029S

Paper Misfeeds in the Paper Tray (A1, A2)

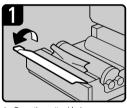

- Open the cutter blade cover.
 <Note>
 - Be careful not to touch the cutter blade with your fingers.

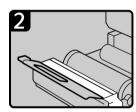

- The next steps differ depending on whether you can see the edge of the paper or not.
 - When you can see the edge of the paper.




 When you cannot see the edge of the paper.




AHD030S


When you can see the edge of the paper

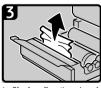


 Slowly pull up the edge of the jammed paper.

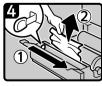

- 2. Slide the cutter knob (①) to cut the edge of roll paper.
- Remove the jammed paper.
- <Note>
- Return the cutter knob to either the right or left end of the cutter area.

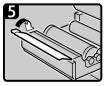


- Close the cutter blade cover.
 - <Note>
 - Be careful not to touch the cutter blade with your fingers.

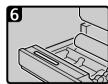

If you cannot remove the misfed paper, follow the instructions under "When you cannot see the edge of paper" to remove it.

AHD031S


When you cannot see the edge of the paper

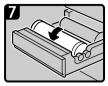

 Rotate the paper roll in the direction of the arrow until you can see the edge of the paper.




Cut the edge of the paper with the cutter or scissors.

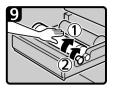

 Slowly rotate the paper roll until the edge of the paper is fed into the rubber part of the roller (①).
 Note>

- Making sure the paper is not loose, insert it straight into the roller.
- While feeding the edge of the paper roll into the rubber part of the roller, turn the paper knob clockwise (2).
 Note>
 - Watch carefully to make sure that the edge of the paper is inserted between the feeder and the roller.

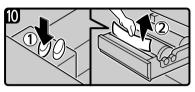

- Press the auto feed button until the edge of the paper emerges from the cutter section (①).
 - <Not
 - •The paper will be cut automatically when you release the feed button.
 - Be careful not to get your fingers or cloths trapped in the roller.
- 6. Remove the cut piece of paper (2).
- 7. Close the paper tray.

AHD032S


Paper misfeeds in the cut paper trays



- 1. Pull out the cut paper tray.
- 2. Remove the jammed paper.



3. Remove the jammed paper.

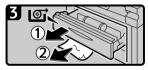


4. If you cannot remove the misfed paper, pull out the upper paper roll tray (1), and then remove the jammed paper from the tray's underneath (2).



- 5. Open the cutter blade cover, and then remove the jammed paper.6. Close the cutter balde cover, and then
- Close the cutter balde cover, and then close the paper roll tray.

AHD033S

Paper Misfeeds in the Paper Bypass (A3, B)

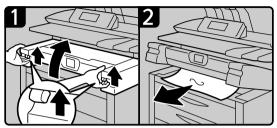

- 1. Lift the lever, and then lift out the imaging unit upward.

 - Always hold the unit on both sides when opening it.
- Remove the jammed paper.
 Close the imaging unit.
- - <Note>
 - Always use both hands when closing the imaging unit.


AHD034S

Paper Misfeeds in the Rear Paper Output (C)

∰Important

When clearing the paper, be careful of the auxiliary guide and other protrusions.

- ☐ Even if only C is displayed, check the front area first and clear any misfed paper there. If you still cannot clear the paper jam, follow the procedure below.
- ☐ If you do not open and close the fusing unit once, the error C cannot be cleared. Make sure to follow the steps ① to ② below to check if any torn paper remains inside.

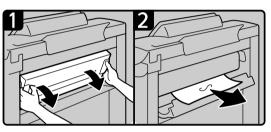

- Open the fusing unit cover at the rear with both hands.
 - <Note>
 - •The fusing unit is hot. Be careful not to touch it.
- Remove the jammed paper and close the fusing unit cover.
 - <Note>
 - Go to step 3 to check if any torn scraps of paper left inside the fusing unit.



- Hold the knobs on either side of the fusing unit and tilt the top of the fusing unit forwards.
 - <Note>
 - The fusing unit is hot. Be careful not to touch it.
 - Do not place anything on the fusing unit.
- Remove the jammed paper.
- Close the fusing unit (1) with both hands.
- Close the fusing unit cover (②).
 Note>
 - Push both sides of the fusing unit and push it firmly into place until both sides lock into position.

AHD035S

Changing the Paper Size

Preparation

When changing the paper size, make sure the paper size in the User Tools menu are correctly set. If you do not, misfeeds might occur.

If you load a paper size that is not selected automatically, you need to specify the paper size with the User Tools. See p.60 "Tray Paper Size: Tray 1, Tray 2", and p.61 "Tray Paper Size: Tray 3, Tray 4 (when Cut Paper Trays are installed)".

The following paper sizes are not selected automatically:


$$12"\times14^{1}/_{2}" \square, 11"\times15" \square, 11"\times14" \square \square, 10"\times14" \square, 8^{1}/_{2}"\times14" \square \square, 8^{1}/_{2}"\times12" \square \square, 8^{1}/_{2}"\times12" \square \square$$

Changing the Paper Roll Size

Removing the roll holder


∰Important

- ☐ Always follow the instructions below when adjusting the roll holder. Do not force the roll holder by pulling or sliding it strongly. This could damage it.
 - 1. Push the paper holder inwards, and then pull it upwards to remove it.
 - <Note>
 - The paper holder is attached with magnets and a hook.
 - The illustration shows the paper holder on the right side

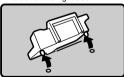

AHD036S


Setting the roll holder

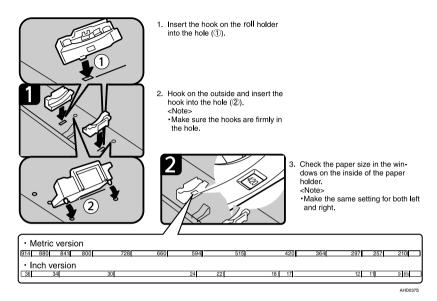

For details about the procedure of loading paper, see p.104 "Loading Paper Roll".

Confirm paper width using the paper roll tray's scale.


Changing the Cut Paper Size

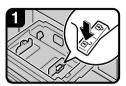

 Pulling out the cut paper tray, and then release the side lever to the "unlocked" position.



2. Set the back fence again.

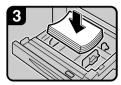

3. Square the paper and load it into the tray.



- 4. While pressing the release lever (①), adjust the side fences to the paper size (②).
- 5. Lock the side lever (3).
- 6. Close the paper tray

AHD028S

7. Remarks

Dos and Don'ts

↑ WARNING:

 Keep the machine away from flammable liquids, gases, and aerosols. A fire or an electric shock might occur.

riangle CAUTION:

 Unplug the power cord from the wall outlet before you move the machine. While moving the machine, you should take care that the power cord will not be damaged under the machine.

∰Important

- Do not turn off the main power switch while the **On** indicator is lit or blinking. This may cause damage to the hard disk or memory.
- Do not touch areas on or around the fusing unit. These areas get hot.
- When you use this machine for a long time in a poorly ventilated confined space, you may detect an odd smell. To keep the workplace comfortable, we recommend good ventilation.
- The area around the ventilation holes might feel warm. This is caused by exhaust air and is not a malfunction.
- Do not turn off the operation switch while using each function. Make sure each function is finished first.
- Do not open the main unit cover, the paper roll tray, or the cut paper tray while copying. If you do, misfeeds might occur.
- Do not leave the main unit open more than 10 minutes, otherwise copy quality may deteriorate.

- If you do not use the machine for a long time, remove the paper from the paper roll tray, or the cut paper tray and place it in its storage bag.
- Condensation can lead to image deterioration. To prevent this, this machine has an anti-condensation function. Even when the main power switch is in the off position, the anti-condensation heater is active, keeping the machine body slightly warm.
- This machine has the anti-humidity function. Even when the main power switch is in the off position, the anti-humidity heater is active if it is turned on.

Handling Toner

↑ WARNING:

 Do not incinerate used toner or toner containers. Toner dust might ignite when exposed to an open flame. Dispose of used toner containers in accordance with local regulations.

A CAUTION:

Keep toner (used or unused) and toner containers out of reach of children.

#Important

☐ Faults may occur if you use non-recommended toner.

To add toner, see p.106 "LAdding Toner".

Toner Storage

When storing toner, the following precautions should always be followed:

• Store toner containers in a cool, dry place free from direct sunlight.

#Important

Lay toner containers on a flat surface during storage.

Used Toner



☐ Toner cannot be re-used.

Where to Put Your Machine

Machine Environment

Choose your machine's location carefully. Environmental conditions greatly affect its performance.

Optimum environmental conditions

↑ CAUTION:

- Keep the machine away from humidity and dust. Otherwise a fire or an electric shock might occur.
- Do not place the machine on an unstable or tilted surface. If it topples over, an injury might occur.

A CAUTION:

- If you use the machine in a confined space, make sure there is a continuous air turnover.
- Temperature: 10-30 °C (50-86 °F)
- Humidity: 15-90%
- A strong and level base.
- The machine must be level within 5 mm, 0.2 inches: both front to rear and left to right.
- To avoid possible buildup of ozone, be sure to locate this machine in a large well ventilated room that has an air turnover of more than 30 m³/hr/person.

Environments to avoid

- Areas exposed to direct sunlight or other sources of strong light (more than 1,500 lux).
- Areas directly exposed to cool air from an air conditioner or warm air from a heater. (Sudden temperature changes can cause condensation to form inside the machine.)

- Near machines generating ammonia, such as a diazo copy machine.
- Places where the machine will be subject to frequent strong vibration.
- Dusty areas.
- Areas with corrosive gases.

Moving

↑ CAUTION:

 Unplug the power cord from the wall outlet before you move the machine. While moving the machine, you should take care that the power cord will not be damaged under the machine.

#Important

- Be careful when moving the machine. Take the following precautions:
 - Turn off the main power. See p.28 "Turning Off the Main Power".
 - Unplug the power cord from the wall outlet. When you pull the plug out of the socket, grip the plug (not the cord) to avoid damaging the cord, thereby reducing the risk of fire and electric shock.
 - Close all covers and trays.
- Move the machine carefully. If you do not, it could be damaged and stored files might be lost.
- ☐ Protect the machine from strong shocks. Impact can damage the hard disk and cause stored files to be lost. As a precautionary measure, files should be copied to another computer.

Power Connection

⚠ WARNING:

- Connect the machine only to the power source described on the inside front cover of this manual. Connect the power cord directly into a wall outlet and do not use an extension cord.
- Do not damage, break or make any modifications to the power cord. Do not place heavy objects on it. Do not pull it hard nor bend it more than necessary. These actions could cause an electric shock or fire.

↑ CAUTION:


 Unplug the power cord from the wall outlet before you move the machine. While moving the machine, you should take care that the power cord will not be damaged under the machine.


↑ CAUTION:

- When you disconnect the power plug from the wall outlet, always pull the plug (not the cable).
- When the main power switch is in the standby position, the optional anti-condensation heaters are on.
 In an emergency, unplug the machine's power cord.
- When you unplug the power cord, the anti-condensation heaters go off.
- Make sure the plug is inserted firmly in the wall outlet.
- Voltage must not fluctuate by more than 10%.
- The wall outlet should be near the machine and be easily accessible.

Clearance Around the Machine

Place the machine near a power source, and provide the clearance as shown.

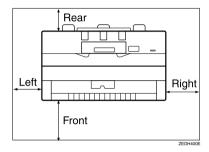

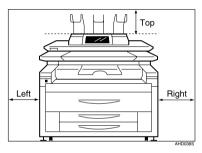

	Standard setting
Front	more than 100 cm (40")
Rear	more than 70 cm (28")
Left	more than 40 cm (16")
Right	more than 45 cm (18")
Тор	more than 45 cm (18")

Note

☐ For the required space when options are installed, contact your service representative.

Maintaining Your Machine

If the exposure glass or feed roller are dirty, you will not be able to make clear copies. Clean them when they become dirty.

Cleaning the machine

Wipe the machine with a soft, dry cloth. If this does not remove the dirt, wipe the machine with a damp and tightly wrung cloth. If a damp cloth still does not remove the dirt, try using a mild detergent. Wipe the machine with a dry cloth to remove the moisture, after using a damp cloth.


∰Important

- Do not use chemical cleaner or organic solvent, such as thinner or benzene. If they get into the machine or melt plastic parts, a failure might occur.
- Do not clean parts other than those specified in this manual. Such parts should be cleaned by your service representative.

Cleaning inside the Original Cover

If you open the original cover, you can access the exposure glass and original feed mechanism.


1 Lift the release lever on the original cover, and open the original cover while holding it on both sides.

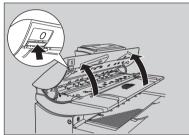

ZEDH210E


Cleaning the exposure glass

• Wipe the exposure glass with a soft, dry cloth.

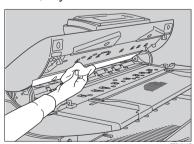


Cleaning the feed roller

• Wipe the feed roller with a soft, dry cloth while turning the roller.

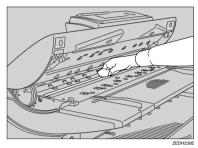


Cleaning the original feed guide

• Wipe the original feed guides with a soft, dry cloth.

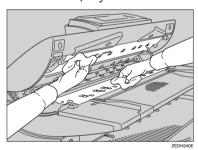

Note


- ☐ If there is paper dust or fluff inside, remove it.
- **2** Close the original cover gently while holding it on both sides.

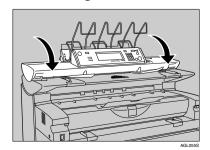

Cleaning the Imaging Unit

Clean off toner that may have collected on the imaging area.

1 Lift the imaging unit opening levers on both sides and open the imaging unit.

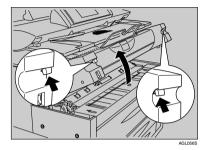


∰Important

☐ Do not leave the imaging unit open more than 10 minutes, otherwise copy quality may deteriorate.

Note

- ☐ While holding down the imaging unit, pull the release lever to open it.
- 2 Wipe it with a soft, dry cloth.

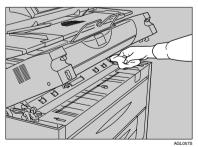


Close the imaging unit cover gently.

Other Functions

Inquiry

The inquiry functions let you confirm the telephone numbers to contact for repairs or to order toner. Be sure to contact your service engineer to verify the following:

- Consumbles
 - Telephone No. to order
 - Toner
- ♦ Machine Maintenance/Repair
 - Telephone No.
 - · Serial No. of Machine
- Sales Representative
 - Telephone No.
- 1 Press the [User Tools/Counter] key.

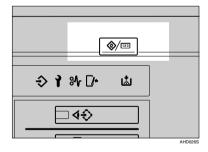

2 Press [Inquiry].



Inquiry information is displayed.

Printing inquiry information

• Press [Print Inquiry List].




- Press the [Start] key.
 Inquiry information is printed.
- Press [Exit].
- 4 Press [Exit].

Changing the Display Language

You can change the language used on the display. English is set as default setting.

1 Press the [User Tools/Counter] key.

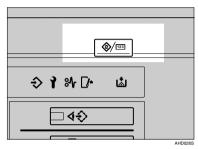

2 Press [Français].



The display language is changed to French.

3 Press [Sortie].

The menu appears in French.

Note

☐ If you want to return the display language to "English", repeat step ¶ and press [English].

Counter


Displaying the Total Counter

You can display the total length of sheets used or the total area of sheets used.


You can also print the counter list.



- ☐ The total length display is set as default. If you want to change it to the total area display, contact your service representative.
- 1 Press the [User Tools/Counter] key.

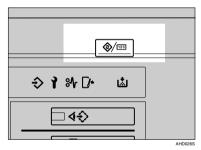

2 Press [Counter].

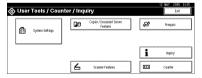

To print a counter list, press [Print Counter List].



4 Press the [Start] key.

A counter list is printed.

8. Entering Text


Entering Text

This section describes how to enter characters. When you enter a character, it is shown at the position of the cursor. If there is a character at the cursor position, the entered character is shown before that character.

Available Characters

- Alphabetic characters
 ABCDEFGHIJKLMNOPQRSTUVWXYZabcdefghijklmnopqrstuvwxyz
- Symbols
- Numerals 0123456789

Keys

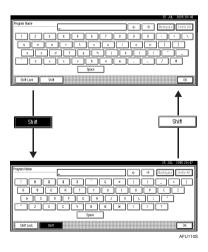



☐ When entering uppercase or lowercase letters continuously, use [Shift Lock] to lock the case.

Entering letters

1 Press [Shift] to switch between uppercase and lowercase.

2 Press the letters you want to enter.

Deleting characters

1 Press [Backspace] or [Delete All] to delete characters.

9. Specifications

Main Unit

Configuration:

Console

Photosensitivity type:

OPC drum

Copy process:

Dry electrostatic transfer system

Development:

Dry two-component magnetic brush development system

Fusing:

Heating roll pressure system

Original scanning:

Original feed image scanning over fixed contact image sensor

♦ Original size (W x L):

• Metric version:

Size that can be placed: $210 \times 182 \text{ mm} - 950 \times 15000 \text{ mm}$ Scan size: $210 \times 210 \text{ mm} - 914 \text{ mm} \times 15000 \text{ mm}$

Inch version:

Size that can be placed: $8.3" \times 7" - 37.5" \times 590.5"$ Scan size: $8.3" \times 8.3" - 35.9" \times 590.5"$

♦ Copy size (W x L):

• Metric version:

Paper roll: 210×210 mm $- 914 \times 15000$ mm Paper bypass: 210×182 mm $- 914 \times 2000$ mm Cut paper: A4 \square \square - A2 \square

Inch version:

Paper roll: $8^{1}/_{2}" \times 8^{1}/_{2}" - 35.9" \times 590.5"$ Paper bypass: $8.3" \times 7" - 35.9" \times 78"$ Cut paper: $8^{1}/_{2}" \times 11"$ \square \square $-18" \times 24"$ \square

Reproduction ratio:

• Metric version: Full-size: 100%

Reduce: 25.0%, 35.4%, 50.0%, 70.7% Enlarge: 141.4%, 200.0%, 282.8%, 400.0% Zoom: 25.0 – 400.0% (0.1% increments)

• Inch version (Engineering):

Full-size: 100%

Reduce: 25.0%, 32.4%, 50.0%, 64.7% Enlarge: 129.4%, 200.0%, 258.8%, 400.0% Zoom: 25.0 – 400.0% (0.1% increments)

• Inch version (Architecture):

Full-size: 100%

Reduce: 25.0%, 33.3%, 50.0%, 66.7% Enlarge: 133.3%, 200.0%, 266.7%, 400.0% Zoom: 25.0 – 400.0% (0.1% increments)

Copying speed (full-size copying):

4.5 copies/minute (A0(E) \square), 8.0 copies/minute (A1(D) \square)

Original:

Sheet

Original weight:

• Metric version: $20.9 - 157 \text{ g/m}^2$ and 0.03 - 1 mm

• Inch version: 5.6 – 41.8 lb. and 1.1 Mil – 40 Mil

♦ Warm-up time:

Less than 2 minutes (23°C)

First copy time:

• Metric version:

Paper roll tray: A1 \square 18 seconds, A0 \square 25 seconds (Tray 1, front paper exit) Cut paper tray: A4 \square 16 seconds, A2 \square 18 seconds (Tray 3, front paper exit) Paper bypass: 31 seconds

• Inch version:

Paper roll tray: D \square 18 seconds , E \square 25 seconds (Tray 1, front paper exit) Cut paper tray: $8^1/_2$ " × 11" \square 16 seconds, 18" × 24" \square 18 seconds (Tray 3, front paper exit)

Paper bypass: 31 seconds

Copy paper weight:

• Metric version: $52.3 - 110 \text{ g/m}^2$

• Inch version: 13.9 – 29.3 lb

Non-reproduction area:

• Metric version:

• Top: 8 mm

• Bottom: 10 mm

• Left and Right 2 ± 2 mm

• Inch version:

• Top: 0.32"

• Bottom: 0.40"

• Left and Right 0.08" ± 0.08"

Continuous copying count:

99 copies

Copy paper feed method:

Paper bypass, paper roll \times 2

Resolution:

600 dpi

Power source:

220-240V, 50/60Hz, 10A or more

❖ Dimensions (W×D×H):

 $1250\times748\times1200$ mm, $49.2"\times29.4"\times47.2"$

Weight:

Less than 230 kg

❖ Power consumption:

	Full system *1
Warm-up	1.7 kw
Stand-by (Anti-humidity heater = OFF)	1.6 kw
Stand -by (Anti-humidity heater = ON)	1.7 kw
Copying	1.8 kw
Maximum	less than 1.85 kw

 $^{^{*1}}$ Main unit with the cut paper tray.

♦ Noise emission *1:

Sound Power Level:

Stand-by	Less than 50.6 dB (A)
Copying	Less than 65.7 dB (A)

Sound Pressure Level *2:

Stand-by	Less than 38 dB (A)
Copying	Less than 54.7 dB (A)

^{*1} The above measurements are in accordance with ISO 7779 and are actual values.
*2 Measured at the position of the operator.

Options

Roll Feeder Type 480

Paper sizes:

width: 210 – 914 mm, length: 210 – 15000 mm (diameter: 175 mm)

Paper widths:

Metric version

210 mm, 257 mm, 297 mm, 364 mm, 420 mm, 440 mm, 490 mm, 515 mm, 594 mm, 660 mm, 680 mm, 728 mm, 800 mm, 841 mm, 880 mm, 914 mm

• Inch version 8¹/₂", 9", 11", 12", 17", 18", 22", 24", 30", 34", 36"

Power consumption

88 W (supplied by the main unit)

ightharpoonup Dimensions (W \times D \times H):

 $1124 \times 369 \times 236$ mm, $44.3" \times 14.6" \times 9.3"$

Weight:

Approx. 36 kg

Paper Cassette Type 480

Paper weight:

Metric version: $64 - 110 \text{ g/m}^2$ Inch version: 17 - 29.3 lb.

❖ Paper sizes:

A2□, A3□, A4□, A4□, B3 JIS□, B4 JIS□, B4 JIS□, 18"×24"□, 17"×22"□, 12"×18"□, 12"×18"□, 12"×14¹/₂"□, 11"×17"□, 11"×17"□, 11"×15"□, 11"×14"□, 10"×14"□, 9"×12"□, 8¹/₂"×14"□, 8¹/₂"×13"□, 8¹/₂"×12"□, 8¹/₂"×12"□, 8¹/₂"×11"□, 8¹/₂"×1

Power consumption (Max):

Approx. 76 W (supplied by the main unit)

Paper capacity:

250 sheets \times 2

ightharpoonup Dimensions (W imes D imes H):

 $1014 \times 644 \times 236 \text{ mm}, 40.0" \times 25.4" \times 9.3"$

♦ Weight:

Approx. 38 kg

Carrier Sheet

Allows you to load bent, folded, creased, thin, or pasted originals using this sheet.

Paper Cassette Type 480

When using several types of paper roll, you can set each type of paper roll with a roll holder unit in advance.

Original Tray Type G

It is installed in the back of the machine. This can stack originals or copies that consist of many sheets.

9

Copy Paper

Recommended Size and Type

The following limitations apply to each paper tray.

Metric version

Where paper is placed	Paper type	Paper size	Number of sheets that can be placed
Paper roll tray (Tray 3 and Tray 4 are optional.)	Plain paper 52.3 – 110 g/m² Translucent paper 52.3 – 90 g/m² Recycled paper 52.3 – 110 g/m² Film 0.07 mm – 0.095 mm	Paper roll Diameter: less than 175 mm Core: 75.7 mm – 77 mm Width: 210 mm, 257 mm, 297 mm, 364 mm, 420 mm, 440 mm, 490 mm, 515 mm, 594 mm, 660 mm, 680 mm, 728 mm, 800 mm, 841 mm, 880 mm, 914 mm	_
Cut paper tray (optional)	Plain paper 64 – 110 g/m² Recycled paper 64 – 110 g/m² Translucent paper *1 64 – 90 g/m²	A2, A3, A3, A4, A4, A4, B3 JIS, B4 JIS	250 sheets 100 sheets
Paper bypass	Plain paper $52.3 - 110 \text{ g/m}^2$ Translucent paper $52.3 - 90 \text{ g/m}^2$ Film $0.07 \text{ mm} - 0.095 \text{ mm}$	A0 , A1 , A2 , A2 , A2 , A3 , A4 , A4 , A4 , A5 , A5 , A5 , A5 , A6 , A6 , A6 , A6	1 sheet

9

Inch version

Where paper is placed	Paper type	Paper size	Number of sheets that can be placed
Paper roll tray (Tray 3 and Tray 4 are optional.)	Plain paper 13.9 – 29.3 lb Translucent paper (vellum) 13.9 – 23.9 lb Recycled paper 13.9 – 29.3 lb Film 2.8 Mil – 3.7 Mil	Paper roll 13.9 – 29.3 lb Diameter: 6.7" or less Internal diameter: 2.98" - 3.03" Width: 8 ¹ / ₂ ", 9", 11", 12", 17", 18", 22", 24", 30", 34", 36"	-
Cut paper tray (optional)	Plain paper 17 – 29.3 lb Recycled paper 17 – 29.3 lb Translucent paper *1 (vellum) 17 – 23.9 lb	$18"\times24" \square, 17"\times22" \square, 12"\times18" \square, \\ 12"\times18" \square, 12"\times14^1/2" \square, \\ 11"\times17" \square, 11"\times17" \square, 11"\times15" \square, \\ 11"\times14" \square, 11"\times14" \square, 10"\times14" \square, \\ 9"\times12" \square, 9"\times12" \square, 8^1/2"\times14" \square, \\ 8^1/2"\times14" \square, 8^1/2"\times13" \square, \\ 8^1/2"\times12" \square, 8^1/2"\times12" \square, \\ 8^1/2"\times11" \square, 8^1/2"\times11" \square, \\ 8^1/2"\times11" \square, 8^1/2"\times11" \square$	250 sheets 100 sheets
Paper bypass	Plain paper 13.9 – 29.3 lb Translucent paper (vellum) 17 – 23.9 lb Film 2.8 Mil – 3.7 Mil	• Engineering E(34"×44") □, D(22"×34") □ □, C(17"×22") □ □ B(11"×17") □ □, A(8¹/₂"×11") □ □ • Architecture E(36"×48") □, D(24"×36") □ □, C(18"×24") □ □, A(9"×12") □ □, A(9"×12") □ □ • Other 8¹/₂" × 14" □, 30" × 42" □ Paper width: 8¹/₂" – 37.5" Paper length: 7.2" – 78"	1 sheet

^{*1} Load in Tray 4 only.

#Important

□ Damp or curled paper may cause misfeeds. See p.30 "Anti-humidity Heater Switch"

𝒯 Note

- ☐ When loading paper in the cut paper tray, place the copy side face down.
- ☐ When placing paper on the paper bypass, place the copy side face up.
- ☐ Use recommended paper.

Paper roll

- If humidity is high, and the paper roll has expanded due to moisture, be sure to cut off approximately 1000 mm (40"), before making copies.
- Use a paper roll that has a black core.
- When a paper roll of 90 g/m² (24 lb) or 110 g/m² (29.3 lb) paper is used and there is little paper left on the roll, copies may be faint near the leading and/or trailing edge, or an image may be doubled. To prevent this, set 3-5 mm (0.11"-0.19") margins from the leading and trailing edges.

Cut paper

- Straighten curled or warped paper before loading.
- To prevent multiple-sheet fed simultaneously, fan the paper before loading it in the tray.
- Do not load paper over the limit mark of the paper tray.
- Make sure the paper edges of the sheets are aligned to the front of the paper tray.
- Load translucent paper lengthways when possible.
- If the output copies are badly curled, turn the paper loaded in the cut paper trays upside down, or remove the copies during the copy run.

When copying translucent paper from the paper bypass

Smooth out any curls in the paper before loading it.

Load translucent paper lengthways when possible.

Hemmed paper

When using hemmed paper, wrinkles and other problems may occur on copies. Use the following procedure when copying onto hemmed paper:

- Copy from the paper bypass.
- Make sure the paper is straight, and align the paper guides of the paper bypass to the paper size.
- Load only one sheet at a time.
- Remove each copy from the output tray and place it on a flat surface.

Ø Note

☐ Due to the thickness of hemmed paper, copies may be faint, blurred, or wrinkled, and paper jams may occur. You may be able to prevent this by copying on the rear surface of the paper or feeding the bottom of the paper in first.

Unusable Paper

A CAUTION:

 Do not reuse stapled paper. Do not use aluminum foil, carbon-containing paper or other conductive paper. If you do, there is a danger of fire.

#Important

- ☐ To prevent faults, do not use any of the following kinds of paper:
 - Thermal fax paper
 - Art paper
 - · Aluminum foil
 - Carbon paper
 - Conductive paper
 - OHP transparencies for colour copying
 - Paper with perforated lines
- Do not use copy paper that has been already copied onto, or a failure could occur.

Note

- ☐ To prevent misfeeds, do not use the following kinds of paper:
 - Bent, folded, or creased paper
 - Torn paper
 - Slippery paper
 - Perforated paper
 - · Rough paper
 - Thin paper with little stiffness
 - Paper with a dusty surface
 - · Adhesive labels
 - · OHP transparencies
- ☐ If you copy on to rough grain paper, the copy image might be blurred.
- ☐ When using non-recommended paper (especially chemically treated paper, hemmed paper, film), paper jams may occur, paper wrinkle, or copy image deteriorate.

J	Do not use	paper	that has	already	been	copied	or 1	orinted	on

- $\hfill\Box$ Do not copy on both sides of paper.
- ☐ If you use paper roll that is not marked with a black core, paper jams might occur when the paper ends.
- ☐ Do not use paper printed onto with an inkjet printer, as it may become entangled or jammed, which may damage the machine. In the worst event, this may cause fire, depending on paper and ink type combination.

9

Paper Storage



- $\hfill \square$ When storing paper, the following precautions always should be followed:
 - Do not store paper where it will be exposed to direct sunlight.
 - Avoid storing paper in humid areas (humidity: 70% or less).
 - Store on a flat surface.
- \square Do not store paper vertically.
- $\hfill \square$ In high temperature and humidity environments, store paper in vinyl bags.

Handling paper

Depending on the humidity of the storage environment, handle the paper as follows:

%	State of copies	Try this
High humidity	Part of the copy image is lost or a multi-sheet feed, or wrinkling oc- curs on both translucent (vellum) a- nd normal paper.	Improve the environment where the copier is placed (e.g., install an air conditioner or dehumidifier). Remove paper from the copier immediately after copying, and store it in a plastic bag.
	Part of the copy image is lost on b- oth translucent (vellum) and norm- al paper.	If you are not using the copier for a long time, remove paper from the copier and store it in a plastic bag.
(Normal conditions)		Store paper in a plastic bag when you have finished copying each day.
	Part of the copy image is lost on translucent paper (vellum).	If you are not using the copier for a long time, remove translucent paper (vellum) from the copier and store it in a plastic bag.
	Part of the copy image is lost or a multi-sheet feed, or wrinkling oc- curs on both translucent (vellum) a- nd normal paper.	Improve the environment where the copier is placed (e.g., install an air conditioner or humidifier). Remove paper from the copier immediately after copying, and store it in a plastic bag.
Low humidity		_

AHD039S



 $\hfill \square$ If humidity is above 60%, turn on the anti-humidity heater.

p.30 "Anti-humidity Heater Switch"

q

INDEX

A1 is displayed, 109	Checking Stored Documents, 43 Check Modes key, 23
A2 is displayed, 109	Classical de the evicinal assess 121
A3 is displayed, 111	Cleaning inside the original cover, 121
Accessing user tools (System Settings), 53	Cleaning the imaging unit, 122
Adding a group to another group, 89	Clearance around the machine, 120
Adding toner, 106	Clearing misfeeds, 108
Address Book, 69	Clearing the number of prints, 77
Change Order, 66	Clear Modes key, 23
Edit Title, 67	Clear/Stop key, 24
	Combined function operations, 31
Program / Change / Delete Group, 66 select title, 68	Common key operations, 25
	Control panel, 23
Address Book Management, 65	Copy Count Display, 54
Administrator Authentication Management, 64	Copy paper, 135
Administrator Tools, 52, 63	Counter
Anti-humidity heater switch, 19, 20, 21, 30	Displaying, 125
AOF (Always On), 68	Cut paper, 137
Authentication screen, 25	Cut paper trays, 21
log off, 26	Cutter knob, 19, 21
log on, 25	ъ
Auto Delete File, 68	<u>D</u>
Auto feed button, 19, 21	Delete All Files, 68
Auto off mode, 15, 29	Deleting
Auto Off Timer, 61	Job List, 33
Auto reset timer	Deleting a group, 92
copier/Document Server, 62	Deleting a group, 52 Deleting a registered e-mail destination, 80
scanner, 62	Deleting a registered folder, 84, 87
В	Deleting a user, 73
	Deleting a user code, 75
Back fence, 21	Deleting stored documents, 46
B is displayed, 111	Display / Clear / Print Counter per User, 65
Browse network, 83	Displaying
,,,,,	Counter, 125
C	Displaying names registered in groups, 90
	Displaying the counter for each user code, 76
Changing	Display Language
Display Language, 124	Changing, 124
File Name, 41, 42	Display panel, 23, 24
Password, 42	Display / Print Counter, 64
User Name, 42	Document roller, 18
Changing a group name, 91	Document Server, 37
Changing a registered e-mail destination, 79	Downloading, 47
Changing a registered folder, 83, 86	Settings, 48
Changing a registered name, 73	Using, 39
Changing a user code, 75	Viewing, 47
Changing default settings, 53	Do's and don'ts, 117
Changing the paper size, 113	Do s and don is, 11/
Checking	
Job List,32	
,00 E101, OE	

<u>E</u>	Κ
E-mail destination, 78 Energy Saver, 62 Energy Saver key, 23 Energy saver mode, 29 ENERGY STAR program, 15 Entering Text, 127 Exiting user tools, 53 Extended Security, 64	LDAP authentication, 95 Loading cut paper, 105 paper roll, 104 Lower tray, 20
Feed Start Method, 56	Low power mode, 15, 29
File Name Changing, 41, 42 Fine ratio adjustment copier, 58 printer, 59 Firmware Version, 68 Front output auxiliary tray, 17 FTP, 85 Function keys, 24 Function Priority, 54 Function reset timer, 55 Function Status indicator, 24	Machine environment, 119 environments to avoid, 119 optimum environmental conditions, 119 Main power indicator, 23 Main power switch, 17, 27 Maintaining your machine, 121 Main unit, 129 Manuals for this machine, i Moving, 119 Multi-Access, 34
Fusing unit cover, 18	<u>N</u>
G	Names of major options, 10 Number keys, 24
General Features, 49, 54 Guide to components, 17	0
H Handling paper, 140 Hemmed paper, 137 I If your machine does not operate as you want, 99 Imaging unit release lever, 18 Indicators, 23 Inquiry, 123 Interleave print, 55 Interrupt key, 23	On indicator, 23 Operation switch, 17, 24, 27 Options, 20, 133 Original cover, 17 Original cover release lever, 17 Original feed delay 1, 55 Original feed delay 2, 55 Original guide, 18 Original output, 56 Original table, 18 Original tray, 20 Other options, 22
Job List, 31 Checking, 32 Deleting, 33 Job list display time, 59 Job List key, 23	Panel Off Timer, 62 Panel Tone, 54 Paper bypass, 18 Paper bypass's paper guide, 18 Paper feed knob, 19, 21 Paper holder, 19, 20

Paper output exit copier, 59 Document Server, 59	Registering user codes, 74 Removing a name from a group, 90 Removing the roll holder, 113
Paper roll, 137	removing the remineraci, The
Paper roll tray, 20	S
Paper storage, 139	
Paper thickness	Safety information, 11
paper bypass, 57	Sample Copy, 24, 45
paper tray, 56	Saving energy, 29
Paper tray priority	[Scanner Stop] key, 18
copier, 60	Searching by file name, 42
Paper type	Searching by user name, 43
bypass tray, 61	Set date, 63
Tray 1–4, 61	Set Time, 63
Paper volume, 57	Setting or changing
Password	Password, 41
Changing, 42	Settings
Setting or changing, 41	Document Server, 48
P is displayed, 109	Settings you can change with user tools, 54
Positions of △WARNING and	Setting the roll holder, 114
△ CAUTION labels, 13	Sharp (#) key, 24
Power connection, 120	Sleep mode, 15
Print Address Book	SMB, 81
Destination List, 67	SMTP authentication, 95
Printing stored documents, 43	Start key, 24
Printing the counter for each user code, 76	Switching between functions, 31
Printing the First Page, 46	Symbols, 9
Print Priority, 54	System Auto Reset, 62
Program / Change Administrator, 64	System reset, 31
Program / Change / Delete LDAP Server, 68	
Protection	Т
destination, 93	T 10
Protection code, 93, 94	Terms, 10
, ,	Text
R	Deleting, 128
	Entering, 128
Rear original exit (straight), 18	Timer Settings, 51, 61
Rear output, 19	Toner, 118
Recommended size and type, 135	handling toner, 118
Registering addresses and users, 69	toner storage, 118
Registering a name, 72	used toner, 118
Registering an e-mail destination, 78	To register an FTP folder, 85
Registering a New Group, 88	To register an SMB folder, 81
Registering a new user code, 74	Translucent paper, 137
Registering a protection code, 93	Tray 1, 19
Registering a protection code for a group, 94	Tray 2, 19
Registering a protection code for a name, 93	Tray paper settings, 60
Registering folders, 81	Tray paper size
Registering Names, 72	Tray 1, 60
Registering names to a group, 88, 89	Tray 2, 60
Registering or changing	Tray 3, 60,61
User Name, 40	<i>Tray 4, 60,61</i> Trays, 20
Registering SMTP and LDAP authentication, 95	

Turning off
the main power, 28
the power, 28
Turning on
the main power, 27
the power, 27

U

Unusable paper, 138
Upper output stacker, 17
Upper tray, 17, 19
Use LDAP Server, 68
User Authentication Management, 63
User Name
Changing, 42
Registering or changing, 40
User Tools/Counter key, 23
User Tools menu (System Settings), 49
Using
Document Server, 39
Using FTP to Connect, 85
Using SMB to Connect, 81

٧

Ventilation holes, 18

W

Warm Up Notice, 54 Web browser, 47 What you can do with this machine, iii Where to put your machine, 119



Declaration of Conformity

"The Product complies with the requirements of the EMC Directive 89/336/EEC and its amending directives and the Low Voltage Directive 73/23/EEC and its amending directives."

In accordance with IEC 60417, this machine uses the following symbols for the main power switch:

- means POWER ON.
- **也** means STAND BY.

In accordance with IEC 60417, this machine uses the following symbols for the anti-humidity heater switch:

- means POWER ON.
- O means POWER OFF.



USA

RICOH CORPORATION 5 Dedrick Place West Caldwell, New Jersey 07006 Phone: +1-973-882-2000

The Netherlands

RICOH EUROPE B.V. Prof.W.H. Keesomlaan 1, NL-1183 DJ Amstelveen P.O. Box 114, NL-1180 AC Amstelveen Phone: +31-(0)20-5474111

United Kingdom

RICOH UK LTD. Ricoh House, 1 Plane Tree Crescent, Feltham, Middlesex, TW13 7HG Phone: +44-(0)20-8261-4000

Germany

RICOH DEUTSCHLAND GmbH Wilhelm-Fay-Strasse 51, D-65936 Frankfurt am Main Phone: +49-(0)69-7104250

France

RICOH FRANCE S.A. 383, Avenue du Général de Gaulle BP 307-92143 Clamart Cedex Phone: +33-(0)-821-01-74-26

Spain

RICOH ESPAÑA S.A. Avda. Litoral Mar, 12-14, Blue Building, Marina Village, 08005 Barcelona Phone: +34-(0)93-295-7600

Italy

RICOH ITALIA SpA Via della Metallurgia 12, 37139 Verona Phone: +39-045-8181500

China

RICOH CHINA CO.,LTD. 17/F., Huamin Empire Plaza, No.728 Yan An West Road, Shanghai P.C.:200050 Phone: +86-21-5238-0222

Singapore

RICOH ASIA PACIFIC PTE.LTD. 260 Orchard Road, #15-01/02 The Heeren, Singapore 238855 Phone: +65-6830-5888



B18866004