

Aficio[®] 180

OPERATING INSTRUCTIONS **SYSTEM SETTINGS**

Modes
User Tools (System Settings)

Read this manual carefully before you use this product and keep it handy for future reference.

For safety, please follow the instructions in this manual.



RICOH COMPANY, LTD.

15-5, 1 chome, Minami-Aoyama, Minato-ku, Tokyo
Telephone: Tokyo 3479-3111

Overseas Affiliates

U.S.A.

RICOH CORPORATION
5 Dedrick Place
West Caldwell, New Jersey 07006
Phone: +1-973-882-2000

The Netherlands

RICOH EUROPE B.V.
Groenelaan 3, 1186 AA, Amstelveen
Phone: +31-(0)20-5474111

United Kingdom

RICOH U.K. LTD.
Ricoh House
1 Plane Tree Crescent, Feltham,
Middlesex, TW13 7HG
Phone: +44-(0)181-261-4000

Germany

RICOH DEUTSCHLAND GmbH
Mergenthalerallee 38-40,
65760 Eschborn
Phone: +49-(0)6196-9060

France

RICOH FRANCE S.A.
383, Avenue du Général de Gaulle
BP 307-92143 Clamart Cedex
Phone: +33-(0)1-40-94-38-38

Spain

RICOH ESPAÑA S.A.
Avda. Litoral Mar, 12-14,
08005 Barcelona
Phone: +34-(0)93-295-7600

Italy

RICOH ITALIA SpA
Via della Metallurgia 12,
37139 Verona
Phone: +39-(0)45-8181500

Hong Kong

RICOH HONG KONG LTD.
23/F., China Overseas Building,
139, Hennessy Road,
Wan Chai, Hong Kong
Phone: +852-2862-2888

Singapore

RICOH ASIA PACIFIC PTE.LTD.
260 Orchard Road,
#15-01/02 The Heeren,
Singapore 238855
Phone: +65-830-5888

Introduction

This manual contains detailed instructions on the operation and maintenance of this machine. To get maximum versatility from this machine all operators should carefully read and follow the instructions in this manual. Please keep this manual in a handy place near the machine.

Please read the Safety Information before using this machine. It contains important information related to USER SAFETY and PREVENTING EQUIPMENT PROBLEMS.



Notes:

Some illustrations may be slightly different from your machine.

Certain options may not be available in some countries. For details, please contact your local dealer.



Operator Safety:

This machine is considered a CDRH class I laser device, safe for office/ EDP use. The machine contains a 5-milliwatt, 760 - 800 nanometer wavelength, GaAlAs laser diode. Direct (or indirect reflected) eye contact with the laser beam might cause serious eye damage. Safety precautions and interlock mechanisms have been designed to prevent any possible laser beam exposure to the operator.

Laser Safety:

The Center for Devices and Radiological Health (CDRH) prohibits the repair of laser-based optical unit in the field. The optical housing unit can only be repaired in a factory or at a location with the requisite equipment. The laser subsystem is replaceable in the field by a qualified Customer Engineer. The laser chassis is not repairable in the field. Customer engineers are therefore directed to return all chassis and laser subsystems to the factory or service depot when replacement or the optical subsystem is required.

Warning:

Use of controls or adjustment or performance of procedures other than those specified in this manual might result in hazardous radiation exposure.

Notes:

Two kinds of size notation are employed in this manual. With this machine refer to the metric version.

For good copy quality, Ricoh recommends that you use genuine Ricoh toner.

Ricoh shall not be responsible for any damage or expense that might result from the use of parts other than genuine Ricoh parts in your Ricoh office product.

Power Source:

120V, 60Hz, 10A or more

Please be sure to connect the power cord to a power source as above. For details about power source, see "Power Connection" of the "Copy Reference".

Note to users in the United States of America

Notice:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio /TV technician for help.

Warning

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

1. Properly shielded and grounded cables and connectors must be used for connections to host computer (and/or peripheral) in order to meet FCC emission limits.

This device complies with Part 15 of FCC Rules.

Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Ricoh Corporation, 5 Dedrick Place, West Caldwell, NJ 07006
973-882-2000

Note to users in Canada

Note:

This Class B digital apparatus complies with Canadian ICES-003.

Remarque concernant les utilisateurs au Canada

Avertissement:

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

In accordance with IEC 60417, this machine uses the following symbols for the main power switch:

I means **POWER ON.**

⏻ means **STAND BY.**

How to Read this Manual

Symbols

In this manual, the following symbols are used:

WARNING:

This symbol indicates a potentially hazardous situation that might result in death or serious injury when you misuse the machine without following the instructions under this symbol. Be sure to read the instructions, all of which are described in the Safety Information in the “Copy Reference”.

CAUTION:

This symbol indicates a potentially hazardous situation that might result in minor or moderate injury or property damage that does not involve personal injury when you misuse the machine without following the instructions under this symbol. Be sure to read the instructions, all of which are described in the Safety Information in the “Copy Reference”.

* The statements above are notes for your safety.

Important

If this instruction is not followed, paper might be misfed, originals might be damaged, or data might be lost. Be sure to read this.

Preparation

This symbol indicates the prior knowledge or preparations required before operating.

Note

This symbol indicates precautions for operation, or actions to take after misoperation.

Limitation

This symbol indicates numerical limits, functions that cannot be used together, or conditions in which a particular function cannot be used.

Reference

This symbol indicates a reference.

[]

Keys that appear on the machine's panel display.

【 】

Keys built into the machine's operation panel.

TABLE OF CONTENTS

Manuals for this Machine.....	1
Additional Functions Provided by Optional Memory Units.....	2
Copy Mode.....	2
Facsimile Mode (Option)	2
Printer Mode(Optional).....	3

1. Modes

Changing Modes.....	5
Multi-Access	6
Copy Mode	9
Changing to Copy Mode	9
Fax Mode.....	11
Changing to Facsimile Mode.....	11
Printing a Received Fax	11
Sending a Fax	12
Printer Mode.....	13
Changing to Printer Mode	13

2. User Tools (System Settings)

Keys for User Tools (System Settings)	15
Accessing the User Tools (System Settings)	16
Exiting from User Tools.....	17
User Tools Menu (System Settings)	18
Settings You Can Change with the User Tools	19
System Settings ¹ / ₅	19
System Settings ² / ₅	20
System Settings ³ / ₅	21
System Settings ⁴ / ₅	23
System Settings ⁵ / ₅	25
INDEX.....	26

Manuals for this Machine

This is a multi-functional machine combining copying, facsimile, and printer functions. This manual describes procedures common to these functions. Each function's reference describes the operational procedures separately for the copying, facsimile and printer functions. Please consult the manual that suits your needs.

❖ System Settings (this manual)

Provides an overview of the machine. This manual introduces the functions of the machine. It also introduces the options allowing you to use additional functions and describes how to access the system user tools to make the machine easier to use.

❖ When using as a copier

- Copy Reference
Describes the various copying functions from basic copying to more advanced functions such as reducing/enlarging copies or combining originals into one copy.
- Copy Quick Guide
Explains the most frequently used copy functions with examples. Also contains information such as optimizing copy quality.

❖ When using as a facsimile

- Facsimile Reference (option)
Describes the operational procedures and functions to use the machine as a facsimile.
- Fax Quick Guide (option)
Explains the most frequently used facsimile functions with examples. Also contains information such as Entering Letters and Symbols.

❖ When using as a printer

- Printer Reference (option)
Describes the procedures and functions for using this machine as a printer.

Additional Functions Provided by Optional Memory Units

You can expand the capabilities of this machine to include fax or printer functions. When you want to add a function, contact your sales or service representative.

Copy Mode

In copy mode you can make basic copies and also copy using more sophisticated techniques, such as reduction/enlargement or combining several originals onto one copy. You can install an optional memory expansion for storage of document images.

Expansion Memory (option)

❖ 48 MB copier memory unit

Increases memory capacity, allowing you to increase the number of storage of originals.

Facsimile Mode (Option)

You can send and receive fax messages in facsimile mode.

Fax Function Upgrade (option)

Allows you to use JBIG transmission/reception and extend the communication features, Speed Dial codes, Group Dial codes, Memory Transmission files etc.

If you need this option, please consult your service representative.

Expansion Memory (32MB:DIMM, option)

Allows you to send and receive fax messages at high resolution (Fine or Super Fine). Increases memory capacity.

If you need Expansion Memory, please consult your service representative.

PC-FAX Expander (option)

By installing a PC-FAX Expander, you can use this machine as a scanner, a PC FAX modem and a convenience printer.

If you need this option, please consult your service representative.

Printer Mode(Optional)

Installation of optional expansion memory allows more data to be stored.

Options for Memory Expansion

❖ **32 MB or 64 MB DIMM**

Provides various functions including high-performance printing and Rotate Collation(Sort). If you need DIMM, please consult your sales or service representatives.

 
❖ **Printer hard disk**

Allows Rotate Collation(Sort), install the Font data, or proof print.

1. Modes

Changing Modes

You can use this machine not only as a copier, but optionally as a fax or printer machine as well. Press the **[Copy]** key to use copy functions, press the **[Fax]** key to use facsimile functions or press the **[Printer]** key to use printer functions.

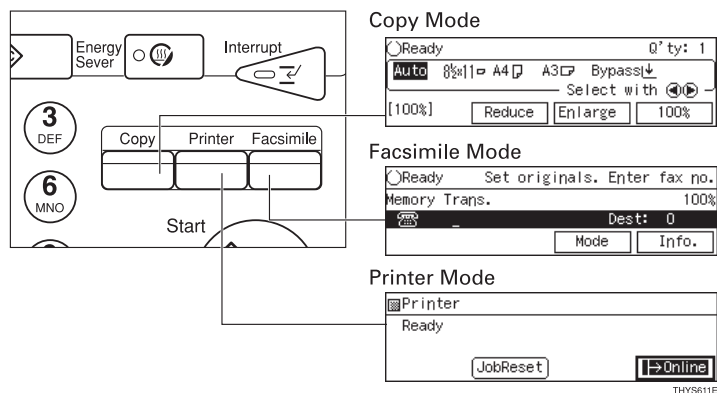

! Limitation

❑ You cannot switch modes in any of the following cases:

- When scanning in a fax message for transmission.
- During immediate transmission.
- When accessing the user tools.
- During interrupt copying.

Multi-Access

You can carry out another job using a different function while the current job is being performed.

This allows you to handle your jobs efficiently regardless of how the machine is being used. For example:

- While making copies, the machine can send a fax message that has been stored in memory.
- You can make copies while receiving fax data.
- The machine can receive print data no matter which mode it is in.

Performing multiple functions simultaneously like this is called Multi-accessing.

⚠ Limitation

- ❑ You cannot use Multi-accessing during interrupt copying.

📝 Note

- ❑ You can choose which mode has highest priority for print jobs. The default is "Copy". See "15. Print Priority" in ⇒ P.23 "*System Settings* ^{4/5}".
- ❑ When your machine is equipped with the optional internal tray 2, you can specify the tray used for each function so that completed documents are not mixed. For example, set one tray for faxes and another tray for copies. If you require the optional internal tray 2, contact your local dealer or service representative. See "14. Output Tray Prio." in ⇒ P.23 "*System Settings* ^{4/5}".

💡 Sample operations

This chart is based on the following conditions:

- When "15. Print priority" is set to "Copy" (See "15. Print Priority" in ⇒ P.23 "*System Settings* ^{4/5}")
- For details on operations under other conditions, contact your service representative.

Mode after you select		Copy		Facsimile						Printer		
				Transmission Operation / Manual Reception Operation	Transmission			Reception				
		Operation	Sort		Scanning An Original for Memory Transmission	Memory Transmission	Immediate Transmission	Memory Reception	Printing Received Data	Data Reception	Printing	
Copy	Copying	○	-	○	○	☆	○	☆	☆	☆	☆	
	Sort	○	-	○ ^{*1}	○ ^{*1}	☆	○ ^{*1}	☆	→	☆	→	
Facsimile	Transmission Operation / Manual Reception Operation		○	○	×	×	☆	×	☆	☆	☆	☆
	Transmission	Scanning An Original for Memory Transmission	×	×	×	×	☆	×	☆	☆	☆	☆
		Memory Transmission	☆	☆	☆	☆	×	×	×	☆	☆	☆
		Immediate Transmission	×	×	×	×	×	×	×	☆	☆	☆
	Reception	Memory Reception	☆	☆	☆	☆	×	×	→	☆	☆	☆
		Printing Received Data	☆	→	☆	☆	☆ ^{*2}	☆ ^{*2}	☆ ^{*2}	→	☆	☆
Printer	Data Reception		☆	☆	☆	☆	☆	☆	☆	→	→	
	Printing		☆	→	☆	☆	☆	☆	☆	→	→	

1

☆...means that these functions can be used together.

○...means that you can interrupt the current job with Function keys or the **【Interrupt】** key to proceed to a subsequent job.

→...means that another job will automatically start after the current job is finished.

×...means that you will manually start another job after the current job is finished (i.e. these functions cannot be used together).

*¹ Simultaneous operations are only available when copies are being made after their originals are all scanned.

*² During parallel receptions, any subsequent job is disabled until the receptions are completed.



 
Copy Mode

Changing to Copy Mode

You can always make a copy when the machine isn't printing or scanning a fax data.

1 Press the **[Copy]** key.

The copy display appears on the panel display.

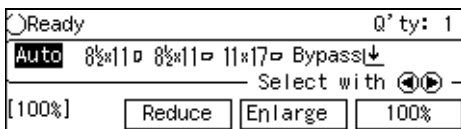

Reference

For details, see the "Copy Reference".

Interrupt Copying to Make Urgently Needed Copies

You can interrupt the current copying job or printing of a received fax to make a copy.

Limitation

- ☐ You cannot use the interrupt copy function in the following cases:
 - during fax immediate transmission
 - while scanning an original for memory transmission
 - during interrupt copying

Note

- ☐ Machine operations are different depending "15. Print Priority" (See ⇒ P.24 "System Settings ⁴/₅") or "18. Key Op. Tools" (See ⇒ P.25 "System Settings ⁵/₅") settings.

1 Press the **[Interrupt]** key.

If the machine is scanning originals, it will immediately stop the scanning job. On the other hand, if the machine is performing a copy or print job, it will still continue the job until you press the **[Start]** key after pressing the **[Interrupt]** key. When the current job stops, the interrupt copy display appears on the panel display.

Note

- ☐ When you interrupt a copying job, remove the previous original.

2 Make your copies.

Important

- ☐ If the remaining memory space is 0%, the machine fails to receive fax data. Wait until the machine completes printing a received fax, then start making copies.

Note

- ☐ While copying, a received fax document is stored in memory and the Receive File indicator is lit.

Limitation

- ☐ You cannot choose the sort or combine function in interrupt copying.

3 After interrupt copying is completed, remove the original and delivered copies.

4 Press the **[Interrupt]** key again.

The machine resumes the printing job of the received fax document.

Resuming the interrupted copying job

- ❶ Reset the previous original.
- ❷ Press the **【Start】** key.

The machine resumes the interrupted copy run.

Copying And Multi-accessing

❖ **When “Print Priority” = “Fax”, “Printer” or “Display”**

The machine completes the operation of the function set by Print priority before performing the operation of another function.

❖ **When “Print Priority” = “Interleave”**

The machine performs the operations in the order in which they are initiated. If another function is initiated during operation, the machine completes the current operation before performing the operation of the function initiated.

 
Fax Mode

Changing to Facsimile Mode

You can always use the machine as a facsimile when you are not copying.

1 Press the **[Fax]** key.

The facsimile display appears on the panel display.

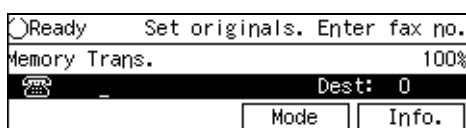

Note

- ☐ The Memory Transmission/Reception function is performed automatically even when another function is being used. You need not switch the display. When data is received in memory, the Receive File indicator is lit.

Reference

For details, see the "Facsimile Reference".

Printing a Received Fax

When you are not copying, a received fax is printed automatically. You do not need to switch to Facsimile mode. If you wish to print a received fax while copying, see below.

1 Press the **[Fax]** key. The facsimile display appears on the panel display. The copying job is interrupted and the machine starts printing the received fax automatically.

Note

- ☐ Machine operations are different depending "15. Print Priority" (See ⇒ P.24 "System Settings ⁴/₅") or "18. Key Op. Tools" (See ⇒ P.25 "System Settings ⁵/₅") settings.

Reference

See ⇒ P.6 "Multi-Access".

Printing a received fax while copying

❖ When "Print Priority" = "Fax", "Printer" or "Display"

The machine once interrupts the copying and receives a fax. Upon completing the fax reception, it resumes the interrupted copying job.

❖ When "Print Priority" = "Interleave"

The machine performs the operations in the order in which they are initiated. If another function is initiated during operation, the machine completes the current operation before performing the operation of the function initiated.

Sending a Fax

Sending a fax while printing a received fax

Scanning originals for memory transmission

The machine can scan your originals for memory transmission even while printing a received fax.

- 1** Complete the usual operations for sending a fax, then press the **[Start]** key.

Immediate transmission

Immediate transmission interrupts the job of printing a received fax. This is because the page memory is occupied as your originals are scanned.

- 1** Complete the usual operations for sending a fax, then press the **[Start]** key.

Sending a fax while copying

While scanning copy originals

- 1** Press the **[Clear/Stop]** key and then the **[Fax]** key.

Copying is stopped and the display is switched to the Facsimile mode.

Note

- ☐ Remove the copy originals.

While outputting copy

- 1** Press the **[Fax]** key to switch to the facsimile display.

You can send a fax while copying.

Note

- ☐ Remove any originals of your copy job.

- 2** Complete the usual operations for sending a fax, then press the **[Start]** key.

- 3** After the transmission has finished, press the **[Copy]** key.

- 4** Reset the copy job originals, then press the **[Start]** key.

Sending a fax while copying

- 1** Press the **[Fax]** Key to switch to facsimile display.

Printing is interrupted.

- 2** Complete the usual operations for sending a fax, then press the **[Start]** key.

After the transmission has finished, printing re-starts.

Printer Mode

You must switch to printer mode to change the print settings or to reset a print job.

You do not need to switch the machine to printer mode when printing from an application on your PC.

operation before performing the operation of the function initiated.

1

Changing to Printer Mode

1 Press the **[Printer]** key.

The printer display appears on the panel display.



Reference

For details, see the "Printer Reference".

Printing And Multi-accessing

Printing is possible even when any other function is being used.

Reference

See ⇒ P.6 "Multi-Access"

❖ When "Print Priority" = "Fax", "Printer" or "Display"

 
The machine completes the operation of the function set by Print priority before performing the operation of another function.

❖ When "Print Priority" = "Interleave"

The machine performs the operations in the order in which they are initiated. If another function is initiated during operation, the machine completes the current

2. User Tools (System Settings)

Keys for User Tools (System Settings)

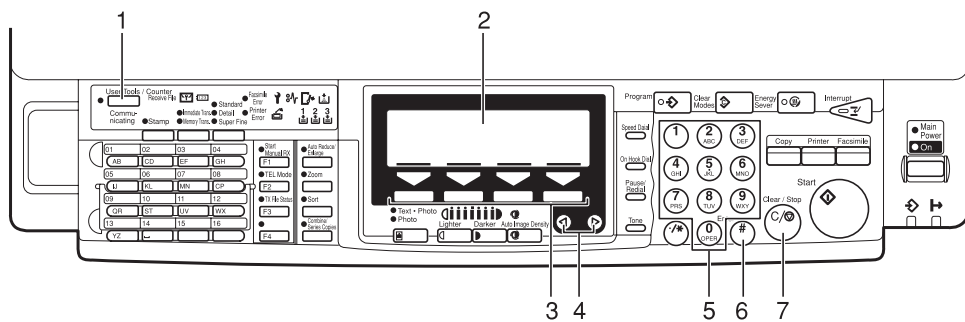

THYS110E

1. 【User Tools/Counter】 key

2. Panel Display

3. 【Selection】 keys

Press the key under the item you wish to select.

4. ⏪ and ⏩ keys (Cursor keys)

Press to select an item on the panel display.

5. 【Number】 keys

Use to enter a numeric value.

6. 【#】 key

Press to set a value you have entered.

7. 【Clear/Stop】 key

Press to delete a number you have entered.

Accessing the User Tools (System Settings)

This section is for the key operators in charge of this machine. You can change or set the machine's default settings.

2

Preparation

After using the user tools, be sure to exit it to return to Copy mode.

The settings are not canceled even if the operation switch is turned off or the **[Clear Modes]** key, **[Energy Saver]** key is pressed.

Limitation

 
- Function names displayed in a faint font become available when the machine is expanded.

Reference

For information on Copy, Fax, and Printer User Tools, see the appropriate reference manual.


1 Press the **[User Tools/Counter]** key.

The User Tools Main Menu appears.

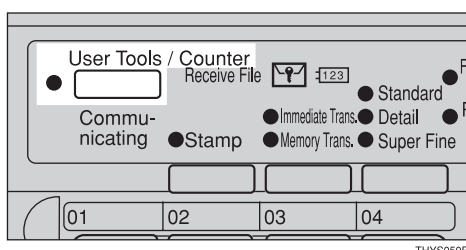

2 Enter **[1]** with the **[Number]** keys.





 
The system settings menu appears.

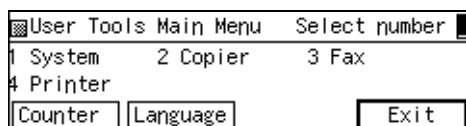

Note

- Press the **[Counter]** key to check or print out the total number of prints made by the machine.
- Press the **[Language]** key to switch the display panel language.
- "Please wait" is displayed, during fax communication.

     3 Search for the desired menu. Enter its number with the **[Number]** keys.

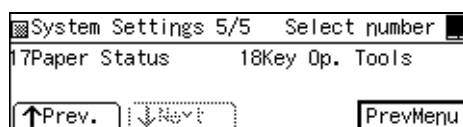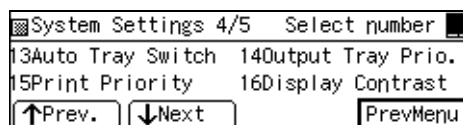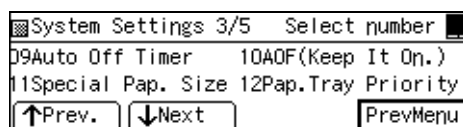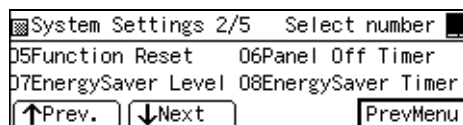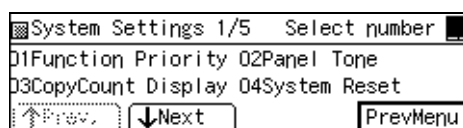

Note

- ☐ [↓Next]: Press to go to the next page.
- ☐ [↑Prev.]: Press to go back to the previous page.

Reference

⇒ P.18 “User Tools Menu (System Settings)”

- 4** Change the settings by following the instructions on the panel display. Then press the [OK] key.

Reference

 
⇒ P.19 “Settings You Can Change with the User Tools”

Note

- ☐ [OK]: Press to set the new settings and return to the previous menu.
- ☐ [Cancel]: Press to return to the previous menu without changing any data.

Exiting from User Tools


- 1** After changing the user tools settings, press the [User Tools/Counter] key.

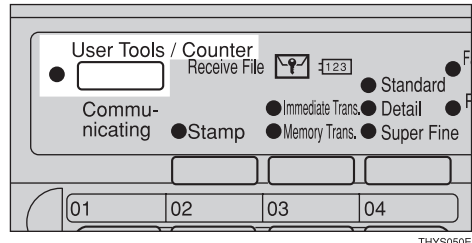**Note**

- ☐ You can also exit from user tools by pressing the [Exit] key on the User Tools Main Menu.

User Tools Menu (System Settings)

 2

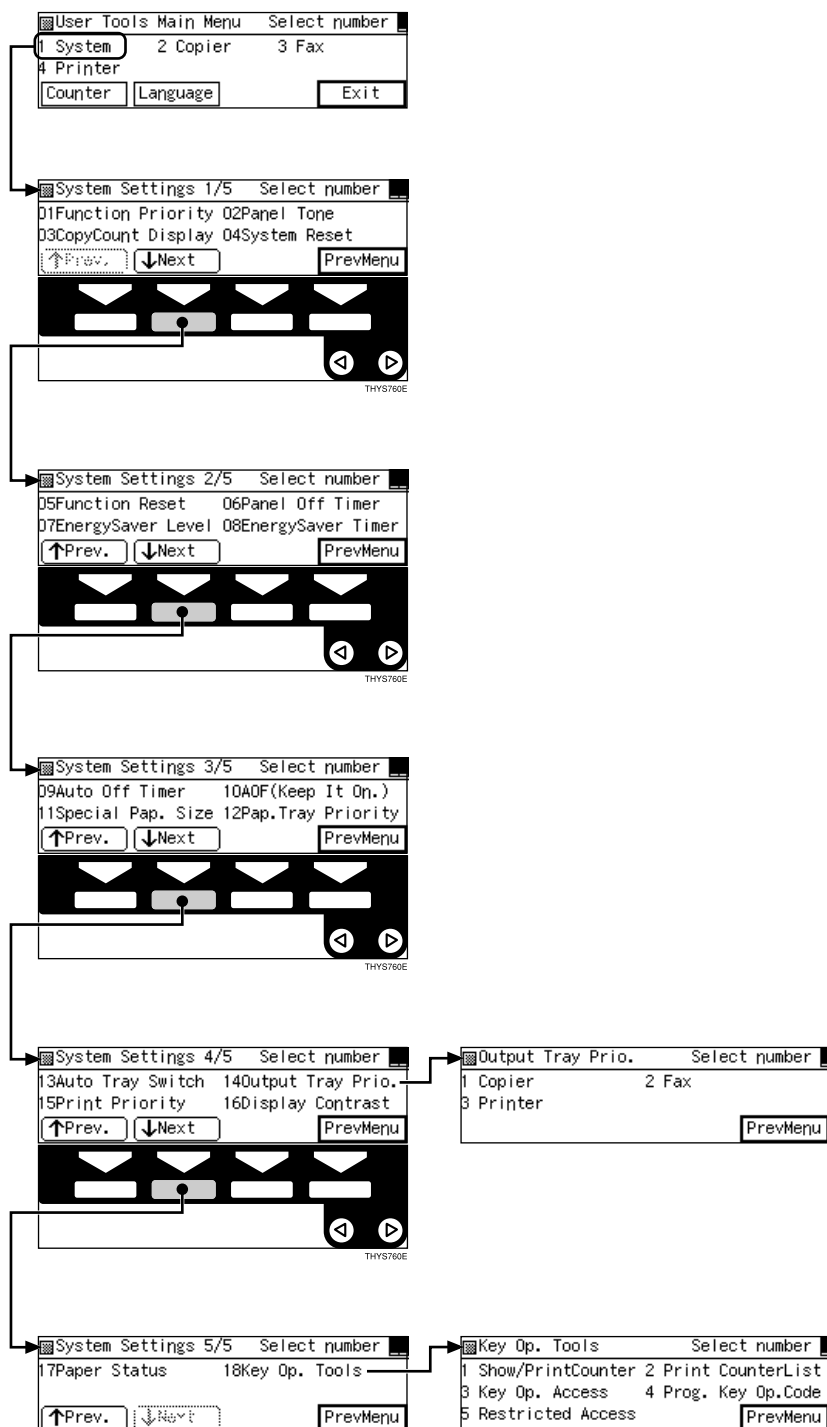

THYS140E





Settings You Can Change with the User Tools

Reference





For how to access the user tools, see ⇒ P.16 “Accessing the User Tools (System Settings)”.

2






System Settings ¹/₅


Menu	Description
01. Function Priority (facsimile or printer option required)	<p>You can specify the mode to be displayed immediately after the operation switch is turned on or System Reset mode is turned on.</p> <p> Note <input type="checkbox"/> Default: <i>Copy</i></p>
02. Panel Tone	<p>The key tone sounds when a key is pressed. This tone can be turned on or off.</p> <p> Note <input type="checkbox"/> Default: <i>ON</i></p>
03. Copy Count Display	<p>The copy counter can be set to show the number of copies made (count up) or the number of copies remaining to be made (count down).</p> <p> Note <input type="checkbox"/> Default: <i>Up (count up)</i></p>
04. System Reset	<p>The machine returns to its prioritized mode automatically after your job is finished, after the selected time. This function is called “System Reset”. The time can be set from 10 to 999 seconds, or no system reset.</p> <p> Note <input type="checkbox"/> Default: <i>YES (60 seconds)</i> <input type="checkbox"/> You can specify the prioritized mode with the user tools. See “01. Function Priority” in ⇒ P.19 “System Settings ¹/₅”</p>

 System Settings ²/₅

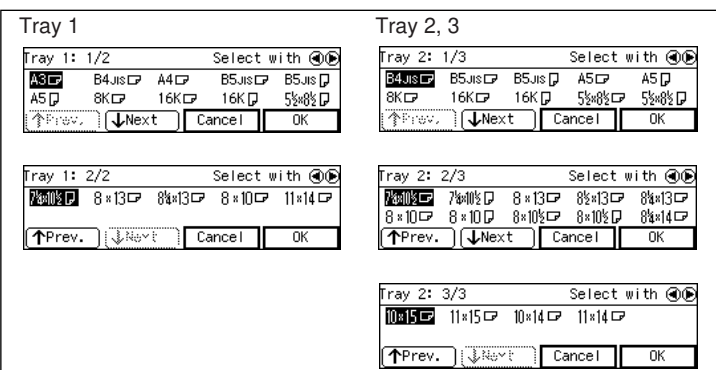

Menu	Description
05. Function Reset (facsimile or printer option required)	<p>How long the machine waits before switching to the default mode if no operation has been performed after an operation has finished. You set this time to 0 (instantaneous), or between 3 and 30 seconds.</p> <p> Note <input type="checkbox"/> Default: 10 seconds</p>
06. Panel Off Timer	<p>The panel display automatically turns off a certain time after your job is finished, after the selected time. The time can be set from 10 to 999 seconds, or off.</p> <p> Note <input type="checkbox"/> Default: 60 seconds</p>
07. Energy Saver Level	<p>You can select the Energy Saver level.</p> <p>❖ Power Consumption</p> <ul style="list-style-type: none"> • Level 1: Saving about 30% as compared with Stand-by mode. • Level 2: Saving about 70% as compared with Stand-by mode. <p>❖ Warm-Up Time</p> <ul style="list-style-type: none"> • Level 1: About 10 sec. • Level 2: About 20 sec. <p>* Based on the machine with copy feature only.</p> <p> Note <input type="checkbox"/> Default: Level 1</p>
08. Energy Saver Timer	<p>The machine enters Energy Saver mode automatically after your job is finished, after the selected time. The time can be set from 1 to 240 minutes.</p> <p> Note <input type="checkbox"/> Default: 15 minutes</p>



System Settings ³/₅

Menu	Description
09. Auto Off Timer	<p>The machine turns itself off automatically to conserve energy after your job is finished, after the selected time. This function is called "Auto Off". The time can be set from 1 to 240 minutes.</p> <p> Note</p> <ul style="list-style-type: none"> <input type="checkbox"/> Default: 30 minutes <input type="checkbox"/> Auto Off might not be effective when the machine is in the following conditions: <ul style="list-style-type: none"> • An error message is displayed. • The remaining memory space for facsimile mode is less than 100%. <input type="checkbox"/> To return to the ready condition from Auto Off, the machine requires the same warm-up time as the time for becoming ready after its power is turned on. <input type="checkbox"/> When the machine receives a fax or a printer data in Auto Off mode, it automatically prints the fax or the printer.
10. AOF (Keep It On)	<p> Note</p> <ul style="list-style-type: none"> <input type="checkbox"/> Ask your service representatives about this function.
11. Special Pap. Size	<p>Select the size of the copy paper set in the paper tray.</p> <div style="border: 1px solid black; padding: 10px; margin: 10px 0;">  </div> <p style="text-align: right; font-size: small;">SCCSS001.eps</p> <p> Note</p> <ul style="list-style-type: none"> <input type="checkbox"/> If the specified paper size differs from the size of paper actually set in the paper tray, a paper misfeed might occur because the paper size is not detected correctly. <p> Reference</p> <p>See "Changing The Paper Size" in the "Copy Reference".</p>







Menu	Description
12. Pap.Tray Priority (for Copy mode only)	<p>You can select the paper tray which will be selected as a default in the following conditions:</p> <ul style="list-style-type: none">• When the operation switch is turned on.• When System Reset or Auto Reset mode is turned on.• When the 【Clear Modes】 key or 【Energy Saver】 key is pressed.• When the Auto Paper Select mode is not selected. <p> Note</p> <ul style="list-style-type: none"><input type="checkbox"/> Default: <i>Tray 1 (Paper tray)</i><input type="checkbox"/> Tray 2, and Tray 3 are options (Paper tray unit).

System Settings ⁴/₅

Menu	Description
13. Auto Tray Switch (for Copy mode only)	<p>If you load paper of the same size in two or more trays, the machine automatically shifts another tray when the tray in use runs out of paper. You can set or cancel this setting.</p> <p> Note <input type="checkbox"/> Default: <i>Yes</i></p>
14. Output Tray Prio.	<p>You can specify a tray to which documents are delivered for each mode (copy, facsimile and printer) and each tray (paper tray and bypass tray).</p> <p> Note <input type="checkbox"/> Internal Tray 2 is option. <input type="checkbox"/> You can specify a single tray for two or more modes.</p>

Menu	Description
15. Print Priority (setting the multi-accessing function)	<p>Sets the print priority for each mode.</p> <ul style="list-style-type: none"> • “Display” Print priority is given to the mode displayed on the display. • “Copy” Print priority is given to the copy function. • “Fax” Print priority is given to the fax function. • “Interleave” Prints jobs in the order in which they are initiated regardless of mode/function. <p>Different function's print output might be mixed. If you want to avoid such mixing, specify an independent tray for each feature using “Output Tray Prio.”. When using different functions, attaching internal tray 2 allows you to specify an independent tray for each function. If you want to attach one, contact your local dealer.</p> <p> Note</p> <p><input type="checkbox"/> Interrupt printing is disabled functions that have “User Code Manage” set to “Yes”. The machine switches the display after the time specified by “Function switch” and starts printing with the function.</p> <p> Reference</p> <p>⇒ P.6 “Multi-Access”</p> <p>“14. Output Tray Prio.” in ⇒ P.23 “System Settings ⁴/₅”</p> <p>“18. Key Op. Tools” in ⇒ P.25 “System Settings ⁵/₅”</p> <p>“05. Function Reset” in ⇒ P.20 “System Settings ²/₅”</p>
16. Display Contrast	You can adjust the brightness of the panel display.

System Settings ⁵/₅

Menu	Description
17. Paper Status	<p>If the machine has not been used for an extended period of time, e.g. after a long vacation, output may be blurred or toner may be not fused properly. If this happens select “special”. If this does not solve the problem, use new paper.</p> <p> Note <input type="checkbox"/> Default : Normal.</p>
18. Key Op. Tools	<p>Use “Key Op. Tools” to get a breakdown of how many prints/copies the machine has made in copy, printer or fax mode. Also use to set User Codes.</p> <p> Note <input type="checkbox"/> Enter a previously registered key operator code with the [Number] keys.</p> <p> Reference “Key Op. Access”</p>
1. Show/Print Counter	You can check and print the total number and the number of prints made under each function. You can also check and print the number of copies of 11" × 17".
2. Print Counter List	You can print the counter data for all functions.
3. Key Op. Access	<p>Specify whether to employ user codes to restrict copier users and manage the number of copies made.</p> <p> Note <input type="checkbox"/> Default: Off</p>
4. Prog. Key Op. Code	<p>You can register and change the key operator code (up to 8 digits).</p> <p> Note <input type="checkbox"/> Default : Off</p>
5. Restricted Access	<p>You can set for user access limitation for each functions.</p> <p> Note <input type="checkbox"/> Default : Off</p>

INDEX

A

AOF, 21
Auto Off Timer, 21
Auto Tray Switch, 23

C

Clear/Stop key, 15
Copy Count Display, 19
Copy Mode, 1, 2, 9
Cursor keys, 15

D

Display Contrast, 24

E

Energy Saver Level, 20
Energy Saver Timer, 20

F

Facsimile Mode, 1, 2, 3, 11, 12
Function Priority, 19
Function Reset, 20

I

Interrupt Copying, 10

K

key, 15
key Op. Access, 25
key Op. Tools, 25
Keys for User Tools (System Settings), 15

M

Modes, 5
Multi-Access, 6

N

Number keys, 15

O

Output Tray Prio., 23

P

Panel Tone, 19
Panel Display, 15
Panel Off Timer, 20
Paper Status, 25
Pap.Tray Priority, 22
Print Counter List, 25
Print Priority, 24
Prog. key Op. Code, 25

R

Restricted Access, 25

S

Selection keys, 15
Show/Print Counter, 25
Special Pap. Size, 21
System Reset, 19

U

User Tools/Counter key, 15
User Tools (System Settings), 15