





#### Available Options

- Stamp Unit (FAX Stamp Type 450)
- Fax Feature Expander (FAX Feature Expander Type 450)
- 130MB Hard Disk (FAX Feature Expander Type 460)
- 400 dpi Option (FAX 400dpi Option Type 450)
- ISDN Unit (ISDN Option Type 450)
- Handset (Handset Type 450)

#### Supplies

• Marker Ink (Maker Type 30 is recommended for the best performance.)

# NOTICE

## A CAUTION:

Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

Shielded interconnect cables must be employed with this equipment to ensure compliance with the pertinent RF emission limits governing this device.

Although this equipment can use either loop disconnect or DTMF signalling, only the performance of the DTMF signalling is subject to regulatory requirements for correct operation. It is therefore strongly recommended that the equipment is set to use DTMF signalling for access to public or private emergency services. DTMF signalling also provides faster call set up.

Direct (or indirect reflected eye contact with the laser beam may cause serious eye damage. Safety precautions and interlock mechanisms have been designed to prevent any possible laser beam exposure to the operator.

## 🖉 Note

- □ Some illustrations may be slightly different from your machine.
- Certain options may not be available in some countries. For details, please contact your local dealer.

# Volice about the Telephone Consumer Protection Act (Valid in USA only).


The Telephone Consumer Protection Act of 1991 among other things makes it unlawful for any person to send any message via a telephone fax machine unless such message clearly contains in a margin at the top or bottom of each transmitted page or on the first page of the transmission, the date and time it is sent and an identification of the business, other entity, or other individual sending the message and the telephone number of the sending machine or such business, other entity or individual. This information is transmitted with your document by the TTI (Transmit Terminal Identification) feature. The telephone number provided may not be a 900 number or any other number for which charges exceed local or long distance transmission charges. In order for you to meet the requirement, your machine must be programmed by following the instructions in the accompanying Operation Manual. In particular, please refer to the chapter of Installation. Also refer to the TTI (Transmit Terminal Identification) programming procedure to enter the business identification and telephone number of the terminal or business. Do not forget to set the date and time.

Thank you.

• • • • • • • • • • • • • • • • • • •		
---------------------------------------	--	--

## VENERGY SAVING INFORMATION

As an Energy Star Partner, we have determined that this fax model meets Energy Star guidelines for energy efficiency. This product was designed to reduce the environmental impact associated with fax equipment. This is accomplished by means of energy saving features such as Low Power mode. Please see applicable sections of operating instructions for details.

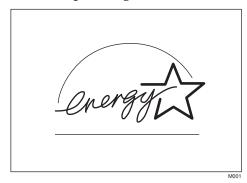

Note to users in the United States of America

## VNotice:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one more of the following measures:

. . . . . . . . . . . . . . . .

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio /TV technician for help.

#### . Warning

.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


. . . . . . . . . . . . . . . .


.

.

.

# **FUNCTION MAP**

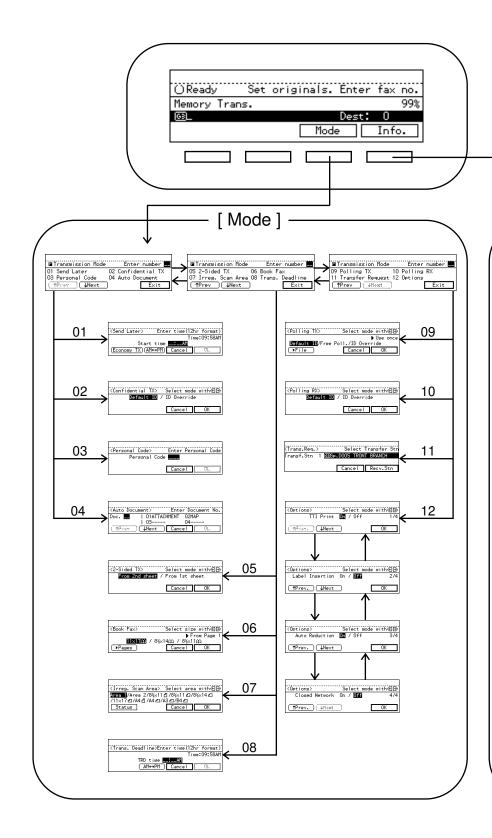

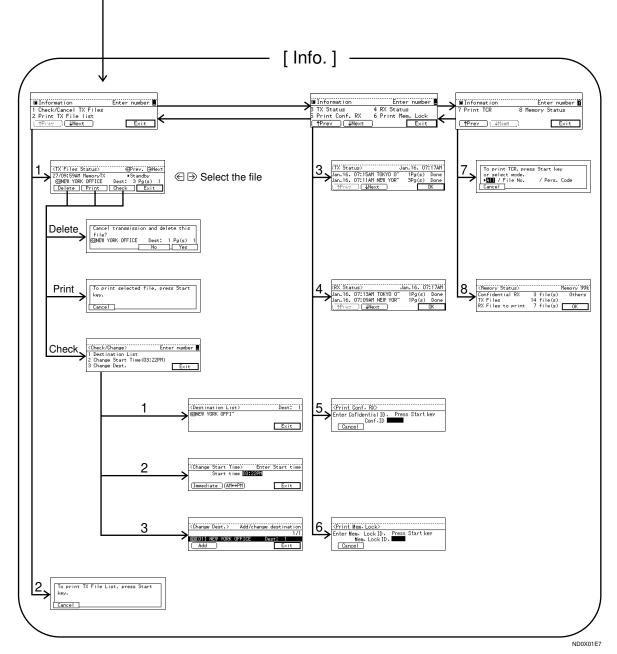

# TABLE OF CONTENTS

## **FUNCTION MAP**

## 1. Getting Started

GUIDE TO COMPONENTS	1
Front View	
Rear View	
OPERATION PANEL	. 4
STARTING THE MACHINE	. 7
Turning On The Power	
Turning Off The Power	8
SWITCHING BETWEEN COPY MODE AND FAX MODE	. 9
READING THE DISPLAY	10
Standby Display	
Communication Display	
Display Prompts	
USEFUL FUNCTIONS	
Automatic Power Reception Function	
Dual Access	
Personal Code Access	
Transmission With Image Rotation	
ACCEPTABLE TYPES OF ORIGINALS	
Acceptable Original Sizes	
Original Sizes Difficult to Detect	
Paper Size and Scanned Area	
HOW TO SET AN ORIGINAL	
Setting a Single Original on the Exposure Glass	
Setting Originals in the Document Feeder (ADF)	
WHERE INCOMING MESSAGE ARE DELIVERED—OUTPUT TRAY	
When the Selected Output Tray Becomes Full	
When the Finisher is Installed	22

## 2. Sending a Fax Message

OVERVIEW	23
Overview	23
MEMORY TRANSMISSION	24
Memory Storage Report	28
Transmission Result Report (Memory Transmission)	29
Communication Failure Report	29
CANCELING A MEMORY TRANSMISSION	30
Canceling a Transmission While the Original Is Being Scanned in	30
Canceling a Transmission While the Message is Being Sent	30

IMMEDIATE TRANSMISSION	
Transmission Result Report (Immediate Transmission)	
On-hook Dial Manual Dial	
CANCELING AN IMMEDIATE TRANSMISSION	
Canceling a Transmission Before You Have Pressed Start Canceling a Transmission After You Have Pressed the Start Key	
SCAN SETTINGS	
Resolution	
Original Type	
Image Density (Contrast)	
Mixing Scan Settings in a Multiple Page Original	
CHANGING LINE TYPE	41
	43
DIALING Number Keys Quick Dials	<b>43</b> 43 46
DIALING Number Keys Quick Dials Speed Dials	<b>43</b> 43 46 47
DIALING Number Keys Quick Dials Speed Dials Groups	<b>43</b> 43 46 47 48
DIALING Number Keys Quick Dials Speed Dials Groups Optional Group Dial	<b>43</b> 46 47 48 49
DIALING Number Keys Quick Dials Speed Dials Groups Optional Group Dial Redial	<b>43</b> 43 46 47 48 49 50
DIALING Number Keys Quick Dials Speed Dials Groups Optional Group Dial Redial TRANSMISSION FEATURES	<b>43</b> 46 47 48 49 50 <b>52</b>
DIALING Number Keys Quick Dials Speed Dials Groups Optional Group Dial Redial TRANSMISSION FEATURES Stamp.	<b>43</b> 46 47 48 49 50 <b>52</b>
DIALING Number Keys Quick Dials Speed Dials Groups Optional Group Dial Redial TRANSMISSION FEATURES	<b>43</b> 46 47 48 49 50 <b>52</b> 52 52
DIALING Number Keys Quick Dials Speed Dials Groups Optional Group Dial Redial TRANSMISSION FEATURES Stamp ID Transmission	<b>43</b> 46 47 48 49 50 <b>52</b> 52 52 53 54

## 3. Receiving a Fax Message

IMMEDIATE RECEPTION	55 56
Substitute Reception	57
Screening messages from anonymous senders	57
SELECTING THE RECEPTION MODE	59
Fax Mode (Auto Reception Mode)	59
Telephone Mode	59
RECEPTION FUNCTIONS	60
Transfer Station	
Transfer Result Report	61
ID Reception	61
F Code (SEP)	61
F Code (PWD)	63
JBIG Reception	63
PRINTING FUNCTIONS	64
Print Completion Beep	64

Checkered Mark	64
Center Mark	64
Reception Time	64
Multi-copy Reception	65
	65
180 Degree Rotation Printing	66
Image Rotation	67
Two In One	67
Page Separation and Length Reduction (not available in some countries)	67
Reverse Order Printing	68
Page Reduction	68
	69
CIL/TID Print	69
When There is No Paper of the Correct Size	69
	72

## 4. Advanced Transmission Features

•	<b>73</b> 73
	73 74
	76
PERSONAL CODE TRANSMISSION	78
SENDING AN AUTO DOCUMENT	80
2-SIDED TRANSMISSION (DOUBLE-SIDED TRANSMISSION)	82
BOOK FAX	<b>84</b> 85
CHOOSING THE AREA TO BE SCANNED YOURSELF (IRREGULAR SCAN AREA)	86
TRANSMISSION DEADLINE (TRD)	88
POLLING TRANSMISSION	
	94
	95 95
TRANSFER REQUEST	96
Specifying an End Receiver	
TRANSMISSION OPTIONS         9           Selecting Transmission Options for a Single Transmission         1	

## 5. Communication Information

CHECKING AND CANCELING TRANSMISSION FILES	103
Canceling a Transmission	103

Printing a File Checking and Editing a File	
PRINTING A LIST OF FILES IN MEMORY (PRINT TX FILE LIST)	
CHECKING THE TRANSMISSION RESULT (TX STATUS)	110
CHECKING THE RECEPTION RESULT (RX STATUS)	111
PRINTING A CONFIDENTIAL MESSAGE	
Confidential File Report	113
PRINTING A FILE RECEIVED WITH MEMORY LOCK	114
PRINTING THE TCR	116
DISPLAYING THE MEMORY STATUS	117

## 6. Troubleshooting

WHEN TONER RUNS OUT	119
ERROR MESSAGES AND THEIR MEANINGS	120
SOLVING PROBLEMS	121
INDICATORS	123
When the Receive File Indicator is Lit or Flashing	123
When the <b>Confidential File</b> Indicator is Lit	124
When the [Fax] key is Lit in Red	124
WHEN AN ERROR REPORT IS PRINTED	125
WHEN POWER IS TURNED OFF OR FAILS	126

## 7. Facsimile User Tools

ACCESSING THE USER TOOLS	
REGISTER/DELETE MENU	
Registering Quick Dials	
	131
Quick Dial Key and Function Key Label (Dial label)	132
	135
	137
Registering Optional Groups	139
Deleting Optional Groups	142
Registering Speed Dials	143
	145
Storing Keystroke Programs	147
Deleting a Keystroke Program	150
Registering Auto Documents	151
Deleting an Auto Document	153
Registering Irregular Area	154
Deleting an Irregular Area	156
REPORTS/LISTS	158

INITIAL SETUP TX	159
INITIAL SETUP RX	161
To set the Bypass Paper Size	162
ASSIGNING USER FUNCTION KEYS	164
Storing/Editing the Contents of a User Function Key Using a User Function	
KEY OPERATOR SETTINGS	166
Personal Codes	
ЕСМ	
Memory Lock	
Multistep Transfer	
Special Senders to Treat Differently (Special RX Nos.)	
Authorized Reception	
Monitor Volume	
Registering The Economy Transmission Time	
ID Code G3 Analog Line	
G3 Digital Line	
G4 Digital Line	
Changing the User Parameters	
Date/Time	
Summer Time	
Counters	
Auto Reset Paper Feed Selection	
RDS (Remote Diagnostic System)	

## 8. Entering Text

ENTERING AND MODIFYING TEXT	213
Available Characters	213
Keys	213
How To Enter Text	214

## 9. Maintaining Your Machine

CONNECTING THE MACHINE TO A TELEPHONE LINE AND TELEPHONE	217
Connecting The Telephone Line	217
Connecting The Machine To The ISDN	218
Connecting The Optional External Telephone	218
Selecting The Line Type	219
REPLACING THE STAMP CARTRIDGE	220
Stamp Cover Layout	221

## 10.Appendix


OPTIONAL EQUIPMENT	223
Fax Feature Expander and Hard Disk	223
400 dpi High Resolution Option (FAX 400dpi Option Type 450)	
ISDN Unit (ISDN Option Type 450)	224
Stamp (FAX STAMP TYPE 450)	
Duplex Unit (AD340)	224
SPECIFICATIONS	225
FUNCTION LIST	226
Advanced Transmission Features	226
Communication Information	228
User Tools	229
INDEX	234

This page is intentionally blank.

# 1. Getting Started

# **GUIDE TO COMPONENTS**

## **Front View**

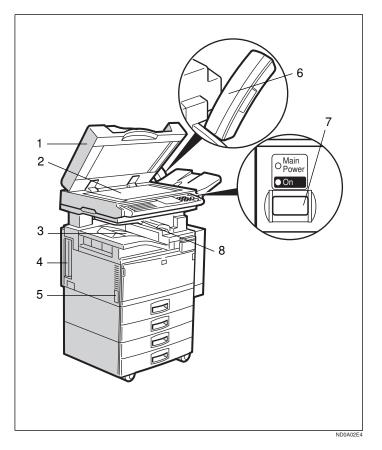

# **1.** Document Feeder (ADF) / Platen Cover

This holds up to 50 sheets which are fed at a time. Place the document face up here. Close this platen cover when you set a document on the Exposure Glass.

## 2. Exposure Glass

Place the original aligning its upper left corner with the reference mark at the upper left corner of the exposure glass.

## **3.** Internal Tray

Usually received fax messages are printed to the Internal Tray. Other tray can also be selected for other prints or copies. See "Changing the Machine's Settings" of the System Settings.

#### **4. ISDN** Line connector $\Rightarrow$ P.218 "Connecting The Machine To The IS-DN"

#### 5. Main Power Switch

Do not touch this switch. This switch is used only by a service representative.

## Note 🖉

- If the Operation switch is on and there is still no power, turn on the Main Power switch.
- If you leave the Main Power off for more than about an hour, all files in memory are lost.

## **Rear View**

#### 6. Optional Handset


This permits voice communication.

### 7. Operation Switch

Press this switch to turn the power on (the **On** indicator lights up). To turn the power off, press this switch again (the **On** indicator goes off). $\Rightarrow$  P.7 "Turning On The Power", P.12 "Automatic Power Reception Function", P.126 "WHEN POWER IS TURNED OFF OR FAILS"

#### 8. Optional Upper Tray

This tray can also be selected for other prints or copies.

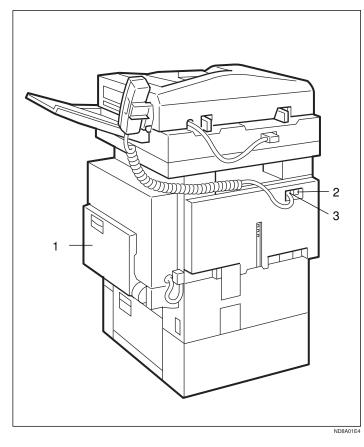

#### **1.** Bypass Tray

Select this tray to use non-standard size paper.


See P.18 *"HOW TO SET AN ORIGINAL"* in the Copy Reference.

2. Analog Line Connector

# **3.** Optional Handset/External Telephone connector

1

## **OPERATION PANEL**

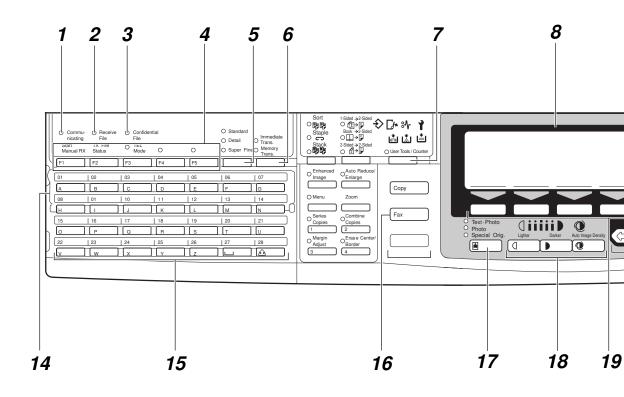

#### **1.** Communicating Indicator

Lights during transmission or reception.

#### 2. Receive File Indicator

Lights to tell you a message has been received into memory. Blinks when a Memory Lock file has been stored in memory. Note that this indicator does not inform you of a Confidential reception.

#### 3. Confidential File Indicator


Lights when a message has been received into memory with Confidential Reception.  $\Rightarrow$  P.112 "*PRINTING A CONFIDEN-TIAL MESSAGE*"

#### **4.** User Function keys

Each of these can be programmed for rapid access to frequently used features.

Features Programmed by Default

Key	Standard	With ISDN or stamp options
F1	Start Manual RX	$\leftarrow$
F2	Transmission Result Display	$\leftarrow$
F3	TEL Mode	$\leftarrow$
F4	-	ISDN selection
F5	-	Stamp

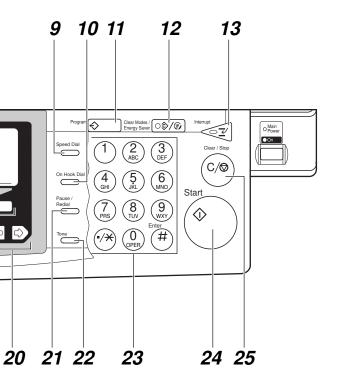

ND2A10E2

#### **5.** Resolution key

Press to switch between **Standard**, **Detail** and **Super Fine** (optional 400dpi Option required).

#### **6.** Transmission Mode key

Press the key to toggle between Memory Transmission (**Memory Trans.**) and Immediate Transmission (**Immediate Trans.**) modes.

## 7. [User Tools/Counter] key

Press to enter User Tools mode. These tools allow you to customize the default settings.

## 8. LCD display

This guides you through tasks and informs you of the machine status. Messages appear here.

#### 9. [Speed Dial] key

Press to select a Speed Dial.

## 10. [On Hook Dial] key

Use for making a phone call from the keypad. You do not have to lift the hand-set.

## 11. [Program] key

This key is used in Copier mode.

#### 12. [Clear Modes/Energy Saver] key

Energy saver:

Hold down for more than a second to enter energy saving mode.

Clear Modes:

Cancels the current setting and returns to standby with a single keystroke.

## 13. [Interrupt] key

Interrupts the current fax operation to start copying.

#### 14. Quick Dial Flip Plate

Flip this plate down to access Quick Dial keys 01 through 28, flip up to access keys 29 through 56.

### 15. Quick Dial keys

Use to dial numbers at a single touch or to enter letters and symbols. Also use for Group Dial, Keystroke and Program features.

## 16. [Fax] key

Press to switch to fax mode. It lights in red if the optional Facsimile unit has problem, there is a communication error or there is no paper in the cassette  $\Rightarrow$  P.124 "When the {Fax} key is Lit in Red"

## 17. [Original Type] key

Use when sending a halftone image such as a photograph or a color original.

# 18. [Lighter] and [Darker] keys and [Auto Image Density] key

Press this key to adjust the density.

## 19. [Selection] keys

Press the key under the item you wish to select.

## 20. 🖻 keys

Press to move the cursor or select functions

## 21. [Pause/Redial] key

Pause:

Inserts a pause when you are dialing or storing a fax number. A pause cannot be inserted as the first digit.

Redial:

Press to redial one of the last ten numbers.

## 22. [Tone] key

Press to send tonal signals down a pulse dialing line.

## 23. Number keys

Use to dial fax numbers or enter the number of copies.

## 24. [Start] key

Press to start all tasks.

## 25. [Clear/Stop] key

Clear:

Deletes one character or digit

Stop:

Interrupts the current operation (transmission, scanning, copying or printing).

# **STARTING THE MACHINE**

To start the machine, turn on the operation switch.

## 🖉 Note

This machine automatically enters Energy Saver mode or turns itself off if you do not use the machine for a while. See "09. Energy Saver Mode", "10. Auto Off Timer" of the System Settings.

Ö Powar switchos

## Power switches

This machine has two power switches: See P.1 *"GUIDE TO COMPO-NENTS"* 

#### Operation switch

Turn on this switch to activate the machine. When the machine has warmed up, you can make copies or send faxes.

#### Main power switch

Do not touch the main power switch. It should be used only by a service representative when the optional fax unit is installed.

## ∰Important

□ If you leave the main power switch off for more than one hour, all files in memory are lost. See "Turning Off The Power" below.


. . . . . . . . . . . . . . . . .

Turning On The Power

Make sure that the power cord is plugged into the wall outlet firmly and Main Power Switch is on.

# **2** Turn on the operation switch to make the On indicator light up.

The panel display will come on.

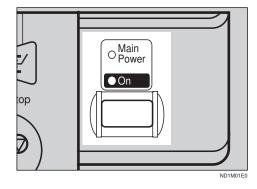


OReady Set	originals. Enter fax no.
Memory Trans.	100%
<u>63</u>	Dest: O
	Mode Info.

## 🖉 Note

- □ If nothing happens when you turn on the operation switch, check if the main power switch is turned on.
- During the warm-up period, you can use the Auto Start function. See "10. Auto Start" of the Copy Reference.
- □ Warming-up time is as follows.
  - 35 copy per minute model : less than 85 seconds
  - 45 copy per minute model : less than 100 seconds

## **Turning Off The Power**

**1** Turn off the operation switch to make the On indicator go off.

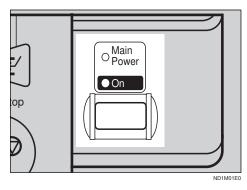


## ∰Important

- Before you unplug the power cord, make sure that the remaining memory space indicates 100 % on the display for facsimile mode.
- □ Files stored in memory will be lost an hour after you turn the main power switch off or you unplug the power cord. ⇒ P.126 "WHEN POWER IS TURNED OFF OR FAILS"

# SWITCHING BETWEEN COPY MODE AND FAX MODE

You can use this machine both as a fax machine and a copier. Ordinarily when you turn on the power switch, the Copy screen is shown and you are ready to make copies. When you wish to use fax functions, press the **[Fax]** key on the left of the operation panel.

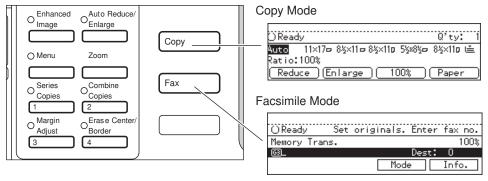

ND0X02E0

1

## Limitation

□ You cannot switch modes under the following circumstances:

- While scanning in a fax
- During Immediate Transmission
- While editing the System Settings
- During Interrupt Copying
- While using On-hook Dial

## **READING THE DISPLAY**

The display tells you the machine status and guides you through operations.

## Note 🖉

- □ Functions that have been selected are hilighted as shown (<u>11×17</u>Ω). Keys that you can not select are shown with a dashed outline ((<u>↑ Prev</u>)).
- All procedures in this manual assume you are in Fax mode. By default, when you turn the machine on it is in Copy mode. Press the [Fax] key change to Fax mode. You can have the machine start in Fax mode. See "Changing the Machine's Settings" of the System Settings.

## **Standby Display**

While the machine is in the standby mode (immediately after it is turned on or after the **[Clear Modes/Energy Saver]** key is pressed), the following display is shown.

#### Memory Transmission

()Ready Set	originals. Enter fax no.
Memory Trans.	100%
<u>[63]</u>	Dest: O
	Mode Info.

#### Immediate Transmission

OReady	Set	originals.	Enter	fax no.
Immediate	TΧ			100%
<u>[63]</u>			Dest:	0
		Mod	e	Info.

## 🖉 Note

- □ To return the machine to standby mode, perform one of the following:
  - If you have set an original and are in the sending process, remove the original.
  - If you have not set an original and are in the sending process, press the **[Clear modes/Energy saver]** key.
  - If you are in User Tools mode, press the **[User Tools]** key.

## **Communication Display**

While the machine is communicating the status is displayed.

Display during Memory Transmission or Memory Reception:

PARIS BRANCH	A4 → A4 P001/P003
OReady Set	ori≋inals. Enter fax no.
Memory Trans.	100%
63	Dest: O
	Mode Info.

## 🖉 Note

Even when the machine is sending or receiving a fax message from/ into memory, you can still scan the next original into memory.  $\Rightarrow$  P.12 "Dual Access"

## Immediate Transmission:

Transmittins Pase 0 100% @3471319266 \*Press Stop key to cancel TX


## **Display Prompts**

Depending on the situation, the machine will show various prompts on the display.

#### Instructions and Requests

<send later=""></send>	Enter time(12hr format)
	Time:09:58AM
Start	time:AM
(Economy TX) (AM-	↔PM) Cancel ( )

#### Questions

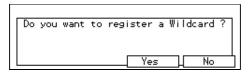

#### Selections

<book fax=""></book>	Select size with∈⊖
	▶ From Page 1
11×17m	/ 8½×14ጪ / 8½×11ጪ
●Pages	Cancel OK

## Status

	Dial	ing
Dialing	Page	Ö
	1	00%
๎๎©©CO1] NEW YORK OFFICE		
*Press Stop key to cancel	TΧ	
*Press Stop key to cancel	IX	

# **USEFUL FUNCTIONS**

# Automatic Power Reception Function

This machine can be set to shut down automatically if nobody has used the machine for a while. In these situations even through the operation switch is off, the machine can still receive incoming messages as long as the Main Power switch is on.

## ∰Important

Reception is not possible if both the operation switch and Main Power switch are turned off.

## Note

By default, messages are printed as soon as they are received (Immediate Reception). To change this, see P.203 "Changing the User Parameters"

## **Dual Access**

The machine can scan other messages into memory even while sending a fax message from memory, receiving a message into memory, or automatically printing a report. Since the machine starts sending the second message immediately after the current transmission terminates, the line will be used efficiently.

Note that during Immediate Transmission or when in User Tools mode, the machine cannot scan an original.

## Personal Code Access

The machine can be set up so that nobody can use it without entering a personal code. This prevents unauthorized people from sending fax messages and can be used to track Fax machine use by giving a personal code to each user.

## 🔗 Note

- □ Register personal codes and turn Personal Code Access on. The default setting is off. ⇒ P.166 "Registering Personal Codes", P.169 "Personal Code Access"
- Even if Restricted Access is enabled, the machine can receive and print a fax message.
- If Personal Code Access is turned on, the display is shown as following:

<Fax> Personal Code Access.
Please enter your Personal Code.
Personal Code:

**2** Enter a personal code (4-digit number) using the number keys.

<Fax> Personal Code Access. Please enter your Personal Code. Personal Code: **1822** 

## 🖉 Note

□ If a user enters a personal code that is not registered, the machine returns to step 1.

# Transmission With Image Rotation

For most purposes, set A4/LT originals in the lengthwise direction ( $\square$ ). If you set an A4/LT original in the sideways direction ( $\square$ ), the image

1

will be sent rotated by 90°. Providing the receiver has A4/LT lengthwise paper ( $\square$ ), the message will be printed the same size as the original.

## Limitation

- The Quick Memory Transmission feature is not available when using this feature.
- When Image Rotation is used, all messages are sent by normal Memory Transmission.

# **ACCEPTABLE TYPES OF ORIGINALS**

Make sure your originals are completely dry before setting them in the machine. Originals containing wet ink or correcting fluid will mark the exposure glass and resulting image will be affected.

## **Acceptable Original Sizes**

Where original is set	Acceptable original size	Maximum number of sheets	Paper thickness
Exposure glass	Maximum A3 (297 × 420 mm), 11" × 17" (279 × 432 mm)	1	
Document Feeder (ADF) Single Sided Document	Fax transmission: A5 $\square$ to A3 $\square$ (up to 432mm long) 8"×5 <sup>1</sup> / <sub>2</sub> " $\square$ to 11" × 17" (DLT) $\square$	50	52 - 128 g/m <sup>2</sup> (14 - 34lb in inch version)
Document Feeder (ADF) Double-Sid- ed Document	Fax transmission: A5 $\square$ to A3 $\square$ (up to 432mm long) 8"×5 <sup>1</sup> / <sub>2</sub> " $\square$ to 11" × 17" (DLT) $\square$	50	52 - 105 g/m <sup>2</sup> (14 - 28lb in inch version)

## Limitation

 $\Box$  When using 2–sided transmission, A5  $\Box$  and HLT  $\Box$  cannot be available.

## Originals Unsuitable for the Document Feeder (ADF)

Do not set the following types of originals in the Document Feeder (ADF) because they may be damaged. Place them on the exposure glass instead.

- Originals of sizes other than those specified in the previous table
- Originals containing staples or clips
- Perforated or torn originals
- Curled, folded, or creased originals
- Pasted originals
- Originals with any kind of coating, such as thermosensitive paper, art paper, aluminum foil, carbon paper, or conductive paper
- Originals with indexes, tags, or other projecting parts
- Sticky originals such as translucent paper
- Thin and soft originals
- Originals of inappropriate weight (see table above)

- Originals in bound form, such as books
- Transparent originals such as OHP transparencies or translucent paper

## **Original Sizes Difficult to Detect**

The machine finds it difficult to detect the size of the following kinds of originals. If this happens, the receiving machine may not select print paper of the correct size.  $\Rightarrow$  P.17 "*If the Machine Cannot Detect the Size of Your Original*"

- Document size other than the following (set on the exposure glass).
- Originals with indexes, tags, or projecting parts
- Transparent originals such as OHP transparencies or translucent paper
- Dark originals with many characters or drawings
- Originals which partially contain solid printing
- Originals which have solid printing at their edges

The following paper sizes are automatically detected in Fax mode.

#### Inch Version


Paper size	Exposure glass	Document Feeder (ADF)	
Where original is placed			
11"×17" 🗗	0	0	
8 <sup>1</sup> / <sub>2</sub> "×14"□	0	0	
8 <sup>1</sup> / <sub>2</sub> "×11" <b>□ □</b>	0	0	
$5^{1}/_{2}$ " × $8^{1}/_{2}$ " $\Box$	×	0	
$10" \times 14" \square$	0	0	
8 <sup>1</sup> / <sub>2</sub> "×13" <b>□</b>	0	0	
8 × 10"	0	0	

## Limitation


□ A5 and HLT sizes are not available for 2-sided Transmission.

## Paper Size and Scanned Area

#### Exposure glass

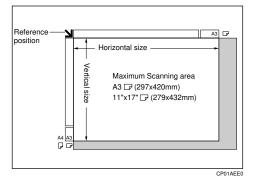

## Document Feeder (ADF)

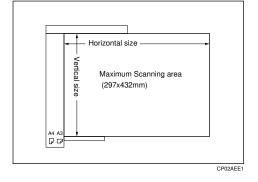

## Limitation

- □ There may be a difference in the size of the image when it is printed at the destination.
- □ If you set an original larger than DLT/A3 on the exposure glass, only the DLT/A3 area is scanned.

## 🖉 Note

- Even if an original is correctly placed on the exposure glass or in the Document Feeder (ADF), a margin of 3 mm around each edge of the original may not be sent.
- □ If the receiver uses paper narrower than the original, the image will be reduced to fit the paper width.  $\Rightarrow$  P.99 "*Auto Reduction*"
- □ The machine detects paper sizes in the following ways.
  - When you set an original in the Document Feeder (ADF), an original wider than about 7.48" is scanned as LT/LG size wide. An original wider than about 10.37" is scanned as DLT size. Originals narrower than 9.05" will be sent as LT/LG size. You can scan in originals of up to 17" in length.

• When you set an original on the exposure glass, an original narrower than about 9.25" is scanned as LT/LG size wide. An original wider than 10.83" is scanned as DLT size wide. Normally, lengths up to a maximum of 17" can be scanned (this figure varies slightly depending on the type of original). If you select Irregular Scan Area, lengths up to 17" are possible.

	Length				
width		~"9.80	"9.80~"10.79	"10.79~"12.44	"12.44~
	~''9.57	not detected	LTD	LTD	LG₽
	"10.55~	LT 🔽	DLT	DLT	DLT

. . . . . . . . . . . . . . .


## 🖗 Maximum Scan Area

Memory Transmission/Immediate Transmission

- From the Document Feeder (ADF):  $297 \times 432 \text{ mm} (W \times L)$
- From the exposure glass :  $297 \times 432 \text{ mm} (W \times L)$

#### If the Machine Cannot Detect the Size of Your Original

If the machine cannot detect the original size, the following display is shown:

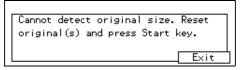

If this happens, carry out the following steps.

Remove the original and replace it on the exposure glass. Press the [Start] key to scan the original again. If the machine still cannot detect the original size, the following display is shown:



**2** Press the **•** and **•** keys to switch the scan size and press the **[Start]** key again.

# HOW TO SET AN ORIGINAL

In this manual an original can mean a single or multiple page document. You can set your originals either in the Document Feeder (ADF) or on the exposure glass. Some types of originals are unsuitable for the Document Feeder (ADF) so they must be set on the exposure glass.  $\Rightarrow$  P.14 "ACCEPTABLE TYPES OF ORIG-INALS"

Which way you place your original depends on its size and whether you are using the Document Feeder (ADF) or the exposure glass.

## Limitation

□ If you set A5 size documents on the exposure glass, they will not be detected.


## 🔗 Note

When sending a fax, the image output at the other end depends on the size and direction of paper used in the receiver's terminal. If the receiver does not use paper of the same size and direction as that of the original, the fax image may be output reduced, trimmed at the both edges, or divided into two or more sheets. When sending an important original, we recommend you to ask the receiver about the size and direction of the paper used in their terminal.


□ When sending an original of an irregular (i.e. non-standard) size or part of a large original, you can specify the scan area precisely. ⇒ P.86 "CHOOSING THE AREA TO BE SCANNED YOURSELF (IRREGULAR SCAN AREA)"

- You can scan non-standard sized documents as standard sized documents with the Irregular Scan Area feature. When you turn on this feature, the area scanned will be in the specified range regardless of the actual document size. A blank margin will appear or the image will be truncated at the receiving end.
- Make sure that all ink, correcting fluid etc., has completely dried before setting your original. If it is still wet, the contact glass will be marked and those marks will appear on the received image.
- □ If you set an A4 size original in the sideways direction, the machine rotates the image by 90 degrees before sending it. ⇒ P.12 "Transmission With Image Rotation"

We have to set A4, B4, A3, LT, LG and DLT size originals

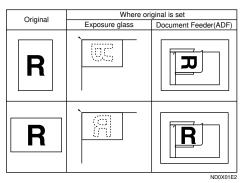

## 🔆 How to set A4, A5 and B5 size originals

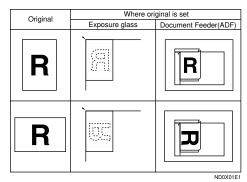

## Limitation


□ A5 size on the exposure glass is not detected.

# Setting a Single Original on the Exposure Glass

. . . . . . . . . . .

Set originals that cannot be placed in the Document Feeder (ADF) such as a book on the exposure glass one page at a time.

Lift the Document Feeder (ADF) by at least 30 degrees. Place the original face down and align its upper left corner with the reference mark at the upper left corner of the exposure glass.

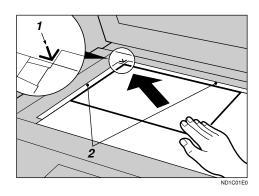

- 1. Reference mark
- 2. Scale

## 🖉 Note

1

If you do not raise the Document Feeder (ADF) by at least 30 degrees, the original size will not be detected.

**2** Close the Document Feeder (ADF).

## 🖉 Note

When sending a bound original, the received image may contain some black areas. To reduce this effect, hold down the original to prevent its bound part from rising.

## Bound Original Page Order

When sending bound originals (books, magazines, etc.), you can choose to have either the left page or right page sent first.

#### 🖉 Note

□ The default setting is Send Left Page First. ⇒ P.203 "Changing the User Parameters"

• • • • • • • • • • • • • • • • •


## Setting Originals in the Document Feeder (ADF)

Use the Document Feeder (ADF) to scan in a stack of originals in one operation. The Document Feeder (ADF) can handle both single-sided and double-sided originals.

#### Limitation

- Place all the originals to be sent in a single stack.
- You cannot set originals in the Document Feeder (ADF) one page at a time or in sheaves.

- Do not open the Document Feeder (ADF) while it is scanning the originals. Otherwise, document will be jammed.
- You cannot scan the original using the Document Feeder (ADF), Scanning is not possible if there are any documents left on the exposure glass. Remove any remaining documents from the exposure glass before you begin.

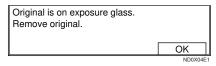


## 🖉 Note

- If an original jams, press the [Clear/ Stop] key then remove the original carefully.
- □ If your original is bent or folded, flatten it before you set it.
- □ Set thin originals on the exposure glass.

## Reference

For information about the sizes and number of originals that can be placed in the Document Feeder (ADF), see P.14 "ACCEPTABLE TYPES OF ORIGINALS". Adjust the original guide to match the size of your originals. Align the edge of your originals and stack them in the Document Feeder (ADF) face up.

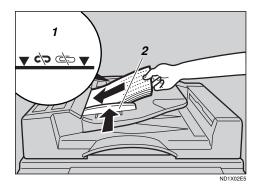

- 1. Limit mark
- 2. Document guide

## Scanning In Mixed Sized Originals

If you wish to scan in stacks of originals containing mixed paper sizes from Document Feeder (ADF), you can have the machine automatically detect the size of each original.


## 🖉 Note

- □ By default this feature is turned off. To turn it on, adjust the User Parameters. ⇒ P.203 "Changing the User Parameters"
- Scanning may take slightly longer when this function is turned on.
- Small originals may be sent at a slight slant if they are not stacked flush against the Document Feeder (ADF) document guides.
- If you try and set a stack of mixed size originals in the Document

Feeder (ADF) with this function turned off, a paper jam may occur.

## Destination Tray for Originals Scanned From the Document Feeder (ADF)

You can have originals scanned in from the Document Feeder (ADF) either delivered to the Document Feeder Tray, or the External Tray.

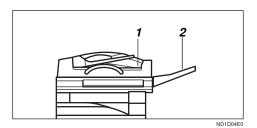

- 1. ADF tray
- 2. ADF external tray

## 🖉 Note

- If you select the ADF external tray, you cannot use the Stamp feature.
- To choose which tray is used, edit the Output Tray setting in the System Settings. See "USER TOOLS" of the System Settings.

. . . . . . . . . . . . . . . .

1

# WHERE INCOMING MESSAGE ARE DELIVERED—OUTPUT TRAY

To change where incoming messages are delivered, adjust the Output Tray setting in the System Settings.

## When the Selected Output Tray Becomes Full

If you install the optional Finisher, the machine automatically detects when the selected Output Tray becomes full. When this happens, a warning will appear on the display and the message will be received using Substitute Reception. Messages received this way will be automatically printed as soon as you empty the Output Tray.

## When the Finisher is Installed

You can use the Finisher for large capacity paper delivery and sort delivery.

#### Limitation

- □ When the optional 3000-sheet Finisher is installed and you set the Output Tray to Internal Tray, received messages longer than 12.9" (330mm) are delivered to the Finisher Proof Tray. For example, if the first page sent is 8.5" × 11" □/ A4□ and the following pages are 11" × 17" □/A3□, the first page will be delivered to the Internal Tray and the following pages to the Finisher Proof Tray.
- If you have selected the optional 1000-sheet Finisher as the Output Tray and a copy document longer than 13.3" (340mm) is left in the

Finisher, incoming messages are automatically delivered to the Internal Tray.

#### 🖉 Note

If you receive messages larger than 12.9" (330mm) on a regular basis, we recommend that you choose an Output Tray setting other than Internal Tray.

# 2. Sending a Fax Message

## **OVERVIEW**

## Overview

The basic procedure to send a fax message is:

- ① Make sure the Fax indicator is lit
- Set your original
- ③ Dial the number
- ④ Press [Start]

The rest of this section describes these steps and the various features that are available in more detail.

There are two ways to send a fax message:

- Memory Transmission
- Immediate Transmission

Check the indicators on the operation panel to check which mode is currently active and press the Transmission Mode key to toggle between them.

## MEMORY TRANSMISSION

In Memory Transmission mode, after you press the **[Start]** key, the machine doesn't dial the destination until all pages of your fax message have scanned into memory (in contrast with Immediate Transmission, where the number is dialed first and pages are scanned and sent one by one).

Memory Transmission is useful because:

- You can take your original away from the machine without having to wait too long
- While your message is being sent, other people can operate the machine
- You can send the same message to more than one place in a single operation (Broadcasting)

#### ∰Important

□ If there is a power failure (main power switch is off) or the plug is pulled out for more than 1 hour, all the files stored in memory are deleted. As soon as power is restored, the Power Failure Report is printed to help you identify deleted files. If you turn just the operation switch off, files are not deleted. ⇒ P.126 *"WHEN POWER IS TURNED OFF OR FAILS"* 

#### Limitation

□ If memory is full (0% appears on the display), Memory Transmission is disabled. Use Immediate Transmission instead.

#### 🖉 Note

□ Maximum number of Memory Transmission files: 200

- Maximum number of destinations per Memory Transmission: 200
- □ Combined total number of destinations that can be stored: 500
- The number of pages that you can store in memory depends on the original images and the scan settings. You can store up to 160 standard pages (ITU-T No.1 chart, Resolution: Standard, photo mode: OFF).
- □ As default, the machine will return to the default transmission mode (Memory Transmission) after every transmission. You can change this so that the current mode is maintained. ⇒ P.203 "Changing the User Parameters"
- You can expand the amount of memory available for storing documents by installing either of the following options:
  - With optional Fax Feature Expander: Up to about 480 pages
  - With optional Fax Feature Expander and the Hard Disk: Up to about 3000 pages
- **1** Make sure that the Memory Transmission indicator is lit.



If it isn't, press the **[Transmission Mode]** key.

**2** Set the original.

#### Limitation

□ You can send the first pages from the exposure glass then

the remaining pages from the Document Feeder (ADF). After you place the last page on the exposure glass, you have 60 seconds to insert the remaining pages in the Document Feeder (ADF).

- Note that you cannot set pages on the exposure glass after you have started using the Document Feeder (ADF).
- □ Do not open the Document Feeder (ADF) while it is scanning in originals.

#### 🖉 Note

- Place the original you want to store in memory on the exposure glass or the Document Feeder (ADF). To store multiple page originals from the exposure glass, set them page by page.
- □ You can scan half the pages of your original from the exposure glass and the remainder from the Document Feeder (ADF). When you have finished scanning from the exposure glass, place the rest of the pages in the Document Feeder (ADF) and press[Start].
- The original can be placed at any time up until you press the [Start] key.

#### P Reference

P.18 "HOW TO SET AN ORIGI-NAL"

- **E** Select any scan settings you require.  $\Rightarrow$  P.37 "SCAN SETTINGS"
- 4 Dial. If you wish to send the same message to more than one destination, press [Add] and dial anoth-

er destination. Repeat this step for all destinations.

OReady Set	originals. Enter fax no.
Memory Trans.	100%
63	Dest: O
	Mode Info.

If you make a mistake, press the **[Clear/Stop]** key and enter the correct number again.


#### 🖉 Note

- When dialing with the number keys or using Chain Dial (P.46 "Chain Dial"), you can select the line type (G3 or G4) before pressing [Add] in step 4.
- □ If you do not set an original within 30 seconds of entering a destination fax number, the transmission is cancelled.

#### 

P.43 "DIALING"

## **5** Press the **[Start]** key.

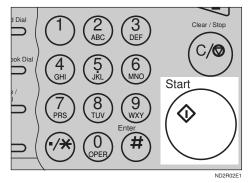

The machine starts scanning the original.

The machine calls the destination. The name or fax number which is programmed as the RTI or CSI in the other end is shown on the display.

PARIS BRANCH	A4→A4 P001/P003
OReady Set	orisinals. Enter fax no.
Memory Trans.	100%
63	Dest: O
	Mode Info.

#### Reference

P.193 "RTI/TTI"

After transmission, the machine will return to standby mode.

OReady Se	t originals.	Fotor	fay po
Memory Trans.	c originals.	Lincer	100%
<u>63</u> _		Dest:	0
	Mode		Info.

#### Checking the Transmission Result

Turn the Transmission Result Report on if you want a report to be printed after every successful transmission. ⇒ P.24 "MEMORY TRANSMISSION"

If you leave the Transmission Result Report off, the report will not be printed after every transmission. However, should a transmission fail, a Communication Failure Report will be printed instead.

- If you turn the Transmission Result Report (Memory Transmission) off, the Error Report will be printed when the communication on fails.
- You can also check the transmission result by examining the TCR.
   ⇒ P.116 "PRINTING THE TCR"
   You can either print or scroll through the TCR on the display. ⇒
   P.110 "CHECKING THE TRANSMISSION RESULT (TX STATUS)"

. . . . . . . . . . . . . . . . . .

č Sendina a Fax Message

#### Sending a Fax Message Immediately

To send a fax message immediately, use Immediate Transmission. If you have just set up an original for broadcasting, Immediate Transmission will interrupt the current communication.

If there are files queued in addition to the file being currently sent, your original is not be sent until the queued files have been sent.

### 🎖 Automatic Redial

If a fax message could not be transmitted because the line was busy or an error occurred during transmission, redialing is done 4 times at 5 minutes intervals (these figures vary according to which country you are in).

If redialing fails after four redials, the machine cancels the transmission and prints the Transmission Result Report or Communication Failure Report.  $\Rightarrow$  P.29 "Transmission Result Report (Memory Transmission)", P.29 "Communication Failure Report", P.126 "WHEN POWER IS TURNED OFF OR FAILS"

#### Sequence Sequence

If you dial several destinations for the same message (Broadcasting) the messages are sent in the order in which they were dialed. If the fax message could not be transmitted, the machine redials that destination after the last destination specified for Broadcasting. For example, if you specify four destinations A through D for broadcasting, and if the lines to destinations A and C are busy, the machine dials the destinations in the following order: A, B, C, D, A, and C.


Great Broadcasting: Checking Progress

To check which destinations the fax message has been sent to so far, print the TX file list.  $\Rightarrow$  P.109 "PRINTING A LIST OF FILES IN MEMORY (PRINT TX FILE LIST)"

#### If Memory Runs Out While Storing an Original

If you run out of memory while storing an original (free space reaches 0%), "Memory full" is displayed.

Press Exit to transmit the stored pages only.

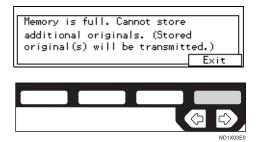

#### 🖉 Note

By default, successfully scanned pages are sent. If you wish to change this setting, please contact your service representative.

. . . . . . . . . . . . . . . . . .

🖗 Batch Transmission

If you send a fax message by Memory Transmission and there is another fax message waiting in memory to be sent to the same destination, that message is sent along with your original. Several fax messages can be sent with a single call, thus eliminating the need for several separate calls. This helps save communication costs and reduce transmission time.

Fax messages for which the transmission time has been set in advance are sent by batch transmission when that time is reached.

#### 🖉 Note

□ By default Batch Transmission is switched on. You can switch it on or off with the User Parameters. ⇒ P.203 "Changing the User Parameters"

## **WECM (Error Correction Mode)**

This feature automatically resends data that wasn't transmitted successfully using a system that complies with international standards.

ECM requires that the destination machine has the same feature.

#### 🖉 Note

□ By default ECM is switched on. You can change this with the Key Operator Settings. ⇒ P.166 "KEY OPERATOR SETTINGS"

27

### Parallel Memory Transmission

This function dials while the original is being scanned. Standard Memory Transmission stores the original in memory, then dials the destination. Parallel Memory Transmission allows you to quickly determine whether a connection was made. In addition, this function scans the original faster than Immediate Transmission and is useful when you are in a hurry and need to use the original for another purpose.

#### Note 🖉

□ By default this feature is turned on. You can change this with the User Parameters. ⇒ P.203 "Changing the User Parameters"

#### Limitation

- Standard Memory Transmission is used instead of Parallel Memory Transmission in the following cases.
  - When the line is busy and could not be connected to
  - With Send Later
  - With Transfer Request
  - With 2-Sided Transmission
  - When you store an original for Memory Transmission while another communication is in progress
  - When two or more destinations are specified
  - When you send just an Auto Document
  - When the original is set on the exposure glass
  - With the image rotation

- □ If you press the **[Clear/Stop]** key, the original jams, or memory becomes full during Parallel Memory Transmission, the machine stops transmitting and prints the Transmission Result Report (Memory Transmission). The file is erased.
- □ Total stored page numbers are not printed in the Parallel Memory Transmission. Only the page numbers are printed, such as P.1, P,2 not <sup>1</sup>/<sub>2</sub>, <sup>2</sup>/<sub>2</sub>

#### 🖉 Note

If you run out of memory, normal Memory Transmission takes place. When and if this happens varies depending on the various options you have installed.

### Memory Storage Report

This report is printed after an original is stored in memory. It helps you review the contents and the destinations of stored originals. Even if the machine is set up not to print this report, it is still printed if an original could not be stored.

#### 🖉 Note

- □ You can turn this report on and off. By default it is not printed. ⇒ P.203 "Changing the User Parameters"
- □ You can choose whether to include part of the original image on the report (part of the image is printed by default). ⇒ P.203 "Changing the User Parameters"

## Transmission Result Report (Memory Transmission)

This report is printed when a Memory Transmission is completed so you can check the result of the transmission. If two or more destinations are specified, this report is printed after the fax message has been sent to all the destinations. If the machine is set up not to print this report and the fax message could not be successfully transmitted, the Communication Failure Report is printed.  $\Rightarrow$  P.29 "Communication Failure Report"

#### 🖉 Note

- □ By default this function is turned on so you need to turn it off. ⇒ P.203 "Changing the User Parameters"
- □ You can choose whether to include part of the original image on the report (by default, part of the image is printed).⇒ P.203 "Changing the User Parameters"

## **Communication Failure Report**

This report is only printed if the Transmission Result Report is turned off and a message could not be successfully transmitted with Memory Transmission. Use it to keep a record of failed transmissions so you can send them again.

#### 🖉 Note


□ You can choose whether to include part of the original image on the report (by default, part of the image is printed). ⇒ P.203 "Changing the User Parameters"

## 2

## CANCELING A MEMORY TRANSMISSION

## Canceling a Transmission While the Original Is Being Scanned in

#### Press the [Clear/Stop] key.

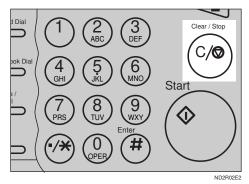

The machine will stop storing the original and the data will not be sent.

### Canceling a Transmission While the Message is Being Sent

Use this procedure to cancel a transmission after the original has been scanned in.

#### Limitation

□ If transmission finishes while you are caring out this procedure, it will not be canceled.

#### 🖉 Note

If you cancel a file while it is being sent, transmission is halted as soon as you finish this procedure. However, some pages of your message may have already been sent and will be received at the other end.

## Press [Info.].

OReady	Set	originals.	Enter	fax	no.
Memory Tra	ans.				99%
<u>63</u>			Dest:	0	




The Information menu is shown.

**2** Enter the "Check/Cancel TX Files" function number with the number keys.

Information	Enter number 📕
1 Check/Cancel TX Files	
2 Print TX File list	
( †Prev ) <b>UNext</b>	Exit


#### 🖉 Note

- □ If "Check/Cancel TX Files" is not shown, press [**↑Prev.**] or [↓**N**-**ext**].
- B Press the € or ► key until the file you want to delete is shown and press [Delete].

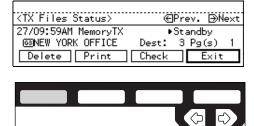

ND1X02E7


## Press [Yes].

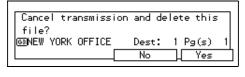



The file is erased.



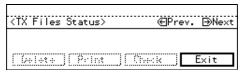




#### 🖉 Note

□ To delete another file, repeat steps 3 and 4.

## **6** Press [Exit].

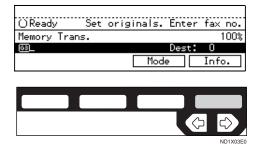

## **IMMEDIATE TRANSMISSION**

With Immediate Transmission, when you press the **[Start]** key, the fax number is dialed straight away (i.e. immediately). The message is scanned and transmitted page by page without being stored in memory. This contrasts with Memory Transmission which scans in all pages into memory before dialing the destination.

Immediate Transmission is useful if you want immediate confirmation that the message is being sent to the correct destination (just check the other terminal's RTI or CSI on the operation panel during transmission).

#### 🖉 Note

- You cannot send the same message to multiple destinations (Broadcasting). Use Memory Transmission for this purpose.
- Place the original on the exposure glass or in the Document Feeder (ADF). To send two or more pages from the exposure glass, set them one page at a time.
- □ You can scan some pages of your original from the exposure glass and the remainder from the Document Feeder (ADF). When you have finished scanning from the exposure glass, place the remainder of the pages in the Document Feeder (ADF) and press **[Start]** within ten seconds.
- By default, the transmission mode selected when the machine is turned on or when modes are cleared (transmission mode home setting) is Memory Transmission. You can change this with the User

Parameters.  $\Rightarrow$  P.203 "Changing the User Parameters"

## **1** Check that the Immediate Transmission indicator is lit.



If it is not lit, press the **[Transmission mode.]** key.

### **2** Set your original.

#### Limitation

Do not open the Document Feeder (ADF) while it is scanning the originals. Otherwise, document will be jammed.

#### 🖉 Note


□ You can set the original any time up until you press the **[Start]** key.

#### ✓ Reference

How to Set an Original  $\Rightarrow$  P.18 "HOW TO SET AN ORIGINAL"

## Select any scan settings you require. $\Rightarrow$ P.37 "SCAN SETTINGS"

## **4** Dial.

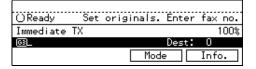

If you make a mistake, press the **[Clear/Stop]** key and enter the correct number again.

#### 🖉 Note


□ If you are dialing with the **num**-**ber** keys or Chain Dial (P.46

*"Chain Dial"*), you can select the type of line you want (G3 or G4).


### $\mathcal{P}$ Reference

P.43 "DIALING" P.41 "CHANGING LINE TYPE"

#### **5** Press the **[Start]** key.

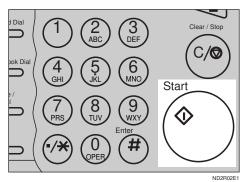

The machine calls the destination. While it is dialing, the number or name which is programmed as the RTI or CSI in the machine of the other party is shown on the display. When connected, the machine starts scanning the original.

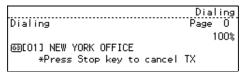

#### ₽ Reference


P.193 "RTI/TTI"

After transmission the machine will return to standby mode.

OReady	, Set	originals.	Enter	fax no.
Memory	Trans.			100%
63			Dest:	0
		Mode	e	Info.

#### ♀ If the Connection Could Not Be Made

If it was not possible to make a connection with the number you dialed (e.g., the line was busy or there is a line problem), the following display will appear.

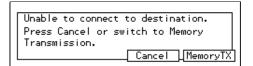

You have two options:

- To have the machine redial and try and send the message by Memory Transmission, press [Memory TX]. All originals will be scanned into memory then redialing will begin.
- To cancel this transmission, press **[Cancel]** then **[OK]**.

•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	
		•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	

## $\mathbf{\hat{\nabla}}$ ECM (Error Correction Mode)

This feature automatically sends data that wasn't transmitted successfully again using a technique called ECM, an internationally recognized protocol (requires that the destination machine has the same feature).

#### 🖉 Note

□ By default, ECM is on. You can turn it off.  $\Rightarrow$  P.171 "ECM"

. . . . . . . . . . . . . . .

Transmission Result Report (Immediate Transmission)

If you turn this report on, a report will be printed after every Immediate Transmission so you have a record of whether the transmission was successful or not. If the machine is set up not to print this report and the fax message could not be successfully transmitted, the Error report is printed instead.

#### 🖉 Note

□ You can switch this report on or off with the User Parameters. ⇒ P.203 "Changing the User Parameters"

## **On-hook Dial**

This is just like using the external telephone, except you do not have to pick up the external telephone before dialing. Just press the On Hook Dial key and dial the number. If you hear a voice, you can pick up the external telephone and speak with the other party.

#### Limitation

- □ This feature is not available in some countries.
- On-hook Dial does not work with ISDN lines.

#### 

P.192 "Monitor Volume"


Set your original and select any scan settings you require.

#### Reference

P.18 "HOW TO SET AN ORIGI-NAL"

P.37 "SCAN SETTINGS"

**2** Press the **[On Hook Dial]** key.

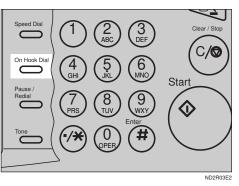


You will hear a low tone from the internal speaker. If you wish to cancel this operation, press the **[On Hook Dial]** key again.

## **B** Dial.

OReady	Set	originals.	Enter	fax no.
Immediate	ΤX			100%
<u>63</u>			Dest:	0
		Mode	e	Info.

The machine immediately dials the destination. If you make a mistake, press the **[On hook dial]** or **[Clear Modes/Energy Saver]** key and return to step 2.

4 When the line is connected and you hear a high-pitched tone, press the [Start] key.

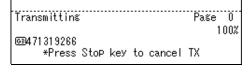

• If you hear a voice, pick up the external telephone before you press the **[Start]** key and notify the destination that you want to send a fax message (ask them to switch to Fax mode).

• After transmission the machine will return to standby mode.

				.,
OReady	Set	originals.	Enter	tax no.
Memory	Trans.			100%
[G3]			Dest:	0
		Mode	•	Info.

## Manual Dial

*The external telephone is required to use this function.* 

Pick up the handset of the external telephone and dial. When the line is connected and you hear a high-pitched tone, press the **[Start]** key to send your fax message. If, on the other hand, you hear a voice at the other end, continue your conversation as you would normally over the telephone.

#### Limitation

- Manual Dial does not work with ISDN lines.
- The result of the transmission with manual dial is not mentioned in the Transmission Result Report (Immediate Transmission).
- In energy saving mode, you may hear no sound for a few seconds after picking up the external telephone. You can operate after you can hear the tone.

## **1** Set your original and select any scan settings you require.

#### Reference

P.18 "HOW TO SET AN ORIGI-NAL"

P.37 "SCAN SETTINGS"

#### **2** Pick up the external telephone.

You will hear a tone.

## **B** Dial.

OReady	Set	originals.	Enter	fax no.
Immediate	TΧ			100%
<u>63</u>			Dest:	0
		Mod	e	Info.

If you make a mistake, replace the external telephone and try again from step 2.

When the line is connected and you hear a high-pitched tone, press the [Start] key to send your fax message.

Transmitting	Pase O
471319266	100%
∗Press Stop key to cancel	TX

#### E Replace the handset of the external telephone.

After transmission the machine will return to standby mode.

()Ready Set	originals. Enter fax no.
Memory Trans.	100%
<u>63</u> _	Dest: O
	Mode Info.

## CANCELING AN IMMEDIATE TRANSMISSION

## Canceling a Transmission Before You Have Pressed Start

Use this procedure to cancel a transmission before you have pressed the **[Start]** key.

## Press the [Clear Modes/Energy Saver] key.




### 🖉 Note

2

When you have already set the original, you can also cancel an Immediate Transmission by removing the original from the machine.

### Canceling a Transmission After You Have Pressed the Start Key

Press the [Clear/Stop] key then remove the original.

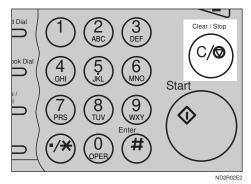

### 🖉 Note

□ If the transmission finishes while you are carrying out this procedure, it will not be canceled.

## SCAN SETTINGS

You may wish to send many different types of fax message. Some of these may be difficult to reproduce at the other end. However, your machine has three settings that you can adjust to help you transmit your document with the best possible image quality.

#### Resolution:

Standard, Detail, Super Fine (option)

Image density:

Auto Image Density, Manual Image Density (5 levels)

## Original type:

Text, Text. Photo, Photo

### Resolution

Images and text are scanned into the machine by converting them to sequences of dots. The frequency of dots determines the quality of the image and how long it takes to transmit. Therefore, images scanned at high resolution (Super Fine) have high quality but transmission takes longer. Conversely, low resolution (Standard) scanning results in less quality but your original is sent more quickly. Choose the setting that matches your needs based upon this trade off between speed and image clarity.

Standard (8 × 3.85 lines/mm, 200 ×100 dpi)

Select for originals containing normal sized characters.

Detail (8 × 7.7 lines/mm, 200 × 200 dpi) Select for originals containing small characters or when you require greater clarity. This resolution is twice as fine as Standard.

#### Super Fine (Optional 400dpi card is required: 16×15.4 lines/mm, 400×400 dpi)

Select for originals with very fine details or when you require the best possible image clarity. This resolution is eight times as fine as Standard.

#### Limitation

- □ If the other party's machine does not support the resolution at which you are sending, this machine automatically switches to a resolution which is supported.
- □ Sending with **Super Fine** resolution requires that your machine has the optional 400dpi option and the other party's machine has the capability to receive fax messages at **Super Fine** resolution. Note that even if the option is installed on your machine, transmission and reception may take place using **Detail** resolution if the other party's machine does not support this feature.

#### 🖉 Note

- □ When the machine is turned on or modes are cleared, the resolution is set to Standard by default. You can change this with the User Parameters. ⇒ P.203 "Changing the User Parameters"
- □ By default, the resolution returns to the home setting after every transmission. You change this with the User Parameters. ⇒ P.203 "Changing the User Parameters"

**1** Press the Resolution key to switch between resolutions. The indicators above the key show the current selection.

Commu- nicating Start Manual RX	O Receive File TX File Status	O Confic File O TEL Mode	dential O	0	O Standar O Detail O Super F	O Immediate Trans.
F1	F2	F3	F4	F5		

## **Original Type**

If your original contains photographs, illustrations or diagrams with complex shading patterns or grays, select the appropriate Original Type to optimize image clarity.

#### Text (Default Setting)

Text is selected when the **Photo** and **Text·Photo** indicators are not lit. Select Text to send an original containing a high-contrast blackand-white image. Use this setting even if your original contains text and photographs if you only want to send clearer text.

#### Text-Photo

**Text-Photo** is selected when the **Text-Photo** indicator is lit. Select **Text-Photo** to send an original containing both a high-contrast blackand-white image, such as text, and a halftone image such as a photograph.

#### Photo

**Photo** is selected when the **Photo** indicator is lit.

Select **Photo** to send an original containing a halftone image such as a photograph or a color original.

#### Limitation

□ If you select **Text**•**Photo** or **Photo**, the Resolution is automatically set to **Detail**. Even if you select **Stan**- **dard** again, the image density will not return to Standard.

#### 🖉 Note

- □ If you select **Text-Photo** or **Photo**, the transmission will take longer than when Text is selected.
- □ If you send a fax message with **Text**•**Photo** or **Photo** and the background of the received image is dirty, reduce the density setting and re-send the fax.
- □ When the machine is turned on or modes are cleared, Original Type is set to Text. You can change this with the User Parameters. ⇒ P.203 "Changing the User Parameters"
- □ By default, the machine returns to the Original Type home setting after every transmission. You can change this with the User Parameters. ⇒ P.203 "Changing the User Parameters"
- Press the [Original Type] key repeatedly until the indicator matching the type you require is lit.



When both indicators are not lit, the Original Type is Text.

## Image Density (Contrast)

The text and diagrams in your original should stand out clearly from the paper they are written on. If your original has a darker background than normal (for example, a newspaper clipping), or if the writing is faint, adjust the image density. By default, this machine will automatically select a density setting appropriate to the original (Auto Image Density). If you wish to set the density yourself, use Manual Image Density.

#### Auto Image Density

The machine automatically selects an image density which is the most appropriate for the original.

By default, Auto Image Density is selected when the machine is turned on or modes are cleared. You can change this with the User Parameters.  $\Rightarrow$  P.203 "*Changing the User Parameters*"

If the Auto Image Density indicator is not lit, press the **Q** key to turn it on.




#### **Manual Image Density**

Use the Image Density keys to vary the image density within 5 levels.

Make sure that the Auto Image Density indicator is not lit. If it is lit press the W key to turn it off.



Press the **1** or **▶** key to change the density. The indicators above the keys show the level.

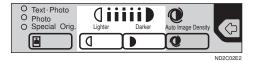

## Mixing Scan Settings in a Multiple Page Original


When sending an original consisting of several pages, you can select different Image Density, Resolution and Original Types for each page.

Set your original, select the scan settings for the first page, dial and press [Start] as you would normally. Then follow one of the following two procedures.

## When Setting Originals on the Exposure Glass

While the machine is bleeping, you have about 60 seconds (10 for Immediate Transmission) to select density, resolution and original type. The remaining time is shown on the display.

- Check the pages you wish to change the setting.
- **2** Remove the previous page and set the next page.
- Select the Image Density, Resolution and Original type.

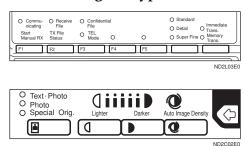


#### 🖉 Note

□ You adjust settings for each page before you press the **[Start]** key.

When Setting Originals in the Document Feeder (ADF)

- Check the pages you wish to change the setting.
- **2** Select the Image Density, Resolution and Original Type before the next page is scanned.



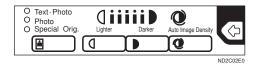

## **CHANGING LINE TYPE**

*The optional ISDN unit is required to use this function.* 

This machine comes with a single Analog (PSTN) line connection for G3 communication as standard. If you install the ISDN Unit option, an extra digital (ISDN) line connection for both G3 and G4 communication becomes available.

When you use G4, press the **[F4]** key to lit the lamp.

G4 is selected when this key is lit, G3 is selected when it is not lit.

Press the key once to switch between G3 and G4.

#### Limitation

Under the operation procedure for transmission, you can select the line type if dialing with the **number** keys or Chain Dial.

## 🖓 To Switch to G3

If the **[F4]** key is lit, press it once to switch to G3.

F1	File TX File Status	O TEL Mode	0	0	O De O Si
F1	F2	F3	F4	F5	
	-02	1.02	1.04	1.05	ND2L04E1

()Ready Set	originals. Enter fax no.
Memory Trans.	100%
63_	Dest: O
	Mode Info.

## 🍄 To Switch to G4

If the **[F4]** key is not lit, press it once to switch to G4.

	nicating Start Manual RX	File TX File Status	O TEL Mode	0	0	O De O Si
Ľ	F1	F2	F3	F4	F5	
(		00	1.00	1.04	1.05	ND2L04E1

OReady Se	t originals. Enter fax no.
Memory Trans.	100%
64	Dest: O
	Mode Info.

#### Limitation

□ If you select G4 mode, JBIG compression is not available.

## Which line is used for G3 transmissions?

ISDN lines can be used for G3 communication as well as G4 communications, so this machine is set by default to use the ISDN line for both G3 and G4 transmissions. If you wish to use the Analog (PSTN) line for G3 transmissions, please contact your service representative.

#### 🖉 Note

□ When you use G3 with ISDN, you can set the subaddress.

2

#### **Auto Identification**

This feature used when G4 is selected. The machine first tries a G4 communication and if it cannot connect because the receiver is not a G4 terminal, it automatically switches to G3 and redials.

### 🖉 Note

If the G3 line at the destination is connected to the ISDN via a TA (Terminal adapter) or a PBX, since the called number is on ISDN, it is regarded as G4 and the Auto Identification feature may not automatically switch this machine to G3.

## DIALING

There are three main ways to dial a number:

#### Number keys:

Enter numbers directly using the key pad on the right side of the operation panel.

#### Quick Dials:

When you have stored a destination's number in a Quick Dial key, you can dial the number by just pressing that key. Additionally, you can store a name that will appear on the display whenever you press that Quick Dial.

#### Speed Dials:

If you store a number in a Speed Dial, when you want to dial it, just press the Speed Dial key followed by a 2 or 3 digit code. Like Quick Dials, you can store a name along with the number.

This section covers these features and others in more detail.

## **Number Keys**

Enter numbers directly using the key pad on the right side of the operation panel.

#### 🖉 Note

- Maximum length of a fax number: 254 digits.
- □ You can insert pauses and tones in a fax number. ⇒ P.44 "Pause", P.45 "Tone"
- □ If the ISDN unit is installed, you may need to enter a subaddress. ⇒ P.45 "Subaddress (ISDN option required)"


## **1** Set your original and select any scan settings you require.

#### ✓ Reference

P.18 "HOW TO SET AN ORIGI-NAL"

P.37 "SCAN SETTINGS"

**2** Enter the fax number with the number keys.

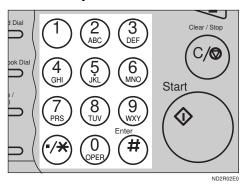

The digits appear on the display as you enter them.

OReady Press St	art or Clear to cancel
Memory Trans.	100%
634471226231_	Dest: 1
( Add )	Mode Info.

#### 🖉 Note

- □ If you make a mistake, press the **[Clear/Stop]** key to erase the wrong digits and try again.
- If you wish to send this message to more than one destination, press [Add], then enter the next destination.
- □ If the optional ISDN unit is installed, select G3 or G4 before you go to the next step. ⇒ P.41 "CHANGING LINE TYPE"

Press the [Start] key.

## Restrictions When Dialing with the Number Keys

Fax numbers entered with the **number** keys are stored in internal memory (separate from memory for storing original data). Therefore, you cannot program more than 99 numbers with the **number** Keys for the following:

- Destinations specified in a Memory Transmission (including Confidential Transmission and Polling Reception)
- Transfer Stations and End Receivers specified in a Transfer Request
- Destinations and Transfer Stations specified in a Group

For example, when 90 destinations are registered in a Group with the **number** keys, only 9 destinations can be dialed for Memory Transmission from the**number** keys.

#### 🖉 Note

- □ When this machine is requested to transfer a call (i.e. becomes a Transfer Station), 2 fax numbers are automatically stored. Therefore, the number of destinations that can be dialed from the number keys decreases by two whenever this machine is requested to transfer a call.
- When a total of 99 fax numbers is stored, only Immediate Transmission is allowed.


□ If a Group is defined when there are files queued for transmission, the message "Memory is full and you cannot enter with number keys" may be shown on the display and no additional fax numbers can be stored even if the number of destinations specified from the number keys is less than 99. That is because the fax numbers have been dialed from the number keys for some of the waiting files. When the waiting files have been sent and their fax numbers are deleted from memory, additional fax numbers can be dialed.

□ The display shows the percentage of free space in memory for storing originals. Since fax numbers are stored in separate memory, dialing fax numbers from the number keys does not change the percentage on the display.

. . . . . . . . . . .

#### Pause

Press the **[Pause/Redial]** key when dialing or storing a number to insert about a two-second pause.

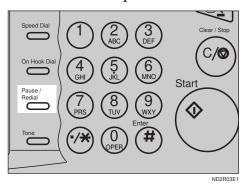

#### Limitation

□ You cannot insert a pause before the first digit of a fax number.

#### 🔗 Note

- □ A pause is shown as a "-" on the display.
- You can insert a pause in numbers stored in Quick Dials and Speed Dials.

2

#### Tone

This feature allows a machine connected to a pulse dialing line to send tonal signals (for example if you want to use a special service on a tone dialing line). When you press the **[Tone]** key, the machine dials the number using tonal signals.

#### Limitation

- □ You cannot place a tone before the first digit of a fax number.
- Some services may not be available when using the **[Tone]** key.

#### 🖉 Note

☐ A tone is shown as a " • " on the display.

Sending Tonal Signals by ISDN (ISDN Option Required)

You can still send tone signals to a G3 user even if the machine is only connected to an ISDN line.

#### 🔗 Note

This feature can only be used for Memory or Immediate Transmission. You cannot dial through ISDN using On-hook Dial or Manual Dial.

#### Subaddress (ISDN option required)


ISDN allows two or more terminals (such as a facsimile and digital telephone) to be connected to a single line. These terminals are identified by their subaddress numbers. If the terminals connected to the line at a destination are assigned subaddresses, dialing a subaddress allows you to direct your fax message to a particular terminal at the destination.

#### Limitation

□ Subaddress can only be used with ISDN.

#### 🖉 Note

- □ You need to program a User Function key with the subaddress function. ⇒ P.164 "ASSIGNING USER FUNCTION KEYS"
- You can program a subaddress number in a Quick Dial or Speed Dial.
- □ If you want to assign a subaddress to your fax machine, contact your service representative.
- **1** Set your original and select any scan settings you require.
- **2** Select either G4 or G3 (ISDN).
- Dial the fax number with the number keys.
- **4** Press the User Function key (**[F1]-[F5]**) where the subaddress function has been registered.

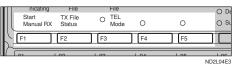

"/" will appear on the display.

OReady Press	Start or Clear to cancel
Memory Trans.	100%
643147102262/_	Dest: 1
Add	Mode Info.

**5** Enter the destination subaddress with the number keys.

Press the [Start] key.

#### Chain Dial

This allows you to compose a telephone number from various parts, some of which may be stored in Quick Dials or Speed Dials and some of which may be input using the number keys.

#### Limitation

Maximum length of telephone or fax number: 254 digits

#### 🖉 Note

For Memory Transmission and Immediate Transmission, insert a pause between numbers. For Onhook Dial and Manual Dial, no pause is needed.

## 🔆 (Example) 01133-1-555333

Assume that 01133 is stored in Quick Dial 01 and that 1 is stored in Speed Dial 01.

- Place the original and select any scan settings you require.
- ② Press [Quick Dial] key 01.
- ③ Press the **[Pause/Redial]** key.

. . . . . . . . . . . . . . . . . . . .

- ④ Press the [Speed Dial] key and [0] and [1] using the number keys.
- ⑤ Press [5], [5], [5], [3], [3] and
   [3] using the number keys.
- O Press the [Start] key.

#### **Quick Dials**

When you have stored a destination's number in a Quick Dial key, you can dial the number by just pressing that key. Additionally, you can store a name that will appear on the display whenever you press that Quick Dial.

#### 🖉 Note

- □ To check the contents of the Quick dial, print the list. ⇒ P.158 "*RE*-*PORTS/LISTS*"
- If the Quick Dial key is used as other functions like Groups, you cannot program the Quick Dial in it.
- Flip the Quick Dial plate over to access Quick Dial keys 01-28 or 29-56.
- □ You can have the label stored with a Quick Dial printed on the first page received at the other end. ⇒ P.99 "Label Insertion"

#### PReference

P.43 "DIALING"

- **1** Set your original and select any scan settings you require.  $\Rightarrow$  P.37 "SCAN SETTINGS"
- Press the [Quick Dial ] key in which the destination's number is programmed.

_								
	01	02	03	04	05	06	07	
1	А	В	С		E	F	G	
l	08	01	10	11	12	13	14	
Ć	Н			к		М	Ν	$\square$
	15	16	17	18	19	20	21	
	0	Р		R	s	Т	U	
	22	23	24	25	26	27	28	
	V	W	X	Υ	z		凸	
							ND2	PL05E1

If the destination's name has been stored, the name is shown on the display. Otherwise, the fax number is shown.

OReady Press	Start or Clear to	cancel
Memory Trans.		100%
GBEO13 NEW YORK	OFFICE Dest:	1
Add	Mode	Info.

#### 🖉 Note

- □ If you make a mistake, press the **[Clear/Stop]** key and try again.
- □ If you wish to dial another destination, press **[Add]** and dial another fax number.

Press the [Start] key.


### **Speed Dials**

If you store a number in a Speed Dial, when you want to dial it, just press the Speed Dial key followed by a 2 or 3 digit code.  $\Rightarrow$  P.143 *"Registering Speed Dials"* 

#### 🖉 Note

- To check the contents of the Speed Dials, print the list.
- As standard, you can use codes 00-99 for Speed Dials. If the Optional Fax Feature Expander is installed, codes 000 to 999 become available.
- □ If a search letter is registered with a Speed Dial, you can find this number quickly using the Telephone Directory feature. ⇒ P.47 "Telephone Directory"
- □ You can have the label stored with a Speed Dial printed on the first page received at the other end. ⇒ P.99 "Label Insertion"
- **1** Place your original and select any scan settings you require.  $\Rightarrow$  P.37 "SCAN SETTINGS"

**2** Press the **[Speed Dial]** key.

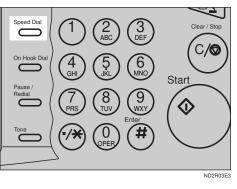

OReady	Set ori	ginals.	Enter	fax no.
Memory Tra	ns.			100%
63Sp.D			Dest:	0
	Tel.Dir.	Mode		Info.

Enter the two-digit code (00 to 99) or three-digit code (000 to 999) for the destination with the number keys.

  )Ready Press Start	or Clear to cancel
Memory Trans.	100%
636p.DOOO ABC COMPANY	/ Dest: 1
Add [	Mode Info.

If the destination's name has been programmed, it flashes up on the display. Otherwise, the fax number appears.

#### 🖉 Note

- □ If you make a mistake, press the **[Clear/Stop]** key and try again.
- □ If you wish to dial another destination, press **[Add]** and dial another fax number.

Press the [Start] key.

#### **Telephone Directory**

This feature lets you find a stored Speed Dial quickly by just entering a single letter, e.g., the first letter of the name stored for that number.

#### Preparation


To use the telephone directory, you need to register a search letter when you program Speed Dials.  $\Rightarrow$  P.143 "*Registering Speed Dials*"

#### Limitation


- Speed Dial codes cannot be searched for by symbol or number.
- Names enclosed within () are not searched for.

Set your original and select any scan settings you require.

#### Press the [Speed Dial] key.

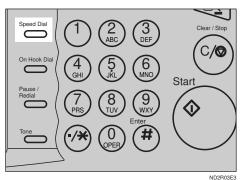


B Press [Tel.Dir.] .

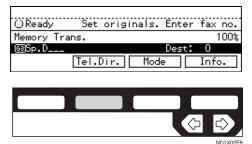


Enter the search letter by pressing one of the Quick Dial keys (A to Z).



The names or fax numbers registered in Speed Dials are shown in numerical order on the display.

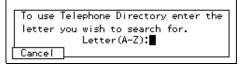

Enter the two-digit code (00 to 99) or three-digit code (000 to 999) for the destination with the number keys.

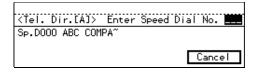

#### 🖉 Note

- ☐ If the list does not contain the desired destination, press [↑Prev.] or [↓Next].
- □ If you make a mistake, press the **[Clear/Stop]** key to try again.
- □ If you wish to dial another destination, press **[Add]** and dial another fax number.

Press the [Start] key.

#### Groups

If you frequently send the same message to more than one place, program these numbers into a Group. Then you can send the messages to all the destinations in that Group with just a few keystrokes. You can also program a name for the Group (for example, "Branch Offices") which will be displayed before you press the **[Start]** key.

#### Preparation

You need to program the Groups.  $\Rightarrow$  P.129 "Registering Quick Dials"

#### Limitation

- A Quick Dial programmed for Group cannot be used for other functions.
- Group Dial can be used only for Memory Transmission and Polling reception; it cannot be used for Immediate Transmission.

#### Note

- Groups are only available with Memory Transmission and Polling reception.
- □ To check the contents of the Groups, print the list.
- □ You can program up to 9 Groups.
- You can store up to 200 destinations in a Group. If a Quick Dial or Speed Dial is registered in two Groups, it takes up the space of one destination.
- □ Groups can contain Transfer Station codes, but note that these Groups cannot be used for normal transmission because the Transfer Station codes are not dialable numbers. ⇒ P.173 "Multistep Transfer"

#### Reference

 $\Rightarrow$  P.135 "Registering Groups"

Set your original and select any scan settings you require.

**2** Press the Quick Dial key in which the Group is programmed.

	01	02	03	04	05	06	07
1	A	В	С	D	E	F	G
U	08	01	10	11	12	13	14
C	Н	I	J	К	L	М	
	15	16	17	18	19	20	21
۱.	0	Р	Q	R	S	Т	U
	22	23	24	25	26	27	28
	V	W	X	Y	Z		A
							ND2L05E1

The Group number is shown on the display. If the Group name is programmed, the name is also shown on the display.

⊖Ready Press Sta	rt or Clear to cancel
Memory Trans.	100%
GE[01]Gp.D BRANCH	Dest: 2
Add	Mode Info.

#### 🖉 Note

- □ If you make a mistake, press the **[Clear/Stop]** key and start again.
- If you wish to dial another destination, press [Add] and dial another fax number.

Press the [Start] key.

#### **Optional Group Dial**

An Optional Fax Feature Expander is required to use this function.

If the Optional Group Dial function has been assigned to a User Function key, dialing is easy. Just press the User Function key and enter the Optional Group number (10 - 30).

You can use Optional Groups to specify several destinations at a time. You can program up to 9 Groups and up to 21 Optional Groups.

#### Preparation

To use this function, you need to have programmed a User Function key as the Optional Group Dial function in advance.  $\Rightarrow$  P.164 "AS-SIGNING USER FUNCTION KEYS"

#### Limitation

Optional Group Dial can only be used only with Memory Transmission. If you select the Immediate Transmission mode, it automatically switch to the Memory Transmission mode.

#### 🖉 Note

- You can include up to 200 destinations in a Group. If a Quick Dial or Speed Dial is registered in two Groups, it takes up the space of one destination.
- □ Groups can contain Transfer Station codes, but note that these Groups cannot be used for normal transmission because the Transfer Station codes are not dialable numbers. ⇒ P.173 "Multistep Transfer"

#### P Reference

P.139 "Registering Optional Groups"

Set your original and select any scan settings you require.

Press the User Function key ([F1] through [F5]) in which the optional Group Dial function is registered.

	nicating Start Manual RX	File TX File Status	O TEL Mode	0	0	
	F1	F2	F3	F4	F5	
1 C C	24 I	00	1.02	1.04	1.05	ND2L04E3

## Enter an Optional Group number with the number keys.

<optional dial="" group=""> Enter</optional>	Group No. 💻
+Gp.D10 ACCOUNT S~ +Gp.D11	
+Gp.D12 +Gp.D13	
( <u>↑</u> P::::::) ↓Next	Cancel

The Optional Group number is shown on the display. If you have previously registered a name with this group, it is also shown on the display.

#### 🔗 Note


- □ If you make a mistake, press the **[Clear/Stop]** key and try again.
- □ If you wish to dial more destinations, press **[Add]** and dial another number.

Press the [Start] key.

## Redial

The machine memorizes the last 10 destinations that have been dialed. If you wish to send a message to a destination which you faxed to recently, the Redial feature saves you finding and entering the number again.

### Press the [Pause/Redial] key.

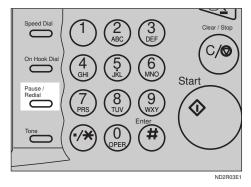

2 A list of previously dialed numbers will flash up. If you cannot see the number you need use the [↑Prev.] and [↓Next] keys to scroll through them. Then enter the code for the number you wish to redial e.g., "01".

<redial></redial>	Enter n		of	dest	ination	
01 471312262		02	471	3166	26	
03 226231471	1	04	764	5		
	Next )				Cance	

### Limitation

- □ The following kinds of destinations are not memorized:
  - Quick Dials
  - Speed Dials
  - Group Dials
  - Destinations dialed by a Program
  - Destinations dialed as End Receivers for Transfer Request
  - Forwarding terminal of the substitute reception.
  - Destination of Memory File Transfer
  - Destinations dialed using the external telephone keypad
  - Destinations dialed by Redial (regarded as already memorized)
  - Any destinations after the first number if multiple destinations were dialed.
- Do not dial any digits before you press the Redial key. If you press the **[Pause/Redial]** key after entering digits using the number keys, a pause will be entered instead.

#### 🖉 Note


If the receiver uses a facsimile of the same manufacturer that is capable of registering the RTI, that name may be shown on the display instead of the fax number. 2

## TRANSMISSION FEATURES

## Stamp

Optional Stamp Unit is required

When sending a fax message using the Document Feeder (ADF), the machine can stamp a circle mark at the bottom of the original. When sending a double sided document, they are marked at top and bottom side on the front page. This stamp indicates that the original has been successfully stored in memory for Memory Transmission, or that it has been successfully sent for Immediate Transmission.

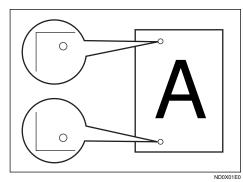

### Limitation

- □ Stamp only works when scanning from the Document Feeder (ADF).
- When you select the ADF internal tray, Stamp does not work.
- While scanning the document, you cannot switch stamp on or off.
- Do not open the document feeder (ADF) while scanning the document. Document jam should occur.

#### 🖉 Note

When the Stamp Unit installed,
 [F5] key is automatically assigned as the Stamp key.

- □ When the stamp starts getting lighter, replace the cartridge. ⇒ P.220 "REPLACING THE STAMP CARTRIDGE"
- □ If a page was not stamped even though the Stamp feature is turned on, you need to re-send that page.
- □ By default, Stamp is turned off. If you use this feature often, you can adjust the User Parameters so that the home setting is on. In this case, Stamp can easily be turned off for any single transmission by pressing the **[Stamp]** key. ⇒ P.203 "Changing the User Parameters"

### Press the [F5] key.

	nicating Start Manual RX	File TX File Status	0	TEL Mode	0	0		O De O Si
	F1	F2	F3		F4	F5		
$\sim$	01	00	1.02		1.04	 1.05		1.00
							ND2	L04E2

The Stamp indicator will light. Pressing the **[F5]** key again will turn Stamp off.

## **ID** Transmission

This feature allows you to restrict transmission of messages only to machines of the same make, and only to those machines that have the same Polling ID. The transmission options let you switch ID transmission on and off for each separate transmission.

#### 🖉 Note

□ The default setting is off. Turn this feature on with the User Parameters. ⇒ P.203 "Changing the User Parameters"

## F Code (SUB)

Normally you can only use Confidential Transmission to send to fax machines of the same make that have the Confidential Reception feature. However, if the other machine supports a similar feature called "F Code", you can send fax messages to the other party using this method instead.

#### Preparation

You need to assign the F Code feature to a User Function key beforehand.

You can only use this feature in a G3 communications (not with G4).

You cannot use Chain Dial with this feature.

You cannot select this function when carrying out standard Confidential Transmission

#### 🖉 Note

- The ID can be up to 20 digits long and consist of digits, spaces, \* and #.
- □ Make sure the ID matches the specification of the fax you are sending to.
- You can store IDs in Quick Dials, Speed Dials, Groups and Programs.
- Messages you send using this feature are marked "SUB" on all reports.
- Set your document and make any changes to the scan settings if necessary.

## **2** Dial the destination fax number using the number keys.

()Ready Set	originals. Enter fax no.
Memory Trans.	100%
63	Dest: O
	Mode Info.

#### Press the User Function key assigned with the F Code feature.

nicating Start Manual RX	File TX File Status	0	File TEL Mode	0	0		O De O Si
F1	F2	F3		F4	F5		
						ND2	2L04E3

Enter the function number for SUB(S) on the number keys.

(F Code)	Enter number 🛓
1 SUB(S) B SEP(P)	2 PWD(W) 4 Seate
	Cancel

## Enter the ID code on the number keys.

) OReady Press Star	t or Clear	to cancel
Memory Trans.		98%
<u>छ</u> 12345678S_	Des	t: 1
( Add )	Mode	Info.

## Press the [Start] key.

)Ready Press Start	: or Clear	to cancel
Memory Trans.		98%
312345678S9876543_	Des	t: 1
( bbA	Mode	Info.

### 🖉 Note

If you use Immediate Transmission and the destination fax machine does not support the F code feature, a message will appear on the display to inform you of this. In this case, press OK to cancel the transmission.

## F Code (PWD)

There are times when you may wish to use a password when sending confidential faxes with the F Code feature.

#### Limitation

□ You can enter a password up to 20 digits long.

#### 🖉 Note

□ Messages you send using this feature are marked "PWD" on all reports. ⇒ P.158 "REPORTS/LISTS"

### JBIG Transmission

FAX 400dpi option is required

If you use JBIG (Joint Bi-level Image Experts Group) compression you can send photographic originals at high speed across G3/IG3 lines.


#### Limitation

- □ If ECM is turned off, JBIG Transmission is not available.
- This feature requires that the other party's fax machine has both the JBIG function and ECM function (G3 communication only).

# 3. Receiving a Fax Message

## **IMMEDIATE RECEPTION**

Each page of a received fax message is printed as soon as it is received. This method is used for standard fax messages.

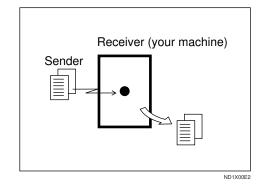

## ÖDisplay During Reception

The sender's RTI or CSI appears on the first line.

PARIS BRANCH	A4 → A4 P001/P003
O Ready Set	t ori≋inals. Enter fax no.
Memory Trans.	100%
[G3]	Dest: O
	Mode Info.


## 

This machine supports **Standard**, **Detail** and **Super Fine** (option) resolutions for reception. If you do not have the 400dpi option, faxes sent at **Super Fine** resolution will be printed on your machine at **Detail** resolution. This may result in a slightly different from the sender's intention.

Reception will not take place if there is not enough free memory left. If free memory reaches 0 % during Immediate Reception, any further reception becomes impossible and the current communication is terminated.

## MEMORY RECEPTION

The machine waits until all pages of the message have been received into memory before printing the message.

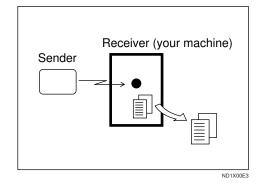

This method is used with the following features:

- Two in one P.38 "Photo"
- Multi-copy when set to multiple copies P.65 "Multi-copy Reception"
- Reverse Order Printing P.68 "Reverse Order Printing"
- Substitute Reception P.57 "Substitute Reception"
- 2-sided Printing (Both Optional Duplex Tray and Fax Feature Expander are required) P.65 "2-Sided Printing"

#### ∰Important

- All the messages stored in memory are deleted if the power is switched off for more than one hour. However, note that if the optional Hard Disk is installed, all stored messages are not deleted.
- If Memory Reception is switched on, the machine may not be able to receive large numbers of messages or messages with a high data content. In such cases, we recommend you switch Memory Reception mode off or add a memory card.

### Limitation

The machine may not be able to receive fax messages when the free memory space is low.

#### 🖉 Note

If the memory free space reaches 0 % during Memory Reception, the machine can no longer receive the current fax message and stops communicating.

## SUBSTITUTE RECEPTION

If any of the conditions listed below are met, the machine automatically switches to Memory Reception mode and stores messages in memory instead of printing them. This reception mode, in which a received fax message is stored in memory unprinted, is called Substitute Reception. Messages received using Substitute Reception are automatically printed when the condition which caused the machine to use Substitute Reception is rectified. Substitute Reception takes place when:

- Paper runs out
- Toner runs out
- Paper is jammed
- The front or side cover is open
- A fax is received during a copy or print run
- When the delivery tray is full

#### Limitation

Reception may not take place if there is not enough free memory left.

#### 🖉 Note

- □ The **Receive File** indicator lights to let you know when message(s) have been received using Substitute Reception.
- If free memory reaches 0 % during Substitute Reception, any further reception becomes impossible and the current communication is terminated.

# Screening messages from anonymous senders

To help you screen out unwanted messages that may fill up your memory, the machine can be programmed to only use Substitute Reception for messages that arrive with RTI/CSI identification.

Two settings are available:

- "When RTI or CSI is received"
- "Free"

#### 🖉 Note

- □ The default setting is "When RTI or CSI is received", i.e. only store messages when the RTI/CSI is present. You can change this with the User Parameters. ⇒ P.203 "Changing the User Parameters"
- Even if the sender does not have an RTI or CSI, the machine will still receive messages using Substitute Reception if:
  - Paper becomes jammed while the power switch is on
  - For some reason printing is not possible e.g., copy job is in progress

## When an RTI or CSI is Received

The machine switches to Substitute Reception only when the sender has programmed their RTI or CSI. If the power is switched off for more than an hour, all the messages received into memory are deleted. In such a case, the Power Failure Report or the TCR can be used to identify which messages are lost so you can ask the senders to transmit them again.

### ∰Important

If a sender has not programmed their RTI or CSI, the machine may reject an important fax message. We recommend that you ask important senders to register an RTI or CSI in advance.

### **V**Free

The machine switches to Substitute Reception regardless of whether or not the sender has programmed their RTI or CSI.

## **SELECTING THE RECEPTION MODE**

There are two ways you can set up your machine to handle incoming calls:

- Fax mode
- Tel mode (handset option or external telephone required)

The default setting is Fax mode. You can change this with the User Tools.  $\Rightarrow$  P.203 "Changing the User Parameters"

## Fax Mode (Auto Reception Mode)

When a telephone call comes in, the machine receives it automatically as a fax message. Use this setting for a dedicated fax line.

### **Telephone Mode**

When a call comes in, you have to pick up the handset or external telephone and decide whether the call is a fax message yourself. If you hear a voice, continue your conversation as you would using a normal telephone. If you hear high pitched beeps, instruct the machine to receive the fax by following the procedure below.

Use this setting if you wish to share the line between the fax machine and a telephone.

### Receiving a Fax in Telephone Mode

This feature needs a User Function key programmed as **[Start Manual RX]**. By default, **[F1]** is already assigned

this function.  $\Rightarrow$  P.164 "ASSIGNING USER FUNCTION KEYS"

- When the machine rings, pick up the handset.
- ② If you hear beeps, press the User Function key ([F1]-[F5]) which has been programmed as the [Start Manual RX] key.
- ③ Replace the handset. The machine will start receiving.

## Changing from Fax Mode to TEL Mode

This function also requires the use of a User Function key. By default, **[F3]** is assigned as the **[TEL Mode]** key.

To change the reception mode, press the User Function key which has been programmed as the **TEL Mode** key (**[F3]** by default).


3

## **RECEPTION FUNCTIONS**

### **Transfer Station**

Transfer Stations allow you to expand the standard features of your fax machine to set up complex networks. Transfer Stations must be machines of the same make.

The diagram below may make the concept clearer.

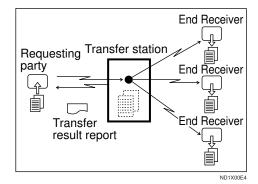

The following terminology is used in this section.

### Requesting Party

The machine where the message originates from, i.e. the machine making a Transfer Request.

### Transfer Station

The machine that forwards the incoming message to another destination, i.e. the machine that receives the Transfer Request. In this section this refers to your machine.

### End Receiver

The final destination of the message, i.e. the machine that the Transfer Station sends to. End Receivers must be programmed into Quick Dials, Speed Dials or Groups in the Transfer Station (this machine).

### Limitation

- Polling ID's of the Requesting Party and Transfer Station must be identical for this feature to work.
- □ This machine will not receive a Transfer Request unless it has enough free memory to store two or more destinations dialed from the number keys.
- □ If the Requesting Party specifies a Group for the End Receivers and the total number of End Receivers exceeds 200, the Transfer Station cannot transfer the message and sends a Transfer Result Report to the Requesting Party.

### 

P.96 "TRANSFER REQUEST"

### 🖗 Multi-step Transfer

The principles of Transfer Stations can be used to build up a multi-step facsimile network where messages are passed through several Transfer Stations. By programming the end receivers in a Transfer Station Group, you can enable this machine to transfer messages onto other Transfer Stations.

For more information, contact your service representative.

This feature can only be used if the machines are made by the same maker.

### 🖉 Note

□ The optional Fax Feature Expander is required for this function.

### ✓ Reference

P.173 "Multistep Transfer"

Sending the Transfer Result Report

This machine compares the own fax number of the Requesting Party with the Requesting Party's number programmed in a Quick Dial or Speed Dial, and if the lower five digits of the two numbers match, it sends the Transfer Result report to the Requesting Party.

For example:

• Requesting Party's own dial number:

001813-111<u>12222</u>

• Transfer Station's Quick Dial:

. . . . . . . . . . . . .

03-111<u>12222</u>

### **Transfer Result Report**

This reports whether transmission to the End Receivers was successful or not.

### Preparation

Register the own fax number in advance.  $\Rightarrow$  P.41 "CHANGING LINE TYPE"

When the Transfer Station has transferred the message to all End Receivers, it sends the Transfer Result Report back to the Requesting Party. The machine prints the report if it cannot be sent back to the Requesting Party. You must program the fax number of the requesting party in a Quick Dial or Speed Dial in the Transfer Station.  $\Rightarrow$  P.129 "Registering Quick Dials", P.143 "Registering Speed Dials"

### 🖉 Note

□ By default, a portion of the original image is printed on this report. You can turn this off with the User Parameters. ⇒ P.203 "Changing the User Parameters"

### **ID Reception**

If you wish to limit reception of messages to those from machines of the same make and with the same Polling ID, contact your service representative to turn this feature on.

## F Code (SEP)

Normally you can only use Polling Reception to receive faxes from machines that have the Polling Reception feature. However, if the other machine supports a polling reception, you can receive fax messages from the other party using this method instead.

### Preparation

You need to assign the F Code feature to a User Function key beforehand.  $\Rightarrow$  P.164 "Storing/Editing the Contents of a User Function Key"

### Limitation

- □ You can only use this feature with a G3 line (not with G4).
- □ You cannot use Chain Dial with this feature.

### 🖉 Note

□ The ID can be up to 20 digits long and consist of digits.

- Make sure the ID matches the specification of the fax you are sending to.
- You can store IDs in Quick Dials, Speed Dials, Groups and Programs with number keys, space, # and \*.
- Messages you receive using this feature are marked "SEP" on all reports.
- Make sure that the machine is in Facsimile mode and the standby display is shown. Then enter the fax number.

() () Ready S	et originals.	Enter fax no.
Memory Trans.		100%
<u>[63]</u>		Dest: O
	Mode	e Info.

**2** Press the User Function key assigned with the F Code feature.

nicating Start Manual RX	File TX File Status	4	File C TEL Mode	0	0	0	De Sl
(F1	F2	] [	F3	] [F4	F5		-
						NDOLOG	

Enter the function number for SEP(P) on the number keys.

(F Code>	Enter number
1 SUB(S)	2 PWD(W)
B SEP(P)	4 Seate Cancel

4 Enter the ID code on the number keys.

Press the [Mode] key.

The [Mode] menu is displayed.

) Ready Press Start	t or Clear	to cancel
Memory Trans.		100%
312345678P9876543_	Des	t: 1
Add	Mode	Info.

**6** Enter the function number for Polling Reception on the number keys.

Transmission Mode	Enter number 💻
01 Send Later	02 Confidential TX
03 Personal Code	04 Auto Document
(_^Prey] <b>↓Ne</b> xt	) Exit

### 🖉 Note


□ If you can't see the function number, search for it using the [↑Prev.] and [↓Next] arrow keys.

■Transmission Mode		
Iransmission node	Enter	number 💻
	Polling	RX
11 Transfer Request 12	Options	
(↑Prev)(↓\\\xt)		Exit


**D**epending which method you are using, choose one of the following procedures:

**Default ID Polling Reception** 

● Press the or key to change the Default ID and press [OK].

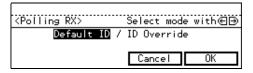

- ID Override Polling Reception
- Press the or key to change the Override ID and press [OK].

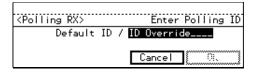

2 Enter a polling ID (4 characters) with the number keys and the letter (A–F).

### 🖉 Note

□ If you make a mistake, press the **[Clear/Stop]** key and try again.

• 0000 and FFFF is not available.

### 8 Press [OK].

### **9** Press [Exit].

The display returns to the **[Mode]** menu and the Polling Reception function is now checked.

Press the [Start] key.

## F Code (PWD)

There are times when you may wish to use a password when sending confidential faxes with the F Code "SUB" and "SEP" features.  $\Rightarrow$  P.63 "F Code (PWD)"

### Limitation

You can enter a password up to 20 digits long.

### 🖉 Note

Messages you send using this feature are marked "PWD" on all reports.

## **JBIG Reception**

*The Fax 400dpi Option is required to use this function.* 

It allows you to receive messages sent in the JBIG format.

### Limitation

- □ If ECM is turned off, JBIG Reception is not available.
- □ This feature is not available with G4 lines.

## **PRINTING FUNCTIONS**

### Print Completion Beep


By default, the machine beeps to let you know when a received message has been printed.

### 🖉 Note

□ You can alter the volume of the beep or turn it off completely (set the volume at minimum). ⇒ P.192 "Monitor Volume"

### **Checkered Mark**

By default, a checkered mark is printed on the first page of fax messages to help you separate them.

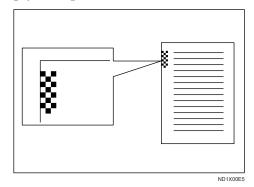


### 🖉 Note

□ You can turn this feature off. ⇒ P.203 "Changing the User Parameters"

### **Center Mark**

By default, marks are printed halfway the left side and at the top center of each page received. This makes it easy for you to position a hole puncher correctly when you file received messages.

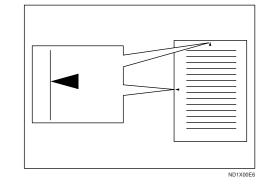

### Limitation

The center mark may deviate a little from the exact center of the edge.

### 🖉 Note

□ You can turn this feature on or off. ⇒ P.203 "Changing the User Parameters"

### **Reception Time**

You can have the date and time when a message was received printed at the bottom of the received image. This feature is turned off by default–turn it on with the User Parameters.  $\Rightarrow$  P.203 "Changing the User Parameters"

### Limitation

When a received message is printed on two or more sheets, the date and time is printed on the last page.


### 🖉 Note

The date and time when the message was printed can be also be recorded on the message. If you need this feature, please contact your service representative.

### **Multi-copy Reception**

*The Optional Fax Feature Expander is required to use this function.* 

If you switch this feature on, multiple copies of each incoming fax message will be printed. You can also choose to have multiple copies made of messages from particular senders.  $\Rightarrow$  P.161 "INITIAL SETUP RX", P.182 "Special Senders to Treat Differently (Special RX Nos.)"

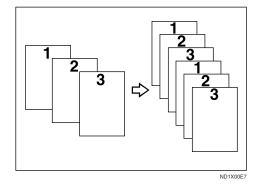

### Limitation


The maximum number of copies that can be made of each message is 10. If you are using Multi-copy with Specified Senders, the maximum number is 10.

### 🖉 Note

- □ By default this feature is turned off. Switch it on and set the number of copies with the Initial Setup RX. ⇒ P.161 "INITIAL SETUP RX"
- □ Note that the machine will use Memory Reception for Multi-copy.

### 2-Sided Printing

An optional Duplex Tray and Fax Feature Expander are required to use this function. With this option installed, you can have a received message printed on both sides of the paper. By default, this feature is turned off. Switch it on with the Initial Setup RX and select lengthwise  $\Box$  copy paper.  $\Rightarrow$  P.161 *"INITIAL SETUP RX"* 

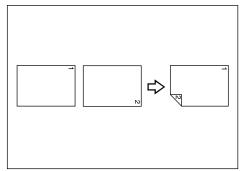


### ND1X00E8


### Limitation

□ To use this function all pages of the received document must be of the same size-inform the sending party of this beforehand if necessary. You must also have paper set in your machine of the same size as that sent by the sending party (A4→A4, B4→B4 are typical examples, whether A3 and B5 sizes are scanned in correctly will depend on the fax machine). This machine will scan in correctly landscape A3, B4, A4, B5 and A5. The table below shows the results that can be achieved when

sending and receiving using this machine.

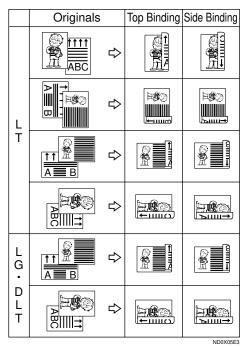

If the Duplex Unit cover is not open, you cannot print double-sided documents that are more than 11.7" long and they will be printed single-sided only.

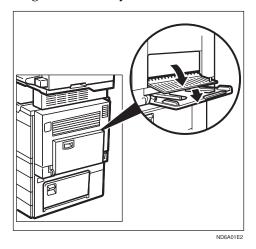

□ This feature works only when all pages are of the same width and are received into memory.


- □ Note that the machine will use Memory Reception for 2-Sided Printing.
- □ This feature cannot be used with Two in One.
- Printouts may vary in their direction/orientation depending on how the sender set them.
- □ If another party sends you a fax and their machine is not able to detect the size of the original correctly, the message may come out truncated, separated or containing excess white space when printed at your end. For example, if the sending machine thinks a B5 original is a B4 original, it will be printed at your end on B4 size paper even if you have B5 paper available in your machine.

### 🖉 Note

□ You can choose to have messages only from selected senders printed in this way. ⇒ P.203 "Changing the User Parameters"


### **180 Degree Rotation Printing**

When printing on both sides of the paper, this machine rotates images as shown in the diagram.

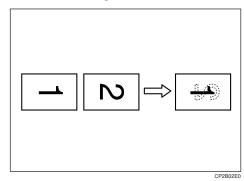

### **Image Rotation**

If you have installed paper in the cassette sideways  $\square$ , incoming fax messages will be rotated automatically to fit on the paper.

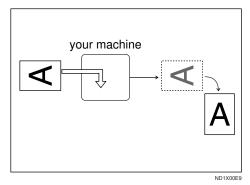

### Limitation


□ You can choose to have received messages printed from the a specified tray. ⇒ P.203 "Changing the User Parameters"

### Two In One

When two messages of the same size and direction are received consecutively, they are printed on a single sheet when you turn this feature on. This can help you economize on paper.

- Two A5 D messages are printed side by side on a sheet of A4 D.
- Two B5 D messages are printed side by side on a sheet of B4 D.
- Two A4 D messages are printed side by side on a sheet of A3 D.

Two 8<sup>1</sup>/<sub>2</sub> × 5.5 " □ messages are printed side by side on a sheet of 8<sup>1</sup>/<sub>2</sub> × 11" □.

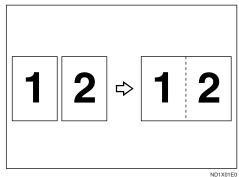

### Limitation


- This feature does not work with messages larger than A5 , B5 , A4 , or LT . When A5 , B5 , B5 , A4 , or LT . When A5 , B5 , A4 , or LT , size paper is loaded in the machine, each page of the received message is output on a single sheet.
- If paper matching the size and direction of a received document is not available, Two In One is not possible.

### 🖉 Note

- □ By default this feature is turned off. Switch it on with the User Parameters. ⇒ P.203 "Changing the User Parameters"
- □ This feature uses Memory Reception.

### Page Separation and Length Reduction (not available in some countries)

When the size of a received message is longer than the paper loaded in the machine, each page of the message can be split and printed on several sheets, or reduced and printed on a single sheet. For example, when LT  $\square$  paper is loaded, this feature splits the received message if the excess length is about 0.79" or more, and reduces it if the excess length is within about 0.79". When a message is split, the split mark (\*) is inserted at the split position and about 0.39" of the split area is duplicated on the top of the second sheet.

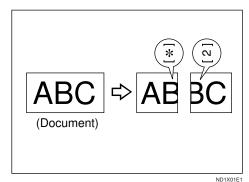

#### IN IN


### 🖉 Note

- Your service representative can customize this feature with the following settings. Bracketed values are defaults.
  - Reduction (on)
  - Print split mark (on)
  - Overprinting (on)
  - Overprinting length (0.39")
  - Guideline for split (when message is 0.79" longer than paper)
- □ You can adjust the overprinting length and length of reduction within the following ranges:
  - Guideline for split: 0 6.1"
  - Overprinting length: 0.16", 0.39", 0.79", 1.57"

### **Reverse Order Printing**


Normally, received pages are printed and stacked on the tray in the order they are received. If you turn this feature on, the machine will start printing the message from the last page received. By default, this feature is turned off but you can turn it on with the Initial Setup RX.  $\Rightarrow$  P.161 *"INI-TIAL SETUP RX"* Note that when on, this feature will use Memory Reception.

When this feature is on, the first page will be printed last.

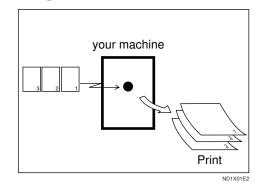

### **Page Reduction**

If you have switched this feature on and you receive a message that is longer than the paper in the cassette, usually the machine prints it on two pages. If you turn this feature on the machine reduces the width and length of the received image so that it will fit on one page. If A4  $\Box$  paper size is loaded and a message of B4  $\Box$ size is received, the machine will reduce the message to a single A4  $\Box$ sheet.

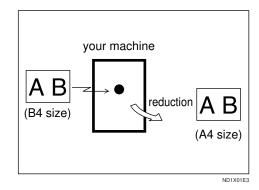

### 🔗 Note

□ By default this feature is turned off. Switch it on with the User Parameters. ⇒ P.203 "Changing the User Parameters"

### Reference

P.67 "Page Separation and Length Reduction (not available in some countries)"

### **TSI Print**

Usually the sender's TTI is printed on received messages. If the sender has not programmed their TTI, you will not be able to identify them. However, if you turn this feature on, the sender's RTI P.193 "*RTI/TTI*" or CSI P.193 "*RTI/TTI*" is printed instead so you can find out where the message came from.

### 🖉 Note

□ You can turn it on or off with the User Parameters. ⇒ P.203 "Changing the User Parameters"

### **CIL/TID Print**

The ISDN unit is required to use this function.

Two features are provided for identification of messages received by G4 (ISDN). If turned on, this information will be printed on every page. Turn CIL and TID on and off with the User Parameters.  $\Rightarrow$  P.203 "Changing the User Parameters"

The CIL (Call Identification Line) refers to the combination of the receiver's own fax number, name, the sender's own fax number and name, time, and page number. The default setting is on. The TID refers to the name registered by the sender in their TTI. The default setting is on.

### Limitation

□ This feature is available only when receiving in G4 mode.

### 🖉 Note

□ You can turn CIL off with the User Parameters.

### When There is No Paper of the Correct Size

If there is no paper in your machine that matches the size of a received message, the machine will choose a paper size based upon the paper you have available. For example, if your machine has LG  $(8.5 \times 15'')$   $\square$  installed and you receive an LT  $(8.5 \times 14'')$   $\square$  size message, check the LT column of the table below. The paper size at the top has the highest priority. In this case, since LG  $(8.5 \times 14'')$   $\square$  is higher priority than DLT  $(11 \times 17'')$   $\square$ , the message is printed on LG  $(8.5 \times 14'')$   $\square$ .

### Priority Table

Page Reduction	Disabled
Reduction in Sub-scan Direction	Enabled
Page Separation Threshold	20 mm
Width or Length Priority	Width

										Reduc		DIATIK
		Received Image Size										
		A3	B4	A4	A4	B5	A5	11x17"	8.5x14"	8.5x11"	8.5x11"	F/F4
	1	A3	B4	A4	A4	B5	A5	A3	8.5x14"	8.5x11"	A4	F/F4
	2	11x17"	A3	A4	A4	B5	8.5x11"	11x17"	A4	8.5×11"	A4	8.5x14"
	3	A4	11x17"	F/F4	8.5x11"	B4	8.5x11"	A4	A4	A4	8.5x11"	A4
	4	A4	B5	8.5x14"	8.5x11"	A4	A4	A4	8.5x11"	A4	8.5x11"	A4
Paper Select Priorities	5	8.5×11"	B5	A3	A3	A4	A4	8.5×11"	[8.5×11"	F/F4	A3	8.5x11"
ict Pric	6	8.5x11"	A4	8.5x11"	F/F4	8.5x11"	F/F4	8.5x11"	F/F4	8.5x14"	F/F4	8.5×11"
r Sele	7	F/F4	A4	[8.5x11"]	11x17"	8.5x11"	8.5x14"	F/F4	B4	A3	11x17"	B4
Pape	8	B4	8.5x11"	B4	B4	F/F4	B5	B4	A3	B4	B4	A3
	9	8.5x14"	8.5x11"	11x17"	8.5x14"	A3	B5 ∠	8.5x14"	11x17"	11x17"	8.5x14"	11x17"
	10		F/F4	A5		11x17"	A3		A5	A5		A5
	11		8.5x14"	B5		8.5x14"	B4		B5	B5		B5
	12			B5			11x17"		B5	B5		B5
4	—[	L	engthv	vise								
4	_[	s	ideway	/S								
	L		-									ND0X01E5

△ Image Rotation Half of the page is blank

•  $\Box$  and  $\Box$  indicate that the message is split over two pages of paper with the orientation and size shown.

### Limitation

- □ Paper placed in the bypass tray is not usually selected for printing a received message. However, you can use this tray if you select the bypass tray as the main paper tray using Reception with Specified Senders.  $\Rightarrow$  P.182 "Special Senders to Treat Differently (Special RX Nos.)"
- □ The paper size used to print a received message may be different from the size of the sent original.

### Note 🖉

□ Widths that this machine can receive are A4, B4, LT, LG, and A3. Any messages narrower than A4 or LT are sent as A4 or LT width with the length unchanged.

### 

P.67 "Page Separation and Length Reduction (not available in some countries)"

- P.68 "Page Reduction"
- P.67 "Image Rotation"

### **Just Size Printing**


If you turn this feature on and no paper tray is stocked with paper of a suitable size to print a received document, a message will appear on the display prompting you to load paper of the required size. When you have loaded the new paper, you can then print the message.

Two messages can appear:

• Paper Cassette

Paper designated to print FAX/Lists empty. Refill A4 paper.	are
	OK
	ND0Y04E

• Bypass Tray

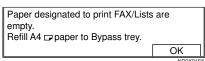

### 🖉 Note

□ You can turn this message on or off with the User Parameters  $\Rightarrow$  P.203 "*Changing the User Parameters*". By default this message is turned off.

### **Out Of Paper Display Message**

If the paper tray runs out of paper, you can have a message appear on the display asking you to add more paper.

### 🖉 Note

By default this message is turned off. You can turn it with the User Parameters. See P.203 "Changing the User Parameters"

### Having Incoming Messages Printed on Paper From the Bypass Tray

You can have messages sent from Specified Senders printed on paper from the Bypass Tray. This is useful if you need messages printed on a size of paper not stocked in the paper cassette(s).

### Limitation

When the optional Fax Feature Expander is installed, you can set paper between 128 and 800 mm long in the Bypass Tray.

### 🖉 Note

- □ Before you can use this feature, you need to turn on Authorized Reception (Initial Setup RX settings, P.161 *"INITIAL SETUP* RX"), program the Specified Senders (Key Operator Settings, Special RX No.) along with the Paper Tray set to "Bypass Tray".
- □ When you set paper sizes other than A4 landscape, B4 landscape and portrait, A3 landscape and portrait in the Bypass Tray, specify the paper size.⇒ P.162 "To set the Bypass Paper Size"
- If the specified paper size and the size of paper set in the Bypass Tray do not match, paper jams may occur and the image may be truncated.
- □ If you use this feature, Image Rotation is not possible.

## 4. Advanced Transmission Features


## **OVERVIEW**

### Overview

This feature describes various options that you can choose when sending a fax message. The selections you make will only apply to the current fax message.

## SEND LATER

Using this feature, you can instruct the machine to delay transmission of your fax message until a later time which you specify. This allows you to take advantage of off-peak telephone charges without having to be by the machine at the time.

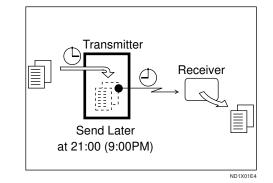

For ease of use, you can program the time when your phone charges become cheaper as the Economy Transmission time.  $\Rightarrow$  P.195 *"Registering The Economy Transmission Time"* 

Then if you have a non urgent fax, just select Send Later with Economy Transmission when you scan it in. Faxes will be queued in memory and will start being sent at Economy Transmission time.

### 🖉 Note

- □ You can not specify a time more than 24 hours into the future.
- □ If you wish to use Economy Transmission, program the time when your phone charges get cheaper. ⇒ P.195 "Registering The Economy Transmission Time"
- This feature is only available with Memory Transmission.
- Set your original and select any scan settings you require.


### Press [Mode].

() Ready	Set	originals.	Enter	fax no.
Memory Tra	ns.			100%
<u>[63]</u>			Dest:	0
		Mode	•	Info.




The Transmission Mode menu appears.

Enter the "Send Later" function number with number keys.

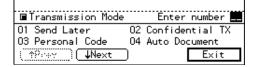

Enter the time with the number keys. To change AM/PM, press the [AM ↔ PM] (North America only) or press [Economy TX].

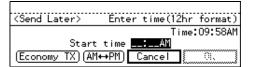


### 🖉 Note

- □ If the current time shown on the display is not correct, adjust it.
   ⇒ P.208 "Date/Time"
- □ When entering numbers smaller than 10, add a leading zero.
- □ If you make a mistake, press the **[Clear/Stop]** key and try again.
- To cancel Send Later, press [Cancel] and the display will return to the Transmission Mode menu.

### **5** Press [OK].

The Transmission Mode menu is shown on the display. A check mark is added to Send Later.

### **6** Press [Exit].

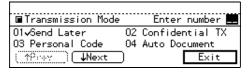




The initial display is shown.

### 🔗 Note

"Send Later" is shown on the display. If you set up another advanced transmission function (except Polling Reception), "Others" is displayed.

### **7** Dial and press the **[Start]** key.

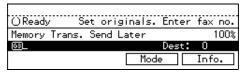


### 🖉 Note

 □ You can cancel transmission of a message set up for Send Later.
 ⇒ P.103 "Canceling a Transmission"

## **CONFIDENTIAL TRANSMISSION**

If you do not want your message to be picked up casually at the other end, use this feature. The message will be stored in memory at the other end and will not be printed until an ID is entered.

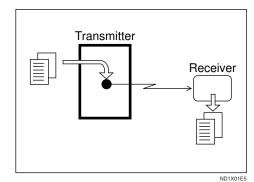

### Preparation

If you install the optional Fax Feature Expander or Hard Disk option, program the Confidential ID.  $\Rightarrow$  P.196 "*ID Code*"

There are two types of Confidential Transmission:

### Default ID

The other party can print the message by entering the Confidential ID programmed in their machine.

### ID Override

Should you wish to send a confidential message to a particular person at the other end, you can specify the Confidential ID that person has to enter to see that message. Before you send the message, don't forget to tell the intended receiver the ID that must be entered to print it.

### Limitation

- □ The destination machine must be of the same make and have the Confidential Reception feature.
- □ The destination machine must have enough memory available.

### 🖉 Note


- □ If the optional Fax Feature Expander is installed, we recommend that you program the Confidential ID beforehand.
- □ An ID can be any 4 digit number except 0000.
- **1** Set your original and select any scan settings you require.
- **2** Press [Mode].

OReady	Set	originals.	Enter	fax no.
Memory Trans	5.			100%
63			Dest:	0
		Mod	e	Info.
•				



The Transmission Mode menu appears.

Enter the "Confidential TX" function number with the number keys.

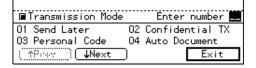

**4** Depending on the Confidential Transmission type, use one of the following procedures:

# Default ID Press the e or keys to turn Default ID on and press [OK]. Confidential TX> Select mode with Default ID / ID Override Cancel OK


The Transmission Mode menu is shown again. A check mark is added to Confidential TX.

### 🖉 Note


To cancel the Confidential Transmission, press [Cancel]. The Transmission Mode menu is shown on the display.

### Override ID

● Press the or ▶ keys to turn Override ID on.

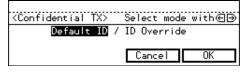

### 2 Enter the Confidential ID (4digit number) with the number keys and press [OK].

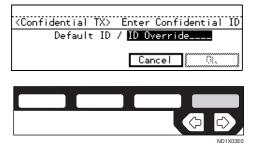

The Transmission Mode menu is shown again. A check mark is added to Confidential TX.

### 🖉 Note

To Cancel the Confidential Transmission, press [Cancel]. The Transmission Mode menu is shown on the display.

### **5** Press [Exit].

■Transmission Mode	Enter number 💻
01 Send Later 03 Personal Code	02√Confidential TX 04 Auto Document
(^?) UNext	) Exit



The initial display is shown.

OReady S	et originals.	Enter	fax no.
Memory Trans.	Conf.Trans		100%
63		Dest:	0
	Mode	e	Info.

### 🖉 Note

"Conf.Trans" is shown on the display. If you set up another advanced transmission function (except Polling Reception), "Others" is displayed.

### **6** Dial and press the **[Start]** key.

### 🖉 Note

□ For details on deleting a Confidential Transmission. ⇒ P.76 "CONFIDENTIAL TRANSMIS-SION"

## PERSONAL CODE TRANSMISSION


Personal Codes allow you to keep track of machine usage (e.g., for billing purposes). If everybody uses a Personal Code when they use the fax machine, the codes or the names programmed for the codes will be printed in the TCR and other reports. This will help you to check up on who has been using the machine and how often.  $\Rightarrow$  P.116 "*PRINTING THE TCR*"

### Limitation

□ Personal codes may be any 4-digit number except 0000 (0001 through 9999). You can program up to 20 personal codes. If the Optional Fax Feature Expander is installed, up to 50 personal codes can be programmed. ⇒ P.166 "Registering Personal Codes"

## Set your original and select any scan settings you require.

### **2** Press [Mode].

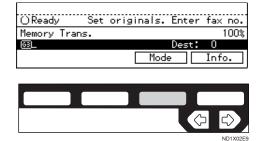


The Transmission Mode menu appears.

### Enter a "Personal Code" function number with the number keys.

■Transmission Mode	Enter number 💻
01 Send Later 03 Personal Code	O2 Confidential TX O4 Auto Document
(^^?∴ey ) ↓Next	) Exit

Enter a personal code (4-digit number) with the number keys.

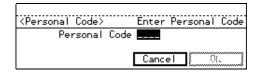


### 🖉 Note

- □ If a personal code is programmed with a name, it is shown below the personal code on the display.
- □ If you make a mistake, press the **[Clear/Stop]** key and try again.
- □ To cancel the Personal Code Transmission, press **[Cancel]**. The Transmission Mode menu is shown on the display.

### **5** Press [OK].

The Transmission Mode menu is shown again. A check mark is added to "Personal Code".

**6** Press [Exit].

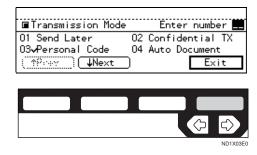

### The initial display is shown.

OReady	Se	et ori:	ginals.	Enter	fax no.
Memory T	rans.	Pers.	Code08	24	100%
63				Dest:	0
			Mod	e	Info.

### 🔗 Note

"Pers. Code XXXX" is shown on the display. If you set up another advanced transmission function (except Polling Reception), "Others" is displayed.

**2** Dial and press the **[Start]** key.

## SENDING AN AUTO DOCUMENT

If you often have to send a particular page to people (e.g., a map, a standard attachment or a set of instructions), store it as an Auto Document assigned to a Quick Dial key. Then, when you need to send that page to somebody, just press the Quick Dial that you assigned it to instead of having to scan the whole page in again.

### Preparation

You need to program an Auto Document.

You can fax an Auto Document by itself, or attach it to a normal fax message.

### ∰Important

□ Whenever you store or change an Auto Document, we recommend that you print the Auto Document list for reference. ⇒ P.153 "Auto Document list"

### Limitation


- You can attach one Auto Document to each transmission.
- □ You can store up to 6 Auto Documents. With optional Feature Expander, you can store up to 18 Auto Documents. ⇒ P.151 "Registering Auto Documents"

### 🔗 Note

- □ Originals with Auto Documents are sent by Memory Transmission.
- When sending an Auto Document with another original, the Auto Document is sent first.
- Storing Auto Documents reduces the amount of free memory slightly. Unless you delete the document, free memory will not return to 100%.


- □ You can print an Auto Document or a summary of Auto Documents currently stored in memory. ⇒ P.158 "REPORTS/LISTS"
- **1** Set your original and select any scan settings you require.

### Press [Mode ].

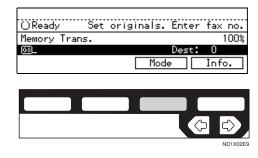


The Transmission Mode menu appears.

Enter the "Auto Document" function number with the number keys.

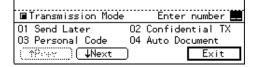

4 Enter the number of the Auto Document you want to send with the number keys.

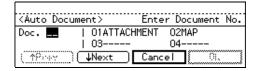

### 🖉 Note

- □ If the list does not contain the Auto Document you want to send, press [↑Prev.] or [↓Next].
- If you make a mistake, press the [Clear/Stop] key and try again.

- □ To cancel the Auto Document, press **[Cancel]**. The Transmission Mode menu is shown.
- **5** If you are sending just the Auto Document, press [#]. If you wish to send it along with another original, press [OK].

[O1 ATTACHMENT ] is attached to
the 1st page of original(s). *Press ⊕ to send only this document.
*Press (#) to send only this document. האור אין לא

The Transmission Mode menu is redisplayed. A check mark is added to "Auto Document".

### **6** Press [Exit].

■Transmission Mode	Enter number 💻
01 Send Later 03 Personal Code	O2 Confidential TX O4√Auto Document
( <u>↑Prev</u> ) <b>↓</b> Next	) Exit



The initial display is shown.



### 🖉 Note

"Auto Doc." is shown on the display. If you set up another advanced transmission function (except Polling Reception), "Others" is displayed.

### **7** Dial and press the **[Start]** key.

# 2-SIDED TRANSMISSION (DOUBLE-SIDED TRANSMISSION)

Use this feature to send 2-sided originals from the Document Feeder (ADF). Both sides of an original will be scanned. The front and back of the scanned original will be printed in order, on separate sheets at the other end. Note that the orientation of alternate sheets may be reversed at the other end.


### Limitation

The front and back of a 2-sided document are scanned in different directions. This means that when the front and back sheets of each page are printed at the other end, they may be upside-down in relation to each other.

### 🖉 Note

- If the first page is a single-sided cover sheet, you can choose to have this page sent using singlesided transmission. The remaining pages will be sent using Duplex.
- □ You can confirm whether both sides were properly scanned in with the Stamp feature  $\Rightarrow$  P.52 *"Stamp"*.
- **1** Set your original in the Document Feeder (ADF) and select any scan settings you require.

### **2** Press [Mode].

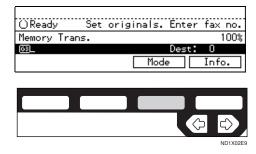


The Transmission Mode menu appears.

Enter the "2-Sided TX" function number with the number keys.

	_
Transmission Mode Enter number	
05 2-Sided TX 06 Book Fax	
07 Irreg. Scan Area 08 Trans. Deadline	
[↑Prev] ↓Next Exit	

Press the or key to select the first page that you want to be scanned on both sides.

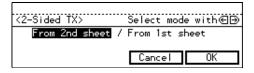

### 🖉 Note

□ If your document contains the single-sided cover letter as the first page, select From 2nd sheet, so that the machine scan both sides from the second page.

D Press [OK] .

### **6** Press [Exit].

L	
■Transmission Mode	Enter number 🔜
05v2-Sided TX	06 Book Fax
07 Irreg. Scan Area	08 Trans. Deadline
(↑Prev) ↓Next	) Exit


The initial display is shown.

OReady	Set	origin	nals.	Enter	fax	no.
Memory Tran:	s. 2-	-Sided	TΧ			99%
<u>63</u>				Dest:	0	
			Mode	≥ □	Info	<b>.</b>

### 🖉 Note

"2-Sided TX" is shown on the display. If you set up another advanced transmission function (except Polling Reception), "Others" is displayed.


The Transmission Mode menu is redisplayed. A check mark is add-ed to "2-Sided TX".

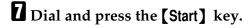

## **BOOK FAX**

Use to send book originals from the exposure glass. Pages are scanned in the order shown below.

Note that depending on the paper sizes available on the destination machine, the message may be reduced when printed at the other end.

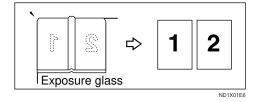


### 🔗 Note

□ You can have bound originals scanned in left page first or right page first. By default, the machine scans in the left page first but you can change this setting with the User Parameters. ⇒ P.203 "Changing the User Parameters"


Set your original on the exposure glass and select any scan settings you require.

### 2 Press [Mode] .

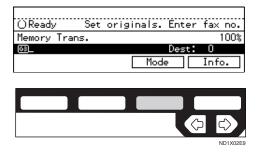


The Transmission Mode menu appears.

Enter the "Book Fax" function number with the number keys.

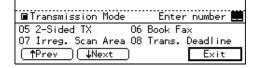


Press the or keys to select the size of the original.

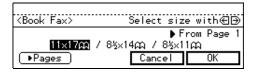

### 🖉 Note

- To cancel this mode, press [Cancel]. The Transmission Mode menu is shown on the display.
- □ If you choose 11×17", the original will be sent using Image Rotation Transmission.
- E Press [▶ Pages] to toggle between pages 1 and 2 (see middle right corner of the display).

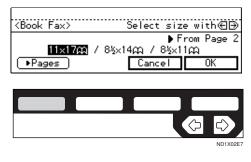


### 🖉 Note

Select "From Page 1" to send a book original from the first page. Select "From Page 2" if you want to send a cover letter as the first page.

**6** Press [OK].

The Transmission Mode menu is shown. A check mark is added to "Book Fax".

### **7** Press [Exit].

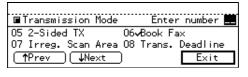



The initial display is shown.

OReady S	et or	iginals.	Enter	fax	no.
Memory Trans.	Book	Fax			99%
<u>63</u> _			Dest:	0	
		Mod	e	Info	o.

### 🖉 Note

Book Fax" is shown on the display. If you set up another advanced transmission function (except Polling Reception), "Others" is displayed.

**8** Dial and press the **[Start]** key.

### **Bound Original Page Order**


When sending bound originals (books, magazines etc.), you can choose to have either the left page or right page sent first.

### 🖉 Note

□ The default setting is Send Left Page First. You can change this setting with the User Parameters ⇒ P.203 "Changing the User Parameters".

## CHOOSING THE AREA TO BE SCANNED YOURSELF (IRREGULAR SCAN AREA)

Usually the machine automatically detects the size of an original when it is scanned. However, you may wish to override this and choose the area to be scanned yourself.

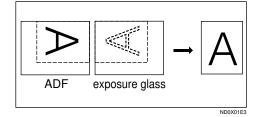


You can either choose one of the standard paper sizes (A4  $\square \square$ , B4  $\square$ , A3  $\square$ , 8<sup>1</sup>/<sub>2</sub> × 11"  $\square \square$ , 11" × 17"  $\square$ ) or one of two custom sizes programmed in advance (Area 1 and Area 2).  $\Rightarrow$ P.16 "*Paper Size and Scanned Area*"

Although you can specify a different scan area for each page when using the exposure glass, only one size is allowed when scanning from the Document Feeder (ADF).

Set your original and select any scan settings you require.

### **2** Press [Mode].

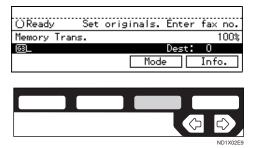

The Transmission Mode menu appears.

Enter the "Irreg. Scan Area" function number with the number keys.

Transmission Mode	Enter number 💻
	Book Fax
07 Irreg. Scan Area 08	Trans. Deadline
(↑Prev) ↓Next	Exit

Press the or key to select the paper size.

<irreg. area="" area≻="" scan="" select="" td="" with€⊡<=""></irreg.>
Area 1/Area 2/8½×1111/8½×1111/8½×1411
/11×17፬/A4곕/A4፬/A3፬/B4፬
Status Cancel OK


### 🖉 Note

- □ To see which paper sizes have already been programmed, press **[Status]**.
- □ To cancel the Irreg. Scan Area, press **[Cancel]**. The Transmission Mode menu is shown.

### D Press [OK].

The Transmission Mode menu is shown again. A check mark is added to Irreg. Scan Area.

### **6** Press [Exit].

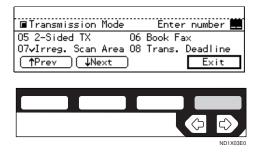

The initial display is shown.

OReady S	iet originals. Enter	fax	no.
Memory Trans.	Irreg.Area		99%
[G3]	Dest:	0	
	Mode	Infe	<b>.</b>

### 🔗 Note

"Irreg.Area" is shown on the display. If you set up another advanced transmission function (except Polling Reception), "Others" is displayed.

## **2** Dial and press the **[Start]** key.

## TRANSMISSION DEADLINE (TRD)

If you have to send an urgent message and the line is busy, this feature saves you standing by the machine and redialing the number. If the message cannot be sent the first time, the machine redials automatically at intervals of five minutes any number of times until the deadline passes. After the deadline passes, the Transmission Result Report is automatically printed. This indicates whether or not the message was sent within the deadline.

### Limitation


You can not specify a deadline more than 24 hours into the future.

### 🖉 Note

□ If the message cannot be sent before the deadline and the number of redials is less than 5, the machine continues redialing until it has redialed five times then prints the Transmission Result report. If the number of redials has already reached 5, the machine prints the Transmission Result report and stops transmission.

## Set your original and select any scan settings you require.

### **2** Press [Mode].

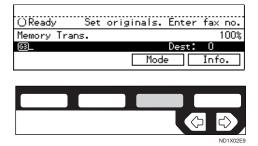

The Transmission Mode menu appears.

### Enter the "Trans. Deadline" function number with the number keys.

■Transmission Mode	Enter number 🛄
	Book Fax
07 Irreg. Scan Area 08	Trans. Deadline
(↑Prev) ↓Next	Exit

### 🖉 Note

□ If the appropriate display is not shown, press [↑Prev.] or [↓Next].

4 Enter the deadline with the number keys.



### 🖉 Note

- □ If the current time on the display is not correct, adjust it. ⇒ P.208 "Date/Time"
- □ To enter a number smaller than 10, add a leading zero.
- □ If you make a mistake, press the **[Clear/Stop]** key and try again.
- □ To cancel the Transmission Deadline, press **[Cancel]**. The Transmission Mode menu is shown.

### D Press [OK].

The Transmission Mode menu is shown. A check mark is added to "Trans. Deadline".

### **6** Press [Exit].

■Transmission Mode	Enter number 💻
05 2-Sided TX 0 07 Irreg. Scan Area 0 ↑Prev ↓Next	16 Book Fax 18√Trans. Deadline Exit

The initial display is shown.

OReady S	et originals.	Enter	fax	no.
Memory Trans.	TRD			99%
<u>[63]</u>		Dest:	0	
	Mode	•	Info	<b>.</b>


### 🖉 Note

"TRD" is displayed. If you set up another advanced transmission function (except Polling Reception), "Others" is shown.

## **2** Dial and press the [Start] key.

## POLLING TRANSMISSION

Use Polling Transmission when you want to leave an original in the machine's memory for others to pick up. The message will be sent when the other party calls you up.

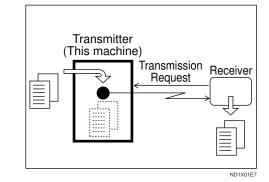

There are three types of Polling Transmission.

### Free Polling Transmission

Anybody can poll the message from your machine. The machine sends it regardless of whether Polling ID's match.

### Default ID Polling Transmission

The message will only be sent if the Polling ID of the machine trying to poll your message is the same as the Polling ID stored in your machine. Make sure that both machines' Polling IDs are identical in advance.

### Override ID Polling Transmission


You must enter an Override Polling ID unique to this transmission. This ID overrides that stored in the Polling ID. The user must supply this ID when they poll your machine and if the IDs match, the message is sent. Make sure the other end knows the ID you are using in advance.

### Limitation

- Polling Transmission is allowed only if the receiver's machine has the Polling Reception feature. With Free Polling, a message can also be sent to other manufacturer's machines as long as they have the Polling Reception feature. With Default ID and Override ID Polling Transmission, an original can be sent only to a the machine of the same make with the Polling Reception feature.
- Free Polling and ID Polling Transmission allow only one file to be stored in memory. Personal ID Polling Transmission allows a file to be stored in memory for each ID; a total of up to 200 files for varying ID's can be stored.
- Before using "Default ID Polling" and "Override ID Polling", you need to program the polling ID.
- A polling ID may be any string of four numbers (0 to 9) and characters (A to F) except 0000 and FFFF.

### 🖉 Note

- □ The communication fee is charged to the receiver.
- **1** Set your original and select any scan settings you require.
- Press [Mode].

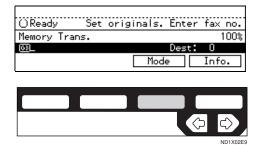

The Transmission Mode menu appears.

Enter the "Polling TX" function number with the number keys.

·		
Transmission Mode	Enter	number 💻
	Polling	RX
11 Transfer Request 12	Options	
( Prev ( White xt )		Exit

### 🖉 Note


- □ If the appropriate display is not shown, press [↑Prev.] or [↓Next].
- **4** Depending on the Polling Transmission type, use one of the following procedures:

Free Polling Transmission

● Press the or key to select[Free Poll.] then press [OK].

<polling tx=""></polling>	Select mode with∈⊕
Default ID/Free	▶Use once Poll./ID Override
●File	Cancel OK

Press[ File] and specify whether to save the stored original or not.

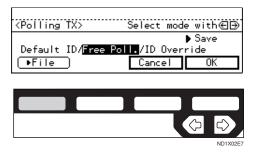


Each time you press the key, the text at the middle right corner of the display toggles between "Save" and "Use once".

### 🖉 Note


□ To delete the original immediately after transmission, select "Use once". To repeatedly send the original, select "Save".

### Default ID Polling Transmission

● Press the or key to select "Default ID" and press [OK].

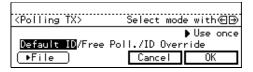

Press [ File] and specify whether to save the stored original or not.

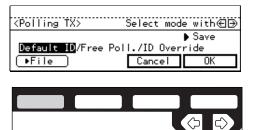

Each time you press the key, the text at the middle right corner of the display toggles between "Save" and "Use once".

### 🖉 Note

To delete the original immediately after transmission, select "Use once". To repeatedly send the original, select "Save".

ID Override Polling Transmission

## ● Press the or key to select ID Override and press [OK].

<polling tx=""></polling>	Select mode with€∋
Default ID/Free	▶Use once Poll./ID Override
●File	Cancel OK

# 2 Enter the 4 character Polling ID with letter keys/ number keys and the letter (A–F).

<polling tx=""></polling>	Enter Polling ID
	▶ Use once
Default ID/Free Pol	1./ID Override
● File	Cancel 🔍

### 🖉 Note

□ If you make a mistake, press the **[Clear/Stop]** key and try again.

0000 and FFFF is not available.

③ Press [▶ File] and specify whether to save the stored original.

<polling tx=""></polling>	Enter Polling ID
Default ID/Free Po ●File	▶ Save   ./ <u>ID Override</u> Cancel ्ि्

Each time you press the key, the text at the middle right corner of the display toggles between "Save" and "Use once".

### 🖉 Note

To delete the original immediately after transmission, select "Use once". To repeatedly send the original, select "Save".

### **5** Press [OK].

The Transmission Mode menu is shown. A check mark is added to "Polling TX".

### 🖉 Note

□ To cancel the Polling Transmission, press **[Cancel]**. The Transmission Mode menu is shown.

### **6** Press [Exit].

Transmission Mode	Enter number 📖
	0 Polling RX
11 Transfer Request 1	
[ <u>†Prev</u> ]( <u>iiiiixt</u> ]	Exit
	ND1X03E
	NDTX03E

The initial display is shown.

() Ready	Set orignals.	Press	Start
Memory Trans.	Polling TX		99%
<u>63</u> *******	÷		
	Mode	Ir	nfo.

### 🖉 Note

Polling TX" is displayed. If you set up other advanced transmission function (except Polling Reception), "Others" is displayed.

**2** Press the [Start] key.

### Polling Transmission Clear Report

This report allows you to verify whether Polling Transmission has taken place.

### Limitation

□ This report is not printed if the User Parameters are set to allow the stored originals to be repeatedly sent (Save). ⇒ P.203 "Changing the User Parameters"

### 🖉 Note


- □ This report is turned on by default. You can turn it off if you wish. ⇒ P.203 "Changing the User Parameters"
- By default, a portion of the sent image is printed on the report. You

can turn this off with the User Parameters.  $\Rightarrow$  P.203 "Changing the User Parameters"

□ You can also check the result of a Polling Transmission with the TCR.

# POLLING RECEPTION

Use this function if you want to poll a message from another terminal. You can also poll documents from many terminals with only one operation (use Groups and Keystroke programs to fully exploit this feature).

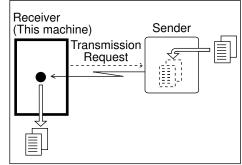

ND1X01E8

There are two types of Polling Reception.

#### Default ID Polling Reception (Free Polling Reception)

Use this method for Free Polling or Default ID Polling. If the Polling ID is programmed in your machine, any messages waiting in the transmitting machine with the same ID are received. If the other machine does not have any messages waiting with the same Polling ID, any messages that do not require ID are received (Free Polling).


#### Override ID Polling Reception

You must enter an Override Polling ID unique to this transmission. This ID overrides that stored in the Polling ID.

Your machine will receive any messages waiting in the transmitting machine with matching ID's. If no ID's match, any messages that do not require ID are received (Free Polling).

#### Limitation

- Polling Reception requires that the other machine can perform Polling Transmission.
- To receive a message sent by any Default ID Polling Transmission or Override ID Polling Transmission, it is necessary to specify the same polling ID as the sender's.
- To receive a message sent by Default ID Polling Transmission or Override ID Polling Transmission, the sender must use a machine of the same make that has polling capability. With Free Polling Reception, a message can be also received from other manufacturers' machines as long as they have polling capability.
- □ A Polling ID may be any four numbers (0 to 9) and characters (A to F) except 0000 and FFFF.
- Press [Mode].

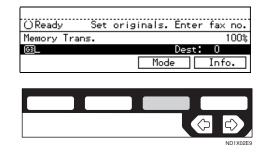

The Transmission Mode menu appears.

**2** Enter the "Polling RX" function number with the number keys.

■Transmission Mode	Énter	number 🔜
	10 Polling	RX
11 Transfer Request	12 Options	
(↑Prev (↓NH+xt)		Exit


### 🖉 Note

□ If the appropriate display is not shown, press [↑Prev.] or [↓Next].

Depending which method you are using, choose one of the following procedures:

**Default ID Polling Reception** 

● Press the or key to select the Default ID and press [OK].

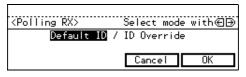

**ID Override Polling Reception** 

<polling rx=""></polling>			Enter	Polling :	ÍĎ
Default	ID .	/ ID	Overrio	de	
		C	ancel		]

2 Enter a polling ID (4 characters) with the number keys and the letter (A–F).

#### 🖉 Note

- □ If you make a mistake, press the **[Clear/Stop]** key and try again.
- □ 0000 and FFFF is not available.

### Press [OK].

The Transmission Mode menu is shown. A check mark is added to Polling Reception.

### 🖉 Note

□ To cancel Polling Reception, press **[Cancel]**. The Transmission Mode menu is shown.

# D Press [Exit].

Transmission Mode	Enter	number 💻
D9 Polling TX 11 Transfer Request	10vPolling	RX
fPrev ( With Xt		Exit



The following display is shown.

OReady	Set	originals.	Enter	fax	no.
Polling RX					99%
63			Dest:	0	
		Mod	e 🗌	Info	þ.

### 🖉 Note

 $\square$  "Polling RX" is displayed.

**6** Dial and press the **[Start]** key.

# **Polling Reserve Report**

This report is printed after Polling Reception has been set up.

#### 🖉 Note

□ By default this report is turned off. Turn it on with the User Parameters. ⇒ P.203 "Changing the User Parameters"

# **Polling Result Report**

This report is printed after a Polling Reception has been completed and shows the result of the Polling Reception.


#### 🖉 Note

- You can also check the result of a Polling Reception with the TCR.
- □ By default this report is turned on. Turn it on with the User Parameters. ⇒ P.203 "Changing the User Parameters"

# TRANSFER REQUEST

Transfer Request allows fax machines that have this feature to automatically distribute incoming messages onto multiple fax destinations. This feature helps you save costs when you send the same message to more than one place in a distant area, and saves time since many messages can be sent in a single operation.

The diagram below may make the concept clearer.

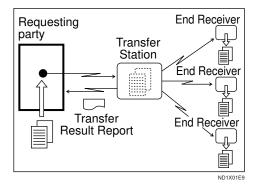

#### Preparation

Before you can use this feature you must program the Polling ID and your own dial number.  $\Rightarrow$  P.196 *"Polling ID"*, P.198 *"G3 Analog Line"* 

Polling ID's of the requesting party (this machine) and Transfer Stations must be identical.

The following terminology is used in this section.

#### Requesting Party

The machine where the message originates from, i.e. the machine making a Transfer Request (in this section, this machine).

#### Transfer Station

The machine that forwards the incoming message to another destination, i.e. the machine that receives the Transfer Request.

#### End Receiver


The final destination of the message, i.e. the machine that the Transfer Station sends to. End Receivers must be programmed into Quick Dials, Speed Dials or Groups in the Transfer Station.

#### Limitation

- □ The Transfer Stations you specify must be machines of the same make as this machine and have the Transfer Station function.
- □ You can specify up to 99 Transfer Stations in a Transfer Request.
- □ You can have up to 30 End Receivers per Transfer Station. If you specify a Transfer Station Group, the Group counts as a single receiver.
- The combined total of End Receivers and Transfer Stations you specify with the number keys cannot exceed 99.

# Set an original and select any scan settings you require.

#### Press [Mode].

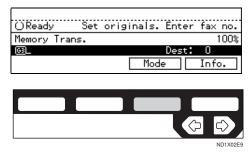

The Transmission Mode menu appears.


Enter the "Transfer Request" function number with the number keys.

■Transmission Mode	Enter number 🛄
09 Polling TX 10	
11 Transfer Request 12	Options
( <u>†Prev</u> )( <u>initiant</u> )	Exit

#### 🖉 Note

□ If the appropriate display is not shown, press [↑Prev.] or [↓Next].

# 4 Enter a Transfer Stations and press [Recv. Stn].

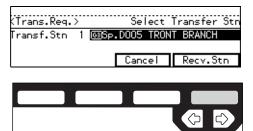

### 🖉 Note


- Enter the fax numbers of the Transfer Stations with either Quick Dials, Speed Dials or the number keys.
- □ If you make a mistake, press the **[Clear/Stop]** key and try again.
- □ To cancel the Transfer Request, press**[Cancel]** . The Transmission Mode menu is shown again.

Enter one or more End Receivers.

(T	Select Receive Stn
(Trans.Req.)	pelect Receive oth
Transf.Stn 1 ⊡Sp.	DOOS TRONT BRANCH
Recv. Stn 🔤	Dest: O
	Cancel 🥂 🔍


#### Solution Note

- □ You cannot enter the numbers of the End Receivers directly. The numbers must be stored in Quick Dials, Speed Dials or Groups in the Transfer Station(s). To specify an End Receiver, use the special format described in ⇒ P.98 "Specifying an End Receiver".
- □ Press **[Add RcvStn]** if you wish enter more End Receivers.
- Press or to see the End Receivers already entered. You can select an End Receiver from this list and cancel it by pressing the [Clear/Stop] key.
- □ To cancel the Transfer Request, press [Cancel].
- When you have specified all the End Receivers, press [OK].
- **2** If you want to enter an additional Transfer Station, press [Yes] and repeat steps 4 to 6.

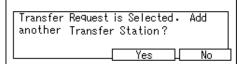

If you press **[No]**, the Transmission Mode menu is shown and a check mark is added to Transfer Request.

# 8 Press [Exit].

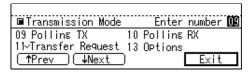

	$\Diamond$	$\bigcirc$
		ND1X03E0

The following display is shown.

	: Enter fax no.
Memory Trans. Trans.Req.	100%
Transf.Stn :1 Rec	eive Stn :58
Mo	ode Info.

#### 🖉 Note

□ The numbers of Transfer Stations and End Receivers are displayed.

Press the [Start] key.

### Specifying an End Receiver

When you make a Transfer Request, you must specify the final destinations (End Receivers) for your message.

You cannot enter the numbers of the End Receivers directly. Instead, enter a simple code that describes where the numbers are stored in the Transfer Station (in Quick Dials, Speed Dials or Groups).

The numbers must first have been stored in Quick Dials, Speed Dials or Groups in the Transfer Station(s).

#### Quick Dial

Enter **[#]** followed by the number (2 digits) of the Quick Dial where the End Receiver is stored. For example, to choose the number stored in Quick Dial 01 in the Transfer Station, enter: **[#] [0] [1]** 

#### Speed Dial

Enter **[#]**, **[★]** followed by the Speed Dial code (2 or 3 digits). For example, to choose the number stored in Speed Dial 12 in the Transfer Station, enter:**[#][\*][1][2]** 

#### Group Dial

Enter[#], [\*], [\*] followed by the Group number (2 digits). For example, to choose the number stored in Group 04 in the Transfer Station, enter:[#][\*][\*][0 ][4]

# **TRANSMISSION OPTIONS**

This section describes various features that you can switch on and off for any particular transmission by following the procedure at the end of this section.

In addition, if you frequently use a certain configuration of options, you can change the default home position (on or off) of each option with the User Parameters.  $\Rightarrow$  P.203 "*Changing the User Parameters*"

### TTI (Transmit Terminal Identification) Print

. . . . .

By default, the machine adds your TTI identification to each message you send so it appears on the printed fax at the other end. You can change your TTI with the Key Operator Settings.  $\Rightarrow$  P.166 *"KEY OPERATOR SETTINGS"* 

#### 🖉 Note

□ You can switch this feature off with the User Parameters. ⇒ P.203 *"Changing the User Parameters"* 

. . . . . .

# Cabel Insertion

With this feature you can have the receiver's name printed on the message when it is received at the other end. The name will be printed at the top of the page and will be preceded by "To".

#### Limitation

If you select Label Insertion, the label might be printed over a portion


of the image when received at the other end.

#### 🖉 Note

Program the receiver's name and number in a Quick Dial or Speed Dial with Label Insertion turned on with the user parameter.


# 🔆 Auto Reduction

By default, if the receiver's paper is smaller than the paper you are sending on, the message is automatically reduced to fit onto the paper available at the other end.

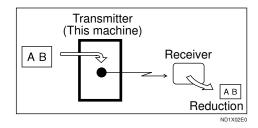

#### ∰Important

□ If you turn this feature off, the scale of the original is maintained and some parts of the image may be lost when printed at the other end.

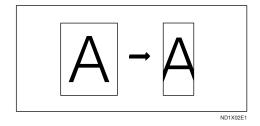

#### 🖉 Note

□ You can switch this feature on and off with the User Parameters. The

default setting is on.  $\Rightarrow$  P.203 "Changing the User Parameters"

#### ID Transmission

If you turn this feature on, transmission will only take place if the destination's Polling ID is the same as yours. This feature can stop you from accidentally sending information to the wrong place (you need to co-ordinate Polling ID's with the other party).

#### 🖉 Note


□ You can switch this feature on and off with the User Parameters. The default setting is off. ⇒ P.203 "Changing the User Parameters"

. . . . . . . . . . . . . . .

## Selecting Transmission Options for a Single Transmission

Set the original and select any scan settings you require.

### Press [Mode].

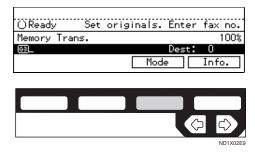

The Transmission Mode menu appears.


Enter the "Options" function number with the number keys.

■Transmission Mode Enter	number	
09 Polling TX 10 Polling		
11 Transfer Request 12 Options		
( Prev ( White xt )	Exit	

#### 🖉 Note

□ If "Options" is not shown, press [↑Prev.] or [↓Next].

Press the or key to switch TTI Print on or off.

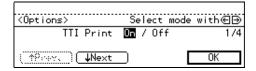


#### 🖉 Note

- □ The default setting is on.
- If you want to set another option, press [↓Next].

#### 🖉 Note

 $\Box$  To finish, go to step 12.

#### C Press the or b key to switch Label Insertion on or off.

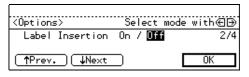


#### 🖉 Note

- □ The default setting is off.
- To cancel the changes, press [Cancel]. The Transmission Mode menu is shown.
- If you want to set another option, press [↑Prev.] or [↓Next].

#### 🖉 Note

□ To finish, go to step 12.

# Press the 🔄 or 🆻 key to switch Auto Reduction on or off.

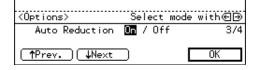

### 🖉 Note

- □ The default setting is on.
- □ To cancel the setting, press **[Cancel]**. The Transmission Mode menu is shown.

#### If you want to set another option, press [↑Prev.] or [↓Next].

### 🖉 Note

 $\Box$  To finish, go to step 12.

# Press the or key to switch closed network on or off.



# If you want to set another option, press [↑Prev.].

#### 🖉 Note

 $\Box$  To finish, go to step 12.

### Press [OK].

The Transmission Mode menu is shown. A check mark is added to Options.

# B Press [Exit].

■Transmission Mode	Enter	number 🗮
09 Polling TX 10 11 Transfer Request 12	Polling Options	RX
TPrev ( interaction in the second sec		Exit



The initial display is shown.

OReady	Set (	origina	ls. Ent	er	fax	no.
Memory Tra	ans. Opt	tions				99%
<u>[63]</u>			Des	t:	0	
			1ode 🛛		Info	) <b>.</b>

#### 🔗 Note

"Options" is shown. If you set up another advanced transmission function (except Polling Reception), "Others" is shown.

# Dial and press the [Start] key.

This page is intentionally blank.

# 5. Communication Information

# CHECKING AND CANCELING TRANSMISSION FILES

Transmission files are originals that have been stored in memory and are awaiting transmission. The features that produce transmission files are Memory Transmission, Confidential Transmission, Transfer Request, Polling Reception and Polling Transmission. These features are described in detail elsewhere in this document.

This section describes how you can:


- Delete a file (cancel transmission)
- Print a file \*1
- Check the destination(s) and options selected
- Alter when a file will be sent
- Resend a file
- Change destinations
- Delete destinations
- Add destinations
- <sup>\*1</sup> This does not apply to Polling Reception or Confidential Transmission.

#### Limitation

- If you cancel a file being sent, the communication is immediately stopped and the file is canceled. A page which has already been sent cannot be canceled.
- You cannot change the start time add/delete a destination while a file is being sent.


# **Canceling a Transmission**

### Press [Info.].

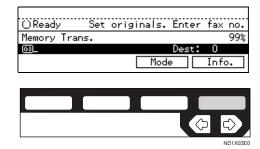

The Information menu is shown.


**2** Enter the "Check/Cancel TX Files" function number with the number keys.

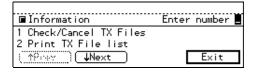

#### 🖉 Note

□ If "Check/Cancel TX Files" is not shown, press [**1**Prev.] or [↓N-ext].

# B Press the € or ► key until the file you want to delete is shown and press [Delete].

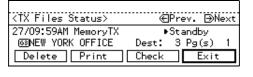




# 4 Press [Yes].





The file is erased.

# **5** Press [Exit].

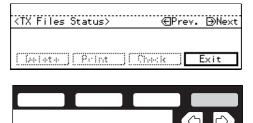


### 🖉 Note

□ To delete another file, repeat steps 3 and 4.

ND1X03E

# **6** Press [Exit].

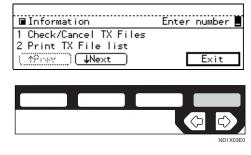

The initial display is shown.

# **Printing a File**

If you wish to check the contents of a fax that is stored in memory and has not been sent yet, use this procedure to print it out.

# Press [Info.].

OReady Set	originals. Enter fax no.
Memory Trans.	99%
63	Dest: O
	Mode Info.



The Information menu is shown.

**2** Enter the "Check/Cancel TX Files" function number with the number keys.

■ Information	Enter number 📕
1 Check/Cancel TX Files 2 Print TX File list	
( <u>↑₽·+</u> y) <b>↓Ne</b> xt	Exit

#### 🖉 Note


□ If "Check/Cancel TX Files" is not shown, press [**↑Prev.**] or [↓**N**-**ext**].

E Press the or be key until the file you want to print is shown and press [Print].

	lext
27/09:59AM MemoryTX → Standby ©3NEW YORK OFFICE Dest: 3 Pg(s)	1
Delete Print Check Exit	



# Press the [Start] key.

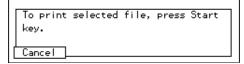


The file is printed.

#### 🖉 Note

□ Press **[Cancel]** to stop printing the file and return to the step 3 display.


# **5** Press [Exit].

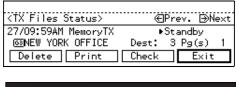



The Information menu is shown again.

**6** Press [Exit].

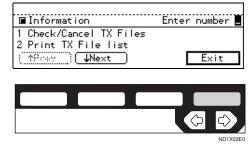


The initial display is shown.

# Checking and Editing a File

Use this procedure to check or edit destination(s), check options selected or alter the transmission time.

# Press [Info.].

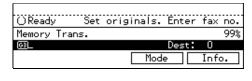



The Information menu is shown.


**2** Enter the "Check/Cancel TX Files" function number with the number keys.

■ Information	Enter number 📕
1 Check/Cancel TX Files 2 Print TX File list	
(*Preve) Wext	Exit

#### 🖉 Note

□ If "Check/Cancel TX Files" is not shown, press [**↑Prev.**] or [↓**N**-**ext**].

B Press the **(e)** or **(b)** key until the file you want to print is shown. Then press [Check].

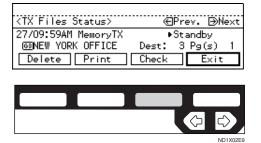


**4** Depending on the setting you want to check or change, use one of the following procedures.

Checking Destinations (Destination List)

Enter the "Destination List" function number with the number keys.

<check change=""></check>	Enter number 📕
1 Destination List 2 Change Start Time(03:22	2PM)
3 Change Dest.	Exit

The total number of destinations and the fax number or each destination's name is shown.

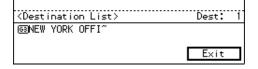


#### 🖉 Note


□ To see hidden destinations, press [↑Prev.] or [↓Next].

Changing the Transmission Time

Enter the "Change Start Time" function number with the number keys.

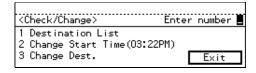

# 2 Enter the transmission time (4 digits) with the number keys.

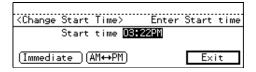

Use 24-hour or 12-hour format depending on your area. For 12-hour format, press [AM  $\leftrightarrow$  PM] to switch between AM and PM.

#### 🔗 Note

- □ You can not specify a start time more than 24 hours into the future.
- □ To start transmission immediately, press **[Immediate]**. If memory contains other files queued for transmission, those files are sent first.


#### Re-sending a File

If you select the failed transmission file, you can resend it. This feature allows you to transmit a fax message again. You can choose to have files that were not transmitted successfully stored in memory. These files will be kept for either up to 24 or 72 hours depending on how you program this feature.  $\Rightarrow$  P.203 "Changing the User Parameters"

#### Enter the "Retransmit " function number with the number keys.

<check chanse=""></check>	Enter number 📕
1 Destination List 2 Chanse StartTime	
3 Retransmit	Exit


#### **2** Press [Yes].

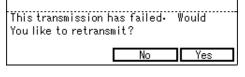



#### 🖉 Note

- □ If you do not want to send the file, press **[No]**.
- **3** Enter the start time with the number keys.

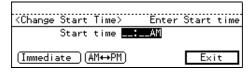

Use 24-hour or 12-hour format depending on your area. For 12-hour format, press [AM  $\leftrightarrow$  PM] to switch AM and PM.

#### 🖉 Note

- □ You can not specify a start time more than 24 hours into the future.
- □ To start transmission immediately, press **[Immediate]**. If memory contains other files queued for transmission, those files are sent first.

#### Changing a Destination

You can delete or add destinations.

#### Enter the "Change Dest." function number with the number keys.

<check change=""></check>	Enter number 📕
1 Destination List 2 Change Start Time(03:22	PM)
3 Change Dest.	Exit

#### **2** Change the destination.




#### 🖉 Note

- □ To cancel a destination, press the rest or key until the destination you want to cancel is shown and press the [Clear/ Stop] key.
- □ To add a destination, press [Add] and enter the fax number with the number keys. Destinations can be specified only by using the number keys. The destination is added to the end of the list.
- □ If you change a destination of a file that is automatically being dialed or awaiting redial, redial is canceled so you will need to resend that file. ⇒ P.106 "*Re-sending a File*"

# **5** Press [Exit].

## **6** Press [Exit].

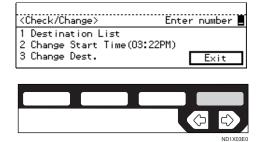

5

# **7** Press [Exit].

L	
<tx files="" status=""></tx>	∉Prev. ⊖Next
04/00:29 MemoryTX	▶Standby
©≣NEW YORK OFFICE	Dest: 1 Pg(s) 1
Delete Print	Check Exit



The Information menu is shown.

# 8 Press [Exit].

■ Information	Enter number 📕
1 Check/Cancel TX Files 2 Print TX File list	
(*P:+Y) Wext	Exit

ND1X03E0


# PRINTING A LIST OF FILES IN MEMORY (PRINT TX FILE LIST)

Print this list if you wish to find out which files are stored in memory and what their file numbers are. Knowing the file number can be useful (e.g., when erasing files).

#### 🖉 Note

□ The contents of an original stored in memory can also be printed. ⇒ P.104 "*Printing a File*"

# Press [Info.].

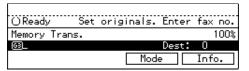

The Information menu is displayed.

2 Enter the "Print TX File list " function number with the number keys.

■ Information	Enter number 📕
1 Check/Cancel TX Files 2 Print TX File list	
( <u>^</u> Prove V	Exit

### 🖉 Note

□ If "Print TX File list " is not shown, press [↑Prev.] or [↓Next].

### Press the [Start] key.



The transmission file list is printed. When the printing is completed, the Information menu is shown.

#### 🔗 Note

□ Press **[Cancel]** to stop printing the file list and return to the Information Menu display.

# **4** Press [Exit].

■ Information	Enter number 📕
1 Check/Cancel TX Files	
2 Print TX File list	
( <u>^Prev</u> ) Vext	Exit


# CHECKING THE TRANSMISSION RESULT (TX STATUS)

If you wish to find out whether a file was sent successfully, you don't have to always print the TCR. With this function you can browse through the last 50 completed transmissions on the display.

#### Limitation

- Only the last 50 transmissions are shown. Earlier transmissions are not available.
- If a transmission is completed while you are using this function, the result will not be shown until you exit TX File Status and start it again.

#### Press [Info.].

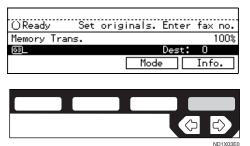

The Information menu is shown.

**2** Enter the "TX Files Status " function number with the number keys.

■ Information	Enter number
β TX Status δ Print Conf. RX	4 RX Status 6 Print Mem. Lock
(↑Prev )(↓Next	) Exit

#### Note

□ If "TX Files Status " is not shown, press [↑Prev.] or [↓Next].

Press [↑Prev.] or [↓Next] to scroll through the list.

(TX Status) Jan.16. 07:17AM			
Jan.16. 07:15AM		1Pg(s)	Done
Jan.16. 07:11AM		3Pg(s)	Done
( TYPEY ( <b>↓Ne</b> )	xt j		UK

The results are shown two at a time with the most recent above.

### Press [OK].


# CHECKING THE RECEPTION RESULT (RX STATUS)

This function lets you check up on the last 50 messages received without having to print the TCR. You can browse through the received messages on the display.

#### Limitation

- Only the last 50 messages are displayed. Earlier messages are not available.
- □ If a message is received while you are using this function, the result will not be shown until you exit RX File Status and start it again.

### Press [Info.].

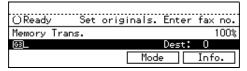



The Information menu is shown.

2 Enter the "RX Files Status" function number with the number keys.

■ Information	Enter number
8 TX Status 5 Print Conf. RX	4 RX Status 6 Print Mem. Lock
(↑Prev) ↓Next	) Exit

### 🔗 Note

□ If "RX Files Status" is not shown, press [↑Prev.] or [↓Next].

**E** Press [ $\uparrow$  Prev.] or [ $\downarrow$ Next] to scroll through the messages.

(RX Status> Jan.16. 07:17AM				
			Done Done	
	) UNe:			OK

The results are shown two at a time with the most recent above.

# Press [OK].

The initial display is shown.

# **5** Press [Exit].

# **PRINTING A CONFIDENTIAL MESSAGE**

The optional Fax Feature Expander is required to use this function.

This feature is designed to prevent messages being picked up casually by anyone when they are received. If someone sends you a message using Confidential Transmission, it is stored in memory and not automatically printed. To print the message you have to enter the Confidential ID code. When your machine has received a confidential message, the **Confidential File** indicator lights.

#### Preparation

Before using this function, program your Confidential ID.  $\Rightarrow$  P.196 "ID Code"


#### ∰Important

□ If the Main Power Switch is off more than an hour, all Confidential Messages are deleted. In such a case, use the Power Failure Report to identify which messages have been lost. ⇒ P.126 "WHEN POW-ER IS TURNED OFF OR FAILS"

#### Limitation

You must program the Confidential ID for Confidential Reception to work.

## Press [Info.].

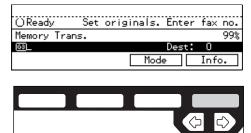

ND1X0

The Information menu is shown.

2 Enter the "Print Conf. RX" function number with the number keys.

■ Information	Enter number 📕
	RX Status Print Mem. Lock
(↑Prev) ↓Next	Exit

#### 🔗 Note

- □ If "Print Conf. RX" is not shown, press [↑Prev.] or [↓Next].
- Enter the Confidential ID (4-digit number) with the number keys.



#### 🖉 Note

- □ If you receive a fax by Confidential ID Override Reception, enter the override Confidential ID.
- □ You need to obtain the override Confidential ID from the sender.

### Press the [Start] key.

The received messages are printed. When printing has finished, the Information menu is shown.

#### 🖉 Note

- □ If no Confidential Messages have been received, the message "No reception file(s) exists." is shown. Press **[OK]**.
- If the Confidential IDs or Personal Confidential IDs do not match, the message "No file(s) exist for this Confidential ID." is

displayed. Press **[OK]** to cancel the operation, check the Confidential ID or Personal Confidential ID with the other party and try again.

# **5** Press [Exit].

■ Information	Enter number
B TX Status 5 Print Conf. RX	4 RX Status 6 Print Mem. Lock
(↑Prev) ↓Next	) Exit

	¢	
		ND1X03E0

The initial display is shown.

# **Confidential File Report**

By default, this report is printed whenever your machine receives a Confidential Message.

#### Note 🖉

□ You can turn this report off with the User Parameters. ⇒ P.203 *"Changing the User Parameters"* 

# PRINTING A FILE RECEIVED WITH MEMORY LOCK

#### Optional Fax Feature Expander is required to use this function.

This is a security feature designed to prevent unauthorized users from reading your messages. If Memory Lock is switched on, all received messages are stored in memory and are not automatically printed. To print the messages, you have to enter the Memory Lock ID code. When your machine has received a message with Memory Lock, the Receive File indicator blinks.


#### Preparation

Before you start, program your Memory Lock ID. $\Rightarrow$  P.196 "Memory Lock ID"

#### 🖉 Note

- Messages received by Polling Reception are automatically printed even if this feature is switched on.
- □ If the Main Power Switch is turned off for more than an hour, all messages protected by Memory Lock will be deleted. In such a case, the Power Failure Report will be printed so you can confirm which messages have been lost. ⇒ P.126 "WHEN POWER IS TURNED OFF OR FAILS"
- □ Memory Lock is switched off by default. Turn it on using the Facsimile User Tools. ⇒ P.172 "Memory Lock"
- □ You can also apply Memory Lock to messages that come only from certain senders. ⇒ P.182 "Special Senders to Treat Differently (Special RX Nos.)"

# Make sure that the Receive File indicator blinks. Press [Info.].

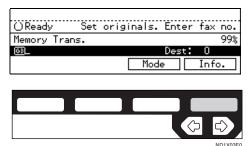

The Information menu is shown.


2 Enter the "Print Mem. Lock" function number with the number keys.

■ Information	Enter number 📕
	RX Status Print Mem. Lock
(↑Prev) (↓Next)	Exit

#### 🖉 Note

- □ If "Print Mem. Lock" is not shown on the display, press
- $\Box$  [**^Prev.]** or [**\**Next].

#### Enter the Memory Lock ID (4-digit number).

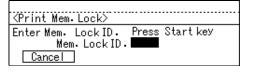


# Press the [Start] key.

The received messages are printed. When the printing is completed, the Information menu is shown.

### 🔗 Note

- □ If no messages have been received, while Memory Lock is switched on, the following message will appear."No reception file(s) exists." Press **[OK]**.
- □ If the Memory Lock IDs do not match, the following message will appear. "Wrong Memory Lock ID."Press **[OK]** and retry after checking the Memory Lock ID.

# **5** Press [Exit].

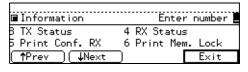



# **PRINTING THE TCR**


The TCR (Transaction Confirmation Report) contains information about the last 49 communications made by your machine. By default, it is printed automatically after every 50 communications (receptions + transmissions).

You can also print a copy of the TCR at any time by following the procedure below.

#### Note 🖉

- □ The sender's name column of the TCR is useful when you need to register a special sender.
- □ If you do not want the TCR printed, you can turn it off. ⇒ P.203 *"Changing the User Parameters"*


### 1 Press [Info.].

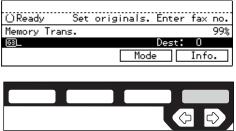

ND1X03E0


The Information menu is shown.

**2** Enter the "Print TCR" function number with the number keys.

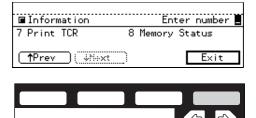

### 🖉 Note

- □ If "Print TCR" is not shown, press [**↑Prev.**] or [**↓Next**].
- Press the or key to select the format you want to print.

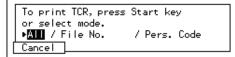


#### 🖉 Note

- Select "File No." to enter a 4digit file number with the number keys.
- Select "Pers. Code" to enter a Personal Code (4-digit number) with the number keys.
- Press [Cancel] to return to the Information menu.

#### **4** Press the **[Start]** key.

The TCR is printed.


**5** Press [Exit].

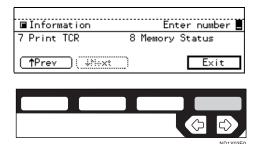

# **DISPLAYING THE MEMORY STATUS**


Use this function to display a summary of current memory usage. Items shown are the percentage of free memory space, the number of received confidential messages, the number of files to be sent, and the number of received messages to be printed.

### Press [Info.].

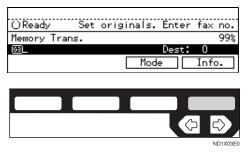

The Information menu is shown.

#### 2 Enter the "Memory Status" function number with the number keys.

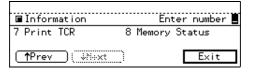

### 🖉 Note

- □ If "Memory Status" is not shown, press [↑Prev.] or [↓Next].
- The usage is displayed. When you have finished, press [OK].






#### 🔗 Note

□ If "Others" is displayed, it means that one or more Auto Documents have been stored. ⇒ P.151 "Registering Auto Documents"

# Press [Exit].

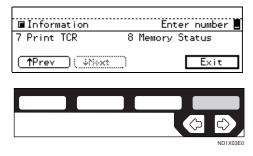

This page is intentionally blank.

# 6. Troubleshooting

# WHEN TONER RUNS OUT

When the machine has run out of toner the 🖾 symbol appears on the display. Note that even if there is no toner left you can still send fax message.


#### ∰Important

If you continue receiving and sending faxes after toner runs out, communication will not be possible after 200 (900 with the Fax Feature Expander) communications.

#### Limitation

The Memory Storage Report, Polling Reserve Report and Confidential File Report are not printed.

# **1** Make sure that the machine is in Facsimile mode and the standby display is shown.

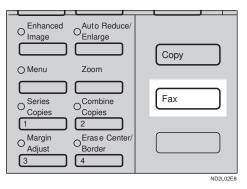

#### 🖉 Note

□ If the standby display is not shown, press the **[Fax]** key.

### **2** Press [Exit].

The error display closes.

```
\Rightarrow P.24 "MEMORY TRANSMIS-
SION"
```

 $\Rightarrow$  P.32 "IMMEDIATE TRANSMIS-SION"

# ERROR MESSAGES AND THEIR MEANINGS

If there is an error, one of the following messages may appear on the display. It might just flash up briefly, so if you are watching for errors, stay by the machine and check the display.

Message	Problem and Solution
Clear Misfeed(s)	Original misfeed
Remove originals from the Document Feeder.	• Remove originals from Document Feeder.
	• Set any pages of the original that were not scanned and send again.
Reset originals and press Start.	Original jammed during Memory Trans- mission. Reset originals that haven't been scanned.
Error. Transmission has been cancelled.	A document jam occurred during Imme- diate Transmission. Press <b>[OK]</b> and resend the page which has been not sent.
	An error occurred during Immediate Transmission. Press <b>[OK]</b> and re-send the original.
	<ul> <li>Note</li> <li>There may be a problem with the machine or the telephone line (e.g. noise or cross talk). If the error re-occurs frequently, contact your service representative.</li> </ul>
Cannot detect original size. Reset original(s) and press Start key.	The machine failed to detect the size of the original. Press
<fax> Personal Code Access. Please enter your Personal Code.</fax>	Personal Codes Access are switched on. You need to enter a previously pro- grammed 4 digit ID code. For more infor- mation, see P.166 <i>"Personal Codes"</i> .
Service call	There is a problem with the fax function.
Functional problem with the fax. Please contact your service representative.	Contact your service representative and tell the code number shown in the dis- play. The copier function will still work normally.
Memory is full. Cannot store additional originals. (Stored original(s) will be trans- mitted.)	If you press OK, the machine returns to the standby mode and start transmitting pages which has been scanned.

# **SOLVING PROBLEMS**

Problem	Solution	Refer to
Image background appears dirty when received at the other end.	Adjust the scan density.	P.38 "Image Density (Con- trast)"
Printed or sent im- age contains spots.	The Document Feeder (ADF) or exposure glass is dirty. Clean them. See the Copy Reference	
	Make sure that ink or eraser is dry before setting the original.	
Received image is too light.	Request the sender to increase the image density.	P.14 "ACCEPTABLE TYPES OF ORIGINALS"
	When using moist, rough or pro- cessed paper, the printed image may be partly invisible. Only use recommended paper.	
	When $\mathbf{k}$ is blinking, toner is be- ginning to run out. Replace the toner cartridge soon. $\Rightarrow$ See the Copy Reference.	
Message appears blank at the other end.	The original was set upside down. Set it properly.	P.18 "HOW TO SET AN ORIGINAL"
You want to cancel a Memory Transmis-	If the original is being stored, press the <b>[Clear/Stop]</b> key.	P.4 "OPERATION PANEL"
sion.	If the original is being sent, use "Check/Cancel TX Files" in the Information menu.	P.18 "HOW TO SET AN ORIGINAL"
You want to cancel an Immediate Trans- mission.	Press the <b>[Clear/Stop]</b> key.	P.4 "OPERATION PANEL"
You cannot add any destination in Group though it does not reach the maximum number.	99 (with the Fax Feature Expander it is 999) destination has been pro- grammed with the number keys. Program it with the <b>Quick Dial</b> key or <b>Speed Dial</b> instead.	P.44 "Restrictions When Di- aling with the Number Keys"

This table lists some common problems and their solutions.

Problem	Solution	Refer to
Immediate transmis- sion error occurs while copying in multiple numbers.	Use memory transmission while copying in multiple numbers.	P.24 "MEMORY TRANS- MISSION"

# **INDICATORS**

# When the Receive File Indicator is Lit or Flashing

If the **Receive File** indicator is blinking, a message has been received and stored in memory with Memory Lock. You need to print it out manually.  $\Rightarrow$  P.114 *"PRINTING A FILE RECEIVED WITH MEMORY LOCK"* 

If the **Receive File** indicator is lit, a message has been received but could not be printed for some reason. The message was stored in memory (Substitute Reception). When you solve the problem, the message will be automatically printed out. The table below lists some problems that could have caused Substitute Reception to take place and their solutions.

#### Reference

P.114 "PRINTING A FILE RECEIVED WITH MEMORY LOCK"

Why Substitute Reception Occurred	Indication/Status	Solution
Paper has run out	and/or <b>[Fax]</b> key is lit	Add paper.
	in red.	⇒See the "Loading Paper" in the Copy Reference."
Toner is empty	🛓 is lit	Replace the toner cartridge.
		$\Rightarrow$ See the "Adding Toner" in the Copy Reference.
Paper is jammed	<b>%</b> r is lit	Remove the jammed paper.
		⇒See the "Clearing Mis- feed" in the Copy Refer- ence.
Cover is open	The message "Doors/Covers open" appears.	A cover other than the Doc- ument Feeder (ADF) or front cover is open. ⇒Close the cover.
Machine is busy printing with another function	The machine is printing with another function.	The message will be print- ed after the current job fin- ishes automatically.
Output Tray is full.	The Ouput Tray is full. Re- move paper.	Remove paper from the Output Tray.

## When the Confidential File Indicator is Lit

If this indicator is lit, a message has been received into memory with Confidential Reception. You need to print it out manually.  $\Rightarrow$  P.112 "*PRINTING A CON-FIDENTIAL MESSAGE*"

# When the [Fax] key is Lit in Red

If this key is lit, refer to the table below and take the appropriate action.

Problem	Solution
Paper has run out.	Add paper.
	$\Rightarrow$ See the Loading Paper in the Copy Reference.
The paper output tray is full.	Remove the paper from the tray.
The machine is in RDS (Remote Diagnositc System) mode.	Wait with the main power switch on. Machine will go to the standby mode after it exits from the RDS mode.
A facsimile error has occurred.	The facsimile has a problem. Contact a service representative. The copier will still function normally.

# WHEN AN ERROR REPORT IS PRINTED

An error report is printed when a message could not be successfully sent or received.

Possible causes include a problem with your machine or the receiver's, noise on the telephone line etc. If an error occurs during transmission, re-send the original. If an error occurs during reception, ask the sender to re-send the message.

#### Note 🖉

□ If the error happens frequently, contact your service representative.

# WHEN POWER IS TURNED OFF OR FAILS

Even if the main power switch is turned off, the contents of the machine's memory (programmed numbers etc.) will not be lost. However, if power is lost for more than 1 hour through the main power switch being turned off, a power cut or the power cable being removed, memory contents will be lost. Lost items will include any fax messages stored in memory using Memory Transmission or Reception.

If a file has been deleted from memory, a Power Failure Report is automatically printed as soon has power is restored. This report can be used to identify lost files. If an original stored for Memory Transmission was lost, re-send it. If a message received by Memory Reception or Substitute Reception was lost, ask the sender to re-send it. If an Auto Document was lost, you will need to store it in memory again.

#### ∰Important

- □ Make sure that 100 % is shown on the display before you unplug the machine. If a lower value is shown, some data is currently stored in memory.
- Right after a power failure, the internal battery needs to be sufficiently recharged to guard against future data loss. Please keep the machine plugged in and the main power switch on for at least one week after the power loss occurs.

#### 🖉 Note

□ If you install the Hard disk option, all files stored in memory are not erased even if there is a power failure.

# 7. Facsimile User Tools

# ACCESSING THE USER TOOLS

The User Tools allow you to program the machine with your identification, store frequently used numbers and settings, and customize the default settings to match your needs.

So you can find the User Tool you want quickly and easily, they are grouped by function:

#### Register/Delete

Use to program or delete: Quick Dials, Groups, Optional Groups, Speed Dial, Keystroke Programs, Auto Documents, Irregular scan Area

#### Reports/Lists

Use to print: the TCR, Group list, Keystroke Program list, Speed Dial list, Auto Document list, Forwarding list, Quick Dial list and Auto Documents, Authorized Reception list

#### Initial Setup TX

Use to set defaults for: Transmission mode (Memory/Immediate), scanning conditions (Resolution, Image Density and Original Type)

#### Initial Setup RX

Use to turn on or off: Reverse Order Printing Checkered Mark, Center Mark, Print RX Time, Multi-copy Reception, Authorized Reception, Special RX NOS., Forwarding, 2-sided printing.

#### User Functions

Use to program settings you frequently use into the User Function Keys

#### Key Op. Settings

Use to program/check: your name, your fax number, line type, various ID codes, monitor volume, date and time, number of documents transmitted/received

#### Preparation

Some menus will not fit on the display. Press **[1Prev.]** and **[JNext]** to scroll through them if you cannot see the item you need.

Press **[PrevMenu]** to return to the Previous menu.


Items that are currently selected appear highlighted.

Press the **[OK]** key to accept the new settings.

Note that the changes will not be made if you do not press the **[OK]** key.

Press **[OK]** or **[Cancel]** to return to the previous display.


# **1** Make sure that the machine is in Facsimile mode and the standby display is shown.

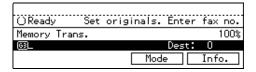

#### 🖉 Note

□ If the standby display is not shown, press the **[Fax]** key.

### Press the [User Tools/Counter] key.

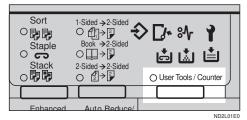

#### **3** Enter the number of the "Fax".

🔳 User T	ools Main Menu	Sel	ect	Item
1 System	2 Сору			
B Fax	4			
Counter	]	[	E>	(it

The Facsimile User Tool main menu appears.

#### ✓ Reference

For how to use the System User Tools, refer to the System Settings manual.

# 4 Enter the number that matches the category you require.

L	
■Fax Features	1/2 Enter number 📕
1 Register/Delete	2 Reports/Lists
3 Initial Setup TX	4 Initial Setup RX
() UNext	) Menu

#### 🖉 Note

 If you select "Key Op. Settings," you must enter the function number for "Key Op. Settings" with number keys and press the [#] (Enter) key within 3 seconds.

**5** Enter the function number of the User Tool you require.

■Register/Delete	1/4 Enter number 🛄
01 Reg. Quick Dial 03 Reg. Group Dial	02 Delete QuickDial 04 Delete Group Dial
(_^Prev ) <b>↓</b> Next	) PrevMenu

#### 🔗 Note

- Function numbers are different depending on the machine model and options attached.
- **5** Follow the instructions on the display.

For more details on each User Tool, see the relevant pages of this manual.

### **Exiting User Tool mode**

When you have made your changes and pressed [OK], press the [User Tools/Counter] key to return to standby mode.

#### 🖉 Note

□ To exit "Key Op. Settings", you need to return to the Facsimile User Tools initial display. Press [PrevMenu] on each display until you reach the main menu, then press the [User Tools/Counter] key.

# **REGISTER/DELETE MENU**

# **Registering Quick Dials**

To save time, you can program a fax number that you use often into a Quick Dial key. Then, whenever you are sending a message to that location, just press that Quick Dial key to dial.

Use the following steps to program a new Quick Dial or to edit or overwrite existing Quick Dials. There are 56 Quick Dials available.

You can register the following items in each key:

- Destination fax number (up to 254 digits)
- Destination name

#### ∰Important

□ We recommend that you print the Quick Dial list and keep it when you program or change fax numbers. ⇒ P.158 "REPORTS/LISTS"

#### Limitation


When a registered Quick Dial key is being used for a standby Memory Transmission, the message "This destination is in use for standby transmission file. Please modify/delete after transmission." is shown and you cannot change the destination for this key.

**1** Make sure that the machine is in Facsimile mode and the standby display is shown.

OReady	Set	originals.	Enter	fax no.
Memory Tran	s.			100%
63			Dest:	0
		Mode	2	Info.

#### 🖉 Note

- □ If the standby display is not shown, press the **[Fax]** key.
- **2** Press the **[User Tools/Counter]** key.

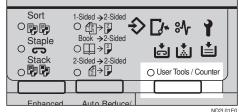

#### ND2L0TE

# **3** Enter the number of the "Fax".

🔳 User T	ools Main Menu	Select Item
1 System B Fax	2 Сору 4	
Counter	]	Exit

The Facsimile User Tool main menu appears.

#### PReference

For how to use the System User Tools, refer to the System Settings manual.

- Enter the function number for "Register/Delete" using the number keys.
- Enter the function number for "Reg. Quick Dial" using the number keys.

■Register/Delete	1/4 Enter number 💻
O1 Reg. Quick Dial O3 Reg. Group Dial	02 Delete QuickDial 04 Delete Group Dial
(_^?reev) <b>↓Next</b>	) PrevMenu

## Press the Quick Dial key which you want to register.


<reg. dial="" quick=""></reg.>	
Press key to register Quic check Status.	k Dial, or
Status	PrevMenu

#### 🖉 Note

- □ If you press a wrong key, press [PrevMenu] then try again.
- □ You can press **[Status]** to see which Quick Dial keys have been programmed.

(Status 01-56> Pre	ess key to register 💻
D1 NEW YORK OFFICE	02 TRONT OFFICE
( ^온····· ) ( JNext	) оч

**2** Enter a fax number using the number keys.

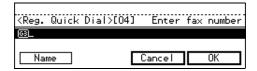

#### 🖉 Note


- □ If you make a mistake, press the **[Clear/Stop]** key and try again.
- If a fax number is already registered in this Quick Dial key, the number and communication type are shown on the display. If you wish to change the fax number, press the [Clear/Stop] key and enter another number.
- □ You cannot omit the fax number.

#### E Press [Name] .

#### 🖉 Note

□ If you wish to omit the destination name, go to step 11.

**9** Enter the destination name.

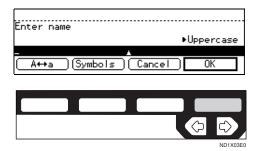

#### 🖉 Note

□ If a destination name is already registered in this Quick Dial key, the name is shown on the display. If you wish to change this name, press the **[Clear/Stop]** key and enter another name.


#### ✓ Reference

P.213 "Entering Text"

#### Press [OK].

The fax number and name are displayed.

#### Press [OK] to register the new setting.

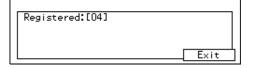

#### 🖉 Note

If you press [Cancel], the entered values are canceled and the display shown in step 7 appears again.

#### Press [Exit].

The display shown in step 6 appears again.

B Press the [User Tools/Counter] key.

#### **Quick Dial List**

Printing the Quick Dial list allows you to check destinations registered in Quick Dial keys.  $\Rightarrow$  P.158 "*RE-PORTS/LISTS*"


#### **Deleting Quick Dials**

This procedure describes how to find a programmed Quick Dial and delete it.

#### Limitation

When a Quick Dial key is being used for a standby Memory Transmission, the message "This destination is in use for standby transmission file. Please modify/ delete after transmission." is shown and you cannot delete the destination for this key.


# Make sure that the machine is in Facsimile mode and the standby display is shown.

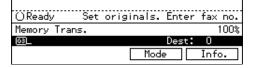

#### 🔗 Note

□ If the standby display is not shown, press the **[Fax]** key.

**2** Press the **[User Tools/Counter]** key.

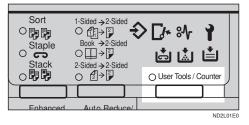

## Enter the number of the "Fax" mode.

🖬 User	Tools Main Menu	Select	Item
1 System B Fax	2 Сору 4		
Counter		E	kit

The Facsimile User Tool main menu appears.

#### Reference

For how to use the System User Tools, refer to the System Settings manual.

- Enter the function number for "Register/Delete" using the number keys.
- **5** Enter the function number for "Delete QuickDial" using the number keys.

■Register/Delete	1/4 Enter number 💻
	02 Delete QuickDial
03 Reg. Group Dial	04 Delete Group Dial
(_^?esex) <b>↓Next</b>	) PrevMenu

## Press the Quick Dial key which you want to delete.

The current contents of the key are displayed.

<delete quickdial=""></delete>	
Press key to delete Quick [	)ial, or check
Status.	
Status	PrevMenu

#### 🖉 Note

□ If you press the wrong key, press **[N0]** then try again.


131

□ You can press **[Status]** to see Quick Dial keys that have been already programmed.

(Status 01-56) Pre	ss key to register 💻
D1 NEW YORK OFFICE D3 TOKYO OFFICE	02 TRONT OFFICE 04 HONG KONG OFFI~
(_^?awy) <b>↓Next</b>	) ОК

<delete quickdial="">[04]</delete>	Delete ?
G312081224	
(Name:HONG KONG OFFICE)	
No No	Yes

#### Press [Yes].

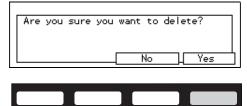

#### 🔗 Note

□ If you press **[No]**, the destination is not deleted and the display is shown in step 6 appears again.

#### Press [Yes] to delete the destination stored in this Quick Dial.

#### 🖉 Note

□ If you press **[No]**, the destination is not deleted and the display shown in step 6 appears again.

Press the [User Tools/Counter] key.

# Quick Dial Key and Function Key Label (Dial label)

You can print a template that can be used to make labels for Quick Dial and User Function keys. The template will have destination or Group names programmed in Quick Dials, and the names of functions assigned to User Function keys.


#### Limitation

Print the template on A4 label paper that can be peeled and stuck on the operation panel.

#### 🖉 Note


- □ You can print the template from the Bypass Tray.
- □ You can choose whether to print on transparent or non-transparent label paper with the User Parameters. ⇒ P.203 "Changing the User Parameters"By default the setting is "Non-transparent".
- □ To print the label template, see P.158 "*REPORTS/LISTS*".

#### Non-transparent label paper

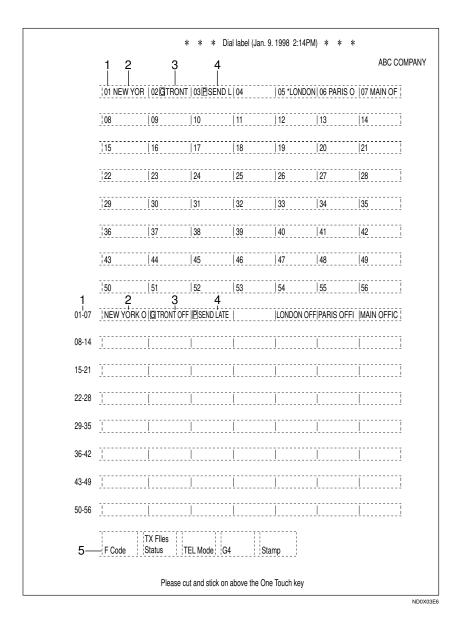

- **1.** Quick Dial key number
- 2. Destination name
- 3. Group name (G)
- 4. Program name (P)
- **5.** Programmed contents of User Function keys

#### **Transparent label paper**

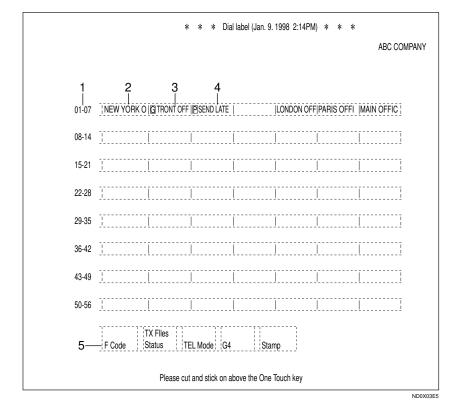

- 1. Quick Dial key number
- **1.** Destination name
- 1. Group name (G)
- 1. Program name (P)
- **1.** Programmed contents of User Function keys

#### **Registering Groups**

If you send the same message to several destinations at the same time on a regular basis, program these destination numbers as a Group. This allows you to dial these destinations with a single key press.

Use these steps to program a new Group or to edit or overwrite an existing Group.

You can register the following items in a Group:

- Destination fax numbers (up to 200 numbers for each group, up to 254 digits for each number)
- Group name (up to 20 characters)

You can enter destination numbers with Quick Dial keys, Speed Dials, or the number keys.


#### ∰Important

□ It is recommend that you print the Group Dial list and keep it when you register or change destinations. ⇒ P.158 *"REPORTS/LISTS"* 

#### Limitation

- □ The maximum number of Groups you can register is 9.
- □ The maximum number of destination you can register in a Group is 200. This 200 can be composed of up to 55 Quick Dial numbers, 100 Speed Dial numbers and 98 numbers entered directly with the number keys. The maximum number of the destination you can register in all group is 255.
- The number of destinations that can be registered with the number keys depends on how the machine is used. You can register up to 99 destinations for all the Groups.


- □ If you register a Group with the number keys when a file is waiting to be transmitted, a message is shown. You sometimes cannot register any more destinations even when the number of specified destinations is 99 or less. This is because a fax number is stored in memory for the file to be transmitted. When the transmission is completed and the fax number is deleted, you can register the Group.
- When a lot of destinations are registered in a Group using number keys, you sometimes cannot enter a destination for a Memory Transmission with the number keys.
- When a registered group is being used for a standby Memory Transmission, the message "This destination is in use for standby transmission file. Please modify/ delete after transmission" is shown and you cannot change destinations for this Group.
- **1** Make sure that the machine is in Facsimile mode and the standby display is shown.

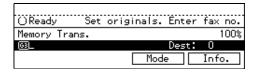

#### 🖉 Note

□ If the standby display is not shown, press the **[Fax]** key.

#### **2** Press the **[User Tools/Counter]** key.

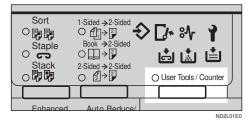

#### **3** Enter the number of the Fax.

🖬 User 1	Tools Main Menu	Sel	ect	Item
1 System	2 Сору			
B Fax	4			
Counter		C	E>	kit

The Facsimile User Tool main menu appears.

#### ✓ Reference

For how to use the System User Tools, refer to the System Settings manual.

- 4 Enter the function number for "Register/Delete" using the number keys.
- Enter the function number for "Reg. Group Dial" using the number keys.

■Register/Delete	1/4 Enter number 💻
01 Reg. Quick Dial 03 Reg. Group Dial	02 Delete QuickDial 04 Delete Group Dial
(^^?) UNext	] PrevMenu

**6** Press the Quick Dial key in which you want to register the Group.

(Reg. Group Dial)	
<sup>p</sup> ress key to register Group D check Status.	ial, or
Status	PrevMenu


#### Note

□ If you make a mistake, press **[Cancel]** then try again.

□ You can press **[Status]** to see which Quick Dial keys are currently programmed.

(Status 01-56)	Press key to register 💻
13	14 Gp.D SALES SEC~
15 Gp.D BRANCH	16 Gp.D DESIGN SE~
(↑Prev ) ↓Nex	xt OK

**Z** Enter the first fax number then press [Add] before you enter the next.

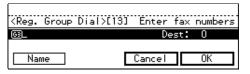

#### 🖉 Note


- Enter a destination in any of the following three ways:
  - Enter the fax number using the number keys.
  - Press a Quick Dial key in which the destination is registered.
  - Press the **[Speed Dial]** key and enter a Speed Dial code.
- □ If you make a mistake, press the **[Clear/Stop]** key and re-enter the correct Group number.
- □ If destinations are already registered, they are shown on the display. Press the are shown on the display. Press the are shown on the display. If you want to change a destination, select it and press the [Clear/Stop] key. Press the [Clear/Stop] key once to erase a Quick Dial or Speed Dial number, or press it repeatedly to erase a number entered with the number keys. When you specify the destination using the number keys, the digit will be erased one by one. When

using Quick dial or Speed dial, they will be erased at once.

- □ You cannot omit the fax number.
- Repeat step 7 for all the destinations you want registered in the Group.

#### 9 Press [Name].

D Enter the Group name.

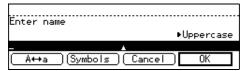

#### 🔗 Note

□ If the Group name is already registered, it is shown on the display. If you wish to change the Group name, press the **[Clear/Stop]** key and enter another name.

#### ${}^{\mathcal{P}}$ Reference

P.213 "Entering Text"


#### Press [OK].

The entered fax numbers and Group name are shown on the display.

#### 🖉 Note

Press the or key to scroll through the destinations on the display. If you want to change a destination, select it and press the [Clear/Stop] key. Press the [Clear/Stop] key once to erase a Quick Dial or Speed Dial number, or press it repeatedly to erase a number entered with the number keys.

Press [OK] to register the Group.

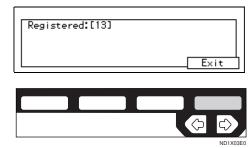

#### 🖉 Note

If you press [Cancel], the Group is not programmed and the display shown in step 6 appears again.

#### B Press [Exit].

The display shown in step 6 appears again.

Press the [User Tools/Counter] key.

#### Group Dial list

The Group list allows you to print and check destinations registered in Groups and Optional Groups.  $\Rightarrow$ P.158 "*REPORTS/LISTS*"

#### **Deleting Groups**

This function deletes all destinations registered in a Group.

#### Limitation

When a registered Group is being used for a Memory Transmission on standby, the message "This destination is in use for standby transmission file. Please modify/delete after transmission." is displayed and you cannot delete destinations for this Group.

# **1** Make sure that the machine is in Facsimile mode and the standby display is shown.

()Ready Set	originals. Enter fax no.
Memory Trans.	100%
63	Dest: O
	Mode Info.

#### 🖉 Note

□ If the standby display is not shown, press the **[Fax]** key.

**2** Press the **[User Tools/Counter]** key.

Sort Staple Stack	$1-\text{Sided} \rightarrow 2-\text{Side}$ $\bigcirc \begin{array}{c} & & & \\ $	d 🕹	l	יאיי איי User Tools /	Ŀ	
			[			
Enhanced	Auto Redu					
					ND2L	.01E0

#### **3** Enter the number of the "Fax".

G User Te	ols Main Menu	Select	There
u oser ic	ors nam nenu	Jerecc	rcem
1 System	2 Сору		
8 Fax	4		
Counter		E:	xit

The Facsimile User Tool main menu appears.

- 4 Enter the function number for "Register/Delete" using the number keys.
- **5** Enter the function number for "Delete Group Dial" using the number keys.

■Register/Delete	1/4 Enter number 🛄
O1 Reg. Quick Dial	02 Delete QuickDial
O3 Reg. Group Dial	04 Delete <u>Group Dial</u>
(_^?esev) <b>↓Next</b>	) PrevMenu

Deress the Quick Dial key whose Group you wish to delete. The registered Group is shown on the display.

<delete dial="" group=""></delete>	
Press key to delete Status.	Group Dial, or check
Status	PrevMenu

#### 🖉 Note

- □ If you make a mistake, press **[No]** and press the correct key.
- □ You can press **[Status]** to see Quick Dial keys are programmed with Group.

(Status 01-56>	Press key to register 💻
13 Gp.D OFFICE	14 Gp.D SALES SEC~
15 Gp.D BRANCH	16 Gp.D DESIGN SE~
(↑Prev ) ↓Ne:	xt OK

#### Press [Yes].

<delete dial<="" group="" th=""><th>&gt;[13]</th><th>D</th><th>elete ?</th></delete>	>[13]	D	elete ?
39458962478     (Name:Gp.D OFFICE)	D	)est:	3€
	No		Yes




#### 🖉 Note

□ If you press **[No]**, the Group is not deleted and the display is shown in step 6 appears again.

#### Press [Yes].

The Group is deleted.

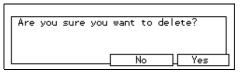



#### 🔗 Note

□ If you press **[No]**, the Group is not deleted and the display shown in step 6 appears again.

Press the [User Tools/Counter] key.

#### **Registering Optional Groups**

An optional Fax Feature Expander is required to use this function.

Installing the Fax Feature Expander option enables you to store more Groups. These extra Groups are referred to as Optional Groups.

Use these steps to program a new Optional Group or edit or overwrite an existing one. You can register the following items in each Optional Group:

- Destination fax numbers (up to 200 numbers for each group, up to 254 digits for each number)
- Group name (up to 20 characters)

To specify destinations you can use Quick Dial keys, Speed Dials, or the number keys.

#### ∰Important

□ We recommend that you print the Optional Group Dial list and keep it when you register or change destinations. ⇒ P.158 "REPORTS/ LISTS"

#### Limitation


- □ The maximum number of Optional Groups you can register is 21.
- □ Before you can use this feature you must program a User Function Key with the Optional Group function. ⇒ P.164 "ASSIGNING USER FUNCTION KEYS"
- The maximum number of destinations you can register in Groups is

2000; 56 in quick dial keys, 1000 speed dials, and 999 numbers entered directory with the number keys.

- □ The number of destinations that can be registered with the number keys depends on how the machine is used. It is possible to register 999 destinations for all the Optional Groups. If you register 999 destinations with the number keys, however, you cannot perform a Memory Transmission or specify a Group. When you register destinations on the number keys, the number of destinations must be 998 or less. ⇒ P.43 "Number Keys"
- □ If you register an Optional Group with the number keys when a file is waiting to be transmitted, the message "You have exceeded the maximum machine specifications. No additional entry with number keys" is shown and you sometimes cannot register any more destinations even when the number of specified destinations is 998 or less. This is because a fax number is stored in memory for the file to be transmitted. When the file transmission is completed and the fax number is deleted, you can register a Group.
- When a lot of destinations are registered in the number keys for an Optional Group, you sometimes cannot dial a destination for a Memory Transmission with the number keys.
- When a previously registered Optional Group is being used for a standby transmission, the message "This destination is in use for standby transmission file. Peace modify/delete after transmission"

is shown and you cannot change destinations for this Group.

Make sure that the machine is in Facsimile mode and the standby display is shown.

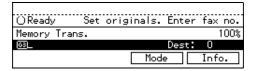

#### 🖉 Note

□ If the standby display is not shown, press the **[Fax]** key.

Sort Sort Staple Staple Stack 2-Sided → 2-Sided Dok → 2-Sided Stack 2-Sided → 2-Sided Dok → 2-Sided C → P Stack 2-Sided → 2-Sided C → P

Press the [User Tools/Counter] key.

#### Enter the function number for "Reg. Opt. G.Dial" using the number keys.

■Register/Delete 2	/4 Enter number 🛄
05 Reg. Opt. G.Dial	
07 Reg. Speed Dial	U8 Delete Speed Dial PrevMenu
[][_whext]	Frevhenu

Enter the Optional Group number (10 to 30) you want to register using the number keys.


<pre></pre>
Enter Opt.Group Dial number to register, or check Status. Opt. Gp. Dial(10-30)
Status

#### 🖉 Note

- If you make a mistake with the first digit, press the [Clear/Stop] key and enter a correct number. If you make a mistake with the second digit, press [Cancel] and enter the number again.
- You can press [Status] to see the currently registered Optional Groups.

(Status 10-30) Enter no	). to register 💻
+Gp.D10 ACCOUNT S~ +Gp.	.D11 DISTRIBUT~
+Gp.D12 +Gp.	.D13
(	OK

**Z** Enter the first destination, then press [Add] before entering the next.

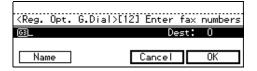

#### 🖉 Note

- □ You can enter destinations in any of the following three ways:
  - Enter a fax number with the number keys.

## Enter the number of the "Fax" mode.

🖬 Üser T	ools	Main	Menu	Se	lect	Item
1 System			2 Сору			
B Fax			4			
Counter					E>	(it

The Facsimile User Tool main menu appears.

#### $\mathcal{P}$ Reference

For how to use the System User Tools, refer to the System Settings manual.

4 Enter the function number for "Register/Delete" using the number keys.

- Press a Quick Dial key in which a destination is registered.
- Press the **[Speed Dial]** key and enter a code.
- □ If you make a mistake, press the **[Clear/Stop]** key and try again.
- □ If destinations are already registered, they are shown on the display. Press the are shown on the display. Press the scroll through the destinations on the display. If you want to change a destination, select it and press the [Clear/Stop] key. Press the [Clear/Stop] key once to erase a Quick Dial or Speed Dial number, or press it repeatedly to erase a number entered with the number keys.


#### 🖉 Note

□ You cannot omit a fax number.

Repeat step 7 for all the destinations to be registered in the Optional Group.

#### Press [Name].

Denter the name.

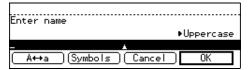

#### 🖉 Note

□ If a Group name is already registered, it is shown on the display. If you want to change the name, press the **[Clear/Stop]** key and enter another name.

#### Reference

P.213 "Entering Text"


#### Press [OK].

The entered fax numbers and Optional Group name are shown on the display.

#### 🔗 Note

□ If destinations are already registered, they are shown on the display. Press the or key to scroll through the destinations on the display. If you want to change a destination, select it and press the [Clear/Stop] key. Press the [Clear/Stop] key once to erase a Quick Dial or Speed Dial number, or press it repeatedly to erase a number entered with the number keys

# Press [OK] to store the information you have just entered.

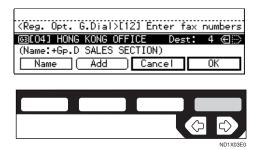

#### 🖉 Note

□ If you press **[Cancel]**, the Optional Group is not registered and the display shown in step 6 appears again.

#### B Press [Exit].

The display shown in 6 appears again.

#### Press the [User Tools/Counter] key.

141

# Checking the Contents of Optional Groups

Print the Optional Group dial list (see P.158 "REPORTS/LISTS").

#### **Deleting Optional Groups**

This function deletes all destinations registered in an Optional Group.

#### Limitation

If a registered Optional Group is being used for a standby Memory Transmission, the message "This destination is in use for a standby transmission file. Please modify/delete after transmission" is shown and you cannot change destinations for this Group.


# Make sure that the machine is in Facsimile mode and the standby display is shown.

L	
()Ready Set	originals. Enter fax no.
Memory Trans.	100%
63_	Dest: O
	Mode Info.

#### 🖉 Note

□ If the standby display is not shown, press the **[Fax]** key.

Press the [User Tools/Counter] key.

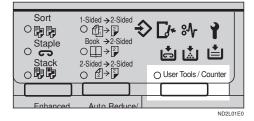

#### **B** Enter the number of the "Fax".

🖬 User T	ools Main Menu	Select	Item
1 System	2 Сору		
8 Fax	4		
Counter		E>	kit

The Facsimile User Tool main menu appears.


#### P Reference

For how to use the System User Tools, refer to the System Settings manual.

- Enter the function number for "Register/Delete" using the number keys.
- Enter the function number for "Delete Opt.G.Dial" using the number keys.

				r number 💻
05 Reg. Op	vt. G.Dial	06	Delete	Opt.G.Dial
07 Reg. Sp	eed Dial	08	Delete	Speed Dial
(†Prev	↓Next	)		PrevMenu

**6** Enter the Optional Group number (10 to 30) you wish to delete using the number keys.

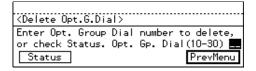

#### 🖉 Note

□ If you make a mistake with the first digit, press the **[Clear/Stop]** or **[Cancel]** and enter the correct number. If you make a mistake with the second digit, press No and enter the number again.

□ You can press **[Status]** to see which Optional Groups are programmed.

(Status 10-30) Ent	ter no.to register 💻
+Gp.D10 ACCOUNT S~	+Gp.D11 DISTRIBUT~
+Gp.D12 SALES SEC	+Gp.D13
( †Prext ) <b>UNext</b>	) ОК

#### **2** Press [Yes].


#### 🖉 Note

- □ If you press **[No]**, the Optional Group is not deleted and the display shown in step 6 appears again.
- □ The registered destinations are shown.





# Press [Yes] to delete the Optional Group.

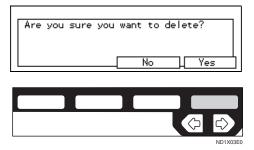

#### 🖉 Note

□ If you press **[No]**, the Optional Group is not deleted and the display shown in step 6 appears again.

Press the [User Tools/Counter] key.

#### **Registering Speed Dials**

If you register a destination in a Speed Dial, you can dial that number by just pressing the **[Speed Dial]** key followed by a two or three digit code.

Use these steps to program a new Speed Dial or overwrite an existing one. You can register the following items in a Speed Dial:

- Destination fax number (up to 100 numbers, up to 254 digits for each number)
- Destination name
- A Telephone Directory search letter (A to Z)

#### ∰Important

□ It is recommended that you print the Speed Dial list and keep it when you register or change a destination. ⇒ P.158 "REPORTS/ LISTS"

#### Limitation

- □ When a registered Speed Dial is being used for a standby Memory Transmission, the message "This destination is in use for standby transmission file. Please modify/delete after transmission" is shown and you cannot change the destination for this Quick Dial.
- $\Box$  You can specify codes 00 to 99.
- If you install the Function Upgrade Card (option), you can register up to 1,000 numbers in Speed Dials. In this case codes 000 to 999 are used.


# **1** Make sure that the machine is in Facsimile mode and the standby display is shown.

OReady S	et or	iginals.	Enter	fax no.
Memory Trans.				100%
63			Dest:	0
		Mode	2	Info.

#### 🖉 Note

□ If the standby display is not shown, press the **[Fax]** key.

**2** Press the **[User Tools/Counter]** key.

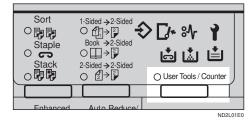

#### Enter the number of the "Fax".

1 System 2 Copy B Fax 4	🔳 User To	ols Main Menu	Select	Item
	L	2 Copy		
ILOUDTER I EXIT	B Fax [Counter]	4	E	/it

The Facsimile User Tool main menu appears.

#### P Reference


For how to use the System User Tools, refer to the System Settings manual.

Enter the function number for "Register/Delete" using the number keys.

Enter the function number for " Reg. Speed Dial" using the number keys.

■Register/Delete 2/4	Enter number 💻
05 Reg. Opt. G.Dial 06 07 Reg. Speed Dial 08	Delete Opt.G.Dial Delete Speed Dial
TPrev Vest	PrevMenu

Enter the Speed Dial code you want to register using the number keys.

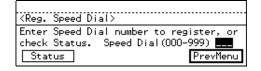


#### 🖉 Note

- □ If you make a mistake, press the **[Clear/Stop]** key and enter the correct number.
- □ You can press **[Status]** to see which Speed Dials are programmed.

(Status 000-999>Enter no. to re	egister <b></b>
Sp.DOOO ABC COMPA~ Sp.DOO1 XY Sp.DOO2 X SHOP	Z COMPA~
( TPrev ) ( Wext )	OK

**2** Enter a fax number using the number keys, and select the communication type.

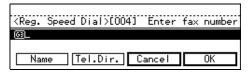

#### 🖉 Note

- □ If you make a mistake, press the **[Clear/Stop]** key and enter the correct number.
- □ If a fax number is already registered in this Speed Dial, the number is shown on the display. If you wish to change the fax number, press the 【Clear/Stop】 key and enter another number.
- □ You cannot omit the fax number. Be sure to register it.

#### Press [Name].

#### 🖉 Note

□ If you wish to omit the destination name, go to step 11.

# Enter the destination name. Enter name Uppercase A++a Symbols Cancel OK

#### 🖉 Note

If a destination name is already registered in the Speed Dial, the name is shown on the display. If you wish to change the destination name, press the [Clear/Stop] key and enter another name.


#### 

P.213 "Entering Text"

#### Press [OK].


The entered destination number and name are shown on the display.

#### Press [Tel.Dir.].

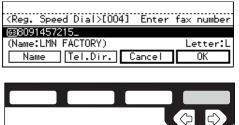

ND1X02E0

**2** Enter a search letter (A to Z) for the Telephone Directory.

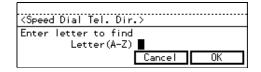

#### $\mathcal{P}$ Reference


 $\Rightarrow$  P.213 "Entering Text"

#### B Press [OK].

The search letter you entered is shown.

#### Press [OK].

The fax number, destination name, and search letter are registered.

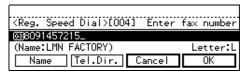



#### 🖉 Note

□ If you press **[Cancel]**, the Speed Dial is not registered.

B Press [Exit].

Press the [User Tools/Counter] key.

#### Speed Dial list

Print this list to check which destinations are programmed.  $\Rightarrow$  P.158 "*RE*-*PORTS/LISTS*"

#### **Deleting Speed Dials**

Use this procedure to delete any Speed Dials you are not using anymore.

#### Limitation

□ If a registered Speed Dial is being used for a standby Memory Transmission, the message "This destination is in use for standby transmission file. Please modify/delete after transmission." is shown and you cannot change the destination for this Speed Dial.

Make sure that the machine is in Facsimile mode and the standby display is shown.

OReady Set	originals. Enter fax no.
Memory Trans.	100%
<u>63</u> _	Dest: O
	Mode Info.

#### 🖉 Note

□ If the standby display is not shown, press the **[Fax]** key.

Press the [User Tools/Counter] key.

Enhanced Auto Be

#### Enter the number of the "Fax".

🖬 User	Tools Main Menu	Select	Item
1 System B Fax	2 Сору 4		
Counter		E:	kit

The Facsimile User Tool main menu appears.

#### PReference

For how to use the System User Tools, refer to the System Settings manual.

- Enter the function number for "Register/Delete" using the number keys.
- Enter the function number for "Delete Speed Dial" using the number keys.

■Register/Delete	274 Enter number 🛄
05 Reg. Opt. G.Dial	O6 Delete Opt.G.Dial
07 Reg. Speed Dial	08 Delete Speed Dial
(↑Prev) ↓Next	) PrevMenu

## **6** Enter the Speed Dial code you wish to delete.

The registered destination is shown on the display.


#### 🖉 Note

- □ If you make a mistake before entering the first digit, press the [Clear/Stop] key and enter the correct number. If you make a mistake after entering the last digit, press [No] and enter the number again.
- □ You can press **[Status]** to see which Speed Dials are currently programmed.

(Status 000-999>Ent	er no. to register
5p.DOOO ABC COMPA~	Sp.DOO1 XYZ COMPA~
β <sub>P</sub> .DOO2 X SHOP	Sp.D004 LMN FACTO~
(_†₽⊶v)(_₩₩xt	) OK

#### **2** Press [Yes].


ND2L01E0

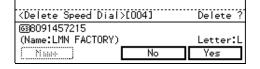

#### 🖉 Note

□ If you press **[No]**, the Speed Dial is not deleted and the display shown in 6 appears again.

#### B Press [Yes].

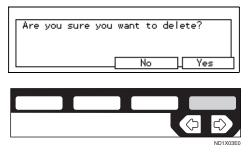

The Speed Dial is deleted.

#### 🖉 Note

□ If you press **[No]**, the Speed Dial is not deleted and the display shown in 6 appears again.

Press the [User Tools/Counter] key.

#### **Storing Keystroke Programs**

If you regularly send messages to a particular destination or transmit using the same features, you can save a lot of repetitive keypad operations by storing this information in a Keystroke Program.

Keystroke Programs can then be recalled by just pressing a Quick Dial key. The following procedure can be used to program a new Keystroke Program or overwrite an old one.

You can register the following items in Keystroke Programs:


 Memory Transmission, Immediate Transmission, destinations (up to 200 numbers), Resolution, Original Type, G3 or G4 communication mode, Stamp, Send Later, Confidential Transmission, Personal Code transmission, Auto Document, Book Fax, Irregular Scan Area, Transmission Deadline, Polling Transmission, Polling Reception, Transfer Request, and optional functions • Program name (up to 20 characters)

#### ∰Important

□ We recommend that you print the Keystroke Program list and keep it when you register or change a function. ⇒ P.158 "REPORTS/ LISTS"

#### Limitation


- □ The maximum number of programs you can register is 56.
- You cannot register a program in a Quick Dial key used for another function.
- When a registered program key is being used for a Memory Transmission on standby, the message "This destination is in use for standby transmission file. Please modify/delete after transmission" is displayed and you cannot change the function for this key.
- **1** Make sure that the machine is in Facsimile mode and the standby display is shown.

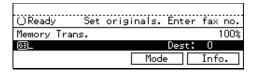

#### 🖉 Note

□ If the standby display is not shown, press the **[Fax]** key.

**2** Press the [User Tools/Counter] key.

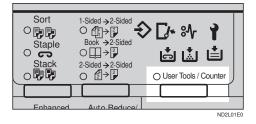

#### **3** Enter the number of the "Fax".

🖬 User To	ols Main Menu	Sele	ct	Item
1 System	2 Сору			
B Fax	4			
Counter		Е	E>	cit

The Facsimile User Tool main menu appears.

#### Reference

For how to use the System User Tools, refer to the System Settings manual.

- Enter the function number for "Register/Delete" using the number keys.
- Enter the function number for "Store Program" using the number keys.

■Register/Delete	3/4	Enter nu	mber 💻
09 Store Program	10	Delete Pro	gram
11 Reg. Auto Doc.	12	Delete Aut	o Doc.
(↑Prev) ↓Next	$\supset$	Pr	evMenu

## Press a Quick Dial key you want to register.

The "Store Program" display is shown.


<store program=""></store>	
Press key to store Keystroke Program, c	r
check Status.	
Status PrevMenu	

#### 🖉 Note


- □ If you make a mistake, press **[Cancel]** and press the correct key.
- □ You can press **[Status]** to see Quick Dial keys with Keystroke Programs already in them.

(Status 01-56) Pro	ess key to r	egister 💻
29 Ks.P REPORT	30 K≲.P DA	ILY
β1	32	
(↑Prev )(↓Next		OK

#### **2** Press [Feature].

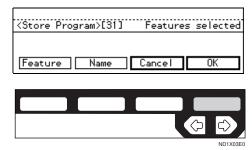

Carry out the sequence of operations you wish to store in this program, then press the [OK] key you selected in step 6.

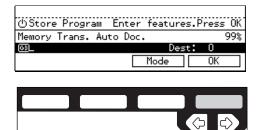


#### Solution Note

- □ If you press the **[Clear Modes/Energy Saver]** key, the display returns to the steps before keystroke programming.
- □ For example, say you wish to use Send Later to destination number 0123456789. The sequence of operations would be:
  - Enter "0123456789" using the number keys.
  - Press [Mode].
  - Enter the function number for Send Later using the number keys.
  - Set Send Later  $\Rightarrow$  P.74 "SEND LATER".
- If a program is already stored in the Quick Dial key, the function name is shown on the display. If you want to change the pro-

gram, press the **[Clear Modes/Energy Saver]** key and program function again.

#### **9** Press [OK].

#### D Press [Name].

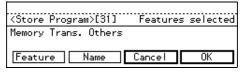




#### 🖉 Note

□ You cannot omit a program name. Be sure to register it.

#### Enter the program name.

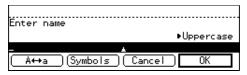

#### 🖉 Note

If a program name is already registered in the Quick Dial key, the name is shown on the display. If you wish to change the program name, press the [Clear/Stop] key and enter another name.

#### $\mathcal{P}$ Reference

P.213 "Entering Text"

#### Press [OK]

The function and program name are shown on the display.

#### B Press [OK].

The program is stored.

<pre> {Store Program&gt;[31] }</pre>	Feature	s selected
Memory Trans. Others (Name:Ks.P WEEKLY)		
Feature Name	Cancel	OK

#### 🔗 Note

□ If you press **[Cancel]**, the Keystroke Program is canceled and the display shown in step 6 appears again.

#### Press [Exit].

The screen shown in step 6 appears again.

E Press the [User Tools/Counter] key.

#### Keystroke program list

The Keystroke Program list allows you to print and check functions registered in keystroke programs.⇒ P.158 *"REPORTS/LISTS"* 

#### Using a Keystroke Program

E.g., execute a program using Send Later for the fax number "0123456789."

#### **1** Set your original.

#### 🖉 Note

□ If the destination, resolution, contrast and/or original type are not registered in the program, carry out these operations now.

#### **2** Press the Quick Dial key programmed with the Keystroke Program.

Keystroke Program has been selected. (Press Clear Modes key to cancel.) [31]Ks.P WEEKLY Exit

In this example, the fax number and program name "Send Later" are shown on the display.

## Press the [OK] key then the [Start] key.

The machine starts scanning the original.

The message will be sent at the specified time.

#### **Deleting a Keystroke Program**

#### Limitation

When a registered program is being used for a standby Memory Transmission, the message "This destination is in use for standby transmission file. Please modify/delete after transmission" is shown and you cannot delete the program.

#### Note 🖉

If you delete a program, the registered program name is also deleted.

Make sure that the machine is in Facsimile mode and the standby display is shown.

()Ready S	et originals.	Enter	fax no.
Memory Trans.			100%
<u>63</u>		Dest:	0
	Mode	•	Info.

#### 🖉 Note

□ If the standby display is not shown, press the **[Fax]** key.

#### Press the [User Tools/Counter] key.

Sort Staple Stack	1-Sided →2-Side O $(1, \rightarrow)$ Book →2-Side O $(1, \rightarrow)$ 2-Sided →2-Side O $(2, \rightarrow)$	_ ₹ <b>&gt;</b>	2	k ↔ L	Counter	
						]
Enhanced	Auto Redu					
					ND:	2L01E0

**3** Enter the number of the "Fax".

🖬 User Too	ls Main Menu	Select Item
1 System	2 Сору	
B Fax	4	
Counter		Exit

The Facsimile User Tool main menu appears.

#### ➢ Reference

For how to use the System User Tools, refer to the System Settings manual.

- Enter the function number for "Register/Delete" using the number key.
- Enter the function number for "Delete Program" using the number keys.

■Register/Delete	3/4	Entei	r number 💻
09 Store Program 11 Reg. Auto Doc.			Program Auto Doc.
(↑Prev) ↓Next		Derete	PrevMenu

## Press the Quick Dial containing the program you wish to delete.

<delete program="">[3</delete>	13	Delete ?
Memory Trans. Other (Name:Ks.P WEEKLY)	rs	
(feature)	No	Yes


The contents of the program are shown on the display.

#### 🖉 Note

- □ If you make a mistake, press **[No]** and the correct key.
- □ You can press **[Status]** to see the Keystroke Programs currently programmed.

(Status 01-56)	Press key to register 💻
29 Ks.P REPORT	30 Ks.P DAILY
B1 K≲.P WEEKLY	32
(↑Prev )(↓Ne:	xt) OK

#### Press [Yes].

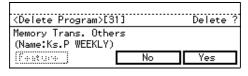




#### 🖉 Note

□ If you press **[No]**, the program is not deleted and the display shown in step 6 appears again.

#### B Press [Yes].

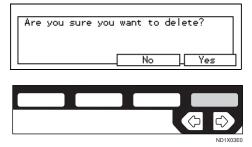

The program is deleted.

#### 🖉 Note

□ If you press **[No]**, the program is not deleted and the display shown in step 6 appears again.

Press the [User Tools/Counter] key.

#### **Registering Auto Documents**

If you find that you often have to send a particular page to people (e.g., a map, a standard attachment, or a set of instructions), store that page in memory as an Auto Document. This saves re-scanning the original every time you wish to send it.

Use the following procedure to program a new Auto Document or overwrite an existing one.

#### ∰Important

- □ You can store the following items in an Auto Document:
  - Original (up to 6 documents/ with optional Fax Feature Expander, 18), one page for each message)
  - Scanning conditions (Resolution, Original Type, and Image Density)
  - Irregular Scan Area
  - Document name (up to 10 characters)
- □ We recommend that you print the Auto Document list and keep it when you register or change a document. ⇒ P.158 "REPORTS/ LISTS"

#### Limitation

- □ You can only send one Auto Document per transmission.
- If you install the optional Fax Feature Expander, you can store up to 18 Auto Documents.


# **1** Make sure that the machine is in Facsimile mode and the standby display is shown.

OReady S	et or	iginals.	Enter	fax no.
Memory Trans.				100%
63			Dest:	0
		Mode	2	Info.

#### 🖉 Note

□ If the standby display is not shown, press the **[Fax]** key.

Press the [User Tools/Counter] key.

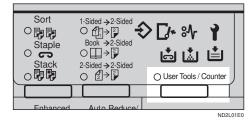

#### Enter the number of the "Fax".

🖬 User Tools	; Main Menu	Se	lect	Item
1 System	2 Copy			
B Fax	4			
Counter			E>	(it

The Facsimile User Tool main menu appears.

#### Reference


For how to use the System User Tools, refer to the System Settings manual.

4 Enter the function number for "Register/Delete" using the number keys.

Enter the function number for "Reg. Auto Doc." using the number keys.

■Register/Delete	3/4	Enter	r number 💻
09 Store Program 11 Reg. Auto Doc.			Program Auto Doc.
(↑Prev) ↓Next			PrevMenu

**6** Enter the number of the Auto Document you want to register using the number keys.

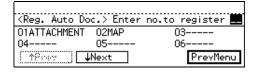

#### 🖉 Note


- □ If you make a mistake with the first digit, press the **[Clear/Stop]** key and enter the correct number. If you make a mistake for digit, press **[Cancel]** key and enter the correct number.
- □ If a document is already registered with that Auto Document number, the name is shown on the display.

#### Press [Name].



#### 🔗 Note

- You cannot omit a document name. Be sure to register it.
- Enter the Auto Document name.

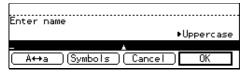

#### 🖉 Note

If the Name is already registered, it is shown on the display.
 If you want to change the document name, press the [Clear/

**Stop**] key and enter another name.

#### 


P.213 "Entering Text"

#### Press [OK].


#### 🔗 Note

□ If you are storing a standard size document, go to step 12.

#### D Press [Size].

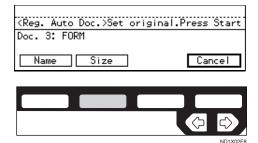


# ■ Select a size using the ● and ■ keys and press [OK].

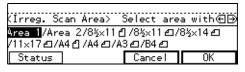



The document name and original size are shown on the display.

# Set your original and press the [Start] key.

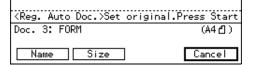

The machine starts scanning the original.

**B** When the original has been completely scanned in, press [Exit].

The Auto Document is stored. The display shown in step 6 appears again.

#### Press the [User Tools/Counter] key.


#### Auto Document list

The Auto Document list allows you to print and check stored Auto Document names. To print this list, follow the steps shown in "Reports/Lists".  $\Rightarrow$  P.158 "*REPORTS/LISTS*"

#### **Deleting an Auto Document**


#### Limitation

- You cannot delete an Auto Document waiting to be transmitted. Delete it after the transmission or delete the Auto Document after deleting the file waiting to be transmitted.
- **1** Make sure that the machine is in Facsimile mode and the standby display is shown.

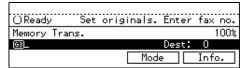

#### 🖉 Note

- □ If the standby display is not shown, press the **[Fax]** key.
- Press the [User Tools/Counter] key.

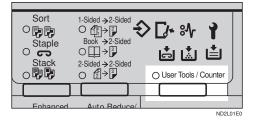

#### **3** Enter the number of the "Fax".

🖬 User To	ols Main Menu	Select	Item
1 System	2 Сору		
B Fax	4		
Counter		E:	xit

The Facsimile User Tool main menu appears.

#### Reference

For how to use the System User Tools, refer to the System Settings manual.

- Enter the function number for "Register/Delete" using the number keys.
- Enter the function number for "Delete Auto Doc." using the number keys.

■Register/Delete	3/4	Enter	number 📕	ľ
09 Store Program			Program	
11 Reg. Auto Doc.	ע 12 ט ר	elete	Auto Doc.	
<b>(↑</b> Prev <b>)</b> (↓Next	J		PrevMenu	

# **(** Enter the number of the Auto Document you want to delete using the number keys.


<delete auto<="" th=""><th>Doc.&gt;Enter no.</th><th>to delete 💻</th></delete>	Doc.>Enter no.	to delete 💻
01ATTACHMENT	02MAP	03
04	05	06
( <u>^</u> ?)	Next	PrevMenu

The stored document is shown on the display.

#### 🖉 Note

□ If you make a mistake with the first digit, press the **[Clear/Stop]** key and enter the correct number.


#### **7** Press [Yes].

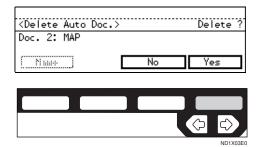

#### 🖉 Note

□ If you press **[No]**, the document is not deleted and the display shown in step 6 appears again.

#### B Press [Yes].

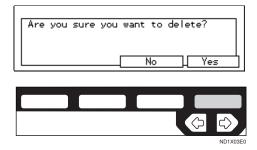

The Auto Document is deleted.

#### 🖉 Note

□ If you press **[No]**, the document is not deleted and the display shown in step 6 appears again.

**9** Press the **[User Tools/Counter]** key.

#### **Registering Irregular Area**

When you select Irregular Area to scan a non-standard size original, two custom sizes of original are available (Area 1 and Area 2). Use this function to register these custom sizes in advance.

To change an existing Irregular Scan size, just use the following procedure to overwrite it.


#### ∰Important

When registering or changing an original size, we recommend that you make a memo of the new size.

#### Limitation

- □ For the vertical length (width), select "Auto," "A4 (210 mm)," "B4 (257 mm)," "A3 (297 mm)," "8<sup>1</sup>/<sub>2</sub> inch," or "11 inch."
- For the horizontal length, specify from 128 to 432 mm or from 5.5 to 17 inches. You cannot set a length less than 128 mm or longer than 432 mm.


# **1** Make sure that the machine is in Facsimile mode and the standby display is shown.

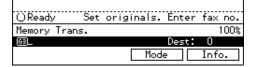


#### 🖉 Note

□ If the standby display is not shown, press the **[Fax]** key.

**2** Press the **[User Tools/Counter]** key.

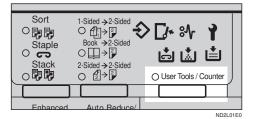

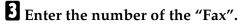

	User	Tools Main Menu	Select Item
1	System	2 Copy	
Р_	Fax	4	
0	Counter		Ēxit


The Facsimile User Tool main menu appears.

#### ₽ Reference

For how to use the System User Tools, refer to the System Settings manual.

Enter the function number for "Register/Delete" using the number keys.


#### Enter the function for "Reg. Irreg. Area" using the number keys.

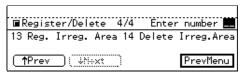

#### 🖉 Note

## □ If the appropriate display is not shown, press [↑Prev.] or [↓Next].

#### Deress [Area 1] or [Area 2].

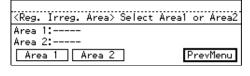




#### 🖉 Note


□ If a size is already registered, it is shown on the display.

#### **2** Press [Vert.].

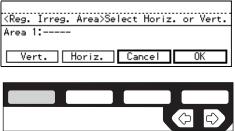

ND1X02E7

#### Select a size you want to register using the or be key and press [OK].

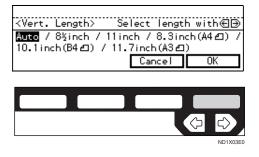


The specified size is shown on the display.

#### 🖉 Note


□ When you select "[Auto]", "---" is shown on the display.

Press [Horiz.].

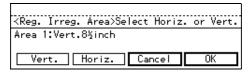



# Enter a length using the number keys and press [OK].

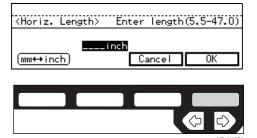

The specified size is shown on the display.

🖉 Note

□ Each time you press [mm ↔ inch], the units change between "inch" and "mm" alternately. If you enter a length and change the unit by pressing [mm ↔ inch], the length is converted automatically according to the unit (fractions are rounded off). For example, when you enter [2], [5], and [0] in millimeters and change to "inch," the length "9.8 inch" is shown on the display. If you press "mm" again "249 mm" is displayed.

#### Press [OK].




The display shown in 6 appears again.

Press the [User Tools/Counter] key.




**1** Make sure that the machine is in Facsimile mode and the standby display is shown.

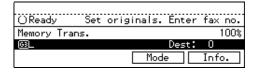

#### 🖉 Note

□ If the standby display is not shown, press the **[Fax]** key.

**2** Press the [User Tools/Counter] key.

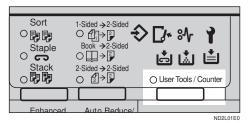

#### **3** Enter the number of the "Fax".

🖬 User	Tools Main Menu	Select	Item
1 System	2 Сору		
β Fax	4		
Counter		E:	xit

The Facsimile User Tool main menu appears.

#### ✓ Reference

For how to use the System User Tools, refer to the System Settings manual.

- Enter the function number for "Register/Delete" using the number keys.
- Enter the function number for "Delete Irreg.Area" using the number keys.




#### 🖉 Note

□ If the appropriate display is not shown, press [↑Prev.] or [↓Next].

The registered sizes are displayed.


6 Press [Area 1] or [Area 2].

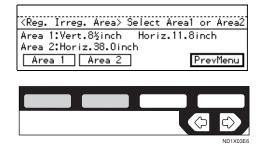

#### 🖉 Note

□ If you make a mistake, press [No] and choose a correct one.

#### **7** Press [Yes].

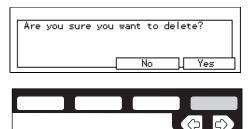

The Irregular Area is deleted.

#### 🖉 Note

□ If you press **[No]**, the Irregular Area is not deleted and the display shown in step 6 appears again.

#### B Press the [User Tools/Counter] key.

## **REPORTS/LISTS**

This function allows you to print the following reports and lists manually. Select a report or list as needed.

- TCR (Transaction Confirmation Report) ⇒ P.116 "PRINTING THE TCR"
- Quick Dial list ⇒ P.131 "Quick Dial List"
- Group Dial list ⇒ P.137 "Group Dial list"
- Keystroke Program list ⇒ P.149 *"Keystroke program list"*
- Speed Dial list ⇒ P.145 "Speed Dial list"
- Auto Document list ⇒ P.153 "Auto Document list" Auto Document list
- Authorized Reception list ⇒ P.191 "Sender/Authorized Reception List"


# Make sure that the machine is in Facsimile mode and the standby display is shown.

OReady	Set	originals.	Enter	fax no.
Memory Tran:	s.			100%
<u>63</u>			Dest:	0
		Mode	2	Info.

#### 🖉 Note

□ If the standby display is not shown, press the **[Fax]** key.

Press the [User Tools/Counter] key.

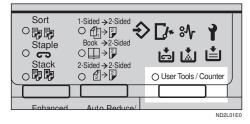

#### **3** Enter the number of the "Fax".


🔳 User Too	ols Main Menu	Select	Item
1 System	2 Сору		
B Fax	4		
Counter		E>	cit

The Facsimile User Tool main menu appears.

#### 

For how to use the System User Tools, refer to the System Settings manual.

- Enter the function number for "Register/Delete" using the number keys.
- Enter the Reports/Lists number you want to print out using the number keys.

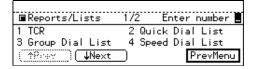

#### 🖉 Note

- □ If you can't see the item you need, press [↑Prev.] or [↓Next].
- □ If you make a mistake, press **[Cancel]** and enter the correct number.

#### **6** Press the **[Start]** key.

When printing is completed, the display shown in step 5 appears again.

#### 🖉 Note

- If you press Cancel before printing starts, the printing stops and the display shown in step 5 appears again.
- Press the [User Tools/Counter] key.

## **INITIAL SETUP TX**

When you turn on the machine or return to Copy mode, the machine returns to the home settings. You can change these home settings so that the machine starts with your most frequently used features selected.

This procedure can be used to change the home settings for the transmission mode (Memory/Immediate Transmission) and scanning conditions (Resolution, Original Type, Image Density, and Auto Image Density).

#### 🖉 Note

□ You can also choose whether the machine returns to the home settings after each communication. ⇒ P.203 "Changing the User Parameters"


# **1** Make sure that the machine is in Facsimile mode and the standby display is shown.

OReady	Set	originals.	Enter	fax no.
Memory T	rans.			100%
[G3]_			Dest:	0
		Mode	e	Info.

#### 🔗 Note

□ If the standby display is not shown, press the **[Fax]** key.

Press the [User Tools/Counter] key.

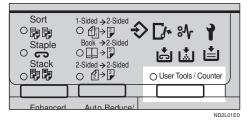

#### **3** Enter the number of the "Fax".

🖬 User Tool	s Main Menu	Select	Item
1 System	2 Сору		
β Fax	4		
Counter		E	kit

The Facsimile User Tool main menu appears.

#### 

For how to use the System User Tools, refer to the System Settings manual.

Enter the function number for "Initial Setup TX" using the number keys.

The "Initial Setup TX" menu is shown on the display.

Enter a function number using the number keys.

■Initial Setup TX	Enter number 📕
1 Trans. Mode 3 Photo Original	2 Resolution 4 Auto Image Density PrevMenu


#### 🖉 Note

- □ If you make a mistake, press Cancel and enter the correct number.
- Select the mode you want to change using the 


   ✓ or 

   ✓ keys then press [OK].

#### Transmission Mode Example

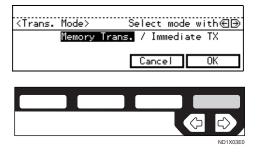

#### Resolution Example

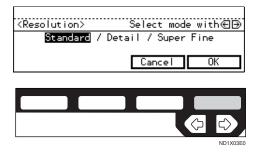

#### 🖉 Note

□ If you want to change other settings, repeat steps 5 and 6.


Press the [User Tools/Counter] key.

### **INITIAL SETUP RX**

The Initial Setup Reception function allows you to turn the following reception functions on or off.

- Reception Mode P.59 "SELECT-ING THE RECEPTION MODE"
- Checkered Mark P.64 "Checkered Mark"
- Center Mark P.64 "Center Mark"
- Print RX Time P.64 "Reception Time"
- Multi-copy Reception P.65 "Multicopy Reception"
- 2-sided Printing P.65 "2-Sided Printing"
- Reverse Order Printing P.68 "Reverse Order Printing"
- Authorized RX P.188 "Authorized Reception"
- Special RX Nos. P.182 "Special Senders to Treat Differently (Special RX Nos.)"
- Forwarding P.175 "Forwarding"
- Bypass Paper Size⇒ P.162 "To set the Bypass Paper Size"

**1** Make sure that the machine is in Facsimile mode and the standby display is shown.

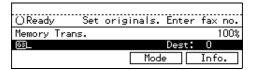

#### 🔗 Note

□ If the standby display is not shown, press the **[Fax]** key.

#### **2** Press the [User Tools/Counter] key.

Sort Staple Stack	1-Sided →2-Side O $(1 \rightarrow 2)$ Book →2-Side O $(1 \rightarrow 2)$ 2-Sided → 2-Side O $(2 \rightarrow 2)$	d 🗲	٩	よ。 シーン Jser Tools / の	Counter	
		]				
Enhanced	Auto Redu					
					ND2LI	01E0

#### **3** Enter the number of the "Fax".

🖬 User Tool	s Main Menu	Select Item
1 System	2 Сору	
B Fax	4	
Counter		Exit

The Facsimile User Tool main menu appears.

#### ✓ Reference

For how to use the System User Tools, refer to the System Settings manual.


- Enter the function number for "Initial Setup RX" using the number keys. The Initial Setup RX menu is shown on the display.
- Enter the function number of the item you want to change with the number keys.

■Initial Setup RX	1/3 Enter number 💻
D1 Recp. Mode	02 Chequered Mark
D3 Center Mark	04 Print RX Time
( ↑Paser ) <b>↓Next</b>	) PrevMenu

#### 🖉 Note

- □ If you make a mistake, press the **[Clear/Stop]** key and enter the correct number.
- Change the setting with the and ⇒ keys and press [OK].

# Reception Mode Example (Recp. Mode) Select mode with B Auto Receive / TEL Mode Cancel OK Cancel OK

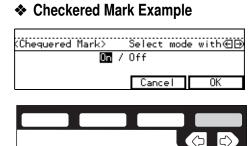


#### 🖉 Note

- □ If you wish to change other functions, repeat steps 5 and 6.
- Select on or off for Checkered Mark, Center Mark, Print RX Time, 2-Sided Printing, Authorized RX, Special RX Nos., and Reverse Printing.
- For Multi-copy Recp., enter the number of copies using the number keys.
- For Forwarding, select the messages to forward, either from all the senders, from specified senders or nothing.

Press the [User Tools/Counter] key.

#### To set the Bypass Paper Size


Press the €and ≥keys to select Auto.

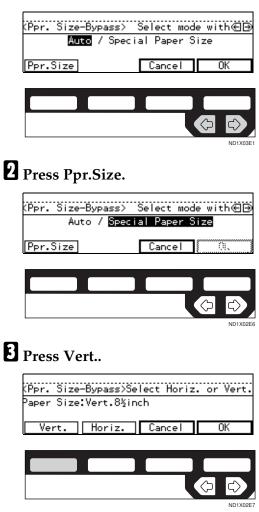

Press the and keys to select size and press [OK].

(Vert. Length)	Select	longth w	
3 <b>%inch</b> / 11inch /	' 8.3inch	(A4 🗗) /	
10.1inch(B4굅) /	11.7inch	(A3 <b>리</b> )	
	Cane	:el 🗌	OK
			ND1X03E

### Press Horiz..

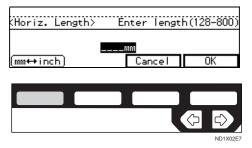

## **ASSIGNING USER FUNCTION KEYS**

You can program each of the User Function keys (**[F1]** –**[F5]**) with a function that you use frequently. When you wish to use that function, instead of having to search through several menus to find it, just press the appropriate User Function key. This procedure can be used to edit, delete or change the contents of the User Function keys.

#### 🖉 Note

At default the following functions are programmed by default. Tel mode cannot be programmed in F1/F2 keys.

Key	Standard	With Options
F1	Start Manual RX	$\leftarrow$
F2	Transmission Result Display	$\leftarrow$
F3	TEL Mode	$\leftarrow$
F4	-	G3/G4 Mode Selection (with ISDN option)
F5	-	Stamp with Stamp option


# Storing/Editing the Contents of a User Function Key

**1** Make sure that the machine is in Facsimile mode and the standby display is shown.

OReady Se	originals.	Enter fax	no.
Memory Trans.			100%
<u>63</u> _		Dest: O	
	Mode	e Inf	o.

#### 🖉 Note

- □ If the standby display is not shown, press the **[Fax]** key.
- **2** Press the **[User Tools/Counter]** key.

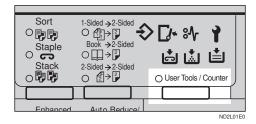

#### **3** Enter the number of the "Fax".

	User	Tools	Main	Menu	Se	lect	Item
1 B	System Fax	I		2 Сору 4			
Γ	ounter	·				E:	kit

The Facsimile User Tool main menu appears.

#### 

For how to use the System User Tools, refer to the System Settings manual.


- Enter the function number for "User Functions" using the number keys.
- Press the User Function key you want to use.

(User Functions)
Press User Function key to register, or check Status (F1 $\sim$ F5)
Status PrevMenu

#### 🔗 Note

□ If you make a mistake, press Cancel and press the correct key.

- □ You can press **[Status]** to see how the User Function keys are currently programmed.
- □ If you have the optional ISDN unit installed, you can not re-assign User Function key **[F4]**.
- □ If you have the optional stamp unit installed, you can not re-assign User Function key **[F5]**.
- **6** Enter the function number you want to register into the User Function key using the number keys and press [OK].

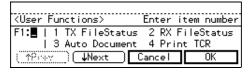



#### 🖉 Note

- □ To see a function number not displayed on the display, press [↑Prev.] or [↓Next].
- □ If you wish to store more functions, repeat steps 5 and 6 for other keys.
- □ If you press Cancel, the function is not stored and the display shown in step 5 appears again.

#### **2** Press the **[User Tools/Counter]** key.

#### **Using a User Function**

Press the User Function Key ([F1]-[F5]) in which the function you want to use is stored.

The stored function's display is shown.

#### E.g., "Print TCR"

To print TCR, press Start key or select mode. MIN / File No. / Pers. Code Cancel

## **KEY OPERATOR SETTINGS**

### **Personal Codes**

This function allows you to keep track of machine usage. When Personal Codes are programmed and Personal Code Access is turned on users have to enter their Personal Code before they send a fax.  $\Rightarrow$  P.207 "*Printing the User Parameter List*"

#### ∰Important

□ We recommend that you print the Personal Code list and keep it when you register or change a Personal Code. ⇒ P.158 "*REPORTS/ LISTS*"

### 🖉 Note

- □ To enter a Personal Code when send a fax, follow the steps shown in "Personal Code Transmission".
   ⇒ P.78 "PERSONAL CODE TRANSMISSION"
- □ If Personal Code Access is switched on, users cannot use the facsimile feature unless they enter their Personal Code. ⇒ P.169 "Personal Code Access"

#### **Registering Personal Codes**

You can register the following items in a Personal Code:

- Personal Code (any 4 digit number except 0000)
- Name (up to 20 characters)

To change an existing Personal code, just overwrite it with a new one.

### Limitation

On a standard model you can register up to 20 codes. If you install the Fax Feature Expander option, the maximum number of personal codes you can register is 50.


**1** Make sure that the machine is in Facsimile mode and the standby display is shown.

()Ready Set	originals. Enter fax no.
Memory Trans.	100%
63	Dest: O
	Mode Info.

#### 🖉 Note

□ If the standby display is not shown, press the **[Fax]** key.

Press the [User Tools/Counter] key.

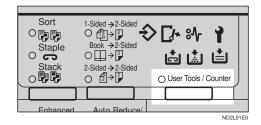

**3** Enter the number of the "Fax".

🖬 User Too	ls Main Menu	Select	Item
1 System	2 Сору		
B Fax	4		
Counter		E	kit

The Facsimile User Tool main menu appears.

### $\mathcal{P}$ Reference

For how to use the System User Tools, refer to the System Settings manual.

**4** Enter the function number for "Key Op. Settings" using the

number keys and press the **[#]** (Enter) key within 3 seconds.

🖬 Fax Features	2/2	Ente	r number _
5 User Functions	6 Key	0р.	Settings
(↑Prev) ( ₩N+xt	<u> </u>		Menu


### 🔗 Note

□ If "Key Op. Settings" is not shown, press [↑Prev.] or [↓Next].


Enter the function number for "Personal Code" using the number keys.

■Key Op. Settings	175	Enter number
01 Personal Code		
03 Memory Lock	04	Multistep Transf
(↑?:+Y) <b>↓Ne</b> xt	)	PrevMenu

**6** Enter the function number for "Reg. Pers. Code" using the number keys.

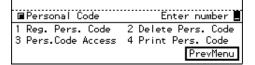

**2** Enter a Personal Code using the number keys.

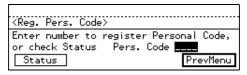

### 🖉 Note


- □ If you enter a wrong number for the first, second, or third digit, press the **[Clear/Stop]** key and enter a correct number. If you enter a wrong value for the fourth digit, press Cancel and enter the correct number from the first digit.
- If you enter a Personal code that has already been programmed, the contents appear on the dis-

play. If you wish to change the name, press **[Name]** and enter another name. If you wish to program another code, press **[Cancel]** and enter the new code.

□ You can press **[Status]** to see which codes have been already programmed.


Registered Personal Codes	
0824 ACCOUNT DEPA <sup>~</sup> 7227 JOHN 9266 NANCY	
(TPrev )(Whext) OK	

### 8 Press [Name].

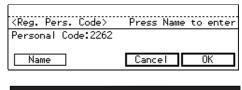



### **9** Enter the name.

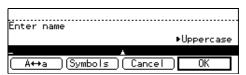

### 🔗 Note

□ If the name has already been programmed, it appears on the display. If you wish to change the name, press the **[Clear/Stop]** key and enter another name.


### Reference

P.213 "Entering Text"

### Press [OK].

The entered Personal Code and name are shown on the display.

## Press [OK] to register the code and name.

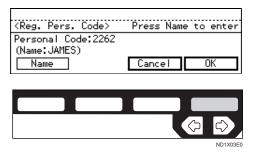

### 🖉 Note

□ If you press **[Cancel]**, the entered Personal Code is canceled and the display shown in step 7 appears again.

### Press [Exit].


The display shown in step 7 appears again.

#### Press [PrevMenu] 3 times.

Press the [User Tools/Counter] key.

#### **Deleting a Personal Code**


Make sure that the machine is in Facsimile mode and the standby display is shown.

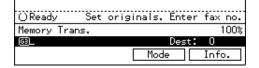

### Note

□ If the standby display is not shown, press the **[Fax]** key.

### **2** Press the **[User Tools/Counter]** key.

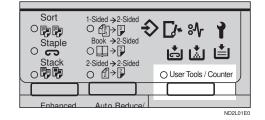

### **3** Enter the number of the "Fax".


🔳 User 1	fools Main Menu	Select	Item
1 System	2 Сору		
B Fax	4		
Counter		E	kit

The Facsimile User Tool main menu appears.

### ✓ Reference

For how to use the System User Tools, refer to the System Settings manual.

4 Enter the function number for "Key Op. Settings" using the number keys and press the [#] (Enter) key within 3 seconds.

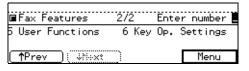


- □ If "Key Op. Settings" is not shown, press [↑Prev.] or [↓Next].
- **5** Enter the function number for "Personal Code" using the number keys.

■Key Op. Settings	1/5 Enter number 🛄
01 Personal Code	02 ECM
03 Memory Lock	04 Multistep Transf
(↑Prevy) <b>↓Ne</b> xt	PrevMenu

**6** Enter the function number for "Delete Pers. Code" using the number keys.

■Personal Code	Enter number 📕
1 Reg. Pers. Code 3 Pers.Code Access	2 Delete Pers. Code 4 Print Pers. Code
	PrevMenu

**2** Enter the Personal Code you want to delete using the number keys.

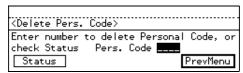


### 🖉 Note

- □ If you make a mistake, press the **[Clear/Stop]** key and enter the correct code.
- □ You can press **[Status]** to see which codes have been already programmed.

Registered Personal	Codes
0824 ACCOUNT DEPA~	2262 JAMES
7227 JOHN	9266 NANCY
(↑Prev )(↓Next	) OK


### Press [Yes].

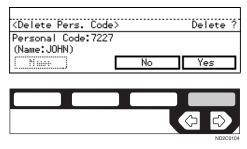

If you press **[No]**, the Personal Code is not deleted and the display shown in step 7 appears again.

### Press [Yes].

The Personal Code is deleted.

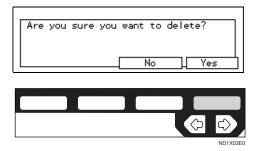

### 🖉 Note

- □ If you press **[No]**, the Personal Code is not deleted and the display shown in step 7 appears again.
- Press [PrevMenu] 3 times.

Press the [User Tools/Counter] key.

#### **Personal Code Access**

The machine can be set up so that users cannot use it without entering a registered Personal Code. This prevents an unauthorized person from sending a fax message and helps track the activity of each user.


**1** Make sure that the machine is in Facsimile mode and the standby display is shown.

L		
() Ready ()	Set originals.	Enter fax no.
Memory Trans		100%
63		Dest: O
	Mode	e Info.

### 🖉 Note

□ If the standby display is not shown, press the **[Fax]** key.

### Press the [User Tools/Counter] key.

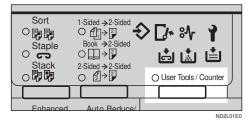

### **3** Enter the number of the "Fax".


🔳 User To	ools Main Menu	Select	Item
1 System	2 Сору		
B Fax	4		
Counter	]	E:	xit

The Facsimile User Tool main menu appears.

### ✓ Reference

For how to use the System User Tools, refer to the System Settings manual.

#### 4 Enter the number for "Key Op. Settings" using the number keys and press the [#] key within 3 seconds.

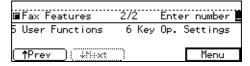

#### 🖉 Note

□ If "Key Op. Settings" is not shown, press [↑Prev.] or [↓Next].


Enter the number for "Personal Code" using the number keys.

■Key Op. Settings	175	Enter n	umber 💻
01 Personal Code	02	ECM	
03 Memory Lock	04	Multistep	Transf
() UNext		Р	revMenu

# **6** Enter the number for "Pers.Code Access" using the number keys.

■Personal Code	Enter number 📕
1 Reg. Pers. Code 3 Pers.Code Access	2 Delete Pers. Code 4 Print Pers. Code PrevMenu

#### 

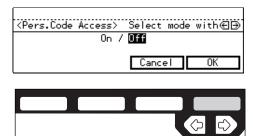

#### NDTAG

### 🖉 Note

- □ If you press **[Cancel]**, the previous setting is not changed and the display shown in step 6 appears again.
- 8 Press [PrevMenu] twice.
- Press the [User Tools/Counter] key.

The display returns to the Personal Code screen.

#### Printing the Personal Code List


Print this list to find out the registered Personal Codes and their names.

**1** Make sure that the machine is in Facsimile mode and the standby display is shown.

			<u>.</u>	
OReady	Set	originals.	Enter	fax no.
Memory T	rans.			100%
<u>63</u>			Dest:	0
		Mod	e	Info.

### 🖉 Note

□ If the standby display is not shown, press the **[Fax]** key.

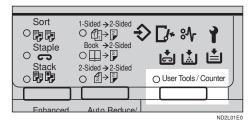

**2** Press the [User Tools/Counter] key.

### **3** Enter the number of the "Fax".

🖬 Üser	Tools Main Menu	Select	Item
1 System B Fax	2 Сору 4		
Counter		E	kit

The Facsimile User Tool main menu appears.

#### Reference

For how to use the System User Tools, refer to the System Settings manual.

Enter the number for "Key Op. Settings" using the number keys and press the [#] key within 3 seconds.



### 🖉 Note

- □ If "Key Op. Settings" is not shown, press [↑Prev.] or [↓Next].
- Enter the number for "Personal Code" using the number keys.

■Key Op. Settings	175	Enter number 💻
01 Personal Code	02	ECM
03 Memory Lock	04	Multistep Transf
(_↑P::+Y) <b>↓Ne</b> xt	D	PrevMenu

**6** Enter the function number for "Print Pers. Code" using the number keys.

■Personal Code	Enter number 📕
1 Reg. Pers. Code 3 Pers.Code Access	
	PrevMenu

### **2** Press the **[Start]** key.

When printing is completed, the display shown in step 4 appears again.

#### 🖉 Note

□ If you press **[Cancel]** before printing starts, the printing stops and the display shown in step 6 appears again.

8 Press [PrevMenu] twice.

Press the [User Tools/Counter] key.

### ECM

If a part of a transmission fails because of a line problem, the lost data is automatically resent. For this feature to work, the other machine must have ECM. By default, ECM is turned on, but you can change this with the following procedure.


When ECM is off data transmission speed shifts down below 14.4 Kbps and JBIG compression is not available.

**1** Make sure that the machine is in Facsimile mode and the standby display is shown.

() Ready	Set	originals.	Enter	fax no.
Memory Trans	5.			100%
[ <u>G3</u> ]_			Dest:	0
		Mod	e	Info.

### 🖉 Note

□ If the standby display is not shown, press the **[Fax]** key.

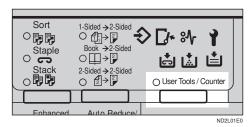

**2** Press the **[User Tools/Counter]** key.

# Enter the number of the Fax mode.

🔳 User Tools	s Main Menu	Select	Item
1 System	2 Сору		
B Fax	4		
Counter		E	xit

The Facsimile User Tool main menu appears.

#### P Reference

For how to use the System User Tools, refer to the System Settings manual.

Enter the function number for "Key Op. Settings" using the number keys and press the [#] (Enter) key within 3 seconds.


■Fax Features	2/2	Ente	r number 🛓
5 User Functions	6 Key	0р.	Settings
fPrev ( ↓?!+×t	_		Menu

### 🖉 Note

□ If "Key Op. Settings" is not shown, press [↑Prev.] or [↓Next].

**5** Enter the function number for "ECM" using the number keys.

■Key Op. Settings	175	Enter number 📕	
01 Personal Code 03 Memory Lock	~-	ECM Multistep Transf	
( Mext	<u>כ</u>	PrevMenu	_

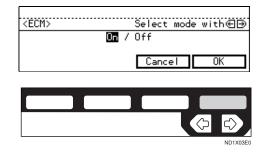

### 🖉 Note

□ If you press **[Cancel]**, the previous setting is not changed and the display shown in step 5 appears again.

**2** Press [PrevMenu].

Bress the [User Tools/Counter] key.

### Memory Lock

*The optional Fax Feature Expander is required to use this function.* 

When you switch Memory Lock On, received messages are stored in memory and not printed automatically. When a message is received in Memory Lock mode, the Receive File indicator blinks. To print this message, enter the Memory Lock ID. A user who does not know the ID cannot print the message. This prevents an unauthorized person from seeing the message.

To use Memory Lock, program the Memory Lock ID and switch it on.


**1** Make sure that the machine is in Facsimile mode and the standby display is shown.

OReady	Set	originals.	Enter	fax no.
Memory Tra	ns.			100%
63			Dest:	0
		Mode	e 🗌	Info.

### 🖉 Note

□ If the standby display is not shown, press the **[Fax]** key.

**2** Press the **[User Tools/Counter]** key.

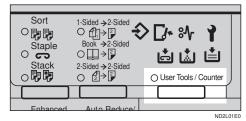

### Enter the number of the "Fax".

🖬 User 1	Tools Main Menu	Select	Item
1 System B Fax	2 Сору 4		
Counter		E>	kit

The Facsimile User Tool main menu appears.

### ✓ Reference

For how to use the System User Tools, refer to the System Settings manual.

4 Enter the function number for "Key Op. Settings" using the number keys and press the [#] (Enter) key within 3 seconds.

■Fax Features	2/2	Enter	number 🛓
5 User Functions	6 Key	0p. S	ettings
<b>f</b> Prev ( ♦?∺×t	)		Menu


### 🖉 Note

□ If "Key Op. Settings" is not shown, press [↑Prev.] or [↓Next].

Enter the function number for "Memory Lock" using the number keys.

Weise On State in the	ane.	Foto a sub su m
■Key Op. Settings	175	Enter number 🔜
01 Personal Code	02	ECM
03 Memory Lock	04	Multistep Transf
( †Prev ) <b>U</b> Next		PrevMenu

Switch Memory Lock on or off using the and keys and press OK.

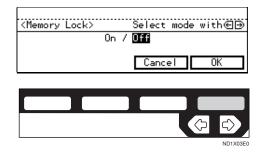

### 🖉 Note

If you press Cancel, Memory Lock is not switched on and the display shown in 5 appears again.

**2** Press [PrevMenu].

Press the [User Tools/Counter] key.

### **Multistep Transfer**

*The optional Fax Feature Expander is required to use this function.* 

This machine can be used to build up a multi-step facsimile network that allows messages to be sent via multiple Transfer Stations and achieve greater efficiency in processing Transfer Requests.

The following procedure describes how to program a Transfer Station number into a Group. Providing this Group contains the appropriate End Receiver Information (Group codes), when your machine receives a Transfer Request, it will pass the message to the Transfer Station(s) you specify.

# Make sure that the machine is in Facsimile mode and the standby display is shown.

OReady Se	t originals. Enter fax no.
Memory Trans.	100%
[ <u>63</u> ]	Dest: O
	Mode Info.

### 🖉 Note

□ If the standby display is not shown, press the **[Fax]** key.

Sort Staple Stack Stack	1-Sided $\rightarrow$ 2-Side ○ $(1) \rightarrow [2]$ Book $\rightarrow$ 2-Side ○ $(1) \rightarrow [2]$ 2-Sided $\rightarrow$ 2-Side ○ $(2) \rightarrow [2]$	d <b>€</b>	User Tools / (	
Enhanced	Auto Redu			ND2L01E0


Press the [User Tools/Counter] key.

### 🔗 Note

- □ If "Key Op. Settings" is not shown, press [↑Prev.] or [↓Next].
- Enter the function number for "Multistep Transf" using the number keys.


■Key Op. Settings	1/5 Enter number	
01 Personal Code	O2 ECM	
03 Memory Lock	04 Multistep Trans	sf
() UNext	) PrevMer	าน

**C** Press the Quick Dial key you want to store this Transfer Group in.

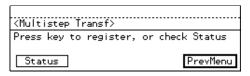

### 🖉 Note

- □ You can press **[Status]** to see the current status of the Group.
- □ If the machine has the Optional Group feature (optional Fax Feature Expander is required), you can register a Transfer Station. Select the Group type you wish to register using the number keys. To select a Group, press a Quick Dial key. To select an Optional Group, enter the Optional Group code using the number keys. In this example, Optional Group is selected.

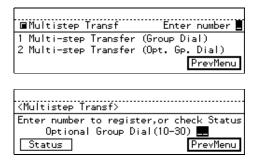

### Enter the number of the "Fax".


🔳 User 1	ools Main Menu	Select	Item
1 System	2 Сору		
β Fax	4		
Counter		E:	xit

The Facsimile User Tool main menu appears.


### ${}^{\mathcal{P}}$ Reference

For how to use the System User Tools, refer to the System Settings manual.

Enter the function number for "Key Op. Settings" using the number keys and press the [#] (Enter) key within 3 seconds.

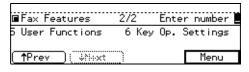


### **2** Specify a Transfer Station.

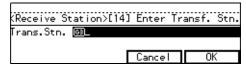

### 🖉 Note

- □ Enter the Transfer Station's fax number using a Quick Dial key, Speed Dial or the number keys.
   ⇒ P.46 "Quick Dials", P.47 "Speed Dials", P.43 "Number Keys"
- □ If you make a mistake, press the **[Clear/Stop]** key and enter the correct number.
- □ If you press Cancel, the setting is canceled and the display show in 6 appears again.

### 8 Press [OK].

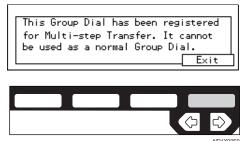

Press [OK].

Press [PrevMenu].

Press the [User Tools/Counter] key.

### Forwarding

*The optional Fax Feature Expander is required to use this function.* 

Using this feature, you can select messages from Specified Senders to be printed on your machine and then sent on to another fax machine. This is useful if, for example, you are visiting another office and would like a copy of your messages sent to that office so you can read them.

In this section, the machines that messages are forwarded to are referred to as Forwarding Stations. The locations from which you would like messages forwarded from are referred to as Specific Senders.

You can register:

- 5 Forwarding Stations (up to 32 digits for each number)
- 30 Specific Senders (maximum 10 per Forwarding Station, up to 20 characters each with G3 and 24 with G4)
- Wild Cards  $\Rightarrow$  P.213 "Wild Cards"

### ∰Important

□ It is recommended that you print the Forwarding/Sender list and keep it when you register or change a receiver or sender. ⇒ P.158 "*REPORTS/LISTS*"

### Limitation

- This feature only works if the incoming message is from another party that has been programmed as a Specific Sender.
- The Forwarding function does not forward messages received with Confidential Reception, Memory Lock, Polling Reception mode, or messages received by Transfer Request.
- □ You cannot register a sender who does not have an RTI or CSI.
- You can register up to 30 Specific Senders for Forwarding, Special RX Nos., and Authorized Reception functions. You sometimes cannot register 30 senders depending on the number of senders regis-

tered with other functions. If you install the optional Fax Feature Expander, you can register up to 50 senders.

### 🖉 Note

- □ You can print a forwarding mark on forward messages. ⇒ P.207 "Printing the User Parameter List"
- To register a sender, use an RTI or CSI. When you communicate with a sender using G4, register the G4 TID.
- You can find out the RTI or CSI of a sender by looking in the destination name column of the TCR.
- □ Before using the Forwarding function, register Forwarding Stations and select the messages to forward. ⇒ P.161 *"INITIAL SETUP RX"*
- □ You can specify whether or not to send received messages on to another fax machine automatically. See "Changing User Parameters" ⇒ P.203 "Changing the User Parameters". This feature is called "Forwarding". The default setting is "Off".
- □ You can specify whether or not to print forwarded messages. This feature is called "Local Printing". The default setting is on. ⇒ P.203 "Changing the User Parameters"

#### **Registering Forwarding Stations**

Make sure that the machine is in Facsimile mode and the standby display is shown.

OReady	Set	originals.	Enter	fax no.
Memory 1	rans.			100%
<u>[63]</u>			Dest:	0
		Mode	e	Info.

#### 🖉 Note

□ If the standby display is not shown, press the **[Fax]** key.

Press the [User Tools/Counter] key.

	ded →2-Side	a	_		Ľ	
	2 → 2	(	O User	Tools / C	Counter	J
Enhanced /		ne/				

### **3** Enter the number of the "Fax".


🖬 User Tool	s Main Menu	Select Item
1 System	2 Сору	
B Fax	4	
Counter		Exit

The Facsimile User Tool main menu appears.

### ✓ Reference

For how to use the System User Tools, refer to the System Settings manual.

Enter the function number for "Key Op. Settings" using the number keys and press the [#] key within 3 seconds.

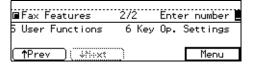

- □ If "Key Op. Settings" is not shown, press [↑Prev.] or [↓Next].
- Enter the function number for "Forwarding" using the number keys.

■Key Op. Settings	275	Enter	number 🛄
05 Forwarding	- 06	Special	RX Nos.
07 Authorized RX	08	Monitor	Volume
(↑Prev) ↓Next			PrevMenu

**6** Enter the function number for "Reg. Receiver" using the number keys.


■ Forwarding	Enter number 📕
1 Reg. Receiver 3 Register Sender	2 Delete Receiver 4 Delete Sender
5 Print Sender List	PrevMenu

**2** Choose a receiver (Forwarding Station) to program be entering the its code number.

(Reg. Receiver)	Enter no.to register
1	2
3	4
5	PrevMenu

### 🖉 Note


- □ If you make a mistake, press **[Cancel]** and enter a correct number.
- Enter the Forwarding Station's fax number using the number keys and select the communication type, then press [OK].

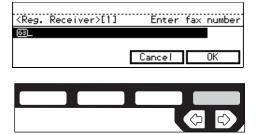

### 🖉 Note

- If you make a mistake, press the [Clear/Stop] key and enter a correct number.
- □ If you have the optional ISDN unit, select the line type to be used before specifying a fax number. ⇒ P.41 "CHANGING LINE TYPE"

**9** Press [Exit].

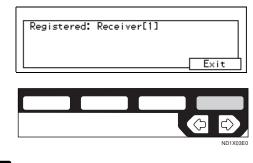

Press [PrevMenu] 3 times.

Press the [User Tools/Counter] key.

**Deleting a Forwarding Station** 

**U** Make sure that the machine is in Facsimile mode and the standby display is shown.

OReady Set	aniaianta Estas fau as
	originals. Enter fax no.
Memory Trans.	Dest: 0
<u>[63]</u>	
	Mode Info.

### 🖉 Note

- □ If the standby display is not shown, press the **[Fax]** key.
- 2 Press the [User Tools/Counter] key.

Sort Staple Stack	(	-Sided $\rightarrow$ 2-Side ⊃ $( \bigcirc ) \rightarrow \bigcirc $ Book $\rightarrow$ 2-Side ⊃ $( \bigcirc ) \rightarrow \bigcirc $ -Sided $\rightarrow$ 2-Side	d 🗲		]≁ ഃ∿ టి టి	<b>↑</b> ≟	
	(			0	User Tools / 0	Counter	)
Enhanced		Auto Redu				ND2L0	150

#### ID2L01E0

### **3** Enter the number of the "Fax".

🖬 User Tool	s Main Menu	Sele	ct Iter
1 System	2 Сору		
B Fax	4		
Counter			Exit

The Facsimile User Tool main menu appears.

### ₽ Reference

For how to use the System User Tools, refer to the System Settings manual.

4 Enter the function number for "Key Op. Settings" using the number keys and press the [#] (Enter) key within 3 seconds.

■Fax Features	2/2	Ente	r number 📕
5 User Functions	6 Key	0р.	Settings
fPrev ( ♦ñi+xt	2		Menu

### 🖉 Note

- □ If "Key Op. Settings" is not shown, press [↑Prev.] or [↓Next].
- **5** Enter the function number for "Forwarding" using the number keys.
- **6** Enter the function number for "Delete Receiver" using the number keys.


Choose the receiver (Forwarding Station) to delete by entering its code number.

<pre><delete receiver=""></delete></pre>	Enter no. to delete 📕
1 9840310471	2 9266047131
3	4
5	PrevMenu

### 🖉 Note

□ If you make a mistake, press **[N0]** and enter a correct number.

### **8** Press Yes.

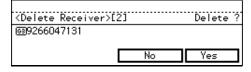



### 🖉 Note

□ If you press No, the Forwarding Station is not deleted and the display shown in 5 appears again.

### Press [Yes].

The Forwarding Station is deleted.





### 🖉 Note

□ When you press **[No]**, the Forwarding Station is not deleted and the display shown in 5 appears again.

Press [PrevMenu] 3 times.

Press the [User Tools/Counter] key.

Registering Specific Senders (Forwarding)


**1** Make sure that the machine is in Facsimile mode and the standby display is shown.

OReady Set	originals. Enter fax no.
Memory Trans.	100%
<u>63</u>	Dest: O
	Mode Info.

#### 🖉 Note

□ If the standby display is not shown, press the **[Fax]** key.

**2** Press the **[User Tools/Counter]** key.

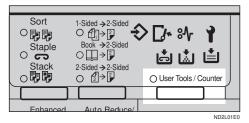

# Enter the number of the Fax mode.

🖬 User 1	Tools Main Menu Se	elect Item
1 System	2 Сору	
8 Fax  Counter	7 4	Exit

The Facsimile User Tool main menu appears.

#### 

For how to use the System User Tools, refer to the System Settings manual.

4 Enter the function number for "Key Op. Settings" using the number keys and press the [#] (Enter) key within 3 seconds.



### 🖉 Note

- □ If "Key Op. Settings" is not shown, press [↑Prev.] or [↓Next].
- Enter the function number for "Forwarding" using the number keys.
- **6** Enter the function number for "Register Sender" using the number keys.

**2** Choose a Specific Sender to register by entering its code number.

<register< th=""><th>Sender&gt;Enter</th><th>no.to</th><th>register 🗖</th></register<>	Sender>Enter	no.to	register 🗖
01	00		
03	04		
i têray	) where )		PrevMenu

#### 🖉 Note


□ If you make a mistake, press the **[Clear/Stop]** key and enter a correct number.

### 8 Press [RTI/CSI].

<Register Sender> Press RTI/CSI,Receiver Sender[O1] [RTI/CSI [Receiver] Cancel OK




## Register an RTI or CSI of a sender and press [OK].

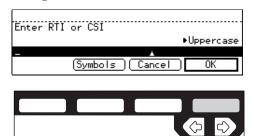

#### P Reference

 $\Rightarrow$  P.213 "Entering Text"

U Select whether or not to register a sender as a wild card.  $\Rightarrow$  P.213 "Wild Cards".

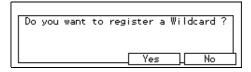


### Dress [Receiver].






Choose the Forwarding Station you want to assign this Specific Sender to: enter its code and press [OK].

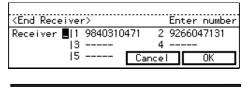



### Press [OK].

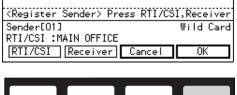


# 

### 🖉 Note

□ If you press **[Cancel]**, the sender is not registered and the display shown in 7 appears again.

### Press [Exit].

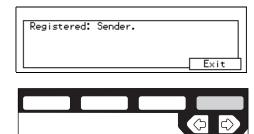

E Press [PrevMenu] 3 times.

Press the [User Tools/Counter] key.


Deleting a Specific Sender (Forwarding)

**1** Make sure that the machine is in Facsimile mode and the standby display is shown.

OReady	/ Set	originals.	Enter	fax no.
Memory	Trans.			100%
<u>63</u>			Dest:	0
		Mode	e 🗌	Info.

### 🖉 Note

- □ If the standby display is not shown, press the **[Fax]** key.
- **2** Press the **[User Tools/Counter]** key.

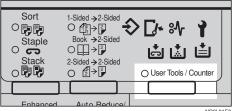

ND2L01E0

### **3** Enter the number of the "Fax".

🖬 User Too	ls Main Menu	Select	Item
1 System	2 Сору		
B Fax	4		
Counter		E	kit

The Facsimile User Tool main menu appears.

### 

For how to use the System User Tools, refer to the System Settings manual.

4 Enter the function number for "Key Op. Settings" using the number keys and press the [#] (Enter) key within 3 seconds.

■Fax Features	2/2	Ente	er number
5 User Functions	6 Key	0р.	Settings
fPrev (♦ñiext			Menu

### 🖉 Note


- □ If "Key Op. Settings" is not shown, press [↑Prev.] or [↓Next].
- **5** Enter the function number for "Forwarding" using the number keys.
- **6** Enter the function number for "Delete Sender" using the number keys.
- **2** Choose the Specified Sender you want to delete by entering its code with the number keys.



### 🖉 Note

- If you make a mistake, press the [Clear/Stop] key and enter a correct number.
- □ If you have a mistake with the second digit, press **[No]** and enter the number again.

### Press [Yes].

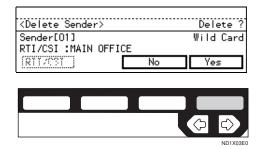


### 🖉 Note

□ If you press **[No]**, the sender is not deleted and the display shown in 7 appears again.

### Press [Yes].

The sender is deleted.

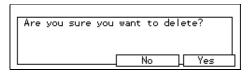



### 🔗 Note

□ If you press **[No]**, the sender is not deleted and the display shown in 5 appears again.

Press [PrevMenu] 3 times.

Press the [User Tools/Counter] key.

### Specified Sender/Forwarding Station list

Print this list to find out which Specific Senders are assigned to which Forwarding Stations.


# **1** Make sure that the machine is in Facsimile mode and the standby display is shown.

OReady Set	: originals. Enter fax no.
Memory Trans.	100%
[ <u>63</u> ]	Dest: O
	Mode Info.

### 🖉 Note

□ If the standby display is not shown, press the **[Fax]** key.

**2** Press the **[User Tools/Counter]** key.

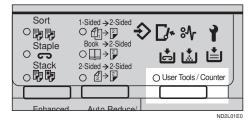

### Enter the number of the "Fax".

	Üser	Tools	Main Menu	Se	lect	Item
1	System	I	2 Сору			
P_	Fax	_	4			
ĮC	Counter				E>	kit

The Facsimile User Tool main menu appears.

#### 

For how to use the System User Tools, refer to the System Settings manual.

Enter the function number for "Key Op. Settings" using the number keys and press the [#] (Enter) key within 3 seconds.

■Fax Features	2/2	Enter	number 📕
5 User Functions	6 Key	0p. S	ettings
<b>fPrev</b> ( ♦N+xt	<u> </u>		Menu

#### 🖉 Note

□ If "Key Op. Settings" is not shown, press [↑Prev.] or [↓Next].

- Enter the function number for "Forwarding" using the number keys.
- **6** Enter the function number for "Print Sender List" using the number keys.

Press the [Start] key.

#### 🖉 Note

□ If you press **[Cancel]** before printing starts, the printing stops.

Press [PrevMenu] twice.

Press the [User Tools/Counter] key.

### Special Senders to Treat Differently (Special RX Nos.)

Special Reception numbers (Special RX Nos.) allow you to treat incoming messages from certain locations differently.

For example, you might want messages from your branch offices printed on a different color paper to identity them at a glance. In this case, program the branch office RTI/CSI's as Specific Senders and select a paper tray loaded with colored paper.

 Multi-copy <sup>\*1</sup> (Number of prints setting).
 You can have several copies of

You can have several copies of messages printed.

• Cassette Select (tray from which messages are printed).

You can choose the paper cassette used when printing messages. If you set different color paper in this cassette, you will be able to recognize messages from certain senders at a glance.

### 🔗 Note

- If you receive a fax with a paper size different from that set in the paper cassette, the printout will be split across several pages or reduced to fit on the paper.
- □ If you choose the optional Bypass Feed Tray, make sure the size you programmed for this tray matches the paper size in this tray. For more details, P.14 *"Acceptable Original Sizes"*.
- Memory Lock \*1
  - You can have messages received into memory. To print them out, P.114 "PRINTING A FILE RE-CEIVED WITH MEMORY LOCK".
- 2-Sided Printing <sup>\*2</sup> Print on both sides of the paper.

### Limitation

- The function requires both the optional Duplex Unit and Fax Memory Board.
- Reverse Printing <sup>\*1</sup>

You can have pages printed in the opposite order in which they were received.

You can adjust the following settings for this function:

- Specified Senders (maximum of 30, up to 20 characters each with G3, up to 24 characters each with G4)
- Wildcards P.213 "Wild Cards"
- <sup>\*1</sup> The optional Fax Feature Expander is required.
- <sup>\*2</sup> Duplex Tray option and Fax Feature Expander are required

### ∰Important

□ It is recommended that you print the Sender/Specified Number list and keep it when you register or change a sender. ⇒ P.158 "*RE*-*PORTS/LISTS*"

### Limitation

- The Special Reception Numbers function cannot used to treat messages received from a Specific Senders if they are received with Polling Reception or Free Polling.
- □ You cannot register a Specific Sender who does not have an RTI or CSI.
- You can register up to 30 senders for Forwarding, Special Reception Numbers, and Authorized Reception functions. You sometimes cannot register 30 senders depending on the number of senders registered with other functions. If you install the optional Fax Feature Expander, you can register up to 50 senders.

### 🖉 Note

- To register a sender, use an RTI or CSI. When you communicate with a sender using G4, register a G4 TID
- You can find the RTI or CSI of a sender by looking in the destination name column of the TCR
- □ Before using the Special RX Nos. function, switch this function to On by following the steps shown in Initial Setup RX. ⇒ P.161 "INI-TIAL SETUP RX"

Registering Specific Senders (Special X Nos.)


**1** Make sure that the machine is in Facsimile mode and the standby display is shown.

()Ready Set	originals. Enter fax no.
Memory Trans.	100%
<u>[63]</u>	Dest: O
	Mode Info.

### 🖉 Note

□ If the standby display is not shown, press the **[Fax]** key.

Press the [User Tools/Counter] key.

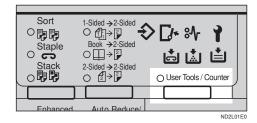

# 3 Enter the number of the "Fax".


1 System 2 Copy 3 Fax 4  Counter   Exit	🔳 User	Tools M	ain Mer	nu	Sele	ct	Item
	1 System		2	Сору			
Course and Exite	B Fax		4				
Lounter Exit	Counter					Ex	it

The Facsimile User Tool main menu appears.

### Reference

For how to use the System User Tools, refer to the System Settings manual.

Enter the function number for "Key Op. Settings" using the number keys and press the [#] key within 3 seconds.

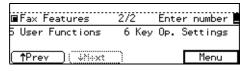

### 🖉 Note

- □ If "Key Op. Settings" is not shown, press [↑Prev.] or [↓Next].
- Enter the function number for "Special RX Nos.". using the number keys.

■Key Op. Settings	275	Enter	number 💻
05 Forwarding 07 Authorized RX		Special Monitor	
(↑Prev) ↓Next			PrevMenu

**6** Enter the function number for "Register Sender" using the number keys.

■Special RX Nos.	Enter number 📕
1 Register Sender 3 Print Sender List	2 Delete Sender
	PrevMenu


# Choose a number where you want to program a Specific Sender.

<register sender="">Ente</register>	r no.to register 💻
	2 HONG KONG BRAN~
03 PARIS OFFICE 0	4
( <u> ^Pr+Y</u> )( <u></u>	PrevMenu


### 🔗 Note

□ If you make a mistake, press the **[Clear/Stop]** key and reenter a correct value. If you enter a wrong value for the second digit, press **[Cancel]** and enter it again.

### Press [RTI/CSI].

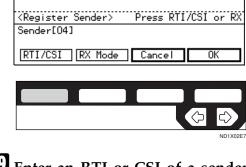


Enter an RTI or CSI of a sender and press [OK].

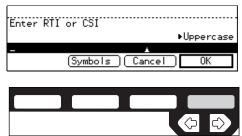

### 

P.213 "Entering Text"

**D** Select whether or not to register the sender as a wild card.  $\Rightarrow$  P.213 "Wild Cards".

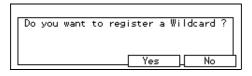


### Press [RX Mode].




ND1X02

D Select any features for this Specific Sender. You can scroll through them by pressing [↑Prev.] or [↓N-ext]. Then press [OK].

### Multi-copy

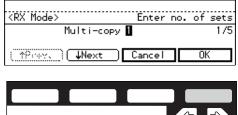


### Tray Select

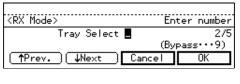




#### Memory Lock

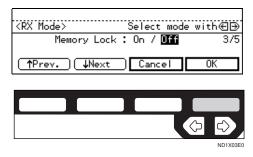


### Reverse Printing

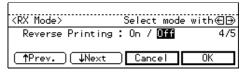



### 2-Sided Printing

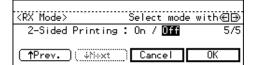



- □ Select only items you want to change.
- □ If you press **[Cancel]**, the specified setting are canceled and the display shown in 11 appears again.

### B Press [OK].

<register sender=""></register>	Droce DTT	/CSI or RX
Sender[04]	Fress KII	Wild Card
RTI/CSI :LONDON OFFI	ICE	milu caru
RTI/CSI RX Mode		OK



### Press [Exit].






Press [PrevMenu] 3 times.

Press the [User Tools/Counter] key.

#### Deleting a Specific Sender


Make sure that the machine is in Facsimile mode and the standby display is shown.

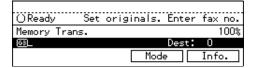

### 🖉 Note

□ If the standby display is not shown, press the **[Fax]** key.

### **2** Press the [User Tools/Counter] key.

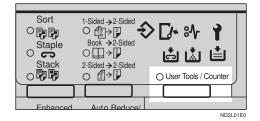

### **3** Enter the number of the "Fax".


🖬 User T	ools Main Menu	Select	Item
1 System	2 Copy		
B Fax	_ 4		
Counter		E:	kit

The Facsimile User Tool main menu appears.

### ✓ Reference

For how to use the System User Tools, refer to the System Settings manual.

4 Enter the function number for "Key Op. Settings" using the number keys and press the [#] key within 3 seconds.

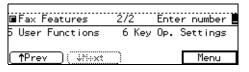

- □ If "Key Op. Settings" is not shown, press [↑Prev.] or [↓Next].
- **5** Enter the function number for "Special RX Nos." using the number keys.
- Enter the function number for "Delete Sender" using the number keys.
- **2** Choose a sender number you want to delete by entering its code


## with the number keys. The registered RTI or CSI is flash up.

<delete sender=""></delete>	Enter no. to delete 💻
01 ABC COMPANY	02 HONG KONG BRAN~
03 PARIS OFFICE	04 LONDON OFFICE
( <u>†Prev</u> )( <del>V</del> Next	PrevMenu

### 🖉 Note

 If you make a mistake, press the [Clear/Stop] key and enter a correct value.

### B Press [Yes].

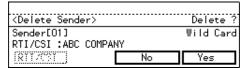




### 🖉 Note

□ If you press **[No]**, the sender is not deleted and the display shown in 5 appears again.

### Press [Yes].

The sender is deleted.

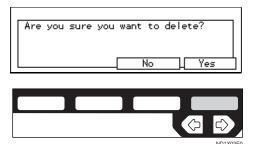

### 🖉 Note

□ If you press **[No]**, the sender is not deleted and the display shown in 5 appears again.



Press the [User Tools/Counter] key.

### Specified Sender List

Print this list to see the currently programmed Specific Senders.

Make sure that the machine is in Facsimile mode and the standby display is shown.

L				
OReady	Set	originals.	Enter	fax no.
Memory	Trans.			100%
63			Dest:	0
		Mod	e	Info.

### 🖉 Note

□ If the standby display is not shown, press the **[Fax]** key.

**2** Press the **[User Tools/Counter]** key.

Sort Staple Stack Stack	1-Sided ⇒ 2-Side $\bigcirc$ $(\bigcirc$ $(\bigcirc$ $(\bigcirc$ $(\bigcirc$ $(\bigcirc$ $(\bigcirc$ $(\bigcirc$	ed 🕹	→ C+ + + → L + +
		]	
Enhanced	Auto Redu		
			ND2L01

### **3** Enter the number of the "Fax".

🖬 User Too	ls Main Menu	Select	Item
1 System	2 Сору		
8 Fax	4		
Counter		E>	kit

The Facsimile User Tool main menu appears.

### ✓ Reference

For how to use the System User Tools, refer to the System Settings manual.

Enter the function number for "Key Op. Settings" using the number keys and press the **[#]** (Enter) key within 3 seconds.

■Fax Features	2/2	Ente	er number 📕
5 User Functions	6 Key	Οр.	Settings
fPrev ( ♦१७०×१	<u> </u>		Menu

#### 🖉 Note

- □ If "Key Op. Settings" is not shown, press [↑Prev.] or [↓Next].
- **5** Enter the function number for "Special RX Nos.". using the number keys.
- **6** Enter the function number for "Print Sender List" using the number keys.

#### Press the [Start] key.

When the printing job is completed, the display shown in 6 appears again.

#### 🖉 Note

□ If you press **[Cancel]** before printing starts, printing stops and the display shown in 6 appears again.

### 8 Press [PrevMenu] twice.

Press the [User Tools/Counter] key.

### **Authorized Reception**

This feature helps you to reject junk mail. It lets you specify which terminals you wish to receive fax messages from; the others will be shut out. This is useful if you are very annoyed with someone.

You can register the following:

- 30 Specified Senders (up to 20 characters for each sender with G3, 24 with G4)
- Wild Card  $\Rightarrow$  P.213 "Wild Cards"

#### ∰Important

□ It is recommended that you print the Sender/Authorized Reception list and keep it when you register or change a sender. ⇒ P.158 "*RE*-*PORTS/LISTS*"

### Limitation

- You cannot register a Specified Sender who does not have an RTI or CSI.
- You can register up to 30 senders for Forwarding, Special RX Nos., and Authorized Reception functions. You sometimes cannot register 30 senders depending on the number of senders registered with other functions. If you attach the optional Fax Feature Expander to the machine, you can register up to 50 senders.

- To register a sender, use an RTI or CSI. If you communicate with a sender using G4, register the G4 TID.
- □ To find out a senders RTI/CSI, check the TCR.
- □ You need to switch Authorized Reception on. ⇒ P.161 "INITIAL SET-UP RX"
- □ You can specify whether to receive messages from only Specified Senders or to exclude messages from Specified Senders. The default setting is "Receive from Authorized Senders". ⇒ P.203 "Changing the User Parameters"

#### **Programming Specified Senders**


**1** Make sure that the machine is in Facsimile mode and the standby display is shown.

()Ready Set	: originals. Enter fax no.
Memory Trans.	100%
<u>63</u>	Dest: O
	Mode Info.

### 🖉 Note

□ If the standby display is not shown, press the **[Fax]** key.

Press the [User Tools/Counter] key.

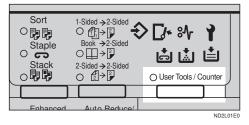

**B** Enter the number of the "Fax".

	l User	Tools Main Menu Se	lect	Item
1	System	2 Сору		
β.	Fax	4		
Γ	Counter		E>	cit

The Facsimile User Tool main menu appears.

#### ✓ Reference

For how to use the System User Tools, refer to the System Settings manual.

4 Enter the function number for "Key Op. Settings" using the number keys and press the [#] (Enter) key within 3 seconds.

■Fax Features	2/2	Enter number	
5 User Functions	6 Key	Op. Settings	
(↑Prev )("\$?\+xt	<u> </u>	Menu	

#### 🖉 Note

- □ If "Key Op. Settings" is not shown, press [↑Prev.] or [↓Next].
- Enter the function number for "Authorized RX" using the number keys.

■Key Op. Settings	275	Enter	number 🛄
05 Forwarding		Special	
07 Authorized RX	08	Monitor	Volume
(↑Prev) ↓Next	$\supset$		PrevMenu

**6** Enter the function number for "Register Sender" using the number keys.




**2** Choose a sender number you wish to register.

<register< th=""><th>Sender&gt;Enter</th><th>no.to</th><th>register 💻</th></register<>	Sender>Enter	no.to	register 💻
01	02		
03	04		
( <u>†</u> ₽)	( <u>*****</u> )		PrevMenu

### 🖉 Note


□ If you make a mistake, press the **[Clear/Stop]** key and reenter a correct value.

### 8 Press [RTI/CSI].

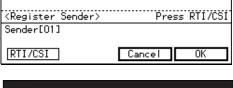



# Enter an RTI or CSI of a sender and press [OK].

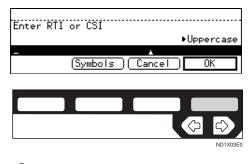


### ${}^{\mathcal{P}}$ Reference

P.213 "Entering Text"

Select whether or not to register the sender on a P.213 "Wild Cards".

Do you	want to	) register	a Wildo	ard ?
		Yes		No

### Press [OK].

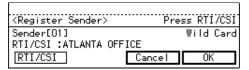



### Press [Exit].





Press [PrevMenu] 3 times.

Press the [User Tools/Counter] key.

Deleting a Specific Sender (Authorized Reception)

**1** Make sure that the machine is in Facsimile mode and the standby display is shown.

OReady	Set	originals.	Enter	fax no.
Memory Tra	ns.			100%
63			Dest:	0
		Mode	•	Info.

#### 🖉 Note

- □ If the standby display is not shown, press the **[Fax]** key.
- Press the [User Tools/Counter] key.

Sort Staple Staple Stack	2	Sided →2-Side $ \Rightarrow 2$ -Side Book →2-Side $ \Rightarrow 2$ -Side $ \Rightarrow 2$ -Side $ \Rightarrow 2$ -Side $ \Rightarrow 2$ -Side $ \Rightarrow 2$ -Side	d	Cuser Tools / Counter	
	П				ſ
Enhanced		Auto Reduc			
				ND2	L01E0

### **3** Enter the number of the "Fax".

🔳 User	Tools Main Menu	Select	Item
1 System	2 Сору		
β Fax	4		
Counter		E:	kit

The Facsimile User Tool main menu appears.

#### 


For how to use the System User Tools, refer to the System Settings manual.

Enter the function number for "Key Op. Settings" using the number keys and press the [#] (Enter) key within 3 seconds.

	IFax	Features	2/2	Ente	er number	
5	User	Functions	6 Key	0р.	Settings	
C	<b>†</b> Pre	v (iiiiiixt			Menu	

🖉 Note


- □ If "Key Op. Settings" is not shown, press [↑Prev.] or [↓Next].
- Enter the function number for "Authorized RX" using the number keys.
- **6** Enter the function number for "Delete Sender" using the number keys.
- Choose the sender to delete by entering its code. The RTI/CSI will flash up.

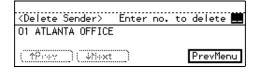

### 🖉 Note

□ If you make a mistake, press **[Clear/Stop]** and enter a correct number.

### B Press [Yes].

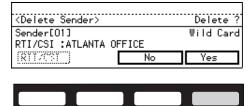


### 🔗 Note

□ If you press **[No]**, the sender is not deleted and the display shown in 7 appears again.

### Press [Yes].

The sender is deleted.

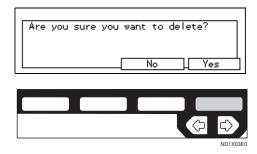

### 🖉 Note

□ If you press **[No]**, the sender is not deleted and the display shown in 5 appears again.

Press [PrevMenu] 3 times.

Press the [User Tools/Counter] key.

### Sender/Authorized Reception List

Print this list to find out which Specific Senders are currently programmed.

**1** Make sure that the machine is in Facsimile mode and the standby display is shown.

OReady Set orig	ginals. Ér	iter	fax no.	]
Memory Trans.			100%	5
<u>63</u> _	De	st:	0	
	Mode		Info.	

### 🖉 Note

ND1X03E0

□ If the standby display is not shown, press the **[Fax]** key.

Press the [User Tools/Counter] key.

Sort Staple Stack S

### **3** Enter the number of the "Fax".

🔳 User To	ols Main Menu	Select	Item
1 System	2 Сору		
B Fax	4		
Counter	]	E	xit

The Facsimile User Tool main menu appears.

#### P Reference

For how to use the System User Tools, refer to the System Settings manual.

Enter the function number for "Key Op. Settings" using the number keys and press the [#] (Enter) key within 3 seconds.

■Fax Features	2/2	Ente	r number 📕
5 User Functions	6 Key	Οр.	Settings
TPrev ( White xt			Menu

#### 🖉 Note

- □ If "Key Op. Settings" is not shown, press [↑Prev.] or [↓Next].
- Enter the function number for "Authorized RX" using the number keys.
- **()** Enter the function number for "Print Sender List" using the number keys.

### Press the **[Start]** key.

#### 🔗 Note

□ When you press **[Cancel]**, the printing stops and the display shown in 4 appears again.

### Press [PrevMenu] twice.

Press the [User Tools/Counter] key.

### **Monitor Volume**

You can change the volume of the following sounds the machine makes.

#### On Hook

When you press the **[On Hook Dial]** key.

#### Transmission

When the machine send a message.

#### Reception

When the machine receive a message.

#### DiallingDialing

After pressing the **[Start]** key, this sound is output until the line connects to the destination.


#### Printing

Sounds when a received message has been printed. See P.64 *"Print Completion Beep"*.

**1** Make sure that the machine is in Facsimile mode and the standby display is shown.

OReady	Set	originals.	Enter	fax no.
Memory T	rans.			100%
63			Dest:	0
		Mode	•	Info.

- □ If the standby display is not shown, press the **[Fax]** key.
- Press the [User Tools/Counter] key.

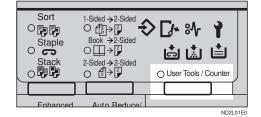

### **3** Enter the number of the "Fax".

🖬 User T	ools Main Menu	Se	lect	Item
1 System	2 Сору			
B Fax	4			
Counter	]		E>	(it

The Facsimile User Tool main menu appears.

#### 

For how to use the System User Tools, refer to the System Settings manual.

Enter the function number for "Key Op. Settings" using the number keys and press the [#] (Enter) key within 3 seconds.

■Fax Features	2/2	Ente	r number 📕
5 User Functions	6 Key	0р.	Settings
<b>∱Prev</b> ( ♦१७×*			Menu

### 🖉 Note

- □ If "Key Op. Settings" is not shown, press [↑Prev.] or [↓Next].
- Enter the function number for "Monitor Volume" using the number keys.


■Key Op. Settings	275	Enter	number 🛄
05 Forwarding	- 06	Special	RX Nos.
07 Authorized RX	-08	Monitor	Volume
(↑Prev) ↓Next			PrevMenu

# **6** Select an item you want to adjust pressing [↑Prev.] and [↓Next].


### 🖉 Note

On Hook, Transmission, Reception, Dialling, and Printing are shown in that order.

#### On Hook

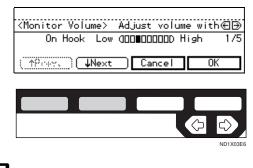

## ▲ Adjust the volume using the or▶ key and press [OK].

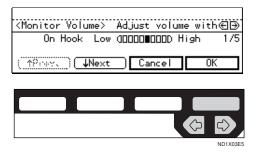

### 🔗 Note

□ When you press **[Cancel]**, the volume setting is canceled and the display shown in 5 appears again.

 $\Box$  Lowest = OFF

Press [PrevMenu].

Press the [User Tools/Counter] key.

### **RTI/TTI**

An RTI (Receive Terminal Identification) is passed to a receiver or sender when you send or receive a fax. When the RTI is received, it is shown on the display and printed in a report at the other end.

The TTI (Transmitter Terminal Identification) is printed on the header of every fax you send.

You usually should contain your name in both of these identifications.

### Limitation


- The RTI does not work unless the other party has the same make machine with the RTI feature.
- You can program up to 20 characters in a RTI and 32 in a TTI.
- You can program letter, symbols, number, and spaces in an RTI and TTI.


# **1** Make sure that the machine is in Facsimile mode and the standby display is shown.

< no.
100%
fo.
) 11

### 🖉 Note

- □ If the standby display is not shown, press the **[Fax]** key.
- Press the [User Tools/Counter] key.

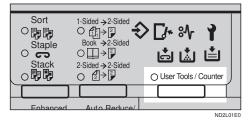

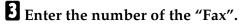


🖬 User To	ols Main Menu	Select	Item
1 System	2 Copy		
B Fax	4		
Counter		E	XIT

The Facsimile User Tool main menu appears.

### Reference

For how to use the System User Tools, refer to the System Settings manual. Enter the function number for "Key Op. Settings" using the number keys and press the [#] key within 3 seconds.

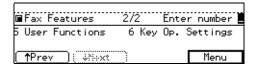


### 🖉 Note

- □ If "Key Op. Settings" is not shown, press [↑Prev.] or [↓Next].
- **5** Enter the function number for "RTI/TTI" using the number keys.


■Key Op. Settings	3/5 Enter number 💻
09 RTI/TTI	10 Economy TX
11 ID Code	12 G3 Analog Line
(↑Prev) ↓Next	) PrevMenu

### **6** Press [ RTI].

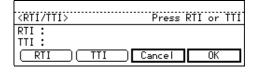




**2** Enter an RTI and press [OK].

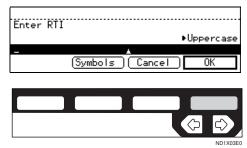

**Reference** P.213 "Entering Text"

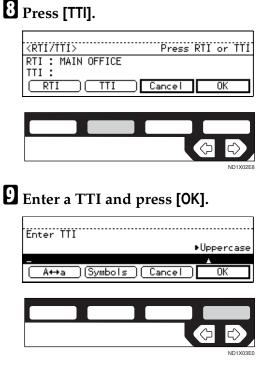

### Reference

P.213 "Entering Text"

### Press [OK] to confirm.

### 🖉 Note

□ If you press **[Cancel]**, the entered characters are canceled and the display shown in 3 appears again.

### Press [PrevMenu].

Press the [User Tools/Counter] key.

### Registering The Economy Transmission Time

Economy Transmission allow you to take advantage of off-peak line rates by delaying transmission of messages until a later time.

Use the procedure below to program the Economy Transmission Time for

when you phone rates are cheaper.  $\Rightarrow$  P.74 "SEND LATER"

### Limitation

- You can program only one Economy Transmission time.
- **1** Make sure that the machine is in Facsimile mode and the standby display is shown.


()Ready Set	originals. Enter fax no.
Memory Trans.	100%
<u>[63]</u>	Dest: O
	Mode Info.

### 🖉 Note

- □ If the standby display is not shown, press the **[Fax]** key.
- **2** Press the **[User Tools/Counter]** key.

Sort Staple Staple Stack	1-Sided →2-Sided Dook →2-Sided Dook →2-Sided Dook →2-Sided 2-Sided →2-Sided Dook →2-Sided	╡ <b>╎ ╬╶╢</b> ╡
Enhanced	Auto Reduc	

ND2L01E0

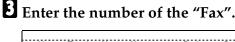

🖬 Üser	Tools Main Menu	ı Select İtem
1 System	ı 20	ору
8 Fax	4	
Counter	-	Exit

The Facsimile User Tool main menu appears.

### ✓ Reference

For how to use the System User Tools, refer to the System Settings manual.

4 Enter the function number for "Key Op. Settings" using the number keys and press the **[#]** (Enter) key within 3 seconds.

■Fax Features	2/2	Ente	er number 📕
5 User Functions	6 Key	0р.	Settings
fPrev ( ♦१७०×१	)		Menu


#### 🖉 Note

□ If "Key Op. Settings" is not shown, press [↑Prev.] or [↓Next].

Enter the function number for "Economy TX" using the number keys.

■Key Op. Settings	3/5 Enter number 💻
09 RTI/TTI	10 Economy TX
11 ID Code	12 G3 Analog Line
(↑Prev) ↓Next	) PrevMenu

6 Enter an economy transmission time using the number keys and press [OK]. To change AM/PM, press the [AM ↔ PM] key (North America only)

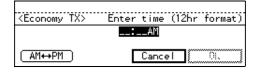

### Note

□ If you press **[Cancel]**, the entered time is canceled and the display shown in 5 appears again.

### Press [PrevMenu].

B Press the [User Tools/Counter] key.

### ID Code

Use this procedure to register the following kinds of ID codes.

#### Confidential ID

This ID is usually required for printing a message received in the Confidential Reception.  $\Rightarrow$  P.112

"PRINTING A CONFIDENTIAL MESSAGE"

#### Polling ID

This ID is required for using Transfer Request  $\Rightarrow$  P.96 "TRANSFER REQUEST", Transfer Station  $\Rightarrow$ P.60 "Transfer Station", Default ID Polling Transmission  $\Rightarrow$  P.90 "Free Polling Reception  $\Rightarrow$  P.90 "Free Polling Reception  $\Rightarrow$  P.94 "Default ID Polling Reception (Free Polling Reception)", ID Transmission  $\Rightarrow$ P.52 "ID Transmission", ID Reception  $\Rightarrow$  P.61 "ID Reception" function.

#### Memory Lock ID

This ID is required for printing a message received using Memory Lock.  $\Rightarrow$  P.114 "PRINTING A FILE RECEIVED WITH MEMORY LOCK"


### Limitation

- A Polling ID can be any combination of digits (0 - 9) and letters (A -F) except for 0000 and FFFF. When you use Transfer Request, Transfer Station, or ID Transmission, register the same ID code as that registered on the sender's machine.
- □ A Confidential ID and Memory Lock ID can be any a four digit numeric code except for 0000.
- □ For Confidential ID and Memory Lock ID, the optional Fax Feature Expander is required.
- **1** Make sure that the machine is in Facsimile mode and the standby display is shown.


l OReady Se	t originals. Ent	er fax no.
Memory Trans.	- Des	100%
	Mode	Info.

### Note

□ If the standby display is not shown, press the **[Fax]** key.

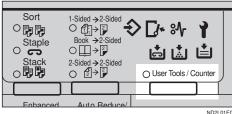

### Press the [User Tools/Counter] key.

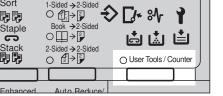

# Enter the number of the "Fax".


🖬 Üser	Tools Main Menu	Select	Item
1 System 8 Fax	2 Сору 4		
Counter		E	xit

The Facsimile User Tool main menu appears.

### Reference

For how to use the System User Tools, refer to the System Settings manual.

Enter the function number for "Key Op. Settings" using the number keys and press the [#] key within 3 seconds.

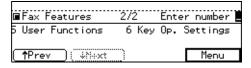

### Note Note


- □ If "Key Op. Settings" is not shown, press [**1**Prev.] or [**\Next**].
- **5** Enter the function number for "ID Code" using the number keys.

■Key Op. Settings	3/5 Enter number 💻
09 RTI/TTI	10 Economy TX
11 ID Code	12 G3 Analog Line
(↑Prev) ↓Next	) PrevMenu

#### Choose the ID you wish to program using the number keys.


ID Code	Enter number 📕
1 Confidential ID 3 Memory Lock ID	2 Polling ID
	PrevMenu

### **U** Enter an ID code and press [OK].

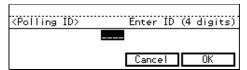


#### Note

- □ For a Confidential ID and Memory Lock ID, use the number keys to enter an ID code. For a Polling ID, use the number keys and letter keys (A to F).
- □ If you make a mistake, press the **[Clear/Stop]** key and enter a correct code.
- □ If you press **[Cancel]**, the entered ID is canceled.

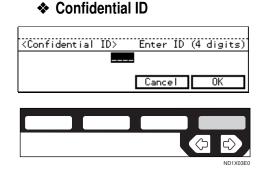

### Memory Lock ID

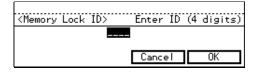

- 8 Press [PrevMenu] twice.
- Press the [User Tools/Counter] key.

### G3 Analog Line

This function must be set up before you connect the machine to a G3 analog line.

You can register the following items with a G3 analog Line:

- PSTN Line Type (Dial Pulse/Tone)
- CSI (up to 20 digits)
- Own Analog Number (up to 16 digits)

#### 🖉 Note

- A CSI (Called Station Identification) is notified to a receiver or sender when you send or receive a fax. When the CSI is received, it is shown on the display or printed in a report by the receiver's or sender's machine. The CSI works even if the receiver or sender uses a different make machine.
- The CSI can contain numerals, a plus sign (+), and spaces. You usually should register your country code, area code (minus the leading zero) and your fax number in that order.
- Specify your own analog number (the telephone number to which your machine is connected) so that the transfer station can return the Transfer Result report to you. You can program numbers and a pause in your own number. Be sure to enter a pause after the area code.
- **1** Make sure that the machine is in Facsimile mode and the standby display is shown.


OReady	Set	originals.	Enter	fax no.
Memory	Trans.			100%
<u>63</u>			Dest:	0
		Mode	,	Info.

#### 🖉 Note

□ If the standby display is not shown, press the **[Fax]** key.

Press the [User Tools/Counter] key.

Sort Staple Stack	1-Sided $\rightarrow$ 2-Sider O $(1, \rightarrow)$ Book $\rightarrow$ 2-Sider O $(1, \rightarrow)$ 2-Sided $\rightarrow$ 2-Sider 2-Sided $\rightarrow$ 2-Sider O $(2, \rightarrow)$ (2) $(2, \rightarrow)$ (3) $(2, \rightarrow)$ (4) $(2, \rightarrow)$ (4) $(2, \rightarrow)$ (5) $(2, \rightarrow)$	╡¥∦∛↓ ははは
Enhanced	Auto Bedu	

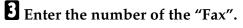


🔳 User Too	ls Main Menu	Select Item
1 System	2 Сору	
B Fax	4	
Counter		Exit

The Facsimile User Tool main menu appears.

### ${}^{\mathcal{P}}$ Reference

For how to use the System User Tools, refer to the System Settings manual.

Enter the function number for "Key Op. Settings" using the number keys and press the [#] (Enter) key within 3 seconds.

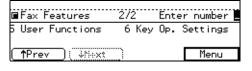


- □ If "Key Op. Settings" is not shown, press [↑Prev.] or [↓Next].
- **5** Enter the function number for "G3 Analog Line" using the number keys.

■Key Op. Settings	3/5 Enter number 💻
09 RTI/TTI	10 Economy TX
11 ID Code	12 G3 Analog Line
(↑Prev) ↓Next	) PrevMenu

**6** Enter the function number for "PSTN Line Type" using the number keys.

■G3 Analog Line			Enter	number 📕
1 PSTN Line Type 3 Own Analog Number	2	CSI	_	
			I	<sup>o</sup> revMenu


## Select the desired line type and press [OK].

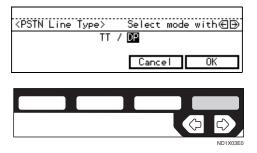


Enter the function number for "CSI" using the number keys.

### 9 Enter CSI and press [OK].

In some countries, you can not use this function.

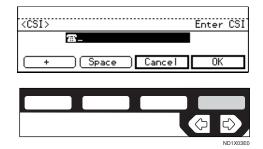

Enter the function number for "Own Analog Number" using the number keys. Enter an own analog number using the number keys and press [OK].

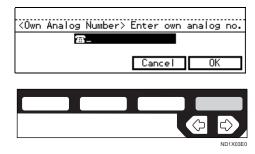

Press [PrevMenu] twice.

B Press the [User Tools/Counter] key.

### G3 Digital Line

This function must be set when you connect the machine to an ISDN G3 digital line.

You can register the following items.


- CSI (up to 20 digits)
- Own Digital Number (up to 29 digits)

- □ Optional ISDN required.
- □ You need to register a CSI and your own digital number. ⇒ P.198 "G3 Analog Line"
- □ If you wish to change your subaddress, contact your service representative.
- Program a User Function key for the subaddress function.
- **1** Make sure that the machine is in Facsimile mode and the standby display is shown.

() Ready	Set	originals.	Enter	fax no.
Memory Tran	ns.			100%
63			Dest:	0
		Mod	e 🗌	Info.

- Note
- □ If the standby display is not shown, press the **[Fax]** key.

Press the [User Tools/Counter] key.

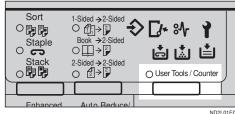

# Enter the number of the "Fax".


🖬 User T	ools Main Men	u Select	Item
1 System	2	Сору	
B Fax	_ 4		
Counter		E	ixit

The Facsimile User Tool main menu appears.

#### P Reference

For how to use the System User Tools, refer to the System Settings manual.

Enter the function number for "Key Op. Settings" using the number keys and press the [#] (Enter) key within 3 seconds.

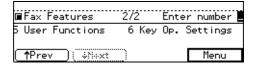


#### Note Note


- □ If "Key Op. Settings" is not shown, press [**1**Prev.] or [**1**Next].
- **5** Enter the function number for "G3 Digital Line" using the number keys.

■Key Op. Settings	4/5 Enter number 💻
13 G3 Digital Line	14 G4 Digital Line
15 User Parameters	16 Prt.U.Parameters
(↑Prev) ↓Next	PrevMenu

**6** Enter the function number for "CSI" using the number keys.

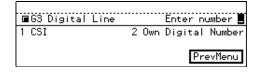


### Enter the CSI and press [OK].

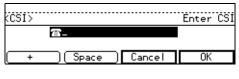



- Enter the function number for "Own Digital Number" using the number keys.
- Denter your own digital number using the number keys and press [OK].

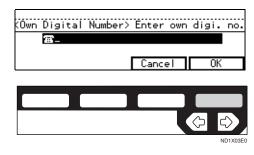

Press [PrevMenu] twice.

Press the [User Tools/Counter] key.

### G4 Digital Line

This function must be set when you connect the machine to the ISDN digital line.

You can register the following items:

• TID (up to 24 digit)


- Own Digital Number (up to 29 digit)
- 🖉 Note
- □ Optional ISDN unit is required.
- You can use a G4 TID if you use the ISDN. The G4 TID is information to be printed on a destination machine when you send a fax using G4 down the ISDN.

# 1 Make sure that the machine is in Facsimile mode and the standby display is shown.

OReady	Set	originals.	Enter	fax no.
Memory	Trans.			100%
<u>63</u>		Dest:	0	
		Mode	e	Info.

### 🖉 Note

- □ If the standby display is not shown, press the **[Fax]** key.
- **2** Press the **[User Tools/Counter]** key.

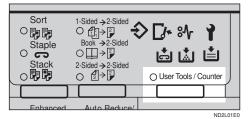


**3** Enter the number of the "Fax".

	l User	Tools Main Menu S	elect	Item
1	System	1 2 Сору		
P_	Fax	4		
0	Counter		E>	kit

The Facsimile User Tool main menu appears.

### ✓ Reference

For how to use the System User Tools, refer to the System Settings manual. Enter the function number for "Key Op. Settings" using the number keys and press the [#] (Enter) key within 3 seconds.

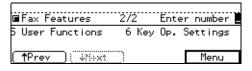


### 🖉 Note


- □ If "Key Op. Settings" is not shown, press [↑Prev.] or [↓Next].
- **5** Enter the function number for "G4 Digital Line" using the number keys.

■Key Op. Settings 4/5	5 Enter number 🗮
13 G3 Digital Line 14 15 User Parameters 16	4 G4 Digital Line 5 Prt.U.Parameters
TPrev Vext	PrevMenu


Enter the function number for "TID" using the number keys. In some countries, you can not use this function.

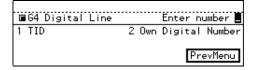

## **2** Enter the number for "Country Code".

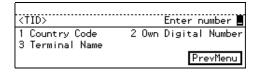

Enter your Country Code using the number keys and press [OK].

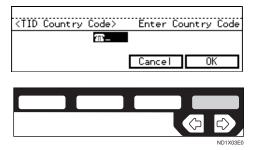


Enter the number for "Own Digital Number" using the number keys.

Enter your fax number and press [OK].

<tid:own digi.number="">Enter own digi. no.</tid:own>
<b>a</b>
Cancel OK



- Enter the number for "Terminal Name."
- Enter your terminal name and press [OK].

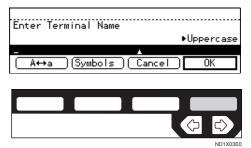


### ✓ Reference


P.213 "Entering Text"

Press [PrevMenu].

Enter the function number for "Own Digital Number" using the number keys.

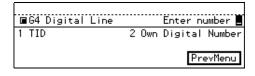

Enter your own digital number using the number keys and press [OK].

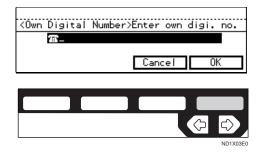

- Press [PrevMenu] twice.
- Press the [User Tools/Counter] key.

## **Changing the User Parameters**

The User Parameters allow you to customize various settings to match your needs.

To change the function settings, set the user parameter switches.

### Preparation

Access to some User Parameter Settings requires installation of optional equipment or that other settings be made beforehand.

## 

## Switches and Bits

User Parameters are divided into Switches and each switch is divided into eight bits. The right most bit is bit 0 and the left most is bit 7.

Switch 00	0	1	0	0	0	0	0	0
	$\rightarrow$	$\downarrow$						
	7	6	5	4	3	2	1	0

#### 

## Viser Parameter List

Switch	Bit	Item	0	1		
00	0	Stamp home position	Off	On		
	3,2,1	1 Image density adjustment level home position The higher the level, the greater the image density.				
000: Auto Image Density, 001: Level 1 (lightest), Level 3, 100: Level 4, 101: Level 5 (darkest)5,45,4Character size (resolution) home position				et), 010: Level 2, 011:		
				tion		
		00: Standard, 01: Detail, 10: Super fine				
	6	Transmission Mode home position	Memory Trans- mission	Immediate Transmission		

Switch	Bit	Item	0	1
01	0	Label Insertion home posi- tion	Off	On
	1	ID Transmission home posi- tion	Off	On
	2	Auto Reduction home posi- tion	Off	On
	4,3	Original type home position 00: Text, 01: Photo/Text, 10: I	Photo	
	5	TTI Print home position	Off	On
	7	Return the machine to the initial settings after each communication	Off	On
02	0	Forwarding Mark	Off	On
	1	Center Mark	Off	On
	2	Print RX Time	Off	On
	3	TSI Print	Off	On
	4	Checkered Mark	Off	On
	5	CIL Print	Off	On
	6	TID Print	Off	On
03	0	Printing a Transmission Re- sult Report (Memory Trans- mission) automatically	Off	On
	2	Printing a Memory Storage Report automatically	Off	On
	3	Printing a Polling Reserve Report automatically	Off	On
	4	Printing a Polling Result Report	Off	On
	5	Printing a Transmission Re- sult Report (Immediate Transmission) automatically	Off	On
	6	Printing a Polling Clear Report automatically	Off	On
	7	Printing a TCR automatical- ly	Off	On

Switch	Bit	Item	0	1
04	0	Printing a Confidential File Report automatically	Off	On
	7	Containing an image in a Transmission Result Report (Memory Transmission), Memory Storage Report, Communication Failure Re- port, or Transfer Result	Off	On
05	0	Receiving in Service Call (SC) Condition	Possible (Sub- stitute Recep- tion)	Not possible
	2,1	Receiving when the machine	can not print.	
		00: Enabled unconditionally, ceived, 10: Enabled for Polling		
	4	Personal Code Access	Off	On
	5	Just Size Printing	Off	On
	6	Scanning in Mixed Paper Size Available	Off	On
	7	Empty cassette alert	Off	On
06	1	Fax communication mode home position	G3	G4
	5	Selecting the Sheet to Print the a Quick Dial Label	Paper label sheet	Transparent la- bel sheet
	6	Scanning Start Page of the Book Original	From the left page	From the right page
07	2	Parallel Memory Transmis- sion	Off	On
08	2	Authorized Reception condi- tion	Receive from authorized Senders	Receive from other than au- thorized Send- ers
10	1	Two in One	Off	On
	3	Auto Reduction in printing	Off	On
11	1	Send PB/UUI to ISDN	UUI	РВ
	6	Local Printing at Forwarding	Off	On
	7	Polling file after sending	Delete	Standby

Switch	Bit	Item	0	1
14 0		Printing a document re- ceived with Auto Power-On Reception	Immediate printing	When turning on the opera- tion
	2	Batch Transmission	Off	On
	3	Clear modes when switching the application	Off	On
	7	Manual Service report Transmission	Off	On
15         2,1,0         Paper feed Tray           001: First, 010: Second, 011: Third, 100: 4th, 101:LC		:LCT		
	5	Fixed Input tray	On	Off
16	2	Paper Size Priority when re- ceiving A4	A3	B4
24	1,0	Storing a message in memory which could not be transmitted 00: Off, 01: Store for 24 hours, 11: Store for 72 hours		
25	7	Summer Time	Off	On

#### How to Specify a User Parameter

- It is recommended that you print the User Parameter list and keep it when you register or change a user parameter. ⇒ P.207 "Printing the User Parameter List"
- Do not change any bit switches other than those shown on the previous pages.

**1** Make sure that the machine is in Facsimile mode and the standby display is shown.

OReady Set	originals. Enter	fax no.
Memory Trans.		100%
63	Dest:	0
	Mode	Info.

#### Note

□ If the standby display is not shown, press the **[Fax]** key.

## **2** Press the **[User Tools/Counter]** key.

Sort O Staple O Stack	1-Sided $\rightarrow$ 2-Side ○ $(f_{i} \rightarrow f_{j})$ Book $\rightarrow$ 2-Side ○ $(f_{i} \rightarrow f_{j})$ 2-Sided $\rightarrow$ 2-Side	ed 🗲	<b>ז</b> אי⊈< בייבי	
000	0 2 → 2		O User Tools / Counter	J
Enhanced	Auto Redu	ce/		
			ND2L0	01E

## **3** Enter the number of the "Fax".

🔳 Üser T	ools Main Menu	Select	Item
1 System	2 Сору		
B Fax	4		
Counter		E	kit

The Facsimile User Tool main menu appears.

#### ✓ Reference

For how to use the System User Tools, refer to the System Settings manual. Enter the function number for "Key Op. Settings" using the number keys and press the [#] (Enter) key within 3 seconds.


■Fax Features	2/2	Ent	er number 📕
5 User Functions	6 Key	Οр.	Settings
<b>∱Prev</b> ( ♦१%+xt	)		Menu

## 🔗 Note

- □ If "Key Op. Settings" is not shown, press [↑Prev.] or [↓Next].
- Enter the function number for "User Parameters" using the number keys.

L	
■Key Op. Settings 4/5	Enter number 💻
13 G3 Digital Line 14	G4 Digital Line
15 User Parameters 16	Prt.U.Parameters
(↑Prev) ↓Next	PrevMenu

**6** Select a number for a switch you wish to change by pressing [↑Switch] or [↓Switch].

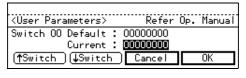



- Press a number key corresponding to the bit number you wish to change e.g., press [0] to change bit 0.
- When you have finished, press [OK].

## 🔗 Note

□ If you press **[Cancel]**, the specified settings are canceled and the display shown in 3 appears again. Press [PrevMenu].

U Press the [User Tools/Counter] key.

### Printing the User Parameter List

Print this list to see the current User Parameter settings.


**1** Make sure that the machine is in Facsimile mode and the standby display is shown.

()Ready Set	originals. Enter fax no.
Memory Trans.	100%
<u>63</u>	Dest: O
	Mode Info.

## 🔗 Note

□ If the standby display is not shown, press the **[Fax]** key.

**2** Press the [User Tools/Counter] key.

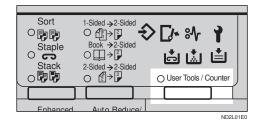

## **3** Enter the number of the "Fax".

	User	Tools Main Menu	Select	Item
1 \$	System	і 2 Сору		
βF	Fax	4		
Co	ounter		E	kit

The Facsimile User Tool main menu appears.

## ✓ Reference

For how to use the System User Tools, refer to the System Settings manual.

4 Enter the function number for "Key Op. Settings" using the number keys and press the **[#]** (Enter) key within 3 seconds.

■Fax Features	2/2	Ente	r number 📕
5 User Functions	6 Key	0р.	Settings
<b>↑</b> Prev ( ♦ñ+xt	<u> </u>		Menu


### 🖉 Note

□ If "Key Op. Settings" is not shown, press [↑Prev.] or [↓Next].

**5** Enter the function "Prt.U.Parameters" using the number keys.

■Key Op. Settings	4/5 Enter number 🛄
13 G3 Digital Line 15 User Parameters	14 G4 Digital Line 16 Prt.U.Parameters
(↑Prev) ↓Next	) PrevMenu

Deress the [Start] key to print the list.

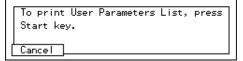

## 🖉 Note

□ If you press **[Cancel]** before printing starts, the printing stops and the display shown in 3 appears again.

## **2** Press [PrevMenu].

Bress the [User Tools/Counter] key.

## Date/Time

Use this function to set your machine's internal clock to the current time and date. This time is shown on the display, printed on pages and used for various features, such as Send Later.

If the current date and time are wrong, use this procedure to correct them.

**1** Make sure that the machine is in Facsimile mode and the standby display is shown.

[		
OReady S	iet originals. E	nter fax no.
Memory Trans.		100%
<u>63</u>	De	est: O
	Mode	Info.

### 🖉 Note

□ If the standby display is not shown, press the **[Fax]** key.

## **2** Press the **[User Tools/Counter]** key.

Sort Staple Stack	()	-Sided →2-Side $ \bigcirc (1) \rightarrow 2$ Book →2-Side $ \bigcirc (1) \rightarrow 2$ -Sided → 2-Side $ \bigcirc (2) \rightarrow 2$ $ \bigcirc (2) \rightarrow 2$	d 🗲	J∗ ↔ L L	Counter	
Enhanced		Auto Redu				
					ND2I	01E0

**3** Enter the number of the "Fax".


🔳 User Too	ls Main Menu	Select	Item
1 System	2 Сору		
B Fax	4		
Counter		E	xit

The Facsimile User Tool main menu appears.

## $\mathcal{P}$ Reference

For how to use the System User Tools, refer to the System Settings manual.

Enter the function number for "Key Op. Settings" using the number keys and press the [#] (Enter) key within 3 seconds.

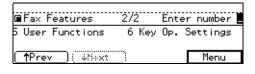

#### 🖉 Note

□ If "Key Op. Settings" is not shown, press [↑Prev.] or [↓Next].

Enter the function number for " Date/Time" using the number keys.

■Key Op. Set	ttings 5/5	Enter	number 💻
17 Date/Time 19 Auto Resei		Counters	10
	hitext		PrevMenu

Select an item you want to change using the and keys, enter the month using [↑Prev.] or [↓Next] and enter the correct date or time using the number keys. Then press [OK].

(Date/Time>	Select with∈∋
[Tue] <mark>Jan.</mark> 27	1998 02:14PM
(↑Prev.) (↓Next	) Cancel OK
(Date/Time>	Select with€∋
[Tue] Feb. 27	1998 02:14PM
(†Prev.) (JNext	Cancel OK

## 🖉 Note

- □ When you enter a date, the day is set automatically.
- Depending on your area, your machine will either except the date in 12 hours format or 24 hours format.
- Press [PrevMenu].

Press the [User Tools/Counter] key.

## Summer Time

Whenever local custom requires advancing the clock or setting the clock back, use this feature. You can easily move the clock forwards when daylight saving time begins, and back when it ends. To turn this feature on, change the User Parameter Switch 25 digit 7.  $\Rightarrow$  P.207 "*Printing the User Parameter List*"

## Counters

This function allows you to check the total number of transmitted, received, scanned, and printed pages on the display.

• Transmissions

: Total number of transmitted pages

Receptions

: Total number of received pages

Make sure that the machine is in Facsimile mode and the standby display is shown.

OReady	Set	originals.	Enter	fax no.
Memory 7	Trans.			100%
[G3]			Dest:	0
		Mod	e	Info.

## 🖉 Note

- □ If the standby display is not shown, press the **[Fax]** key.
- **2** Press the **[User Tools/Counter]** key.

Sort Staple Staple Stack Stack	(	-Sided →2-Side D (1) → [] Book →2-Side D (1) → [] -Sided → 2-Side D (2) → []	d €	Je Ser Tools / C	
Enhanced		Auto Redu	20/		

## Enter the number of the "Fax".

🖬 User To	ols Main Menu	Select	Item
1 System	2 Сору		
B Fax	4		
Counter		E	cit

The Facsimile User Tool main menu appears.

## 

For how to use the System User Tools, refer to the System Settings manual. Enter the function number for "Key Op. Settings" using the number keys and press the [#] (Enter) within 3 seconds.

■Fax Features	2/2	Ent	er number 📕
5 User Functions	6 Key	Οр.	Settings
(↑Prev) ( ↓?!+×t	)		Menu


## 🖉 Note

- □ If "Key Op. Settings" is not shown, press [↑Prev.] or [↓Next].
- Enter the function number for "Counters" using the number keys.

■Key Op. Settings 5/	/5 Enter number 💻
17 Date/Time 1	8 Counters
19 Auto Reset	
( Prev ( Attended to the set of t	PrevMenu

The totals are displayed.

# **6** When you have checked the total pages, press [OK].

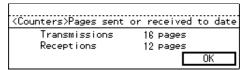

**2** Press [PrevMenu].

Bress the [User Tools/Counter] key.

# Auto Reset

If the machine is not used for a while, the display will return to the Ready condition. By default, the time that must elapse before this happens is 30 seconds. If you wish, you can change this interval to one of the following settings:

- 1 minute
- 3 minutes

- 5 minutes
- Make sure that the machine is in Facsimile mode and the standby display is shown.

OReady	Set	originals.	Enter	fax no.
Memory Tran	ns.			100%
63			Dest:	0
		Mod	e	Info.

## 🖉 Note

□ If the standby display is not shown, press the **[Fax]** key.

**2** Press the **[User Tools/Counter]** key.

Sort Staple Stack	1-Sided →2-Side $\bigcirc$ $\bigcirc$ $\bigcirc$ $\bigcirc$ $\bigcirc$ $\bigcirc$ $\bigcirc$ $\bigcirc$ $\bigcirc$ $\bigcirc$	ed 🕹	קייאיי קייאיי User Tools / C	Counter	
		]		<u>ר</u>	·
Enhanced	Auto Redu				
				ND2L0	01E0

**3** Enter the number of the "Fax".

🖬 User Tool	s Main Menu	Select	Item
1 System	2 Сору		
B Fax	4		
Counter		E>	kit

The Facsimile User Tool main menu appears.

## ✓ Reference

For how to use the System User Tools, refer to the System Settings manual.

Enter the function number for "Key Op. Settings" using the number keys and press the [#] within 3 seconds.

■Fax Features	2/2	Ento	er number 📕
5 User Functions	6 Key	Οр.	Settings
fPrev ( ♦१७०×१	)		Menu

## 🖉 Note


□ If "Key Op. Settings" is not shown, press [↑Prev.] or [↓Next].

Enter the function number for "Auto Reset" using the number keys.

■Key Op. Settings 5/5	Enter number 💻
17 Date/Time 18	Counters
19 Auto Reset	
(↑Prev)(↓?!!+xt)	PrevMenu

The totals are displayed.

# G Select the interval with the € and ⇒ keys. Then press [OK] key.

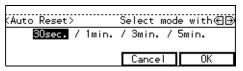

**2** Press [PrevMenu].

B Press the [User Tools/Counter] key.

## **Paper Feed Selection**

Using this feature, you can select which tray to print out the message. If you wish to use this feature, change User Parameter Switch digits 0 to 2.

# RDS (Remote Diagnostic System)

If your machine has a problem, a service representative can perform various diagnostic tasks over the telephone line from the service station to try to find out what is wrong with your machine. The service technician can also use RDS to change some of your machine's settings if you request it.

This page is intentionally blank.

# 8. Entering Text

## ENTERING AND MODIFYING TEXT

This section describes how to enter characters. When you enter a character, it is shown at the position of the cursor. If there is a character at the cursor position, the entered character is shown before the character.

## **Available Characters**

- Alphabetic characters ABCDEFGHIJKLMNOPQRSTU-VWXYZabcdefghijklmnopqrstuvwxyz
- Symbols
- Numerals 0123456789

## Keys

- Number keys Use to enter numbers.
- Quick Dial 01/29 to Quick Dial 28/56 (A to Z)

Press these keys to enter upper and lower case letters.

♦ [A←→a] key

Use to switch between upper and lower case.

Quick Dial 27/55

Press to enter a space.

## Clear/Stop ] key

Deletes a character at the cursor position. You can delete a character at the right end of a line even if the cursor is placed to the right of the character.

## 🔹 🗲 and 🖻


Use to move the cursor left or right.

#### [Insert] key

Press if you wish to insert characters.

### 🖉 Note

□ If you wish to enter symbols, use the **[Symbols]** key.

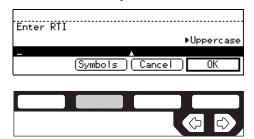

- □ Flip the plate to access Quick Dial keys not shown.
- Quick Dial 01/29 means Quick Dial key 01 or 29.

. . . . . . . . . . . .

## 🖓 Wild Cards

When you register RTIs or CSIs for multiple destinations, you can register a sequence of characters common to these identifications as a wild card instead of registering every identification.

If a destination has an RTI or CSI containing a wild card, the machine determines that the destination matches the registered destination.

#### Not using a wild card

Destination to be registered (RTI)	Number of regis- tered identifica- tions
NEW YORK BRANCH	3
HONG KONG BRANCH	
SYDNEY BRANCH	

#### Using a wild card

Destination to be registered (RTI)	Number of regis- tered identifica- tions
BRANCH	1

## Limitation

□ You can register up to 30 wild cards.

#### 🖉 Note


- □ Compare identifications by neglecting spaces.
- You can use wild cards for the following functions:
  - P.175 "Forwarding"
  - P.182 "Special Senders to Treat Differently (Special RX Nos.)"
  - P.188 "Authorized Reception"

. . . . . . . . . . . .

## How To Enter Text

#### **Entering letters**

**1** Press  $[A \leftarrow \rightarrow a]$  to switch between Uppercase and Lowercase.

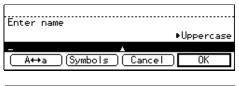



## **2** Press a Quick Dial key.

A letter is entered and the cursor moves.

#### 🖉 Note


□ If you wish to you enter another character continuously, repeat step 2.

#### **Entering symbols**


## Press [Symbols].

The available symbols are shown on the display.

# **2** Select the desired symbol by pressing [ $\uparrow$ Prev.] and [ $\downarrow$ Next].

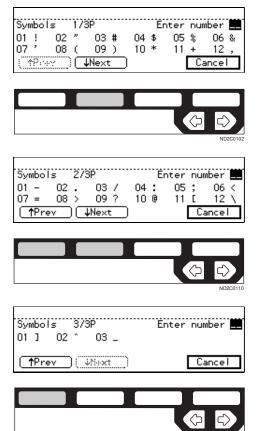

Enter the number for the symbols using the number keys.

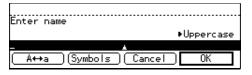

The symbols is entered and the cursor moves.

## 🖉 Note

□ If you wish to you enter another symbol, repeat steps 2 and 3.

#### **Entering numbers**

**1** Press a number keys.

The numeral is entered and the cursor moves.

#### **Deleting characters**

 Press the and keys to move the cursor to a character you want to delete.

Enter name	
	▶Uppercase
FACTORY_	<u> </u>
(A↔a)(Symbols)	Cancel OK

## **2** Press the [Clear/Stop] key.

Enter name	
	▶Uppercase
FACTOR_	
(A⇔a)(Symbols)(Ca	ancel OK

The character at the cursor position is deleted .

### 🖉 Note

□ If you wish to delete another character, repeat steps 1 and 2.

This page is intentionally blank.

# 9. Maintaining Your Machine

## CONNECTING THE MACHINE TO A TELEPHONE LINE AND TELEPHONE


## **Connecting The Telephone Line**

To connect the machine to a telephone line, use a snap-in modular type connector.


#### ∰Important

□ Make sure the type of modular connector.

#### Where to connect the machine

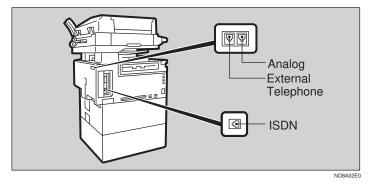

When using a modular type connector

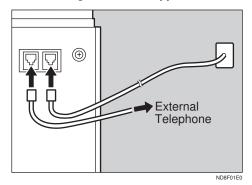


## **Connecting The Machine To The ISDN**

Connect the machine to the ISDN if you have the optional ISDN unit. Use a modular type connector for the ISDN.

#### ∰Important

When you connect the machine to the ISDN, contact your service representative.

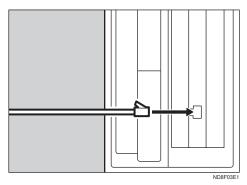


## **Connecting The Optional External Telephone**

You can connect the handset and an external telephone to the machine. You can use them for telephone calls.

## 🖉 Note


□ Some telephone may not be connected or may suffer reduced functionality.

#### Specifying the handset line type

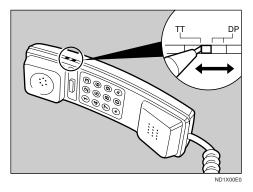

The switch on the handset should be in the appropriate position-TT (Tone Dialing) or DP (Pulse Dialing).

Adjusting the handset bell volume

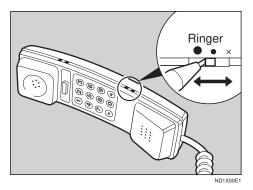

Adjust the handset ringer volume using the volume switch.

## Selecting The Line Type

Select the line type to which the machine is connected. There are two types: tone and pulse dial.

Select the Line Type using "PSTN Line Type" in "Key Operator Settings".⇒ P.198 "G3 Analog Line" The default settings is "Tone".

# **REPLACING THE STAMP CARTRIDGE**

Stamp option is option.

When the stamp is getting to become lighter, replace the cartridge.


## 🖉 Note

□ Use the cartridge specified for this machine.


## **1** Lift the document feeder and press the tab to open the stamp cover.

## Limitation


□ Do not pull the stamp cover strongly because cords are attached.

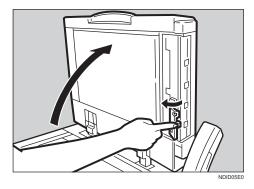


**2** Pull out the cartridge.

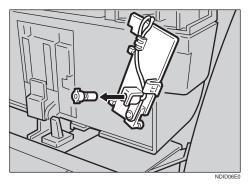

## **B** Set a new cartridge.

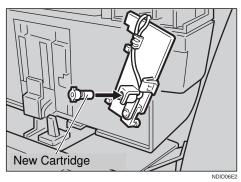

**A** Replace the stamp cover until it clicks.

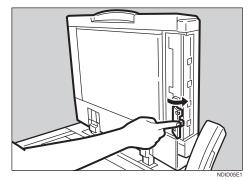


## **5** Close the document feeder.

## 🖉 Note

□ Hold down the center part of the cover to make sure that it is closed completely.

## Stamp Cover Layout

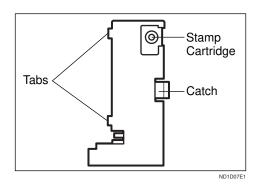

9

This page is intentionally blank.

# 10. Appendix

## **OPTIONAL EQUIPMENT**

## Fax Feature Expander and Hard Disk

A Fax Feature Expander and a 130-Mbytes hard disk can be added. By installing them, you can increase the memory capacity and use the following features.

With the Fax Feature Expander, features of Multicopy RX, 2-Sided Printing, Confidential reception, Memory Lock, Multi-Step Transfer, Forwarding, Memory Lock ID, Confidential ID are available.

. . . . . . . . . . . . . . . . . .

## Wemory Capacity

- With Fax Feature Expander Type 450 ( + 4MB, total 6MB): 480 pages
- With Fax Feature Expander and 130-Mbytes hard disk: 3,000 pages

Measured using a ITU-T#1 chart (Slerexe letter) at standard resolution.

## 🖉 Note

□ If you would like to install both of these, please contact your service representative.

#### • VExtended Features

You can use the optional Group dial and extend the following features.

Function	Without Fax Feature Ex- pander	With Fax Feature Expander
Speed dial code	100	1000
Personal code	20	50
Memory Capacity for Memory Transmission	160 sheet	480 sheet (with Fax Feature Expander) 3000 sheet (with Fax Feature Expander and Hard Disk)
Memory Transmission file	200	1000
Auto Document	6	18
Communication Result	last 200 communication	last 900 communication

Function	Without Fax Feature Ex- pander	With Fax Feature Expander
Specific Sender	30	50

## 400 dpi High Resolution Option (FAX 400dpi Option Type 450)

This allows you to send and receive the fax messages at high resolution. JBIG compression is also available with this option.

## ISDN Unit (ISDN Option Type 450)

This allows you to send and receive messages using the ISDN (Integrated Service Digital Network).

## Stamp (FAX STAMP TYPE 450)

Single-sided documents you send from the Document Feeder (ADF) have a mark stamped on the top of the scanned side after they are scanned in. Doublesided documents you send from the Document Feeder (ADF) have a mark stamped on top and bottom of one scanned side. Use these marks to check whether a document was properly stored in memory when using Memory Transmission, or if the originals was properly sent when using Immediate Transmission.

## Duplex Unit (AD340)

With Duplex Unit, 2–sided printing is available.

10

## **SPECIFICATIONS**

Standard	G3, G4 (option)
Resolution	G3:
	8 × 3.85/mm•200 × 100 dpi (Standard), 8 × 7.7/mm•200 × 200 dpi (Detail), 8 × 15.4/mm•200×400 dpi (Fine), 16 × 15.4/mm•400 × 400 dpi (Super Fine: 400dpi Option Re- quired)
	G4:
	$200 \times 100$ dpi (Standard), $200 \times 200$ dpi (Detail), $400 \times 400$ dpi (Super Fine: 400dpi Option Required)
Transmission Time	G3: 3 seconds at 28,800bps, Standard resolution
	G4: 3 seconds, Detail resolution
Data Compression	MH, MR, MMR, SSC, JBIG (400dpi Option Required)
Maximum Original Size	Standard size: A3/DLT Irregular size: $304 \times 432$ mm
Maximum Scanning Size	294 mm × 432 mm/11" × 17"
Print Process	Printing on standard paper using the laser
Transmission Speed	G3:
	33,600/31,200/28,800/26,400/24,000/21,600/19,200/ 16,800/14,400/12,000/9,600/7,200/4,800/2,400 bps (auto shift down system)
	G4:
	64/56 kbps (auto speed matching)

## Power Consumption

	Type1•Type2 (35 copy per minute) model	Type 3 (45 copy per minute) model
Transmission	255W	270W
Reception	235W	250W
Printing (Average)	365W	555W
Standby mode	265W	280W
Energy Saving mode	13W	13W
Maximum power con- sumption	1440W	1440W

## **FUNCTION LIST**

## **Advanced Transmission Features**

Feature name	Description	Reference
Send Later	Sets the machine to auto- matically start transmis- sion or polling reception at an appointed time.	P.74 "SEND LATER"
Confidential Transmission	Sends a confidential mes- sage. This feature is divid- ed into Default ID Confidential Transmission and Override ID Confiden- tial Transmission.	P.76 "CONFIDENTIAL TRANSMISSION"
Personal Code TX	This will help you to check up on who has been using the machine and how of- ten.	P.78 "PERSONAL CODE TRANSMISSION"
Auto Document	Stores a commonly used original and prints or sends it directly.	P.80 "SENDING AN AUTO DOCUMENT"
2-Sided Transmission	Use to send 2-Sided origi- nals (double-sided origi- nal) from the Document Feeder (ADF).	P.82 "2-SIDED TRANS- MISSION (DOUBLE-SID- ED TRANSMISSION)"
Book Fax	When sending a book-type original, this feature scans and sends the right and left pages one by one.	P.84 "BOOK FAX"
Irregular Scan Area	When sending a non-stan- dard size original, this fea- ture specifies the length and width. The machine scans the original in the specified size.	P.86 "CHOOSING THE AREA TO BE SCANNED YOURSELF (IRREGULAR SCAN AREA)"

10

Feature name		Description	Reference
Transmission Deadl	ine	You specify the deadline for the transmission and, when it cannot be sent be- cause the line to the desti- nation is busy, the machine redials any number of times until the specified time is reached.	P.88 "TRANSMISSION DEADLINE (TRD)"
Polling Transmission	n	Upon request from a desti- nation, the machine sends an original stored in mem- ory. This feature is divided into Free Polling, default ID Polling Transmission, and Override ID Polling Transmission.	P.90 "POLLING TRANS- MISSION"
Polling Reception		Sends a transmission re- quest to the other party and receives a message from the receiver. This feature is divided into Default ID polling Reception and ID Override Polling Recep- tion.	P.94 "POLLING RECEP- TION"
Transfer Request		Sends an original to a desti- nation via a facsimile equipped with the transfer station capability.	P.96 "TRANSFER RE- QUEST"
Options	Descr	iption	Reference
TTI Print	You can print a message including the name registered as a TTI on the received message for each file.		P.99 "TTI (Transmit Termi- nal Identification) Print"
Label Insertion		register the receiver's name	P.99 "Label Insertion"

	the name registered as a TTI on the received message for each file.	nal Identification) Print"
Label Insertion	If you register the receiver's name in a Quick dial or speed dial, something followed by the receiv- er's name is automatically printed at the top of the received message.	P.99 "Label Insertion"
Auto Reduction	If the receiver uses paper narrow- er than the message, it is sent re- duced to the receiver paper.	P.99 "Auto Reduction"
ID Transmission	Sends an original only to the ma- chine of the same Polling ID as that registered in the machine.	P.100 "ID Transmission"

## **Communication Information**

Feature name	Description	Reference
Checking and Canceling the Transmission Files	This feature cancels, con- firms, or changes a file (res- ervation) for Memory Transmission, Confidential Transmission, Transfer Re- quest, Polling Reception, or Polling Transmission.	P.103 "CHECKING AND CANCELING TRANSMIS- SION FILES"
Printing the TX File List	The transmission file list can be manually printed. This list allows you to know the files stored in memory or the file num- bers.	P.109 "PRINTING A LIST OF FILES IN MEMORY (PRINT TX FILE LIST)"
Displaying the Transmis- sion Result	Part of the TCR can be shown on the display. The results of the last 50 trans- missions are displayed from the latest one.	P.110 "CHECKING THE TRANSMISSION RESULT (TX STATUS)"
Displaying the Reception Result	Part of the TCR (Transac- tion Confirmation Report) can be shown on the dis- play. The results of the last 50 receptions are displayed from the latest one.	P.111 "CHECKING THE RECEPTION RESULT (RX STATUS)"
Printing a Confidential Document	Prints messages received in Confidential Reception mode.	P.112 "PRINTING A CON- FIDENTIAL MESSAGE"
Printing the Memory Lock	Prints messages received in Memory Lock mode.	P.114 "PRINTING A FILE RECEIVED WITH MEMO- RY LOCK"
Printing the TCR	The TCR (Transaction Con- firmation Report) can be manually printed. This re- port shows the results of the last 50 communica- tions.	P.116 "PRINTING THE TCR"
Displaying the Memory Status	The status of the memory is shown on the display.	P.117 "DISPLAYING THE MEMORY STATUS"

## User Tools

Feature name	Description	Reference
Register/Delete Quick Dial	When you register a desti- nation in a Quick Dial, you can specify the destination only by pressing the Quick Dial key.	P.129 "Registering Quick Di- als"
Register/Delete Group Dial	When you register several destinations as a group in a quick dial, you can specify all the destinations by just pressing a quick dial key.	P.135 "Registering Groups"
Register/Delete Opt. Group Dial	When you register several destinations as an optional group, you can specify all the destinations by enter- ing the two-digit group number after pressing the optional group dial key (F1–F5).	P.139 "Registering Optional Groups"
Register/Delete Speed Dial	When you register a desti- nation in a speed dial, you can specify the destination by entering the two-digit or three-digit speed dial code after pressing the Speed Dial key.	P.143 "Registering Speed Di- als"
Store/Delete Keystroke Program	Allows you to store a fre- quently used function or destination in a Quick Dial.	P.147 "Storing Keystroke Programs"
Register/Delete Auto Doc- ument	Allows you to store a fre- quently used original in. You can print or send the original directly as neces- sary.	P.151 "Registering Auto Documents"
Register/Delete Irregular Area	Registers a frequently used original size in advance when you send a message with the Irregular Scan Area function.	P.86 "CHOOSING THE AREA TO BE SCANNED YOURSELF (IRREGULAR SCAN AREA)"

10

Feature name	Description	Reference
REPORTS/LISTS	<ul> <li>This feature allows you to print various reports and lists manually. You can print the following reports and lists:</li> <li>TCR (Transaction Con-</li> </ul>	P.158 "REPORTS/LISTS"
	firmation Report)	
	<ul><li> Quick Dial list</li><li> Group Dial list</li></ul>	
	<ul><li>Keystroke Program list</li></ul>	
	<ul> <li>Speed Dial list</li> </ul>	
	<ul> <li>Auto Document list</li> </ul>	
	<ul> <li>Sender/Forwarding list</li> </ul>	
INITIAL SETUP TX	Setting the default setting for the transmission mode and scanning conditions. When you switch the pow- er on, the machine settings the items specified with this feature.	P.159 "INITIAL SETUP TX"
INITIAL SET UP RX	<ul> <li>Allows you to switch the following reception functions to On/Off:</li> <li>Reception Mode</li> <li>Checkered Mark</li> <li>Center Mark</li> <li>Print RX Time</li> <li>Multi-copy Reception</li> <li>Authorized RX</li> <li>Special RX Nos.</li> </ul>	P.161 "INITIAL SETUP RX"
	<ul> <li>Forwarding</li> <li>2-Sided Printing</li> <li>Reverse Order Printing</li> <li>Bypass Paper Size</li> </ul>	
Assigning User Function Keys	Stores a frequently used function in a User Function Key ( <b>[F1]</b> to <b>[F5]</b> ).	P.164 "ASSIGNING USER FUNCTION KEYS"

Feature name	Description	Reference
Key Operator Settings / Personal Code	Registers personal code for each person. When every user enters a personal codes in sending messages, you can check the usage status for each person.	P.166 "KEY OPERATOR SETTINGS"
ECM	If a part of transmission fails due to a telephone line fault, this feature resends the failed part automatical- ly.	P.171 "ECM"
Memory Lock	Switch the Memory Lock On or Off. To use it, register an ID for printing a mes- sage received in Memory Lock mode.	P.172 "Memory Lock"
Multistep Transfer	Registers a transfer station in a group dial. This allows the message to be transmit- ted via multiple transfer stations more efficiently when the requesting party sends a transfer request to your machine.	P.173 "Multistep Transfer"
Forwarding	Transfers received messag- es to a registered receiver (forwarding destination).	P.175 "Forwarding"
Special RX Nos.	Allow messages from spec- ified senders to be treated differently.	P.182 "Special Senders to Treat Differently (Special RX Nos.)"
Authorized Reception	When you register specific senders in advance, you can restrict senders from whom you receive mes- sage.	P.188 "Authorized Recep- tion"
Monitor Volume	Adjusts the volume of monitoring and beeper sounds from the speaker inside the machine.	P.192 "Monitor Volume"

Feature name	Description	Reference
RTI/TTI	Registers information (RTI) to be shown on the display and printed in a report by a receiver's or sender's ma- chine. This feature also reg- isters information (TTI) to be printed from a destina- tion machine when you send a fax.	P.193 " <i>RTI/TTI</i> "
Economy Transmission	Economy Transmission means to send a fax when communication charges are lower. The Economy TX feature registers this time.	P.195 "Registering The Econ- omy Transmission Time"
ID Code	Registers an ID required for Transfer Request, Transfer Station, Default ID Polling Transmission, Default ID Polling Recep- tion, or ID Transmission.	P.196 "ID Code"
G3 Analog Line	Registers an own analog number, line type, and CSI when you connect the ma- chine to the G3 analog line.	P.198 "G3 Analog Line"
G3 Digital Line	Registers own digital num- ber and CSI, when you con- nect the machine to a ISDN.	P.199 "G3 Digital Line"
G4 Digital Line	Registers an own digital number, TID (Terminal ID) and subaddress when you connect the machine to a G4 digital line.	⇒ P.200 "G4 Digital Line"
Changing User Parameters	Allows you to change the function settings to meet your needs.	P.203 "Changing the User Parameters"
Printing User Parameter List	Allows you to print and check User Parameters set- tings.	P.207 "Printing the User Pa- rameter List"
Date/Time	Adjusts the date and the time as a reference.	P.208 "Date/Time"

Feature name	Description	Reference
Counters	Check the transmission, re- ception, and totals on the display.	P.209 "Counters"
Auto Reset	Set the interval returning to the standby mode.	$\Rightarrow$ P.210 "Auto Reset"

## INDEX

180 Degree Rotation Printing, 662-Sided Printing, 56, 65, 185, 1612-Sided Transmission, 14, 15, 28, 82, 226,

#### Α

Acceptable types of Originals, 14 Analog Line Connector, 3 Authorized Reception, 188, 231 Authorized Reception List, 158, 191 Authorized RX, 161 Auto Document, 80, 151, 226, 229 Auto Document List, 153, 158 Auto Identification, 42 Auto Image Density, 39 Automatic Power Reception Function, 12 Automatic Redial, 26 Auto Reduction, 99, 227 Auto Reset, 210

#### В

Batch Transmission, 27 Book Fax, 84, 226 Broadcasting, 24 Bypass Paper Size, 161, 162 Bypass Tray, 2

#### С

Canceling a Transmission, 103 Center Mark, 64, 161 Chain Dial, 46 Changing a Destination, 107 Changing Line Type, 41 Changing the Transmission Time, 106 Checkered Mark, 64, 161 Checking and Canceling the Transmission Files, 228 Checking and Editing a File, 105 Checking Destinations (Destination List), 106 Checking the Reception Result (RX Status), 111 Checking the Transmission Result (TX Status), 110 CIL/TID Print, 69 Clear Modes/Energy Saver key, 5

Clear/Stop key, 6 Communicating Indicator, 4 Communication Failure Report, 29 Components, 1 Confidential File Report, 113 Confidential ID, 196 Confidential Reception Indicator, 4 Confidential Transmission, 76, 226 Counters, 209, 233

#### D

Date/Time, 208, 232 Default ID Polling Reception, 62, 94, 95 Default ID Polling Transmission, 90, 91 Density key (Contrast key), 6 Detail, 37 Dialing, 43 Dial label, 132 Display, 10 Displaying the Memory Status, 117, 228 Displaying the Reception Result, 228 Displaying the Transmission Result, 228 Document Feeder (ADF), 1 Dual Access, 12

#### Ε

ECM, 27, 33, 171, 231 Economy Transmission Time, 74, 195, 232 End Receiver, 60, 96, 98 Entering letters, 214 Entering numbers, 215 Entering symbols, 214 Entering Text, 213 Error Messages, 120 Error Report, 125 Exposure Glass, 1

#### F

Fax Feature Expander, 223 Fax key, 6 Fax Mode (Auto Reception Mode), 59 F Code (PWD), 54, 63 F Code (SEP), 61 F Code (SUB), 53 Forwarding, 161, 175, 231 Forwarding Stations, 176 Free Polling Transmission, 90,91 Function List, 226 Function Map, iv

#### G

G3, 41 G3 Analog Line, 198, 232 G3 Digital Line, 199, 232 G3/G4 Mode Selection, 164 G4, 41 G4 Digital Line, 200 Group Dial, 229 Group Dial List, 137, 158 Groups, 48, 135

#### Η

Hard Disk, 223 High Resolution Option, 5, 224 How to Set an Original, 18

#### I

ID Code, 196, 232 ID Override Polling Reception, 62, 95 ID Override Polling Transmission, 91 ID Reception, 61 ID Transmission, 52, 100, 227 Image density, 37 Image Density (Contrast), 38 Image Rotation, 67 Immediate Reception, 55 Immediate Transmission, 10, 23, 32 Indicators, 123 Initial Setup RX, 127, 161, 230 Initial Setup TX, 127, 159, 230 Internal Tray, 1 Interrupt key, 6 Irregular Area, 154, 229 Irregular Scan Area, 86, 226 ISDN, 218 ISDN Line connector, 2

#### J

JBIG Reception, 63 JBIG Transmission, 54

#### Κ

Key Operator Settings, 127, 166 Keystroke Program, 147, 229 Keystroke Program List, 149, 158

#### L

Label Insertion, 99, 227 Letters, 214

#### М

Main Power Switch, 2 Maintaining Your Machine, 217 Manual Dial, 35 Manual Image Density, 39 Memory Lock, 172, 185, 231 Memory Lock ID, 196 Memory Reception, 56 Memory Storage Report, 28 Memory Transmission, 10, 23 Monitor Volume, 192, 231 Multi-copy, 56, 185 Multi-copy Reception, 65, 161 Multistep Transfer, 60, 173, 231

#### Ν

Number key, 6, 43 Numbers, 215

#### 0

On-hook Dial, 34 On Hook Dial key, 5 Operation Panel, 4 Operation Switch, 2 Opt. Group Dial, 229 Optional Group Dial, 49 Optional Groups, 139 Original Type, 37, 38 Original Type key, 6 Override ID Polling Reception, 94 Override ID Polling Transmission, 90

#### Ρ

Page Reduction, 68 Page Separation and Length Reduction, 67 Paper Feed Selection, 211 Parallel Memory Transmission, 28 Pause, 44 Pause/Redial key, 6 Personal Code, 166, 231 Personal Code Access, 12, 169 Personal Code List, 170 Personal Code Transmission, 78 Personal Code TX, 226 Photo, 38 Photo/Text, 38 Polling ID, 196 Polling Reception, 94, 227 Polling Reserve Report, 95 Polling Result Report, 95 Polling Transmission, 90, 227 Polling Transmission Clear Report, 92 Print Completion Beep, 64 Printing a Confidential Document, 228 Printing a Confidential Message, 112 Printing a File, 104 Printing a File Received with Memory Lock, 114 Printing a List of Files in Memory (Print TX File List), 109 Printing Functions, 64 Printing the TCR, 228 Printing the Memory Lock, 228 Printing the TX File List, 228 Print RX Time, 161

#### Q

Quick Dial, 43, 46, 129, 229 Quick Dial Flip Plate, 6 Quick Dial keys, 6 Quick Dial List, 131, 158

#### R

RDS (Remote Diagnostic System), 211 Receive File Indicator, 4, 123 Reception Functions, 60 Reception Mode, 161 Reception Time, 64 Redial, 50 Register/Delete, 127, 129 Reports/Lists, 127, 158, 230 Requesting Party, 60, 96 Re-sending a File, 106 Resolution, 37, 159 Resolution key, 5 Reverse Order Printing, 56, 68, 161 Reverse Printing, 185 RTI/TTI, 193, 232

## S

Scan Settings, 37

Selecting the Reception Mode, 59 Selection keys, 6 Sender/Authorized Reception List, 191 Send Later, 74, 226 Solving Problems, 121 Special Reception numbers, 182 Special RX Nos., 161, 183, 231 Specifications, 225 Specific Senders (Forwarding), 178 Specified Sender/Forwarding Station list, 181 Specified Sender List, 187 Speed Dial, 43, 47, 143, 229 Speed Dial keys, 5 Speed Dial List, 145, 158 Stamp, 52, 220 Standard, 37 Start key, 6 Subaddress, 45 Substitute Reception, 56, 57, 123 Summer Time, 209 Super Fine, 37 Switches and Bits, 203 Symbols, 214

## Т

TCR, 228 TCR (Transaction Confirmation Report), 116, 158 Telephone Directory, 47 Telephone Line, 217 Telephone Mode, 59 Text, 38 Tonal Signals, 45 Tone, 45 Tone key, 6 Toner, 119 Transfer Request, 96, 227 Transfer Result Report, 61 Transfer Station, 60, 96 Transmission Deadline (TRD), 88, 227 Transmission Features, 52 Transmission Mode, 159 Transmission Mode key, 5 Transmission Options, 99 Transmission Result Display, 164 Transmission Result Report (Immediate Transmission), 33 Transmission Result Report (Memory Transmission), 29 Transmission With Image Rotation, 12

Tray Select, 185 Troubleshooting, 119 TSI Print, 69 TTI Print, 99, 227 Two In One, 67, 56

#### U

User Function Keys, 4, 164, 230 User Functions, 127 User Parameter List, 203, 232 User Parameters, 203, 232 User Tools, 5, 127, 229

#### W

When the Confidential Reception Indicator is Lit, 124 When the Fax key is Lit, 124 When the Receive File Indicator is Lit or Flashing, 123 Wild Cards, 213