



## OPERATING INSTRUCTIONS SYSTEM SETTINGS

Modes User Tools (System Settings)

Read this manual carefully before you use this product and keep it handy for future reference. For safety, please follow the instructions in this manual.

#### Introduction

This manual contains detailed instructions on the operation and maintenance of this machine. To get maximum versatility from this machine all operators should carefully read and follow the instructions in this manual. Please keep this manual in a handy place near the machine.

Please read the Safety Information before using this machine. It contains important information related to USER SAFETY and PREVENTING EQUIPMENT PROBLEMS.

#### 🖗 Notes:

Some illustrations may be slightly different from your machine. Certain options may not be available in some countries. For details, please contact your local dealer.

#### **Operator Safety:**

This machine is considered a class 1 laser device, safe for office/EDP use. The machine contains two 5-milliwat, 760 - 800 nanometer wavelength, GaAIAs laser diodes. Direct (or indirect reflected) eye contact with the laser beam might cause serious eye damage. Safety precautions and interlock mechanisms have been designed to prevent any possible laser beam exposure to the operator.

The following label is attached on the back side of the machine.



#### Laser Safety:

The optical housing unit can only be repaired in a factory or at a location with the requisite equipment. The laser subsystem is replaceable in the field by a qualified Customer Engineer. The laser chassis is not repairable in the field. Customer engineers are therefore directed to return all chassis and laser subsystems to the factory or service depot when replacement of the optical subsystem is required.

#### Warning:

Use of controls or adjustment or performance of procedures other than those specified in this manual might result in hazardous radiation exposure.

#### Notes:

The model names of the machines do not appear in the following pages. Check the type of your machine before reading this manual. (For details, see  $\Rightarrow$  P.2 "Machine Types".)

- Type 1: Aficio 340
- Type 2: Aficio 350
- Type 3: Aficio 450

Certain types might not be available in some countries. For details, please contact your local dealer.

Two kinds of size notation are employed in this manual. With this machine refer to the metric version.

For good copy quality, Ricoh recommends that you use genuine Ricoh toner.

Ricoh shall not be responsible for any damage or expense that might result from the use of parts other than genuine Ricoh parts in your Ricoh office product.

#### **Power Source**

220 - 240 V, 50/60 Hz, 6 A or more

Please be sure to connect the power cord to a power source as above. For details about power source, see "Power Connection" of the "Copy Reference".

# HOW TO READ THIS MANUAL

### Symbols

In this manual, the following symbols are used:

### A WARNING:

This symbol indicates a potentially hazardous situation that might result in death or serious injury when you misuse the machine without following the instructions under this symbol. Be sure to read the instructions, all of which are described in the Safety Information in the "Copy Reference".

### A CAUTION:

This symbol indicates a potentially hazardous situation that might result in minor or moderate injury or property damage that does not involve personal injury when you misuse the machine without following the instructions under this symbol. Be sure to read the instructions, all of which are described in the Safety Information in the "Copy Reference".

\* The statements above are notes for your safety.

### ∰Important

If this instruction is not followed, paper might be misfed, originals might be damaged, or data might be lost. Be sure to read this.

### Preparation

This symbol indicates the prior knowledge or preparations required before operating.

### 🖉 Note

This symbol indicates precautions for operation, or actions to take after misoperation.

### Limitation

This symbol indicates numerical limits, functions that cannot be used together, or conditions in which a particular function cannot be used.

### ₽ Reference

This symbol indicates a reference.

### [ ]

Keys that appear on the machine's panel display.

### [ ]

Keys built into the machine's operation panel.

# TABLE OF CONTENTS

MANUALS FOR THIS MACHINE	1
MACHINE TYPES	2
ADDITIONAL FUNCTIONS PROVIDED BY OPTIONAL MEMORY UNITS	3
Copy Mode	3
Facsimile Mode (Option)	4

### 1. MODES

CHANGING MODES	. 5
MULTI-ACCESS	. 6
COPY MODE	10
Changing To Copy Mode	10
FAX MODE	12
Changing To Facsimile Mode	12
Printing A Received Fax	12
Sending A Fax	13

### 2. USER TOOLS (SYSTEM SETTINGS)

KEYS FOR USER TOOLS (SYSTEM SETTINGS) ACCESSING THE USER TOOLS	15
(SYSTEM SETTINGS)	16
Exiting from User Tools	17
USER TOOLS MENU (SYSTEM SETTINGS)	18
SETTINGS YOU CAN CHANGE WITH THE USER TOOLS	19
System Settings <sup>1</sup> / <sub>6</sub>	19
System Settings <sup>2</sup> / <sub>6</sub>	20
System Settings <sup>3</sup> / <sub>6</sub>	21
System Settings <sup>4</sup> / <sub>6</sub>	23
System Settings <sup>5</sup> / <sub>6</sub>	25
System Settings <sup>6</sup> / <sub>6</sub>	26
INDEX	27

# MANUALS FOR THIS MACHINE

This is a multi-functional machine combining copying and facsimile functions. This manual describes procedures common to these functions. Each function's reference describes the operational procedures separately for the copying and facsimile functions. Please consult the manual that suits your needs.

### System Settings (this manual)

Provides an overview of the machine. This manual introduces the functions of the machine. It also introduces the options allowing you to use additional functions and describes how to access the system user tools to make the machine easier to use.

### When using as a copier

• Copy Reference

Describes the various copying functions from basic copying to more advanced functions such as reducing/enlarging copies or combining originals into one copy.

### When using as a facsimile

• Facsimile Reference (option) Describes the operational procedures and functions to use the machine as a facsimile.

# **MACHINE TYPES**

There are three models of this machine. The main differences between them are memory capacity and copy speed. To make sure which model you have, see the inside front cover.

	Type 1	Type 2	Type 3
Copy speed	35 copies/minute (A4 □, 8 <sup>1</sup> / <sub>2</sub> "× 11" □)	35 copies/minute (A4 □, 8 <sup>1</sup> / <sub>2</sub> "× 11" □)	45 copies/minute (A4 □, 8 <sup>1</sup> / <sub>2</sub> "× 11" □)
Memory capacity	4 MB (8 MB optional memory available)	12 MB	12 MB
Fax unit	Option	Option	Option

## ADDITIONAL FUNCTIONS PROVIDED BY OPTIONAL MEMORY UNITS

You can expand the capabilities of this machine to include fax functions. When you want to add a function, contact your sales or service representative.

### **Copy Mode**

In copy mode you can make basic copies and also copy using more sophisticated techniques, such as reduction/enlargement or combining several originals onto one copy. You can install an optional memory expansion for storage of document images, thereby making the best use of memory with various copy functions.

### **Expansion Memory (option)**

8 MB copier memory unit (Electric sort kit) (option for Type 1) Provides various functions including Image Rotate, Sort, and Duplex Copy.

### Copier hard disk (Image enhance kit)

Provides various functions such as:

- Archive File (copying stored images)
- Following functions using the Enhanced Image Copy: Sort/Rotate Sort/Rotate Stack/Shift Sort/Shift Stack/Staple Combine Duplex Repeat Image Rotate

### Facsimile Mode (Option)

You can send and receive fax messages in facsimile mode. Installation of optional expansion memory allows more functions to be used, and more data to be stored.

### **Options for Memory Expansion**

### 4 MB memory card

Provides a variety of memory-based functions including confidential reception, envelope reception, and two-sided printing. Also increases the number of personal codes, groups, speed dials, files in memory, special stations, etc.

### Fax hard disk

Increases memory capacity, allowing you to increase the number of transmit originals and receive images to be stored in memory.

### 400 dpi high resolution card

Allows sending/receiving in super fine mode. Also allows JBIG compression.

# 1. MODES

# **CHANGING MODES**

You can use this machine not only as a copier, but optionally as a fax machine as well. Press the **[Copy]** key to use copy functions, or press the **[Fax]** key to use facsimile functions.



ND0X02EE

### Limitation

□ You cannot switch modes in any of the following cases:

- When scanning in a fax message for transmission.
- During immediate transmission.
- When accessing the user tools.
- During interrupt copying.

## **MULTI-ACCESS**

You can carry out another job using a different function while the current job is being performed.

This allows you to handle your jobs efficiently regardless of how the machine is being used. For example:

- While making copies, the machine can send a fax message that has been stored in memory.
- You can make copies while receiving fax data.

Performing multiple functions simultaneously like this is called Multi-accessing.

### Limitation

□ You cannot use Multi-accessing during interrupt copying.

### Note

- □ You can choose which mode has highest priority for print jobs. The default is the current mode shown on the display. See "16. Print Priority" in  $\Rightarrow$  P.23 "System Settings  $\frac{4}{6}$ ".
- □ When your machine is equipped with the optional internal tray 2, you can specify the tray used for each function so that completed documents are not mixed. For example, set one tray for faxes and another tray for copies. If you require the optional internal tray 2, contact your local dealer or service representative. See "15. Output Tray" in  $\Rightarrow$  P.23 "*System Settings* <sup>4</sup>/<sub>6</sub>".

. . . . . . . . . . . .

### Wulti-accessing example

The order of multi-accessing operations is as follows:



<sup>\*1</sup> This job runs in the background, regardless of any current data scanning/writing operations.

Note that you can also receive faxes into memory with such a job.

### Sample operations

This chart is based on the following conditions:

- When "16. Print priority" is set to "Interleave" (See "16. Print Priority" in  $\Rightarrow$  P.23 "System Settings  $\frac{4}{6}$ ")
- For details on operations under other conditions, contact your service representative.

### MODES

$\setminus$	ľ	Mode after	Сору					Facsimile				
	\ \	you select						Trans	missio	n	Recep	otion
Mc	ode b	efore	Copying	Enhanced Image Copy	Memory Copy	Sort	Stapling	Scanning An Original for Memory Transmission	Memory Transmission	Immediate Transmission	Memory Reception	Printing Received Data
Co	ру	Copying	0	0	O *4	O *4	O *4	0	☆	0	☆	☆
		En- hanced Image Copy	0	0	O *4	O *4	O *4	×	☆	×	☆	☆
		Memory Copy	0	0	O *4	O *4	O *4	×	☆	×	☆	☆
		Sort	0	О	O *4	O *4	O *4	O *1	\$	O *1	☆	☆
		Stapling	O *5	O *5	O *4 *5	O *4 *5	×	O *1	\$	O *1	☆	☆ *5
		Scan- ning An Original for Memory Trans- mission	×	×	×	×	×	×	\$	×	☆	<u></u> <sup>≁</sup> *2
	ц	Memory Trans- mission	☆	☆	☆	☆	☆	☆	×	×	×	☆
	Transmissic	Immedi- ate Trans- mission	×	×	×	×	×	×	×	×	×	×
		Memory Recep- tion	\$	☆	☆	\$	☆	☆	×	×	×	☆
Facsimile	Reception	Printing Re- ceived Data	\$	☆	☆	\$	☆*5	☆ <sup>*2</sup>	☆ *6	$\rightarrow$ *3	☆*6	$\rightarrow$

 $\therefore$ ...means that these functions can be used together.

O...means that you can interrupt the current job with Function keys or the [In**terrupt** key to proceed to a subsequent job.

 $\rightarrow$ ...means that another job will automatically start after the current job is finished.

 $\times$ ...means that you will manually start another job after the current job is finished (i.e. these functions cannot be used together).

- \*1 Simultaneous operations are only available when copies are being made after their originals are all scanned.
- <sup>\*2</sup> You might fail to print received data, depending on size or orientation of the original.
- <sup>\*3</sup> Priority is given to the subsequent job; after the subsequent job is finished, the interrupted operation is automatically resumed.
- <sup>\*4</sup> If the optional copier hard disk is installed, you can make interrupt copies with the
- [Interrupt] key.
   <sup>\*5</sup> If you are making stapling copies on paper larger than A4, 8<sup>1</sup>/<sub>2</sub>" × 11" with the optional 1000-sheet finisher, the subsequent operation is disabled until the current job is finished. After you start interrupt copying with the **[Interrupt]** key, the Output Tray is automatically changed to "Internal Tray".
- \*6 During parallel receptions, any subsequent job is disabled until the receptions are completed.

. . . . . . . . . . . . . . . . 

### COPY MODE

### **Changing To Copy Mode**

You can always make a copy when the machine isn't printing or scanning a fax data.

### Press the [Copy] key.

The copy display appears on the panel display.

) Pear	н. Но				0'ty	2
Auto	ASD	A4 🖓	A4 🕞	B5 🖓	A4 🖓	. <u>.</u>
Ratio:	100%					
Redu	ice (E	nlarge		00%)	Pape	er )

### 

For details, see the "Copy Reference".

#### Interrupt Copying To Make Urgently Needed Copies

You can interrupt the current copying job or printing of a received fax to make a copy.

### Limitation

- When the optional copier hard disk is not installed, you cannot use the following functions during interrupt copying:
  - Duplex
  - Combine
  - Sort
  - Copying archive files
- You cannot use the interrupt copy function in the following cases:
  - during fax immediate transmission
  - while scanning an original for memory transmission
  - during interrupt copying

### Press the [Interrupt] key.

If the machine is scanning originals, it will immediately stop the scanning job. On the other hand, if the machine is performing a copy or print job, it will still continue the job until you press the **[Start]** key after pressing the **[Interrupt]** key. When the current job stops, the interrupt copy display appears on the panel display.

### 🖉 Note

When you interrupt a copying job, remove the previous original.

### 2 Make your copies.

### Important

□ If the remaining memory space is 0 %, the machine fails to receive fax data. Wait until the machine completes printing a received fax, then start making copies.

### 🖉 Note

- While copying, a received fax document is stored in memory and the Receive File indicator is lit.
- After interrupt copying is completed, remove the original and delivered copies.

### Press the [Interrupt] key again.

The machine resumes the printing job of the received fax document.

Resuming the interrupted copying job

### **1** Reset the previous original.

### **2** Press the **[Start]** key.

The machine resumes the interrupted copy run.

#### Copying And Multi-accessing

### 🖉 Note

□ Machine operations are different depending "16. Print Priority" (See ⇒ P.23 "System Settings <sup>4</sup>/<sub>6</sub>") or "18. User Code Manage" (See ⇒ P.25 "System Settings <sup>5</sup>/<sub>6</sub>") settings.

### Reference

⇒ P.6 "Multi-Access"

# When "Print Priority" = "Fax" or "Display" (default)

The machine completes the operation of the function set by Print priority before performing the operation of another function.

### Limitation

While the machine is performing two-sided printing in fax mode, you cannot make twosided copies until the printing ends.

#### When "Print Priority" = "Interleave"

The machine performs the operations in the order in which they are initiated. If another function is initiated during operation, the machine completes the current operation before performing the operation of the function initiated.

### FAX MODE

### 1

### Changing To Facsimile Mode

You can always use the machine as a facsimile when you are not copying.

### Press the [Fax] key.

The facsimile display appears on the panel display.

OReady	Set c	originals.	Enter	fax	no.
Memory T	rans.			1	100%
<u>63</u>			Dest:	0	
		Mode		Info	) <b>.</b>

### 🖉 Note

The Memory Transmission/Reception function is performed automatically even when another function is being used. You need not switch the display. When data is received in memory, the Receive File indicator is lit.

### PReference

For details, see the "Facsimile Reference".

### **Printing A Received Fax**

When you are not copying, a received fax is printed automatically. You do not need to switch to Facsimile mode. If you wish to print a received fax while copying, see below.

### Preparation

Machine operations are different depending "16. Print Priority" (See  $\Rightarrow$  P.23 "System Settings <sup>4</sup>/<sub>6</sub>") or "18. User Code Manage" (See  $\Rightarrow$  P.25 "System Settings <sup>5</sup>/<sub>6</sub>") settings.

### Reference

See  $\Rightarrow$  P.6 "Multi-Access".

#### Printing a received fax while copying

When "Print Priority" = "Fax" or "Display" (default)

The machine once interrupts the copying and receives a fax. Upon completing the fax reception, it resumes the interrupted copying job.

When "Print Priority" = "Interleave" The machine performs the operations in the order in which they are initiated. If another function is initiated during operation, the machine completes the current operation before performing the operation of the function initiated.

Printing a received fax in a hurry Press the [Fax] key to switch to the facsimile display. The copying job is interrupted and the machine starts printing the received fax automatically. After printing the fax, press the **[Copy]** key and do the previous job again.

### Sending A Fax

Sending a fax while printing a received fax

Scanning originals for memory transmission

The machine can scan your originals for memory transmission even while printing a received fax.

Complete the usual operations for sending a fax, then press the [Start] key.

Immediate transmission

Immediate transmission interrupts the job of printing a received fax. This is because the page memory is occupied as your originals are scanned.

Complete the usual operations for sending a fax, then press the [Start] key.

Sending a fax while copying

While scanning copy originals

# Press the [Clear/Stop] key and then the [Fax] key.

Copying is stopped and the display is switched to the Facsimile mode.

### 🖉 Note

□ Remove the copy originals.

While outputting copy

# Press the [Fax] key to switch to the facsimile display.

You can send a fax while copying.

### Note

- Remove any originals of your copy job.
- 2 Complete the usual operations for sending a fax, then press the [Start] key.
- After the transmission has finished, press the [Copy] key.
- **4** Reset the copy job originals, then press the **[Start]** key.

The machine resumes the interrupted copy run.

# 2. USER TOOLS (SYSTEM SETTINGS)

# **KEYS FOR USER TOOLS (SYSTEM SETTINGS)**



### 1. [User Tools/Counter] key

### 2. Panel Display

### 3. [Selection] keys

Press the key under the item you wish to select.

### 4. $\textcircled{\bullet}$ and $\textcircled{\bullet}$ keys (Cursor keys)

Press to select an item on the panel display.

### 5. [Number] keys

Use to enter a numeric value.

### 6. [#] key

Press to set a value you have entered.

### 7. [Clear/Stop] $\operatorname{key}$

Press to delete a number you have entered.

# ACCESSING THE USER TOOLS (SYSTEM SETTINGS)

This section is for the key operators in charge of this machine. You can change or set the machine's default settings.

### Preparation

After using the user tools, be sure to exit it to return to Copy mode.

The settings are not canceled even if the operation switch is turned off or the **[Clear Modes/Energy Saver]** key is pressed.

### Limitation

□ Function names displayed in a faint font become available when the machine is expanded.

### 

For information on Copy and Fax User Tools, see the appropriate reference manual.

### Press the [User Tools/Counter] key.

The User Tools Main Menu appears.

	Sort Staple Stack	1 () () ()	-Sided →2-Side $\bigcirc (1) \rightarrow []$ Book →2-Side $\bigcirc [] \rightarrow []$ $\bigcirc [] \rightarrow []$ 2-Sided → 2-Side	d <b>€</b>	>[	]≁ ഃ∿ ല് ⊔്	<b>1</b> ≟	
V			⊃ ≝≯₽		С	User Tools / 0	Counter	J
				J				
_	Enhanced		Auto Redu	ce/				

**2** Enter [1] with the [Number] keys.

The system settings menu appears.

	User	Tools	Main	Menu	Se	lect	Item
1	System	I		2 Сору			
β.	Fax			4			
C	ounter					E:	kit

# B Search for the desired menu. Enter its number with the [Number] keys.

■System Settings 1	/6 Selecti	number
D1Function Priority D3Ready. Beeper	02Panel Beep 04Copy Count	er Displav
( ^Prey ) Vext	) P	revMenu

■System Settings 2/6 Select	t number
D5System Reset 06Function	Switch
07Low Pwr.Shift Time08Low Powe	r Timer
(↑Prev.) (↓Next)	Menu

■System Settings 3/6 Select	t number
D9Energy Saver Mode 10Auto Off	Timer
11Paper Size-Tray 12Pap.Tray	Priority
(↑Prev.)(↓Next)	Menu

∎System Settings 4.	76 Sele	ct number
13Auto Tray Switch 15Output Tray	14Sp.Pape 16Print F	er Ind. Priority
(↑Prev.) ↓Next	)	PrevMenu

■System Settings 5/6 Seled	t number
17Contrast 18User Coo	de Manage
19Management Setting200ut Sour	≪e Enulati
[↑Prev.][↓Next ]	PrevMenu

Suston Sottings	6/6 Soloct pumbor
■ System Settings	220DE Orig Election
298amory Priority	24 <f f4="">Size Settin</f>
fPrev. i ∳hext	PrevMenu

### 🖉 Note

- □ [↓Next]: Press to go to the next page.
- □ [**↑Prev.**]: Press to go back to the previous page.

### ₽ Reference

 $\Rightarrow$  P.18 "User Tools Menu (System Settings)"

# 4 Change the settings by following the instructions on the panel display. Then press the [OK] key.

### PReference

 $\Rightarrow$  P.19 "Settings You Can Change With The User Tools"

### 🖉 Note

- □ **[OK]**: Press to set the new settings and return to the previous menu.
- □ [Cancel]: Press to return to the previous menu without changing any data.

### **Exiting from User Tools**

After changing the user tools settings, press the [User Tools/ Counter] key.



### 🖉 Note

□ You can also exit from user tools by pressing the **[Exit]** key on the User Tools Main Menu.

### **USER TOOLS MENU (SYSTEM SETTINGS)**



# SETTINGS YOU CAN CHANGE WITH THE USER TOOLS

### $\mathcal{P}$ Reference

For how to access the user tools, see  $\Rightarrow$  P.16 "Accessing The User Tools (System Settings)".

### System Settings <sup>1</sup>/<sub>6</sub>

Menu	Description
01. Function Priority (facsimile option re- quired)	You can specify the mode to be displayed immediately after the operation switch is turned on or System Reset mode is turned on.
	🖉 Note
	Default: <i>Copy</i>
02. Panel Beeper	The beeper (key tone) sounds when a key is pressed.
	This beeper can be turned on or off.
	ℬ Note
	D Default: ON
03. Ready Beeper	Choose whether the machine beeps when it becomes ready for a copy run after power up.
	ℬ Note
	D Default: <i>ON</i>
04. Copy Count Display	The copy counter can be set to show the number of copies made (count up) or the number of copies remaining to be made (count down).
	<ul><li>Note</li><li>Default: Up (count up)</li></ul>

# System Settings <sup>2</sup>/<sub>6</sub>

Menu	Description
05. System Reset	The machine returns to its prioritized mode automatically after your job is finished, after the selected time. This func- tion is called "System Reset". The time can be set from 10 to 999 seconds, or no system reset.
	<ul><li>Note</li><li>Default: YES (60 seconds)</li></ul>
	□ You can specify the prioritized mode with the user tools. See "01. Function Priority" in $\Rightarrow$ P.19 "System Settings $^{1}/_{6}$ "
06. Function Switch (facsimile option re- quired)	How long the machine waits before switching to the default mode if no operation has been performed after an operation has finished.
	ℬ Note
	D Default: 3 seconds
07. Low Pwr. Shift Time	The machine enters Low Power mode automatically after your job is finished, after the selected time. The time can be set from 1 to 240 minutes.
	In Low Power mode, power consumption is saved about 35 % as compared with Stand-by mode. This value is a reference applicable to Type 1 (mainframe only).
	D Default: 15 minutes
08. Low Power Timer	The machine enters to Energy Saver mode automatically af- ter your job is finished, after the selected time. The time can be set from 10 to 999 seconds, or off.
	<ul><li>✓ Note</li><li>□ Default: Yes (60 seconds)</li></ul>

# System Settings <sup>3</sup>/<sub>6</sub>

Menu	Description
09. Energy Saver Mode	The machine enters Energy Saver mode in the following cases:
	• If you hold down the <b>[Clear Modes/Energy Saver]</b> key for about a second or more.
	• When the preset time selected with the Low Power Timer has passed.
	Reference     See "08. Low Power Timer" in⇒ P.20 "System Settings $\frac{2}{6}$ ".
	In Energy Saver mode, power consumption is saved as shown below, as compared with Stand-by mode.
	• Level 1 (default): Saving about 25 %
	• Level 2: Saving about 30 %
	Warm-up time required for Energy Saver mode to return to the ready condition is as follows:
	Level 1 (default): About 3 seconds
	• Level 2: About 10 seconds
	<ul> <li>Note</li> <li>Default: <i>Level 1</i></li> <li>The values above are references applicable to Type 1</li> </ul>
	(mainframe only).
10. Auto Off Timer	The machine turns itself off automatically to conserve ener- gy after your job is finished, after the selected time. This function is called "Auto Off ". The time can be set from 1 to 240 minutes.
	Default: 60 minutes
	Auto Off might not be effective when the machine is in the following conditions:
	<ul> <li>An error message is displayed.</li> </ul>
	• The remaining memory space for facsimile mode is less than 100%.
	To return to the ready condition from Auto Off, the ma- chine requires the same warm-up time as the time for be- coming ready after its power is turned on.
	When the machine receives a fax in Auto Off mode, it automatically prints the fax.

### USER TOOLS (SYSTEM SETTINGS)

Menu	Description	
11. Paper Size-Tray	Select the size of the copy paper set in the paper tray.	
	<ul> <li>Note</li> <li>If the specified paper size differs from the size of paper actually set in the paper tray, a paper misfeed might occur because the paper size is not detected correctly.</li> </ul>	
	See "Changing The Paper Size" in the "Copy Reference".	
12. Pap.Tray Priority (for Copy mode only)	You can select the paper tray which will be selected as a de- fault in the following conditions:	
	• When the operation switch is turned on.	
	• When System Reset or Auto Reset mode is turned on.	
	• When the [Clear Modes/Energy Saver] key is pressed.	
	• When the Auto Paper Select mode is not selected.	
	Tray1 Tray2 Tray3 Tray4 UCT Optional Trays	
	Default: Tray 1	
	Tray 3, Tray 4, and LCT (Large Capacity Tray) are options.	

# System Settings <sup>4</sup>/<sub>6</sub>

Menu	Description
13. Auto Tray Switch	If you load paper of the same size in two or more trays, the machine automatically shifts another tray when the tray in use runs out of paper. You can set or cancel this setting.
	<ul> <li>✓ Note</li> <li>□ Default: Yes</li> </ul>
	If you put recycled paper or special paper in paper trays using the Special Paper Indicate menu, the Auto Tray Switch function is available to these trays only when their settings are identical.
	$\mathcal{P}$ Reference
	See "14. Sp. Paper Ind." in $\Rightarrow$ P.23 "System Settings $\frac{4}{6}$ ".
14. Sp. Paper Ind.	When recycled paper or special paper is in the paper trays, paper type can be indicated on the panel display.
	Default: No Display
	"Rcyd.ppr." appears on the panel display when recycled paper is selected, and "Sp. ppr." appears when special paper is selected.
15. Output Tray	You can specify a tray to which documents are delivered for each mode (copy and facsimile).
	External Tray
	Finisher Proof
	Finisher 0
	ND0P0202
	<ul><li>Note</li><li>You can specify a single tray for two or more modes.</li></ul>
	<ul> <li>□ With the optional 3000-sheet finisher installed, B4, 8<sup>1</sup>/<sub>2</sub>" × 14" or larger paper will be automatically delivered to the "Finisher Proof" even if you specified "Internal Tray" as an output tray.</li> </ul>

Menu	Description
16. Print Priority (set- ting the multi-accessing function)	<ul> <li>Sets the print priority for each mode.</li> <li>"Display" Print priority is given to the mode displayed on the display.</li> <li>"Copy" Print priority is given to the copy function.</li> <li>"Fax" Print priority is given to the fax function.</li> <li>"Interleave" Prints jobs in the order in which they are initiated regard-</li> </ul>
	less of mode/function. Different function's print output might be mixed. If you want to avoid such mixing, specify an independent tray for each feature using "Output Tray". When using different functions, attaching internal tray 2 allows you to specify an independent tray for each function. If you want to attach one, contact your local dealer.
	<ul> <li>Note</li> <li>Interrupt printing is disabled functions that have "User Code Manage" set to "Yes". The machine switches the display after the time specified by "Function Switch" and starts printing with the function.</li> </ul>
	$ \begin{array}{c} \label{eq:rescaled} \begin{tabular}{lllllllllllllllllllllllllllllllllll$
	"15. Output Tray" in $\Rightarrow$ P.23 "System Settings $\frac{4}{6}$ "
	"18. User Code Manage" in $\Rightarrow$ P.25 "System Settings $^{5}/_{6}$ "
	"06. Function Switch" in $\Rightarrow$ P.20 "System Settings $^{2}/_{6}$ "

# System Settings 5/6

Menu	Description	
17. Contrast	You can adjust the brightness of the panel display.	
18. User Code Manage If the machine is set to use the User Code function, operators must input their user codes before the machine can operate. The machine keeps count of the number of cop- ies made under each user code.		
<ul><li>Note</li><li>Enter a previously reg</li></ul>	ristered key operator code with the <b>[Number]</b> keys.	
<b>Reference</b> "Key Operator Code"		
Code Manage-Copy	Specify whether to employ user codes to restrict copier users and manage the number of copies made.	
	<ul><li>✓ Note</li><li>□ Default: No</li></ul>	
19. Management Setting		
Use these settings to mar	hage use of the machine.	
<ul> <li>Note</li> <li>Enter a previously registered key operator code with the [Number] keys.</li> </ul>		
"Key Operator Code"		
Show/PrintCounter	You can check and print the number of copies made under each function.	
Print CounterList	You can print the counter data for all functions.	
Key Operator Code	If you select "Yes", only operators who know the key oper- ator code can access the "18. User Code Manage" and "19. Management Setting" user tools.	
	Note Default: No	
	If you select "Yes", you should register the key operator code. See below.	
Reg/Chg KeyOpCode	Use to register or change the key operator code (up to 8 dig- its).	

# System Settings <sup>6</sup>/<sub>6</sub>

Menu	Description
22. ADF Orig. Ejection	As a default setting, the scanned originals from the docu- ment feeder (ADF) are ejected to the ADF external tray. But, if there is no space to attach an ADF external tray, you can change the output tray to the ADF tray. However, if the out- put tray is set to the ADF tray, it takes a little more time than to the ADF external tray.
	D Default: ADF External Tray
24. <f f4="">Size Setting</f>	Currently three types of F size are available; $8^1/_2$ " × 13", $8^1/_4$ " × 13" and $8$ " × 13".
	The document feeder or platen cover sensor cannot distin- guish these 3 types of originals.
	This function sets the F size from the document feeder or platen cover sensor.
	Auto Paper Select or Auto Reduce/Enlarge in the case of F size originals functions based on this setting.
	$\Box \text{ Default: } 8^{1}/_{2}" \times 13" \Box$

## INDEX

### Symbols

# key, 15

### Α

ADF Orig. Ejection, 26 Auto Off Timer, 21 Auto Tray Switch, 23

### С

Clear/Stop key, 15 Code Manage-Copy, 25 Contrast, 25 Copy Count Display, 19 Copy Mode, 1, 3, 10 Cursor keys, 15

### Е

Energy Saver Mode, 21

### F

F/F4 Size Setting, 26 Facsimile Mode, 1, 4, 12 Function Priority, 19 Function Switch, 20

### I

Interrupt Copying, 10

### Κ

Key Operator Code, 25 Keys for User Tools (System Settings), 15

### L

Low Power Timer, 20 Low Pwr. Shift Time, 20

### М

Management Setting, 25 Modes, 5 Multi-Access, 6

### Ν

Number keys, 15

### 0

Output Tray, 23

### Ρ

Panel Beeper, 19 Panel Display, 15 Pap.Tray Priority, 22 Paper Size-Tray, 22 Print CounterList, 25 Print Priority, 24

### R

Ready Beeper, 19 Reg/Chg KeyOpCode, 25

### S

Selection keys, 15 Show/PrintCounter, 25 Sp. Paper Ind., 23 System Reset, 20

### U

User Code Manage, 25 User Tools (System Settings), 15 User Tools/Counter key, 15 In accordance with ISO Standard 7001, this machine uses the following symbols for the main power switch:

I means POWER ON.

() means STAND BY.

Copyright © 1998 Ricoh Co., Ltd.



#### **RICOH COMPANY, LTD.**

15-5, 1 chome, Minami-Aoyama, Minato-ku, Tokyo Telephone: Tokyo 3479-3111

### **Overseas Affiliates**

#### U.S.A.

RICOH CORPORATION 5 Dedrick Place West Caldwell, New Jersey 07006 (TEL) 973-882-2000

#### Netherlands

RICOH EUROPE B.V. Groenelaan 3 P.O. Box 114 1180 AC - Amstelveen Holland (TEL) 020-5474111

#### United Kingdom

RICOH U.K. LTD. Ricoh House 1 Plane Tree Crescent, Feltham, Middlesex, TW13 7HG (TEL) 181-261-4000

#### Germany

RICOH DEUTSCHLAND GMBH Mergenthalerallee 38-40, 65760 Eschborn (TEL) (06196) 906-0

#### Singapore

RICOH ASIA PACIFIC PTE. LTD. #15-01/02 The Heeren, 260 Orchard Road, Singapore 238855 (TEL) 65-830-5888

Printed in China AE (AE) A2308608

#### Spain

RÌCOH ESPAÑA S.A. Guitard, 45 08014 Barcelona (TEL) 490-09-60

#### Italy

RICOH ITALIA S.p.A. Via della Metallurgia, 12 (zona Basson) - 37139 VERONA (TEL) 045-851 00 44

#### Hong Kong

RICOH HONG KONG LTD. 23/F., China Overseas Building, 139, Hennessy Road, Wan Chai, Hong Kong (TEL) 2862-2888

#### France

RICOH FRANCE S.A. 383 Avenue du Général de Gaulle, B.P. 307, 92143 Clamart Cedex (TEL) 01-4094-3838