
PRINTER Option Type 450

PRINTER REFERENCE (option)

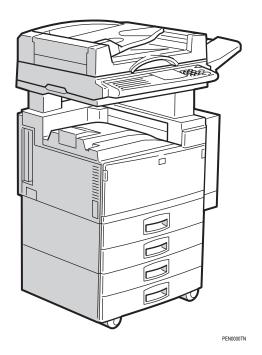

Read this manual carefully before you use this product and keep it handy for future reference.

For safety, please follow the instructions in this manual.

PRINTER Option Type 450 OPERATING INSTRUCTIONS

Introduction

This manual contains detailed instructions on the operation and maintenance of this machine. To get maximum versatility from this machine all operators should carefully read and follow the instructions in this manual.

Please read the Safety Information in the "Copy Reference" before using this machine. It contains important information related to USER SAFETY and PREVENTING EQUIPMENT PROBLEMS.

Important

Parts of this manual are subject to change without prior notice. In no event will the company be liable for direct, indirect, special, incidental, or consequential damages as a result of handling or operating the machine.

Trademarks

Microsoft[®], Windows[®], and MS-DOS[®] are registered trademarks of Microsoft Corporation in the United States and/or other countries.

PostScript® is registered trademark of Adobe System Incorporated.

Other product names used herein are for identification purposes only and might be trademarks of their respective companies. We disclaim any and all rights in those marks.

Warning:

Use of controls or adjustment or performance of procedures other than those specified in this manual might result in hazardous radiation exposure.

Notes:

Some illustrations might be slightly different from your machine.

Certain options might not be available in some countries. For details, please contact your local dealer.

Note to users in the United States of America Notice: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. Warning Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. . Caution (in case of 100BaseTX environment): Properly shielded and grounded cables (STP) and connectors must be used for connections to host computer (and/or peripheral) in order to meet FCC emission limits. **Declaration of Conformity** Product Name: Printer controller Model Number: Type 450 Responsible party: Ricoh Corporation Address: 5 Dedrick Place, West Caldwell, NJ 07006 Telephone number: 973-882-2000 This device complies with part 15 of FCC Rules. Operation is subject to the following two conditions: 1. This device may not cause harmful interference, and 2. this device must accept any interference received. including interference that may cause undesired operation. Note to users in Canada . Note: This Class B digital appz with Canadian ICES-003. Remarque concernant les utilisateurs au Canada Avertissement: Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

How To Read This Manual

Symbols

In this manual, the following symbols are used:

⚠ WARNING:

This symbol indicates a potentially hazardous situation that might result in death or serious injury when you misuse the machine without following the instructions under this symbol. Be sure to read the instructions, all of which are described in the Safety Information section.

A CAUTION:

This symbol indicates a potentially hazardous situation that might result in minor or moderate injury or property damage that does not involve personal injury when you misuse the machine without following the instructions under this symbol. Be sure to read the instructions, all of which are described in the Safety Information section.

* The statements above are notes for your safety.

∰Important

If this instruction is not followed, paper might be misfed, originals might be damaged, or data might be lost. Be sure to read this.

Preparation

This symbol indicates the prior knowledge or preparations required before operating.

Note

This symbol indicates precautions for operation, or actions to take after misoperation.

Limitation

This symbol indicates numerical limits, functions that cannot be used together, or conditions in which a particular function cannot be used.

₽ Reference

This symbol indicates a reference.

[]

Keys that appear on the machine's panel display.

Keys and buttons that appear on the computer's display.

Keys built into the machine's operation panel.

Keys on the computer's keyboard.

Option List

The following are the options that you can add to enhance the basic capabilities of the printer.

• Hard Disk: Printer Hard Disk Type 450

• Memory expansion : RAM SIMM

• NIB: Network Interface Board 450-E (NIB 450-E)

• Mailbox: Mailbox CS360

• PostScript®: PostScript®3 Kit Type 450

TABLE OF CONTENTS

Manuals for this Machine	
1. Setting up	
Requirements Parallel Cable Requirements Network Connections	3 3
Connecting the Machine Connecting the machine to the Host using the Parallel Cable Connecting the machine to the Hub using the Network Interface Board 48 (NIB 450-E)	5 50-E
2. Making Adjustments with the Operation Panel	
Operation Panel	8
Adjusting Printer Features Accessing the Printer Features Printer Features Menu Printer Features Parameters	10 12
Adjusting System Settings Accessing the System Settings System Settings Menu System Settings Parameters	21 24
3. Installing the PCL 6/5e Printer Driver	
Windows 95/98 - Installing the PCL 6/5e Printer Driver	27 28
Uninstalling the PCL 6/5e Printer Driver	 30 30
4. Installing the PostScript® Printer Driver	
Installing the PostScript® Printer Driver	33
Windows 95/98 - Installing the PostScript® Printer Driver	
Windows 3.1x - Installing the PostScript ® Printer Driver	
Windows NT 4.0 - Installing the PostScript® Printer Driver	
Macintosh - Installing the PostScript® Printer Driver	36

INDEX	61
Specifications	59
8. Appendix	
Error & Status Messages on the Operation Panel Machine Does not Print Other Printing Problems	56
7. Troubleshooting	
Canceling a Print Job	47 47
Changing a Mode Starting a Print Job	44 44 44
6. Printing a Document	
Uninstalling the Font Manager	41
Windows 95/98/NT4.0 - Installing the Font Manager	39 39
5. Installing the Font Manager	
Windows 3.1x - Uninstalling the PostScript [®] Printer Driver	37
Uninstalling the PostScript® Printer Driver	

Manuals for this Machine

Manuals for this Machine

There are four manuals that describe the operational procedures separately for the operation and maintenance of the machine.

This manual, the Printer Reference, contains detailed instructions for using this machine as a printer.

To ensure safe and efficient operation of the machine, all users should read and follow the instructions contained in the following manuals.

System Settings

Describes the procedures and functions for adjusting the settings and defaults of this machine for fax and copier.

Copy Reference

Describes the procedures and functions for using this machine as a copier.

♦ FAX Reference

Describes the procedures and functions for using this machine as a fax.

Printer Reference

Describes the system settings, procedures and functions for using this machine as a printer.(This Manual)

This page is intentionally blank.

1. Setting up

Requirements

Requirements

Before using this machine you must make sure that all the environmental and electrical requirements have been met. Connect the machine to your host computer using the parallel port, optional Network Interface Board 450-E (NIB 450-E), or both.

Make sure that all the cables, connectors, and electrical outlets necessary to attach the machine to your host computer or network are present.

₽ Reference

For further information on using the parallel port. ⇒ P.5 "Connecting the Machine"

For information on using a network. ⇒ P.5 "Connecting the Machine"

Parallel Cable Requirements

Connect the machine to your host computer using a parallel port. This machine does not provide the parallel cable to connect the machine to the host computer.

The machine's parallel connection is a standard bi-directional interface. It requires a standard 36-pin parallel cable compliant with IEEE 1284 and a parallel port available on the host computer.

Note

☐ Do not use a parallel cable more than 3 meters (10 feet) long.

Network Connections

Optional Network Interface Board 450-E (NIB 450-E) can be installed to allow direct connection to an Ethernet network.

The Ethernet card supports 10BaseT or 100BaseTX connections.

You can use the machine in a network environment as follows.

- Using the appropriate network management software and printer driver.
- Attaching the machine to a networked computer set up as a server.

Client

Windows 3.1x, 95, 98, NT 4.0, Macintosh

Driver

PCL 6/5e, PostScript®

File Server

Netware 3.x, Netware 4.x

Protocol

IPX/SPX, TCP/IP , EtherTalk(Macintosh only)

In a mixed network environment, the protocol automatically switches among network protocols.

Refer to the configuration guide that comes with the Network Interface Board 450-E (NIB 450-E) for more information on installing.


For information on resolving network connection problems. \Rightarrow P.51 "*Trouble-shooting*"

Note

☐ Consult your Network Administrator before connecting your machine to a network.

Connecting the Machine

Make sure the shape and the position of the connector are as shown in the illustration.

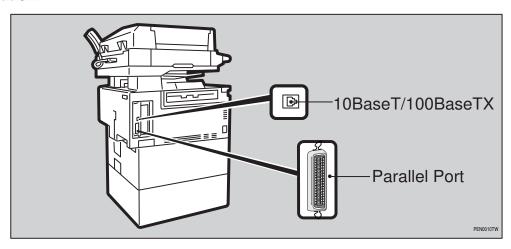

Connecting the machine to the Host using the Parallel Cable

Connect the machine to the host computer using a parallel cable compliant with IEEE 1284 (supplied by you).

Follow these steps to connect the machine to your host computer:

- 1 Make sure you have the correct cable.
- 2 Make sure both the machine and the host computer are turned off.
- Plug the 36-pin end of the parallel cable into the parallel port at the back on the left side cover of the machine.
- Squeeze the wire clips on each side of the connector together until they snap into place. The clips hold the cable securely in place.
- $oldsymbol{5}$ Plug the other end of the parallel cable into the computer's parallel port.

Connecting the machine to the Hub using the Network Interface Board 450-E (NIB 450-E)

Connect the machine using the Network Interface Board 450-E (NIB 450-E). Follow these steps to connect the machine.

- **1** Make sure you have a correct cable.
- **2** Make sure the machine is turned off.

- Plug the end of the network interface cable into the 10BaseT/100BaseTX port at the back on the left side cover of the machine.
- Plug the other end of the cable into the Hub.

A)	N	ote	•
_	14	ULC	5

- ☐ You can not connect to a Macintosh computer directly.
- ☐ You should confirm that the cable is connected to the 10BaseT/100BaseTX port.
- ☐ Do not connect the cable to the ISDN port by mistake.
- ☐ In case of 100BaseTX environment, properly shielded and grounded cable (STP) must be used for connection to host computer (and/or HUB) in order to meet FCC and EMC Directive 89/336/EEC emission limits.

2. Making Adjustments with the Operation Panel

This section is for the maintenance operators.


The User Tools set the default settings, which are divided into four menu items; System, Copy, Fax, and Printer. This section deals with the information on adjusting the printer settings using the System and the Printer menus.

Note

- ☐ After using the user tools, be sure to return to Printer mode. The settings are not canceled even if the operation switch is turned off or the [Clear Modes/Energy Saver] key is pressed.
- ☐ Function names displayed in a faint font become available when the machine is expanded.

For information on adjusting the Copy and the Fax settings. \Rightarrow Refer to the "Copy Reference", the "Fax Reference" or the "System Settings."

Operation Panel

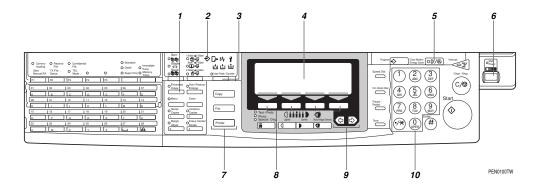

1. [Enhanced Image] key

When Copier Hard Disk (Image Enhance Kit) is installed, press this key to make the collation.

If the indicator doesn't light, you can't make the collation, as Copier Hard Disk (Image Enhance Kit) is not installed.

2. Data In indicator

Shows if the print job is being sent from the host computer.

If the indicator is blinking, the job is being sent.

If the indicator stays on, there is the data to be printed out.

3. [User Tools/Counter] key

User Tools

Press to change the default settings and conditions to meet your requirements.

Counter

Press to check or print the total number of prints made.

⇒ P.10 "Adjusting Printer Features", P.21 "Adjusting System Settings"

4. Panel Display

Shows the operation status, error messages, and function menus.

5. [Clear Modes/Energy Saver] key

Press this key for about 1 second to switch to and from Energy Saver mode.

Note

☐ This key is not effective, while the default settings of the Printer Features are being changed using User Tools.

⇒ P.10 "Adjusting Printer Features", P.21 "Adjusting System Settings"

6. Operation Switch

Press this switch to turn the power on. (The On indicator lights up.) To turn off the power, press this switch again. (The On indicator goes off.)

Note

□ This key is not effective, while the default settings of the Printer Features are being changed using User Tools.
 ⇒ P.10 "Adjusting Printer Features", P.21 "Adjusting System Settings"

7. [Function] key

Press to change modes(Copy, Fax, Printer) shown on the panel display. To use the printer function, press the **[Printer]** key.

8. [Selection] keys

Press these keys under the item you wish to select.

9. \blacksquare and \blacksquare keys (Cursor keys)

Use these keys to move to another page of the panel display.

10. [Number] keys


Use these keys to enter a numeric value.

Adjusting Printer Features

Accessing the Printer Features


Press the [User Tools/Counter] key.

The User Tools Main Menu appears.

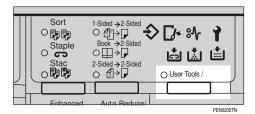


2 Enter [4] with the [Number] keys.

The Printer Features menu appears.

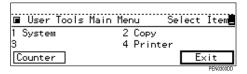



3 Search for the desired menu with the [Number] keys.

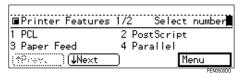




- Note
- ☐ [**\leftharmathbox**]: Press to go to the next page
- ☐ **[**↑**Prev.**]: Press to go back to the previous page.
- ⇒ P.8 "Operation Panel"

- Change the settings by following the instructions on the panel display. Then press [OK].
 - Note
 - □ **(OK)**: Press to set the new settings and return to the previous menu.
 - ☐ **[Cancel]**: Press to return to the previous menu without changing any data.
 - ⇒ P.13 "Printer Features Parameters"

Exiting from User Tools


- 1 After changing the user tools settings, go back to the User Tools Main Menu.
- 2 Press the [User Tools/Counter] key.

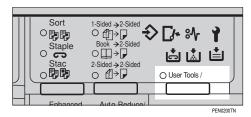

Note

☐ You can also exit from user tools by pressing the **[Exit]** key on the User Tools Main Menu.

Printer Features Menu

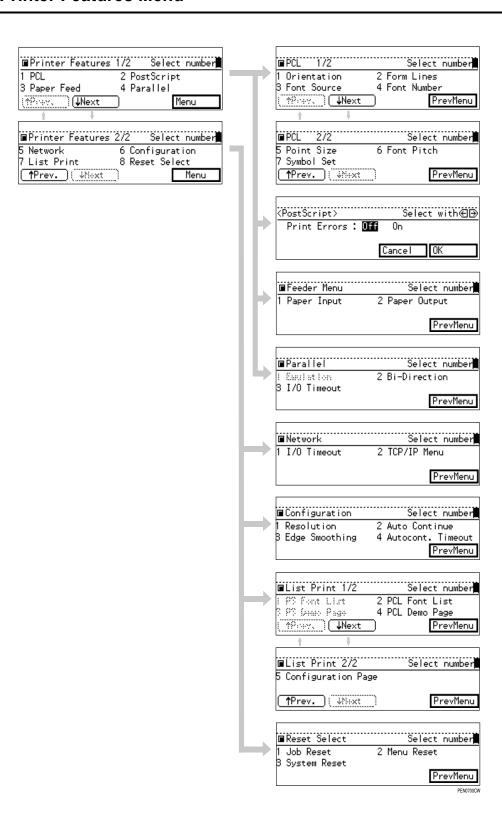

Printer Features Parameters

PCL

Menu	Description
01. Orientation	You can specify the page orientation: • Portrait • Landscape
	✓ Note□ Default: Portrait
02. Form Lines	You can specify the number of lines per page: 5 to 128 The default settings depend on the paper size.
	Note ☐ Default: $64 (A4)$ ☐ Default: $60 (8^{1}/_{2} \times 11)$
03. Font Source	You can specify the location of the default font: Internal Specifies that you want to use the resident font as the default font. Soft Specifies that you want to use the font downloaded from the host machine as the default font.
	✓ Note□ Default: Internal
04. Font Number	You can specify the value for the default font you want to use: 0 to 999
	✓ Note□ Default: 0

Menu	Description
05. Point Size	You can specify the value for the point size you want to use for the selected font in increments of 0.25: 4.00 to 999.75
	 ✓ Note □ Default: 12.00 When an incorrect size is entered, it blinks for about 2 seconds. Enter the correct size at that time.
06. Font Pitch	You can specify the number of characters per inch for the selected font in increments of 0.01: 0.44 to 99.99 Note Default: 10.00
07. Symbol Set	You can specify the set of print characters for the selected font. Search for the desired font among the options shown in the 6 screens. Roman-8, Windows Latin 1, Windows Latin 2, Windows Latin 5, Windows Baltic, Win 3.0, Legal, ISO Latin 1, ISO Latin 2, ISO Latin 5, ISO 4, ISO 6, ISO 11, ISO 15, ISO 17, ISO 21, ISO 60, ISO 69, PC-8, PC-850, PC-852, PC-T004, PC-8 DN, PC-Turk, Ventura Math, Ventura US, Ventura Intel, Microsoft Publishing, Pifont, Desktop, Math-8, PS Math, PS Text, MC Text Note □ Default: Roman-8

PostScript®

Menu	Description
Printer Errors	You can specify whether the PostScript [®] Error Report should be printed:
	• Off
	• On
	Ø Note
	☐ Default: <i>Off</i>

Paper Feed

Menu	Description
01.Input	You can make the input settings as follows.
	♦ Paper Size You can specify the paper size when the paper size is not specified by the application. A3, 11 × 17, B4, $8^{1}/_{2} \times 14$, $8^{1}/_{4} \times 13$, 8×13 , $8^{1}/_{2} \times 13$, A4, $8^{1}/_{2} \times 11$, $7^{1}/_{4} \times 10^{1}/_{2}$, B5, A5, $5^{1}/_{2} \times 8^{1}/_{2}$, A6
	✓ Note□ Default: Metric Version A4
	\square Default: Inch Version $8^1/_2 \times 11$
	❖ Tray Priority You can specify the input paper tray. Only the installed trays appear on the panel display. Auto, LCT, Bypass, Tray1, Tray2, Tray3, Tray4
	✓ Note□ Default: Auto
	♦ Auto Tray Switch You can specify whether the Auto Tray Switch is on. When the Auto Tray Switch is On, and the current paper tray becomes empty during a print job, the machine automatically changes the paper tray to the one that contains the same paper size and orientation.
	• On
	• Off
	✓ Note□ Default: On
	 Bypass Paper Type You can specify the type of paper in the Bypass Tray: Standard OHP Thick Paper
	✓ Note□ Default: Standard

Menu	Description
02. Output (1/2)	You can make the output settings as follows.
	 Duplex You can specify whether you want to print on both sides of each page. If so, you can also specify the orientation of paper. Off Bind-Long Bind-Short
	✓ Note□ Default: Off
	 Sort You can specify whether you want to collate the output. If so, you can also specify the printing order. Off Shift Rotate Note Default: Off
	You can specify whether you want to staple the output. If so, you can also specify the stapling position among the options shown in the 5 screens. Off, Left Slant Port, Left Slant Land, Left Vart Port, Left Vart Land, Left Horiz Port, Left Yart Land, Left 2 Port, Left 2 Land, Right Slant Port, Right Slant Land, Right Vart Port, Right Horiz Land, Right Horiz Port, Right Horiz Land, Right 2 Port, Right 2 Land, Top 2 Port, Top 2 Land
	✓ Note□ Default: Off

Menu	Description
02. Output (2/2)	❖ Punch You can specify whether you want to punch the output for filing. If so, you can also specify the punching position among the options shown in the 2 screens. Off , Left Port , Left Land , Right Port , Right Land , Top Port , Top Land
	✓ Note□ Default: Off
	Mailbox Tray Prio You can specify to which bins print out should be delivered. 1,2,3,4,5,6,7,8,9
	✓ Note□ Default: 1

Parallel

Menu	Description
01. Emulation	You can specify the page description language for print jobs received through the parallel port: • Auto • PCL • PostScript® ✓ Note ☐ Default: Auto
02. Bi-Direction	You can specify whether bi-directional communication between this machine and the host computer is enable. • Off • On Note Default: On

Menu	Description
03. I/O Timeout	You can specify how many seconds to wait until an incomplete print job should end, and the next port in the polling sequence should be set in increments of 1. 5-300sec
	✓ Note□ Default: 30sec.

Network

Menu	Description
01. I/O Timeout	You can specify how many seconds to wait until an incomplete print job should end, and the next port in the polling sequence should be set in increments of 1. 5-300sec
	✓ Note□ Default: 30sec.
02. TCP/IP	♦ IP Address You can specify the IP Address.
	✓ Note□ Default: All zero
	♦ Subnet Mask You can specify the Subnet Mask.
	✓ Note□ Default: All zero
	Gateway Address You can specify the Gateway Address.
	✓ Note□ Default: All zero

Configuration

Menu	Description
01. Resolution	You can specify the print resolution in dots per inch: • 300dpi • 600dpi
	✓ Note□ Default: 600dpi
03. Auto Continue	You can specify whether the Auto Continue feature is enabled. When it is On, printing continues after a system error occurs:
	• Off • On
	 ✓ Note □ When it is on, and certain types of error occur, the current job might be canceled, and the machine automatically resumes the next job.
	☐ Default: <i>On</i>
04. Edge Smoothing	You can specify whether the Edge Smoothing feature is enabled. • Off
	• On
	✓ Note□ Default: On
05. Autocont.Timeout	You can specify how many seconds to wait until the Auto Continue Feature should end in increments of 1. 5-300 sec
	✓ Note□ Default: 30sec.

List Print

Menu	Description
01. PS Font List	You can print a list of installed PS fonts.
02. PCL Font List	You can print a list of installed PCL fonts.
03. PS Demo Page	You can print a PS Demo Page.
04. PCL Demo Page	You can print a PCL Demo Page.
05. Configuration Page	You can print a page describing the printer configuration.

Reset Select

Menu	Description
01. Job Reset	You can cancel the print job currently being processed.
02. Menu Reset	You can cancel the print job and restore some of the menu parameters to their factory defaults.
	✓ Note☐ The following parameters do not change back to their factory defaults:
	Bi-Direction
	TCP/IP Settings
03. System Reset	You can reset the system.


2

Adjusting System Settings

Accessing the System Settings


1 Press the [User Tools/Counter] key.

The User Tools Main Menu appears.

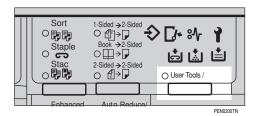


2 Enter [1] with the [Number] keys.

The System menu appears.

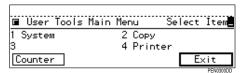




Search for the desired menu with the [Number] keys.

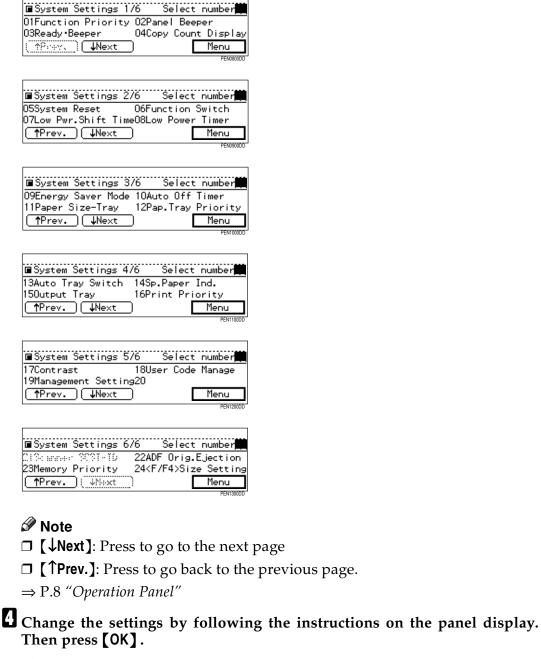

- Note
- □ **(OK)**: Press to set the new settings and return to the previous menu.
- ☐ **[Cancel]**: Press to return to the previous menu without changing any data.
- ⇒ P.24 "System Settings Parameters"

Exiting from User Tools


- 1 After changing the user tools settings, go back to the User Tools Main Menu.
- Press the [User Tools/Counter] key.

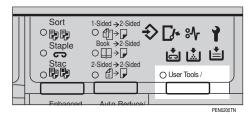

∅ Note

☐ You can also exit from user tools by pressing the **[Exit]** key on the User Tools Main Menu.

System Settings Menu

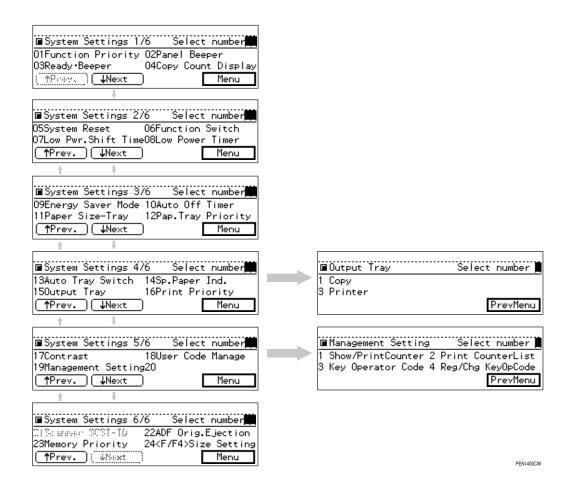

System Settings Parameters

This section contains the information on the parameters only used for the Printer.

For information on the other parameters in the System Settings menu. \Rightarrow P.24 "System Settings Parameters"

For information on how to access the user tools. \Rightarrow P.21 "Accessing the System Settings"

System Settings

Menu	Description
01. Function Priority	You can specify the mode to be displayed immediately after the operation switch is turned on or the System Reset mode is turned on.
	✓ Note□ Default: Copy
15. Output Tray	You can specify a tray to which documents are delivered for each mode (Copy, Fax and Printer).
	✓ Note☐ You can specify a single tray for two or more modes.
	Even if "Internal Tray" is specified as the Output tray, the paper whose horizontal size to the machine is 300mm or longer will be delivered to "Finisher Proof" or "Mailbox Proof" tray.
	With the optional 3000-sheet finisher installed, it will be automatically delivered to the "Finisher Proof" tray.
	With the optional Mailbox and the optional 3000-sheet finisher installed, it will be automatically delivered to the "Mailbox Proof" tray.
	Finisher

Menu	Description
16. Print Priority (setting the multi-accessing function)	Sets the print priority for each mode.
	"Display" Print priority is given to the mode shown on the display.
	• "Copy" Print priority is given to the copy function.
	"Fax" Print priority is given to the fax function.
	• "Printer" Print priority is given to the printer function.
	"Interleave" Makes use of the Multi-Access functions to print jobs in the order in which they are initiated regardless of mode/function.
	As the output from the different functions may be inconveniently placed on the same tray, it is possible to separate output trays for each function using the "Output Tray" feature.
23. Memory Priority	You can select which function should be prioritized for the memory allocation of Copier Hard Disk (Image Enhance Kit) .

3. Installing the PCL 6/5e Printer Driver

Installing the PCL 6/5e Printer Driver

Printing requires installation of a printer driver for your operating system. This section provides basic procedures for installing the printer driver. The actual procedure differs somewhat depending on your operating system. Follow the right one of the procedures below.

Windows 95/98 - Installing the PCL 6/5e Printer Driver

Follow these steps to install the PCL 6/5e printer driver on your Windows 95/98 system:

- Insert the CD labeled Printer Drivers and Utilities for Windows/Mac in the CD-ROM drive.
- 2 Close all the applications that are currently running.
- Click on [Start] on the task bar.
- Click on [Run].
- In the "Run" window, click on [Browse...].
- **6** Select the CD-ROM Drive.
- **7** Open the folder called "Pcl6 (or Pcl5e)".
- Open the folder called "Win31_95".
- Open the folder of appropriate language.
- 1 Open the folder called "Disk1".
- 1 Open the file titled "Setup.exe".
- Click on [OK].
- **E** Follow the instructions on the screen.

Windows 3.1x - Installing the PCL 6/5e Printer Driver

Follow these steps to install the PCL 6/5e printer driver on your Windows 3.1x system:

- Insert the CD labeled Printer Drivers and Utilities for Windows/Mac in the CD-ROM drive.
- 2 Close all the applications that are currently running.
- From the [Program Manager], select [Run] from the [File] menu.
- 1 In the "Run" window, click on [Browse...].
- **5** Select the CD-ROM Drive in the Drives list.
- **6** Open the folder called "Pcl6 (or Pcl5e)".
- Open the folder called "Win31_95".
- Open the folder of appropriate language.
- Open the folder called "Disk1".
- 1 Open the file titled "Setup.exe".
- Click on [OK].
- $m{m{\mathcal{D}}}$ Follow the instructions on the screen.

Windows NT 4.0 - Installing the PCL 6/5e Printer Driver

Follow these steps to install the PCL 6/5e printer driver on your Windows NT4.0 system:

- Insert the CD labeled Printer Drivers and Utilities for Windows/Mac in the CD-ROM drive.
- 2 Close all the applications that are currently running.
- Click on [Start] on the task bar.
- 4 Click on [Run].
- **b** In the "Run" window, click on [Browse...].
- **6** Select the CD-ROM Drive.
- Open the folder called "Pcl6 (or Pcl5e)".
- Open the folder called "Nt4".

- **9** Open the folder of appropriate language.
- ① Open the folder called "Disk1".
- 1 Open the file titled "Setup.exe".
- Click on [OK].
- **B** Follow the instructions on the screen.

Uninstalling the PCL 6/5e Printer Driver

This section provides basic procedures for uninstalling the printer driver. The actual procedure differs somewhat depending on your operating system. Follow the right one of the procedures below.

Windows 95/98 - Uninstalling the PCL 6/5e Printer Driver

Follow these steps to uninstall the printer driver:

- Insert the CD labeled Printer Drivers and Utilities for Windows/Mac in the CD-ROM drive.
- 2 Close all the applications that are currently running.
- Click on [Start] on the task bar.
- 4 Click on [Run].
- In the "Run" window, click on [Browse...].
- **6** Select the CD-ROM Drive.
- **7** Open the folder called "Pcl6 (or Pcl5e)".
- Open the folder called "Win31_95".
- Open the folder of appropriate language.
- f U Open the folder called "Disk1".
- Open the file titled "Unsetup.exe".
- Click on [OK].
- **E** Follow the instructions on the screen.

Windows 3.1x - Uninstalling the PCL 6/5e Printer Driver

Follow these steps to uninstall the printer driver:

- **1** Insert the CD labeled Printer Drivers and Utilities for Windows/Mac in the CD-ROM drive.
- 2 Close all the applications that are currently running.
- From the [Program Manager], click on [Run] from the [File] menu.
- In the "Run" window, click on [Browse...].

- **5** Select the CD-ROM Drive in the Drives list.
- Open the folder called "Pcl6 (or Pcl5e)".
- **7** Open the folder called "Win31_95".
- Open the folder of appropriate language.
- 9 Open the folder called "Disk1".
- Open the file titled "Unsetup.exe".
- Click on [OK].
- Prollow the instructions on the screen.

Windows NT 4.0 - Uninstalling the PCL 6/5e Printer Driver

Follow these steps to uninstall the printer driver:

- Insert the CD labeled Printer Drivers and Utilities for Windows/Mac in the CD-ROM drive.
- 2 Close all the applications that are currently running.
- 3 Click on [Start] on the task bar.
- Click on [Run].
- In the "Run" window, click on [Browse...].
- **6** Select the CD-ROM Drive.
- Open the folder called "Pcl6 (or Pcl5e)".
- Open the folder called "Nt4".
- Open the folder of appropriate language.
- Open the folder called "Disk1".
- 1 Open the file titled "Unsetup.exe".
- Click on [OK].
- **E** Follow the instructions on the screen.

3

This page is intentionally blank.

4. Installing the PostScript® Printer Driver

Installing the PostScript® Printer Driver

Printing requires installation of a printer driver for your operating system. This section provides basic procedures for installing the printer driver. The actual procedure differs somewhat depending on your operating system. Follow the right one of the procedures below.

Windows 95/98 - Installing the PostScript® Printer Driver

Follow these steps to install the PostScript $^{\circledR}$ printer driver on Windows 95/98 system:

- Insert the CD labeled Printer Drivers and Utilities for Windows/Mac in the CD-ROM drive.
- 2 Close all the applications that are currently running.
- Click on [Start] on the task bar.
- Click on [Run].
- In the "Run" window, click on [Browse...].
- **6** Select the CD-ROM Drive.
- **7** Open the folder called "Ps".
- Open the folder called "Win95_98".
- Dopen the folder of appropriate language.
- 1 Open the folder called "Disk1".
- 11 Open the file titled "Setup.exe".
- Click on [OK].
- **B** Follow the instructions on the screen.

Using the printer driver with the Adobe PageMaker for Windows 95/98

If you use the printer under Windows95/98 with the Adobe PageMaker, you need to copy the PPD file to the PageMaker directory.

The PPD file is the file with extension ".ppd" under on the directory \PS\WIN95_98\ENGLISH\DISK1\, on the CD labeled Printer Drivers and Utilities for Windows/Mac. The last directory, "ENGLISH" may be substituted by appropriate language name. Copy this file to the PageMaker's directory.

For PageMaker 6 default installation, the directory is "C:\PM6\RSRC\USEN-GLISH\PPD4", and for PageMaker 6.5 default installation, the directory is "C:\PM65\RSRC\USENGLISH\PPD4". The "USENGLISH" may be different, depending on your language selection.

Windows 3.1x - Installing the PostScript® Printer Driver

Follow these steps to install the PostScript $^{\otimes}$ printer driver on your Windows 3.1x system:

- Insert the CD labeled Printer Drivers and Utilities for Windows/Mac in the CD-ROM drive.
- 2 Close all the applications that are currently running.
- From the [Program Manager], click on [Run] from the [File] menu.
- In the "Run" window, click on [Browse...].
- **5** Select the CD-ROM Drive in the Drives list.
- Open the folder called "Ps".
- **7** Open the folder called "Win31".
- Open the folder of appropriate language.
- Open the folder called "Disk1".
- Open the file titled "Setup.exe".
- Click on [OK].
- 12 Follow the instructions on the screen.

If you use the printer under Windows3.1x with the Adobe PageMaker, you need to copy the PPD file to the PageMaker directory.

The PPD file is the file with extension ".ppd" under on the directory \PS\WIN3.1\ENGLISH\DISK1\, on the CD labeled Printer Drivers and Utilities for Windows/Mac. The last directory, "ENGLISH" may be substituted by appropriate language name. Copy this file to the PageMaker's directory.

For PageMaker 6 default installation, the directory is "C:\PM6\RSRC\USEN-GLISH\PPD4", and for PageMaker 6.5 default installation, the directory is "C:\PM65\RSRC\USENGLISH\PPD4". The "USENGLISH" may be different, depending on your language selection.

Windows NT 4.0 - Installing the PostScript® Printer Driver

Follow these steps to install the PostScript[®] printer driver on Windows NT4.0 system:

- **1** Insert the CD labeled Printer Drivers and Utilities for Windows/Mac in the CD-ROM drive.
- 2 Close all the applications that are currently running.
- Click on [Start] on the task bar.
- 4 Click on [Run].
- In the "Run" window, click on [Browse...].
- **6** Select the CD-ROM Drive.
- **7** Open the folder called "Ps".
- Open the folder called "Nt4".
- Open the folder of appropriate language.
- Open the folder called "Disk1".
- 1 Open the file titled "Setup.exe"
- Click on [OK].
- Follow the instructions on the screen.

Using the printer driver with the Adobe PageMaker for Windows NT4.0

If you use the printer under Windows NT4.0 with the Adobe PageMaker, you need to copy the PPD file to the PageMaker directory.

The PPD file is the file with extension ".ppd" under on the directory \PS\WINNT4\ENGLISH\DISK1\, on the CD labeled Printer Drivers and Utilities for Windows/Mac. The last directory, "ENGLISH" may be substituted by appropriate language name. Copy this file to the PageMaker's directory.

For PageMaker 6 default installation, the directory is "C:\PM6\RSRC\USEN-GLISH\PPD4", and for PageMaker 6.5 default installation, the directory is "C:\PM65\RSRC\USENGLISH\PPD4". The "USENGLISH" may be different, depending on your language selection.

Macintosh - Installing the PostScript® Printer Driver

Be sure to install the appropriate driver for Macintosh. The software requires a System 7.6 or later Macintosh operating system.

Follow the steps below to install the PostScript[®] printer driver for Macintosh that is contained in the PostScript[®] option.

- Insert the CD labeled Printer Drivers and Utilities for Windows/Mac in the CD-ROM drive.
- **2** Double click on the CD icon.
- **3** Double click on a folder of appropriate language.
- Double click on the installer icon.
- **5** Follow the instructions on the screen.

Uninstalling the PostScript® Printer Driver

This section provides basic procedures for uninstalling the printer driver. The actual procedure differs somewhat depending on your operating system. Follow the right one of the procedures below.

Windows 95/98 - Uninstalling the PostScript® Printer Driver

Follow these steps to uninstall the printer driver:

- Click on [Start] on the task bar.
- Point to [Settings] and click on [Printers].
- **3** Select the printer you want to delete.
- From the [File] menu, click on [Delete].
 A confirmation dialog box appears.
- **5** Click on [Yes] to delete the printer driver.

Windows 3.1x - Uninstalling the PostScript® Printer Driver

Follow these steps to uninstall the printer driver:

- 1 Open the [Control Panel].
- **2** Double click on the Printer icon.
- B Select the printer you want to delete and click on [Remove].

A confirmation dialog box appears.

- 4 Click on [Yes] to delete the printer.
- Click on [Close] to delete the printer driver.

Windows NT 4.0 - Uninstalling the PostScript® Printer Driver

Follow these steps to uninstall the printer driver:

- Click on [Start] on the task bar.
- Point to [Settings] and click on [Printers].
- **3** Select the printer you want to delete.

From the [File] menu, click on [Delete].

A confirmation dialog box appears.

Click on [Yes] to delete the printer driver.

5. Installing the Font Manager

Installing the Font Manager

Printing under a Windows system requires installation of the Font Manager for your operating system.

This section provides basic procedures for installing the Font Manager.

The actual procedure differs somewhat depending on your operating system.

Follow the right one of the procedure below.

Windows 95/98/NT4.0 - Installing the Font Manager

Follow these steps to install the Font Manager on Windows 95/98/NT4.0 system:

- Insert the CD labeled Printer Drivers and Utilities for Windows/Mac in the CD-ROM drive.
- 2 Close all the applications that are currently running.
- Click on [Start] on the task bar.
- 4 Click on [Run].
- In the "Run" window, click on [Browse...].
- **6** Select the CD-ROM Drive.
- **7** Open the folder called "Fontman".
- Open the folder called "Disk1".
- Open the file titled "Setup.exe".
- Click on [OK].
- **1** Follow the instructions on the screen.

Windows 3.1x - Installing the Font Manager

Follow these steps to install the Font Manager on Windows 3.1x system:

- **1** Insert the CD labeled Printer Drivers and Utilities for Windows/Mac in the CD-ROM drive.
- 2 Close all the applications that are currently running.

- 3 From the [Program Manager], click on [Run].
- In the "Run" window, click on [Browse...].
- **5** Select the CD-ROM Drive in the Drivers list.
- **6** Open the folder called "Fontman".
- **7** Open the folder called "Disk1".
- 13 Open the file titled "Setup.exe".
- Click on [OK].
- **1** Follow the instructions on the screen.

5

Uninstalling the Font Manager

This section provides basic procedures for uninstalling the Font Manager. The actual procedure differs somewhat depending on your operating system. Follow the right one of the procedures below.

Windows 95/98/NT4.0 - Uninstalling the Font Manager

Follow these steps to uninstall the Font Manager:

- 1 Click on [Start] on the task bar.
- Point to [Settings] and click on [Control Panel].
- Double click on the file titled "Add/Remove Programs".
- Click on the [AGFA Font Manager] in the list box.
- Click on [Add/Remove...].

A confirmation dialog box appears.

- 6 Click on [Yes].
- **7** Follow the instructions on the screen.

Windows 3.1x - Uninstalling the Font Manager

Follow these steps to uninstall the Font Manager:

- 1 Open the "AGFA Font Manager" window in the [Program Manager].
- 2 Double click on "unInstallShield".
- **3** Follow the instructions on the screen.


5

This page is intentionally blank.

6. Printing a Document

Changing a Mode

You can use this machine not only as a copier, but optionally as a fax machine or a printer as well. Press the **[Print]** key to use the printer functions.

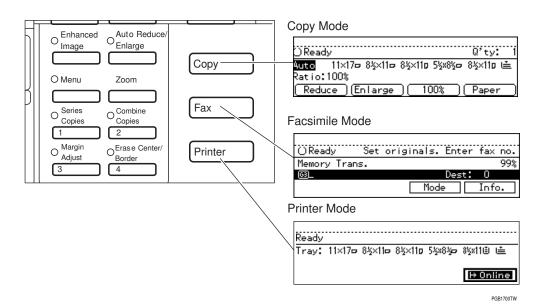

Limitation

- ☐ You cannot switch modes in any of the following cases:
 - When scanning in a fax message for transmission.
 - During immediate transmission.
 - When accessing the user tools.
 - During interrupt copying.

Starting a Print Job

This section provides basic procedures for starting and canceling a print job from a Windows application. The actual procedure differs somewhat depending upon the application used. For full details on printing, refer to the documentation and on-line help that comes with your application.

Windows 95/98 - Starting a print Job

Follow these steps to print a document. They are shown using WordPad as an example.

- 1 From the [File] menu, click on [Page Setup].
- 2 Specify the size, source, orientation and margins of the paper, and click on [OK].
 - **∅** Note
 - ☐ Use **[Size]** to select the paper size that matches the paper loaded in the printer's paper tray.
 - ☐ Use [Source] to select [Auto Tray Select].
- Input the text you want to print.
- 4 From the [File] menu, click on [Print].

The "Print" dialog box appears.

- Make sure that the name of your machine is selected under [Name], and then click on [OK] to start printing.
 - Note
 - ☐ If another printer is shown under **[Name]**, use the drop down menu to select the name of your machine.
 - ☐ Clicking the **[Print]** dialog box's **[Properties]** button displays a screen for changing the settings of the printer drivers settings.

Windows 3.1x - Starting a print Job

Follow these steps to print a document. They are shown using Write as an example.

- 1 Use Write to create a document to print.
- 2 From the [File] menu, click on [Print Setup].

6

- Make sure that the name of your machine is selected for the [Default Printer], and specify the paper size and source that you want to use.
 - Note
 - ☐ Use **[Size]** to select the paper size that matches the paper loaded in the printer's paper tray.
 - ☐ Use [Source] to select [Auto Tray Select].
- 4 Click on [OK].

The above step closes the "Print Setup" dialog box.

From the [File] menu, click on [Print].

The "Print" dialog box appears.

- Note
- ☐ Click the **[Print]** dialog box's **[Setup]** button to open the printer driver screen to change the printer setup, and specify the number and the range of pages to be printed.
- Make sure that the name of your machine is selected under [Printer Name], and then click on [OK] to start printing.
 - Note
 - ☐ If another printer is selected, click on [Setup...] andd select the name of your machine.

Windows NT4.0 - Starting a print Job

Follow these steps to print a document. They are shown using WordPad as an example.

1 From the [File] menu, click on [Page Setup].

The "Page Setup" dialog box appears.

- 2 Specify the size, source, orientation and margins of the paper, and click on [OK].
 - Note
 - ☐ Use **[Size]** to select the paper size that matches the paper loaded in the printer's paper tray.
 - $\hfill\Box$ Use [Source] to select [Auto Tray Select].
- Input the text you want to print.
- 4 From the [File] menu, click on [Print].

The "Print" dialog box appears.

Make sure that the name of your machine is selected under [Name], and then click on [OK] to start printing.

Note

- ☐ If another printer is shown under **[Name]**, use the drop down menu to select the name of your machine.
- ☐ Cliking the **[Print]** dialog box's **[Properties]** button displays a screen for changing the settings of the printer drivers settings.

Canceling a Print Job

This section provides basic procedures for starting and canceling a print job from a Windows application. The actual procedure differs somewhat depending upon the application you are using. For full details on printing, refer to the documentation and the on-line help that comes with your application.

Windows 95/98 - Canceling a print Job

Follow the steps below to cancel a print job.

- Press the [Online] key of your machine's operation panel.
 - The foreground and background of the [Online] on the panel display is reversed.
- Ready changes into Offline, and [JobReset] appears on the panel display.
- **3** Double click on the printer icon displayed on the task bar.

This opens a printer window that shows a queue of documents being processed by the printer. It includes documents being printed, as well as paused.

The word "Printing" in the "Status" column indicates documents for which print data is being sent from your computer to the printer. If nothing is shown in the "Status" column, it means that the document is waiting for being printed.

- 4 Click the document name you want to cancel.
- From the [Document] menu, click on [Cancel Printing].

The selected documents are cleared from the queue.

6 Press the [JobReset] key of your machine's operation panel.

This clears data of the print job.

Press the [Online] key of your machine's operation panel.

The foreground and background of the **[Online]** on the panel display is reversed, and Ready appears on the panel display.

Windows 3.1x - Canceling a print Job

Follow the steps below to cancel a print job.

Press the [Online] key of your machine's operation panel.

The foreground and background of the [Online] on the panel display is reversed.

- Ready changes into Offline, and [JobReset] appears on the panel display.
- Double click on the "Print Manager" icon.

This opens the "Print Manager" window.

4 Select the name of the printer that is printing and click [Pause].

This above step interrupts the transmission of print data to the printer.

5 Select the document you want to cancel and click [Cancel].

A dialog box appears to confirm whether you really want to cancel the print job.

- Click on [OK].
 - Note
 - ☐ To resume the printer being paused in the step ②, select the paused printer and click on [Resume].
- Press the [JobReset] key of your machine's operation panel.

This clears the print job's data.

Press the [Online] key of your machine's operation panel.

The foreground and background of the [Online] in the panel display reversed, and Ready appears on the panel display.

Windows NT4.0 - Canceling a print Job

Follow the steps below to cancel a print job.

Press the [Online] key of your machine's operation panel.

The foreground and background of the **[Online]** on the panel display is reversed.

- Ready changes into Offline, and [JobReset] appears on the panel display.
- Double click on the printer icon displayed on the task bar.

This opens a printer window that shows a queue of documents being processed by the printer. It includes documents being printed, as well as paused.

The word "Printing" in the "Status" column indicates documents for which print data is being sent from your computer to the printer. If nothing is shown in the "Status" column, it means that the document is paused.

- **1** Click the document name you want to cancel.
- From the [Document] menu, click [Cancel Printing].

The selected documents are cleared from the queue.

6 Press the [JobReset] key of your machine's operation panel.

This clears data of the print job.

Press the [Online] key of your machine's operation panel.

The foreground and background of the **[Online]** on the panel display is reversed, and Ready appears on the panel display.

6

This page is intentionally blank.

7. Troubleshooting

Error & Status Messages on the Operation Panel

Messages	Description	Comments
Ready	The printer is Online and ready to make a print.	If you want to change into Offline mode, press [Online].
Offline	The printer is Offline.	If you want to change into Online, press the reversed [Online].
Please Wait.	The printer is warming up or processing internally.	Wait for the machine to get ready.
Network Board Firmware downloading	The New NIB 450-E firmware is being downloaded.	Wait until it is downloaded.
Engine HDD is full. Sort uncompleted.	Engine HDD Full occurred during the current collate operation.	The current collation ends and the pages that are already on the disk are printed without the collation.
		This message remains until the next print job begins.
Empty Hole Punch receptacle	The Punch Trash got full during the current punching job.	Punching cannot be made though the print job continues. Dump the punch trash.
		This message remains until the next print job begins.
Memory Error. Only 1 set can be output.	An Engine HDD error occurred during the current collate operation.	The print job can be completed with only one output copy of the document.
		This message remains until the next print job begins.
Add Staples	The staples are running out during the current stapling job.	The stapling is being continued, even if this message appears. This message remains until the next print job which doesn' t require stapling begins.
Network Board Initializing	The NIB 450-E firmware is being initialized.	Wait until it is initialized.

Messages	Description	Comments
Going Offline	The machine is shifting from Online to Offline.	Wait until it shifts to Offline.
The job has been Reset.	The current job has been reset.	
Functional Problem SC2000	A controller diagnostic error or a controller exception error occurred while the power is on.	Turn the main switch off, and then back on. If the error appears again, please call service.
	The printer controller has some problems on the hardware.	Even if this error occurs, other functions (Copy and Fax) are still available.
Printer HDD Error	A controller disk error is de-	Press [Continue] after con-
Printer HDD cannot be used.	tected while the power is on.	firming the error, and the printer will start without the controller disk capability.
Printer HDD Error	A controller disk error is detected while a macro or font	Press [Reset] to cancel the
Press Reset to cancel the current job	is being downloaded from the host to the printer con- troller.	current job. If this error often occurs , change the disk.
Parallel communication Error	A parallel communication error occurred during the print job via the parallel port.	Press [Reset] to cancel the print job, and check the parallel communication settings again.
Network failure.	Network communication is not available. An installed network card fails to correctly establish	Press [Continue] and check the network settings, and the printer will start without the network capability.
	communication with the network.	Even if a network card is installed, no error will occur when it isn't plugged into a network connection.

Messages	Description	Comments
Print overrun	A print overrun occurred on a file being printed. Only part of the data on the page	To ignore this error, press [Continue], and the print job will be resumed.
	will be printed, and the print job is suspended.	To cancel the print job, press [Reset].
		After a few seconds without any key press, the print job will be canceled automatically.
		To print the image correctly, add memory to the machine, or reduce the resolution of the image and re-send the print job.
Memory overflow	Memory overflow occurred during the print job. After	To cancel the print job, press [Reset].
	part of the data on the page is printed, the print job is suspended.	After a few seconds without any key press, the print job will be canceled automatical-
	This is because the emulation language sent a file too complex for the printer to interpret with the available memory, or there isn't enough memory space to download the fonts.	ly. To print the image correctly, add memory to the machine. This message remains until the next print job.
Printer HDD is full.	Printer HDD is full. A controller disk becomes full while downloading a	
	macro or font from the host to the printer controller.	After a few seconds without any key press, the print job will be canceled automatically.
		To execute the operation correctly, clear room on the disk partition priority.
Output tray is full.	The specified output tray of the print job is full, and the print job is suspended.	Remove the output from the output tray, and the print job will be resumed automatically.

Messages	Description	Comments
<pre><xxx> Tray is not avail- able.</xxx></pre>	Something is wrong with the specified input tray.	Press [Reset] to cancel the current job.
	The print job is suspended.	After a few seconds without any key press, the print job will be canceled automatically.
<pre><xxx> is not set correct- ly.</xxx></pre>	The specified input tray is not set correctly.	Close the specified input tray, and the print job will be resumed automatically.
Open Duplex Unit side tray, or press	The cover of the Duplex unit is not opened when the paper size of duplex printing is one of the following.	Open the Duplex unit cover, and the print job will be resumed automatically.
	$11 \times 17, 8^{1}/_{2} \times 14, A3, B4,$	Press [Reset] to cancel the current job.
	$8^{1}/_{4} \times 13, 8 \times 13, 8^{1}/_{2} \times 13$	After a few seconds without any key press, the print job will be canceled automatically.
<paper icon="" out=""> Add paper</paper>	anacified input trave al	Put the specified paper in the specified input tray, and the print job will be resumed automatically.
		Press [Reset] to cancel the current job.
		After a few seconds without any key press, the print job will be canceled automatically.
<paper icon="" out=""> Add paper</paper>	The paper size specified from the host is not set in any trays, when the tray selection is set to Auto.	Put the specified paper in any of the input trays, and the print job will be resumed automatically.
		To continue the print job using the incorrect paper, press [Continue].
		To cancel the print job, press [Reset].
		After a few seconds without any key presses, the print job will be canceled automatically.

Messages	Description	Comments
<paper icon="" out=""> Add paper</paper>	The paper size specified from the host and that from the panel display are different for the input tray for the current print job. The print job is suspended.	Put the specified paper in the specified tray and change the paper settings of the User Tools correctly, so the print job will be automatically resumed. To continue the print job us-
		ing the incorrect paper, press [Continue].
		To cancel the print job, press [Reset].
		After a few seconds without any key press, the print job will be canceled automatically.
<paper icon="" out=""> Add paper</paper>	No paper is detected in the Bypass Tray.	Set the specified paper in the Bypass Tray, and the print job will be resumed automatically.
		To cancel the print job, press [Reset].
		After a few seconds without any key press, the print job will be canceled automatically.
Paper Misfeed has interrupted Printing.	A paper misfeed occurred, and you removed all the	To cancel the print job, press [Reset].
	misfed paper. The print job is interrupted.	To make the Jam recovery operation, press [Continue].
Paper is left in Staple Tray. Open Finiser and remove paper.	Paper remains in the staple tray, though the stapling job is canceled or a new stapling job is being started.	Remove the paper from the staple tray, and the print job will be resumed automatically.

Machine Does not Print

Possible Cause	Solutions
Is the power on?	Turn on the machine.
Is the interface cable properly connected?	Connect the interface cable properly.
	If there are any connectors or screws, make sure they are fastened securely.
Are you using the correct interface cable?	Be sure to use the correct one. If the cable is damaged or worn, replace it with a new one.
Did you connect the interface cable after turning on the main switch?	Make sure to connect the interface cable before turning on the main switch.
Is your machine Online?	Bring it Online by pressing the [Online] button.
Is the specified paper set?	Place the specified paper in any of the input trays.
Are there any error messages on the panel display?	Check the error message, and do the required action.
Does the indicator above the Printer key stay red?	Check the error message, and do the required action.
Is the Data-in Indicator blinking or lit?	If it is not, the data doesn't reach the machine. Check the printer cable connection.
	Also make sure that the printer port settings are correct.
Can you print a configuration page?	If you can't, check the printer cable connection.
	Also make sure that the printer port settings are correct.
Can you make a test print?	If you can't, your machine might be out of order. Consult your local service personnel.

Other Printing Problems

Problem	Action
Image is printed on the reverse side of the paper.	Set the paper upside down.
Multiple pages are fed through the printer at once.	Remove all the paper from the tray and fan them gently.
Paper misfeeds occur frequently.	Check the paper size settings. Use the recommended paper. Avoid using curled, folded, or wrinkled paper, perforated paper, or glossy paper.
Operation panel error message stays on after removing the misfed paper.	Paper misfeed message will remain until the front cover is opened and then closed. Open the front cover and close it.
It takes a long time for the printer to start printing.	The machine might be in Energy Saver mode or Low Power mode, which requires more time for warming up and resuming the print job. If you can't wait, change the settings of Low Pwr. Shift Time and Low Power Timer.
It takes too much time to complete the print job.	The data is so large or complex that it takes time to process it.
	If the Data In indicator is blinking, the data processing is being done.
	Just wait until it is finished.
Windows95, NT4.0 The computer doesn't recognize the installed printer options.	If the printer is not bi-directional, specify which options you have installed using the printer driver.
T	Refer to the HELP file of the printer driver.
Windows3.1 The printer can't send the print job.	The memory buffer might be full. Set the Print Manager to "OFF", or make the time-out setting longer.

Problem	Action
Desired tray isn't used for the output.	Check the tray of the Finisher or the Mailbox.
	Even if "Internal Tray" is specified as the Output tray, the paper whose horizontal size to the machine is 300mm or longer will be delivered to "Finisher Proof" or "Mailbox Proof" tray.
	With the optional 3000-sheet finisher installed, it will be automatically delivered to the "Finisher Proof" tray.
	With the optional Mailbox and the optional 3000-sheet finisher installed, it will be automatically delivered to the "Mailbox Proof" tray.

8. Appendix

Specifications

This section contains the electrical and hardware specifications for your printer, including the information on the options.

	Component	Specification
Basic printer	Resolution	600dpi , 400dpi , 300dpi
	Standard Centronics-compatible	 Interface: A standard 36-pin printer cable and a parallel port on the host computer. ✓ Note □ Do not use a parallel cable that is longer than 10 feet(3 meters).
		Centronics:
		IEEE 1284 Level 2 compliant bi-directional parallel port
	Page description language	PCL5e , PCL6(5e+XL) , PostScript
	Fonts	PCL45 Font sets , PS 136 Font sets
	Hard Disk	Storage capacity: 1.6GB
	Memory	DRAM SIMM module:
		Standard 8MB, Up to 72MB

	Component	Specification
Options	Mailbox	Weight: 37kg , 82lb
		Dimension (W×D×H):
		$600 \times 545 \times 980 \text{ mm}$
		$2.75" \times 3.9" \times 0.3"$
		Number of trays:
		9bins , 1Proof Tray
		Paper weight:
		Bin: $60 \text{ to } 90 \text{g/m}^2$, $16 \text{ to } 24 \text{lb}$
		Proof: 52 to 157g/m², 14 to 42lb
	Paper capacity:	
		Bin: 100sheet per tray (A4 \square , $8^1/_2$ "×11" \square , 80 g/
		m ²) / 70sheets per tray (Others)
		Proof: 500sheet per tray (A4 \square , $8^1/_2$ "×11" \square ,
		80g/m ²) / 300sheets per tray (Others)
		Power consumption: 48W
	Network	topology: Ethernet , 10BaseT/100BaseTX
	Protocol	TCP/IP, IPX/SPX, EtherTalk for Macintosh
	Postscript [®] capability	PostScript® 3 TM

INDEX

0 10BaseT/100BaseTX, 3,6 Operation Panel, 8, 51 Operation Switch, 8 C [Clear Modes/Energy Saver], 8 Configuration, 19 PCL, 13, 27 Copier Hard Disk (Image Enhanced Kit), 8, 26 Panel Display, 8 Copy Reference, 1 Paper Feed, 15 Cursor keys, 9 Parallel, 17 Parallel Cable, 3,5 PostScript®, ii, 14, 33 Printer Features, 10 Data In indicator, 8 Printer Reference, 1 Ε R [Enhanced Image], 8 Requirements, 3 Exiting from User Tools, 11, 23 Reset Select, 20 S FAX Reference, 1 [Selection], 8 Font Manager, 39 System Settings, 1, 21, 25 [Function], 8 System Settings Parameters, 24 Н U Hard Disk, ii [User Tools/Counter], 8, 10, 21 W List Print, 20 Windows 3.1, 28, 30, 34, 37 Windows 95/98, 27, 30, 33, 37 М Windows NT4.0, 28, 31, 35, 37 Macintosh, 36 Mailbox, ii Memory, ii, 26, 59 N Network, 18 Network Connections, 3 Network Interface Board 450-E (NIB 450-E), ii, 3, 5 [Number], 9

Notes to Users

❖ To Windows 2000 users

These notes describe the procedures and necessary information on using this machine under Windows 2000.

It is necessary to see the manuals that come with this machine for further information in addition to these notes.⇒ P.10 "Windows 2000 Configuration"

♦ To Windows 95/98, Windows NT 4.0 and Macintosh users

These notes describe the modified procedures and additional information on using this machine under Windows 95/98, Windows NT 4.0 and Macintosh. It is necessary to see the manuals that come with this machine for further information in addition to these notes.⇒ P.5 "Windows 95/98, Windows NT 4.0 Configuration", P.18 "Macintosh Configuration"

Note

☐ The way of installing the PCL printer driver and software has been changed to Auto Run on Windows 95/98 and Windows NT 4.0. See these notes to install the printer driver and software instead of the "Operating Instructions".

₽ Reference

For information about Auto Run, see P.2 "Auto Run"

Installing the Printer Driver and Software

Use the CD-ROM labeled "Printer Drivers and Utilities" that comes with this machine.

Auto Run

You can install the PCL6/5e printer driver and software by using Auto Run.

Auto Run is available for the following operating systems:

- Windows 95/98
- Windows 2000
- Windows NT 4.0

For how to install a Macintosh, see \Rightarrow P.18 "Macintosh Configuration"

important □ Before starting this installation, close all documents and applications. In a network environment, confirm that users who are logged on are disconnected. Be sure to do this when it will create the least interference with other users. □ After installing a printer driver, you must restart the computer. • Limitation □ If your system is Windows 2000 or Windows NT 4.0, installing a printer driv-

- If your system is Windows 2000 or Windows NT 4.0, installing a printer driver by Auto Run requires permission of Administrators. When you install a printer driver by Auto Run, log on using an account that has Administrators permission.
- Note
 □ The PostScript printer driver must be installed by using [Add Printer Wizard] in the [Printers] window.
 □ If the [Digital Signature Not Found] dialog box appears, click [Yes] to continue the installation on Windows 2000.
- ☐ Auto Run might not automatically work with certain OS settings. In this case, manually run "INSTTOOL.EXE" on the root to install printer driver.
- ☐ To cancel Auto Run, insert the CD-ROM while pressing the **[SHIFT]** key until your computer finishes accessing the CD-ROM.

Sharing the Printer on Windows 2000 or Windows NT 4.0 with Windows 95/98 Clients

If you want to share the printer on Windows 2000 or Windows NT 4.0, you must not install the printer driver using Auto Run. Install the printer driver of the Windows 95/98 for an alternate driver.

For more information about installing the printer driver as an alternate driver, see the description of Windows 2000 in "Installing the PCL 6/5e Printer Driver" \Rightarrow P.10

and the description of Windows NT 4.0 in "Installing the PCL 6/5e Printer Driver" \Rightarrow P.5

Installing the printer driver by Auto Run

Follow these steps to install the printer driver on Windows 95/98/Windows 2000/Windows NT 4.0.

∰Important

☐ Never have two versions of the same printer driver installed on your system at the same time. When upgrading to a new version of the printer driver, uninstall the old version, and then install the new one.

Note

- ☐ If the "plug and play" function is started by Auto Run, click **[Cancel]** in the **[New Hardware Found]** dialog box or **[Device Driver Wizard]**, and then insert the CD-ROM. **[New Hardware Found]** or **[Device Driver Wizard]** appears depending on the system version of Windows 95/98 and Windows 2000.
- 1 Close all applications that are currently running.
- **2** Insert the CD-ROM into the CD-ROM drive.
- **3** Follow the instructions on the screen.
- **A** Restart your computer after installation is complete.
- **5** Set up the Accessories with the printer driver.

Installing the software and utilities by Auto Run

You can install the following software and utilities that are included on the CD-ROM labeled "Printer Drivers and Utilities" by using Auto Run.

- PRINTER MANAGER FOR ADMIN *1
- PRINTER MANAGER FOR CLIENT *1
- Font Manager *2
- *1 For the name of PRINTER MANAGER FOR ADMIN/FOR CLIENT, see the "Operating Instructions". See PRINTER MANAGER FOR ADMIN/FOR CLIENT Online Help for details on using PRINTER MANAGER FOR ADMIN/FOR CLIENT.
- *2 See Font Manager Help for details on using the Font Manager.

∰Important

- ☐ If you upgrade to Windows 2000 from Windows 95/98, the software and utilities must be uninstalled prior to installing Windows 2000. You must reinstall them after upgrading to the Windows 2000 environment.
- 1 Close all applications that are currently running.
- **2** Insert the CD-ROM into the CD-ROM drive.
- **3** Follow the instructions on the screen.
- **4** Restart your computer after installation is complete.

Windows 95/98, Windows NT 4.0 Configuration

Installing the PCL 6/5e Printer Driver

Windows 95/98

For information, see "Installing the printer driver by Auto Run" \Rightarrow P.3

Windows NT 4.0

Limitation

☐ Installing a printer driver requires Full Control access permission. Members of the Administrators, Server Operators, Print Operators, and Power Users groups have Full Control permission by default. When you install a printer driver, log on using an account that has Full Control permission.

For information, see "Installing the printer driver by Auto Run" \Rightarrow P.3

If you want to share the printer on Windows NT 4.0, you must not install the printer driver using Auto Run. In this case, cancel Auto Run and install the printer driver using **[Add Printer Wizard]** in the **[Printers]** window.

When prompted for the Windows 95/98 alternate driver location, select the following folder on the CD-ROM.

- PCL 5e \DRIVERS\PCL5E\WIN95_98\(Language)\DISK1\
- PCL 6 \DRIVERS\PCL6\WIN95_98\(Language)\DISK1\

Setting up options

For how to set up the options, see "Setting Up Options" in "Windows 95/98 - Installing the PCL 6/5e Printer Driver" and "Windows NT 4.0 - Installing the PCL 6/5e Printer Driver" in the "Operating Instructions".

Installing the PostScript Printer Driver

Windows 95/98

#Important

- ☐ Be sure to install the PPD file for Windows 95/98. Do not accidentally install the PPD file for Windows 2000 or Windows NT 4.0.
- 1 Close all applications that are currently running.
- Click [Start] on the taskbar, point to [Settings], and then click [Printers]. The [Printers] window appears.
- Double-click the [Add Printers] icon.
 [Add Printer Wizard] starts.
- 4 Click [Next].
- Check [Local Printer] and click [Next].

A dialog box for selecting the printer manufacturer and model name appears.

6 Click [Have Disk].

A dialog box for installing the printer driver from a disk appears.

Insert the CD-ROM into the CD-ROM drive, while pressing the [SHIFT] key until the computer finishes accessing the CD-ROM.

If the Auto Run program starts, click [Cancel].

- 8 Click [Browse].
- Use the [Drives:] list box to select the CD-ROM drive.
- In the [Folders:] box, double-click [DRIVERS], [PS], [WIN95_98], [DISK1].
- Click [Open].
- Click [OK].
- Click to select the name of the printer whose driver you want to install, and then click [Next].
- In the [Available ports:] box, click to select [Printer Port], and then click [Next].
- f E Change the name of the printer if you want, and then click [Next].
- f u Select whether or not you want to print a test page, and then click [Finish].

If you are asked whether you want to restart Windows, select [Yes]. If you are not asked, restart Windows after completing the installation.

#Important

☐ If the printer is equipped with any options (e.g. the paper feed unit or memory unit), you should set up the options with the printer driver.

Windows NT 4.0

Limitation

☐ Installing a printer driver requires Full Control access permission. Members of the Administrators, Server Operators, Print Operators, and Power Users groups have Full Control permission by default. When you install a printer driver, log on using an account that has Full Control permission.

∰Important

- ☐ We recommend that you upgrade the Windows NT 4.0 operating system to Service Pack 3 or later before installing the printer driver. Contact your Windows retailer for more information about the latest version available.
- ☐ Be sure to install the PPD file for Windows NT 4.0. Do not accidentally install the PPD file for Windows 95/98 or Windows 2000.
- 1 Close all applications that are currently running.
- Click [Start] on the taskbar, point to [Settings], and then click [Printers]. The [Printers] window appears.
- Double-click the [Add Printers] icon.
 [Add Printer Wizard] starts.
- After confirming that the [My Computer] option is selected, click [Next]. A dialog box for selecting the printer port appears.
- **5** Check the check box of the port you want to use, and then click [Next]. A dialog box for selecting the printer manufacturer and model name appears.
- 6 Click [Have Disk].

A dialog box for installing the driver from a disk appears.

Insert the CD-ROM into the CD-ROM drive while pressing the [SHIFT] key until the computer finishes accessing the CD-ROM.

If the Auto Run program starts, click [Cancel].

- Change the drive name in the list box to the name of the CD-ROM drive, and then click [Browse].
- In the [Folders:] box, double-click [DRIVERS], [PS], [NT4], [DISK1].

- Click [Open].
- Click [OK].

A printer model selection dialog box appears.

Click to select the name of the printer whose driver you want to install, and then click [Next].

A dialog box for changing the printer name appears.

- Change the name of the printer if you want, and then click [Next].
- Click [Next].
- In the next dialog box asking if you want to print a test page, select [No] and then click [Finish].

The installer copies the printer driver files from the CD-ROM to the computer's hard disk.

- Note
- ☐ Print a test page after completing installation and restarting Windows.
- If you are asked whether you want to restart Windows, select [Yes]. If you are not asked, restart Windows after completing the installation.
 - ∰Important
 - ☐ If the printer is equipped with any options (e.g. the paper feed unit or memory unit), you should set up the options with the printer driver.

Setting up options

For how to set up the options, see "Setting Up Options" in "Windows 95/98 - Installing the PostScript Printer Driver" and "Windows NT 4.0 - Installing the Post-Script Printer Driver" in the "Operating Instructions".

Uninstalling the Printer Driver and Software

For information, see the descriptions of Windows 95/98, Windows NT 4.0 in "Unistalling the PCL 6/5e Printer Driver" and "Unistalling the PostScript Printer Driver" in the "Operating Instructions".

Setting Up the Printer Driver and Canceling a Print Job

Accessing the Printer Properties

For information, see the descriptions of Windows 95/98, Windows NT 4.0 in "Accessing the Printer Properties" in the "Operating Instructions".

Canceling a print job

For information, see the descriptions of Windows 95/98, Windows NT 4.0 in "Canceling a Print Job" in the "Operating Instructions".

Windows 2000 Configuration

Installing the PCL 6/5e Printer Driver

Installing the printer driver: Network environment

To use the PCL 5/6e printer driver in a network environment, you can install it by using Auto Run.

Limitation

☐ Installing a printer driver by Auto Run requires Administrators permission. When you install a printer driver by Auto Run, log on using an account that has Administrators permission.

Note

- ☐ Auto Run might not automatically work with certain OS settings. In this case, manually run "INSTTOOL.EXE" on the root to install printer driver.
- ☐ To cancel Auto Run, insert the CD-ROM while pressing the **[SHIFT]** key until the computer finishes accessing the CD-ROM.
- 1 Close all applications that are currently running.
- **2** Insert the CD-ROM into the CD-ROM drive.
- **B** Follow the instructions on the screen.
- A Restart your computer after installation is complete.
- **5** Set up the Accessories with the printer driver.

If you want to share the printer on Windows 2000, you must not install the printer driver using Auto Run. In this case, cancel Auto Run and install the printer driver using [Add Printer Wizard] in the [Printers] window.

Use the printer driver for Windows 2000 and Windows NT 4.0.

- PCL 5e \DRIVERS\PCL5E\NT4_2000\(Language)\DISK1\
- PCL 6 \DRIVERS\PCL6\NT4_2000\(Language)\DISK1\

Note

☐ During installation by using [Add Printer Wizard], the [Digital Signature Not Found] dialog box appears. In this case, click [Yes] to continue the installation.

When prompted for the Windows NT 4.0 alternate driver location, select the following folder on the CD-ROM.

- PCL 5e \DRIVERS\PCL5E\NT4_2000\(Language)\DISK1\
- PCL 6 \DRIVERS\PCL6\NT4_2000\(Language)\DISK1\

When prompted for the Windows 95/98 alternate printer driver location, select the following folder on the CD-ROM.

- PCL 5e \DRIVERS\PCL5E\WIN95_98\(Language)\DISK1\
- PCL 6 \DRIVERS\PCL6\WIN95_98\(Language)\DISK1\

Installing the printer driver : Parallel connection

If the printer is connected to the computer with parallel cable, you must install the printer driver by using **[Add Printer Wizard]**. Follow the procedure below.

Limitation

☐ Installing a printer driver requires Manage Printers permission. Members of the Administrators, and Power Users groups have Manage Printers permission by default. When you install a printer driver, log on using an account that has Manage Printers permission.

Note

- ☐ If the "plug and play" function starts, you can also install the printer driver following the instructions on the screen.
- ☐ During installation by using [Add Printer Wizard], [Digital Signature Not Found] dialog box appears. In this case, click [Yes] to continue the installation.
- 1 Close all applications that are currently running.
- 2 Click [Start] on the taskbar, point to [Settings], and then click [Printers]. The [Printers] window appears.
- Double-click the [Add Printer] icon.
 [Add Printer Wizard] starts.
- 4 Check [Local Printer] and click [Next].

A dialog box for selecting the printer port appears.

- **5** Click to select the printer port you want to use, and then click [Next]. A dialog box for selecting the printer manufacturer and model name appears.
- 6 Click [Have Disk].

A dialog box for installing the driver from a disk appears.

- Insert the CD-ROM into the CD-ROM drive while pressing the [SHIFT] key until the computer finishes accessing the CD-ROM.
 - Note
 - ☐ If the Auto Run program starts, click [Cancel].
- Change the drive name in the list box to the name of the CD-ROM drive, and then click [Browse].
- In the [Folders:] box, double-click [DRIVERS], [PCL5E] or [PCL6], [NT4_2000], [DISK1].
- Click [Open].
- Click [OK].

A printer model selection dialog box appears.

Click to select the name of the printer whose driver you want to install, and then click [Next].

A dialog box for changing the printer name appears.

- E Change the name of the printer if you want, and then click [Next].
- Click [Next].
- In the next dialog box you will be asked to print a test page, select [No] and then click [Next].

A confirmation dialog box appears.

Confirm the settings you have set, and then click [Next].

The installer copies the printer driver files from the CD-ROM to the computer's hard disk.

12 Set up the Accessories with the printer driver.

Setting up options

Limitation

☐ Changing the setting of the printer requires Manage Printers permission. Members of the Administrators and Power Users groups have Manage Printers permission by default. When you set up options, log on using an account that has Manage Printers permission.

For how to set up the options, see "Setting Up Options" in "Windows NT 4.0 - Installing the PCL 6/5e Printer Driver" in the "Operating Instructions".

Installing the PostScript Printer Driver

Installing the printer driver

Limitation

- ☐ Installing a printer driver requires Manage Printers permission. Members of the Administrators, and Power Users groups have Manage Printers permission by default. When you install a printer driver, log on using an account that has Manage Printers permission.
- 1 Close all applications that are currently running.
- Click [Start] on the taskbar, point to [Settings], and then click [Printers]. The [Printers] window appears.
- Double-click the [Add Printers] icon.
 [Add Printer Wizard] starts.
- After confirming that the [Local Printer] option is selected, click [Next]. A dialog box for selecting the printer port appears.
- E Check the check box of the port you want to use, and then click [Next].

 A dialog box for selecting the printer manufacturer and model name appears.
- 6 Click [Have Disk].

A dialog box for installing the driver from a disk appears.

Insert the CD-ROM into the CD-ROM drive while pressing the [SHIFT] key until the computer finishes accessing the CD-ROM.

If the Auto Run program starts, click [Cancel].

- Change the drive name in the list box to the name of the CD-ROM drive, and then click [Browse].
- In the [Folders:] box, double-click [DRIVERS], [PS], [WIN2000], [DISK1].
- Click [Open].
- Click [OK].

A printer model selection dialog box appears.

Click to select the name of the printer whose driver you want to install, and then click [Next].

A dialog box for changing the printer name appears.

Change the name of the printer if you want, and then click [Next].

- Click [Next]. f E In the next dialog box asking if you want to print a test page, select [No] and then click [Next]. A confirmation dialog box appears. Confirm the settings you have set, and then click [Finish]. The installer copies the printer driver files from the CD-ROM to the computer's hard disk. You should set up the options with the printer driver. Restart the Windows. Note ☐ Print a test page after completing installation. **Setting up options** Limitation ☐ Changing the setting of the printer requires Manage Printers permission. Members of the Administrators and Power Users groups have Manage Printers permission by default. When you set up options, log on using an account that has Manage Printers permission. Click [Start] on the taskbar, point to [Settings], and then click [Printers]. The [Printers] window appears.
- Click the icon of the printer you want to use. On the [File] menu, click [Properties].
- Click the [Device Settings] tab.
- 4 Use the [Installable Options] group to select the options, and then select [Installed] or [Not] Installed from the drop-down list box.
- E Repeat step 4 for all options.
- 6 After making all settings you want, click [OK].

Uninstalling the Printer Driver and Software

Limitation

☐ Uninstalling a printer driver requires Manage Printers permission. Members of the Administrators and Power Users groups have Manage Printers permission by default. When you uninstall a printer driver, log on using an account that has Manage Printers permission.

For information, see the descriptions of Windows NT 4.0 in "Unistalling the PCL 6/5e Printer Driver" and "Unistalling the PostScript Printer Driver" in the "Operating Instructions".

Setting Up the Printer Driver and Canceling a Print Job

Accessing the printer properties

Limitation

☐ Changing the setting of the printer requires Manage Printers permission. Members of the Administrators and Power Users groups have Manage Printers permission by default. When you set up options, log on using an account that has Manage Printers permission.

For information, see the descriptions of Windows NT 4.0 in "Accessing the Printer Properties" in the "Operating Instructions".

In that procedure, substitute the following.

- [Document Defaults] ⇒ [Printing Preferences...]
- Default Document Properties ⇒ Printing Preferences Properties.

Canceling a print job

For information, see the descriptions of Windows NT 4.0 in "Canceling a Print Job" in the "Operating Instructions".

Printing in a Network Environment

For information, see the descriptions of Windows NT 4.0 in the manual that comes with this machine.

#Important

☐ The procedures written in this manual assume that you are a network administrator. If you aren't, be sure to consult your network administrator before configuration.

TCP/IP configuration

Follow these steps to configure a Windows 2000 computer to use the TCP/IP protocol.

- Click [Start] on the task bar, point to [Settings], and then click [Network and Dial-up Connections].
- 2 Click [Local Area Connection]. On the [File] menu, click [Properties].
- Confirm that "Internet Protocol (TCP/IP)" is selected in the [Components checked are used by this connection:] box on the [General] tab.

Note

- ☐ If the check box of TCP/IP protocol is not selected, select it.
- ☐ If the TCP/IP protocol is not installed, click **[Install]** on the **[General]** tab and install it. For more information about installing the TCP/IP protocol, see Windows 2000 Help.
- Configure the TCP/IP protocols with the appropriate IP address, subnet mask and other settings.

Confirm with the network administrator that the settings are correct.

NetBEUI configuration

Follow these steps to configure a Windows 2000 computer to use the NetBEUI protocol.

- Click [Start] on the task bar, point to [Settings], and then click [Network and Dial-up Connections].
- 2 Click [Local Area Connection]. On the [File] menu, click [Properties].
- Confirm that "NetBEUI Protocol" is selected in the [Components checked are used by this connection:] box on the [General] tab.

Note

 $\hfill \square$ If the check box of the NetBEUI protocol is not selected, select it.

☐ If the NetBEUI protocol is not installed, click [Install] on the [General] tab and install it. For more information about installing the NetBEUI protocol, see Windows 2000 Help.

NetWare configuration

Setting up a client computer

This section describes how to set up a client computer when you use a Net-Ware print server.

In the operating manual, read each functional element as that of Windows 2000.

For information, see the descriptions of Windows NT 4.0 in "Setting up a Client Computer" in the manual that comes with this machine.

In that procedure, substitute the following.

• **1** [Network Neighborhood] ⇒ [My Network Places].

Standard TCP/IP port configuration

Standard TCP/IP is a standard port of Windows 2000 to enable Peer-to-Peer printing in a network environment.

For more information about Standard TCP/IP settings, see Windows 2000 Help.

LPR port configuration

For information about Configuring LPR Port Printing, see Windows 2000 Help.

Macintosh Configuration

Installing the PostScript Printer Driver

For information, see the descriptions of Macintosh in "Installing the PostScript Printer Driver" in the "Operating Instructions".

In the operating manual, substitute the following steps.

Note

☐ It is not necessary to copy the "PrintingLib" file from the "Extensions" folder in the "System Folder" to your desktop before installing the PostScript printer driver.

Setting Up the PPD File and Options

For information, see the descriptions of Macintosh in "Setting up the PPD File" and "Setting Up Options" in the "Operating Instructions".

Uninstalling the Printer Driver and Software

For information, see the descriptions of Macintosh in "Unistalling the PostScript Printer Driver" in the "Operating Instructions".

Setting Up the Printer Driver and Canceling a Print Job

Accessing the printer properties

For information, see the descriptions of Macintosh in "Accessing the Printer Properties" in the "Operating Instructions".

Canceling a print job

For information, see the descriptions of Macintosh in "Canceling a Print Job" in the "Operating Instructions".

Printing in a Network Environment

For information, see the descriptions of Macintosh in the manual that comes with this machine.

∰Important

☐ The procedures written in this manual assume that you are a network administrator. If you are not, be sure to consult your network administrator before configuration.

Changing the zone

It may be necessary to change the zone configuration.

Use applications such as **Apple Printer Utility** or **LaserWriter Utility** to change the zone configuration in the Macintosh EtherTalk environment. These utilities are distributed by Apple Computer, Inc.

Follow these steps to use the Apple Printer Utility.

- ① Insert the CD-ROM into the CD-ROM drive.
- ② Copy the "Zone Name.ps" file in the "Zone Name" folder to the hard disk.
- ③ Open the copied "Zone Name ps" file using a text editor, and change "New-Zone", which is in the second line from the bottom, to the name of the new zone.

%!PS-Adobe2.0 %%

Title: Changing Zone (EtherNet only)

%%CreationDate: Tue Dec 16 1997

%%EndComments

true 0 startjob not {ERROR}if

(%EtherTalk%) << /EtherTalkZone (**NewZone**) >> setdevparams

%%EOF

- Save "Zone name.ps".
- ⑤ Run the Apple Printer Utility, and select the printer for which the new zone name is to be used.
- Select [Send PostScript File] in the [Utilities] menu, and send "Zone name.ps" to the printer.

Trademarks

Microsoft[®], Windows[®], Windows NT[®] are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

PostScript[®] and Acrobat[®] are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

PCL® is a registered trademark of Hewlett-Packard Company.

Other product names used herein are for identification purposes only and might be trademarks of their respective companies. We disclaim any and all rights in those marks.

The proper names of the Windows 2000 operating system are as follows:

- Microsoft®Windows®2000 Professional.
- Microsoft®Windows®2000 Server.
- Microsoft®Windows®2000 Advanced Server.

Copyright © 2000 EE GB Gxxxxxx