2555
5502
LD055
Aficio 1055

Operating Instructions Copy Reference



- 1 Basics
- 2 Copying
- 3 Document Server
- 4 Connect Copy (Option)
- 5 Troubleshooting
- 6 User Tools (Copy/Document Server Features)
- 7 REMARKS
- 8 Specifications

Introduction

This manual describes detailed instructions on the operation and notes about the use of this machine. To get maximum versatility from this machine all operators are requested to read this manual carefully and follow the instructions. Please keep this manual in a handy place near the machine.

Please read the Safety Information before using this machine. It contains important information related to USER SAFETY and PREVENTING EQUIPMENT PROBLEMS.

Notes

Some illustrations in this manual might be slightly different from the machine.

Certain options might not be available in some countries. For details, please contact your local dealer.

Laser Safety:

CDRH Regulations

This equipment complies with requirements of 21 CFR subchapter J for class 1 laser products. This equipment contains two 5-milliwatt, 760-800 nanometer wavelength, GaAIAs laser diodes. This equipment does not emit hazardous light, since the beam is totally enclosed during all customer modes of operation and maintenance.

Warning:

Use of controls or adjustment or performance of procedures other than those specified in this manual might result in hazardous radiation exposure.

Two kinds of size notation are employed in this manual. With this machine refer to the inch version.

For good copy quality, the supplier recommends that you use genuine toner from the supplier.

The supplier shall not be responsible for any damage or expense that might result from the use of parts other than genuine parts from the supplier with your office products.

Power Source

120V, 60Hz, 20A or more

Please be sure to connect the power cord to a power source as above. For details about power source, see \Rightarrow p.315 "Power Connection".

TABLE OF CONTENTS

Safety Information	
Safety During Operation	1
Positions of Labels and Hallmarks for <u>↑</u> WARNING and <u>↑</u> CAUTION	3
How to Read this Manual	4
What You Can Do with This Machine (Copy Mode)	6
Guide To Components	
Output Tray Guide	
Options	11
Control Panel	
Display Panel	
Displays and Key Operations	
Function List Based on Options	
•	
1. Basics	
Turning On the Power	21
Turning On the Main Power	
Starting the Machine	
Shutting Down the Machine	
Turning Off the Main Power	
Originals	
Sizes and Weights of Recommended Originals	
Sizes Detectable by the Auto Paper Select	
Missing Image Area	
Copy Paper	
Recommended Paper Sizes and Types	
Non-recommended Paper	
Paper Storage	
Toner	
Handling Toner	
Toner Storage	
LICOG LODOR	

2. Copying

Basic Procedure	31
Setting Originals	33
Setting Originals on the Exposure Glass	34
Setting Originals in the Document Feeder	
Original Orientation	
Setting Special Originals	
Basic Functions	
Adjusting Copy Image Density	
Selecting Original Type Setting	
Selecting Copy Paper	
Auto Reduce/Enlarge	
Copying onto Tab Stock	
Sort/Stack/Staple	
Sort	
Stack	
Staple	
To Stop Scanning Temporarily	
When Memory Reaches 0%	
To Remove the Paper from the Staple Unit	
Punch	_
Copying from the Bypass Tray	
When Copying onto OHP Transparencies or Thick Paper	
Programs	75
Storing a Program	
Changing a Stored Program	
Deleting a Program	
Recalling a Program	
Job Preset	80
Editing Job Preset	
Deleting Job Preset	83
Other Functions	85
Energy Saver Mode	85
Interrupt Copy	
User Codes	
Auto Start	
Original Beeper	
Sample Copy	
Changing the Number of Sets	
Preset Reduce/Enlarge	
Shrink&Center mode	
Zoom	95
Size Magnification	97
Directional Magnification (%)	99
Directional Size Magnification (inch)	
Duplex/Combine	
Original Direction and Completed Copies	
Originals and Copy Direction	
Specifying Orientation of Bound Originals	

Duplex	110
1 Sided → 2 Sided	111
2 Sided \rightarrow 2 Sided	113
Combine	115
1 Sided 2 Pages → Combine 1 Side	
1 Sided 4 Pages → Combine 1 Side	
1 Sided 8 Pages → Combine 1 Side	120
1 Sided 4 Pages → Combine 2 Side	122
1 Sided 8 Pages → Combine 2 Side	123
1 Sided 16 Pages → Combine 2 Side	125
2 Sided 2 Pages → Combine 1 Side	128
2 Sided 4 Pages → Combine 1 Side	129
2 Sided 8 Pages → Combine 1 Side	131
2 Sided 4 Pages \rightarrow Combine 2 Side	132
2 Sided 8 Pages \rightarrow Combine 2 Side	
2 Sided 16 Pages → Combine 2 Side	136
Series/Book	138
Series Copies	139
Copying Book Originals	142
Cover/Slip Sheet	152
Front Cover	
Front/Back Covers	155
Designate	157
Chapters	160
Slip Sheets	163
Double Copies	
Image Repeat	
•	
Margin Adjustment	
Erase	
Border Erase	
Center Erase	
Center/Border Erase	
Centering	182
Stamp	184
Background Numbering	184
Preset Stamp	186
User Stamp	
Date Stamp	
Page Numbering	201
Combination Chart	209

3. Document Server

Overview	211
Document Server Features	
Features and Benefits	212
On Demand Printing	
File Merge Printing	213
Scanning Originals	214
Printing Saved Documents	218
Sample Printing	
Print First Page	220
To Search by File Name	221
Deleting Saved Documents	222
4. Connect Copy (Option)	
What is Connect Copy?	225
How Connect Copy Works	
Connectable Copier	
Functions Not Available with Connect Copy	
Interrupt Functions	
Before You Start	
Connect Copy Display Panel	
Using Connect Copy	
Exiting Connect Copy Mode	
Printing Saved Documents with Connect Copy	
Relationship Between Master Unit and Sub-Unit System Settings	242
Relationship Between Master Unit	045
and Sub-Unit Copy/Document Server Features	245
5. Troubleshooting	
If Your Machine Does Not Operate as You Want	249
General	
Document Server	
Display	
If Connect Copy Is Cleared	
If You Cannot Exit Connect Copy	
If You Cannot Make Clear Copies	
If You Cannot Make Copies As You Want	
General Adjust Image	
Combine	
Duplex	
Stamp	
When Memory Is Full	
Loading Paper	
Loading Paper in Tray 1 (Tandem Tray)	
Loading Paper in Tray 2 or 3	265
Loading Paper in the Large Capacity Tray	266

La Changing the Toner Bottle	268
% Clearing Misfeeds	270
Changing the Paper Size	278
Changing the Paper Size in Tray 2	
🛓 Adding Staples	
50-Sheet Finisher	
♣ Removing Jammed Staples	
50-Sheet Finisher	
### Removing Punch Waste	
6. User Tools (Copy/Document Server Features)	
Accessing the User Tools (Copy/Document Server Features) Exiting From the User Tools	
User Tools Menu (Copy/Document Server Features)	
Settings You Can Change with the User Tools	
General Features ¹ / ₃	
General Features ² / ₃	
General Features $^3/_3$	
Reproduction Ratio ¹ / ₂	
Reproduction Ratio ² / ₂	
Page Format ¹ / ₂	
Page Format ² / ₂	
Stamp SettingInput/Output	
Count Manager	
7. REMARKS	
Do's And Don'ts	313
Where to Put Your Machine	314
Machine Environment	314
Moving	
Power Connection	
Access to the Machine	
Maintaining Your Machine	
Cleaning the Exposure GlassCleaning the Document Feeder	
Oleaning the Document reduct	

8. Specifications

Mainframe	319
Document Feeder	322
50-Sheet Finisher (Option)	323
Punch Kit (Option)	325
Output Tray (Option)	326
Large Capacity Tray (LCT) (Option)	327
Copy Connector Cable (Option)	328
INDEX	329

Safety Information

When using this machine, the following safety precautions should always be followed.

Safety During Operation

In this manual, the following important symbols are used:

⚠ WARNING:

Indicates a potentially hazardous situation which, if instructions are not followed, could result in death or serious injury.

A CAUTION:

Indicates a potentially hazardous situation which, if instructions are not followed, may result in minor or moderate injury or damage to property.

MARNING:


- Connect the power cord directly into a wall outlet and never use an extension cord.
- Disconnect the power plug (by pulling the plug, not the cable) if the power cable or plug becomes frayed or otherwise damaged.
- To avoid hazardous electric shock or laser radiation exposure, do not remove any covers or screws other than those specified in this manual.
- Turn off the power and disconnect the power plug (by pulling the plug, not the cable) if any of the following occurs:
 - You spill something into the machine.
 - You suspect that your machine needs service or repair.
 - The external housing of your machine has been damaged.
- Do not incinerate spilled toner or used toner. Toner dust might ignite when exposed to an open flame.
- Disposal can take place at our authorized dealer.
- Dispose of the used toner bottle in accordance with the local regulations.
- Do not remove the toner bottle, fuser unit, duplex unit and paper tray all at once. The machine might fall and cause injury. Make sure to first return each component back to its original position before checking other components.

A CAUTION:

- Protect the machine from dampness or wet weather, such as rain and snow.
- Unplug the power cord from the wall outlet before you move the machine.
 While moving the machine, you should take care that the power cord will not be damaged under the machine.
- When you disconnect the power plug from the wall outlet, always pull the plug (not the cable).
- Do not allow paper clips, staples, or other small metallic objects to fall inside the machine.
- Keep toner (used or unused) and toner bottle out of the reach of children.
- For environmental reasons, do not dispose of the machine or expended supply waste at household waste collection points. Disposal can take place at an authorized dealer.
- The inside of the machine could be very hot. Do not touch the parts with a label indicating the "hot surface". Otherwise, an injury might occur.
- Our products are engineered to meet high standards of quality and functionality, and we recommend that you use only the expendable supplies available at an authorized dealer.

Positions of Labels and Hallmarks for MARNING and MCAUTION

This machine has labels and hallmarks for <u>MARNING</u>, <u>MCAUTION</u> at the positions shown below. For safety, please follow the instructions and handle the machine as indicated.

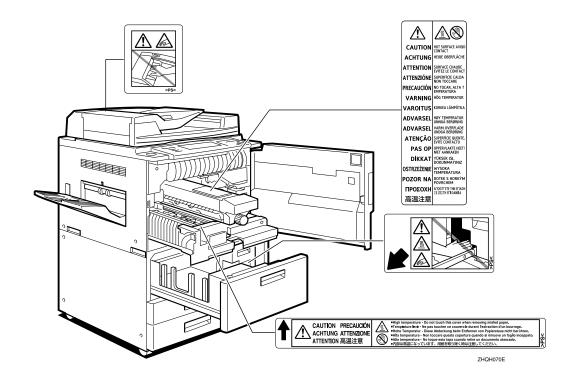

How to Read this Manual

Symbols

In this manual, the following symbols are used:

MARNING:

This symbol indicates a potentially hazardous situation that might result in death or serious injury when you misuse the machine without following the instructions under this symbol. Be sure to read the instructions, all of which are included in the Safety Information section.

A CAUTION:

This symbol indicates a potentially hazardous situation that might result in minor or moderate injury or property damage that does not involve personal injury when you misuse the machine without following the instructions under this symbol. Be sure to read the instructions, all of which are included in the Safety Information section.

• WARNINGS and CAUTIONS are notes for your safety.

∰Important

If this instruction is not followed, paper might be misfeed, originals might be damaged, or data might be lost. Be sure to read this.

Preparation

This symbol indicates the prior knowledge or preparations required before operating.

Note

This symbol indicates precautions for operation or actions to take after misoperation.

Limitation

This symbol indicates numerical limits, functions that cannot be used together, or conditions in which a particular function cannot be used.

This symbol indicates a reference.

[]


Keys that appear on the machine's display panel.

Keys built into the machine's control panel.


Notice

- B4 JIS □□, B5 JIS □□, B6 JIS□ are referred as B4 □□, B5 □□, B6□ in this manual.
- The image of the display panel may be different depending on the installed option.

What You Can Do with This Machine (Copy Mode)

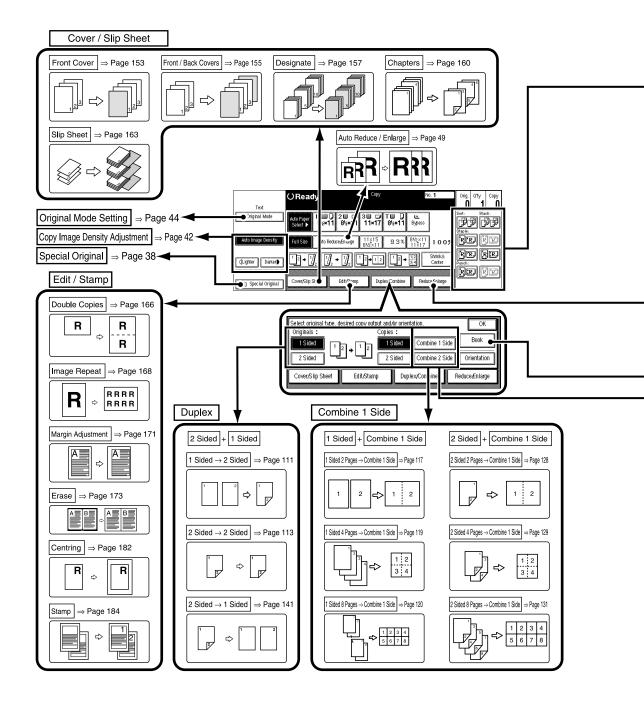


- *1 Optional finisher is required.
- *2 Optional finisher and punch kit are required.

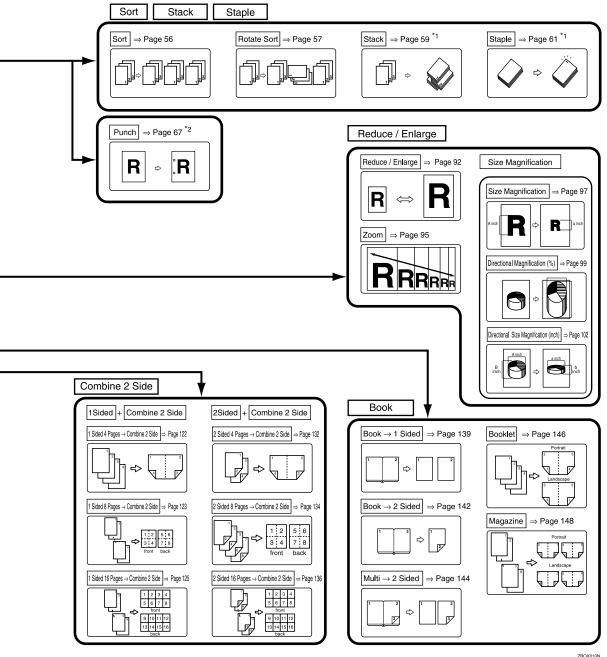

ZBQX010N

Guide To Components

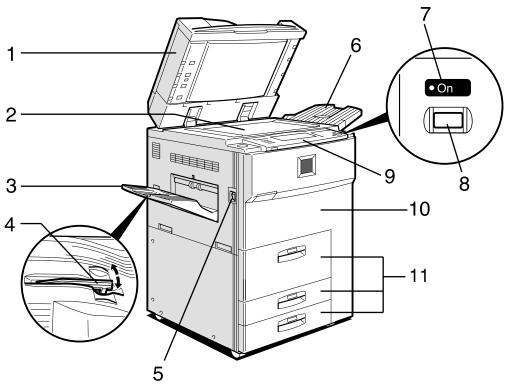

ZHQH020N

1. Document Feeder (ADF)

The document feeder automatically feeds a stack of originals one by one.

2. Exposure glass

Place originals here face down for copying.

3. Output tray

Copied paper is delivered here.

4. Output tray guide

This guide prevents copied OHP transparencies and translucent paper from being curled when delivered.

5. Main power switch

If the machine does not operate after turning on the operation switch, check if the main power switch is turned on. If it is off, turn it on.

6. ADF external tray

When copying one-sided originals, the originals are delivered here.

7. On indicator

This indicator goes on when the operation switch is turned on, and goes off when the switch is turned off.

8. Operation switch

Press this switch to turn the power on (the **On** indicator goes on). To turn the power off, press this switch again (the **On** indicator goes off).

9. Control panel

See \Rightarrow p.12 "Control Panel".


10. Front cover

Open to access the inside of the machine.

11. Paper tray

Set paper here.

Tray 1 is a tandem tray where the paper on the left side automatically moves to the right side when the paper on the right side has run out.

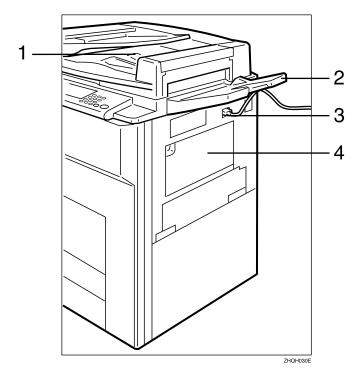

1. ADF tray

When copying two-sided originals, the originals are delivered here.

Note

☐ Even when copying one-sided originals, you can select the ADF tray.

2. ADF external tray

When copying one-sided originals, the originals are delivered here.

3. Connect Copy port


Attach the optional Connect Copy cable here.

∰Important

- ☐ Do not connect any other equipment to the Connect Copy port.
- ☐ Be sure to turn off the main power switch on both the master unit and sub-unit before you disconnect the Connect Copy cable. Unplugging the cable while power is on could damage the machines.

4. Bypass tray

Use to copy onto OHP transparencies, adhesive labels, translucent paper, post-cards, and non-standard size paper.

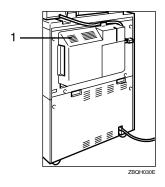


1. Ventilation hole

Prevents overheating. Do not obstruct the ventilation hole by placing or leaning an object near it. If the machine overheats, a fault might occur.


Output Tray Guide

When copying onto OHP transparencies and translucent paper, raise the guide. This prevents copies from being curled when delivered.


♦ To copy onto normal paper and thick paper Pinch the right end of the guide, and then lower it until it clicks into place.

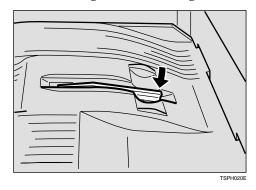

♦ To copy onto OHP transparencies and translucent paper Raise the right end of the guide until it clicks.

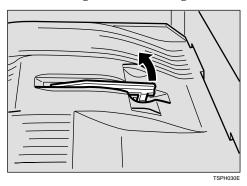

Options

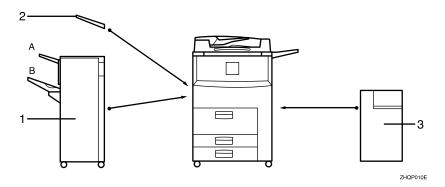

1. 50-Sheet Finisher

Sorts, stacks, and staples copies. You can also punch copies. (The Punch function is optional.)

- A: Finisher proof tray
- B: Finisher shift tray

2. Output tray (Can be installed when the finisher is not installed.)

Copied paper is delivered here.


3. Large Capacity Tray (LCT)

Holds 3,500 sheets of paper.

Other options:

- Punch kit
- Copy Connector kit
- Tab sheet tray
- $8^1/2$ " × 14" pap er size tray (inch version only)

Control Panel

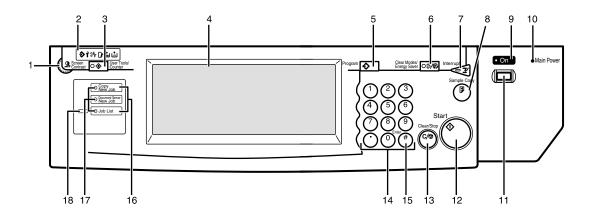

ZBQS040N

1. Screen Contrast knob

Adjusts the brightness of the display panel.

2. Indicators

Show errors and machine status.

❖: Data In indicator

: Service Call indicator

%: Misfeed indicator.

See ⇒ p.270 "**%** Clearing Misfeeds"

☐: Open Cover indicator

: Add Staple indicator.

See ⇒ p.281 " Adding Staples"

🛓: Add Toner indicator.

See \Rightarrow p.268 " Changing the Toner Bottle"

3. [User Tools/Counter] key

User Tools
 Press to change the default settings and conditions to meet your requirements.

Counter
 Press to check or print the total number of copies made.

See \Rightarrow p.287 "User Tools (Copy/Document Server Features)".

4. Display panel

Shows operation status, error messages, and function menus. See \Rightarrow p.14 "Display Panel".

5. [Program] key

Press to select the program mode. See \Rightarrow p.75 "Programs".

6. [Clear Modes/Energy Saver] key

- Clear Modes
 Press to clear any previously entered copy job settings.
- Energy Saver Press to switch to and from Energy Saver mode. See ⇒ p.85 "Energy Saver Mode".

7. [Interrupt] key

Press to make interrupt copies during a copy run. See \Rightarrow p.86 "Interrupt Copy".

8. [Sample Copy] key

Use this key to make a single sample copy before starting a long copy run. By checking the sample copy and making any necessary changes to the image quality settings before you make multiple copies, you can save time and paper. See ⇒ p.89 "Sample Copy".

9. On indicator

This indicator goes on when the operation switch is turned on, and goes off when the switch is turned off.

10. Main power indicator

This indicator goes on when the main power switch is turned on, and goes off when the switch is turned off.

11. Operation switch

Press this switch to turn the power on (the **On** indicator goes on). To turn the power off, press this switch again (the **On** indicator goes off).

12. [Start] key

Press to start copying. Use to set Auto Start. See \Rightarrow p.88 "Auto Start".

13. [Clear/Stop] key

- Clear Press to delete a number entered.
- Stop Press to stop a copy job in progress.

14. Number keys

Use to enter the desired number of copies and data for selected modes.

15. [#] key

Press to enter a value.

16. Function keys

Press the appropriate key to choose any of the following functions:

- Copy
- Document Server
- Job List

17. Function indicators

These indicators go on when the function is selected.

18. Function Status indicator

These show the status of the above functions:

- Green: the function is active.
- Red: the function has been interrupted.

Display Panel

The display panel shows the status of the machine, error messages and function menus.

#Important

☐ Do not apply a strong shock or force of about 30 N (about 3 kgf) or more to the display panel. Otherwise, the display might be damaged.

Note


- ☐ The function items displayed serve as selector keys. You can select or specify an item by lightly pressing it.
- ☐ When you select or specify an item on the display panel, it is highlighted like [1015].
- ☐ Keys appearing as OK cannot be used.

Displays and Key Operations

Mote

☐ The following illustrations are examples for the machine with the optional 50-sheet finisher and large capacity tray (LCT) installed.

Initial copy display

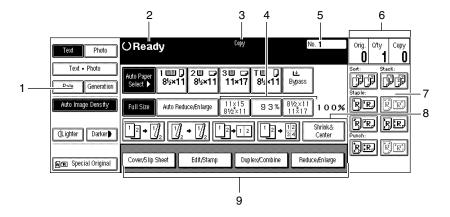


ZBQS050N

- 1. Original mode, Image Density and Special Original mode.
- 2. Operational status or messages.
- **3.** The currently selected function (Copy, Document Server).
- 4. You can register up to three frequently used reduce/enlarge ratios other than the fixed reduce/enlarge ratios. See "Shortcut R/E" in \Rightarrow p.297 "Reproduction Ratio $^{1}/_{2}$ ".
- 5. Job ID of the scanned document.
- 6. The number of originals scanned into memory, number of copies set, and number of copies made.
- 7. Sort, Stack, Staple or Punch mode.

- 8. Displays the contents of the Shortcut keys. You can register frequently used functions in these keys. See "Shortcut Keys" in \Rightarrow p.296 "General Features $^3/_3$ ".
- 9. Shows the available functions. Press a function name to display its menu. For example, press the [Reduce/Enlarge] key to bring up the Reduce/Enlarge menu.


Function menu

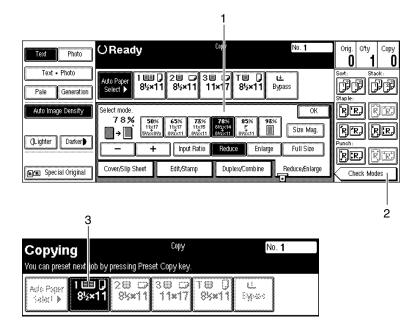

ZBQS060N

- 1. Items you can select.
- 2. The [Check Modes] key appears when you have selected function(s). Press this key to view the functions currently selected.
- 3. The key highlighted with the lower line underlined indicates the tray feeding the paper.

❖ Document Server initial display

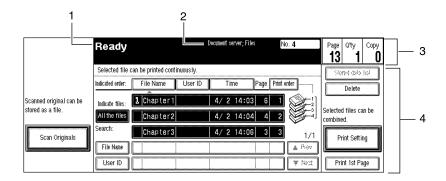

ZBQS070N

- 1. Operational status and messages.
- 2. Display titles.

- 3. The number of originals scanned into memory, number of copies set, and number of copies made.
- 4. Operational keys.

Function List Based on Options

The functions that are available to you depend on your machine configuration and which options you have. See the table below.

O...Available

×...Not available

			Finisher tion)	Place o	Connect Copy (Option)	
		not installed	installed	on the exposure glass	in the document feeder	(Option)
Batch (SAD	F)	0	0		0	0
Mixed Sizes		0	0		О	O
Thin		0	0		О	0
Adjusting In	nage Density	0	0	0	О	О
Selecting O	riginal Type	0	0	0	О	О
Selecting Co	Selecting Copy Paper		0	0	О	О
Auto Reduc	Auto Reduce/Enlarge		0	0	О	О
Sort		0	0	0	O	O
Rotate Sort	Rotate Sort		O *1	0	О	О
Stack		×	0	0	О	О
Punch		×	0	0	О	O
Staple		×	0	0	О	О
Copying fro	m the Bypass Tray	0	0	0	O	×*2
Program		0	0	0	O	O *3
Job Preset		0	0	0	О	×
Reduce/En	arge	0	0	0	O	O
Zoom		0	0	0	O	О
Size Magnification		0	0	0	O	O
Directional Magnification (%)		0	0	0	О	О
Directional Size Magnification (mm)		0	0	0	0	О
Duplex	1 Sided → 2 Sided	0	0	0	O	O
	2 Sided → 2 Sided	0	0	0	O	O

			Finisher tion)	Place o	riginals	Connect Copy (Option)
		not installed	installed	on the exposure glass	in the document feeder	(Option)
Combine	1 Sided 2 pages → 1 Side	0	0	0	0	0
	1 Sided 4 pages → 1 Side	0	0	0	0	0
	1 Sided 8 pages → 1 Side	0	0	0	0	0
	1 Sided 4 pages → 2 Side	0	0	0	0	0
	1 Sided 8 pages → 2 Side	0	0	0	0	0
	1 Sided 16 pages → 2 Side	0	0	0	0	0
	2 Sided 2 pages → 1 Side	0	0	0	0	0
	2 Sided 4 pages → 1 Side	0	0	0	0	0
	2 Sided 8 pages → 1 Side	0	0	0	0	О
	2 Sided 4 pages → 2 Side	0	0	0	0	0
	2 Sided 8 pages → 2 Side	0	0	0	О	О
	2 Sided 16 pages → 2 Side	0	0	0	0	0
Book	Book → 1 Sided	0	0	0	0	0
	2 Sided → 1 Sided	0	0	0	0	0
	1 Sided → 2 Sided	0	0	0	0	0
	2 Sided → 2 Sided	0	0	0	0	0
	2 Sided → 2 Sided	0	0	0	0	0
	Booklet	0	0	0	0	0
	Magazine	0	0	0	0	0
Cover/Desi	gnate/Chapters	0	0	0	0	0
Slip Sheet		0	0	0	0	0
Double		0	О	0	О	0

			Finisher tion)	Place o	Connect Copy	
		not installed	installed	on the exposure glass	in the document feeder	(Option)
Repeat		0	0	0 0		О
Margin Adjust		0	0	0	О	О
Erase		0	0	0	О	О
Centering		0	0	0	О	О
Stamp Background Numbering		0	0	0	0	0
Preset Stamp		0	0	0	О	О
User Stamp Date Stamp		0	0	0	0	O *3
		0	0	0	O	O
	Page Numbering	О	0	0	О	O

You can use this function when "Rotate Sort" is selected in "Select Stack or Rotate sort" of the User Tools.
 You can set only cover sheets and slip sheets.
 The program stored in the master unit is recalled. However, functions not available in Connect Copy mode or in the sub-unit are canceled.

Turning On the Power

To turn the machine on, press the operation switch.

Note

☐ This machine automatically enters Energy Saver mode or turns itself off if you do not use the machine for a while. See "Auto Off" in \Rightarrow p.31 "Basic Procedure" and "Auto Off Timer" in the System Settings manual.

Power switches


This machine has two power switches.

- Operation switch (right side of the control panel)
 Press this switch to activate the machine. When the machine has warmed up, you can make copies.
- Main power switch (left side of the machine)
 When the machine is not to be used for an extended period of time, turn off the main power switch.

Turning On the Main Power

- **1** Make sure that the power cord is firmly plugged into the wall outlet.
- **2** Turn on the main power switch.


The main power indicator on the control panel goes on.

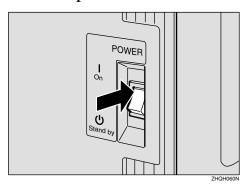

Starting the Machine

1 Press the operation switch to make the On indicator go on.

The display panel will come on.

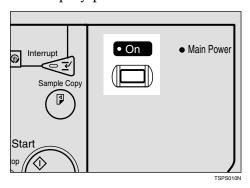

Note

- ☐ If the power is not turned on when the operation switch is pressed, check if the main power switch is on. If off, turn it on.
- \square During the warm-up period (less than 330 seconds), you can use the Auto Start function. See \Rightarrow p.88 "Auto Start".
- ☐ You can set up a copy job and press the **[Start]** key while the "Select modes and press the start key. Scanning originals can be started." message is displayed.
- \square When "Input user code, then press # ." is displayed, enter your user code. See \Rightarrow p.87 "User Codes".

Shutting Down the Machine

1 Press the operation switch to make the On indicator go off.

Turning Off the Main Power

1 Turn off the main power switch.

The main power indicator of the control panel goes off.

Originals

Sizes and Weights of Recommended Originals

Metric version

Where Original Is Set	Original Size	Original Weight
Exposure glass	Up to A3	
Document feeder	1-sided originals: A3 - A5 -	52 – 157 g/m ^{2 *2}
	2-sided originals: A3□ – A5□□	52 – 128 g/m ²
	Thin originals: A3 - B6	41 – 157 g/m ²

^{*1} Except B6□

Inch version

Where Original Is Set	Original Size	Original Weight
Exposure glass	Up to 11" × 17"	
Document feeder	1-sided originals: $11" \times 17" \square - 5^1/_2" \times 8^1/_2" \square$	14 – 42 lb. Bond *1
	2-sided originals: $11" \times 17" \square - 5^1/2" \times 8^1/2" \square \square$	14 – 34 lb. Bond
	Thin originals: $11" \times 17" \square - 5^1/_2" \times 8^1/_2" \square \square$	11 – 42 lb. Bond

^{*1} $5^{1}/_{2}$ " $\times 8^{1}/_{2}$ " \square , 14 - 34 lb. Bond

Note

 \square The number of originals that can be set in the document feeder is about 100.

Non-recommended originals for the document feeder

Setting the following types of originals in the document feeder can cause paper misfeeds or damage to the originals. Set these originals on the exposure glass instead.

- Originals other than those specified in ⇒ p.23 "Sizes and Weights of Recommended Originals"
- Stapled or clipped originals
- Perforated or torn originals
- Curled, folded, or creased originals

^{*2} A5 \Box , B6 \Box \Box , 52 – 128 g/m²

- Pasted originals
- Originals with any kind of coating, such as thermal fax paper, art paper, aluminum foil, carbon paper, or conductive paper
- Originals with perforated lines
- Originals with indexes, tags, or other projecting parts
- Sticky originals such as translucent paper
- Thin originals that have low stiffness
- Thick originals such as postcards
- Originals of inappropriate weight
- Bound originals such as books
- Transparent originals such as OHP transparencies or translucent paper

Sizes Detectable by the Auto Paper Select

Metric version

Size Place of origi- nal	A3	B4 □	A4 } 	B5	A5	A5	B6	11" × 17" □	11" × 15" □	8 ¹ / ₂ " × 14" □	8 ¹ / ₂ " × 11" □□	5 ¹ / ₂ " × 8 ¹ / ₂ " □□	8 ¹ / ₂ " × 13" □ *1	8K □	16 K D
Exposure glass	О	О	0	О	0	×	×	×	×	×	×	×	0	×	×
Docu- ment feeder	О	О	О	О	О	О	О	0	×	×	0	×	0	О	0

You can select from $8^1/_2$ " × 13", $8^1/_4$ " × 13" and 8" × 13" with the User Tools (System Settings). See "<F/F4>Size Setting" in the System Settings manual.

Inch version

Size Place of origi- nal	A3	B4 □	A4 } 	B5	A5	B6	11" × 17" □	11" × 15" □	10" × 14" □	8" × 10" □	8 ¹ / ₂ " × 14" □	8 ¹ / ₂ " × 11" □□	5 ¹ / ₂ " × 8 ¹ / ₂ " □	5 ¹ / ₂ " × 8 ¹ / ₂ "	8 ¹ / ₂ " × 13" □ *1
Expo- sure glass	×	×	×	×	×	×	0	×	×	×	0	0	0	×	×
Docu- ment feeder	×	×	О	×	×	×	0	×	О	О	0	0	0	0	0

You can select from $8^1/2$ " × 13", $8^1/4$ " × 13" and 8" × 13" with the User Tools (System Settings). See "<F/F4>Size Setting" in the System Settings manual.


Sizes difficult to detect

It is difficult for the machine to detect the sizes of the following originals, so select the paper size manually.


- Originals with indexes, tags, or other projecting parts
- Transparent originals such as OHP transparencies or translucent paper
- Dark originals with many letters and drawings
- Originals which partially contain a solid image
- · Originals which have solid images at their edges

Missing Image Area

Exposure glass

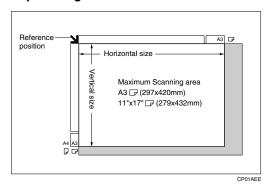

Document feeder

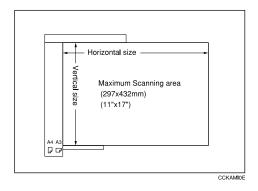

Limitation

☐ Even if you correctly set originals in the document feeder or on the exposure glass, 3 mm (0.1") margins on all four sides might not be copied.

Copy Paper

Recommended Paper Sizes and Types

The following limitations apply to each tray:

	Metric version	Inch version	Paper weight	Paper capacity
Tray 1 *1	A4 □, 8 ¹ / ₂ "×11" □		52 – 128 g/m², 14 – 34 lb. Bond *6	1550 + 1550 sheets
Tray 2	A3□, (B4□), A4□□, (B5□□), A5□□, (11"×17"□), (8¹/2"×14"□), (8¹/2"× 13"□), 8¹/2"×13"□, (8"×10¹/2"□), (8"× 10"□), (8"×13"□), 8¹/4"×13"□, (10"× 14"□), (11"×15"□), (5¹/2"×8¹/2"□□) (8K□*8), (16K□□*9), (tab stocks) ■ Note □ You have to specify the paper size with the User Tools (System Settings). See "Paper Size Setting" in the System Settings manual. □ When selecting paper sizes in parentheses, set the paper size selector knob to the ★ mark on the left. See ⇒ p.278 "Changing the Paper Size".	(A3□), (B4□), (A4□□), (B5□□), (A5□□), 11"×17"□, 8¹/₂"×14"□, 8¹/₂"× 11"□□, (8¹/₂"× 13"□), 8"×10¹/₂"□, 8"×10"□, 8"×13"□), 10"× 14"□, (11"×15"□), 5¹/₂"×8¹/₂"□□, (tab stocks) Note You have to specify the paper size with the User Tools (System Settings). See "Paper Size Setting" in the System Settings manual. When selecting paper sizes in parentheses, set the paper size selector knob to the ★ mark on the left. See ⇒ p.278 "Changing the Paper Size".	52 – 128 g/m², 14 – 34 lb. Bond *6	550 sheets

		Metric version	Inch version	Paper weight	Paper capacity
Tray 3 *1		A3D, B4D, A4DD, B5DD, A5DD, 11" ×17"D, 81/2"×14"D, 81/2"×11"DD, 81/2" ×13"D, 8"×101/2"D, 8"×10"D, 8"×13"D, 81/4"×13"D, 10"× 14"D, 11"×15"D, 51/2"×81/2"DD	A3D, B4D, A4DD, B5DD, A5DD, 11" ×17"D, 81/2"×14"D, 81/2"×11"DD, 81/2" ×13"D, 8"×101/2"D, 8"×10"D, 8"×13"D, 81/4"×13"D, 10"× 14"D, 11"×15"D, 51/2"×81/2"DD	52 – 128 g/m², 14 – 34 lb. Bond *6	550 sheets
Large Cap (LCT) *1	pacity Tray	A4 [], B5 [], 8 ¹ / ₂ " × 11" []	A4 \(\bigc\), \(85 \) \(\bigc\), \(8^1/2'' \times \) 11" \(\bigc\), \(8^1/2'' \times 14'' \) \(\bigc\) \(*7 \)	64 – 105 g/m², 16 – 24 lb. Bond	3,500 sheets
Bypass tray *3 *4 *5	Standard size	A3D, B4D, A4DD, B5DD, A5DD, B6D, A6D, 11"× 17"D, 8 ¹ / ₂ "×14"D, 8 ¹ / ₂ "×11"DD, 8 ¹ / ₂ " ×13"D, 8"× 10 ¹ / ₂ "DD, 8"× 10"DD, 8"×13"D, 8 ¹ / ₄ "×13"D, 10"× 14"D, 11"×15"D, 5 ¹ / ₂ "×8 ¹ / ₂ "DD	A3D, B4D, A4DD, B5DD, A5DD, B6D, A6D, 11"× 17"D, 8 ¹ / ₂ "× 11"DD, 8 ¹ / ₂ "× 13"D, 8"× 10 ¹ / ₂ "DD, 8"× 10"DD, 8"×13"D, 8 ¹ / ₄ "×13"D, 10"× 14"D, 11"×15"D, 5 ¹ / ₂ "×8 ¹ / ₂ "DD	52 – 157 g/m², 14 lb. Bond – 90 lb. Index *6	50 sheets
	Non-stan- dard size *2	Vertical: 100 – 300 mm Horizontal: 140 – 432 mm Postcards, adhesive lab	Vertical: 4.0" – 11.7" Horizontal: 5.5" – 17.0"	52 – 157 g/m², 14 lb. Bond – 90 lb. Index *6	1 sheet
		OHP transparencies *4			

^{*1} The paper tray fence is fixed. If you wish to change the size of paper set in this tray, contact your service representative.

If you wish to copy onto non-standard size paper, set the paper in the bypass tray and specify the size. See \Rightarrow p.70 "Copying from the Bypass Tray".

*4 Always set one sheet at a time. See \Rightarrow p.70 "Copying from the Bypass Tray".

^{*3} If you wish to copy onto OHP transparencies or thick paper, select OHP or Thick Paper mode. See ⇒ p.73 "When Copying onto OHP Transparencies or Thick Paper".

^{*5} When setting copy paper, make sure that the stack height does not exceed the limit mark. The maximum number of sheets you can set at a time depends on the paper thickness and condition.

^{*6} If you wish to copy onto thick (105 g/m², 28 lb. Bond or heavier) paper, select Thick Paper mode. See "Special Paper Indication" and "Temperature Setting for Thick Paper" in the System Settings manual.

The optional $8^1/2'' \times 14''$ paper size tray is required to set this size of paper.

^{*8 8}K (Ba-kai) = $267 \times 390 \text{ mm}$

^{*9 16}K (Shi-Liu-kai) = $195 \times 267 \text{ mm}$

#Important

☐ If you use damp or curled paper, a misfeed might occur. In this case, try turning over the paper stack in the paper tray. If there is no improvement, change to copy paper with less curl.

Note

- \square When you use the bypass tray, be sure to set the copy paper direction to \square .
- ☐ Postcards should be fed from the bypass tray.
- □ If you load paper of the same size and in the same direction in two or more trays, the machine automatically shifts to another tray when the tray in use runs out of paper. This function is called "Auto Tray Switching". (If you put recycled paper, translucent paper, user color paper 1, or user color paper 2 in paper trays with "Special Paper Indication", this function is not available to these trays unless their settings are identical.) This saves interrupting a copy run to replenish paper even when you make a large number of copies. You can cancel this setting. See "Auto Paper Select" in ⇒ p.46 "Selecting Copy Paper", "Auto Tray Switching" and "Special Paper Indication" in the System Settings manual.
- ☐ If you select Thick Paper mode or Tab Stock mode, copying speed might be reduced.

Non-recommended Paper

A CAUTION:

 Do not use aluminum foil, carbon paper, or similar conductive paper to avoid a fire or machine failure.

∰Important

- ☐ Do not use any of the following kinds of paper or a fault might occur.
 - Thermal fax paper
 - Art paper
 - Aluminum foil
 - Carbon paper
 - Conductive paper
 - Colored OHP transparencies
 - Paper with perforated lines
 - Hemmed paper
- ☐ Do not use copy paper that has been already copied on. Otherwise, a paper misfeed might occur.

Note

- ☐ Do not use the following kinds of paper or a misfeed might occur.
 - Bent, folded, or creased paper
 - Torn paper
 - Slippery paper
 - Perforated paper
 - Rough paper
 - Thin paper that has low stiffness
 - Paper with much paper dust on its surface
- ☐ If you make a copy on rough grain paper, the copy image might be blurred.
- ☐ Do not use paper which has been copied or printed on.

Paper Storage

Mote

- ☐ When storing paper, the following precautions should always be followed:
 - Do not store paper where it will be exposed to direct sunlight.
 - Avoid storing paper in humid areas (humidity: 70% or less).
 - Store on a flat surface.
- ☐ Keep open reams of papers in the package, and store as you would unopened paper.
- ☐ Under high temperature and high humidity, or low temperature and low humidity conditions, store paper in a vinyl bag.

Toner

Handling Toner

riangle WARNING:

 Do not incinerate used toner or toner containers. Toner dust might ignite when exposed to an open flame. Dispose of used toner containers in accordance with local regulations.

⚠ CAUTION:

Keep toner (used or unused) and toner containers out of reach of children.

\triangle CAUTION:

 Our products are engineered to meet high standards of quality and functionality, and we recommend that you use only the expendable supplies available at an authorized dealer.

∰Important

 \square If you use toner other than the recommended type, a fault might occur.

Toner Storage

When storing toner, the following precautions should always be followed:

- Store toner containers in a cool, dry place free from direct sunlight.
- Store on a flat surface.
- Store toner containers laid down.

Used Toner




☐ Used toner cannot be re-used.

2. Copying


Basic Procedure

1 Make sure that the machine is in Copy mode.

If the machine is not in Copy mode, press the **[Copy/New Job]** key.

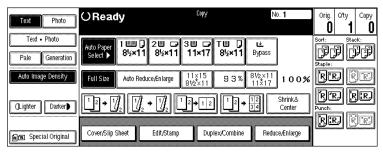

- When the machine is set for the user code, enter the user code with the number keys and then press the [#] key.
 - PReference
 ⇒ p.87 "User Codes".
- **3** Make sure that there are no previous settings remaining.
 - **𝚱** Note
 - ☐ To clear settings, press the [Clear Modes/Energy Saver] key.
- 4 Set your originals.
- **5** Set your desired settings.
- **6** Enter the number of copies required with the number keys.

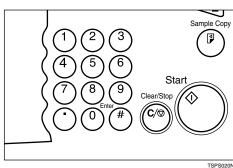

A	N	ote
N/P	IV	OLE

- ☐ The maximum copy quantity can be set between 1 and 999 (default: 999). See "Maximum Copy Quantity" in \Rightarrow p.295 "General Features $^2/_3$ ".
- ☐ To change the number entered, press the [Clear/Stop] key and enter the new number.

7 Press the [Start] key.

The machine starts copying.

Note

- ☐ When you set originals on the exposure glass, press the [#] key after all originals are scanned.
- ☐ Usually, when you set a single original on the exposure glass or in the document feeder, the copied paper is delivered face up. However, with some functions, copies will be delivered face down.
- ☐ You can choose to have copies delivered either face up or face down (except for copying through the bypass tray). See "Face-Up/Down Selection in Platen Mode" in ⇒ p.309 "Input/Output".
- ☐ To stop the machine during the multi-copy run, press the [Clear/Stop] key.
- ☐ To return the machine to the initial condition after copying, press the [Clear Modes/Energy Saver] key.

Auto Reset

The machine returns to its initial condition automatically when your job is finished, after a certain period of time. This function is called "Auto Reset".

Note

 \square You can change the Auto Reset time. See "Auto Reset Timer" in \Rightarrow p.292 "General Features $^1/_3$ ".

Auto Off

The machine turns itself off automatically after your job is finished, after a certain period of time. This function is called "Auto Off".

🔗 Note

☐ You can change the Auto Off time. See "Auto Off Timer" in the System Settings manual.


Setting Originals

Limitation

☐ Set originals after correction fluid and ink has completely dried. Not taking this precaution could mark the exposure glass and cause marks to be copied.

Ø Note

☐ Basically originals should be aligned to the rear left corner. However, some copy functions may produce different results depending on the direction of the originals. For details, see the explanations of each function.

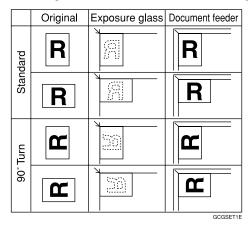


⇒ p.23 "Originals".

Setting Originals on the Exposure Glass

1 Lift the document feeder.

∰Important

- ☐ Do not open the document feeder with a force. Otherwise, the cover of the document feeder might open or be damaged.
- **𝚱** Note
- ☐ Be sure to open the document feeder by more than 30°. Otherwise the original size might not be detected correctly.
- 2 Set the original face down on the exposure glass. The original should be aligned to the rear left corner.

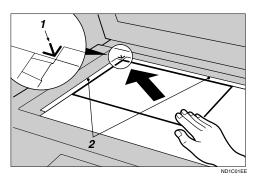

- 1: Reference mark
- 2: Scale
- Note
- $\hfill \square$ Start with the first page to be copied.
- **3** Lower the document feeder.

Setting Originals in the Document Feeder

𝚱 Note


- \square The last page should be on the bottom.
- ☐ Do not stack originals beyond the limit mark on the side fence of the document feeder.
- □ When copying thin originals $(40 52 \text{ g/m}^2, 11 14 \text{ lb. Bond})$, set one original in the document feeder at a time or place it on the exposure glass to avoid damage due to a multi-sheet feed (several pages fed together at the same time).
- ☐ The original might become dirty if it is written with a pencil or similar tools.
- ☐ Usually, one-sided originals are delivered to the ADF external tray, and two-sided originals to the ADF tray.

₽ Reference

Regarding originals that the document feeder can handle, see \Rightarrow p.23 "Originals".

1 Set the aligned originals face up into the document feeder.

Setting a stack of originals is completed when the bottom plate rises.

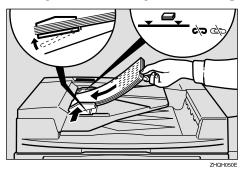

∰Important

☐ After the bottom plate of the document feeder rises, do not add or force in originals.

Note

- ☐ Straighten curls in the originals before setting them in the document feeder.
- ☐ To avoid a multi-sheet feed, shuffle the originals before setting them in the document feeder.
- \square You can set the timing for the bottom plate of the document feeder to rise. See "ARDF Original Table Rise Time" in \Rightarrow p.309 "Input/Output".

Original Orientation

You can set the original orientation separately in the following ways.

This function is useful for copying torn originals or large originals.


♦ Standard Orientation **R 2**

Select this function when the original direction is the same as the copy paper direction.

♦ 90° Turn 🖳

This function rotates the copy image by 90° . Use this function when you want to copy onto A3, B4, $11'' \times 17''$ paper.


7______

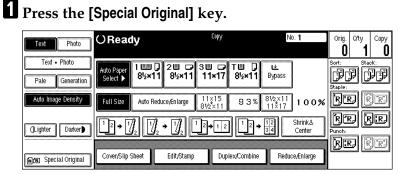

2 Select the original orientation.

Standard Orientation

● Make sure that the [RE] key is selected.

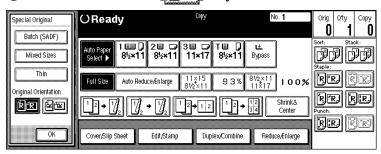


90° Turn

When you want to copy A3 \square , B4 \square or 11" \times 17" \square size originals, set your original in the landscape orientation and then press the \square key. The machine rotates the original image and you can make copies as you wish. This is useful for copying large originals with the Staple, Punch, Duplex, Combine or Stamp functions.


For example, if you want to copy A3 \square or 11" × 17" \square originals with for the Staple function configured as shown below:

Note

☐ It is recommended to use this function together with the Auto Paper Select or Preset Reduce/Enlarge function.

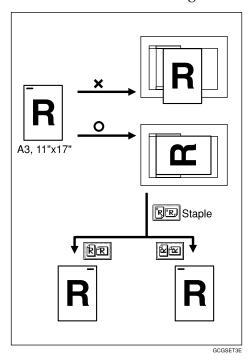

• Press the [key.

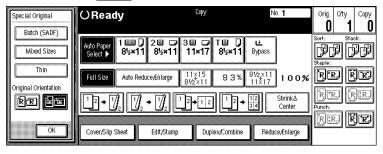

Press the [OK] key.

Setting Special Originals

Use this function when you want to use Batch (SADF), Mixed Sizes, Thin mode, or when you select the original orientation.

Batch (SADF) mode


Up to 100 standard originals can be set in the document feeder at a time. If there are more than 100 originals, set Batch (SADF) mode so that originals can be fed automatically without pressing the **[Start]** key each time they are set in the document feeder.

#Important


☐ When setting special originals such as translucent paper, set them one by one.

Note

- ☐ In Batch (SADF) mode, even when one original is set in the document feeder, the original is automatically fed each time it is set.
- 1 Press the [Special Original] key.

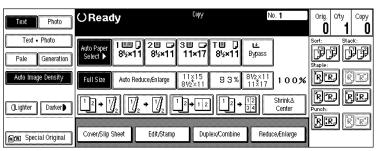

2 Press the [Batch (SADF)] key.

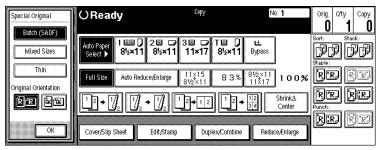


- Press the [OK] key.
- 4 Set your originals, then press the [Start] key.

The Auto Feed indicator of the document feeder goes on.

After all the previously set originals are fed, set the next originals while the Auto Feed indicator is on.

The second and subsequent originals can be fed automatically without pressing the **[Start]** key.

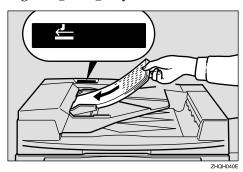

Note

- ☐ When the Sort, Combine or Duplex function has been set, press the [#] key after all originals are scanned.
- \square You can change the lighting-up time of the **Auto Feed** indicator. See "Batch (SADF) Auto Reset Time" in \Rightarrow p.309 "Input/Output".

Mixed Sizes mode

When originals of different sizes are set on the document feeder at a time, the machine automatically checks the size of the originals and makes copies.


Limitation

- ☐ When setting originals of different sizes on the document feeder and making copies without using Mixed Sizes mode, parts of the original image might not be copied.
- \square The weight of originals that can be set with this function is $52 81 \text{ g/m}^2$, 14 20 lb. Bond.
- $\hfill\Box$ The original sizes that can be set with this function are as follows:


Metric version	A3□, B4□, A4□□, B5□□
Inch version	$11" \times 17" \square$, $8^{1}/_{2}" \times 14" \square$, $8^{1}/_{2}" \times 11" \square$ \square , $5^{1}/_{2}" \times 8^{1}/_{2}" \square$

☐ For smaller originals, the copy image might be slanted since the originals might not be correctly aligned with the original guide.


1 Press the [Special Original] key.

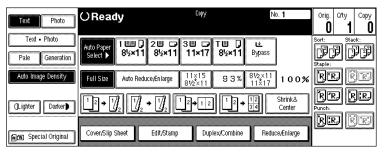

2 Press the [Mixed Sizes] key.

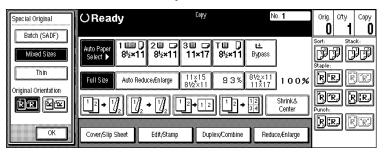

- Press the [OK] key.
- Align the rear and left edges of the originals as shown in the illustration.

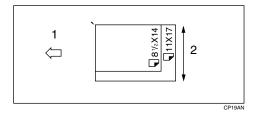

- 1: Set into the document feeder.
- 2: Vertical size

∰Important


- ☐ If the originals are of different vertical sizes, put the longer original on the bottom, otherwise the sizes might not be detected correctly.
- 5 Adjust the guide to the widest original size.
- **6** Set the aligned originals face up into the document feeder.

Thin mode


Use Thin mode if the scanned image is distorted at the edges when copying thin $(52 \text{ g/m}^2, 14 \text{ lb.} \text{ Bond or lighter})$ originals.

#Important

- ☐ Set to Thin mode when you place thin paper into the document feeder, otherwise your originals might be damaged.
- 1 Press the [Special Original] key.

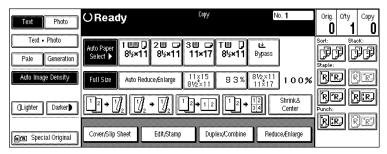

2 Press the [Thin] key.

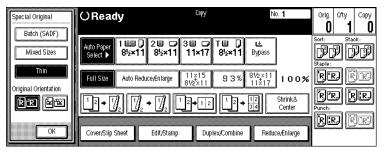

Press the [OK] key.

Basic Functions

The following basic functions are explained in this section.

Adjusting Copy Image Density

Auto and Manual Image Density

Selecting Original Type Setting

Text, Text. Photo, Photo, Pale, Generation Copy

Selecting Copy Paper

Auto Paper Select and Manual Paper Select

Auto Reduce/Enlarge

The machine can choose an appropriate reproduction ratio based on the paper and original sizes you select.

Ø Note

- ☐ You can select functions to be activated when Auto Reset is turned on, when Energy Saver is turned off, or after the machine is powered on. See \Rightarrow p.292 "General Features $^{1}/_{3}$ ".
- \square You can change default settings for basic functions. See \Rightarrow p.292 "Settings You Can Change with the User Tools".

Adjusting Copy Image Density

You can adjust the copy image density to match your originals.

There are three types in this function:

Auto Image Density

The machine automatically adjusts the image density.

Manual Image Density

If you require darker or lighter copies, adjust the image density yourself.

Combined Auto and Manual Image Density


Use when copying originals with a dirty background (such as newspapers). You can adjust the foreground density while leaving the background unchanged.

Note

- ☐ In Connect Copy mode, make adjustments to copy image density on the master unit.
 - The image density level set on the master unit will be used by both units. However, in order to produce similar images on both units, make sure that the "Original Mode Quality Level" settings are the same on each unit. If they are not the same, the finish of images may differ. See "Original Mode Quality Level" in ⇒ p.292 "General Features ¹/₃".
- **1** Select one of the Image Density modes.

Auto Image Density

● Make sure that the [Auto Image Density] key is selected.

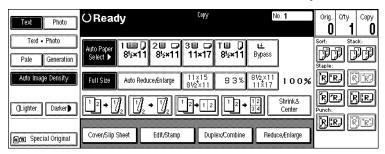


Note

- ☐ If the [Auto Image Density] key is not selected, press the [Auto Image Density] key.
- ☐ If you do not wish to set any other functions, press the **[Start]** key to start copying.

Manual Image Density

- Press the [Auto Image Density] key to cancel it.
- 2 Press the [Lighter] or [Darker] key to adjust the image density.

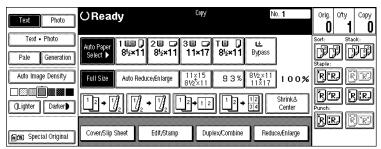


𝚱 Note

☐ If you do not wish to set any other functions, press the **[Start]** key to start copying.

Combined Auto and Manual Image Density

- Make sure that the [Auto Image Density] key is selected.
- 2 Press the [Lighter] or [Darker] key to adjust the density.

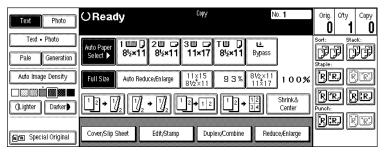



☐ If you do not wish to set any other functions, press the **[Start]** key to start copying.

Selecting Original Type Setting

Select one of the following types to match your originals:

◆ Text

Select this mode when your originals contain only text (no pictures).

◆ Text-Photo

Select Text·Photo when your originals contain photographs or pictures with text.

Photo

Delicate tones of photographs and pictures can be reproduced with this mode.

Pale

Select this mode for originals that have lighter lines written in pencil, or for faint copied slips. The faint lines will be clearly copied.


Generation Copy

If your originals are copies (generation copies), the copy image can be reproduced sharply and clearly.

𝚱 Note


- ☐ You can directly display the **[Original Mode]** key on the copy original display. See "Original Mode Display" in \Rightarrow p.292 "General Features $^{1}/_{3}$ ".
- ☐ You can adjust the quality level for each original type. See "Original Mode Quality Level" in \Rightarrow p.292 "General Features $^{1}/_{3}$ ".
- ☐ In Connect Copy mode, make adjustments to the original type on the master unit.

1 Press the appropriate key to select the original type.

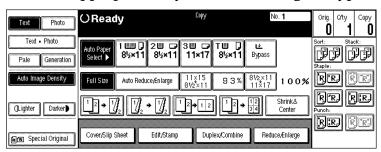

Note

☐ If "Yes" has been selected in "Original Mode Display" of the User Tools, press the **[Original Mode]** key to select the original type, then press the **[OK]** key. See "Original Mode Display" in \Rightarrow p.292 "General Features $^{1}/_{3}$ ".

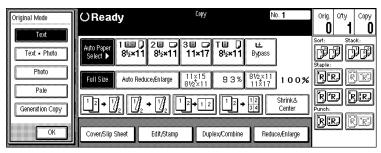

☐ If you do not wish to set any other functions, press the **[Start]** key to start copying.

Selecting Copy Paper

There are two ways to select copy paper:

❖ Auto Paper Select

The machine selects a suitable size of copy paper automatically based on the original size and the reproduction ratio. \Rightarrow p.48 "Rotated copy".

Manual Paper Select

Choose the tray containing the paper you wish to copy onto: Paper Tray, Bypass Tray or large capacity tray (LCT).

₽ Reference

 \Rightarrow p.70 "Copying from the Bypass Tray".

Limitation

- ☐ Auto Paper Select mode is intended for normal and recycled paper.
- ☐ If you set all the paper trays other than "No Display" or "Recycled Paper", you cannot use Auto Paper Select.

Note

☐ See the following table for possible copy paper sizes and directions with Auto Paper Select (when copying at a ratio of 100%):

Metric version

Where Original Is Set	Paper Size and Direction
Exposure glass	A3D, B4D, A4DD, B5DD, 8 ¹ / ₂ "×13"D *1
Document feeder	$ \begin{array}{cccccccccccccccccccccccccccccccccccc$

You can select from $8^1/2$ " × 13", $8^1/4$ " × 13" and 8" × 13" with the User Tools (System Settings). See "<F/F4>Size Setting" in the System Settings manual.

Inch version

Where Original Is Set	Paper Size and Direction
Exposure glass	$11" \times 17" \square$, $8^1/_2" \times 14" \square$, $8^1/_2" \times 11" \square$
Document feeder	$\begin{array}{c} A4 \square \square , 11" \times 17" \square , 11" \times 15" \square , 8^1/_2" \times \\ 14" \square , 8^1/_2" \times 11" \square \square , 8" \times 10" \square , 10" \times \\ 14" \square , 5^1/_2" \times 8^1/_2" \square \square , 8^1/_2" \times 13" \square ^{*1} \end{array}$


You can select from $8^1/2$ " × 13", $8^1/4$ " × 13" and 8" × 13" with the User Tools (System Settings). See "<F/F4>Size Setting" in the System Settings manual.

- \square For some originals, the original size might not be detected correctly. See \Rightarrow p.25 "Sizes difficult to detect".
- ☐ When you set special paper, such as recycled paper, in the paper tray, you can have the kind of paper shown on the display. See "Special Paper Indication" in the System Settings manual.
- ☐ In Connect Copy mode, select the copy paper in the master unit.
 - We recommend that both units have the same paper settings. Only paper trays loaded with the paper of the same size, direction and type installed in both the master unit and sub-unit are available.
 - When you press the **[Connect]** key, only the paper trays that have the same settings in both units are displayed. Other trays are shown grayed out and cannot be selected.
 - If the multiple trays are available in Connect Copy mode, each unit selects the paper tray detected in each "Paper Tray Priority" setting. See "Paper Tray Priority" in the System Settings manual.
 - If the paper tray in use runs out of paper in the sub-unit, the paper tray that has the paper identical in size and different in direction is selected, and the original image is rotated (if "On (Rotate)" is selected in "Auto Tray Switching"). See "Auto Tray Switching" in the System Settings manual.

1 Select the copy paper.

Auto Paper Select

• Make sure that the [Auto Paper Select] key is selected.

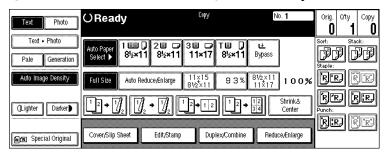


Note

- ☐ If the [Auto Paper Select] key is not selected, press the [Auto Paper Select] key.
- ☐ If you do not wish to set any other functions, press the **[Start]** key to start copying.

Manual Paper Select

1 Select the paper tray, bypass tray or large capacity tray (LCT).

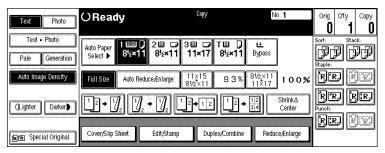


Note

☐ If you do not wish to set any other functions, press the **[Start]** key to start copying.

Rotated copy

If the direction in which your original is set (landscape or portrait) is different from that of the paper you are copying onto, this function rotates the original image by 90° and fits it on the copy paper. This function works when Auto Paper Select or Auto Reduce/Enlarge is selected. See "Auto Paper Select" in \Rightarrow p.46 "Selecting Copy Paper" and \Rightarrow p.49 "Auto Reduce/Enlarge".

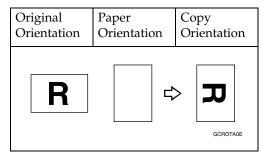

Limitation

☐ You cannot use the Rotated Copy function with Auto Paper Select if the "Auto Tray Switching" setting of the User Tools (System Settings) is set to "On (No Rotate)" or "No". See "Auto Tray Switching" in the System Settings manual.


 \square You cannot use the Rotated Copy function when enlarging onto $8^1/2^{"} \times 14^{"}$ or $11" \times 17"$ size paper. In this case, set your original in the landscape direction.

	Original Si	ze and Direction		Copy Pape Direction	r Size and
You cannot rotate:	$8^{1}/_{2}$ " × 11" or $5^{1}/_{2}$ " × $8^{1}/_{2}$ " portrait	GCROTA1E	When enlarging to →	8 ¹ / ₂ "× 14" or 11" ×17"	GCROTAZE
However, you can ro- tate:	$8^{1}/_{2}$ " × 11" or $5^{1}/_{2}$ " × $8^{1}/_{2}$ " land-scape	GCROTA3E	When enlarging to →	8 ¹ / ₂ "× 14" or 11" ×17"	R GCROTA4E

 \square You cannot use the Rotated Copy function when "Top Slant" or "Left 2" is selected for stapling or if the Punch function is selected. See \Rightarrow p.61 "Staple" and \Rightarrow p.67 "Punch".

Auto Reduce/Enlarge

The machine can choose an appropriate reproduction ratio based on the paper and original sizes you select.

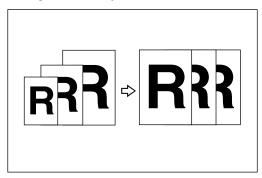

Limitation

☐ You cannot use the bypass tray with this function.

Ø Note

☐ When you use Auto Reduce/Enlarge, see the following table for possible original sizes and directions:

Metric version

Where Original Is Set	Original Size and Direction
Exposure glass	A3□, B4□, A4□□, B5□□, 8¹/2"×13"□ *¹, 8K□, 16K□□
Document feeder	$\begin{array}{cccccccccccccccccccccccccccccccccccc$


You can select from $8^1/2$ " × 13", $8^1/4$ " × 13" and 8" × 13" with the User Tools (System Settings). See "<F/F4>Size Setting" in the System Settings manual.

Inch version

Where Original Is Set	Original Size and Direction
Exposure glass	$11" \times 17" \square, 8^1/_2" \times 14" \square, 8^1/_2" \times 11" \square \square$
Document feeder	$ \begin{array}{ c c c c c c c c c c c c c c c c c c c$

You can select from $8^1/2$ " × 13", $8^1/4$ " × 13" and 8" × 13" with the User Tools (System Settings). See "<F/F4>Size Setting" in the System Settings manual.

- \square The reproduction ratios the machine will select are 25 400%.
- \square For some originals, the original size might not be detected correctly. See \Rightarrow p.25 "Sizes difficult to detect".
- \square You can set originals of different sizes in the document feeder at a time. See \Rightarrow p.39 "Mixed Sizes mode".
- 1 Press the [Auto Reduce/Enlarge] key.

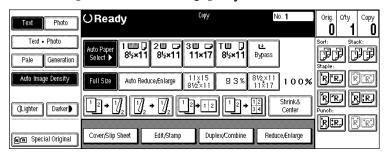

2 Select the paper tray.

Note


☐ If you do not wish to set any other functions, press the **[Start]** key to start copying.

Copying onto Tab Stock

You cannot use this function when the optional finisher is installed.


The options which are required to use this function are as follows:

- Output tray
- Tab sheet tray

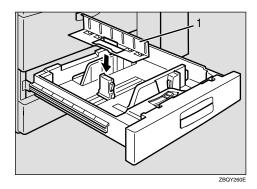

1. Tab sheet tray

To make copies onto tab stock, you need to specify the paper type. For details, see "Tray 2: Special Paper Indication" in the System Settings manual.

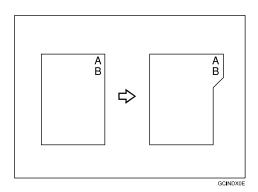

Preparation

Select "Tab Stock" in "Tray 2: Special Paper Indication" of the User Tools (System Settings). See "Tray 2: Special Paper Indication" in the System Settings manual.


Specify the paper size in "Tray 2:Paper Size Setting" of the User Tools (System Settings) as follows:

• Metric version: A4 \square

• Inch version: $8^1/_2$ " × 11" \square

Set the tab stock in Tray 2.

Check the position of the index tab to avoid cropping the image. See "Tray 2: Special Paper Indication" in the System Settings manual.

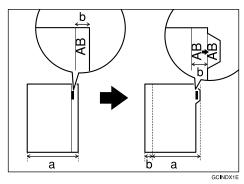


Limitation

- ☐ Use originals which contain only text.
- ☐ The image area of one original should be 6% or less of the whole area of the original.
- \Box The font size of the letters on the originals should be 16 points or less.
- ☐ When using the tab stock, the temperature should be 20°C, 68°F or more.


∰Important

☐ Tab stock is always fed starting with the top tab.

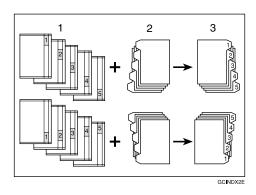

- 1. Set originals
- 2. Place the tab stocks in Tray 2
- 3. Make copies

☐ Use the originals which do not have any images on the top or bottom part of the index tab. If the images are on the top or bottom part of the index, the images are not copied on the paper, and the machine will be damaged.

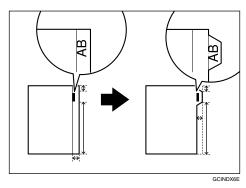


Note

- \square When copying onto the tab stock, copying speed will be reduced.
- ☐ Copies are delivered face down.
- ☐ The number of tabs, weights and types of the tab stock that can be placed in Tray 2 are as follows:

	Number of Tabs	Weight of Tab Stock	Type of Tab Stock
Metric version	Tab 5		Small tab only (large
Inch version	Tab 1 – 5, Tab 8, Tab 12	dex or lighter	tab is not available)


- ☐ You can store the optional tab sheet tray using the hook which is packed with the tab sheet tray.
- 1 Pull out Tray 2 until it stops.
- 2 Adjust the back fence as follows:
 - Metric version: 10" (Paper Size Settings is A4 □)
 - Inch version: B5 (Paper Size Settings is $8^1/2^{"} \times 11^{"} \square$)
- 3 Attach the tab sheet tray to the back fence in the paper tray.

4 Place the tab stock in the D direction as shown below.

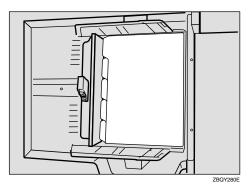


- **5** Select the paper tray (Tray 2).
- **6** Place your originals as follows:

❖ Exposure glass

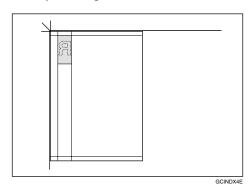

❖ Document feeder

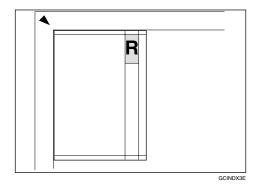

Press the [Start] key.

Sort/Stack/Staple

The machine can scan your originals into memory and automatically sort the copies.

Sort

- Sort
- Rotate Sort

Stack (optional finisher required)

• Stack (optional finisher required)

Staple (optional finisher required)

- Top
- Top Slant
- Bottom
- Left 2
- Top 2 (only when "90° Turn" is selected with the original orientation)

Limitation

☐ You cannot use the bypass tray with this function.

𝒯 Note

- \square When the number of copies exceeds the tray capacity, remove copies from the tray.
- \Box The maximum tray capacity is as follows.

Metric version

Output tray	 A5, B5, A3: 250 sheets (80 g/m²) A4, B4: 500 sheets (80 g/m²)
50-Sheet Finisher	Finisher proof tray (Without punch): • B4 or larger: 50 sheets (80 g/m²) • A4 or smaller: 250 sheets (80 g/m²)
	Finisher shift tray (Without punch): • A5□: 100 sheets (80 g/m²) • Except A5□, A4□: 1,500 sheets (80 g/m²) • A4□: 3,000 sheets (80 g/m²)

^{*1} If you copy when paper remains on the tray, the capacity might be reduced.

Inch version

Output tray	 5¹/₂" × 8¹/₂", 11" × 17": 250 sheets (20 lb. Bond) 8¹/₂" × 11", 8¹/₂" × 13": 500 sheets (20 lb. Bond)
50-Sheet Finisher	Finisher proof tray (Without punch): • 8 ¹ / ₂ " × 14" or larger: 50 sheets (20 lb. Bond) • 8 ¹ / ₂ " × 11" or smaller: 250 sheets (20 lb. Bond)
	 Finisher shift tray (Without punch): 5¹/₂" × 8¹/₂" □: 100 sheets (20 lb. Bond) Except 5¹/₂" × 8¹/₂" □, 8¹/₂" × 11" □: 1,500 sheets (20 lb. Bond) 8¹/₂" × 11" □: 3,000 sheets (20 lb. Bond)


^{*1} If you copy when paper remains on the tray, the capacity might be reduced.

Sort

Copies can be assembled as sets in sequential order.


❖ Sort

Copies can be assembled as sets in sequential order.

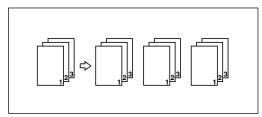

• 50-Sheet Finisher

The shift tray moves backward or forward each time the copies of one set or those of each job are delivered, causing the next copy to shift when delivered so that you can differentiate each set or job.

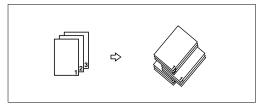

Note

 $\hfill \square$ The paper sizes that can be used in the Sort function are as follows:

❖ Metric version


Output tray	A3□, B4□, A4□□, B5□□, 8K□, 16K□□
50-Sheet Finisher	A3□, B4□, A4□□, B5□□, A5□□

Inch version

Output tray	$11" \times 17" \square, 8^1/_2" \times 14" \square, 8^1/_2" \times 11" \square \square$
50-Sheet Finisher	$11" \times 17" \square, 8^1/_2" \times 14" \square, 8^1/_2" \times 11" \square \square$

Rotate Sort

Every other copy set is rotated by 90° \square and delivered to the copy tray.

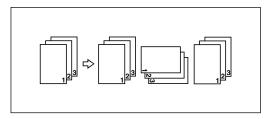

𝚱 Note

- \square When the optional finisher is installed, you can switch to or from the Rotate Sort function with the User Tools. See "Select Stack or Rotate sort" in \Rightarrow p.309 "Input/Output".
- ☐ The paper sizes that can be used in the Rotate Sort function are as follows:

Metric version

Output tray	A4 [] [], B5 [] [], A5 [] [], 8 ¹ / ₂ " × 11" [] [], 8K [], 16K [] []
50-Sheet Finisher	A4 D C, B5 D C, A5 D C


Inch version

Output tray	8 ¹ / ₂ "×11" □ □
50-Sheet Finisher	8 ¹ / ₂ "×11" □ □


 \square To use the Rotate Sort function, two paper trays identical in size and different in direction ($\square \square$) are required.

For the paper capacity of the optional finisher, see \Rightarrow p.323 "50-Sheet Finisher (Option)".

- 1 Press the [Sort] or [Rotate Sort] key.
 - When the finisher is not installed

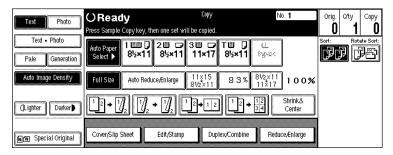

When the finisher is installed

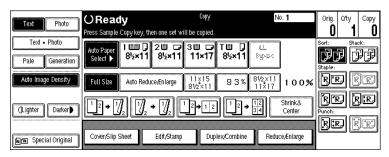

- Ø Note
- ☐ When the optional finisher is installed, use the User Tools to display [Rotate Sort]. See "Select Stack or Rotate sort" in \Rightarrow p.309 "Input/Output".
- **2** Enter the number of copy sets with the number keys.
 - Limitation
 - \Box The maximum number of sets is 999.
 - Note
 - ☐ To change the entered number, press the [Clear/Stop] key.
- 3 Set your originals, then press the [Start] key.

When setting a stack of originals in the document feeder

- 1 Set a stack of originals in the document feeder, then press the [Start] key. After all the originals are scanned, the copies are delivered to the tray.
 - Note
 - ☐ The last page should be on the bottom.
 - ☐ If an original is misfed during sorted copying, reset your originals in the document feeder according to the instructions on the display. The display will indicate the number of scanned originals.

When setting an original on the exposure glass or in the document feeder using Batch (SADF) mode

 \Rightarrow p.38 "Batch (SADF) mode".


- 1 Set the original, then press the [Start] key.
 - Note
 - ☐ Start with the first page to be copied.
- 2 Set the next original. When it is placed on the exposure glass, press the [Start] key.
 - **𝚱** Note
 - \square Set the original in the same direction as the first one.
- 3 After all originals are scanned, press the [#] key.

Stack

The optional finisher is required to use this function.

Stack

This function groups copies of each page in a multi-page original together. Every other page stack is shifted for ease of separation. The finisher shift tray of the finisher provides this function by sliding from side to side.

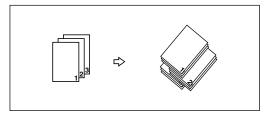


Ø Note

☐ The paper sizes that can be used in the Stack function are as follows:

Metric version	A3□, B4□, A4□□, B5□□, A5□□
Inch version	$11" \times 17" \square, 8^1/_2" \times 14" \square, 8^1/_2" \times 11" \square \square$

For the maximum tray capacity of the optional finisher, see \Rightarrow p.323 "50-Sheet Finisher (Option)".

1 Press the [Stack] key.

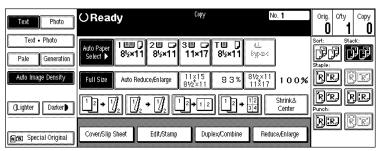

- **2** Enter the number of copies with the number keys.
 - Ø Note
 - ☐ To change the entered number, press the [Clear/Stop] key.
- **3** Set your originals, then press the [Start] key.

When setting a stack of originals in the document feeder

- Set a stack of originals in the document feeder, then press the [Start] key. After all the originals are scanned, the copies are delivered to the tray.
 - Note
 - ☐ The last page should be on the bottom.

When setting an original on the exposure glass or in the document feeder using Batch (SADF) mode


 \Rightarrow p.38 "Batch (SADF) mode".

- 1 Set the original, then press the [Start] key.
 - Note
 - \square Start with the first page to be copied.
- 2 Set the next original. When it is placed on the exposure glass, press the [Start] key.
 - Note
 - \square Set the original in the same direction as the first one.

Staple

The optional finisher is required to use this function.

Each copy set can be stapled together.

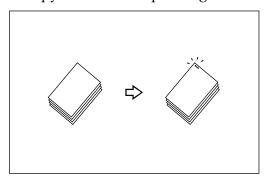

Limitation

- ☐ You cannot use the following paper in this function:
 - Tab stocks
 - Postcards
 - Translucent paper
 - OHP transparencies
 - Adhesive labels
 - Curled paper
 - Low stiffness paper
 - Paper of different vertical sizes

𝚱 Note

☐ For this mode, the following limitation applies. When the number of copies exceeds the tray capacity, copying stops. In this case, remove the copies from the shift tray and then resume copying.

Metric version

Paper size	A3□, B4□, A4□□, B5□□, 8K□, 16K□□			
Stapler capacity	(without punch)			
	• A4 or smaller: 50 sheets (80 g/m²)			
	B4 or larger: 30 sheets (80 g/m²)			
Shift tray capacity (A4 □) *1	3,000 sheets (80 g/m ²) * ²			

^{*1} Depending on the number of sheets to be stapled and whether sheets have punched holes or not, the maximum tray capacity might be reduced.

^{*2} If you copy when the paper remains on the tray, the capacity might be reduced.

♦ Inch version

Paper size	$11" \times 17" \square 7, 8^1/2" \times 14" \square 7, 8^1/2" \times 11" \square \square 7$
Stapler capacity	(without punch) • $8^1/2$ " × 11" or smaller: 50 sheets (20 lb. Bond) • $8^1/2$ " × 14" or larger: 30 sheets (20 lb. Bond)
Shift tray capacity $(8^1/2" \times 11" \ \square)^{*1}$	3,000 sheets (20 lb. Bond) *2

- Depending on the number of sheets to be stapled and whether sheets have punched holes or not, the maximum tray capacity might be reduced.
- ^{*2} If you copy when the paper remains on the tray, the capacity might be reduced.
- ☐ In the following cases, the copies will be delivered to the shift tray without stapling.
 - When the number of sheets for one set is over the stapler capacity.
 - When memory reaches 0% during copying.
- ☐ When you select Staple, Sort mode is automatically selected.

₽ Reference

If you want to add staples, see \Rightarrow p.281 " $\stackrel{\bullet}{\blacksquare}$ Adding Staples".

When staple is jammed, see \Rightarrow p.283 " Removing Jammed Staples".

Stapling position and original setting

When there is copy paper that is identical in size and direction as your original, stapling positions are as follows:

50-Sheet Finisher

			Original setting			Stapling
				Exposure glass	Document Feeder	position
RE		Top	Ū		R	R
	STAPLEAE	I	□		R	[®] R
R.		Top Slant	D.		R	R
	STAPLEBE		□	Test Test	R	© R

		Original setting		Stapling	
			Exposure glass	Document Feeder	position
RR	ma	D	STAPLE25	R STAPLE26	STAPLE27
	Bottom	D	STAPLE28	STAPLE29	₽ STAPLE30
*1		D		R	R
STAPLEDE	Left 2	D	STAPLE31	STAPLE32	□R STAPLE33
*2 STAPLEEE	2 0	D	STAPLE22	STAPLE23	STAPLE24
	Top 2	₽	STAPLE10	STAPLE14	STAPLE20

^{*1} Original images are not rotated. When selecting these stapling positions, set the originals in the same direction as copy paper is set.

*2 This position is available if "90° Turn" is selected with the original orientation.

Note


- ☐ Using the user tools, you can specify which functions are shown by default on the initial display. \Rightarrow p.309 "Input/Output"
- ☐ You cannot change stapling positions during copying.
- ☐ When the original image is rotated, the stapling direction turns by 90°.
- ☐ With "Top" or "Bottom" selected at the stapling position, if no paper oriented in the same direction as the original is available, the image will be rotated and the paper of the same size as the original but oriented in the different direction will be selected.

☐ The maximum original image size that can be rotated is as follows:

Metric version	A4
Inch version	8 ¹ / ₂ "×11"

- ☐ You cannot use the Rotated Copy function when "Top Slant" or "Left 2" is selected.
- **1** Select one of the stapling positions.

♦ 50-Sheet Finisher

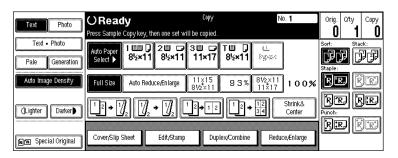

- Note
- ☐ When you select the stapling position, Sort mode is automatically selected.
- **₽** Reference
 - ⇒ p.62 "Stapling position and original setting"
- **2** Enter the number of copy sets with the number keys.
 - Note
 - ☐ To change the entered number, press the [Clear/Stop] key.
- **3** Set your originals, then press the [Start] key.

When setting a stack of originals in the document feeder

- ① Set a stack of originals in the document feeder, then press the [Start] key. After all the originals are scanned, the copies are delivered to the tray.
 - Note
 - $\hfill\Box$ The last page should be on the bottom.

When setting an original on the exposure glass or in the document feeder using Batch (SADF) mode

 \Rightarrow p.38 "Batch (SADF) mode".

- 1 Set the original, then press the [Start] key.
 - **𝚱** Note
 - \square Start with the first page to be copied.
- 2 Set the next original. When it is placed on the exposure glass, press the [Start] key.
 - **𝚱** Note
 - \square Set the original in the same direction as the first one.
- 3 After all originals are scanned, press the [#] key.

To Stop Scanning Temporarily

When you are using the Sort, Stack, or Staple function, the originals are scanned into memory.

1 Press the [Clear/Stop] key to stop originals from being scanned into memory.

To resume scanning

- **1** Press the [Resume] key to resume scanning.
 - Note
 - \square Scanned images in memory are not cleared.

To clear scanned images of the originals

1 Press the [Cancel] key.
Scanning is stopped with the images cleared.

When Memory Reaches 0%

Scanning will be stopped if the size of scanned image data exceeds memory capacity.

Ø Note

□ There is enough memory to store approximate 200 to 1,000 originals of A4, $8^{1}/_{2}$ " × 11" size. The number of originals that can be stored in memory varies depending on the memory setting and original type.

Scanning will stop when memory reaches 0% during sorted copying. However, you can change this setting so that all the scanned pages are copied and delivered to the tray first, then the machine automatically continues scanning the remaining originals. See "Memory Full Auto Scan Restart" in \Rightarrow p.309 "Input/Output".

1 Press the [Start] key.

The scanned pages are delivered to the tray. Then, the image data in memory is cleared.

2 Remove the copies and continue copying by following the instructions on the display.

To Remove the Paper from the Staple Unit

If you cancel the stapling copy job in the middle of the job, the paper might be left in the staple unit. In this case, remove the paper from the staple unit.

- 1 Press the [Clear Modes/Energy Saver] key to cancel the copy settings.
- 2 Set the next original, then press the [Start] key.

The paper left in the staple unit is automatically delivered, then the next job starts.

Note


☐ When the paper is not delivered and the message is displayed, follow the instructions on the display to remove the paper.

Punch


The optional finisher and punch kit are required to use this function.

This function is used to make punch holes in copies.


❖ 2 holes

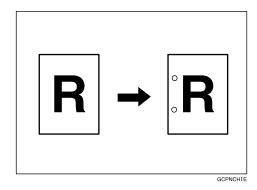

❖ 3 holes

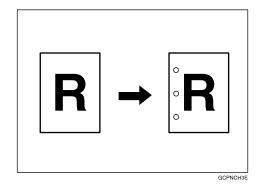

❖ 4 holes

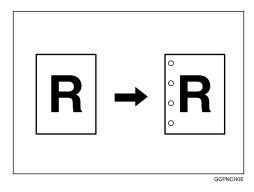

𝒯 Note

☐ The relationship between the direction in which you set the original and the punch hole positions is as follows:

Punch hole positions

		Direction in which Original Is Set		Punch Hole Positions	
			Exposure glass	Document feeder	
Standard	2 holes	₽		R	҈ R
		₽	202	R	° R
	3 holes	₽	R	R	° R
		┏		R	R
	4 holes	₽		R	R
		□	<u> </u>	R	₿ R
90° Turn	2 holes	₽	Tes	<u> </u>	Ř
		D		<u>«</u>	Ř
	3 holes	D	G		°°°°
		┏		<u>«</u>	R
	4 holes	₽	log l	<u></u>	R
				<u> </u>	°°°° R


☐ Punchable paper sizes are as follows:

2 holes		$A3\Box - A5\Box \Box$, $11" \times 17"\Box$, $8^{1}/_{2}" \times 14"\Box - 5^{1}/_{2}" \times 8^{1}/_{2}"\Box \Box$
3 holes		A3□, B4□, A4□, B5□, 11"×17"□, 8 ¹ / ₂ "×11"□
4 holes	Metric version	$A3\square$, $A4\square$, $11"\times17"\square$, $8^1/2"\times11"\square$
	Narrow 2 × 2 version	$A3\Box - A5\Box$, $11" \times 17"\Box$, $8^{1}/_{2}" \times 14"\Box - 5^{1}/_{2}" \times 8^{1}/_{2}"\Box$

- ☐ Since punch holes are made in each copy, the punch hole positions vary slightly.
- ☐ The punch hole positions change according to the direction of the paper selected.

If the punch waste box fills up, see \Rightarrow p.285 " \clubsuit Removing Punch Waste".

1 Select the Punch position.

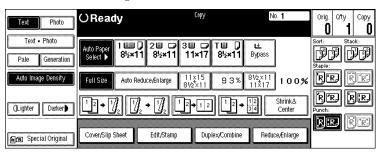

- Note
- \square When stapling copies, also select a stapling position. See \Rightarrow p.61 "Staple".
- **2** Enter the number of copy sets with the number keys.
 - Note
 - ☐ To change the entered number, press the [Clear/Stop] key.
 - $\hfill \square$ If you wish to use the Sort function, press the **[Sort]** key.
- **3** Set your originals, then press the [Start] key.

Copying from the Bypass Tray

Use the bypass tray to copy onto OHP transparencies, adhesive labels, translucent paper, postcards, and copy paper that cannot be set in the paper tray.

Limitation

- ☐ When copying several originals using the bypass tray, copies are delivered face up ("Face Up Exit") and in reverse order by default.
- ☐ You can change the setting to "Face Down Exit" only when you are using high quality copy paper with a weight of $52 105 \text{ g/m}^2 (14 28 \text{ lb. Bond})$. See "Face-Up/Down Selection in Bypass Mode" in \Rightarrow p.311 "Count Manager".
- ☐ If you have copies delivered face down when copying onto special paper, such as adhesive labels, a paper misfeed may occur. Be sure to select "Face Up Exit".

𝚱 Note

- □ If you wish to have copies delivered face down when only one original is set on the exposure glass or in the document feeder, you must set the "Face-Up/Down Selection in Bypass Mode" setting to "Face Down Exit" and the "Face-Up/Down Selection in Platen Mode" setting to "Face Down Exit" with the User Tools. See "Face-Up/Down Selection in Bypass Mode" in ⇒ p.311 "Count Manager" and "Face-Up/Down Selection in Platen Mode" in ⇒ p.309 "Input/Output".
- ☐ The machine can automatically detect the following sizes as standard size copy paper:


Metric version	A3D, A4D, A5D
	$\begin{array}{c} \text{A3$} \square \text{,} 11" \times 17" \square \text{,} 8^{1}/_{2}" \times 14" \square \text{,} 8^{1}/_{2}" \times 11" \square \text{,} 8" \times 10^{1}/_{2}" \square \text{,} 8" \times 10" \square \text{,} \\ 5^{1}/_{2}" \times 8^{1}/_{2}" \square \end{array}$

☐ If you do not use the standard size copy paper, you should input vertical and horizontal dimensions. The sizes that you can input are as follows:

Metric version	• Vertical: 100 – 300 mm
	• Horizontal: 140 – 432 mm
Inch version	• Vertical: 4.0" – 11.7"
	• Horizontal: 5.6" – 17.0"

- □ To make copies onto OHP transparencies or thick paper exceeding 105 g/m²,
 28 lb. Bond, specify the paper type in ⇒ p.73 "When Copying onto OHP Transparencies or Thick Paper".
- \square The maximum number of sheets you can set at a time depends on the paper type. For details about paper capacity of the bypass tray, see \Rightarrow p.26 "Copy Paper".
- ☐ In Connect Copy mode, you can set only cover sheet paper and slip sheet paper for the Cover/Slip Sheet function in the bypass tray.

1 Open the bypass tray.

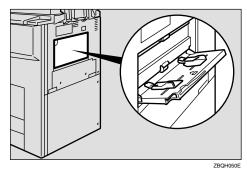


2 Adjust the guides to copy paper size.

∰Important

- ☐ If the guides are not flush with the copy paper, a skew image or paper misfeeds might occur.
- 3 Lightly insert the copy paper face up until the beeper sounds.

The indicator on the display automatically goes on.

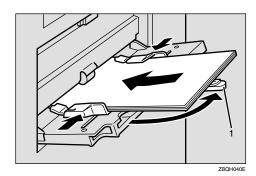


1. Extender

Note


- \Box The face side of the paper set is copied on.
- ☐ Do not stack paper over the limit mark, otherwise a skew image or paper misfeeds might occur.
- ☐ If the beeper is turned off, lightly insert the copy paper until it stops. See "Operation Panel Beeper" in the System Settings manual.
- \square When the document feeder is open, set the direction of the copy paper to \square .
- \square Swing out the extender to support paper sizes larger than A4 \square , $8^1/_2$ " × 11" \square .
- ☐ Fan paper to get air between the sheets and avoid a multi-sheet feed.
- ☐ Before setting, adjust the paper if curled or warped.

When copying onto non-standard size paper

- **#Important**
- ☐ You should specify the size of copy paper to avoid paper misfeeds.
- Press the [#] key.
- 2 Press the [Non Standard] key.

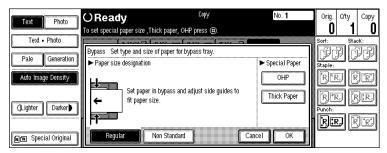

3 Press the [Vert inch] key and enter the vertical size of the paper with the number keys, then press the [#] key.

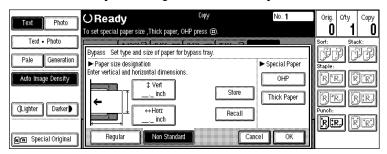

- Note
- ☐ To change the number entered, press the [Clear] or [Clear/Stop] key and enter the new number.
- 4 Enter the horizontal size of the paper with the number keys, then press the [#] key.
 - **𝚱** Note
 - \Box If the [Horz inch] key is not highlighted, press the [Horz inch] key.
 - ☐ To change the number entered, press the [Clear] or [Clear/Stop] key and enter the new number.
- **5** To register the non-standard size entered, press the [Store] key and then press the [Cancel] key.
 - Note
 - ☐ If you do not register the non-standard size, go to step **6**.
 - ☐ Only one non-standard size can be stored.
 - ☐ To recall the non-standard size stored, press the [Recall] key.
 - ☐ If you do not register the non-standard size, the size you set is deleted when modes are cleared.

- 6 Press the [OK] key.
- 4 Set your originals, then press the [Start] key.
- When your copy job is finished, press the [Clear Modes/Energy Saver] key to clear the settings.

When Copying onto OHP Transparencies or Thick Paper

To make copies onto OHP transparencies or thick paper, you need to specify the paper type.

Limitation

□ When you select "OHP" or "Thick Paper", copy paper is delivered face up even if you have set the "Face-Up/Down Selection in Bypass Mode" setting to "Face Down Exit". See "Face-Up/Down Selection in Bypass Mode" in ⇒ p.311 "Count Manager".

Ø Note

- \square Select [Thick Paper] if the paper weight is more than 105 g/m^2 , 28 lb. Bond.
- 1 Open the bypass tray, and adjust the guides to the paper size.


∰Important

- ☐ If the guides are not flush with the copy paper, a skew image or paper misfeeds might occur.
- 2 Lightly insert the OHP transparencies or thick paper face up until the beeper sounds.

The **indicator** on the display automatically goes on.

Ø Note

- ☐ When you set an OHP transparency, make sure that its front and back faces are properly positioned.
- \Box To avoid paper misfeeds, fan the paper before setting it in the tray.
- Press the [#] key.
- 4 Select [OHP] or [Thick Paper].

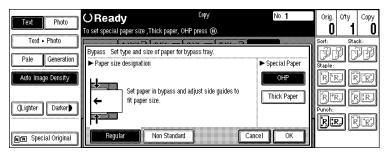

- Press the [OK] key.
- 6 Set your originals and press the [Start] key.

∰Important

- ☐ When copying onto OHP transparencies, remove copied sheets one by one.
- When your copy job is finished, press the [Clear Modes/Energy Saver] key to clear the settings.

Programs

You can store frequently used copy job settings in machine memory, and recall them for future use.

Limitation

☐ You cannot store the settings whether the Connect Copy function will be selected automatically in a program.

Storing Your Settings

You can store your settings you frequently use.

Deleting A Program

You can delete a stored program.

Recalling A Program


You can recall a stored program.

Note


- ☐ You can store up to 10 programs.
- ☐ You can select the standard mode or program No. 10 as the mode to be set when modes are cleared or reset, or immediately after the operation switch is turned on. See "Initial Mode" in \Rightarrow p.295 "General Features $^2/_3$ ".
- ☐ Paper settings are stored based on paper size. So if paper of the same size is set for more than one tray, the paper tray prioritized with the User Tools (System Settings) will be selected first. See "Paper Tray Priority" in the System Settings manual.
- ☐ Programs are not cleared by turning the power off or by pressing the **[Clear Modes/Energy Saver]** key. They are canceled only when you delete or overwrite them with another program.
- ☐ If your program contains settings that are not available in Connect Copy mode, they are ignored in Connect Copy mode.
- ☐ If your program contains settings that are not available on the sub-unit, they are ignored in Connect Copy mode.

Storing a Program


- 1 Edit the copy settings so that all functions you want to store in this program are selected.
- 2 Press the [Program] key.

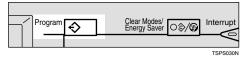

Press the [Store] key.

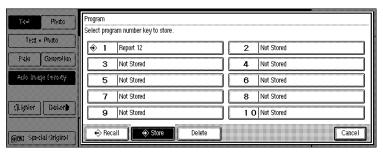

- 4 Press the program number you want to store.
 - **𝚱** Note
 - $\hfill\Box$ Program numbers with \hfill already have settings in them.
 - - ⇒ p.77 "Changing a Stored Program"
- **5** Enter the program name with the letter keys on the display panel.

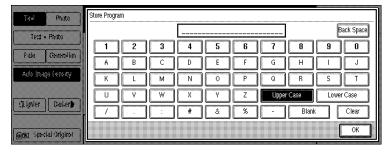

- **𝒯** Note
- \square If you do not wish to enter the program name, go to step **6**.
- ☐ You can register up to 25 characters.
- ☐ To change the name entered, press the [Back Space], [Clear] or [Clear/Stop] key and enter new letters.

6 Press the [OK] key.


When the settings are successfully stored, the • indicator goes on.

Changing a Stored Program

- 1 Press the stored program number key and make sure the settings.
 - **𝚱** Note
 - \square When you want to check the contents of the program, recall the program. See \Rightarrow p.79 "Recalling a Program".
- **2** Repeat steps **1** to **4** in Storing a Program.

To overwrite the program

- **∰**Important
- \square If you select **[Delete]**, the previous program is lost.
- Press the [Delete] key.

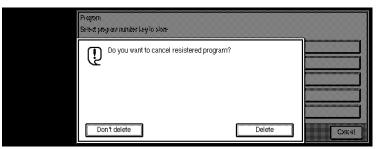


2 Repeat steps 5 and 6 in Storing a Program.

Not to overwrite the program


• Press the [Don't delete] key.

Deleting a Program

1 Press the [Program] key.

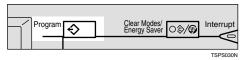

Press the [Delete] key.

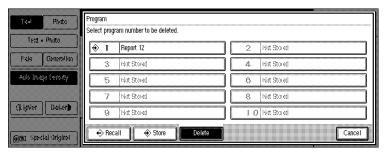


- 3 Press the program number you want to delete.
- Press the [Delete] key.




- Note
- $\hfill\Box$ To cancel the deletion, press the [Don't delete] key.

Recalling a Program

1 Press the [Program] key.

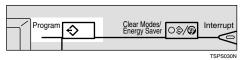

2 Press the [Recall] key.

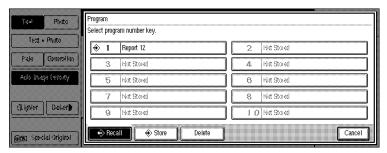

3 Press the program number you want to recall.

The stored settings are displayed.

- **𝒯** Note
- $\hfill\Box$ Only programs with $\ensuremath{\clubsuit}$ contain a program.
- 4 Set your originals, then press the [Start] key.

Job Preset


If a long copy job is in progress and you do not wish to wait for it to finish, you can use this function to set up the next copy job in advance. When the current copy job is finished, your copy job will be started automatically.


Limitation

☐ You cannot combine the Job Preset function with the Connect Copy function (option).


Ø Note

- \Box The maximum number of job sets that you can set with this function is 8.
- ☐ You can use this function for the documents stored in the Document Server.
- 1 Press the [Copy/New Job] key.

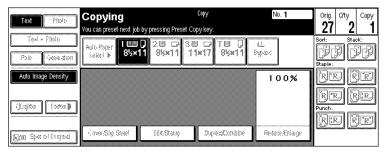

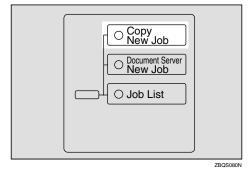

2 Set up the next copy job.

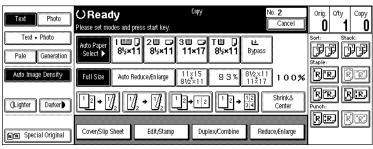


Note

- ☐ The receipt number (preset number) of the preset job is displayed on the upper right of the display panel.
- \square To cancel this job, press the **[Cancel]** key.
- 3 Set the originals in the document feeder and press the [Start] key.

After all originals are scanned, the Job List is displayed.

Press the [Return to menu in printing] key.

After the current copy job, the next job starts automatically.

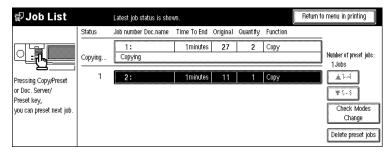


𝚱 Note

☐ You can switch the display to the current copy job by pressing the [Return to menu in printing] or [Return to menu in scanning] key. You can switch the display to the preset job by pressing the [Return to menu in setting new job] key.


Editing Job Preset

1 Press the [Job List] key.

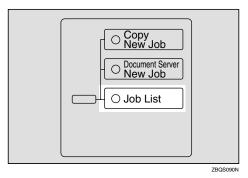


Note


- ☐ You can confirm the preset number, time to end, number of originals, number of copy sets, and functions you use in the job status list.
- **2** Press the preset job you want to change.
 - Note
 - ☐ If the desired job is not shown and more than 5 jobs are preset, press the [▼5~8] key to display the desired job.

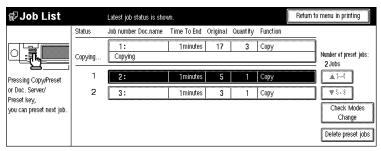

- 3 Press the [Check Modes//Change] key.
- 4 Change the settings.
- Press the [Return to job status menu] key.

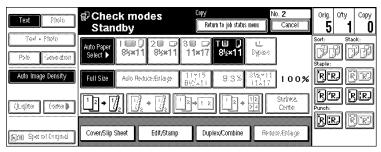

6 Press the [Yes] key.

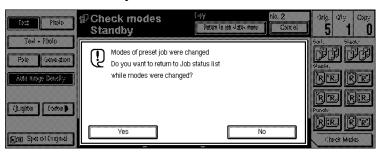

- Ø Note
- ☐ To cancel the changes, press the **[No]** key.
- If you want to change the settings for other preset jobs, repeat steps 2 to 6.
- Press the [Return to menu in printing] key.


The initial display reappears.

- Note
- ☐ Depending on the condition of the current copy job, the [Return to menu in setting new job] or [Return to menu in scanning] key might be displayed. In this case, press the [Return to menu in setting new job] or [Return to menu in scanning] key.


Deleting Job Preset

You can delete the preset job in the Job List or Check modes display. The following procedure describes how to delete the preset job in the Job List display.

1 Press the [Job List] key.

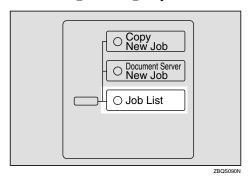


2 Press the preset job you want to delete, then press the [Delete preset jobs] key.

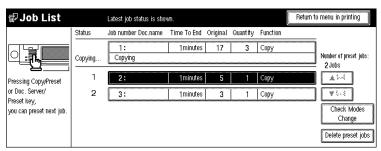

Note

- ☐ If you delete the preset job in the Check modes display, press the **[Cancel]** key in the Check modes display.
- ☐ If the desired job is not shown and more than 5 jobs are preset, press the [▼5~8] key to display the desired job.
- 3 Press the [Cancel] key.

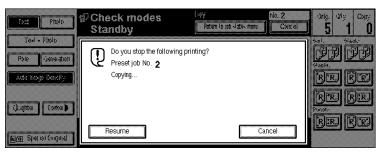

- Note
- ☐ To cancel the deletion, press the [Resume] key.
- If you want to delete other preset jobs, repeat steps 2 and 3.
- Press the [Return to menu in printing] key.

The initial display reappears.

Note

☐ Depending on the condition of the current copy job, the [Return to menu in preset mode] or [Return to menu in scanning] key might be displayed. In this case, press the [Return to menu in preset mode] or [Return to menu in scanning] key.

Other Functions

Energy Saver Mode

If you do not operate the machine for a certain period after copying, or when you press and hold the **[Clear Modes/Energy Saver]** key for more than one second, the display disappears and the machine enters Energy Saver mode. When you press the **[Clear Modes/Energy Saver]** key again, when the originals are set in the document feeder, or when the document feeder is opened, the machine returns to the ready condition. In Energy Saver mode, the machine uses less electricity.

Energy Saver mode makes a two-step reduction in electricity: one for the period up to the time set for Low Power mode, the other for the period after that time.

S	Note
	If you press the [Clear Modes/Energy Saver] key during the operation, the current settings will be cleared.
	It takes about 10 seconds to return to the ready condition from Energy Saver mode.
	It takes about 30 seconds to return to the ready condition from Low Power mode.
	If you press the [Clear Modes/Energy Saver] key while setting Connect Copy, Connect Copy mode is canceled and the machine returns to the initial condition of Copy mode.
	If you press the [Connect] key on the master unit, the sub-unit exits Energy Saver mode and enters Connect Copy mode.
	In Connect Copy mode, the sub-unit will not enter Energy Saver mode.
S	Reference
	See "Low Power Timer" in the System Settings manual.

Interrupt Copy

Use this function if you wish to interrupt a long copy job to make urgently needed copies.

- ☐ The procedure for making interrupt copies depends on which kind of operation the machine is currently carrying out.
- ☐ You can use Document Server mode in Interrupt Copy mode.
- ☐ In Connect Copy mode, you cannot use the Interrupt Copy function on the master unit.
- ☐ In Connect Copy mode, you cannot use the Interrupt Copy function on the sub-unit while the master unit is scanning an original.
- ☐ In Connect Copy mode, you cannot use the Interrupt Copy function when memory on the sub-unit is full.
- ☐ In Connect Copy mode, after finishing the interrupt copy job on the sub-unit, be sure to exit Interrupt mode on the sub-unit. When you exit Interrupt mode, the two machines automatically share the rest of the connect copy job.
- ☐ In Connect Copy mode, if the connect copy job is finished before finishing the interrupt copy job on the sub-unit, be sure to exit Interrupt mode on the sub-unit. If you do not exit Interrupt mode, the next connect copy job cannot be started.

To interrupt an original being fed

1 Press the [Interrupt] key.

The **Interrupt** indicator goes on and scanning stops.

- **2** Remove the originals that were being copied and set the originals you wish to copy.
- Press the [Start] key.

The machine starts making your copies.

- 4 When your copy job is finished, remove your originals and copies.
- 5 Press the [Interrupt] key again.

The **Interrupt** indicator goes off.

- 6 When the display prompts you to, replace the originals that were being copied before.
- **7** Press the [Start] key.

The previous copy job settings will be restored and the machine will continue copying from where it left off.

To interrupt copying after all originals have been fed

1 Press the [Interrupt] key.

The **Interrupt** indicator goes on.

𝚱 Note

- ☐ Copying will not stop yet.
- 2 Set your original.
- 3 Press the [Start] key.

The machine stops the original job and starts copying your original.

- 4 When copying is complete, remove your originals and copies.
- 5 Press the [Interrupt] key again.

The **Interrupt** indicator goes off.

The previous copy job settings will be restored and the machine will continue copying from where it left off.

User Codes

If the machine is set to use the User Code function, operators must input their user codes before the machine can be operated. The machine keeps count of the number of copies made under each user code.

- ☐ When the machine is set for the user codes, the machine will prompt you for your user codes after the operation switch is turned on or Auto Reset comes into effect.
- ☐ You can adjust how long the machine waits before switching to the user code input display. See "Auto Reset Timer" in \Rightarrow p.292 "General Features $^{1}/_{3}$ ".
- ☐ To prevent others from making copies using your user code, press the [Clear Modes/Energy Saver] and [Clear/Stop] keys simultaneously after copying.
- ☐ You can turn the User Codes on or off with the master unit User Tools (System Settings). See "Set User Codes" in the System Settings manual.
- ☐ You can monitor the total number of copies made by the master unit and subunit with the master unit User Codes function.
- ☐ If the User Codes are set to on in the sub-unit and a code has been entered before Connect Copy was selected, the master unit cannot monitor the number of copies made.
- ☐ If the User Codes are set only in the sub-unit, you can enter Connect Copy mode and make copies without entering a code. In this case the number of copies made will not be monitored.

For how to set up the user codes, see "Set User Codes" in the System Settings manual.

For how to register, change and delete the user codes, see "User Code Register/Change/Delete" in ⇒ p.311 "Count Manager".

Auto Start

If you press the **[Start]** key during the warm-up period, the **[Start]** key will blink, and your copies will be made as soon as warm-up finishes.

- **1** Make any adjustments to copy settings during the warm-up period.
- **2** Set your originals.
- 3 Press the [Start] key.

Copying automatically starts when the **[Start]** key indicator flashes red and green and the machine is ready for copying.

𝚱 Note

- ☐ In Connect Copy mode, copying starts when the master unit is ready for copying.
- ☐ To cancel Auto Start, press the [Clear/Stop] key.
- ☐ In Connect Copy mode, press the **[Clear/Stop]** key on the master unit to cancel Auto Start.

Original Beeper

The beeper sounds and an error message is displayed when you leave your originals on the exposure glass after copying.

Note

□ To cancel this function, see "Original Beeper" in \Rightarrow p.295 "General Features $^2/_3$ ".

Sample Copy

Use this function to check copy settings before making a long copy run.

- Limitation
- ☐ This function can be used only when the Sort function has been turned on.
- Ø Note
- ☐ This function is only available on the master unit in Connect Copy mode.
- 1 Select Sort and any other functions, then enter the number of copy sets to be made.
- **2** Set the originals.
- Press the [Sample Copy] key.

One copy set is delivered for proof copying.

4 After checking the results, press the [Resume] key if the sample is acceptable.

The number of copies made is the number you specified minus one for the proof copy.

𝚱 Note


☐ If you press the **[Cancel]** key after checking the results, return to step **1** to adjust the copy settings as necessary. You can change the settings for Staple, Punch, Duplex, Copy Orientation, Stamp, Margin Adjust, and Cover/Slip Sheet. However, depending on the combinations of functions, some settings might not be changed.

Changing the Number of Sets


You can change the number of copy sets during copying.

Limitation


- ☐ This function can be used only when the Sort function has been turned on.
- 1 Press the [Clear/Stop] key when "Copying" is displayed.

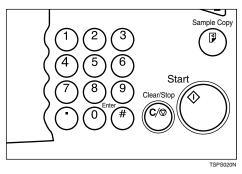

2 Press the [Change No. of sets] key.

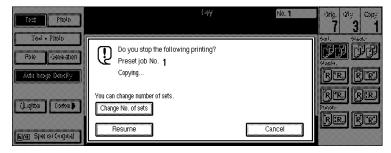


Enter the number of copy sets with the number keys, then press the [#] key.

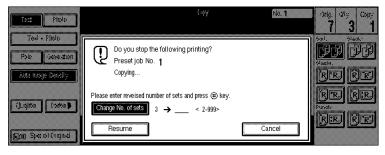

Note


- ☐ The number of sets you can enter differs depending on the timing of pressing the [Clear/Stop] key.
- \square To change the entered number, press the **[Clear/Stop]** key.

4 Press the [Resume] key.

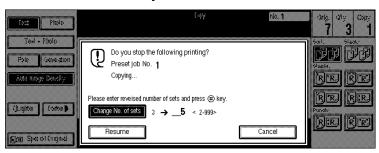

Preset Reduce/Enlarge

You can select a preset ratio for copying.

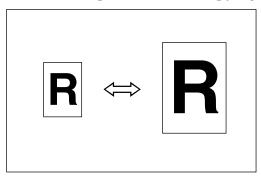

Ø Note

- ☐ You can select one of 11 preset ratios (5 enlargement ratios, 6 reduction ratios).
- ☐ Use "Shrink&Center" to reduce the image to 93% of its original size with the center as reference. You can register this function in a shortcut key on the initial display.
- ☐ You can change the preset ratios to other ratios you frequently use. See "Enlarge" in \Rightarrow p.297 "Reproduction Ratio $^1/_2$ " and "Reduce" in \Rightarrow p.298 "Reproduction Ratio $^2/_2$ ".
- \square You can set and display three kinds of ratio on the initial display. See "Short-cut R/E" in \Rightarrow p.297 "Reproduction Ratio $^1/_2$ ".
- ☐ You can specify which of [Reduce], [Enlarge] or [Input Ratio] is to be given priority and displayed when the [Reduce/Enlarge] key is pressed. See "R/E Priority" in \Rightarrow p.297 "Reproduction Ratio $^{1}/_{2}$ ".
- ☐ You can select a ratio regardless of the size of an original or copy paper. With some ratios, parts of the image might not be copied or margins will appear on copies.
- ☐ Copies can be reduced or enlarged as follows:

Metric version


Ratio (%)	Original → Copy paper size
400 (enlarge area by 16)	
200 (enlarge area by 4)	A5→A3
141 (enlarge area by 2)	A4→A3, A5→A4
122	F→A3, A4→B4
115	B4→A3
93	

Ratio (%)	Original → Copy paper size
82	F→A4, B4→A4
75	B4→F4, B4→F
71 (reduce area by ¹ / ₂)	A3->A4, A4->A5
65	A3→F
50 (reduce area by 1/4)	A3→A5, F→A5

Inch version

Ratio (%)	Original → Copy paper size
400 (enlarge area by 16)	
200 (enlarge area by 4)	$5^{1}/_{2}" \times 8^{1}/_{2}" \rightarrow 11" \times 17"$
155 (enlarge area by 2)	$5^{1}/_{2}$ " $\times 8^{1}/_{2}$ " $\rightarrow 8^{1}/_{2}$ " $\times 14$ "
129	$8^{1}/_{2}" \times 11" \rightarrow 11" \times 17"$
121	$8^{1}/_{2}" \times 14" \rightarrow 11" \times 17"$
93	
85	$F \rightarrow 8^1/_2" \times 11"$
78	$8^{1}/_{2}$ " × 14" \rightarrow $8^{1}/_{2}$ " × 11"
73	$11" \times 15" \rightarrow 8^{1}/_{2}" \times 11"$
65	$11" \times 17" \rightarrow 8^1/_2" \times 11"$
50 (reduce area by ¹ / ₄)	$11" \times 17" \rightarrow 5^{1}/_{2}" \times 8^{1}/_{2}"$


1 Press the [Reduce/Enlarge] key.

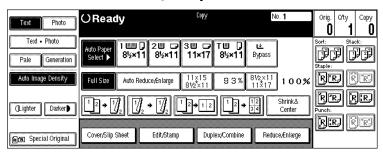

𝒜 Note

☐ To select a preset ratio on the initial display, directly press the shortcut reduce/enlarge key and go to step **⑤**.

2 Press the [Enlarge] or [Reduce] key.

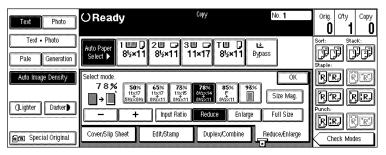


- 3 Select a ratio.
- 4 Press the [OK] key.
- **5** Set your originals, then press the [Start] key.

Shrink&Center mode

Use "Shrink&Center" to reduce the image by 93% of its original size with the center position as reference. You can register this function in a shortcut key on the initial display. By combining it with the Reduce/Enlarge function, you can also provide the Reduce/Enlarge copy with a margin.

𝚱 Note


- ☐ You can register "Shrink&Center" in a shortcut key. See "Shortcut Keys" in \Rightarrow p.296 "General Features $^3/_3$ ".
- □ You can change the Reduce/Enlarge ratio for "Shrink&Center". See "Shrink&Center" in \Rightarrow p.298 "Reproduction Ratio $^2/_2$ ".
- 1 Press the [Shrink&Center] key on the initial display.

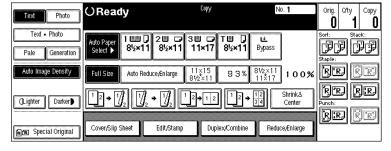

2 If you do not wish to combine it with the Reduce/Enlarge function, set your originals, then press the [Start] key.


Zoom

You can change the reproduction ratio in 1% steps.

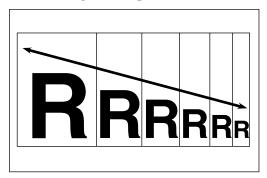

Note


- ☐ The following ratios can be selected:
 - Metric version: 25 400%
 - Inch version: 25 400%
- ☐ You can select a ratio regardless of the size of an original or copy paper. With some ratios, parts of the image might not be copied or margins will appear on copies.
- ☐ You can select a preset ratio which is near the desired ratio, then adjust the ratio with the [+] or [-] key.
- 1 Press the [Reduce/Enlarge] key.

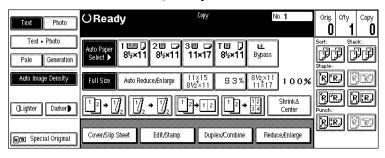

2 Enter the ratio.

To select the ratio with the [+] and [-] keys


• Select a preset ratio which is close to the desired ratio by using [Reduce] or [Enlarge].

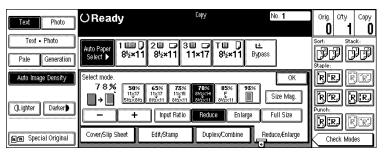

- 2 Adjust the ratios with the [+] or [-] key.
 - Note
 - ☐ To change the ratio in 1% steps, just press the [+] or [-] key. To change the ratio in 10% steps, press and hold down the [+] or [-] key.

To enter the ratio with the number keys


• Press the [Input Ratio] key.

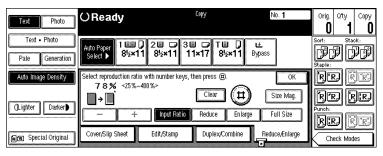

- 2 Enter the desired ratio with the number keys.
 - Note
 - ☐ To change the ratio entered, press the [Clear] or [Clear/Stop] key and enter the new ratio.
- 3 Press the [#] key.
- 4 Press the [OK] key.
- **3** Set your originals, then press the [Start] key.

Size Magnification

This function calculates an enlargement or reduction ratio based upon the lengths of the original and copy.

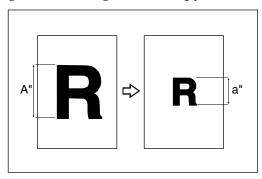

Preparation

Measure and specify the lengths of the original and copy by comparing "A" with "a".


Limitation

☐ If the calculated ratio is over the maximum or under the minimum ratio, it is corrected within the range of the ratio automatically. However, with some ratios, parts of the image might not be copied or blank margins will appear on copies.


Note

 \square A ratio is selected in the range of 25 to 400%.


1 Press the [Reduce/Enlarge] key.

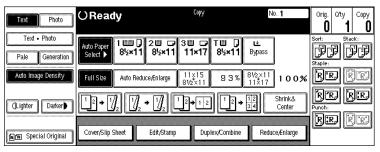

Press the [Size Mag.] key.

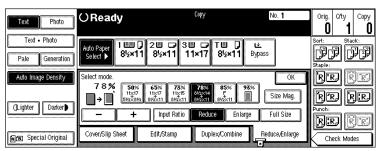

- Make sure that the [Size Mag.] key is highlighted.
- 4 Enter the length of the original with the number keys and press the [#] key.

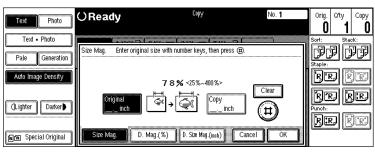

𝚱 Note

☐ You can enter sizes within the following ranges:

Metric version	1 – 999 mm (in 1 mm steps)
Inch version	0.1" – 99.9" (in 0.1" steps)


- ☐ To change the length entered, press the [Clear] or [Clear/Stop] key and enter the new length.
- **5** Enter the length of the copy with the number keys and press the [#] key.

Note

- ☐ To change the length entered, press the [Clear] or [Clear/Stop] key and enter the new length.
- ☐ To change the length after pressing the [#] key, select [Original] or [Copy] and enter the desired length.
- 6 Press the [OK] key.
- **7** Press the [OK] key.
- 8 Set your original, then press the [Start] key.

Directional Magnification (%)

Copies can be reduced or enlarged at different reproduction ratios horizontally and vertically.

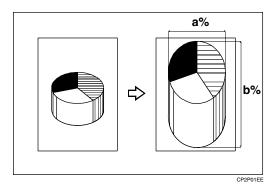


𝚱 Note

☐ The following ratios can be selected:


• Metric version: 25 – 400%

• Inch version: 25 – 400%


- ☐ You can select a ratio regardless of the size of an original or copy paper. With some ratios, parts of the image might not be copied or blank margins will appear on copies.
- ☐ You can also select a preset ratio which is close to the desired ratio by using [Reduce] or [Enlarge], then adjust the ratio with the [+] or [-] key.
- 1 Press the [Reduce/Enlarge] key.

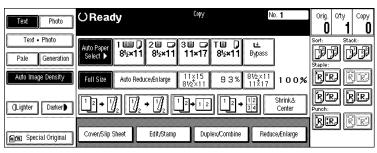

2 Press the [Size Mag.] key.

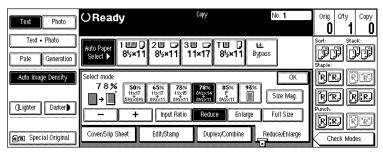


Press the [D. Mag.(%)] key.

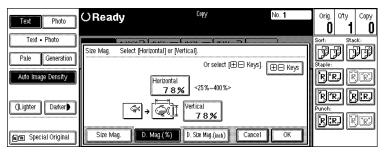

To specify a ratio with the [+] and [-] keys


- Press the [+- Keys] key.
- 2 Press the [Horizontal] key.

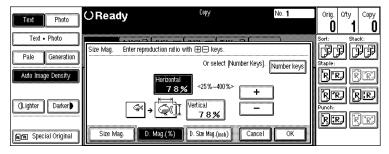

- **3** Adjust the ratio using the [**+**] or [**−**] key.
 - Note
 - □ Pressing the [+] or [-] key changes the ratio in 1% steps. Pressing and holding down the [+] or [-] key changes it in 10% steps.
 - ☐ If you have incorrectly entered the ratio, readjust the ratio with the [+] or [-] key.
- 4 Press the [Vertical] key.
- **⑤** Adjust the ratio with the [**十**] or [**−**] key.
- 6 Press the [OK] key.

To enter the ratio with the number keys


• Press the [Horizontal] key.

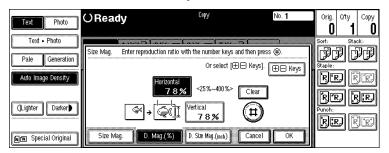

- 2 Enter the desired ratio with the number keys, followed by the [#] key.
 - Ø Note
 - ☐ To change the ratio entered, press the [Clear] or [Clear/Stop] key and enter the new ratio.
- 3 Press the [Vertical] key.
- 4 Enter the desired ratio with the number keys, followed by the [#] key.
- **6** Press the [OK] key.
- Press the [OK] key.
- **5** Set your originals, then press the [Start] key.

Directional Size Magnification (inch)

The suitable reproduction ratios will be automatically selected when you enter the horizontal and vertical lengths of the original and copy image you require.

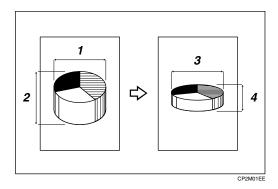

- 1: Horizontal original size
- 2: Vertical original size
- 3: Horizontal copy size
- 4: Vertical copy size

Preparation

Specify the vertical and horizontal sizes of the original and those of the copy, as shown in the illustration.

Limitation

☐ If the calculated ratio is over the maximum or under the minimum ratio, it is corrected within the range of the ratio automatically. However, with some ratios, parts of the image might not be copied or blank margins will appear on copies.

Note

☐ You can enter sizes within the following ranges:


Metric version	1 – 999 mm (in 1 mm steps)
Inch version	0.1" – 99.9" (in 0.1" steps)

☐ The following ratios can be selected:


• Metric version: 25 – 400%

• Inch version: 25 – 400%


1 Press the [Reduce/Enlarge] key.

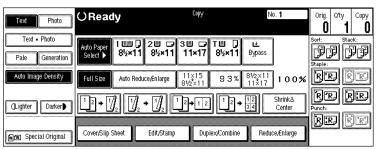

2 Press the [Size Mag.] key.

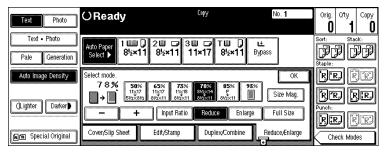

Press the [D. Size Mag.(inch)]key.

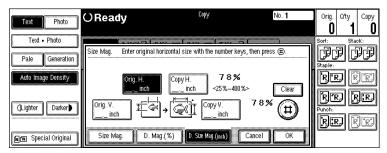


- 4 Enter the horizontal size of the original with the number keys, then press the [#] key.
 - Note
 - ☐ To change the value entered, press the [Clear] or [Clear/Stop] key and enter the new value.
- Enter the horizontal size of the copy with the number keys, then press the [#] key.
- 6 Enter the vertical size of the original with the number keys, then press the [#] key.

- **T** Enter the vertical size of the copy with the number keys, then press the [#] key.
 - **𝒯** Note
 - ☐ To change the length, press the place you wish to change and enter the new value.
- Press the [OK] key.
- **9** Press the [OK] key.
- 1 Set your originals, then press the [Start] key.

Duplex/Combine

You can make copies in a variety of formats by combining the following modes:


- 1 Sided/2 Sided originals
- 1 Sided/2 Sided copies
- Duplex
- Combine
- Book
- Series
- 1 Check your originals and select [1 Sided] or [2 Sided] for the originals.

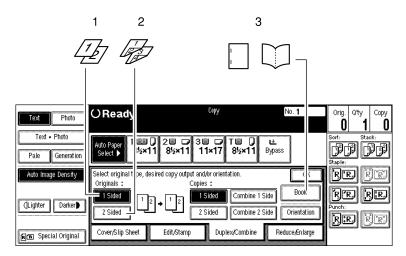

ZBQS100N

- 1: 1-sided
- 2: 2-sided
- 3: Book

2 Select [1 Sided] or [2 Sided] for copying.

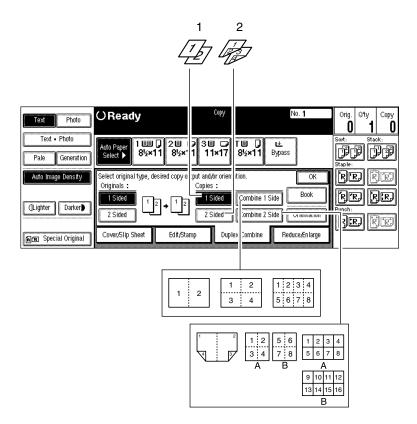

ZBQS110E

1: 1-sided

2: 2-sided


A: Front

B: Back

Press the [OK] key.

Original Direction and Completed Copies

The resulting copy image will differ according to the direction in which you set your original (lengthwise \square or widthwise \square).

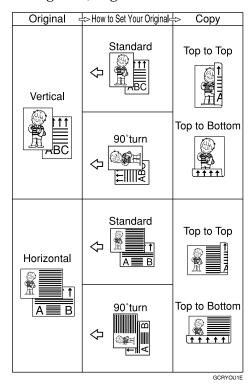


𝒜 Note

☐ The illustrations show the directions of copied images on the front and back, not the directions of delivery.

Originals and Copy Direction


You can select the orientation (**[Top to Top]**, **[Top to Bottom]**). See \Rightarrow p.108 "Specifying Orientation of Bound Originals".

• Top to Top

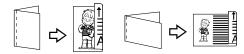

Duplex1

• Top to Bottom

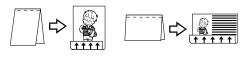


Duplex2

Specifying Orientation of Bound Originals


You can specify the orientation of bound originals (how you turn the pages). The default setting is **[Top to Top]**.

𝚱 Note


- ☐ You can change the orientation default with the User Tools. See "Copy Orientation in Duplex Mode" and "Original Orientation in Duplex Mode" in \Rightarrow p.295 "General Features $^2/_3$ ".
- 1 Press the [Duplex/Combine] key.

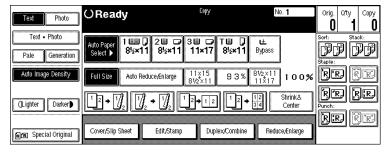

2 Press the [Orientation] key.

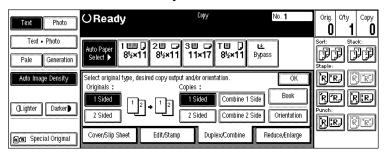

3 Select an original orientation and a copy orientation.

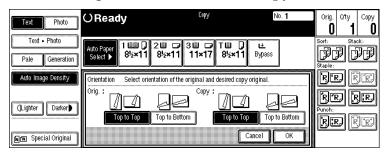

4 Press the [OK] key.

Duplex

This function can be used in two ways:

♦ 1 Sided → 2 Sided

This mode makes two-sided copies from one-sided originals.


♦ 2 Sided → 2 Sided

This mode makes two-sided copies from two-sided originals.

Limitation


- $\hfill \square$ You cannot use the following copy paper in this function:
 - Paper smaller than A5 \Box , $5^1/2$ " \times $8^1/2$ " \Box (possible on A5 \Box , $5^1/2$ " \times $8^1/2$ " \Box)
 - Paper thicker than 105 g/m², 28 lb. Bond
 - Paper thinner than 64 g/m², 17 lb. Bond
 - Translucent paper
 - Adhesive labels
 - OHP transparencies
 - Postcards
- ☐ You cannot use the bypass tray with this function.

1 Sided \rightarrow 2 Sided

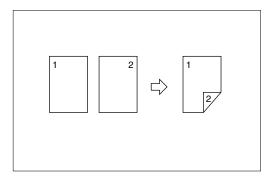


Note

- ☐ If you set an odd number of 1-sided originals in the document feeder, the reverse side of the last page is left blank.
- □ If you set originals in the document feeder and select Sort mode, all the originals will be scanned before being copied. Therefore, the copy speed is faster than that when Sort mode is not selected. See "Auto Sort Mode" in ⇒ p.309 "Input/Output".
- □ When original images are copied, the images are shifted by a width of the binding margin. You can adjust the binding margin or binding position. You can also change their default values. See "Front Margin: Left/Right", "Back Margin: Left/Right", "Front Margin: Top/Bottom" and "Back Margin: Top/Bottom" in ⇒ p.299 "Page Format 1/2".
- \square A binding margin can be automatically made on the back side. See "1 \rightarrow 2 Duplex Auto Margin Adjust" in \Rightarrow p.299 "Page Format $^{1}/_{2}$ ".
- 1 Press the [Duplex/Combine] key.

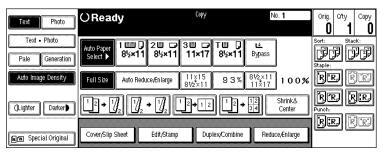

Press the [1 Sided] key for original, then press the [2 Sided] key for copy.

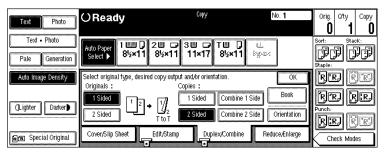


- Note
- □ To change the copy orientation to "Top to Bottom", press the **[Orientation]** key and select **[Top to Bottom]**. See \Rightarrow p.108 "Specifying Orientation of Bound Originals".
- Press the [OK] key.
- 4 Set your originals, then press the [Start] key.


When setting an original on the exposure glass or in the document feeder using Batch (SADF) mode

- \Rightarrow p.38 "Batch (SADF) mode".
- Set the original, then press the [Start] key.
 - Note
 - \square Start with the first page to be copied.
- 2 Set the next original. When it is placed on the exposure glass, press the [Start] key.
- **3** Press the [#] key after the last original has been scanned.


2 Sided \rightarrow 2 Sided

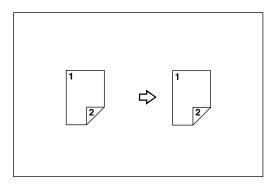

1 Press the [Duplex/Combine] key.

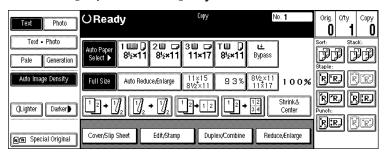

Press the [2 Sided] key for original, then press the [2 Sided] key for copy.

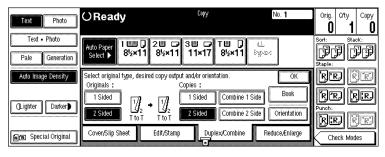

- **𝚱** Note
- ☐ To change the copy orientation to "Top to Bottom", press the **[Orientation]** key and select **[Top to Bottom]**. See \Rightarrow p.108 "Specifying Orientation of Bound Originals".
- Press the [OK] key.

4 Set your originals, then press the [Start] key.

When setting an original on the exposure glass or in the document feeder using Batch (SADF) mode

 \Rightarrow p.38 "Batch (SADF) mode".

- Set the original, then press the [Start] key.
 - Note
 - \square Start with the first page to be copied.
- 2 Set the next original. When it is placed on the exposure glass, press the [Start] key.
- **3** Press the [#] key after the last original has been scanned.

Combine

You can combine two or more originals into one copy. 1 Sided Combine mode is for 1-sided copies, and 2 Sided Combine mode for 2-sided copies.

This function can be used in twelve ways:

♦ 1 Sided 2 Pages → Combine 1 Side

Copies two 1-sided originals to one side of a sheet.

♦ 1 Sided 4 Pages → Combine 1 Side

Copies four 1-sided originals together to one side of a sheet.

♦ 1 Sided 8 Pages → Combine 1 Side

Copies eight 1-sided originals together to one side of a sheet.

♦ 1 Sided 4 Pages → Combine 2 Side

Copies four 1-sided originals to the two-page spread on both sides of a sheet.

♦ 1 Sided 8 Pages → Combine 2 Side

Copies eight 1-sided originals together to both sides of a sheet.

♦ 1 Sided 16 Pages → Combine 2 Side

Copies 16 1-sided originals together to both sides of a sheet.

♦ 2 Sided 2 Pages → Combine 1 Side

Copies one 2-sided original to one side of a sheet.

♦ 2 Sided 4 Pages → Combine 1 Side

Copies two 2-sided originals to one side of a sheet.

♦ 2 Sided 8 Pages → Combine 1 Side

Copies four 2-sided originals to one side of a sheet.

◆ 2 Sided 4 Pages → Combine 2 Side

Copies two 2-sided originals together to both sides of a sheet.

♦ 2 Sided 8 Pages → Combine 2 Side

Copies four 2-sided originals together to both sides of a sheet.

♦ 2 Sided 16 Pages → Combine 2 Side

Copies eight 2-sided originals together to both sides of a sheet.


Limitation

☐ You cannot use the bypass tray with this function.

☐ If the calculated ratio is under the minimum ratio, it is corrected within the range of the ratio automatically. However, with some ratios, parts of the image might not be copied.


Note

- ☐ In this mode, the machine selects the reproduction ratio automatically. This reproduction ratio depends on the copy paper sizes and the number of originals.
- ☐ The machine uses ratios in the following range:
 - Metric version: 25 400%
 - Inch version: 25 400%
- \square A separation line between originals can be printed with the User Tools. See "Combine Separation Line" in \Rightarrow p.301 "Page Format $^2/_2$ ".
- ☐ Even if the direction of originals is different from that of the copy paper, the machine will automatically rotate the image by 90° to make copies properly.
- ☐ When making copies in Combine mode, the border of each original can be automatically erased by 3 mm, 0.1". See "Combine Orig. Shadow Erase" in \Rightarrow p.299 "Page Format $^{1}/_{2}$ ".
- ☐ If the number of originals placed is less than the number specified for combining, the last page is copied blank as shown in the illustration.

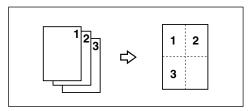


- ☐ You can change the copy order in Combination mode. See "Copy Order In Combine Mode" in \Rightarrow p.301 "Page Format $^2/_2$ ".
- ☐ Direction of the originals and arrangement of combined images

◆ Portrait (□) originals

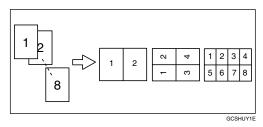


♦ Landscape (□) originals

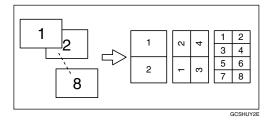


1 Sided 2 Pages \rightarrow Combine 1 Side

Copies two 1-sided originals to one side of a sheet.

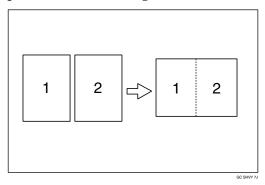


Setting originals (Originals set in the document feeder)

• Originals read from left to right

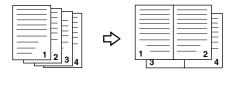


Combine5

• Originals read from top to bottom

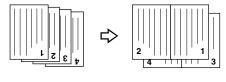


Combine6


1 Press the [Duplex/Combine] key.

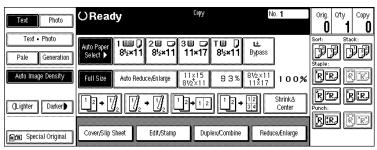


Press the [1 Sided] key for the original, then press the [Combine 1 Side] key for the copy.

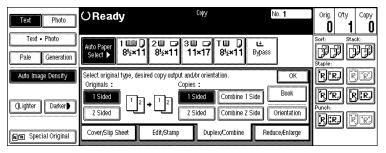

Press the [2 Originals] key, then press the [OK] key.

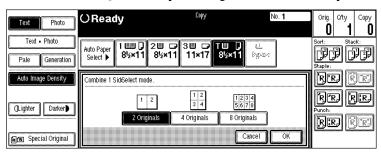


4 Select the paper.

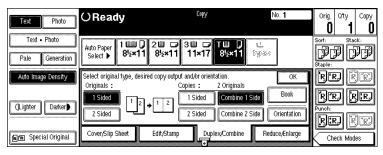


5 Set your originals, then press the [Start] key.

1 Sided 4 Pages → Combine 1 Side


Copies four 1-sided originals together to one side of a sheet.

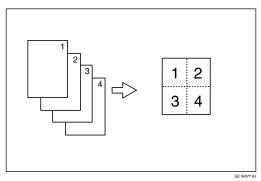


1 Press the [Duplex/Combine] key.

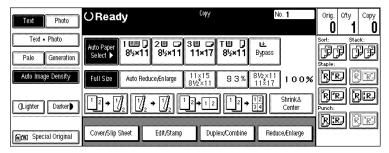


Press the [1 Sided] key for the original, then press the [Combine 1 Side] key for the copy.

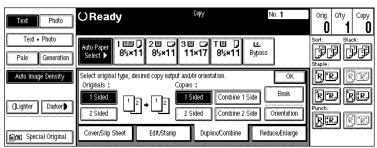

Press the [4 Originals] key, then press the [OK] key.

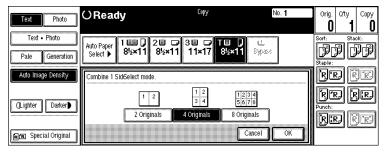


4 Select the paper.

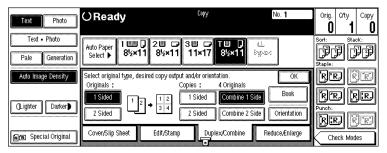


5 Set your originals, then press the [Start] key.

1 Sided 8 Pages → Combine 1 Side


Copies eight 1-sided originals together to one side of a sheet.

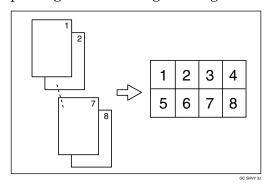


1 Press the [Duplex/Combine] key.

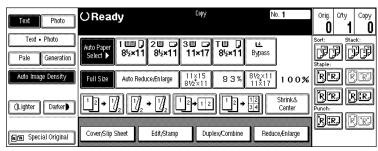


Press the [1 Sided] key for the original, then press the [Combine 1 Side] key for the copy.

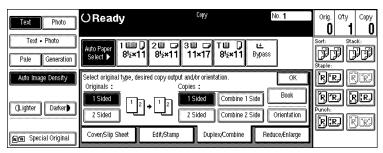

Press the [8 Originals] key, then press the [OK] key.

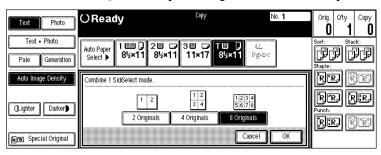


4 Select the paper.

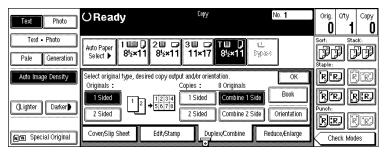


5 Set your originals, then press the [Start] key.

1 Sided 4 Pages → Combine 2 Side


Copies four 1-sided originals to the two-page spread on both sides of a sheet.

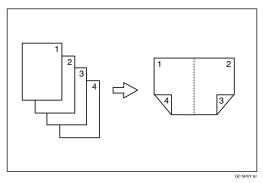


1 Press the [Duplex/Combine] key.

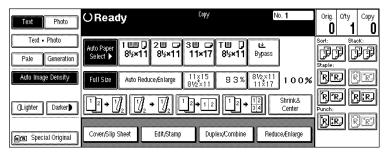


Press the [1 Sided] key for the original, then press the [Combine 2 Side] key for the copy.

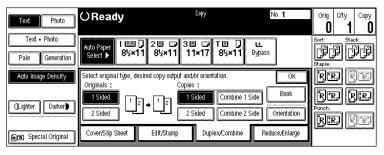

Press the [4 Originals] key, then press the [OK] key.

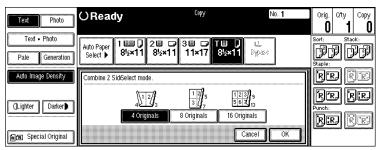


4 Check the orientation.

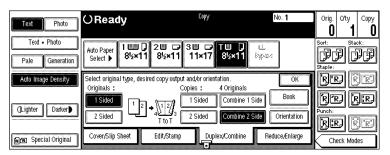

- **𝒯** Note
- □ To change the copy orientation to "Top to Bottom", press the **[Orientation]** key and select **[Top to Bottom]**. See \Rightarrow p.108 "Specifying Orientation of Bound Originals".
- Press the [OK] key.
- 6 Select the paper.
- **7** Set your originals, then press the **[Start]** key.


1 Sided 8 Pages → Combine 2 Side

Copies eight 1-sided originals together to both sides of a sheet.

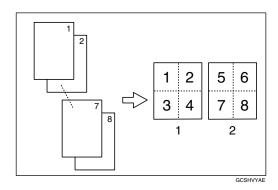


- 1. Front
- 2. Back


1 Press the [Duplex/Combine] key.

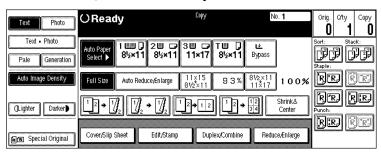


2 Press the [1 Sided] key for the original, then press the [Combine 2 Side] key for the copy.

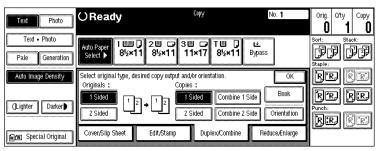

Press the [8 Originals] key, then press the [OK] key.

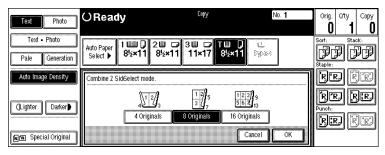

4 Check the orientation.

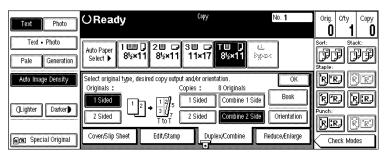


𝒯 Note

- □ To change the copy orientation to "Top to Bottom", press the **[Orientation]** key and select **[Top to Bottom]**. See \Rightarrow p.108 "Specifying Orientation of Bound Originals".
- Press the [OK] key.
- 6 Select the paper.
- **7** Set your originals, then press the **[Start]** key.


1 Sided 16 Pages → Combine 2 Side

Copies sixteen 1-sided originals together to both sides of a sheet.

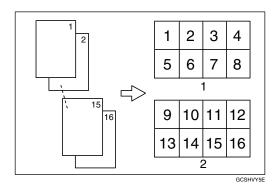


- 1. Front
- 2. Back


1 Press the [Duplex/Combine] key.

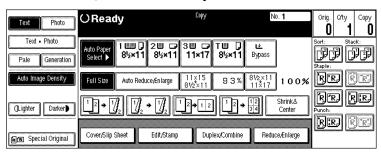


Press the [1 Sided] key for the original, then press the [Combine 2 Side] key for the copy.

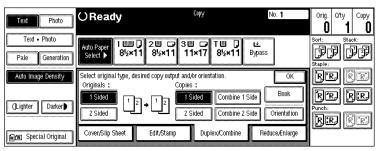

Press the [16 Originals] key, then press the [OK] key.

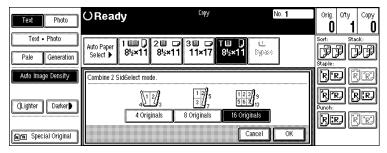

4 Check the orientation.

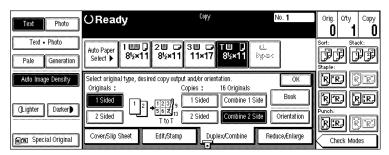


Note


- □ To change the copy orientation to "Top to Bottom", press the **[Orientation]** key and select **[Top to Bottom]**. See \Rightarrow p.108 "Specifying Orientation of Bound Originals".
- Press the [OK] key.
- 6 Select the paper.
- **7** Set your originals, then press the [Start] key.

2 Sided 2 Pages → Combine 1 Side


Copies one 2-sided original to one side of a sheet.

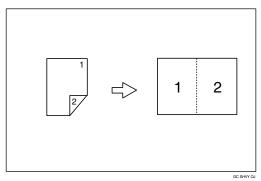


1 Press the [Duplex/Combine] key.

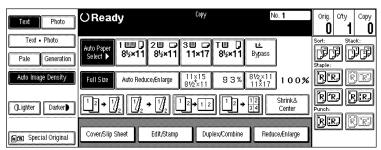


Press the [2 Sided] key for the original, then press the [Combine 1 Side] key for the copy.

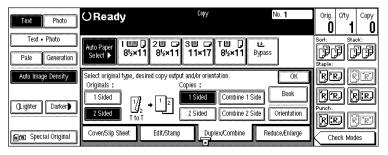

Press the [2 Pages] key, then press the [OK] key.

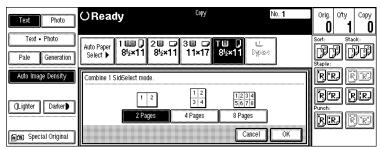

4 Check the orientation.

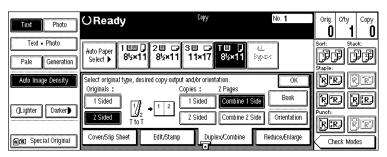


Note


- □ To change the copy orientation to "Top to Bottom", press the **[Orientation]** key and select **[Top to Bottom]**. See \Rightarrow p.108 "Specifying Orientation of Bound Originals".
- Press the [OK] key.
- 6 Select the paper.
- **7** Set your originals, then press the **[Start]** key.

2 Sided 4 Pages → Combine 1 Side


Copies two 2-sided originals to one side of a sheet.

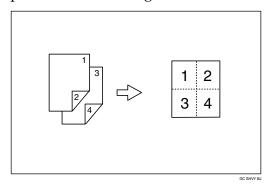


1 Press the [Duplex/Combine] key.

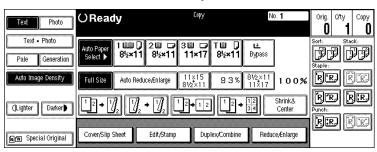


Press the [2 Sided] key for the original, then press the [Combine 1 Side] key for the copy.

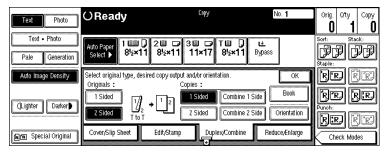

Press the [4 Pages] key, then press the [OK] key.

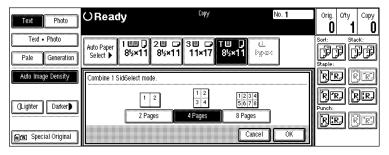


4 Check the orientation.

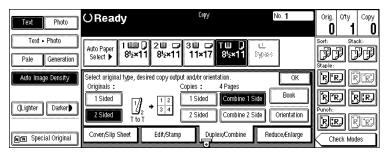


- Note
- □ To change the copy orientation to "Top to Bottom", press the **[Orientation]** key and select **[Top to Bottom]**. See \Rightarrow p.108 "Specifying Orientation of Bound Originals".
- Press the [OK] key.
- 6 Select the paper.
- **7** Set your originals, then press the [Start] key.

2 Sided 8 Pages → Combine 1 Side


Copies four 2-sided originals to one side of a sheet.

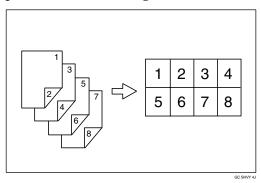


1 Press the [Duplex/Combine] key.

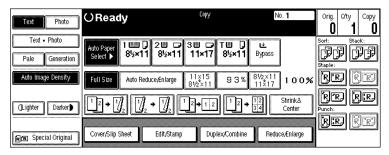


2 Press the [2 Sided] key for the original, then press the [Combine 1 Side] key for the copy.

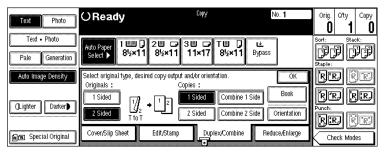

Press the [8 Pages] key, then press the [OK] key.

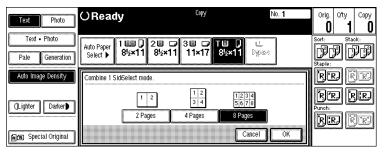

4 Check the orientation.

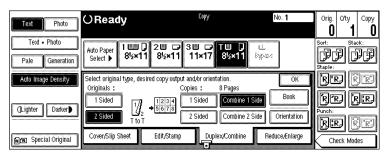


Note


- □ To change the copy orientation to "Top to Bottom", press the **[Orientation]** key and select **[Top to Bottom]**. See \Rightarrow p.108 "Specifying Orientation of Bound Originals".
- Press the [OK] key.
- 6 Select the paper.
- **7** Set your originals, then press the **[Start]** key.

2 Sided 4 Pages → Combine 2 Side


Copies 2-sided originals together to both sides of a sheet.

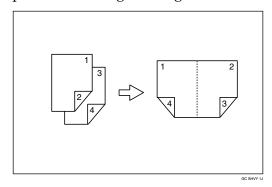


1 Press the [Duplex/Combine] key.

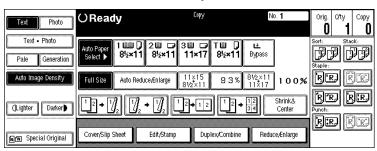


Press the [2 Sided] key for the original, then press the [Combine 2 Side] key for the copy.

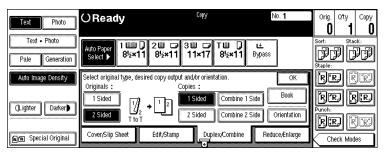

Press the [4 Pages] key, then press the [OK] key.

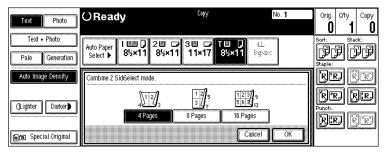


4 Check the orientation.

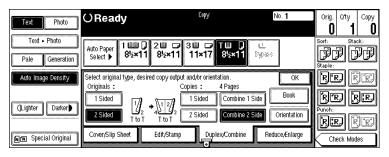


- Note
- □ To change the copy orientation to "Top to Bottom", press the **[Orientation]** key and select **[Top to Bottom]**. See \Rightarrow p.108 "Specifying Orientation of Bound Originals".
- Press the [OK] key
- 6 Select the paper.
- **7** Set your originals, then press the [Start] key.

2 Sided 8 Pages → Combine 2 Side


Copies four 2-sided originals together to both sides of a sheet.

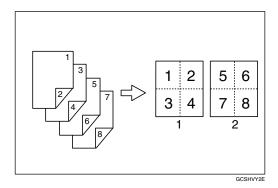


- 1. Front
- 2. Back
- 1 Press the [Duplex/Combine] key.

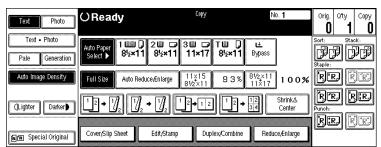


Press the [2 Sided] key for the original, then press the [Combine 2 Side] key for the copy.

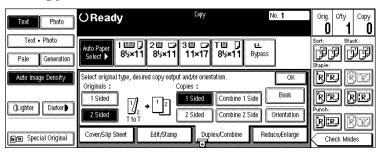

3 Press the [8 Pages] key, then press the [OK] key.

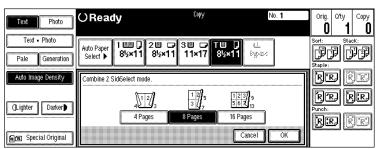


4 Check the orientation.

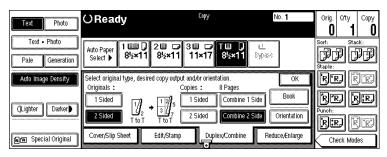


- Note
- □ To change the copy orientation to "Top to Bottom", press the **[Orientation]** key and select **[Top to Bottom]**. See \Rightarrow p.108 "Specifying Orientation of Bound Originals".
- Press the [OK] key
- 6 Select the paper.
- **7** Set your originals, then press the [Start] key.

2 Sided 16 Pages → Combine 2 Side


Copies eight 2-sided originals together to both sides of a sheet.

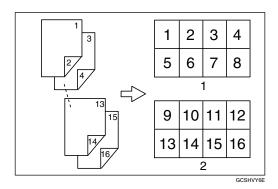


- 1. Front
- 2. Back
- 1 Press the [Duplex/Combine] key.

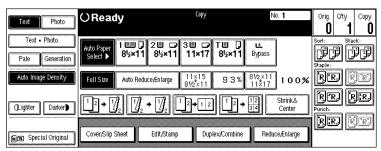


2 Press the [2 Sided] key for the original, then press the [Combine 2 Side] key for the copy.

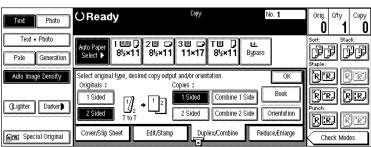

Press the [16 Pages] key, then press the [OK] key.

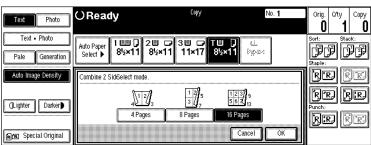

4 Check the orientation.

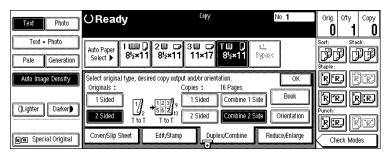

- Note
- □ To change the copy orientation to "Top to Bottom", press the **[Orientation]** key and select **[Top to Bottom]**. See \Rightarrow p.108 "Specifying Orientation of Bound Originals".
- Press the [OK] key.
- 6 Select the paper.
- **7** Set your originals, then press the [Start] key.

Series/Book

Series copies are made by separately copying the front and back of a 2-sided original or the two facing pages of a spread original onto two sheets of paper. A book is made by copying two or more originals in page order.

The following types of Series and Book modes can be used:

Series Copies

♦ Book → 1 Sided

Copies the two facing pages of a spread original to make two 1-sided copies.

◆ 2 Sided → 1 Sided

Copies the front and back of a 2-sided original to make two 1-sided copies.

Book

♦ Book → 2 Sided

Copies a spread two-page original onto both sides of a sheet.

♦ Multi → 2 Sided

Copies each spread two-page original as it is onto both sides of a sheet.

Booklet

Make copies in page order for a folded booklet.


Magazine

Copies two or more originals to make copies in page order (as when they are folded and stacked).

Series Copies

Book \rightarrow 1 Sided

You can make one-sided copies from two facing pages of a bound original (book).

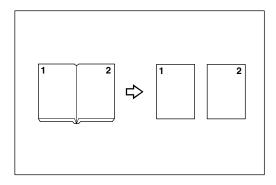

Note

 $\hfill\square$ See the following table when you select original and copy paper sizes with 100% ratio:


♦ Metric version

Original	Copy paper
A3D	$A4 \square \times 2$ sheets
B4□	B5 $\square \times 2$ sheets
A4C	A5 \square × 2 sheets


❖ Inch version

Original	Copy paper
11"×17"□	$8^1/_2$ " × 11" \square × 2 sheets
8 ¹ / ₂ "×11" □	$5^1/_2$ " \times $8^1/_2$ " \square \times 2 sheets


1 Press the [Duplex/Combine] key.

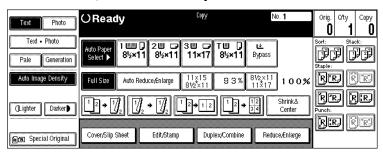

2 Press the [Book] key.

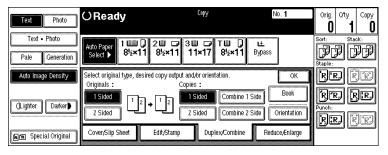


3 Press the [Book→1 Sided] key.

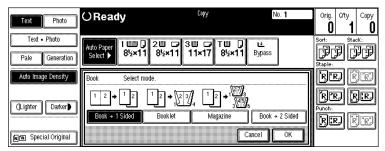


- 4 Press the [OK] key.
- **5** Press the [OK] key.
- **1** Make sure that the [Auto Paper Select] key is selected.
 - Ø Note
 - ☐ If the [Auto Paper Select] key is not selected, press the [Auto Paper Select] key.
- **7** Set your originals, then press the [Start] key.

2 Sided→1 Sided


You can make one-sided copies from two-sided originals.

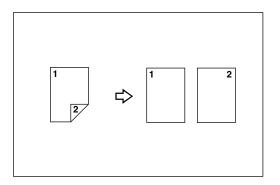

1 Press the [Duplex/Combine] key.

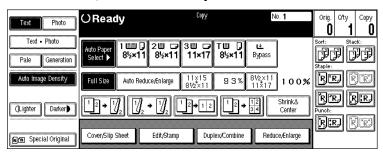

Press the [2 Sided] key for the original, then press the [1 Sided] key for the copy.

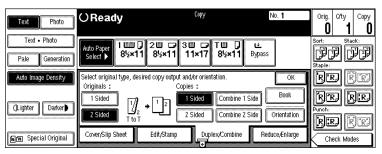

- 3 Check the orientation.
 - Note
 - ☐ To change the original orientation to "Top to Bottom", press the **[Orientation]** key, then select **[Top to Bottom]**. See ⇒ p.108 "Specifying Orientation of Bound Originals".
- 4 Press the [OK] key
- **5** Set your originals, then press the [Start] key.

Copying Book Originals

Limitation


- ☐ You cannot use the bypass tray with this function.
- ☐ The machine cannot copy originals different in size and direction.

Note

- ☐ The machine sets the reproduction ratio automatically to meet the paper size and copies the originals together onto the paper.
- \Box The machine uses ratios in the range of 25 to 400%.
- ☐ If the calculated ratio is under the available minimum ratio, it will be adjusted to the minimum ratio. However, with some ratios, parts of the image might not be copied.
- ☐ Even if the direction of originals is different from that of the copy paper, the machine will automatically rotate the image by 90° to make copies properly.

Book→2 Sided

Copies a two-page spread original onto both sides of a sheet.

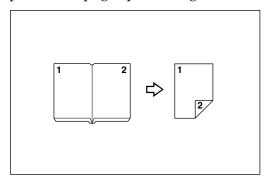

𝚱 Note

 \square See the following table when you select original and copy paper sizes with 100% ratio:


Metric version

Original	Copy paper
A3D	A4 (2-sided)
B4D	B5 (2-sided)
A4C	A5 (2-sided)


Inch version

Original	Copy paper
11"×17"□	8 ¹ / ₂ " × 11" (2-sided)
8 ¹ / ₂ "×11"□	$5^{1}/_{2}$ " × $8^{1}/_{2}$ " (2-sided)


1 Press the [Duplex/Combine] key.

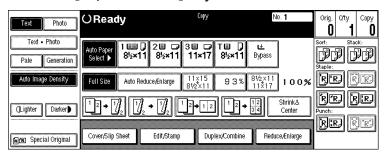


2 Press the [Book] key.

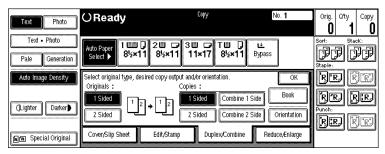

Press the [Book→2 Sided] key.

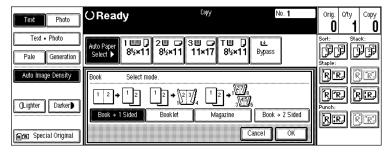


4 Press the [Book→2 Sided] key.

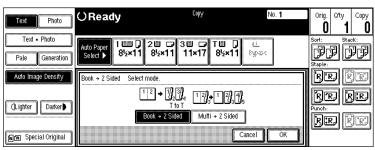

- Press the [OK] key.
- **6** Select the paper.
- **7** Set your originals, then press the [Start] key.

Multi → 2 Sided

Copies each two-page spread original as it is onto both sides of a sheet.

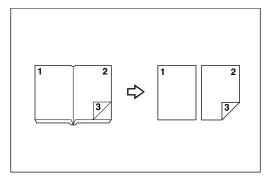

Note

☐ See the following table when you select original and copy paper sizes with 100% ratio:


♦ Metric version

Original	Copy paper
A3D	A4 (2-sided)
B4□	B5 (2-sided)
A4C	A5 (2-sided)


♦ Inch version

Original	Copy paper
11"×17"□	$8^{1}/_{2}$ " × 11" (2-sided)
8 ¹ / ₂ "×11"□	$5^{1}/_{2}$ " × $8^{1}/_{2}$ " (2-sided)


1 Press the [Duplex/Combine] key.

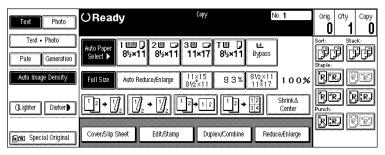


2 Press the [Book] key.

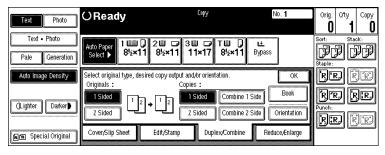

3 Press the [Book→2 Sided] key.

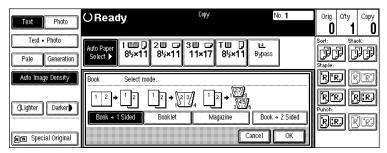

4 Press the [Multi→2 Sided] key.

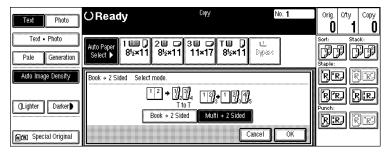

- **5** Press the [OK] key.
- 6 Select the paper.

7 Set your originals, then press the [Start] key.


𝒯 Note

☐ When placing one original on the exposure glass or in the document feeder in Batch (SADF) mode, press the [#] key after all originals are scanned.


Booklet

Make copies in page order for a folded booklet as shown in the following illustrations:

Portrait

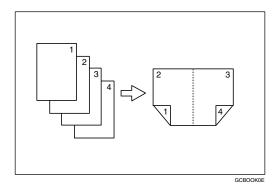

❖ Landscape

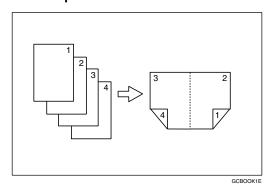

#Important


☐ Before selecting this function, select "Portrait" or "Landscape" with the User Tools. See "Booklet/Magazine Original Orientation" in \Rightarrow p.301 "Page Format $^2/_2$ ".

𝚱 Note

- ☐ Four originals are copied onto each sheet of copy paper.
- ☐ In this mode, the machine sets the reproduction ratio automatically to meet the paper size and copies the originals together onto the paper.
- \square A ratio is selected in the range of 25 to 400%.

- ☐ If the calculated ratio is under the available minimum ratio, it will be adjusted to the minimum ratio. However, with some ratios, parts of the image might not be copied.
- ☐ If the number of originals scanned is less than a multiple of 4, the last page is copied blank.
- ☐ You can have a 3 mm, 0.1" bounding margin around all four edges of the original left blank (erased). See "Combine Orig. Shadow Erase" in \Rightarrow p.299 "Page Format $^{1}/_{2}$ ".


How to fold copies to make a booklet

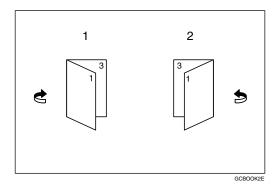


1. Portrait

2. Landscape


1 Press the [Duplex/Combine] key.

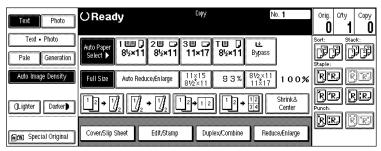

2 Press the [Book] key.

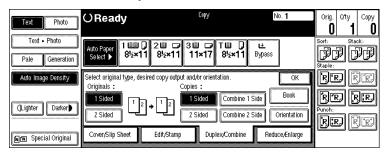

Press the [Booklet] key, followed by the [OK] key.

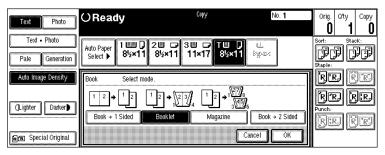


- 4 Select the paper.
- **5** Set your originals, then press the [Start] key.
 - Note
 - ☐ When placing one original on the exposure glass or in the document feeder in Batch (SADF) mode, press the [#] key after all originals are scanned.


Magazine

Copies two or more originals to make copies in page order when they are folded and stacked.

❖ Portrait

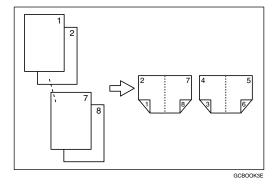

♦ Landscape

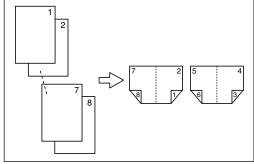

GCBOO

#Important


☐ Before selecting this function, select "Portrait" or "Landscape" with the User Tools. See "Booklet/Magazine Original Orientation" in \Rightarrow p.301 "Page Format $^2/_2$ ".

Note


- \square To use this function with two-sided originals, select this function from the Shortcut Keys. See "Shortcut Keys" in \Rightarrow p.296 "General Features $^3/_3$ ".
- ☐ Four originals are copied onto each sheet of copy paper.
- ☐ In this mode, the machine sets the reproduction ratio automatically to meet the paper size and copies the originals together onto the paper.
- \square A ratio is selected in the range of 25 to 400%.
- ☐ If the calculated ratio is under the available minimum ratio, it will be adjusted to the minimum ratio. However, with some ratios, parts of the image might not be copied.
- ☐ If the number of originals scanned is less than a multiple of 4, the last page is copied blank.
- ☐ You can have a 3 mm bounding margin around all four edges of the original left blank (erased). See "Combine Orig. Shadow Erase" in \Rightarrow p.299 "Page Format $^{1}/_{2}$ ".
- ☐ The copying may take some time after scanning originals.

How to fold and unfold copies to make a magazine


Portrait

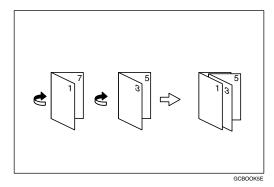


Landscape

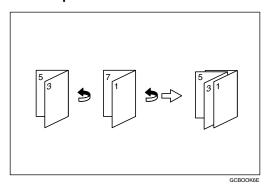


1 Press the [Duplex/Combine] key.

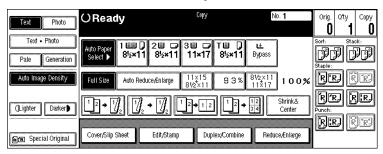

2 Press the [Book] key.

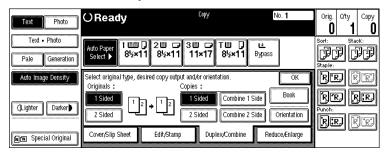

Press the [Magazine] key, followed by the [OK] key.

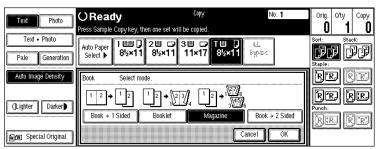

- 4 Select the paper.
- **5** Set your originals, then press the [Start] key.
 - Note
 - ☐ When placing one original on the exposure glass or in the document feeder in Batch (SADF) mode, press the [#] key after all originals are scanned.

Cover/Slip Sheet

Using this function, you can add or insert cover or paper designate.

There are four types in this function:

Front Cover

The first page of your originals is copied on a specific paper sheet for covers.

❖ Front/Back Covers

The first and last pages of your originals are copied on specific paper sheets for covers.

Paper Designate

Use this function to have certain pages of your original copied onto slip sheets.

Chapters

If you specify the first page of each chapter with this function, those pages will always appear on the front of copies when using 1 sided \rightarrow 2 sided mode.

Preparation

Before selecting this function, set the tray for front cover paper and slip sheet paper. See "Cover", "Slip Sheet 1" and "Slip Sheet 2" in the System Settings manual.

The cover or slip sheets should be identical in size and direction with the copy paper.

Limitation

☐ You cannot set the copy paper in the bypass tray. Only set the cover or slip sheets in the bypass tray.


Note

 \square If Blank mode is selected, the cover will not be counted as a copy.


Front Cover

The first page of your originals is copied on specific paper sheet for covers, or a cover sheet is inserted before the first copy.

Copy

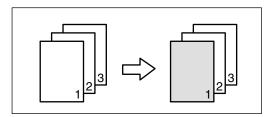


◆ Blank

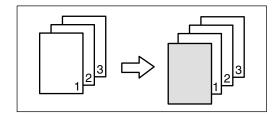


Note

- ☐ You can specify whether to make a copy on a sheet for covers. If you select **[Copy]**, the first page will be copied on the cover sheet. If you select **[Blank]**, a cover sheet will just be inserted before the first copy.
- □ When choosing **[Copy]**, select whether the front and back covers are copied single-sided ("1 Sided Only") or double-sided ("Duplex Copy"). See "Cover" in the System Settings manual.
- □ In "Cover" of the User Tools (System Settings), if you selected "Mode Selected" for "Tray Display" setting, the machine refers to the settings in "Cover" about whether the front and back covers are copied single-sided ("1 Sided Only") or double-sided ("Duplex Copy"). If you selected "Display Always" for "Tray Display", the machine refers to the settings in "Special Paper Indication" about whether the front and back covers are copied single-sided ("1 Sided Copy") or double-sided ("Duplex Copy"). See "Special Paper Indication" and "Cover" in the System Settings manual.
- □ When you use this function with Combine mode, you can specify whether to combine the front cover or not. See "Cover page in combine mode" in \Rightarrow p.301 "Page Format $^2/_2$ ".


1 Press the [Cover/Slip Sheet] key.

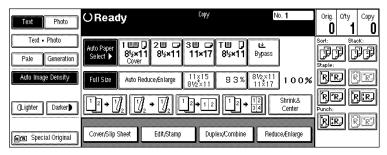


2 Press the [Front Cover] key.

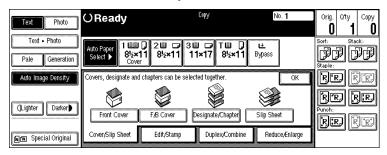

3 Select [Copy] or [Blank] for a cover sheet, and then press the [OK] key.

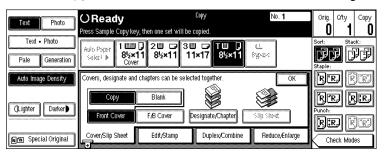

4 Select the paper tray containing the non-cover sheet paper.

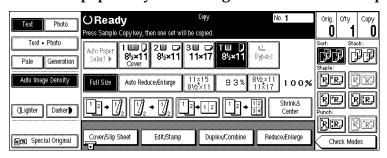


5 Set your originals in the document feeder, then press the [Start] key.


Front/Back Covers

The first and last pages of your originals are copied on specific paper sheets for covers.

Copy

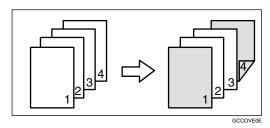


◆ Blank

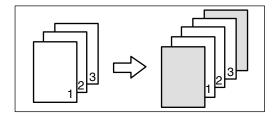


𝚱 Note

- ☐ You can specify whether to make a copy on a cover sheet. If you select [Copy], the first and last pages will be copied on the cover sheets. If you select [Blank], a cover sheet will just be inserted before the first copy and another sheet after the last copy.
- □ When choosing **[Copy]**, select whether the front and back covers are copied single-sided ("1 Sided Only") or double-sided ("Duplex Copy"). See "Cover" in the System Settings manual.
- □ In "Cover" of the User Tools (System Settings), if you selected "Mode Selected" for "Tray Display" setting, the machine refers to the settings in "Cover" about whether the front and back covers are copied single-sided ("1 Sided Only") or double-sided ("Duplex Copy"). If you selected "Display Always" for "Tray Display", the machine refers to the settings in "Special Paper Indication" about whether the front and back covers are copied single-sided ("1 Sided Copy") or double-sided ("Duplex Copy"). See "Special Paper Indication" and "Cover" in the System Settings manual.
- □ When making a 1-sided cover copy, you can specify whether to issue the back cover outside (outside page) or inside (inside page). See "Copy Back Cover" in \Rightarrow p.301 "Page Format $^2/_2$ ".


1 Press the [Cover/Slip Sheet] key.

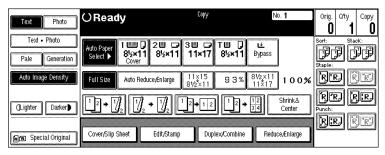


2 Press the [F/B Cover] key.

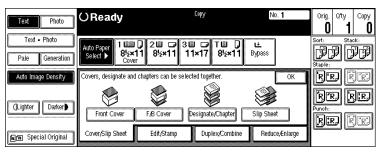

Select [Copy] or [Blank] for the cover sheets, and then press the [OK] key.

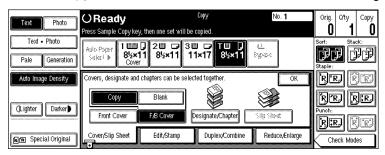


4 Select the paper tray containing the non-cover sheet paper.

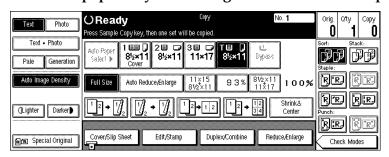

5 Set your originals in the document feeder, then press the [Start] key.

Designate

Use this function to have certain pages of your original copied onto slip sheets.

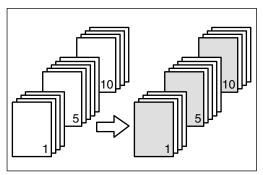

Preparation


Before using this function, set the special paper tray for slip sheets. See "Slip Sheet 1", "Slip Sheet 2" in the System Settings manual.

Limitation


☐ You cannot use this function with Slip Sheet mode.

Note


- \square You can specify the pages up to 20.
- \square When Combine mode ("1 Sided \rightarrow 2 Sided") has been selected, the page numbers you designate will always be copied onto the front of copies in the same way as Chapters mode.
- 1 Press the [Cover/Slip Sheet] key.

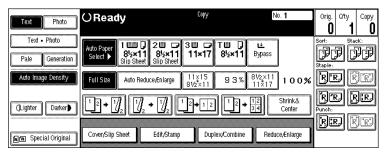


2 Press the [Designate/Chapter] key.

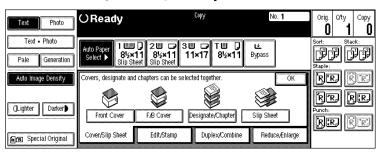

3 Press the key to select the chapter number.

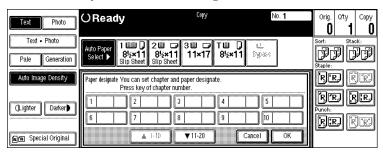


4 Enter the page number of the original's location you want to copy onto a slip sheet with the number keys. Then, press the [#] key.

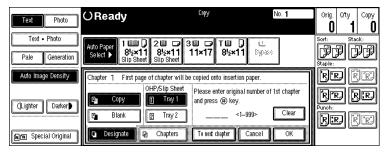


- Note
- ☐ To change the value entered, press the [Clear] or [Clear/Stop] key and enter the new value.
- 5 Select [Copy] or [Blank] for a slip sheet.
- **6** Select the paper tray for slip sheets.
- **7** Press the [OK] key.
 - Note
 - ☐ To display the settings for the next chapter, press the [To next chapter] key.

- **3** To specify another page location, repeat steps **3** to **7**.
 - Ø Note
 - \square To select chapters 11 to 20, press the **[\triangledown11-20]** key.
- When you wish to finish specifying page location, press the [OK] key.

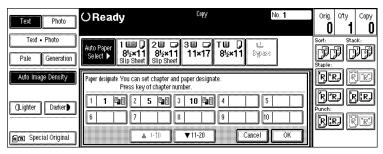

This display shows example settings.


- **𝚱** Note
- \square To change the number entered, enter the new number in the same way as steps \blacksquare to \blacksquare .
- Select the paper tray containing the non-slip sheet paper.

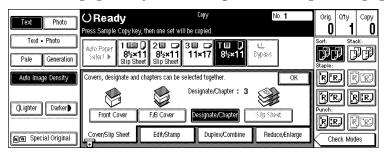

11 Set your originals, then press the [Start] key.

Chapters

The page locations you specify with this function will appear on the front of copy sheets.

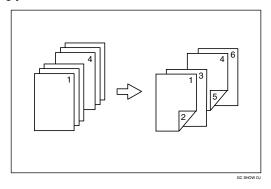

Preparation


Before selecting this function, press the **[Duplex/Combine]** key and select Duplex (1 Sided \rightarrow 2 Sided) mode or Combine mode.

Limitation


☐ You cannot use this function with Slip Sheet mode.

Note


- \square You can specify the pages up to 20.
- ☐ This function can be used only when you use the Duplex (1 Sided→2 Sided) or Combine function.
- ☐ This function can be combined with the Designate function.
- 1 Press the [Cover/Slip Sheet] key.

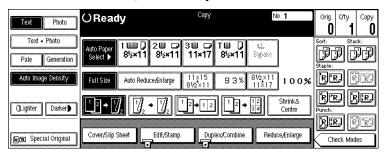


2 Press the [Designate/Chapter] key.

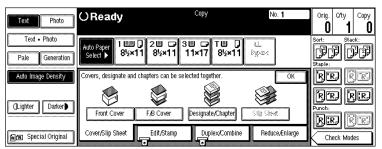


3 Press the key to select the chapter number.

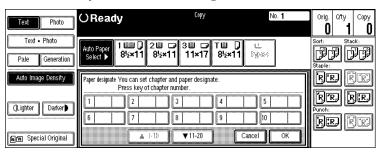


- **𝒯** Note
- \square To select chapters 11 to 20, press the **[\nabla11-20]** key.
- Press the [Chapters] key.

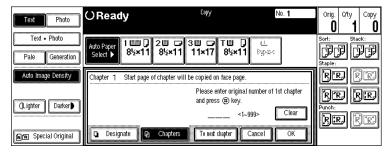

Enter the page location of the first page of the first chapter with the number keys. Then, press the [#] key.

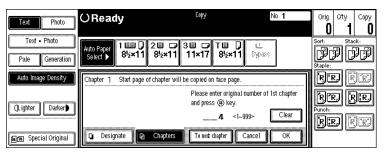

- **𝚱** Note
- ☐ To change the value entered, press the [Clear] or [Clear/Stop] key and enter the new value.
- 6 Press the [OK] key.
 - Note
 - ☐ To display the settings for the next chapter, press the **[To next chapter]** key before pressing the **[OK]** key.
- 7 To specify another page location, repeat steps 5 to 6.
 - **𝒯** Note
 - \square To select chapters 11 to 20, press the **[\triangledown11-20]** key.
- When you finish specifying the page location, press the [OK] key.

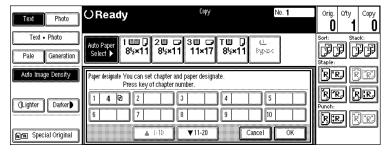


This display shows example settings.

- **𝒯** Note
- ☐ To change the number entered, enter the new number in the same way as in steps **⑤** to **⑥**.
- 9 Set your originals, then press the [Start] key.

Slip Sheets

Every time the original's page changes, a slip sheet is inserted. This function can be used to insert a slip sheet automatically between each OHP transparency copied or used as a stack function. You can also copy onto the inserted slip sheets.

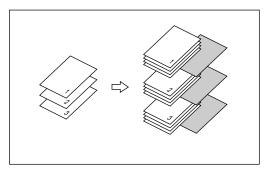

Preparation

Before selecting this function, specify the paper tray for slip sheets. See "Slip Sheet 1", "Slip Sheet 2" in the System Settings manual.

Limitation


- ☐ You cannot use this function with Chapters and Paper Designate modes.
- ☐ In Connect Copy mode, you cannot use the non-standard size paper.

Note

- $\hfill \square$ Set the slip sheets in the same orientation as originals.
- \square You can specify whether to make copies onto the inserted slip sheets or not.
- ☐ If you do not copy onto slip sheets, they are excluded from the number of copies counted.
- ☐ In Connect Copy mode, specify the paper settings before you press the **[Connect]** key.

When using OHP transparencies set on the bypass tray

Blank

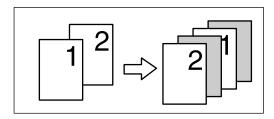


Limitation


☐ When copying two or more originals using the bypass tray, the copies are delivered in the reversed page order.

Note


- \square Press the **[#]** key and set the "Special Paper" setting to **[OHP]**. See \Rightarrow p.73 "When Copying onto OHP Transparencies or Thick Paper".
- □ When you select [OHP], copy paper is delivered face up even if you have set the "Face-Up/Down Selection in Bypass Mode" setting to "Face Down Exit". See "Face-Up/Down Selection in Bypass Mode" in ⇒ p.311 "Count Manager".
- 1 Press the [Cover/Slip Sheet] key.

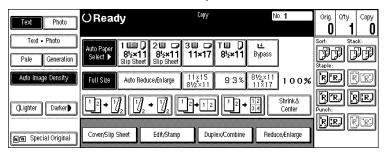

2 Press the [Slip Sheet] key.

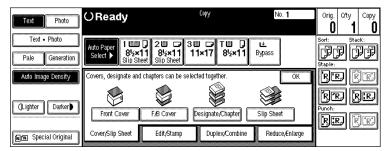


Select [Copy] or [Blank], followed by the [OK] key.

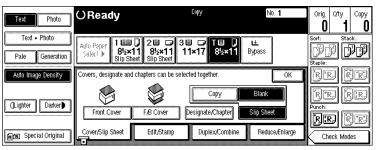

4 Select the paper tray containing the non-slip sheet paper.


When using OHP transparencies, open the bypass tray.

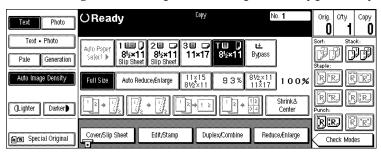

5 Set your originals, then press the [Start] key.

Double Copies

One original image is copied twice on one copy as shown in the illustration.

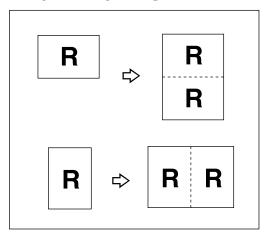

Limitation

☐ The following originals cannot be detected properly on the exposure glass. Be sure to select the copy paper manually or set the originals in the document feeder.

Metric version	A5□, B6 □□
Inch version	$5^{1}/_{2}" \times 8^{1}/_{2}" \square$

 $\hfill \square$ You cannot use the bypass tray with this function.

𝚱 Note

- ☐ You can insert separation lines between repeated images. See "Double Copies Separation Line" in \Rightarrow p.301 "Page Format $^2/_2$ ".
- ☐ See the following table when you select original and copy paper sizes with 100% ratio:


Metric version

Original Size and Direction	Copy Paper Size and Direction
A5D	A4 🗸
B6□	B5 🗸
A4 🗸	A3D
A5 🗸	A4D
B6 □	B5□


Inch version

Original Size and Direction	Copy Paper Size and Direction
5 ¹ / ₂ "×8 ¹ / ₂ "□	$8^{1}/_{2}" \times 11" \square$
$5^{1}/_{2}$ " $\times 8^{1}/_{2}$ " \square	8 ¹ / ₂ "×11"□
8 ¹ / ₂ "×11" □	11"×17"□

1 Press the [Edit/Stamp] key.

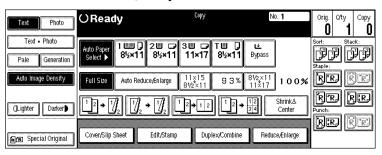


2 Press the [Double] key.

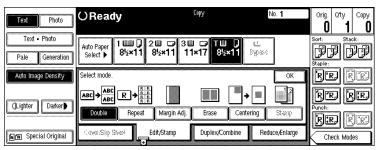

- 3 Press the [OK] key.
- 4 Select the paper.
- **5** Set your originals, then press the [Start] key.


Image Repeat

The original image is copied repeatedly.

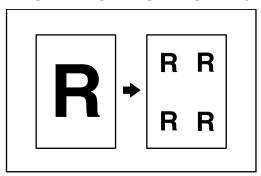


𝚱 Note

- ☐ The number of repeated images depends on the original size, copy paper size, and reproduction ratio. See the following table:
 - ♦ Original: $5^{1}/_{2}$ " × $8^{1}/_{2}$ " \Box /Copy paper: $8^{1}/_{2}$ " x 11" \Box or Original: $5^{1}/_{2}$ " × $8^{1}/_{2}$ " \Box /Copy paper $8^{1}/_{2}$ " x 11" \Box

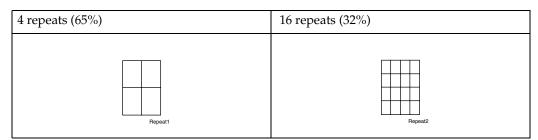


♦ Original: $5^{1}/_{2}$ " × $8^{1}/_{2}$ " \Box /Copy paper: $8^{1}/_{2}$ " x 11" \Box or Original: $5^{1}/_{2}$ " × $8^{1}/_{2}$ " \Box /Copy paper $8^{1}/_{2}$ " x 11" \Box

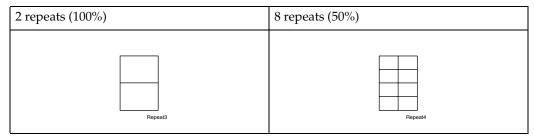


- ☐ Part of a repeated image might not be copied depending on copy paper size, copy paper direction or reproduction ratio.
- \square You can insert separation lines between repeated images. See "Repeat Separation Line" in \Rightarrow p.299 "Page Format $^{1}/_{2}$ ".
- \square You can select the area of the images to be repeated. See \Rightarrow p.170 "To repeat the image of the selected area".

- 1 Select the size of the copy paper and the reproduction ratio.
- 2 Press the [Edit/Stamp] key.

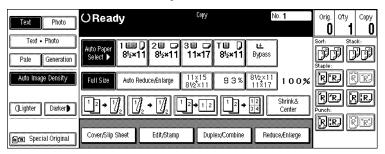


3 Press the [Repeat] key.

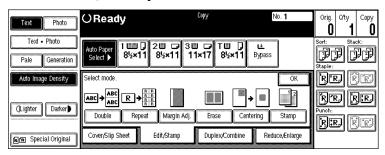

4 Specify the area to be repeated.


To repeat the whole image of the original

1 Press the [All area] key.

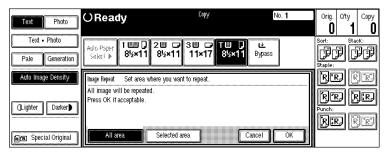


To repeat the image of the selected area

1 Press the [Selected area] key.

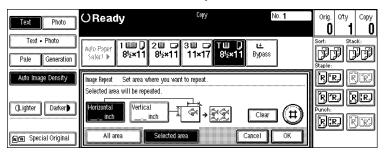


2 Enter the horizontal size of the area with the number keys, then press the [#] key.

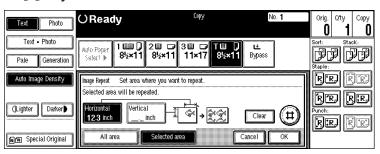

- Note
- ☐ To change the number entered, press the [Clear] or [Clear/Stop] key and enter the new number.
- 3 Enter the vertical size of the area with the number keys, then press the [#] key.
 - **𝚱** Note
 - ☐ To change the number entered, press the [Clear] or [Clear/Stop] key and enter the new number.
- Press the [OK] key.
- 6 Press the [OK] key.
- **7** Set your original, then press the [Start] key.

Margin Adjustment

You can shift the image left, right, top or bottom to make a binding margin.

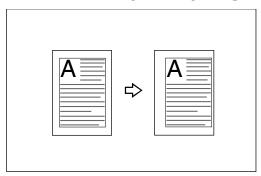

Limitation

☐ If you set the margin too wide, areas you do not want to delete might be erased.

Ø Note

☐ You can change the width of the binding margin as follows:


Metric version	0 – 30 mm (in 1 mm steps)
Inch version	0" – 1.2" (in 0.1" steps)

□ The margin width default is as follows. You can change this default setting with the User Tools. See "Front Margin: Left/Right", "Back Margin: Left/Right", "Front Margin: Top/Bottom", "Back Margin: Top/Bottom" in ⇒ p.299 "Page Format ¹/₂".


Metric version	Front: 5 mm Left
	Back: 5 mm Right
Inch version	• Front: 0.2" Left
	Back: 0.2" Right

- □ When making two-sided copies from one-sided originals, you can set a binding margin for back pages. See "1 \rightarrow 2 Duplex Auto Margin Adjust" in \Rightarrow p.299 "Page Format $^{1}/_{2}$ ".
- ☐ When making copies in Combine mode, the binding margins are made on the copies after the combining is finished.
- \square When "2 Sided \rightarrow 1 Sided" is selected, set the binding margins for front and back pages of the original.


1 Press the [Edit/Stamp] key.

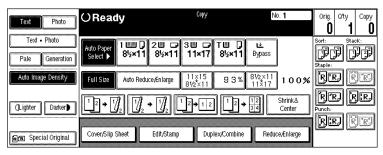

2 Press the [Margin Adj.] key.

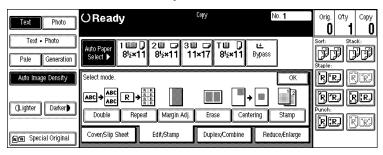

Set a binding margin for a front page. Press the $[\leftarrow]$ and $[\rightarrow]$ keys when setting the left and right margins, and the $[\downarrow]$ and $[\uparrow]$ keys when setting the top and bottom margins.

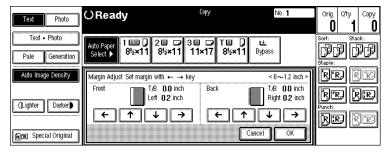

- □ To change the value entered, press the $[\leftarrow]$, $[\rightarrow]$, $[\downarrow]$, $[\uparrow]$ keys and enter the new value.
- **4** Set a binding margin for back pages. Press the [←] and [→] keys when setting the left and right margins, and the [↓] and [↑] keys when setting the top and bottom margins.
 - Note
 - ☐ You can specify the back margin only when the Duplex or the Two Sided copy with Combine is selected.
 - ☐ If you do not need to specify the back margin, press the [OK] key and go to step ⑤.
- **5** Set your originals, then press the **[Start]** key.

Erase

This function erases the center and/or all four sides of the original image. This is useful for avoiding shadows on the copy image caused by the bound originals, such as books.

This function can be used in three ways:

Border

This mode erases the edge margin of the original image.

Center

This mode erases the center margin of the original image.

Center/Border

This mode erases both the center and edge margins of the original image.

☐ You can change the width of the erased margin as follows:

Metric version	3 – 50 mm (in 1 mm steps)
Inch version	0.1" – 2.0" (in 0.1" steps)

☐ The default setting of the erased margin is as follows. You can change this settings with the User Tools. See "Erase Border" and "Erase Center" in \Rightarrow p.299 "Page Format $^{1}/_{2}$ ".

Metric version	10 mm
Inch version	0.4"

- \square The width of the erased margin varies depending on the reproduction ratio.
- ☐ If the size of the original is different from sizes listed in the following chart, the erased margin might be shifted.

Metric version

Where Original Is Set	Paper Size and Orientation
Exposure glass	A3□, B4□, A4□□, B5□□, 8¹/₂"×13"□ *1
Document feeder	A3□, B4□, A4□□, B5□□, A5□□, B6□□, 11"× 17"□, 11"×15"□, 8²/₁"×11"□□, 8¹/₂"×13"□ *1


You can select from $8^1/2$ " \times 13", $8^1/4$ " \times 13" and 8" \times 13" with the User Tools (System Settings). See "<F/F4>Size Setting" in the System Settings manual.

Inch version

Where Original Is Set	Paper Size and Orientation
Exposure glass	$11" \times 17" \square, 8^1/_2" \times 14" \square, 8^1/_2" \times 11" \square \square$
Document feeder	$\begin{array}{ c c c c c c c c c c c c c c c c c c c$

You can select from $8^1/_2$ " × 13", $8^1/_4$ " × 13" and 8" × 13" with the User Tools (System Settings). See "<F/F4>Size Setting" in the System Settings manual.


☐ The relationship between the original orientation and the erased part is as follows:

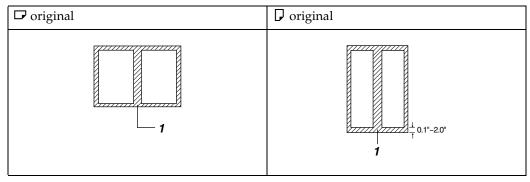

☐ 1: Erased part

Border Erase


This function erases the edge margins. You can set the same margin width for all four sides, or you can set different margin widths for each side.

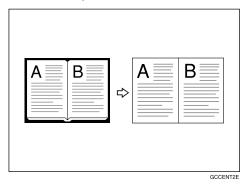


𝒯 Note

 \square If you want to erase the center margin too, use the Center/Border function. See \Rightarrow p.179 "Center/Border Erase".


1 Press the [Edit/Stamp] key.

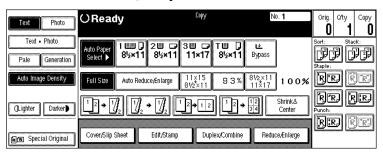

2 Press the [Erase] key.

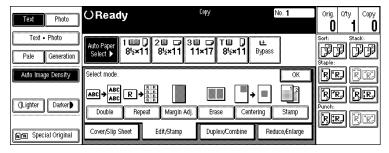


3 Press the [Border] key.

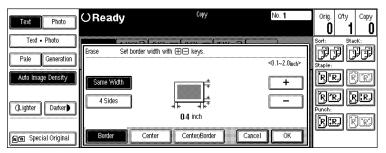

4 Set the erase border width.

Selecting [Same Width]

• Press the [Same Width] key.

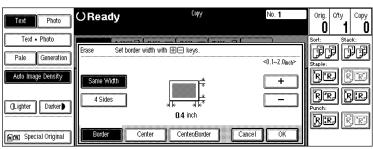


2 Set an erase border width with the [+] and [-] keys, followed by the [OK] key.



☐ To change the value entered, press the [+] and [-] keys and enter the new value.

Selecting [4 Sides]


• Press the [4 Sides] key.

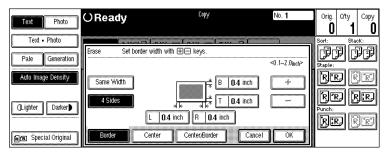

- 2 Press the key for the border you wish to change and set an erase border width with the [+] and [-] keys.
 - **𝚱** Note
 - ☐ To change the value entered, press the [+] and [-] keys and enter the new value.
- 3 Press the [OK] key.
- **5** Set your originals, then press the [Start] key.


Center Erase

This function erases the center margin.

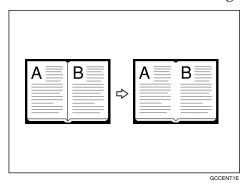


𝚱 Note


- \square If you want to erase the border margin too, use the Center/Border function. See \Rightarrow p.179 "Center/Border Erase".
- 1 Press the [Edit/Stamp] key.

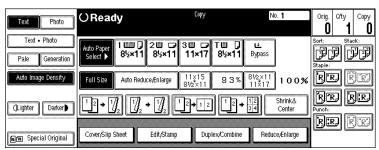


2 Press the [Erase] key.

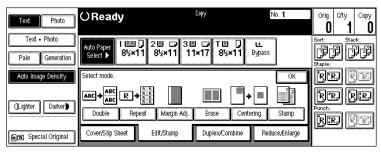

Press the [Center] key.

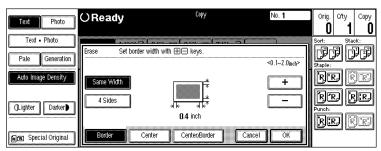


Set the erase center width with the [+] and [-] keys. Then press the [OK] key.

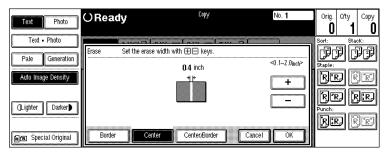


- Note
- ☐ To change the value entered, press the [+] and [-] keys and enter the new value.
- **5** Set your originals, then press the [Start] key.

Center/Border Erase


This mode erases both the center and edge margins. You can set the same margin width for all four sides and center, or you can set different margin widths for each.

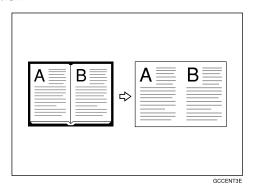


1 Press the [Edit/Stamp] key.

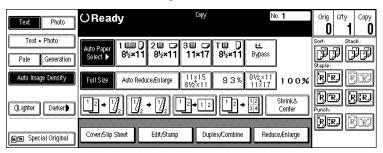

2 Press the [Erase] key.

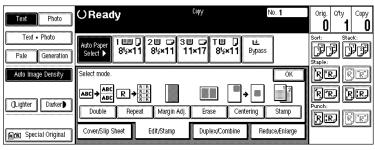


Press the [Center/Border] key.

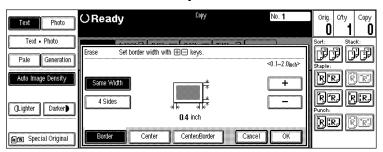

4 Set the erase margin width.

Selecting [Same Width]


- Press the [Center] key, then set the erase center width with the [+] and [−] keys.
 - **𝚱** Note
 - ☐ To change the value entered, press the [+] and [-] keys and enter the new value.
- 2 Press the [Same Width] key.

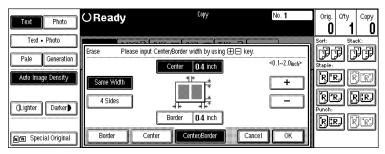

- ③ Press the [Border] key, then set the erase border width with the [+] and [-] keys.
 - Note
 - ☐ To change the value entered, press the [+] and [-] keys and enter the new value.
- 4 Press the [OK] key.

Selecting [4 Sides]


• Press the [4 Sides] key.

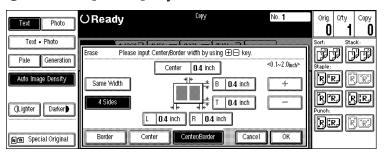

- 2 Press the key for the part you wish to change and set an erase margin width with the [+] and [-] keys.
 - **𝚱** Note
 - ☐ To change the value entered, press the [+] and [-] keys and enter the new value.
- 3 Press the [OK] key.
- **5** Set your originals, then press the [Start] key.

Centering

You can make copies by moving the image to the center of the copy paper.

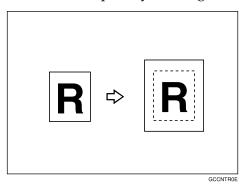

Limitation

- ☐ You cannot use the bypass tray with this function.
- ☐ If the direction of originals is different from that of the copy paper, the machine will not rotate the image by 90°(rotated copy).
- ☐ If the original size cannot be measured, the centering function will not work.

Note

☐ The original sizes and directions for centering are listed below.

Metric version

Original placed on:	Original size and direction
Exposure glass	A3□, B4□, A4□□, B5□□, 8¹/2"×13"□ *¹, 8K□, 16K□□
Document feeder	A3 \square , B4 \square , A4 \square \square , B5 \square \square , A5 \square \square , B6 \square \square , 11" × 17" \square , 11" × 15" \square , 8 ¹ / ₂ " × 11" \square \square , 8 ¹ / ₂ " × 13" \square ^{*1}


You can select from $8^1/2$ " \times 13", $8^1/4$ " \times 13" and 8" \times 13" with the User Tools (System Settings). See "<F/F4>Size Setting" in the System Settings manual.

Inch version


Original placed on:	Original size and direction
Exposure glass	$11" \times 17" \square, 8^1/_2" \times 14" \square, 8^1/_2" \times 11" \square \square$
Document feeder	$ \begin{array}{ c c c c c c c c c c c c c c c c c c c$

You can select from $8^1/2$ " \times 13", $8^1/4$ " \times 13" and 8" \times 13" with the User Tools (System Settings). See "<F/F4>Size Setting" in the System Settings manual.

- **1** Select the paper.
- 2 Press the [Edit/Stamp] key.

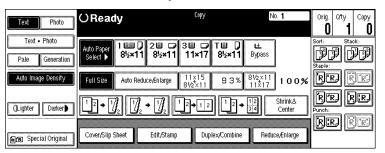

Press the [Centering] key.

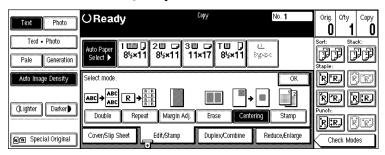

- 4 Press the [OK] key.
- **5** Set your originals, then press the [Start] key.

Stamp

This function prints stamp on the copies. Stamp modes are as follows:

Background Numbering

This function prints numbers on the background of copies.

Preset Stamp

This function prints preset messages on copies.

User Stamp

This function prints custom messages on copies.

Date Stamp


This function prints the date on copies.

Page Numbering

This function prints page numbers on copies.

Background Numbering

Use this function to have numbers printed on the background of copies. This function can help you to keep track of confidential documents.

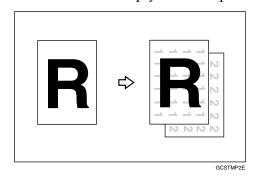


Limitation

☐ You cannot use the bypass tray with this function.


Note

- \square You can change the size of the numbers with the User Tools. See "Size" in \Rightarrow p.303 "Background Numbering".
- \square You can change the density of the numbers with the User Tools. See "Density" in \Rightarrow p.303 "Background Numbering".
- ☐ Numbers are printed on all pages.


- □ You can select whether the Background Numbering is printed negative if it overlaps black parts of image. See "Superimpose" ⇒ p.303 "Background Numbering".
- \square You can change the starting number of the Background Numbering (1 999).
- 1 Press the [Edit/Stamp] key.

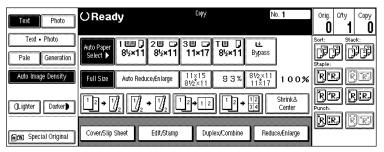


2 Press the [Stamp] key.

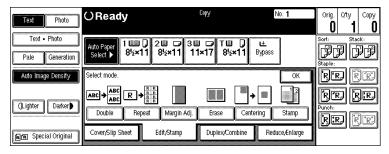

Press the [Background Numbering] key.

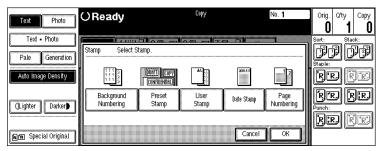


4 Enter the number to start counting from with the number keys. Then press the [OK] key.

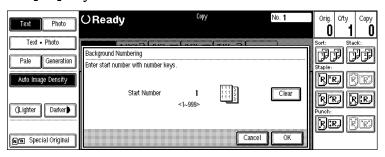

- Note
- \square The number can be set from 1 to 999.
- ☐ To change the entered number, press the [Clear] or [Clear/Stop] key and enter the new number.
- **5** Press the [OK] key.
- 6 Set your originals, then press the [Start] key.

Preset Stamp

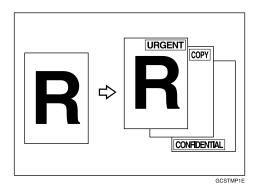


Limitation

- ☐ You cannot use the bypass tray with this function.
- ☐ One message can be stamped at a time.


Note

- ☐ One of the following eight messages can be stamped on copies with a frame around it: "COPY", "URGENT", "PRIORITY", "For Your Info.", "PRELIMINARY", "For Internal Use Only", "CONFIDENTIAL", "DRAFT".
- ☐ You can change the print page with the User Tools.
- \square You can change the size and density of the stamp with the User Tools.
- ☐ Depending on the paper size, if you change the stamp size, parts of the stamp might not be printed.
- ☐ You can choose the default settings for the position, size and density of the stamp with the User Tools. See "Stamp position", "Stamp condition" in ⇒ p.304 "Preset Stamp".
- \square You can choose the default settings for the print page with the User Tools. See "Stamp condition" in \Rightarrow p.304 "Preset Stamp".
- \square You can change the stamp language with the User Tools. See "Stamp Language" in \Rightarrow p.304 "Preset Stamp".
- \square You can select whether the Preset Stamp is printed negative if it overlaps black parts of the image. See "Superimpose" in \Rightarrow p.304 "Preset Stamp".


- ☐ You cannot combine the Preset Stamp function with the Image Repeat or Double Copies function.
- ☐ When you combine this function with the Magazine or Booklet function, only the first page is stamped.
- ☐ The relationship between the direction in which you set the original and stamp orientation/position is as follows:

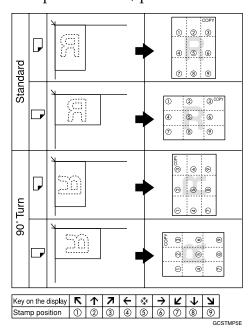


- \square You can change the stamp position to top, bottom, left and right each way in 1 mm, 0.1" steps. See "Stamp position" in \Rightarrow p.304 "Preset Stamp".
- 1 Press the [Edit/Stamp] key.

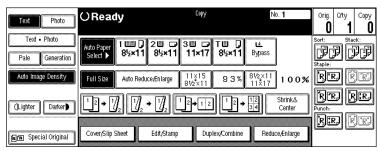


2 Press the [Stamp] key.

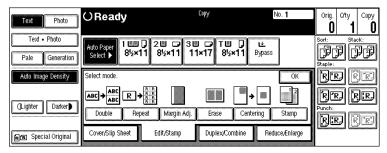

Press the [Preset Stamp] key.

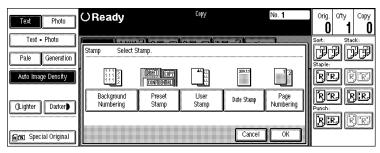

4 Select the desired message.

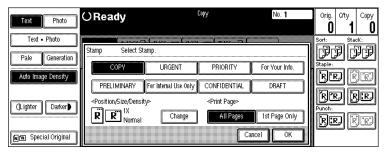


- Press the [All Pages] or [1st Page Only] key to select the print page.
 - Limitation
 - ☐ If you combine this function with the Magazine or Booklet function, "1st Page Only" is selected automatically.

6 Change the stamp position, size or density.


If you do not wish to change, go to step **2**.

To change the stamp position, size or density


1 Press the [Change] key.

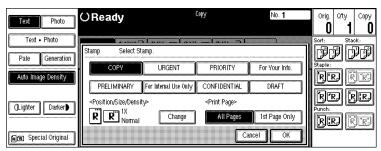

2 Select the desired position, size and density.

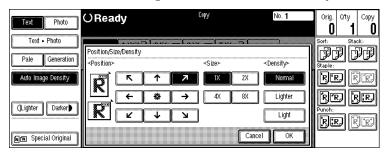


- 3 Press the [OK] key.
- **7** After you specified all the desired settings, press the [OK] key.
- Press the [OK] key.

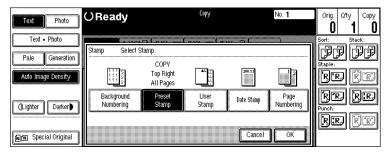

- **𝚱** Note
- ☐ To cancel the settings, press the **[Cancel]** key.
- **9** Set your originals, then press the [Start] key.

User Stamp

Up to four messages which you use frequently can be stored in the machine's memory and stamped on copies.

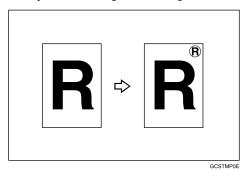

Preparation

Before using this function, you have to store your messages with the User Tools. See \Rightarrow p.193 "Program/Delete User Stamp".


Limitation

- ☐ You cannot use the bypass tray with this function.
- ☐ One message can be stamped at a time.
- ☐ In Connect Copy mode, register the same user stamp on the master unit and sub-unit.
- ☐ If the position exceeds the page boundary, the stamp will not be printed on copies.


Ø Note

- ☐ You can change the print page with the User Tools.
- \square You can choose the default settings for the print page and the stamp position with the User Tools. See "Stamp condition" and "Stamp position" in \Rightarrow p.305 "User Stamp".
- ☐ You can combine this function with only one Preset Stamp.
- ☐ You cannot combine the User Stamp function with the Image Repeat or Double Copies function.


☐ The relationship between the direction in which you set the original and stamp Orientation/Position is as follows:

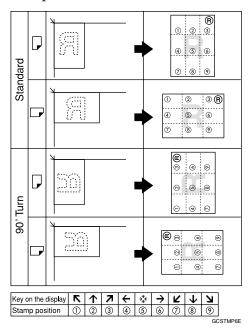


- \square You can change the stamp position to top, bottom, left and right each way in 1 mm, 0.1" steps. See "Stamp position" in \Rightarrow p.305 "User Stamp".
- 1 Press the [Edit/Stamp] key.

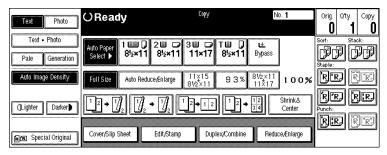


2 Press the [Stamp] key.

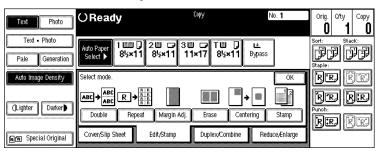

Press the [User Stamp] key.

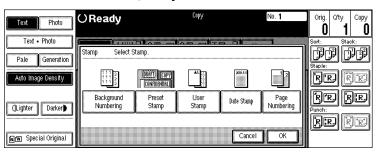


4 Select the stamp you require.

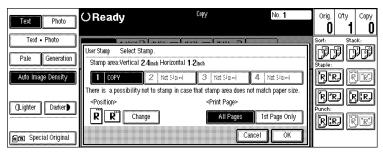

Press the [All Pages] or [1st Page Only] key to select the print page.


To change the stamp position

- Press the [Change] key.
- **2** Select the desired position.

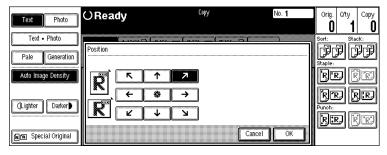

- 3 Press the [OK] key.
- 6 After you specified all the desired settings, press the [OK] key.
 - **𝚱** Note
 - ☐ To cancel the settings, press the **[Cancel]** key.

7 Press the [OK] key.

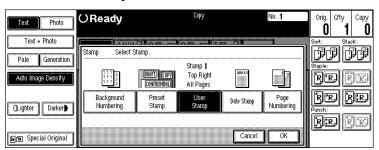


8 Set your originals, then press the [Start] key.

Program/Delete User Stamp


- **1** Make sure that the machine is in Copy mode.
- Press the [User Tools/Counter] key.




Press the [Copy/Document Server Features] key.

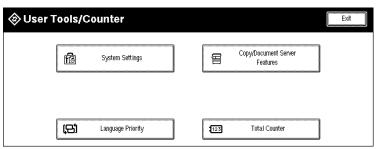


4 Press the [Stamp Setting] key.

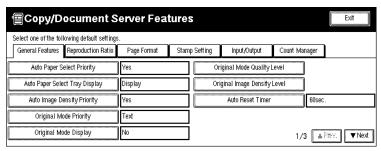

Press the [User Stamp] key.

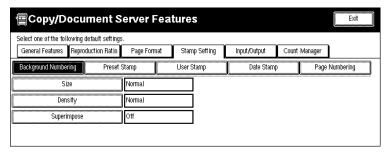


6 Press the [Program/Delete Stamp] key.

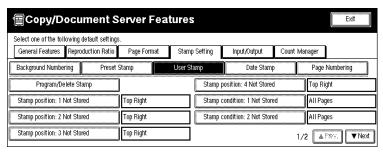

To program the User Stamp


• Press the [Program] key.

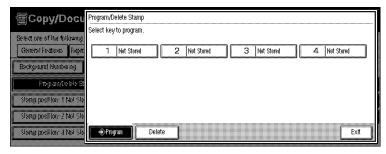


2 Press the stamp number (1 – 4) you want to program.

- **𝚱** Note
- \Box Stamp numbers with \clubsuit already have settings in them.
- ☐ If the stamp number is already being used, the machine will ask you if you wish to overwrite it Press the **[Yes]** or **[No]** key.


3 Enter the user stamp name with the letter keys on the display panel.

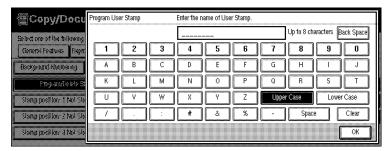

- **𝚱** Note
- ☐ You can register up to 8 characters.
- ☐ To change the name entered, press the [Back Space], [Clear] or [Clear/Stop] key and enter new letters.
- 4 Press the [OK] key.

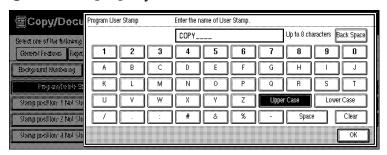

5 Enter the horizontal size of the stamp with the number keys, then press the [#] key.

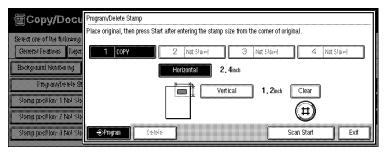


- Note
- ☐ To change the value entered, press the [Clear] or [Clear/Stop] key and enter the new value.
- ☐ You can enter sizes within 10 432 mm, 1.0" 17.0" horizontal, and 10 297 mm, 1.0" 11.7" vertical. However, if the value exceeds the maximum value of the area (5,000 mm², 7.75 inch²), it is corrected within the range of the area automatically.
- 6 Press the [Vertical] key, and enter the vertical size in the same way as step 6.


- The set the user stamp on the exposure glass, and then press the [Scan Start] key.
 - Note
 - ☐ Do not set the original in the document feeder.
 - ☐ The machine scans the original three times. Do not lift the document feeder until the main menu of the Copy features appears.
 - ☐ If you press the **[Exit]** key, the main menu of the Copy features appears with nothing programmed.
- **8** Press the [Exit] key.

To delete the User Stamp

- **∰**Important
- ☐ You cannot restore a deleted stamp.
- Press the [Delete] key.

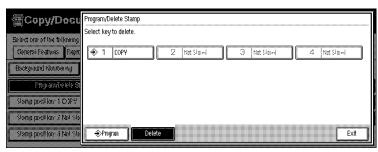


- **2** Press the stamp number (1-4) you want to delete.
 - **𝒯** Note
 - □ Only programs with � contain a user stamp.
- 3 Press the [Delete] key.

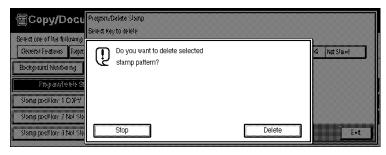

- Note
- \Box To cancel the deletion, press the **[Stop]** key.
- 4 Press the [Exit] key.
- **6** Press the [Exit] key.
- **7** Press the [Exit] key.

The initial display appears.

Date Stamp

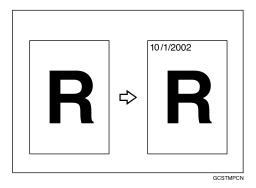


Limitation

☐ You cannot use the bypass tray with this function.


Note

- ☐ You can select the following styles:
 - MM/DD/YYYY
 - MM.DD.YYYY
 - DD/MM/YYYY
 - DD.MM.YYYY
 - YYYY.MM.DD
- \square You can change the Date Stamp settings with the User Tools. See \Rightarrow p.306 "Date Stamp".
- \square The font and size of the Date Stamp can be changed with the User Tools. See "Font" and "Size" in \Rightarrow p.306 "Date Stamp".
- \square You can select whether the Date Stamp is printed negative if it overlaps black parts of an image. See "Superimpose" in \Rightarrow p.306 "Date Stamp".
- ☐ For how to set the date, see "Set Date" in the System Settings manual.
- \square You can choose the default settings for the stamp position with the User Tools. See "Position Priority" in \Rightarrow p.306 "Date Stamp".
- ☐ The size, font and superimpose settings are linked with the Page Numbering functions.
- ☐ You cannot combine the Date Stamp function with the Image Repeat or Double Copies function.


☐ The relationship between the direction in which you set the original and the stamp position is as follows:

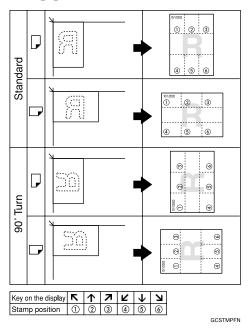


- \square You can change the stamp position to top, bottom, left and right each way in 1 mm, 0.1" steps. See "Position Priority" in \Rightarrow p.306 "Date Stamp".
- ☐ If you combine this function with the Combine, Magazine or Booklet function, the page is stamped as follows.
 - Combined with the Combine function

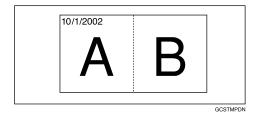


• Combined with the Magazine or Booklet function

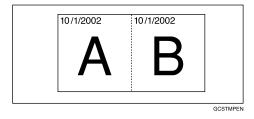


1 Press the [Edit/Stamp] key.

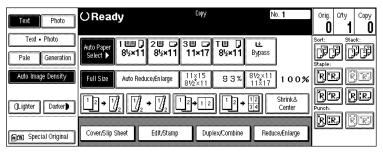

2 Press the [Stamp] key.

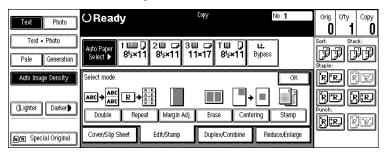


Press the [Date Stamp] key.

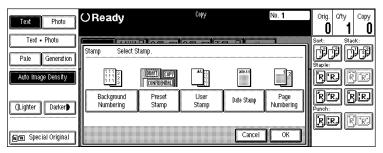


4 Press the [All Pages] or [1st Page Only] to select the print page.

To change the style of date

• Press the [Change style] key.

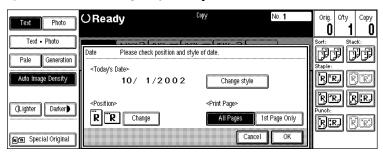


2 Select the style of date.

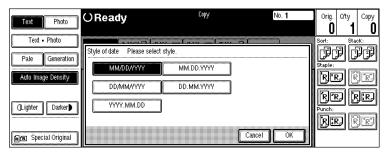


3 Press the [OK] key.

To change the stamp position

• Press the [Change] key.

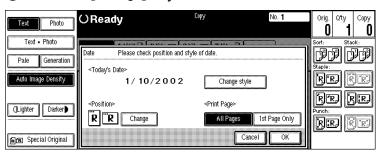


2 Select the desired position of the Date Stamp.

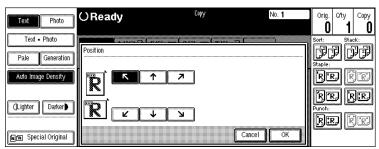

- 3 Press the [OK] key.
- **5** After you specified all the desired settings, press the [OK] key.
 - **𝒯** Note
 - ☐ To cancel the settings, press the **[Cancel]** key.

6 Press the [OK] key.

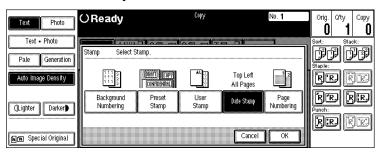

7 Set your originals, then press the [Start] key.

Page Numbering

Use this function to print page numbers on your copies. There are six types of Page Numbering (n is the total number of pages in your original):

- Type A: P1,P2,...Pn
- Type B: 1/n,2/n,...n/n
- Type C: -1-,-2-,...-n-
- Type D: P.1,P.2,...P.n
- Type E: 1, 2...n
- Type F: 1-1,1-2,..1-n


Limitation

☐ You cannot use the bypass tray with this function.


𝚱 Note

- \square You can change the Page Numbering settings with the User Tools. See \Rightarrow p.307 "Page Numbering".
- \square The font and size of Page Numbering can be changed with the User Tools. See "Font" and "Size" in \Rightarrow p.307 "Page Numbering".
- \square You can select whether the Page Numbering is printed negative if it overlaps black parts of image. See "Superimpose" in \Rightarrow p.307 "Page Numbering".
- ☐ You can choose the default settings for the stamp position with the User Tools. See "Position Priority" in ⇒ p.307 "Page Numbering".
- \square You can choose the default settings for the stamp format with the User Tools. See "Format Priority" in \Rightarrow p.307 "Page Numbering".
- ☐ The font, size and superimpose settings are linked with the Date Stamp function.
- ☐ You cannot combine the Page Numbering function with the Image Repeat or Double Copies function.

☐ The relationship between the direction in which you set the original and the Page Numbering orientation/position is as follows:

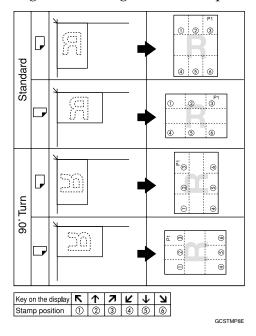

- \square You can change the stamp position to top, bottom, left and right each way in 1 mm, 0.1" steps. See "Position Priority" in \Rightarrow p.307 "Page Numbering".
- ☐ If you combine this function with the Duplex (Top to Top) function and select the "P1, P2" or "1/n, 2/n" style, the page numbers on the back of the copy paper are printed as follows.

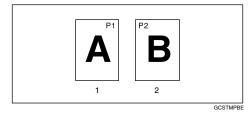


1. Front

2. Back


- ☐ If you combine this function with the Duplex (Top to Top) function, you can change the setting to stamp on the back side in the same position as the front side. See "Duplex Back Page Number Position" in ⇒ p.307 "Page Numbering".
- ☐ If you use this function with the Combine, Magazine, or Booklet function, the page is stamped as follows.

Page Numbering per original

• Combined with 1 Sided/2 Sided in the Combine function

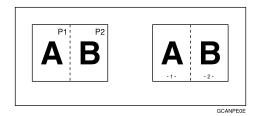


• Combined with the Magazine or Booklet function

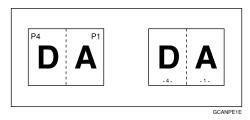


♦ Page Numbering per copy


• Combined with 1 Sided/2 Sided in the Combine function

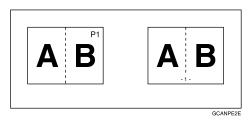


- ☐ See "Page Numbering In Combine Mode" in ⇒ p.307 "Page Numbering".
- ☐ If you use the "1-1, 1-2" style, you can print page numbers on the slip sheets in Designate or Chapters mode. See "Copy On Slip Sheet In Designate Mode" in ⇒ p.307 "Page Numbering".
- 1 Press the [Edit/Stamp] key.

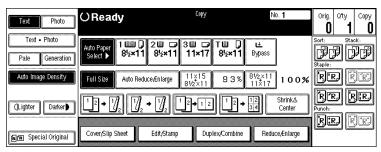


2 Press the [Stamp] key.

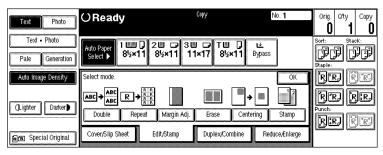


3 Press the [Page Numbering] key.

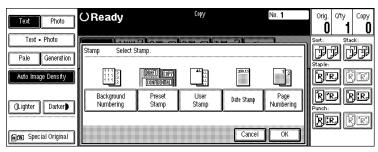

4 Select the style.

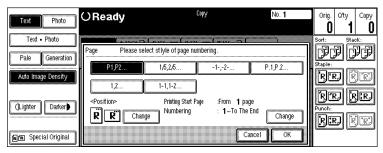

- **5** To change the stamp position, press the [Change] key. If you do not wish to change the stamp position, go to step **2**.
- **6** Select the stamp position, then press the [OK] key.

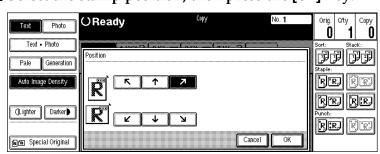


7 To change the first printing page and start number, press the [Change] key.

Note


- ☐ The display differs depending on the selected style.
- ☐ If you do not wish to change, press the [OK] key and set your originals, then press the [Start] key.
- 8 Specify the page and number.

If you selected (P1,P2..., -1-,-2-..., P.1, P.2..., 1, 2...,)

1 Press the [First Printing Page] key, then enter the original sheet number from which to start numbering with the number keys.

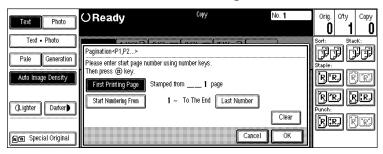

- Note
- ☐ To change the number entered, press the [Clear] or [Clear/Stop] key and enter a new number.
- 2 Press the [#] key.
- 3 Press the [Start Numbering From] key, then enter the number from which to start numbering with the number keys.

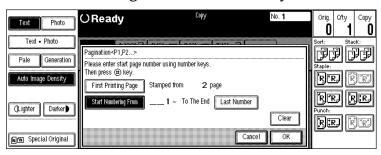

4 Press the [#] key.

6 Press the [Last Number] key, then enter the page number at which to stop numbering with the number keys.







- ☐ If you wish to print onto the last page, press the **[To The End]** key and go to step **①**.
- 6 Press the [#] key.

If you selected (1/5,2/5...)

• Press the [First Printing Page] key, then enter the original sheet number from which to start numbering with the number keys.

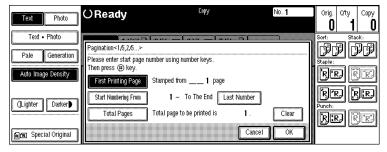


- Note
- ☐ To change the number entered, press the [Clear] or [Clear/Stop] key and enter a new number.
- 2 Press the [#] key.
- 3 Press the [Start Numbering From] key, then enter the page number from which to start numbering with the number keys.

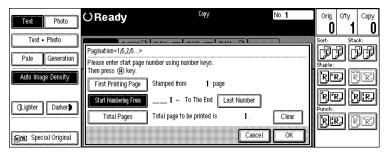


4 Press the [#] key.

6 Press the [Last Number] key, then enter the page number at which to stop numbering with the number keys.

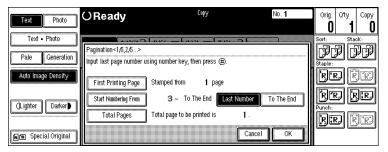


- **𝚱** Note
- \square If you wish to print onto the last page, press [**To The End**] key and go to step \square .
- 6 Press the [#] key.
- **7** Press the [Total Pages] key, then enter the total number of original pages with the number keys.

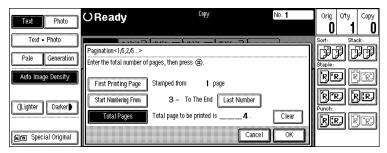

3 Press the [#] key.

If you selected (1-1, 1-2,...)

• Press the [First Printing Page] key, then enter the original sheet number from which to start numbering with the number keys.

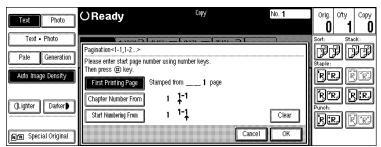


- **𝚱** Note
- ☐ To change the number entered, press the [Clear] or [Clear/Stop] key and enter a new number.
- 2 Press the [#] key.


3 Press the [Chapter Number From] key, then enter the chapter number from which to start numbering with the number keys.



- 4 Press the [#] key.
- **6** Press the [Start Numbering From] key, then enter the page number from which to start numbering with the number keys.

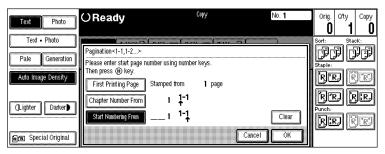

- 6 Press the [#] key.
- 9 Press the [OK] key.
 - **𝚱** Note
 - ☐ To change the settings after pressing the [OK] key, press the [Change] key and enter the new value.
- 10 Press the [OK] key.

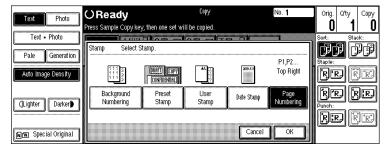

- **∅** Note
- ☐ To cancel the settings, press the **[Cancel]** key.
- 11 Set your originals, then press the [Start] key.

Combination Chart

The combination chart given below shows which modes can be used together. When you read the chart, see the following table:

О	means that these modes can be used together.
	means that these modes cannot be used together. The mode after you select will be the mode you're working in.
×	means that these modes cannot be used together. The mode before you select will be the mode you're working in.

The following shows the combinations of functions.

															l	Mo	de	af	ter	yc	u	Sel	ec	t													٦
												ray							Book						Cover/Slip	Sheet	Edit/Stamp										
	Batch (SADF)	Batch (SADF)	Mixed Sizes	Selecting Copy Paper	O Auto Paper Select	Auto Reduce/Enlarge	O Sort	Rotate Sort	O Stack	O Staple	O Punch	OCopying From The Bypass Tray	O Preset Reduce/Enlarge	O Shrink&Center	Coom	Size Magnification	O Duplex	O Combine	O Book→1 Sided	⊖ 2 Sided→1 Sided		⊖ 2 Sided→2 Sided	O Booklet	O Magazine	Cover/Designate/Chapters	Slip Sheet	O Double	Repeat	O Margin Adjust	O Erase	Centering	nd Numbering	O Preset Stamp	User Stamp	O Date Stamp	Page Numbering	Copy Face Up
	Mixed Sizes	 O)	\circ	0	0	\circ	×	\circ	×	0	0	1	_	0)		0		0	0	×	0	\circ	0	\circ	0	0	\circ	,	\circ	\circ	\circ	\circ		0	0
	Selecting		 	١	0)	١	$\hat{\mathbf{O}}$	١				0						0				0	-		_			١	١	١	$^{\circ}$	١	\circ	0		
	Copy Paper)		•)												_	_	_	_	_		_))			
	Auto Paper Select	0	0	0		\rightarrow	0	0	0	0	0	\rightarrow	0	0	0	0	0	0	0	0	0	0	0	0	\rightarrow	\rightarrow	0	\rightarrow	0	0	0	0	0	0	0	0	0
	Auto Re- duce/Enlarge	0	0	0	\rightarrow		0	0	0	0	0	×	\uparrow	0	\rightarrow	\uparrow	0	0	0	0	0	0	0	0	0	0	0	\rightarrow	0	0	0	0	0	0	0	0	O
	Sort	О	0	0	О	О		\rightarrow	\rightarrow	0	0	×	0	0	0	0	0	0	О	0	0	О	О	0	О	×	0	0	0	0	0	0	0	0	О	О	0
Ψ.	Rotate Sort	О	×	0	О	О	\rightarrow		×	\rightarrow	×	×	0	0	0	0	0	0	О	0	0	О	О	0	×	×	0	0	0	0	0	0	0	0	О	О	0
se	Stack	О	0	0	О	О	\rightarrow	×		\rightarrow	0	×	0	0	0	0	0	О	О	0	0	0	О	0	О	О	О	0	0	0	0	0	0	0	О	О	0
you	Staple	0	0	0	0	0	0	\rightarrow	\rightarrow		0	×	0	0	0	0	0	0	0	0	0	0	0	0	0	×	0	0	0	0	0	0	0	0	О	0	×
)re	Punch	0	0	0	0	0	0	×	0	0		0	0	0	0	0	0	0	0	0	0	0	×	×	0	0	0	0	0	0	0	0	0	0	О	О	×
de l	Copying From The Bypass Tray	0	0	0	\rightarrow	×	×	×	×	×	0		0	×	0	0	×	×	0	0	×	×	×	×	×	0	×	0	0	0	×	×	×	×	×	×	О
	Preset Re- duce/Enlarge	0	0	0	0	\rightarrow	0	0	0	0	0	0		0	\rightarrow	\rightarrow	0	О	О	0	0	0	0	0	О	0	О	0	0	0	0	О	О	0	0	0	O
	Shrink&Cen- ter	0	О	0	0	0	О	0	0	О	О	×	0		0	0	0	О	О	0	0	0	0	0	О	0	О	О	0	0	0	0	0	0	0	0	O
	Zoom	0	0	0	0	\rightarrow	0	0	0	0	0	0	\rightarrow	0		\rightarrow	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	О
	Size Magnifi- cation	0	0	0	0	\rightarrow	0	0	0	0	0	0	\rightarrow	0	\rightarrow		0	0	О	0	0	0	О	0	О	0	0	0	0	0	0	О	О	0	0	0	0
	Duplex	0	0	0	0	0	0	0	0	0	0	×	0	0	О	0		\rightarrow	\rightarrow	\rightarrow	\rightarrow	\rightarrow	\rightarrow	\rightarrow	0	X	0	О	0	0	0	0	0	0	0	0	О
	Combine	0	0	0	0	0	0	0	0	0	0	×	0	0	0	0	\rightarrow		\rightarrow	\rightarrow	\rightarrow	\rightarrow	\rightarrow	\rightarrow	×	×	×	×	0	0	0	×	0	0	О	0	О

																1	Мo	de	af	ter	yo	ou	Se	lec	t												_	
													Tray							Book						Cover/Slip	Sheet	Edit/Stamp										
													ss T													rs							_	an	ıp			
			Batch (SADF)	Mixed Sizes	Selecting Copy Paper	Auto Paper Select	Auto Reduce/Enlarge	Sort	Rotate Sort							Zoom	Size Magnification	Duplex	Combine	Book→1 Sided	2 Sided→1 Sided	1 Sided→2 Sided	2 Sided→2 Sided	Booklet	Magazine			Double		Margin Adjust			_	Preset Stamp	User Stamp	[Page Numbering	Copy Face Up
		Book 1 Sided)		J	0	0	0	0	0	0))	\rightarrow	\rightarrow		\rightarrow	\rightarrow		\rightarrow	\rightarrow	×	0)	0)	0	0	0)		0		
		2 Sided→ 1 Sided	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	\rightarrow	\rightarrow	\rightarrow		\rightarrow	\rightarrow	\rightarrow	\rightarrow	×	0	0	0	0	0	0	0	0	0	0	О	0
	Book	1 Sided→ 2 Sided	0	0	0	0	0	0	0	0	0	0	×	0	0	0	0	\rightarrow	\rightarrow	\rightarrow	\rightarrow		\rightarrow	\rightarrow	\rightarrow	×	×	0	0	0	0	0	0	0	0	0	0	О
	I	2 Sided 2 Sided	0	×	0	О	0	О	0	0	0	0	×	0	0	0	0	\rightarrow	\rightarrow	\rightarrow	\rightarrow	\rightarrow		\rightarrow	\rightarrow	×	×	О	0	0	0	О	0	0	О	О	0	0
		Booklet	0	0	0	0	0	0	0	0	0	×	×	0	0	0	0	\rightarrow	\rightarrow	\rightarrow	\rightarrow	\rightarrow	\rightarrow		\rightarrow	×	×	×	×	0	0	0	0	0	0	0	0	0
		Magazine	0	0	0	0	0	0	0	0	0	×	×	0	0	0	0	\rightarrow	\rightarrow	\rightarrow	\rightarrow	\rightarrow	\rightarrow	\rightarrow		×	×	×	×	0	0	0	0	0	0	0	0	0
	'Slip Sheet	Cov- er/Desig- nate/Chapt ers	0	0	0	×	0	0	×	0	0	0	×	0	0	0	0	0	0	×	×	×	×	×	×	1	\rightarrow	×	×	0	0	0	0	0	0	0	0	0
elect	Cover/	Slip Sheet	0	×	0	×	0	×	×	О	×	0	0	0	0	0	0	×	×	0	0	×	×	×	×	\rightarrow		×	×	0	0	0	0	0	0	0	0	0
s nc	Ĭ	Double	0	0	0	0	0	0	0	0	0	0	×	0	0	0	0	0	×	0	О	0	0	×	×	×	×		\rightarrow	0	0	О	×	×	×	×	×	0
e y		Repeat	0	0	0	×	×	0	0	0	0	0	0	0	0	0	0	0	×	0	0	0	0	×	×	×	×	\rightarrow		0	0	0	×	×	×	×	×	0
Mode before you select		Margin Ad- just		0						0		0							0		0				0			0			0				0		0	0
J od		Erase			0																			0									0					
		Centering	0			0			0			0		0			0			0			0										0	0				0
	Edit/Stamp	Back- ground Number- ing	0						0					0					0		0		0			0			×	0				0			0	
		Preset																						0									0				0	
		User Stamp																						O													0	
		Date Stamp																						0									0					0
		Page Number- ing																						0														0
Ш	C	opy Face Up	J	J	J	J	J	J	J	J	J	×	×	J	J	J	J	J	J	J	J	J	U	О	U	J	J	J	J	J	J	J	J	J	J	J	J	


3. Document Server

Overview

The Document Server enables you to save documents in the machine memory and then edit and print them as you want.

There are two ways to save documents.

- Scanning from the document feeder
- Scanning from the exposure glass

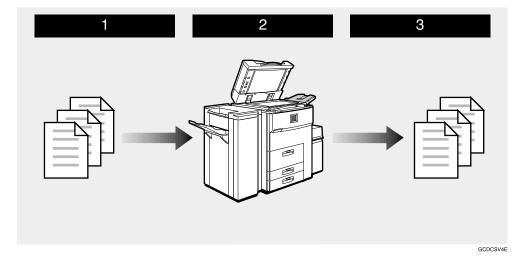

- **1** Prepare the documents you want to save.
- **2** Save the documents.

The documents are saved in the machine memory.

3 Print the documents.

You can print saved documents with any settings you desire at any time.

Document Server Features

The following printing features are available with the Document Server.

On Demand Printing

You can print the saved documents as you want at any time.

❖ File Merge Printing

You can combine multiple documents to print them in one set.


Features and Benefits

On Demand Printing

Use to print any saved document as required.


♦ Your current situation might be...

• When you need to print multiple sets of documents double-sided and stapled together, you normally print the originals, make duplex copies and then staple them together manually.

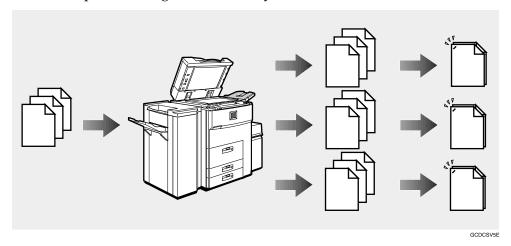

With the Document Server

If you save your document in the Document Server, you can print it out at any time with the necessary print settings, such as duplex and stapling. Your documents will not be confused with those of others in the exit tray.

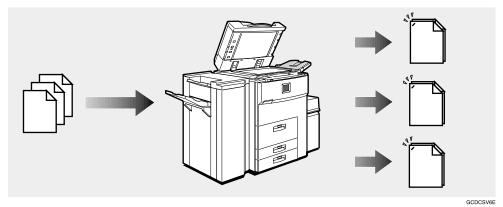

- ☐ Stapling requires the installation of the optional finisher.
- ☐ Punching requires the installation of the optional punch kit in the finisher.
- ☐ You can use a password to prevent others from printing saved documents.

File Merge Printing

You can combine multiple scanned documents to print them in one set.

❖ Your current situation might be...

You want to combine several originals that are different in density, size, and paper weight, e.g.


- Scrapped and pasted originals
- Photo originals
- One sided originals
- Two sided originals



With the Document Server

You can save the originals individually by making the best settings for each original, and edit them as a file.

It does not matter whether the originals were scanned using the document feeder or the exposure glass. As you can specify the print order for several files, you can combine them as you want, and print them as a file.

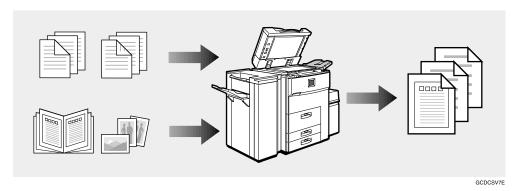

You can check the print result by printing a sample set before making a large print run by pressing the **[Sample Copy]** key.

If you are not satisfied with the print result of some pages of the set, you have only to scan that part again.


Scanning Originals

You can scan the originals you want to save in the Document Server using the control panel of the machine. The originals can be set either on the exposure glass or into the document feeder.

The saved documents will automatically be named in the order of scanning as "Scan001", "Scan002"....


Note

- \square You can set the timer to delete the documents stored in the Document Server with the User Tools. See "Auto File Delete" in \Rightarrow p.311 "Count Manager".
- ☐ You can change the file names that are assigned automatically.
- ☐ You can use a password to prevent others from printing saved documents.
- 1 Press the [Document Server/New Job] key.

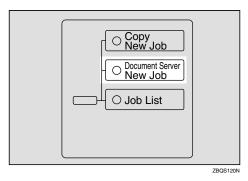


The "Document Server: Files" display appears.

2 Press the [Scan Originals] key.

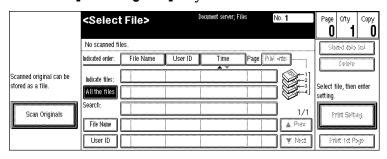

The "Doc. server: Scanning" display appears.

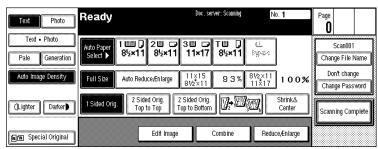

3


Enter a file name.

𝒯 Note

- ☐ If you do not wish to register a file name, go to step **4**.
- \square If you do not register a file name, it is stored automatically.

To set the file name


- 1 Press the [Change File Name] key.
- 2 Enter the new file name using the letter keys on the display panel.

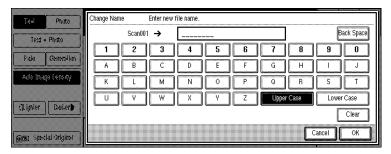

- **𝚱** Note
- ☐ You can enter up to 8 letters.
- ☐ To switch to the capital letter mode or small letter mode, press the [Upper Case] or [Lower Case] key.
- ☐ To change the letter entered, press the [Back Space], [Clear], or [Clear/Stop] key and enter new letters. To delete the entered letters in 1 letter steps, press the [BackSpace] key. To delete all the entered letters, press the [Clear] or [Clear/Stop] key.
- 3 Press the [OK] key.
- 4 Enter your password.
 - Note
 - ☐ If you do not wish to enter a password, go to step **5**.

To set the password


- 1 Press the [Change Password] key.
- **2** Enter the password using the number keys (4 digits).

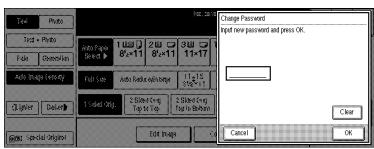

- Note
- ☐ To change the number entered, press the [Clear] or [Clear/Stop] key and enter a new number.
- 3 Press the [OK] or [#] key.
- **5** Set your originals either on the exposure glass or into the document feeder.

For more information on the types of originals that can be set and how to set them, see \Rightarrow p.33 "Setting Originals".

6 Make any desired settings.

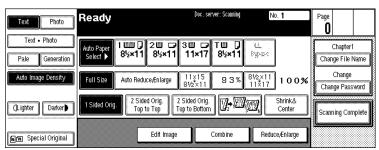

Note

☐ Press the **[Scanning Complete]** key to cancel the file name, password, or print settings and return to the "Document Server: Files" display.

₽ Reference

For details, see the explanations of each function in this manual.


Press the [Start] key.

The document is saved in the Document Server. The saved documents are displayed on the "Document Server: Files" display.


- ☐ If you have set your originals in the document feeder, the "Document Server: Files" display appears automatically after all originals have been scanned.
- ☐ If you have set your originals on the exposure glass, press the **[Scanning Complete]** key after all originals have been scanned. The "Document Server: Files" display appears.
- ☐ To stop scanning, press the [Clear/Stop] key.
- ☐ To resume the paused scanning job, press the [Resume] key in the confirmation dialog box. To delete the saved images and cancel the job, press the [Cancel] key.

To change the file name or password

1 Press the line of the document whose file name or password you want to change.

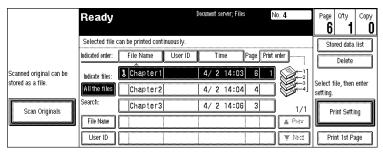

- 2 If you select a document which requires a password, the "Input the Password" window appears. Input the password using the number keys, then press the [OK] key.
- 3 Press the [Stored data list] key.
- **4** Press the [Change File Name] or [Change Password] key.

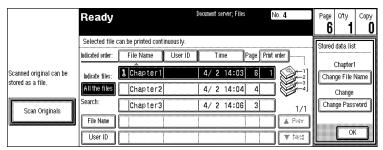

- **6** Enter the new file name or password using the letter keys or number keys.
- **6** Press the [OK] key.

Printing Saved Documents


You can print any of the documents saved in the Document Server.

Follow these steps to select a document and print it out.


1 Press the [Document Server/New Job] key.

The "Document Server: Files" display appears.

2 Press the line for the document you want to print.

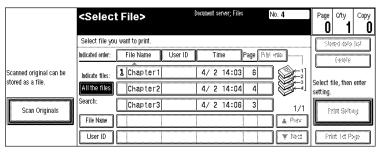

The selected line is highlighted.

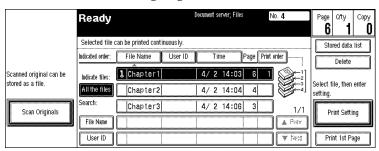


- \square You can search the document you desire by the file name. See \Rightarrow p.221 "To Search by File Name".
- ☐ You can sort the files in order of [File Name], [Time], or [Print order]. Press the key you want to sort by.
- ☐ If the desired file name is not shown, see the next or previous screen using the [▼ Next] and [▲ Prev.] keys.
- ☐ If you cannot choose the desired document by its name, you can print the first page to check the contents. Press the line for the desired document, and press the [Print 1st Page] key followed by the [Start] key.
- ☐ Press the selected line again to cancel the print job.
- ☐ If you select a document which requires a password, the "Input the Password" window appears. Enter your password using the number keys, then press the [OK] key. To delete the value entered, press the [Clear] or [Clear/Stop] key. To cancel a selected document, press the [Cancel] key.

To print more than one document, repeat step 2 to select the desired documents in the order you want to print them out.


The selected order is shown in the priority column next to the selected document(s).

𝚱 Note

- ☐ To change the print order, press the highlighted lines to return to the normal conditions, then select them again in the order you want to print.
- ☐ Press the **[Clear Modes/Energy Saver]** key to cancel all the settings.
- 4 If you need to change any of the print settings, press the [Print Setting] key.

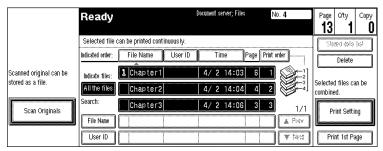

The "Document Server: Print Conditions" display appears.

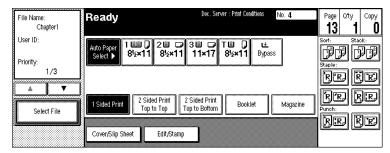

Note

- ☐ The print settings remain in the machine after printing.
- ☐ The print settings of the document you select first are applied to the merged documents.
- ☐ If you select multiple files, you can confirm the file names or print order of the files you selected in step **⑤** by scrolling through the list with the [▼] and [▲] keys.
- $\hfill \square$ Press the **[Select File]** key to return to the "Document Server: Files" display.

₽ Reference

For details, see the explanations of each function in this manual.

- **5** Enter the required number of prints using the number keys.
 - Note
 - ☐ Up to 999 can be entered.
 - ☐ To change the value entered, press the **[Clear/Stop]** key and enter new value.
 - \square If you print more than one set using the Sort function, you can check the print result by printing out only the first set. See \Rightarrow p.220 "Sample Printing".
- 6 Press the [Start] key.

The machine starts printing.

Ø Note

☐ To pause the print job, press the **[Clear/Stop]** key. In the confirmation dialog box, press the **[Resume]** key to resume it, or press the **[Cancel]** key to cancel it.

Sample Printing

If you print multiple sets using the Sort function, you can check if the print order or the print settings are correct by printing out only the first set using the **[Sample Copy]** key.

- Limitation
- ☐ This function can be used only when the Sort function has been turned on.
- **1** Follow steps **1** to **5** of the preceding procedure.
- **2** Press the [Sample Copy] key.
- After the first set is printed out, press the [Resume] key to print the rest of the print job. Press the [Cancel] key to cancel it and return back to the "Document Server: Print Conditions" menu for changing the setting.

Print First Page

You can print the first page of the document selected in the "Document Server: Files" display to check the contents.

If more than one document is selected, the first page of each document is printed.

- Press the line for the desired document(s) in the "Document Server: Files" display, and press the [Print 1st Page] key.
- 2 Press the [Start] key.

The first page is printed out.

To Search by File Name

You can search the document stored in the Document Server by the file name.

1 Press the [Document Server/New Job] key.

The "Document Server: Files" display appears.

- 2 Press the [File Name] key.
- **3** Enter the file name using the letter keys.
 - Note
 - \square You can enter up to 8 letters.
 - ☐ To switch to the capital letter mode or small letter mode, press the [Upper Case] or [Lower Case] key.
 - ☐ To change the letter entered, press the [Back Space], [Clear], or [Clear/Stop] key and enter new letters. To delete the entered letters in 1 letter steps, press the [Back Space] key. To delete all the entered letters, press the [Clear] or [Clear/Stop] key.
- 4 Press the [OK] key.

Only the files beginning with the letters appear in the "Document Server: Files" display.

- **𝒯** Note
- ☐ To display all the files saved in the Document Server, press the [All the files] key.

Deleting Saved Documents

You should delete any of the saved documents using the control panel of the machine. This section describes how to delete saved documents.

#Important

- ☐ You can save up to 200 documents in the Document Server. No more documents can be saved, when there are 200 documents in the Document Server. You should delete unnecessary documents.
- \square You can set the timer to delete the documents stored in the Document Server with the User Tools. See "Auto File Delete" in \Rightarrow p.311 "Count Manager".

Note

 \square You can delete all the saved documents at a time with the User Tools. See "Delete All The Saved Files" in \Rightarrow p.311 "Count Manager".


Follow these steps to delete saved documents.

1 Press the [Document Server/New Job] key.

The "Document Server: Files" display appears.

2 Select a document you want to delete by pressing the name of it.


The selected name is highlighted.

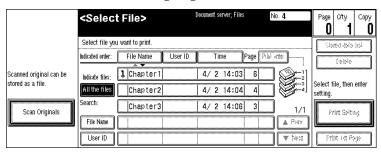

- \square You can search the document you desire by the file name. See \Rightarrow p.221 "To Search by File Name".
- ☐ You can sort the files in order of [File Name], [Time], or [Print order]. Press the key you want to sort by.
- ☐ If the desired file name is not shown, see the next or previous screen using the [▼ Next] and [▲ Prev.] keys.
- ☐ If you cannot choose the desired document by its name, you can print the first page to check the contents. Press the line for the desired document, and press the [Print 1st Page] key followed by the [Start] key.
- ☐ Press the selected line again to cancel the print job.
- ☐ If you select a document which requires a password, the "Input the Password" window appears. Enter your password using the number keys, and press the [OK] key. To delete the value entered, press the [Clear] or [Clear/Stop] key. To cancel a selected document, press the [Cancel] key.

- **3** Repeat step **2** if you want to select more than one document.
- 4 Press the [Delete] key.

A confirmation dialog box appears.

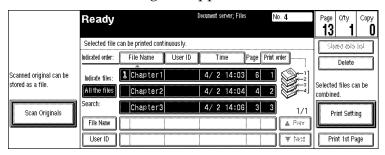

Press the [Delete] key to delete it.




𝚱 Note

 $\hfill\Box$ To cancel the delete operation, press the \hfill key.

4. Connect Copy (Option)

What is Connect Copy?

Connect Copy is a feature that allows you to connect two machines together using a cable. When you set up your copy job on one machine (the master unit), data is transferred to the other machine (the sub-unit) so that copies can be made on both machines simultaneously.

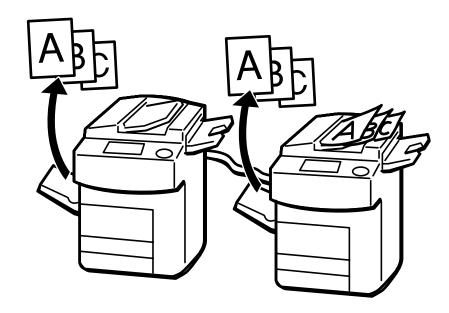

GCCONN0E

Connect Copy benefits

Connect Copy provides the following benefits:

High-speed copying for greater productivity

For large volume copy runs, two connected machines form a single system that can complete the job in a shorter time. If two 55 copies/minute (A4 \square , $8^1/2" \times 11" \square$ size) copiers are connected together, a 110 copies/minute (A4 \square , $8^1/2" \times 11" \square$ size) speed will be available.


Auto-backup system for less participation of operators

Even if one machine stops because of a paper jam, it has run out of toner, or run out of paper, the other machine will take over and finish the job automatically. If the stopped machine is recovered, the machines will allocate the job again and continue using Connect Copy to complete the job in a way that results in maximum productivity.

- ☐ You cannot make other copy jobs when two machines are connected.
- ☐ The two machines automatically share the job in order to finish at almost the same time and provide maximum productivity.
- ☐ To use the two machines separately again, press the **[Connect]** key to disconnect them.

How Connect Copy Works

In this manual, we refer to the two machines as the master unit and sub-unit respectively.

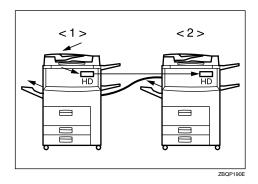

1. Master unit

2. Sub-unit

As your original is scanned in, the image data is stored on the master unit hard disk and transferred simultaneously to the sub-unit hard disk. As soon as scanning has finished, copying starts.

The master unit is the machine at which you press the **[Connect]** key to enter Connect Copy mode. When you do this, the other machine becomes the sub-unit. You can use either machine as the master unit or sub-unit, but you cannot change the relationship without exiting Connect Copy mode first.

Connectable Copier

You can still use Connect Copy even if no optional finisher or large capacity tray (LCT) is available. However, the optional finisher must be installed in both units in order to use the Stack and Staple functions, and the optional finisher and punch kit must be installed in both units in order to use the Punch function.

Functions Not Available with Connect Copy

The following functions are not available in Connect Copy mode:

• Job Preset

Interrupt Functions

- You cannot use Connect Copy when a job has been paused using the Interrupt function.
- You can use the Interrupt function on the sub-unit while in Connect Copy mode, but only when the master unit is not scanning originals.

Before You Start

Both units must have paper trays loaded with paper of the same size, direction and type that you wish to copy onto.


To make the most out of the Connect Copy feature, we recommend that:


- The paper tray settings of the master unit and sub-unit match each other.
- The "Original Mode Quality Level" of the User Tools settings should be the same on each unit. If they are not the same, the copied images may differ. See "Original Mode Quality Level" in \Rightarrow p.292 "General Features $^1/_3$ ".


Connect Copy Display Panel

This section describes the displays on the master unit and sub-unit.

Note that when you enter Connect Copy mode, you must access all Connect Copy features and menus through the master unit display panel.

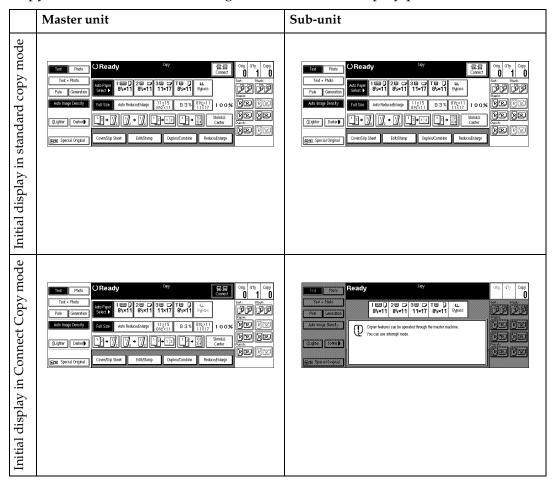

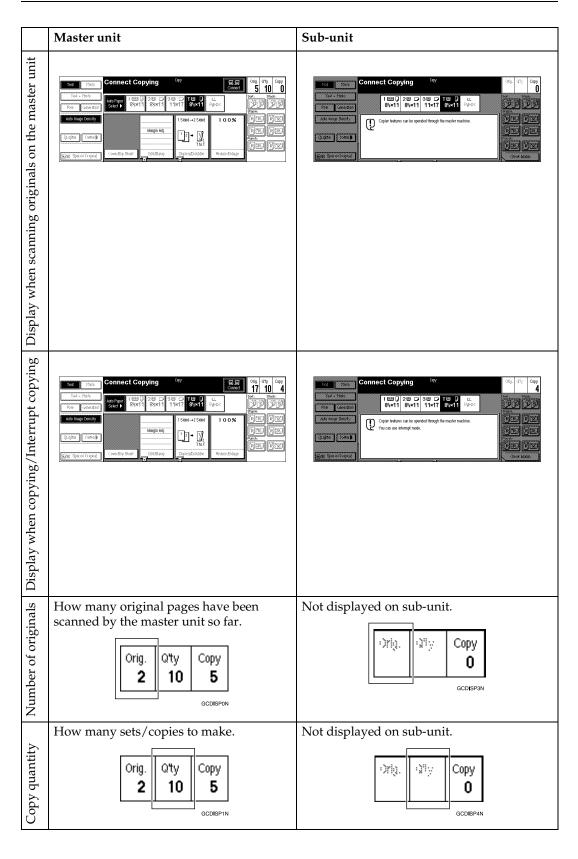

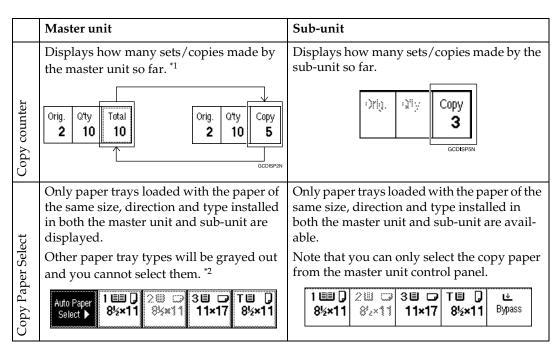

^{*1} When two or more pages are being copied using Sort and Staple, you can check how many sets have been copied so far. To toggle the copy counter between the master unit total and the total for both units, press the area that displays the number of copies. "Copy" means the number of sets made so far by the master unit and "Total" means the total number of sets made so far by both units.

^{*2} The bypass tray can be used only for the Cover/Designate functions.

Using Connect Copy


You can select Connect Copy mode from either of the two connected machines by pressing the **[Connect]** key. The machine you use becomes the master unit, and the other machine the sub-unit.

Limitation

☐ Once Connect Copy is selected, you must carry out all operations on the master unit.

Note

- ☐ You can select whether the **[Connect]** key is displayed or not with the User Tools. See "Connect Copy Master" in ⇒ p.311 "Count Manager".
- **1** Make sure that the machine is in Copy mode.

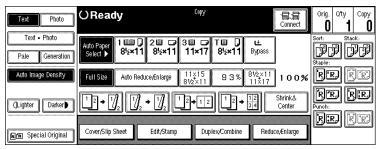

Note


☐ If the User Codes are turned on, enter a user code programmed in the master unit using the number keys (maximum 8 digits) then press the [#] key. You do not need to enter the user code for the sub-unit.

⇒ p.87 "User Codes"

2 Press the [Connect] key on the machine that is to be the master unit.


When the key darkens, the two units are connected.

Master unit display

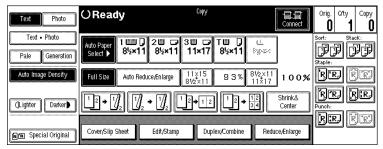

1

Sub-unit display

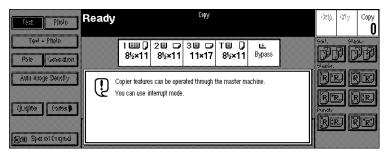


₽ Reference

If the **[Connect]** key is not visible or you cannot select it, see \Rightarrow p.253 "Connect Copy".

If you press the **[Connect]** key and the message "Connect Copy is not available at this time. Please check the connected machine. Press **[Cancel]**, connect copy will be cancelled." appears, see \Rightarrow p.251 "Connect Copy".



3 Set your originals in the master unit.

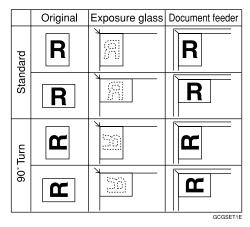

⇒ p.33 "Setting Originals"


4 Make any settings you require on the master unit.

𝚱 Note

- ☐ Any copy settings that were set up before you entered Connect Copy mode will still remain in effect. However, if optional finishers are not installed on both the master unit and sub-unit, the Stack, Staple and Punch functions will be automatically disabled.
- ☐ To exit Connect Copy mode, press the **[Connect]** key on the master unit again.

For more information on functions you can use with Connect Copy, see \Rightarrow p.17 "Function List Based on Options".

5 Enter the number of copies you require using the number keys.

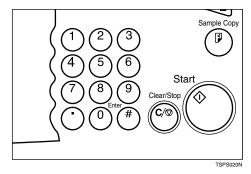

𝚱 Note

- ☐ You can enter up to 999 copies.
- ☐ If you make a mistake, press the **[Clear/Stop]** key and enter a new number.
- ☐ Even though Connect Copy is selected, only the master unit will make copies in the following situations:
 - When making a single copy set
 - When the original is a single sheet and you enter a low number of copies/sets

6 Press the [Start] key on the master unit.

Copying starts after the original has been scanned.

If you set originals in the document feeder

1 Copying starts simultaneously in the master unit and sub-unit after all originals have been scanned.

If you set originals on the exposure glass

- 1 Set the next page(s) when scanning has finished, then press [Start] key.
- 2 When all pages have been scanned in, press the [#] key. Copying starts simultaneously in the master unit and sub-unit.

If you use Batch (SADF) mode

- ① Set your originals and press the [Start] key. After all the previously set originals are fed, set the next originals while the Auto Feed indicator is lit.
- 2 When all pages have been scanned in, press the [#] key. Copying starts simultaneously in the master and sub-unit.

𝚱 Note

☐ To stop originals from being scanned or copied, press the **[Clear/Stop]** key on the master unit, then press the **[Cancel]** key following the instructions on the display.

See \Rightarrow p.38 "Batch (SADF) mode".

If the size of scanned data exceeds memory capacity, the memory over-flow message is displayed. Follow the instructions in "When Memory Is Full". See \Rightarrow p.262 "Connect Copy".

Pick up your copies from the master unit and sub-unit.


- ☐ The number of sheets and sets copied by the master unit and sub-unit may be different.
- ☐ The master unit and sub-unit may not finish copying at the same time.
- ☐ When using the Sort/Staple function, copies are organized into copy sets. If there is a paper jam in one machine during this process, it is not possible for the other machine to take over the copy set processing of the down machine.

Copy output order

When copying in Sort/Staple mode

e.g., copying 6-sets of a 3-sheet original

• Copying with the master unit (face down output)—sub-unit (face down output)

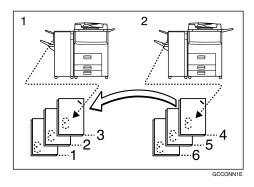

1. Master unit


2. Sub-unit

When using Sort/Staple, your copies sets are not split between the master unit and sub-unit.

♦ When copying without Sort/Staple mode

e.g., making 2 copies of each page of a 6-sheet original

Copying with the master unit (face down output)—sub-unit (face up output)

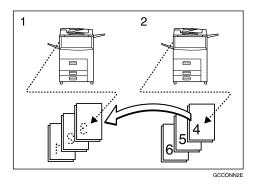

1. Master Unit

2. Sub-Unit

Combine your copy stacks from the master unit and sub-unit as shown in the diagram.

Auto Reset

The machine exits Connect Copy mode and automatically returns to the initial condition a certain period of time after your job has finished. This function is called "Auto Reset".

Note

- ☐ When the master unit "Auto Reset Timer" of the User Tools delay elapses, the master unit will be reset automatically.
- ☐ When the sub-unit "System Reset" of the User Tools (System Settings) delay elapses, Interrupt mode will be cancelled on the sub-unit.

See "Auto Reset Timer" in \Rightarrow p.292 "General Features $^{1}/_{3}$ ".

See "System Reset" in the System Settings manual.

Auto Off

The machine turns itself off automatically a certain period of time after your job has finished. This function is called "Auto Off".

Ø Note

☐ You can change the Auto Off time.


See "Auto Off Timer" in the System Settings manual.

Exiting Connect Copy Mode

This procedure describes how to exit Connect Copy mode and return to the standard copying functions.

1 Press the [Connect] key on the master unit.

The [Connect] key will be deselected.

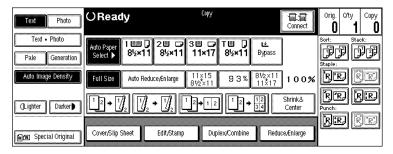

Note

- ☐ Settings that were selected on the master unit while in Connect Copy mode will not be cleared.
- ☐ If you press the **[Clear Modes/Energy Saver]** key on the master unit, Connect Copy mode is canceled and the master unit returns to the initial condition of the Copy mode.
- ☐ The sub-unit will return to the state it was in prior to entering Connect Copy mode.

If you cannot exit Connect Copy mode by pressing the **[Connect]** key, see \Rightarrow p.256 "If You Cannot Exit Connect Copy".

Printing Saved Documents with Connect Copy


You can print any of the documents saved in the Document Server using Connect Copy.

Note


- ☐ Use the machine that saved the documents in the Document Server as the master unit.
- 1 Press the [Document Server/New Job] key on the master unit.

The "Document Server: Files" display appears.

2 Press the line for the document you want to print.

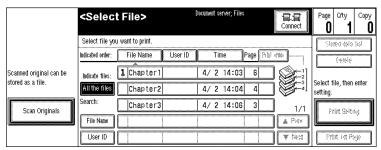

The selected line is highlighted.

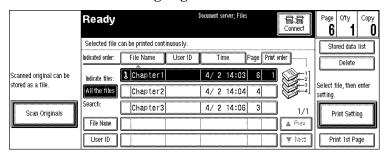


- \square You can search the document you desire by the file name. See \Rightarrow p.221 "To Search by File Name".
- ☐ You can sort the files in order of [File Name], [Time], or [Print order]. Press the key you want to sort by.
- ☐ If the desired file name is not shown, see the next or previous screen using the [▼ Next] and [▲ Prev.] keys.
- ☐ If you cannot choose the desired document by its name, you can print the first page to check the contents. Press the line for the desired document, and press the [Print 1st Page] key followed by the [Start] key.
- ☐ Press the selected line again to cancel the print job.
- ☐ If you select a document which requires a password, the "Input the Password" window appears. Enter your password using the number keys, and press the [OK] key. To delete the value entered, press the [Clear] or [Clear/Stop] key. To cancel a selected document, press the [Cancel] key.

To print more than one document, repeat step 2 to select the desired documents in the order you want to print them out.


The selected order is shown in the priority column next to the selected document(s).

Ø Note

- ☐ To change the print order, press the highlighted lines to return to the normal conditions, then select them again in the order you want to print.
- ☐ Press the **[Clear Modes/Energy Saver]** key to cancel all the settings.
- 4 If you need to change any of the print settings, press the [Print Setting] key.

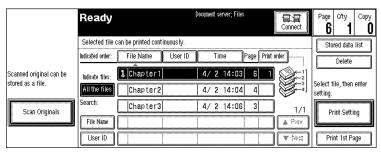

The "Document Server: Print Conditions" menu appears.

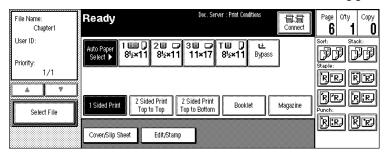

Note

- ☐ The print settings remain in the machine after printing.
- ☐ The print settings of the document you select first are applied to the merged documents.
- ☐ If you select multiple files, you can confirm the file names or print order of the files you selected in step by scrolling through the list with the [▼] and [▲] keys.
- \square Press the **[Select File]** key to return to the "Document Server: Files" display.

For details, see the explanations of each function in this manual.

5 Press the [Connect] key.

When the key darkens, the two units are connected.

6 Enter the required number of prints using the number keys.

✔ Note □ Up to 999 can be entered. □ To change the value entered, press the [Clear/Stop] key and enter a new value. □ If you print more than one set using the Sort function, you can check the print result by printing out only the first set. See ⇒ p.220 "Sample Printing".

7 Press the [Start] key.

Printing starts after the image data stored in the master unit has been transferred to the sub-unit. Note The printing may take some time after transferring the image data to the sub-unit. To stop originals from being printed, press the [Clear/Stop] key on the master unit, then press the [Cancel] key following the instructions on the display. The number of sheets and sets printed by the master unit and sub-unit may be different. The master unit and sub-unit may not finish printing at the same time.

4

Relationship Between Master Unit and Sub-Unit System Settings

This section describes which System Settings are used by the master unit and sub-unit in Connect Copy mode.

𝚱 Note

☐ In Connect Copy mode, the **[User Tools/Counter]** key on the sub-unit is disabled. To access the User Tools on the sub-unit, you need to exit Connect Copy mode first.

For details, see the System Settings manual.

Symbol	Meaning
☆	The master unit and sub-unit use each setting
←	Both units use the master unit setting
_	Unrelated
*	Depends on the function

Menu	Master unit	Sub-unit	Remarks
Basic Page 1	•	•	
Operation Panel Beeper	☆	☆	
Ready Operation Panel Beeper	☆	☆	
Copy Count Display	_	_	The copy counter is always displayed in count up mode.
Auto Tray Switching	☆	☆	
Auto Off Timer	☆	_	
Low Power Shift Time	_	_	In Connect Copy mode, neither
Low Power Timer	_	_	unit will enter any of Energy Saver modes (Low Power mode, Energy Saver mode). When Con- nect Copy is exited, the machines will enter Energy Saver mode af- ter the programmed delay elaps- es.
ADF Orig. Ejection	☆	_	
<f f4="">Size Setting</f>	☆	☆	
Basic Page 2	•	•	
System Reset	_	*	Interrupt mode on the sub-unit will be cleared by this timer.

Menu	Master unit	Sub-unit	Remarks
Function Priority	_	_	When the time set in "Auto Reset Timer" of the User Tools on the master unit passes and Connect Copy is canceled, and then the time set in "System Reset" of the User Tools (System Settings) passes, it returns to the function defined by the "Function Priority" of the User Tools (System Settings) settings.
Copy/Document Server: Output Tray	☆	☆	
Staple initialization	_	_	
Set Time			
Set Date	☆	☆	
Set Time	☆	☆	
Weekly Timer:Monday to Sunday	*	_	The function is disabled on the sub-unit in Connect Copy mode. When Connect Copy is exited, the power will be switched off at the time specified by the timer.
Key Operator Code for Off Setting	_		
Paper Size Setting			
Paper Tray Priority	☆	☆	
Tray 1:Paper Size Setting	☆	☆	We recommend that the master
Tray 2:Paper Size Setting	☆	☆	unit and sub-unit have the same paper tray settings. This is be-
Tray 3:Paper Size Setting	¥	☆	cause only paper trays with the same size, direction, and type of paper can be used in Connect Copy mode.
Bypass: Special Paper Indication	*	*	Can be used only with the Cover/Designate functions.
Tray 1: Special Paper Indication	☆	☆	We recommend that the master
Tray 2: Special Paper Indication	☆	☆	unit and sub-unit have the same paper tray settings. This is be-
Tray 3: Special Paper Indication	☆	☆	cause only paper trays with the
LCT: Special Paper Indication	☆	☆	same size, direction, and type of paper can be used in Connect Copy mode.
Cover	☆	☆	
Slip Sheet 1	☆	☆	

Menu	Master unit	Sub-unit	Remarks
Slip Sheet 2	☆	☆	
Count Manager	•		
Set User Codes	☆	_	Access these settings on the master unit. The master unit settings override those of the sub-unit.
Key Counter	_	_	You cannot control the optional Key Counter in Connect Copy mode.
Set Key Card	☆	_	_
Key Operator Code	_	_	
AOF(Keep It On.)	_	_	Neither the master unit nor sub- unit will be turned off by this function in Connect Copy mode. The power will go off after you have exited Connect Copy mode and the AOF Delay has elapsed.
Counter/Print	_	_	

Relationship Between Master Unit and Sub-Unit Copy/Document Server Features

This section describes which Copy/Document Server Features are used by the master unit and sub-unit in Connect Copy mode.

Ø Note

☐ In Connect Copy mode, the **[User Tools/Counter]** key on the sub-unit is disabled. To access the User Tools on the sub-unit, you need to exit Connect Copy mode first.

₽ Reference

⇒ p.287 "User Tools (Copy/Document Server Features)"

Symbol	Meaning
☆	The master unit and sub-unit use each setting
←	Both units use the master unit setting
_	Unrelated

Menu	Master unit	Sub-unit	Remarks
General Features			
Auto Paper Select Priority	☆	_	Trays with the same size and direction of paper will be selected from the master unit and sub-unit automatically.
Auto Paper Select Tray Display	☆	_	The sub-unit displays the type of paper whether this function is selected or not.
Auto Image Density Priority	☆	_	
Original Mode Priority	☆	_	
Original Mode Display	☆	_	
Original Mode Quality Level	☆	☆	Same level should be selected on both units.
Original Image Density Level	☆	☆	Each unit uses its own programmed value.
Auto Reset Timer	☆	_	Connect Copy will be cancelled according to the timer on the master unit.
Duplex Mode Priority	☆	_	
Copy Orientation in Duplex Mode	☆	_	
Original Orientation in Duplex Mode	☆	_	

Menu	Master	Sub-unit	Remarks
Initial Mode	unit		
	☆	_	
Maximum Copy Quantity	☆	_	
Original Beeper	☆	_	
Job End Call	☆	*	When turned on, the beeper sounds only on the master unit when copying is completed. Only if the "Operation Panel Beeper" of the User Tools (System Settings) setting is "On".
Time for indicating job status	_	_	
Shortcut Keys:F1	☆	_	
Shortcut Keys:F2	☆	_	
Shortcut Keys:F3	☆	_	
Shortcut Keys:F4	☆	_	
Shortcut Keys:F5	☆	_	
Reproduction Ratio			
Shortcut R/E	☆	_	
R/E Priority	☆	_	
Enlarge 1 – 5	☆	_	
Priority Setting : Enlarge	☆	_	
Reduce 1 – 6	☆	_	
Priority Setting : Reduce	☆	_	
Shrink&Center Ratio	☆	_	
Page Format			
Front Margin: Left/Right	☆	←	
Back Margin: Left/Right	☆	←	
Front Margin: Top/Bottom	☆	←	
Back Margin: Top/Bottom	☆	←	
$1 \rightarrow 2$ Duplex Auto Margin Adjust	☆	←	
Erase Border	☆	←	
Combine Orig. Shadow Erase	☆	←	
Erase Center	☆	←	
Repeat Separation Line	☆	←	
Double Copies Separation Line	☆	←	
Combine Separation Line	☆	←	
Copy Back Cover	☆	←	

Menu	Master unit	Sub-unit	Remarks
Cover page in combine mode	☆	←	
Designated Slip Sheet Copy In Combine	☆	←	
Booklet/Magazine Original Orientation	☆	←	
Copy Order In Combine Mode	☆	←	
Stamp Setting	1	- 1	
Background Numbering			
Size	☆	←	
Density	☆	←	
Superimpose	☆	←	
Preset Stamp			
Stamp Priority	☆	←	
Stamp Language	☆	←	
Stamp position	☆	←	
Stamp condition	☆	←	
Superimpose	☆	←	
User Stamp			
Program/Delete Stamp	☆	←	Set the same stamp in the both
Stamp position	☆	←	unit.
Stamp condition	☆	←	
Date Stamp			
Format	☆	←	
Font	☆	←	
Position Priority	☆	←	
Size	☆	←	
Superimpose	☆	←	
Page Numbering			
Format Priority	☆	←	
Font	☆	←	
Size	☆	←	
Duplex Back Page Number Position	☆	←	
Page Numbering In Combine Mode	☆	←	

26	3.6	C 1 ''	D 1
Menu	Master unit	Sub-unit	Remarks
Copy On Slip Sheet In Designate Mode	☆	←	
Position Priority: P1, P2	☆	←	
Position Priority: 1/5, 2/5	☆	←	
Position Priority: -1-, -2	☆	←	
Position Priority: P.1, P.2	☆	←	
Position Priority: 1, 2	☆	←	
Position Priority: 1-1,1-2	☆	←	
Superimpose	☆	←	
Input/Output			
Batch (SADF) Auto Reset Time	☆	_	
ARDF Original Table Rise Time	☆	_	
Face-Up/Down Selection in Platen Mode	_	_	This setting will be ignored and the setting programmed for Connect Copy will be used. PReference
			See step 1 in ⇒ p.232 "Using Connect Copy".
Rotate Sort Auto Paper Continue	兹	←	This function is effective when the "Auto Tray Switching" of the User Tools (System Settings) set- ting is "On (Rotate)".
Auto Sort Mode	☆	_	
Memory Full Auto Scan Restart	☆	←	
Select Stack or Rotate sort	☆	_	
Staple Position	☆	_	
Paper Eject: Always Rotate 180°	☆	←	
Count Manager		•	
Check/Reset/Print Copy Counter	_	_	
User Code Register/Change/Delete	_	_	
Face-Up/Down Selection in Bypass Mode	_	_	
Connect Copy Master	☆	_	
Auto File Delete	☆	_	
Delete All The Saved Files	_	_	
1			

5. Troubleshooting

If Your Machine Does Not Operate as You Want

General

Machine Status	Problem/Cause	Action
The machine instructs you to wait.	The machine is warming up.	Wait for the machine to warm-up.
		₽ Reference
		You can use Auto Start mode during warm-up pe- riod. See ⇒ p.88 "Auto Start".
	Copy paper is moving in Tray 1 (Tandem Tray).	Wait for the machine.
The machine cannot detect the original size.	Improper original is set. See ⇒ p.25 "Sizes difficult to detect".	Set non-standard size original on the exposure glass. See ⇒ p.34 "Setting Originals on the Exposure Glass".
		Select paper manually, not in Auto Paper Select mode.
		Do not use Auto Reduce/Enlarge mode.
	Original is not set.	Set your originals.
The machine instructs you to check the original direction.	There is no copy paper that is in the same direction as the originals.	Set the original in the same direction as the copy paper.
The machine instructs you to check paper size.	Improper original size is set.	Select the proper paper size.
The machine cannot perform rotate-sorting for this paper size.	The size of paper for which no rotate-sorting is available is selected.	Select the proper paper size. See \Rightarrow p.56 "Sort".
The machine cannot punch this size of paper.		Select the proper paper size that can be used in Punch mode. See ⇒ p.67 "Punch".
The number of sheets that can be stapled has been exceeded.		Check the stapler capacity. See \Rightarrow p.61 "Staple".

Machine Status	Problem/Cause	Action
The machine cannot staple this size of paper.		Select the proper paper size that can be used in Staple mode. See ⇒ p.61 "Staple".
This paper is not available in Duplex mode.	A paper size not available in Duplex mode has been selected.	Select a paper size that can be used in Duplex mode. See \Rightarrow p.110 "Duplex".
You cannot enter the desired copy set number.	The number of copies exceeds the maximum copy quantity.	You can change the maximum copy quantity that you can make at a time. See "Maximum Copy Quantity" in ⇒ p.295 "General Features 2/3"
The indicated unit was not set/installed correctly.	The B2 lever is released, but not in the correct position.	Set the B2 lever in it's correct position.

Document Server

Machine Status	Problem/Cause	Action
The machine asks you whether you want to store pages where scanning is finished as 1 file.	The number of scanned pages exceeds the capacity per file of the Document Server.	The maximum number of pages per file you can store is 1,200 pages in the Document Server. To store pages where scanning is finished as 1 file, press the [Yes] key. To cancel scanning, press the [No] key.
Scanned pages became over 1,200 pages per file.	The number of scanned pages exceeds the capacity of the Document Server.	The maximum number of files or pages per file you can store is 200 files or 1,200 pages in the Document Server. Delete any unnecessary files and then scan the document again.

Connect Copy

Machine Status	Problem/Cause	Action
You cannot use Connect Copy. You cannot use Connect Copy. The other machine is in	The sub-unit has a paper mis- feed or needs a fresh supply of toner or other replenishable supply.	Press the [Cancel] key on the master unit and follow the instructions given on the subunit display.
use.		₽ Reference
		See \Rightarrow p.268 " $\ \ \ \ \ \ \ \ \ \ $ Changing the Toner Bottle".
		See ⇒ p.270 " % Clearing Misfeeds".
		See ⇒ p.283 "♣ Removing Jammed Staples".
		If the sub-unit display shows that a cover is open, follow the instructions given. For all oth- er situations, follow the in- structions on the display.
	The User Tools menu is open on the sub-unit.	Press the [Cancel] key on the master unit. Then on the subunit press the [User Tools/Counter] key to close the User Tools menu.
	The sub-unit is busy copying or printing with another function.	Press the [Cancel] key on the master unit then stop the subunit from copying/printing.
	The sub-unit is in Interrupt mode.	Press the [Cancel] key on the master unit. Then press the [Interrupt] key on the sub-unit to exit Interrupt mode.
		Reference ⇒ p.86 "Interrupt Copy"
	The sub-unit has been switched off automatically by the Weekly Timer function and is waiting for the Key Op-	Press the [Cancel] key on the master unit. Then on the subunit enter the code and press the [#] key.
	erator Off Code to be entered.	
		See "Key Operator Code for Off Setting" in the Sys- tem Settings manual.
	The sub-unit is not in Copy mode (i.e., in Document Server mode).	Press the [Cancel] key on the master unit. Then press the [Copy/New Job] key on the sub-unit to switch over to Copy mode.

Machine Status	Problem/Cause	Action
You cannot use Connect Copy.	The [Connect] key was pressed simultaneously on both the master unit and sub-unit.	Press the [Cancel] key on both the master unit and sub-unit, then press the [Connect] key on just one of them.
	indicator is lit on the sub- unit.	Follow the instructions shown on the display.
You cannot use Connect Copy. The other machine is in use.	The master unit is not in Copy mode (i.e., in Document Server mode).	Press the [Cancel] key on the master unit. Then press the [Copy/New Job] key on the master unit to switch over to Copy mode.

Document Server

Problem	Action
You forgot your password.	Without the password, you cannot edit or print the document. Scan the document again.
	You can delete all the saved documents at once with the User Tools. See "Delete All The Saved Files" in ⇒ p.311 "Count Manager"
	Make sure that no important document is saved in the Document Server before deleting all of the saved documents.
You cannot find out what is saved in a file.	Check the date or time column in the "Document Server: Files" display.
	Check the contents of the document by printing the first page of it. Press the line for the desired document in the "Document Server: Files" display, and press the [Print 1st Page] key followed by the [Start] key.
Memory becomes full frequently.	Delete any unnecessary files. See ⇒ p.222 "Deleting Saved Documents".
You want to check the print result before making a large print run.	Check the print result by printing out only the first set. See \Rightarrow p.220 "Sample Printing"
You want to save a document which cannot be deleted automatically.	Turn "Auto File Delete" off, then save the document in the Document Server. See "Auto File Delete" in ⇒ p.311 "Count Manager".
	If you turn "Auto File Delete" on after saving the document, this function is applied to the next saved documents.

Display

Machine Status	Problem/Cause	Action
The display panel is off.	The screen contrast knob is turned to the dark position.	Set the screen contrast knob to the light position for proper viewing of the display panel.
	The machine is in Energy Saver mode.	Press the [Clear Modes/Energy Saver] key to cancel Energy Saver mode.
	The operation switch is turned off.	Turn on the operation switch.
Nothing happens when the operation switch is turned on.	The main power switch is turned off.	Turn on the main power switch.

Connect Copy

Machine Status	Problem/Cause	Action
The [Connect] key does not appear on the display.	The main power switch on the sub-unit is off.	Turn on the sub-unit main power switch.
	The operation switch on the sub-unit is off.	Press the operation switch on the right side of the control panel. The On indicator will goes on.
		 Note □ The machine will be ready to operate about five minutes after turning power on.
	The master unit is not in Copy mode (i.e., in Document Server mode).	Press the [Copy/New Job] key on the master unit to switch to Copy mode.
	The master unit is in Interrupt mode.	Press the [Interrupt] key on the master unit to exit Interrupt mode.

Machine Status	Problem/Cause	Action
The [Connect] key does not appear on the display.	The master unit is in Job Preset mode.	Exit Job Preset mode in one of the following ways.
		If you are still selecting copy settings and copy- ing has not started yet: Press the [Cancel] key then remove the originals set in the master unit document feeder.
		❖ If Job Preset mode is in progress: Press the [Clear/Stop] key, follow the instructions on the display then press the [Cancel] key.
		Reference See \Rightarrow p.80 "Job Preset".
	The "Connect Copy Master" of the User Tools setting is "No".	Change the setting to "Yes" or press the [Connect] key on the other unit.
		Preference See "Connect Copy Master" in ⇒ p.311 "Count Manager".
	The Connect Copy cable is damaged.	Contact your service representative.
	indicator is lit.	Follow the instructions shown on the display.
The [Connect] key is grayed out.	The master unit is now copying or copying will start as soon as the warm-up finished.	Press the master unit [Clear/Stop] key to cancel copying.
	Copying has stopped because there is a paper misfeed or toner has run out on the unit you wish to use as the master unit.	Solve the problem on the master unit.
	Functions are programmed that cannot be used with Connect Copy.	Press the master unit [Clear Modes/Energy Saver] key to clear the programmed functions.
		PReference ⇒ p.17 "Function List Based on Options"

If Connect Copy Is Cleared

Machine Status	Problem/Cause	Action
Exited Connect Copy.	The master unit main power switch has been turned off or the operation switch has been pressed.	Connect Copy is cancelled and the display returns to copy standby mode. On the master unit, either turn on the main power switch or press the operation switch, then press the [Connect] key and start your copy job again.
	Either the sub-unit main power switch has been turned off or the operation switch has been pressed.	A message requesting you to check the sub-unit is displayed on the master unit. Press the [Cancel] key and clear connect-copying. Either turn on the main power switch on the sub-unit or press the operation switch and then press the [Connect] key.
	The Weekly Timer function has automatically turned the master unit off.	Press the master unit operation switch then press the [Connect] key and copy.
		Reference See "Weekly Timer" in the System Settings manual.
An error message indicating a breakdown is shown on the master unit display.	indicator is lit.	Copying is not possible. Follow the instructions displayed in the error message.

If You Cannot Exit Connect Copy

Machine Status	Problem/Cause	Action
Nothing happens when you press the [Connect] key.	Originals are being scanned or copied.	Press the master unit [Clear/Stop] key and then press the [Cancel] key to cancel scanning or copying.
	There is a paper misfeed in either the master unit or sub-	Clear the paper misfeed in the master unit or sub-unit.
	unit.	PReference ⇒ p.270 "% Clearing Misfeeds" ⇒ p.283 "♣ Removing Jammed Staples" If the display shows that a cover is open, follow the instructions given. For all other situations, follow the instructions on the display. To exit Connect Copy mode, press the master unit [Clear/Stop] key, then press the [Connect] key.
	The master unit [Clear/Stop] key was pressed and scanning of the original has been interrupted. The [Clear/Stop] key was	To exit Connect Copy mode, follow the instructions on the display, then press the [Cancel] key. To exit Connect Copy mode,
	pressed on either the master unit or sub-unit and copying has been interrupted.	follow the instructions on the display, then press the [Cancel] key.

Machine Status	Problem/Cause	Action
Nothing happens when you press the [Connect] key.	The master unit or sub-unit needs a fresh supply of toner	Solve the problem in the appropriate unit.
	or staples.	PReference ⇒ p.263 " Loading Paper" ⇒ p.268 " Changing the Toner Bottle" ⇒ p.281 " Adding Staples" ⇒ p.285 " Removing Punch Waste" For all other situations, follow the instructions on the display.
		To exit Connect Copy mode, press the master unit [Clear/Stop] key, then press the [Cancel] key.
	A paper misfeed occurred during stapling.	Remove the misfed paper. To exit Connect Copy mode, press the [Clear/Stop] key, then press the [Connect] key.

If You Cannot Make Clear Copies

Problem	Cause	Action
Copies appear dirty.	The image density is too dark.	Adjust the image density. See ⇒ p.42 "Adjusting Copy Image Density".
	Auto Image Density is not selected.	Select Auto Image Density.
The reverse side of an original image is copied.	The image density is too dark.	Adjust the image density. See ⇒ p.42 "Adjusting Copy Image Density".
	Auto Image Density is not selected.	Select Auto Image Density.
A shadow appears on copies if you use pasted originals.	The image density is too dark.	Adjust the image density. See ⇒ p.42 "Adjusting Copy Image Density".
		Change the direction of the original.
		Put mending tape on the pasted part.
The same copy area is dirty whenever making copies.	The exposure glass or document feeder belt is dirty.	Clean them. See \Rightarrow p.317 "Maintaining Your Machine".
Copies are too light.	The image density is too light.	Adjust the image density. See ⇒ p.42 "Adjusting Copy Image Density".
	Damp or rough grain paper is used.	Use dry paper without rough grain.
	Toner cartridge is almost empty.	Add toner. See ⇒ p.268 "♣ Changing the Toner Bottle".
Parts of the image are not copied.	The original is not set correctly.	Set originals correctly. See ⇒ p.33 "Setting Originals".
	An improper paper size is selected.	Select the proper paper size.
Copies are blank.	The original is not set correctly.	Set originals correctly. See ⇒ p.33 "Setting Originals".
A moiré pattern is produced on copies.	Your original has a dot pattern image or many lines.	Place the original on the exposure glass at a slight angle.

If You Cannot Make Copies As You Want

General

Problem	Cause	Action
Copies are not stapled.	There are jammed staples in the stapler.	Remove jammed staples. See ⇒ p.283 "♣ Removing Jammed Staples".
		Note After removing jammed staples, staples might not be ejected the first few times you try to use the stapler.
	The number of copies exceeds the capacity of the stapler.	Check the stapler capacity. See \Rightarrow p.61 "Staple".
	Copy paper is curled.	Turn the copy paper over in the tray.
Staples are wrongly positioned.	Originals are not set correctly.	Set originals correctly. See ⇒ p.61 "Staple".
Misfeeds occur frequently.	Copy paper size setting is not correct.	Set the proper paper size. See ⇒ p.278 "Changing the Paper Size".
You cannot combine several functions.	Selected functions cannot be used together.	See \Rightarrow p.209 "Combination Chart".
When sorting, the pages are divided into two blocks.	The memory became full in the middle of sorting and the pages were ejected in two blocks.	You can interrupt the copying when the memory becomes full. See "Memory Full Auto Scan Restart" in ⇒ p.309 "Input/Output".

Connect Copy

Problem	Cause	Action
Cannot stack, staple or punch.	The optional finisher or punch kit is not installed in the subunit.	Press the [Connect] key to exit Connect Copy mode, then copy using stack/sta- ple/punch.
The copied images differ.	The "Original Mode Quality Level" of the User Tools settings are not the same.	See "Original Mode Quality Level" in \Rightarrow p.292 "General Features $^{1}/_{3}$ ".

Adjust Image

Problem	Cause	Action
In Double Copies mode, parts of the original image are not copied.	Combination of original and copy paper is not correct.	Select the proper original and copy paper. See \Rightarrow p.166 "Double Copies".
In Border, Center, or Center/Border mode, parts of the	You set the wide erased margin.	Set the narrow margin with the User Tools. See "Erase Border" and "Erase Center" in ⇒ p.299 "Page Format 1/2".
original image are not copied.	Your original has narrow margins on four sides.	
In Margin Adjustment mode, parts of the original image are not copied.	You set the wide erased margin.	Set the narrow margin with the User Tools. See "Front Margin: Left/Right" and "Back Margin: Left/Right" in ⇒ p.299 "Page Format 1/2".
original image is not copied repeatedly.	You selected the same size copy paper as originals, and did not select the proper reproduction ratio.	Select copy paper larger than the originals.
		Select the proper reproduction ratio.

Combine

Problem	Cause	Action
You cannot make a book from a booklet or magazine by folding copies.	Combine Original Booklet Format or Combine Original Magazine Format is not cor- rect.	Change the setting. See \Rightarrow p.115 "Combine".
Parts of the image are not copied.	You specified an improper reproduction ratio that does not meet the sizes of your originals and copy paper.	When you specify a reproduction ratio using Manual Paper Select mode, make sure that the ratio matches your originals and the copy paper.
		Note Select the correct reproduction ratio before using Combine mode.
	Your originals are not identical in size and direction.	Use originals that are identical in size and direction.
Order of copies is not correct.	You set originals in the incorrect order.	When setting a stack of originals in the document feeder, the last page should be on the bottom.
		If you set an original on the exposure glass, start with the first page to be copied.

Duplex

Problem	Cause	Action
Order of copies is not correct.	You set originals in the incorrect order.	When setting a stack of originals in the document feeder, the last page should be on the bottom.
		If you set an original on the exposure glass, start with the first page to be copied.
Orientation of copies (Top to Top, or Top to Bottom) is not correct.	You set originals in an incorrect direction or the orientation setting is incorrect.	Select the correct orientation, or set originals correctly. See ⇒ p.110 "Duplex".
		 ✓ Note □ If you set A3, 11" × 17" or B4, 8¹/₂" × 14" originals as shown below, select [Top to Bottom] to make copies in "Top to Top" orientation. Or select [Top to Top] to make copies in "Top to Bottom" orientation.

Stamp

Problem	Cause	Action
The wrong date is printed.	The machine main power has been turned off for more than 20 days.	Set the date correctly again. See "Set Date" in the System Settings manual.
The stamp position is wrong.	The paper orientation is wrong.	Check the paper orientation and stamp position.
The stamp does not appear.	Stamp is too large to print.	Check the size of the user stamp and register it again. See ⇒ p.193 "Program/Delete User Stamp".

When Memory Is Full

Document Server

Machine Status	Action
The memory is full.	Delete any unnecessary files and then scan the document again. See \Rightarrow p.222 "Deleting Saved Documents".

Connect Copy

Because Connect Copy scans in all your originals into memory, if the number of originals exceeds a certain limit, the machine will run out of memory.

Limitation

☐ If memory is full on either the master unit or sub-unit, Interrupt Copy will not be available.

Ø Note

☐ If you set "Memory Full Auto Scan Restart" of the User Tools to "Yes", the memory overflow message will not be displayed, but make Connect Copy for the scanned original automatically. Connect Copy continues scanning and copying until finishing the job. Note that copy sets will be printed out separately by scanning at this time.

Machine Status	Action
The memory is full.	Press the [Output] key to copy scanned originals and clear the scanning data. Press the [Clear] key to clear the scanning data and not copy.
The machine asks you whether you want to scan the remaining originals.	To continue copying, remove all copies then press the [Resume] key. To stop copying, press the [Cancel] key.

Loading Paper Loading Paper

𝚱 Note

☐ If you want to change the paper size of Tray 2 (550-sheet tray), see \Rightarrow p.278 "Changing the Paper Size".


₽ Reference

Regarding paper types and sizes, see \Rightarrow p.26 "Copy Paper".

Loading Paper in Tray 1 (Tandem Tray)

A CAUTION:

Take care not to get your hand caught between the right and left trays.

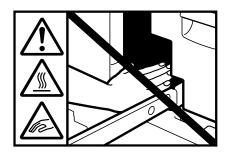


#Important

□ When the paper on the right side in Tray 1 runs out, the paper on the left side will automatically move to the right side. While the paper on the left side is moving, the machine instructs you to wait. At this time, do not pull out the tray.

𝚱 Note

- ☐ You can supply paper even while you are making copies using the paper in Tray 1. During copying, you can pull out the left half of the tray.
- ☐ Prepare paper of the same size as that loaded in the right of the tray. Load it in the left side in the same direction.


1 Pull out the paper tray until it stops.

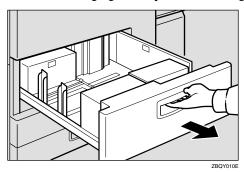


2 Square the paper and set it in the tray.

When the whole tray is pulled out

• Set the paper in the right tray.

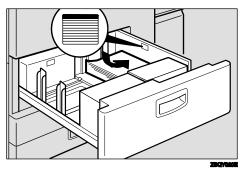

- 2 Return the right tray into the original position.
- **3** Set the paper in the left tray.

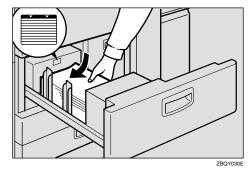


∰Important

- \square Push the right paper to the right side, and the left paper to the left side.
- \square Do not stack paper over the limit mark.

When the left half of the tray is pulled out

1 Set the paper in the left tray.

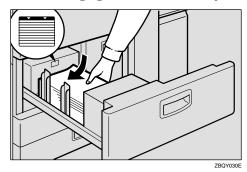


∰Important


- ☐ Do not stack paper over the limit mark.
- \square Make sure that the paper stack is flush with the left side fence.
- Note
- ☐ Straighten the paper, if curled or warped, before placing it in the tray.
- **3** Push the paper tray in until it stops.

Loading Paper in Tray 2 or 3

1 Gently pull out the paper tray until it stops.

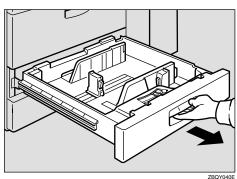

2 Square the paper and set it in the tray.

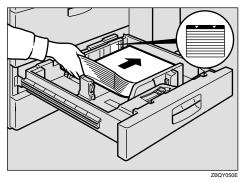


∰Important


- ☐ Do not stack paper over the limit mark.
- ☐ Make sure that the paper stack is flush with the right side fence.
- Note
- $\hfill \square$ Straighten the paper, if curled or warped, before placing it in the tray.
- **3** Gently push the paper tray in until it stops.

Loading Paper in the Large Capacity Tray

1 Open the top cover.

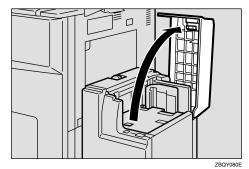


2 Place the paper in the tray along the edge on the left.

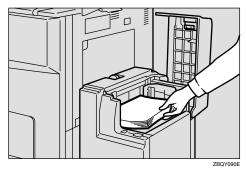

- **𝚱** Note
- \Box Load up to about 500 sheets of paper in the tray.
- Press the [Down] key.

The key blinks while the bottom plate is moving down.

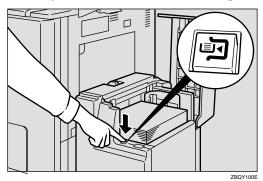

- 4 Load paper by repeating steps 2 and 3.
 - **𝚱** Note
 - \Box The tray can hold up to 3,500 sheets.
- **5** Close the top cover.

La Changing the Toner Bottle

When 🛓 is displayed, it is time to supply toner.

⚠ WARNING:

 Do not incinerate used toner or toner containers. Toner dust might ignite when exposed to an open flame. Dispose of used toner containers in accordance with local regulations.

A CAUTION:

Keep toner (used or unused) and toner containers out of reach of children.

riangle CAUTION:

 Our products are engineered to meet high standards of quality and functionality, and we recommend that you use only the expendable supplies available at an authorized dealer.

∰Important

- ☐ If you use toner other than that recommended, a fault might occur.
- ☐ When adding toner, do not turn off the operation switch. If you do, your settings are cleared.
- ☐ Always add toner after the machine instructs you to add toner.
- ☐ Do not use used toner. This will damage the machine.

Ø Note


☐ You can still make about 1,000 copies after ▲ appears, but replace the toner early to prevent poor copy quality.

Regarding toner storage, see \Rightarrow p.30 "Toner Storage".




• 1: Open the front cover of the machine.


• 2: Pull out the lever under the toner bottle toward you 90°.

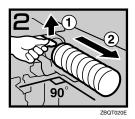


 3: Pull the green lever, and gently pull out the toner bottle.

5

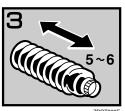

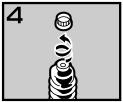

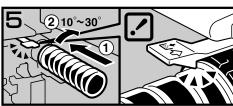



4: Hold a new bottle horizontally and shake it 5 or 6 times.

5: Remove the outer cap.




 \Box Do not remove the inner cap.

6: Place the toner bottle in position, then push it in until the green lever clicks.



- ☐ If you cannot get it to click in, pull out the toner bottle a little, slightly rotate it to the right by $10 - 30^{\circ}$, then try again.
- 7: Return the lever under the toner bottle to its original position.
- 8: Close the front cover of the machine.

♦ With 50-Sheet Finisher

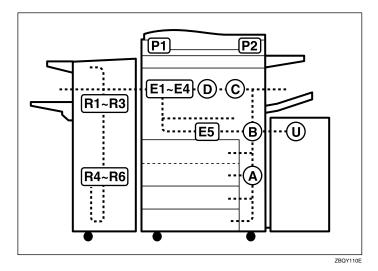

A CAUTION:

 The fusing section of this machine might be very hot. Caution should be taken when removing misfed paper.

#Important


- ☐ When clearing misfeeds, do not turn off the operation switch. If you do, your copy settings are cleared.
- ☐ To prevent misfeeds, do not leave any torn scraps of paper within the machine.
- $\hfill \square$ If paper misfeeds occur repeatedly, contact your service representative.

Note

- ☐ More than one misfed area may be indicated. In this case, check every applicable area. See the following charts: A, B, C, D, E1 E5, P1, P2, U, R (R1 R6)
- ☐ You can find a sticker explaining how to remove misfed paper inside of the front cover or inside of the finisher.

5

When D is lit

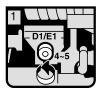

Open the front cover.
 Turn fuser unit knob
 D1/E1 four or five times
 to eject the paper.



3 Raise handle E2 and remove misfed paper.



While pushing lever D2, hold knob D3 and pull out the fuser unit.



8 Remove paper if seen.



Raise lever E4.



Remove the paper being careful not to touch the area around lever E4.

When E₁ – E₄ are lit



Open the front cover.
 Turn fuser unit knob
 D1/E1 four or five times
 to eject the paper.



③ Raise handle E2 and remove misfed paper.



While pushing lever D2, hold knob D3 and pull out the fuser unit.
 Shower lever D4.
 Check to ascertain tright-hand sides of the fuser unit.



Lower lever D4.
 Check to ascertain the left and right-hand sides of the paper, and then grasp the paper and turn knob D1/E1 to remove it.



Pull handle E3 and fully pull out the duplex unit.



® Remove paper if seen.



Raise lever E4.



® Remove the paper being careful not to touch the area around lever E4.



- Remove the paper from the output tray if it is visible.

 (When the finisher is installed, open the front
- cover and remove misfed paper.)

 © Close the front cover.






Check to ascertain the left and right-hand sides of the paper, and then grasp the paper and turn knob D1/E1 to remove it.

Pull handle E3 and fully pull out the duplex unit.





- 1 Push lever C1 to the left.
- (2) Remove misfed paper.
 (3) Return lever C1 to its original position.
 (4) Close the front cover.

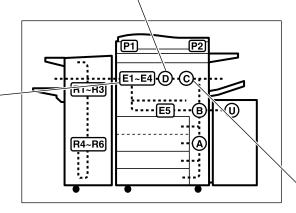

When C is lit





Open the front cover.
 Push lever C1 to the left.

3 Turn knob C2 counterclockwise and remove misfed paper.

4 Close the front cover.

TSPY441E

When E₅ is lit



Open the front cover.
 Turn fuser unit knob
 D1/E1 four or five times
 to eject the paper.



3 Raise handle E2 and remove misfed paper.



 While pushing lever D2, hold knob D3 and pull out the fuser unit.



Lower lever D4.
 Check to ascertain the left and right-hand sides of the paper, and then grasp the paper and turn knob D1/E1 to remove it.



⑦ Pull handle E3 and fully pull out the duplex unit.



® Remove paper if seen.





 Remove the paper being careful not to touch the area around lever E4.






- Remove misfed paper.Return handle E5 to its original position.

 (4) Close the cover.

When B is lit

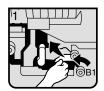


- $\label{eq:cover_problem} \textcircled{1} \ \ \text{Open the front cover.}$
- Turn knob B1 and remove misfed paper.



- 3 Return lever B2 to its
- original position.

 4 Close the front cover.

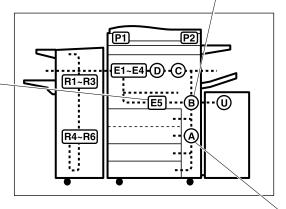

When A is lit



- Open the front cover.
- ② Push button A1 and open the guide plate.



3 Turn knob A2 and remove misfed paper.4 Close the front cover.

TSPY461E


When R is lit

50-Sheet Finisher

When R1,R2 or R3 is lit



- Open the front cover of the machine.
- ② Hold up handle R1 and remove misfed paper.

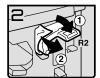

3 If you cannot remove misfed paper, hold down handle R2 and remove misfed paper.



- 4 Hold up handle R3 and remove misfed paper.
- ⑤ Close the front cover of the machine.

When R4,R5 or R6 is lit



- Open the front cover of the machine.
- ② Hold down handle R4 and remove misfed paper.



③ If you cannot remove misfed paper, hold up handle R5 and remove misfed paper.



- 4 Pull handle R6 and pull out the staple unit, then remove misfed paper.
- 5 Close the front cover of the machine.

When P₁ is lit



① Open the cover of the auto document feeder (ADF).




- ② Remove misfed originals.
- ③ Close the cover of the auto document feeder (ADF).

When P2 is lit



- Open the cover of the auto document feeder (ADF) and remove misfed originals
- and remove misfed originals.

 Close the cover of the auto document feeder (ADF).

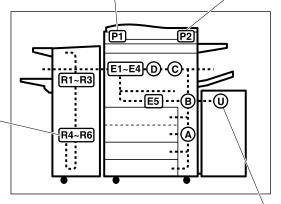

When U is lit



- Open the top cover and remove misfed paper.
- Close the top cover.

ZBQY221E

Changing the Paper Size

∰Important


☐ If you wish to change the paper size set in Tray 1, Tray 3, and the optional large capacity tray (LCT), contact your service representative.

For paper sizes, weight, and capacity that can be set in each tray, see \Rightarrow p.26 "Copy Paper".


Changing the Paper Size in Tray 2

1 Make sure that the paper tray (Tray 2) is not being used. Then gently pull out the tray until it stops.


Remove the paper in the tray.

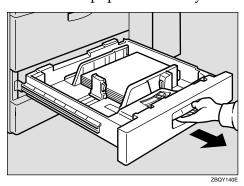

While pushing the release lever, adjust the side fences and back fence to the new paper size.

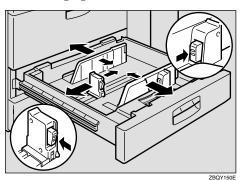

3 Square the paper and set it in the tray.

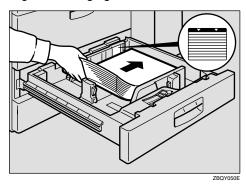


∰Important

- ☐ Do not stack paper over the limit mark.
- ☐ Make sure that the paper stack is flush with the right side fence.

Note

- ☐ Straighten the paper, if curled or warped, before placing it in the tray.
- **4** Set the paper size selector inside the tray to the new paper size.

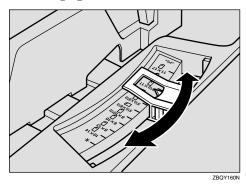

∰Important

- ☐ Problems might occur if the size of the paper set , does not match the paper size selector.
 - · Misfeed's
 - Parts of the image are not copied

To adjust the paper size to one not available with the paper size selector

- Set the paper size selector knob to the ★ mark on the left.
- 2 Press the [User Tools/Counter] key.
- 3 Press the [System Settings] key.
- 4 Press the [Paper Size Setting] key.
- **6** Press the [Tray 2:Paper Size Setting] key.

- **6** Select your desired size. Then, press the [OK] key.
- Press the [Exit] key or press the [User Tools/Counter] key to exit the User Tools.

∰Important

☐ Be sure to select paper size with the User Tools (System Settings). Otherwise, misfeeds might occur.

For details, see "User Tools (System Settings)" in the System Settings manual.

- **5** Gently push the paper tray until it stops.
- **6** Check the paper size displayed on the display panel.

Adding Staples


A CAUTION:

Our products are engineered to meet high standards of quality and functionality, and we recommend that you use only the expendable supplies available at an authorized dealer.

∰Important

☐ If you use a staple cartridge other than that recommended, staple failure or staple jams might occur.


50-Sheet Finisher

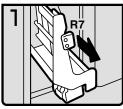







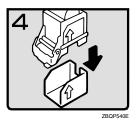


- 1: Open the front cover of the finisher.
- 2: Pull out the staple unit.


3: Lift the cartridge until it clicks.

4: Pull out the cartridge gently.


5: Take out the empty refill in the direction of the arrow.

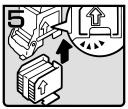


ZBQP550E

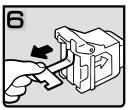

BQP560

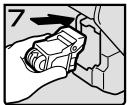

ZBQP570

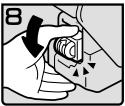

7BOP580E



• 6: Align the arrows on the new refill and the cartridge, then push in the refill until it clicks.

• 7: Pull out the ribbon.

• 8: Reinstall the cartridge.

• 9: Press down the cartridge until it clicks.


- 10: Bring the staple unit back into place.
- 11: Close the front cover of the finisher.

Removing Jammed Staples


𝚱 Note

- ☐ Staples might be jammed because of curled copies. In this case, try turning the copy paper over in the tray. If there is no improvement, change the copy paper with less curls.
- ☐ After removing jammed staples, staples might not be ejected the first few times you try to use the stapler.

50-Sheet Finisher

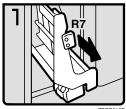



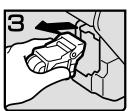






- 1: Open the front cover of the finisher.
- 2: Pull out the staple unit.
- 3: Lift the cartridge until it clicks.


4: Pull out the cartridge gently.

5: Open the face plate by pressing the lock on the right.

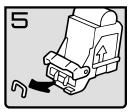

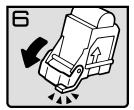

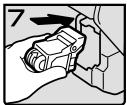

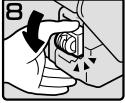



6: Remove the jammed staples.

7: Close the face plate by pressing it until it clicks.

8: Reinstall the cartridge.

9: Press down the cartridge until it clicks.

- 10: Bring the staple unit back into place.
- 11: Close the front cover of the finisher.


Removing Punch Waste

𝚱 Note


☐ While "Hole Punch Receptacle Full." is displayed, you cannot use the Punch function.

50-Sheet Finisher


1 Open the front cover of the finisher.

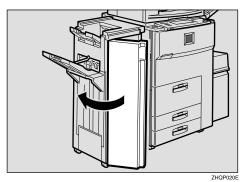

2 Pull out the punch waste box and remove punch waste.

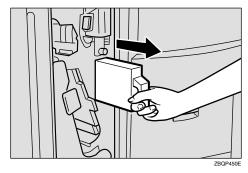

3 Reinstall the punch waste box.

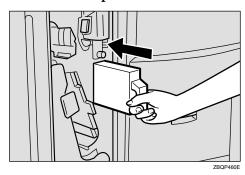

Note

☐ If you do not, "Hole Punch Receptacle Full." is still displayed.

4 Close the front cover of the finisher.

"Hole Punch Receptacle Full." disappears.



 \square If the message is still displayed, reinstall the punch waste box.

6. User Tools (Copy/Document Server Features)

Accessing the User Tools (Copy/Document Server Features)

This section is for the key operators in charge of this machine. You can change or set the machine's default settings.

Preparation

After using the User Tools, be sure to exit from the User Tools.

The selected key is highlighted.

Any changes you make with the User Tools remain in effect even if the main power switch or operation switch is turned off, or the [Clear Modes/Energy Saver] key is pressed.

For details, see "Accessing the User Tools (System Settings)" in the System Settings manual.


1 Press the [User Tools/Counter] key.

The User Tools Main Menu appears.




2 Press the [Copy/Document Server Features] key.

The Copy/Document Server Features menu appears.

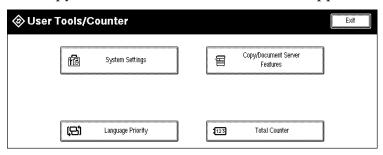

3 Select the desired menu and press the key.

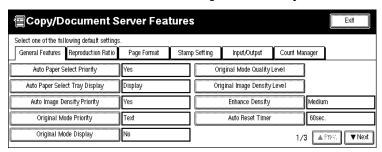


- Note
- □ [**VNext**]: Press to go to the next page.
- ☐ [▲Prev.]: Press to go back to the previous page.
- - ⇒ p.290 "User Tools Menu (Copy/Document Server Features)".
- 4 Change the settings by following the instructions on the display panel. Then press the [OK] key.
 - - ⇒ p.292 "Settings You Can Change with the User Tools".
 - Note
 - □ **[0K]**: Press to set the new settings and return to the previous menu.
 - ☐ [Cancel]: Press to return to the previous menu without changing any data.

Exiting From the User Tools

1 After changing the User Tools settings, press the [Exit] key on the User Tools Main Menu.


Changing the User Tools is completed, and the machine is ready for copying.

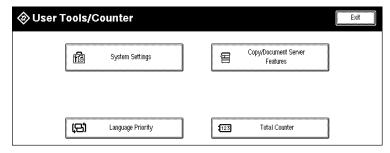


- Note
- ☐ To exit from the change of the machine's default settings and return to Copy mode, press the **[User Tools/Counter]** key.
- ☐ You can also exit from the User Tools by pressing the **[User Tools/Counter]** key.

6

User Tools Menu (Copy/Document Server Features)

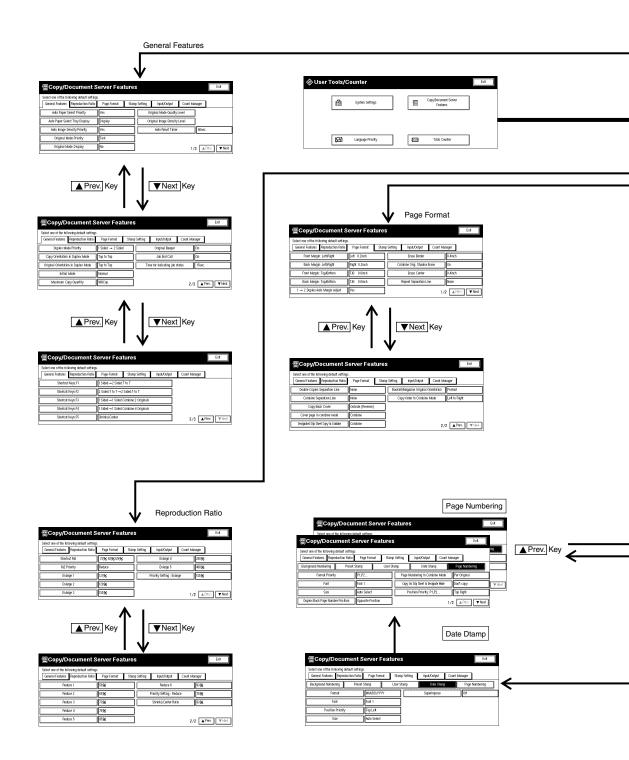

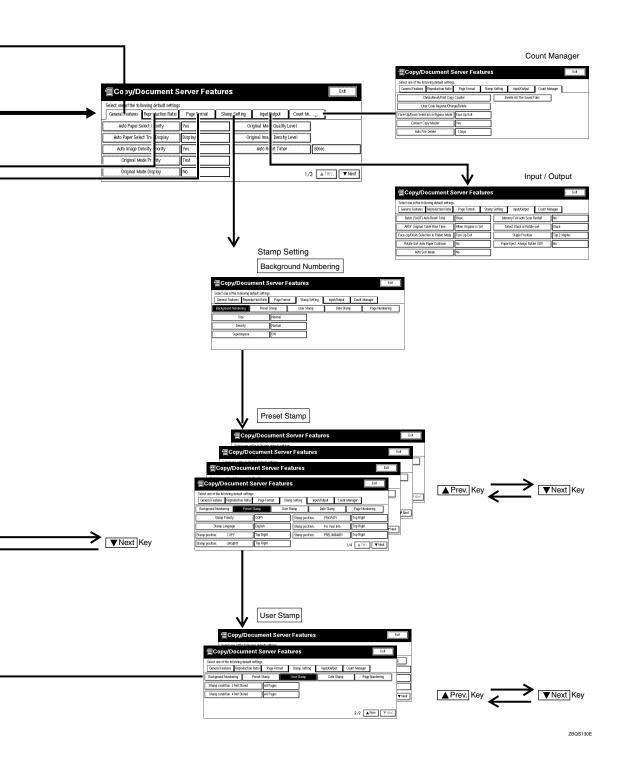


291

Settings You Can Change with the User Tools

For how to access the User Tools, see \Rightarrow p.287 "Accessing the User Tools (Copy/Document Server Features)".


General Features ¹/₃

3.6	D ' '
Menu	Description
Auto Paper Select Priority	As a default setting, Auto Paper Select is selected. You can cancel this setting.
	Ø Note
	☐ Default: Yes
Auto Paper Select Tray Display	You can choose whether the available paper trays/sizes are shown on the initial display.
	Ø Note
	☐ Default: <i>Display</i>
	☐ If you choose "Hide", the display is shown as below. When the [Auto Paper Select] key is pressed, paper sizes appear on the display.
	Text Photo Text Photo Text Photo Text Photo Auto Paper Salect Stack: Salect
Auto Image Density Priority	As a default setting, Auto Image Density is selected. You can change this setting.
	✓ Note□ Default: Yes
Original Mode Priority	As a default setting, Text is selected as the Originals Type. You can change it to Text Photo, Photo, Pale, or Generation.
	✓ Note□ Default: Text

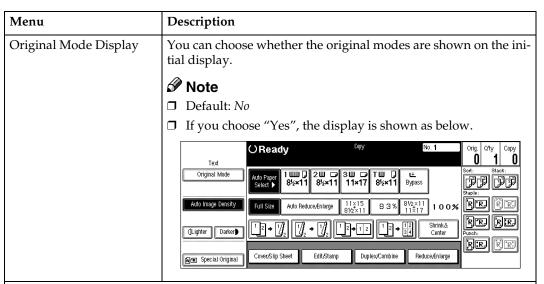

Original Mode Quality Level

You can adjust the quality level of copies for each of the original types (Text, Text-Photo, Photo, Pale, Generation).

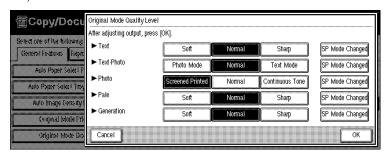

Adjust the sharpness of text.
𝒯 Note
☐ Default: Normal
☐ [SP Mode Changed] is the value set during service setup.
☐ Choosing [Sharp] or [Soft] affects the outline sharpness of text.
When there are photo(s) and text on the original, determine whether the photo or text takes priority.
𝒯 Note
☐ Default: Normal
☐ [SP Mode Changed] is the value set during service setup.
☐ [Normal] achieves a good balance between text and photos.

Menu	Description
Photo	For a photo original, adjust the finish quality level to match the type of photo original.
	𝒯 Note
	☐ Default: Screened Printed
	☐ [SP Mode Changed] is the value set during service setup.
	☐ Select [Screened Printed] for printed photo originals, and [Continuous Tone] for printed photo originals with fine dots.
	☐ Select [Normal] for printed photo and text originals.
Pale	Adjust the quality level for the finish of a pale original with normal density.
	𝒯 Note
	☐ Default: Normal
	☐ [SP Mode Changed] is the value set during service setup.
Generation	Adjust the quality level so as not to thicken the lines of the finish image.
	Ø Note
	☐ Default: Normal
	☐ [SP Mode Changed] is the value set during service setup.
Original Image Density Level	You can select one of seven original image density levels for each of the original types (Text, Text-Photo, Photo, Pale, Generation).
	𝕝 Note
	☐ Default: Normal
Enhance Density Setting	You can change the density level depending on the original type.
	∅ Note
	☐ Select [High] if your originals frequently contains large areas of black.
	☐ This setting can be stored in a shortcut key.
Auto Reset Timer	The machine returns to its initial condition automatically after your job is finished. The time can be set from 10 to 999 seconds, or 0.
	Ø Note
	Default: 60sec.
	☐ To turn "Auto Reset Timer" off, input "0".
	☐ Note that when "Auto Reset Timer" is turned off, the machine will not return to the user code input window automatically.

General Features ²/₃

Menu	Description
Duplex Mode Priority	You can select the type of the Duplex function effective when the machine is turned on, Energy Saver mode is off, or Auto Reset is on.
	 Note Default: Metric version: 1 Sided →1 Sided Inch version: 1 Sided →2 Sided
Copy Orientation in Duplex Mode	You can set the copy orientation when making two-sided copies.
F	✓ Note□ Default: Top to Top
Original Orientation in Duplex Mode	You can set the original orientation when making two-sided copies.
	✓ Note□ Default: Top to Top
Initial Mode	You can select the initial mode or Program No. 10 as the mode effective when the machine is turned on, or modes are cleared.
	✓ Note□ Default: Normal
Maximum Copy Quantity	The maximum copy quantity can be set between 1 and 999.
	✓ Note□ Default: 999Cop.
Original Beeper	The beeper (key tone) sounds when you forgot to remove originals after copying.
	 Note □ Default: On □ If the "Operation Panel Beeper" of the User Tools (System Settings) setting is "Off", the beeper does not sound irrespective of the "Original Beeper" setting. See "Operation Panel Beeper" in the System Settings manual.

Menu	Description
Job End Call	You can choose whether or not the beeper sounds when copying is complete, when copying is interrupted, when the paper tray runs out of paper, or when there is a paper jam.
	Ø Note
	☐ Default: On
	☐ If the "Operation Panel Beeper" of the User Tools (System Settings) setting is "Off", the beeper does not sound irrespective of the "Job End Call" setting. See "Operation Panel Beeper" in the System Settings manual.
Time for indicating job status	The machine returns to its initial condition automatically from the Job List display. The time can be set from 10 to 999 seconds, or 0.
	 ✓ Note □ Default: 15sec. □ To turn "Time for indicating job status" off, input "0".

General Features ³/₃

Menu	Description
Shortcut Keys:F1	You can register frequently used functions in Shortcut Keys F1 to
Shortcut Keys:F2	F5. You can also change the registered functions. See \Rightarrow p.14 "Dis-
Shortcut Keys:F3	play Panel".
Shortcut Keys:F4	Ø Note
Shortcut Keys:F5	□ Default:
	• Shortcut Keys:F1: 1 Sided→2 Sided:T to T
	 Shortcut Keys:F2: 2 Sided:T to T→2 Sided:T to T
	• Shortcut Keys:F3: 1 Sided →1 Sided Combine:2 Originals
	Shortcut Keys:F4: 1 Sided →1 Sided Combine:4 Originals
	Shortcut Keys:F5: Shrink&Center
	☐ By using the Copy Face Up function, you can have copies delivered in reverse order specified by "Face-Up/Down Selection in Platen Mode" of the User Tools. However, you cannot combine the Copy Face Up function with the Staple/Punch function. If you select the bypass tray in which tab stocks are loaded, the "Copy Face Up" setting is ignored.

Reproduction Ratio ¹/₂

Menu	Description
Shortcut R/E	You can register up to three frequently used Reduce/Enlarge ratios other than the fixed Reduce/Enlarge ratio and have them shown on the initial display. You can also change the registered Reduce/Enlarge ratios.
	If no Reduce/Enlarge ratio has been set when selecting [User Ratio 1], [User Ratio 2], or [User Ratio 3], enter the desired Reduce/Enlarge ratio using the number keys.
R/E Priority	Specify which Reduce, Enlarge or Input Ratio is shown on the display panel with priority when the [Reduce/Enlarge] key is pressed.
	
Enlarge 1	You can customize the enlargement ratios available when you
Enlarge 2	press the [Reduce/Enlarge] key followed by the [Enlarge] key.
Enlarge 3	∅ Note
Enlarge 4	Default:
Enlarge 5	Metric version:
	• Enlarge 1: 115%
	• Enlarge 2: 122%
	• Enlarge 3: 141%
	• Enlarge 4: 200%
	• Enlarge 5: 400%
	• Inch version:
	• Enlarge 1: 121%
	• Enlarge 2: 129%
	• Enlarge 3: 155%
	• Enlarge 4: 200%
	• Enlarge 5: 400%
	☐ When selecting [User Set. Ratio] , enter a ratio using the number keys (in the range of 101 to 400%).
Priority Setting : Enlarge	You can set the ratio with priority when the [Reduce/Enlarge] key is pressed, followed by the [Enlarge] key.
	∅ Note
	Default:
	Metric version: 141%
	• Inch version: 155%

Reproduction Ratio ²/₂

Menu	Description
Reduce 1	You can customize the reduction ratios available when you press
Reduce 2	the [Reduce/Enlarge] key followed by the [Reduce] key.
Reduce 3	
Reduce 4	☐ Default:
Reduce 5	Metric version:
Reduce 6	• Reduce 1: 50%
	• Reduce 2: 65%
	• Reduce 3: 71%
	• Reduce 4: 75%
	• Reduce 5: 82%
	• Reduce 6: 93%
	Inch version:
	• Reduce 1: 50%
	• Reduce 2: 65%
	• Reduce 3: 73%
	• Reduce 4: 78%
	• Reduce 5: 85%
	• Reduce 6: 93%
	☐ When selecting [User Reduc.Ratio] , enter a ratio using the number keys (in the range of 25 to 99%).
Priority Setting : Reduce	You can set the ratio with priority when the [Reduce/Enlarge] key is pressed, followed by the [Reduce] key.
	Ø Note
	☐ Default:
	Metric version: 75%
	• Inch version: 78%
Shrink&Center Ratio	You can set a Reduce/Enlarge ratio when registering "Shrink&Center" in a Shortcut Key.
	✓ Note□ Default: 93%

Page Format ¹/₂

Menu	Description
Front Margin: Left/Right	You can specify left and right margins on the front side of copies in Margin Adjust mode.
	Ø Note
	☐ Default:
	• Metric version: Left 5 mm
D 1 M . I (t/D: 1)	• Inch version: Left 0.2"
Back Margin: Left/Right	You can specify left and right margins on the back side of copies in Margin Adjust mode.
	Ø Note
	☐ Default:
	Metric version: Right 5 mm
	• Inch version: Right 0.2"
Front Margin: Top/Bottom	You can specify front top and bottom margins on the front side of copies in Margin Adjust mode.
	ℬ Note
	☐ Default:
	Metric version: Bottom 0 mm
	• Inch version: Bottom 0.0"
Back Margin: Top/Bottom	You can specify back top and bottom margins on the front side of copies in Margin Adjust mode.
	∅ Note
	☐ Default:
	Metric version: Bottom 0 mm
	• Inch version: <i>Bottom</i> 0.0"
$1 \rightarrow 2$ Duplex Auto Margin Adjust	In 1 sided \rightarrow 2 sided Duplex mode, you can specify whether to automatically set the margins on the back side.
	The margin is set to the same value of "Back Margin: Left/Right".
	∅ Note
	☐ Default: Yes
Erase Border	The default setting of the width of the erased margins in Erase Border mode can be changed as follows:
	• Metric version: 3 – 50 mm in 1 mm steps
	• Inch version: 0.1" – 2.0" in 0.1" steps
	Ø Note
	Default:
	Metric version: 10 mm
	• Inch version: 0.4"
<u>l</u>	

Menu	Description
Combine Orig. Shadow Erase	In Combine Copy or Booklet/Magazine Copy mode, you can specify whether to erase a 3 mm, 0.1" bounding margin around all four edges of each original.
	∅ Note
	☐ Default: On
Erase Center	The default setting of the width of the erased margins in Erase Center mode can be changed as follows:
	• Metric version: 3 – 50 mm in 1 mm steps
	• Inch version: 0.1" – 2.0" in 0.1" steps
	Ø Note
	☐ Default:
	• Metric version: 10 mm
	• Inch version: 0.4"
Repeat Separation Line	You can select a separation line in Image Repeat mode from no line, Solid line, Broken line 1, Broken line 2, or Crop.
	• None
	• Solid
	• Broken 1
	Broken 2
	• Crop
	. + -
	∅ Note
	☐ Default: <i>None</i>

Page Format ²/₂

Menu	Description
Double Copies Separation Line	You can select a separation line in Double Copy mode from no line, Solid line, Broken line, or Crop.
	• None
	Solid
	Broken
	Crop Marks
	Ø Note
	☐ Default: <i>None</i>

Menu	Description
Combine Separation Line	You can select a separation line in Combine mode from no line, Solid line, Broken line 1, Broken line 2, or Crop. None Solid Broken 1 Broken 2 Crop Crop H Default: None
Copy Back Cover	When copying the back cover, you can specify whether to issue the back cover outside (outside page) or inside (inside page). Note Default: Outside (Reverse)
Cover page in combine mode	You can specify whether to make a combined copy on the front cover sheet when you select [Copy] in Front Cover mode. Note Default: Combine
Designated Slip Sheet Copy In Combine	You can specify whether to make a combined copy on the inserted slip sheets in Designate: Copy mode. Note Default: Combine
Booklet/Magazine Original Orientation	You can select the type of originals for Booklet or Magazine mode. Note Default: Portrait

Menu	Description
Copy Order In Combine Mode	You can set the copy order in Combine mode to "Left to Right" or "Top to Bottom".
	Top to Top Top to Bottom
	1 2 3 4 2 4 3 5 7 8 1 3 5 7 8 1 8 1 8 1 8 1 8 1 8 1 8 1 8 1 8 1 8
	GCCOMB1E
	Ø Note
	□ Default: Left to Right

Stamp Setting

Background Numbering

Menu	Description
Size	You can set the size of the numbers.
	Ø Note
	☐ Default: Normal
	• Small: About 8 × 4 mm, 0.32" × 0.16"
	• Normal: About 32 × 16 mm, 1.28" × 0.64"
	• Large: About 64 × 32 mm, 2.56" × 1.28"
Density	You can set the density of the numbers.
	Ø Note
	☐ Default: Normal
Superimpose	You can select whether the numbering is printed negative when it overlaps black parts of the image.
	Ø Note
	☐ Default: Off

Preset Stamp

Menu	Description
Stamp Priority	You can select the stamp type priority detected in Stamp mode.
	Ø Note
	☐ Default: COPY
Stamp Language	You can select the language of the message that is printed in
	Stamp mode.
	Ø Note
	☐ Default: <i>English</i>
Stamp position	You can set the position at which the stamp is printed.
	Press the arrow keys to adjust the position.
	Ø Note
	Default:
	Metric Version:
	• Position: <i>Top Right</i>
	• Top/Bottom Margin: 24 mm
	• Left/Right Margin: 24 mm
	Inch Version:
	• Position: <i>Top Right</i>
	Top/Bottom Margin: 0.9"
	• Left/Right Margin: 0.9"
Stamp condition	
	nsity and print page for the stamp.
Size	You can set the size of the stamp.
	𝒯 Note
	☐ Default: 1X
Density	You can set the pattern used to print the stamp.
	Ø Note
	☐ Default: Normal
	☐ Normal: The stamp is printed on the image. You cannot confirm which parts overlap the image.
	☐ Lighter: The image can be seen through the stamp.
	☐ Light: You can see the image even clearer than in the "Lighter" setting.
Print Page	You can select whether the stamp is printed on the first page or all
	pages.
	∅ Note
	☐ Default: All Pages
Superimpose	You can select whether the Preset Stamp is printed negative when it overlaps black parts of the image.
	Ø Note
	☐ Default: Off
	JJ

User Stamp

Menu	Description
Program/Delete Stamp	
You can register up to 4 custom stamps with your favorite design. You can register/change/delete your favorite design as a user stamp.	
How to Program/Delete St	$amp, see \Rightarrow p.193 "Program/Delete User Stamp".$
Stamp position	You can set the position at which the stamp is printed.
	Press the arrow keys to adjust the position.
	Ø Note
	☐ Default:
	Metric version:
	• Position: <i>Top Right</i>
	Top/Bottom Margin: 24 mm
	Left/Right Margin: 24 mm
	Inch version:
	• Position: <i>Top Right</i>
	• Top/Bottom Margin: 0.9"
	• Left/Right Margin: 0.9"
Stamp condition	
You can adjust the print page for User Stamp 1 to 4 you registered.	
Print Page	You can select whether the stamp is printed on the first page or all pages.
	𝒯 Note
	☐ Default: All Pages

Date Stamp

Menu	Description
Format	You can select the date format for Date Stamp mode.
Font	 Note □ Default: Metric version: DD/MM/YYYY Inch version: MM/DD/YYYY You can select the Date Stamp font.
	 ✓ Note □ Default: Font 1 □ This setting is linked with Page Numbering.
Position Priority	You can set the position at which the stamp is printed. Press the arrow keys to adjust the position.
	 Note Default: Metric version: Position: Top Left Top/Bottom Margin: 8 mm Left/Right Margin: 32 mm Inch version: Position: Top Left Top/Bottom Margin: 0.3" Left/Right Margin: 0.8"
Size	You can set the Date Stamp size. Note Default: Auto Select This setting is linked with Page Numbering.
Superimpose	You can select whether the Date Stamp is printed negative when it overlaps black parts of the image. Note Default: Off This setting is linked with Page Numbering.

Page Numbering

Menu	Description
Format Priority	You can select the page number format priority detected in Page Numbering mode.
	Ø Note
	☐ Default: <i>P1</i> , <i>P</i> 2
Font	You can select the font of the page number that is printed in Page Numbering mode.
	Ø Note
	☐ Default: Font 1
	☐ This setting is linked with Date Stamp.
Size	You can set the size of the stamp that is printed in Page Numbering mode.
	Ø Note
	☐ Default: Auto Select
	☐ This setting is linked with Date Stamp.
Duplex Back Page Number Position	You can set the position of the duplex back page number that is printed in Duplex mode.
	Ø Note
	☐ Default: Opposite Position
Page Numbering In Combine Mode	You can set how the pages are numbered when you use the Combine function and Page Numbering function together.
	
Copy On Slip Sheet In Designate Mode	You can select whether to print the page number onto slip sheets when you use the Designate function set to "Copy" and Page Numbering function together.
	

Menu	Description
Position Priority: P1, P2 Position Priority: 1/5, 2/5 Position Priority: -1-, -2 Position Priority: P.1, P.2 Position Priority: 1, 2 Position Priority: 1-1, 1-2	You can set the position at which the stamp is printed. Press the arrow keys to adjust the position. Note Default: • Metric version: • Position: P1, 1/5, P.1, 1:Top Right, -1-, 1-1: Bottom Center • Top/Bottom Margin: P1, 1/5, P.1, 1:12 mm, -1-, 1-1: 8 mm • Left/Right Margin: P1, 1/5, P.1, 1:12 mm, -1-, 1-1: 0 mm • Inch version: • Position: P1, 1/5, P.1, 1:Top Right, -1-, 1-1: Bottom Center • Top/Bottom Margin: P1, 1/5, P.1, 1:0.5", -1-, 1-1: 0.3" • Left/Right Margin: P1, 1/5, P.1, 1:0.5", -1-, 1-1: 0.0"
Superimpose	You can select whether page numbers are printed negative when they overlap black parts of the image. Note Default: Off This setting is linked with Date Stamp.

Input/Output

Menu	Description
Batch (SADF) Auto Reset Time	When you set one original at a time in the document feeder, the Auto Feed indicator lights for a selected time after an original is fed to show that the document feeder is ready for another original. You can adjust this time from 3 seconds to 99.
	✓ Note□ Default: 10sec.
ARDF Original Table Rise Time	You can set the document feeder original table rise time.
Time	Ø Note
	☐ Default: When Original is Set
Face-Up/Down Selection in Platen Mode	When copying an original placed on the exposure glass or loaded in the document feeder, you can specify which way it is ejected.
	Ø Note
	☐ Default: Face Up Exit
Rotate Sort Auto Paper Continue	You can specify whether to continue copying when the paper of the required orientation has run out during rotate-sorting. See "Rotate Sort" in \Rightarrow p.56 "Sort".
	 If you select [No]: When paper of the required orientation runs out, the machine stops copying and prompts you to supply copy paper. When you load paper, the machine will continue copying. If you select [Yes]: Copying continues using copy paper of a different direction.
	The copy job will finish even if you have left the machine.
	Ø Note
	☐ Default: No
Auto Sort Mode	You can specify whether Sort mode is selected when the machine is turned on or the mode is cleared.
	✓ Note□ Default: No

Menu	Description
Memory Full Auto Scan Restart	When the memory becomes full while scanning originals, the machine can make copies of the scanned originals first, then automatically proceed scanning the remaining originals.
	You can enable or disable this function.
	If you select [Yes]: When the memory becomes full, the machine stops operation allowing you to remove the copy pages delivered on the output tray.
	• If you select [No] : You can leave the machine unattended to make all the copies, but the resulting sorted pages will not be sequential.
	∅ Note
	Default: No
Select Stack or Rotate sort	Specify which Stack or Rotate Sort is shown on the initial display with priority.
	𝒯 Note
	☐ Default: Stack
	☐ The optional finisher is required to use this function.
Staple Position	Specify which Top 2 staples or Bottom is shown on the initial display with priority.
	Ø Note
	☐ Default: Top 2 staples
	☐ The optional finisher is required to use this function.
Paper Eject: Always Rotate 180°	If you want to copy on the paper with letterhead, the machine rotates the image correctly. To use this function, select "Yes".
	

Count Manager

When a key operator code has already been entered, you cannot begin manager settings unless you enter the key operator code (up to 8 digits).

Menu	Description	
Check/Reset/Print Copy C	Check/Reset/Print Copy Counter	
You can check or print the number of copies made under each user code. You can also reset each user code's counter to 0.		
If more than 10 user codes [▼Next] key.	If more than 10 user codes are registered, you can view all the counters using the [\trianglePrev.] or [\blacktriangledownNext] key.	
Print	You can print the copied quantity of the counter for each user code.	
	To start the printing, press the [Start] key.	
	To stop the printing, press the [Cancel] key.	
Reset Counter	You can reset each user code's counter to 0.	
Reset All	You can reset all counters to 0.	
User Code Register/Chang	ge/Delete	
You can register, change, o	r delete the user codes (8 digits or less).	
∅ Note		
☐ Up to 500 user codes ca	n be registered.	
1	ed the user code, the counter value will not be cleared.	
	leleted, the counter value will be automatically deleted.	
Register	You can register the user codes.	
Change	You can change the user codes.	
	Ø Note	
	☐ The number of copies made under the old code is added to that made under the new user code.	
Delete User Code	You can delete the user codes.	
Delete All User Codes	You can delete all the user codes.	
Face-Up/Down Selection in Bypass Mode	You can set whether copies are delivered face up or face down when making copies from the bypass tray.	
	 Limitation □ Only use "Face Down Exit" when copying onto standard high quality paper with a weight of 52 – 105 g/m² (14 – 28 lb. Bond). □ When you select "OHP" or "Thick Paper", copy paper is delivered face up even if you have set the "Face-Up/Down Selection in Bypass Mode" setting to "Face Down Exit". Note □ Default: Face Up Exit 	

Menu	Description
Connect Copy Master	You can select whether the [Connect] key is displayed or not. If you choose "No", the [Connect] key will not be displayed and this unit cannot become the master unit. As a default setting, "Yes" is selected. You can cancel this setting.
	Ø Note
	☐ Default : Yes
Auto File Delete	Old files stored on the Document Server can be deleted automatically. The time can be set from 0 to 180 days.
	𝚱 Note
	☐ Default: 3 Days
	\square If you do not want the files to be deleted, enter "0".
Delete All The Saved Files	You can delete all the saved documents by pressing the [Delete All The Saved Files] key, and the [Yes] key in the confirmation dialog box.
	 ✓ Note ☐ All the documents including those with a password are deleted.

7. REMARKS

Do's And Don'ts

↑ CAUTION:

- Unplug the power cord from the wall outlet before you move the machine.
 While moving the machine, you should take care that the power cord will not be damaged under the machine.
- When you use this machine for a long time in a confined space without good ventilation, you may detect an odd smell. To keep the workplace comfortable, we recommend that you keep it well ventilated.
- Do not press areas on or around the fusing unit. These areas get hot.
- After making copies continuously, the exposure glass may feel warm—this is not a malfunction.
- You might feel warm around the ventilation hole. This is caused by exhaust air, and is not a malfunction.
- Do not turn off the operation switch while copying or printing. Make sure that all copying or printing has finished.
- The machine might fail to produce good copy images if condensation forms inside the machine due to rapid temperature change. To prevent this problem, the machine has an anti-condensation function. Even after the main power switch is in the stand-by position, the anti-condensation heater is active, thus keeping the machine body slightly warm.
- Do not open the covers of machine while copying or printing. If you do, misfeeds might occur.
- Do not move the machine while copying or printing.
- If you operate the machine improperly or a failure occurs on the machine, your machine settings might be lost. Be sure to take a note of your machine settings.
- Supplier shall not be liable for any loss or damages resulting from a failure on the machine, loss of machine settings, and use of the machine.
- Depending on the operating conditions (e.g., low temperature, input voltage), the copying speed might be reduced to produce a good copy image.

.

Where to Put Your Machine

Machine Environment

Your machine's location should be carefully chosen because environmental conditions greatly affect its performance.

Optimum environmental conditions

A CAUTION:

- Keep the machine away from humidity and dust. Otherwise a fire or an electric shock might occur.
- Do not place the machine on an unstable or tilted surface. If it topples over, an injury might occur.

A CAUTION:

- If you use the machine in a confined space, make sure there is a continuous air turnover.
- Temperature: 10 32°C (50 89.6°F) (humidity to be 54% at 32°C, 89.6°F)
- Humidity: 15 80% (temperature to be 27°C, 80.6°F at 80%)
- A strong and level base.
- The machine must be level within 5 mm, 0.2" both front to rear and left to right.
- To avoid possible buildup of ozone, be sure to locate this machine in a large well ventilated room that has an air turnover of more than 30 m³/hr/person.

Environments to avoid

- Locations exposed to direct sunlight or strong light (more than 1,500 lux).
- Locations directly exposed to cool air from an air conditioner or heated air from a heater. (Sudden temperature changes might cause condensation within the machine.)
- Locations close to such machines generating ammonia as diazo copy machine.
- Places where the machine might be subjected to frequent strong vibration.
- Dusty areas.
- Areas with corrosive gases.

7

Moving

⚠ CAUTION:

Unplug the power cord from the wall outlet before you move the machine.
 While moving the machine, you should take care that the power cord will not be damaged under the machine.

#Important

- ☐ When moving the machine, the following precautions should always be followed:
 - Turn off the main power. ⇒ p.22 "Turning Off the Main Power"
 - Unplug the power cord from the wall outlet. When you do, grip the plug to avoid damaging the cord and causing fire or electric shock.
 - Close all covers and trays including the front cover and bypass tray.

Limitation

- ☐ Carefully move the machine. If you do not, the machine might be damaged or a stored file might be deleted.
- ☐ Avoid any strong shock to the machine. This could damage the hard disk and cause stored files to be deleted. For precautionary reasons, files should be copied to another local computer.

Power Connection

⚠ WARNING:

- Connect the machine only to the power source described on the inside front cover of this manual. Connect the power cord directly into a wall outlet and do not use an extension cord.
- Do not damage, break or make any modifications to the power cord.
 Do not place heavy objects on it. Do not pull it hard nor bend it more than necessary. These actions could cause an electric shock or fire.

A CAUTION:

• Unplug the power cord from the wall outlet before you move the machine. While moving the machine, you should take care that the power cord will not be damaged under the machine.


A CAUTION:

- When you disconnect the power plug from the wall outlet, always pull the plug (not the cable).
- When the main switch is in the Stand-by positions, the optional anti-condensation heaters are on. In case of emergency, unplug the machine's power cord.
- When you unplug the power cord, the anti-condensation heaters turn off.

- Make sure that the plug is firmly inserted in the outlet.
- Voltage must not fluctuate more than 10%.
- The wall outlet shall be installed near the machine and shall be easily accessible.

Access to the Machine

Place the machine near the power source, providing clearance as shown.

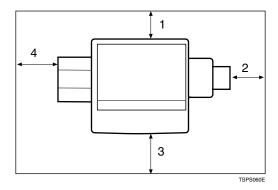

- 1. Rear: more than 3 cm (1.2")
- 3. Front: more than 70 cm (27.6")
- 2. Right: more than 4 cm (1.6")
- **4.** Left: more than 10 cm (4.0")

- Note
- ☐ For the required space when options are installed, contact your service representative.

7

Maintaining Your Machine

If the exposure glass or document feeder belt is dirty, you might not be able to make copies as you want. Clean them if you find them dirty.


Cleaning the machine

Wipe the machine with a soft, damp cloth. Then, wipe it with a dry cloth to remove the water.


#Important

- ☐ Do not use chemical cleaner or organic solvent, such as thinner or benzene. If they get into the machine or melt plastic parts, a failure might occur.
- ☐ Do not clean parts other than those specified in this manual. Such parts should be cleaned by your service representative.

Cleaning the Exposure Glass

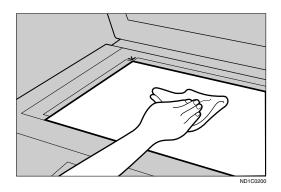

Cleaning the Document Feeder

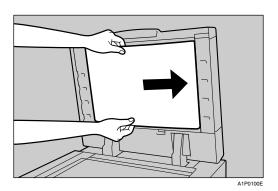

8. Specifications

Mainframe

A Configuration:

Console

Photosensitivity type:

OPC drum (Φ100)

Original scanning:

One-dimensional solid scanning system through CCD

Copy process:

Dry electrostatic transfer system

❖ Development:

Dry two-component magnetic brush development system

❖ Fusing:

Heating roll pressure system

Resolution:

600 dpi

❖ Exposure glass:

Stationary original exposure type

Original reference position:

Rear left corner

❖ Warm-up time:

Less than 330 seconds (23°C)

Originals:

Sheet/book/objects

♦ Maximum original size:

A3□, 11" × 17"□

♦ Copy paper size:

- Trays: A3 \Box A5 \Box , 11" × 17" \Box 5¹/₂" × 8¹/₂" \Box
- Bypass: A3 \square A6 \square , 11" × 17" \square 5¹/₂" × 8¹/₂" \square
- Bypass (non-standard size):

Vertical: 100 – 300 mm, 4.0" – 11.7" Horizontal: 140 – 432 mm, 5.6" – 17.0"

- Duplex: A3 \square -A5 \square , 11"×17" \square -5\frac{1}{2}"×8\frac{1}{2}"\D (impossible on A5 \square , 5\frac{1}{2}"×8\frac{1}{2}"\D)
- LCT: A4 \square , B5 \square , $8^1/_2$ " × 14" \square *1, $8^1/_2$ " × 11" \square
 - ^{*1} The optional $8^{1}/2^{"} \times 14^{"}$ paper size tray is required to set this size of paper.

Copy paper weight:

- Paper tray: $52 128 \text{ g/m}^2$, 14 34 lb. Bond
- Bypass tray: $52 157 \text{ g/m}^2$, 14 lb. Bond 90 lb. Index

Non-reproduction area:

- Leading edge: Less than 3 ± 2 mm, 0.12 ± 0.08 "
- Trailing edge: More than 1 mm, 0.04"
- Left edge: More than 2 ± 1.5 mm, 0.08 ± 0.06 "
- Right edge: More than 0.5 mm, 0.02"

First copy time:

- 3.5 seconds or less (face up feed, A4 □, 8¹/₂"×11" □, 100%, feeding from Tray 1, on the exposure glass, Text·Photo mode, Auto Image Density)
- 5.3 seconds or less (face down feed, A4 □, 8¹/₂"×11" □, 100%, feeding from Tray 1, on the exposure glass, Text·Photo mode, Auto Image Density)

♦ Copying speed:

- 28 copies/minute (A3□, 11" × 17"□)
- 55 copies/minute (A4 \square , $8^1/2$ " × 11" \square)

Reproduction ratio:

Preset reproduction ratios:

	Metric version	Inch version
Enlargement	400%	400%
	200%	200%
	141%	155%
	122%	129%
	115%	121%
Full Size	100%	100%
Reduction	93%	93%
	82%	85%
	75%	78%
	71%	73%
	65%	65%
	50%	50%

Zoom: From 25 to 400% in 1% steps.

Maximum continuous copy run:

999 sets

Copy paper capacity:

- Tray 1 (Tandem tray): 3,100 sheets $(1,550 \text{ sheets} \times 2)$ $(80 \text{ g/m}^2, 20 \text{ lb. Bond})$
- Tray 2 (550-sheet tray): 550 sheets (80 g/m², 20 lb. Bond)
- Tray 3 (550-sheet tray): 550 sheets (80 g/m², 20 lb. Bond)
- Bypass tray: 50 sheets (80 g/m², 20 lb. Bond)

Power consumption:

	Mainframe only	Complete system *1
Warm-up	about 1.20 kw	about 1.20 kw
Stand-by	about 260 w	about 290 w
During printing	about 1.40 kw	about 1.50 kw
Maximum	less than 1.75 kw	less than 1.85 kw

^{*1} The Complete System consists of the mainframe, printer controller, finisher and large capacity tray (LCT).

♦ Dimensions (W × D × H up to exposure glass):

 $690 \times 750 \times 1,138 \text{ mm}, 27.2" \times 29.6" \times 44.9"$

❖ Space for mainframe (W × D):

- $1,265 \times 750$ mm, $49.9" \times 29.6"$ (ADF external extender is not used. Optional Output tray is installed.)
- $1,380 \times 750$ mm, $54" \times 30"$ (ADF external extender is used for larger size originals. Optional Output tray is installed.)

♦ Noise Emission *1:

• Sound Power Level:

	Mainframe only	Complete system *3
Stand-by	Less than 49 dB (A)	Less than 49 dB (A)
Copying (ADF 1 to 1)	Less than 74 dB (A)	Less than 73 dB (A)
Copying (From Memory)	Less than 71 dB (A)	Less than 70 dB (A)

• Sound Pressure Level *2:

	Mainframe only	Complete system *3
Stand-by	Less than 35 dB (A)	Less than 35 dB (A)
Copying (ADF 1 to 1)	Less than 62 dB (A)	Less than 62 dB (A)
Copying (From Memory)	Less than 57 dB (A)	Less than 56 dB (A)

^{*1} The above measurements made in accordance with ISO 7779 are actual value.

Weight:

Approx. 188 kg, 414.5 lb (Mainframe with document feeder)

^{*2} It is measured at the position of the bystander.

The Complete System consists of the mainframe, finisher and large capacity tray (LCT).

Document Feeder

♦ Mode:

ADF mode, Batch (SADF) mode, Mixed Sizes mode, Thin mode

Original size:

- A3□ B6□□
- $11" \times 17" \square 5^1/_2" \times 8^1/_2" \square \square$

Original weight:

- 1-sided originals: 52 157 g/m² (14 42 lb. Bond)
- 2-sided originals: $52 128 \text{ g/m}^2 (14 34 \text{ lb. Bond})$ (Duplex)
- Thin original: $41 157 \text{ g/m}^2 (11 42 \text{ lb. Bond})$

Number of originals to be set:

100 sheets $(80 \text{ g/m}^2, 20 \text{ lb. Bond})$ or less than 12 mm, 0.4"

Note

50-Sheet Finisher (Option)

Paper size:

Proof Tray: A3 \Box – B6 \Box , A6 \Box , 11" × 17" \Box – 5¹/₂" × 8¹/₂" \Box Shift Tray: A3 \Box – A5 \Box \Box , 11" × 17" \Box – 5¹/₂" × 8¹/₂" \Box \Box Staple Mode: A3 \Box – B5 \Box \Box , 11" × 17" \Box – 8¹/₂" × 11" \Box \Box Punch Mode:

- 2 holes: A3 \square A5 \square \square , 11" × 17" \square , 81/2" × 14" \square 51/2" × 81/2" \square \square
- 3 holes: A3 \square , B4 \square , A4 \square , B5 \square , 11" × 17" \square , 8¹/₂" × 11" \square
- 4 holes:
 - Metric version: A3 \square , A4 \square , 11" × 17" \square , 8 $^1/_2$ " × 11" \square
 - Narrow 2×2 version: A3 \square A5 \square , $11" \times 17" \square$, $8^1/_2" \times 14" \square$ $5^1/_2" \times 8^1/_2" \square$

◆ Paper weight:

Stack: $52 - 157 \text{ g/m}^2$, 14 - 42 lb. BondStaple: $64 - 80 \text{ g/m}^2$, 17 - 20 lb. Bond

Punch:

- 4 holes: $52 128 \text{ g/m}^2$, 14 34 lb. Bond
- 2 or 3 holes: $52 157 \text{ g/m}^2$, 14 lb. Bond 90 lb. Index

Stack capacity:

Proof Tray (without Punch):

- 250 sheets (A4, $8^1/2^{"} \times 11^{"}$ or smaller) (80 g/m², 20 lb. Bond)
- 50 sheets (B4, $8^1/2^{"} \times 14^{"}$ or larger) (80 g/m², 20 lb. Bond)

Proof Tray (with Punch):

- 200 sheets (A4, $8^1/2^{"} \times 11^{"}$ or smaller) (80 g/m², 20 lb. Bond)
- 50 sheets (B4, $8^1/2^{"} \times 14^{"}$ or larger) (80 g/m², 20 lb. Bond)

Shift Tray (without Punch):

- 3,000 sheets (A4 \square , $8^1/2'' \times 11'' \square$) (80 g/m², 20 lb. Bond)
- 1,500 sheets (except A4 \(\bar{\pi}\), A5 \(\bar{\pi}\), 8\(\bar{\pi}/2\)" \times 11" \(\bar{\pi}\), 5\(\bar{\pi}/2\)" \(\times 8\(\bar{\pi}/2\)" \(\bar{\pi}\)) (80 g/m², 20 lb. Bond)
- 100 sheets $(A5\Box, 5^1/2" \times 8^1/2"\Box)$ (80 g/m², 20 lb. Bond)

Shift Tray (with Punch):

- 2,500 sheets $(A4 \square, 8^1/2" \times 11" \square)$ $(80 \text{ g/m}^2, 20 \text{ lb. Bond})$
- 1,500 sheets (except A4 □, A5□, 8¹/₂" × 11" □, 5¹/₂" × 8¹/₂" □) (80 g/m², 20 lb. Bond)
- 100 sheets $(A5\Box, 5^{1}/_{2}" \times 8^{1}/_{2}" \Box)$ (80 g/m², 20 lb. Bond)

♦ Staple capacity:

Without Punch:

- 2-50 sheets (A4, $8^{1}/_{2}$ " × 11" or smaller) (80 g/m², 20 lb. Bond)
- 2-30 sheets (B4, $8^1/2^{"} \times 14^{"}$ or larger) (80 g/m², 20 lb. Bond)

With Punch:

- 2-40 sheets (A4, $8^1/2^{"} \times 11^{"}$ or smaller) (80 g/m², 20 lb. Bond)
- 2-25 sheets (B4, $8^1/2$ " × 14" or larger) (80 g/m², 20 lb. Bond)

♦ Staple position:

Four positions (Top, Top Slant, Bottom, 2 Staples)

♦ Power consumption:

48W (power is supplied from the mainframe.)

ightharpoonup Dimensions (W \times D \times H):

 $625 \times 545 \times 960$ mm, $24.7" \times 21.5" \times 37.8"$

♦ Weight:

Approx. 45 kg, 99.3 lb

Note

 $\hfill \square$ Specifications are subject to change without notice.

Punch Kit (Option)

Paper size

- 2 holes: A3 \square A5 \square \square , 11" × 17" \square , 8¹/₂" × 14" \square 5¹/₂" × 8¹/₂" \square \square
- 3 holes: A3□, B4□, A4□, B5□, 11"×17"□, 8¹/₂"×11"□
- 4 holes:
 - Metric version: A3 \square , A4 \square , 11" × 17" \square , 8¹/₂" × 11" \square
 - Narrow 2 × 2 version: A3 \square A5 \square , 11" × 17" \square , 8¹/₂" × 14" \square 5¹/₂" × 8¹/₂" \square

❖ Paper weight:

- 4 holes: $52 128 \text{ g/m}^2$, 14 34 lb. Bond
- 2 or 3 holes: $52 157 \text{ g/m}^2$, 14 lb. Bond 90 lb. Index

Power consumption:

33.6 W (power is supplied from the mainframe.)

ightharpoonup Dimensions (W \times D \times H):

 $92 \times 463 \times 100 \text{ mm}, 3.7" \times 18.3" \times 4.0"$

❖ Weight:

Approx. 2.4 kg, 5.3 lb

𝚱 Note

Output Tray (Option)

❖ Paper capacity:

• A3, 11" × 17" : 250 sheets

• B4, $8^1/2'' \times 14'' : 500$ sheets

• A4, $8^1/2^{"} \times 11^{"} : 500$ sheets

• B5, $5^1/2$ " $\times 8^1/2$ " : 250 sheets

ightharpoonup Dimensions (W \times D \times H):

 $390 \times 330 \times 130$ mm, 15.4" $\times 13.0$ " $\times 5.2$ "

❖ Weight:

Approx. 650 g, 1.5 lb

𝒯 Note

Large Capacity Tray (LCT) (Option)

❖ Paper size:

A4
$$\square$$
, B5 \square , 8 $^1/_2$ " × 14" \square *1 , 8 $^1/_2$ " × 11" \square *1 The optional 8 $^1/_2$ "× 14" paper tray is required to set this size of paper.

❖ Paper weight:

$$64 - 105 \text{ g/m}^2$$
, $16 - 24 \text{ lb}$. Bond

❖ Paper capacity:

 $3,500 \text{ sheets } (80 \text{ g/m}^2, 20 \text{ lb. Bond})$

♦ Power consumption

Maximum. 48 W (power is supplied from the mainframe.)

Dimensions (W \times D \times H, option unit):

 $403 \times 529 \times 608$ mm, 15.9" $\times 20.9$ " $\times 24.0$ "

❖ Weight:

Approx. 22 kg, 48.6 lb

Note

Copy Connector Cable (Option)

Continuous copying speed:

- 110 copies/minute (A4 \square , 8 $^1/_2$ " × 11" \square)
- 56 copies/minute (A3□, 11" × 17"□)

ightharpoonup Dimensions (W imes D imes H):

 $310 \times 310 \times 65$ mm, $12.2" \times 12.2" \times 2.5"$

❖ Weight:

Approx. 500 g, 1.1 lb

❖ Length:

10 m, 328 ft.

INDEX

	Copy Paper, 26, 46
F0 Chart Finish and 11, 222	Cover
50-Sheet Finisher, 11, 323	Back Cover, 152, 155
Α	Front Cover, 152, 153, 155
Access to the Machine 216	- D
Adding Staples 281	Data Chama 107
Adding Staples, 281	Date Stamp, 197
ADE trace 0	Designate, 157
ADF tray, 9	Directional Magnification (%), 99
Auto Off, 32, 237	Directional Size Magnification (inch), 102
Auto Reduce/Enlarge, 49	Display, 14
Auto Reset, 32, 237	Display Panel, 229
Auto Start, 88	Display panel, 12, 14
В	Document Feeder, 322
	Document feeder, 8, 35, 234
Back Cover, 152, 155	Cleaning, 317
Background Numbering, 184	Document Server, 211
Basic functions, 42	Deleting, 222
Batch (SADF) mode, 38	Features and Benefits, 212
Book originals, copying, 138, 142	Printing, 218
Border Erase, 173, 174	Scanning Originals, 214
Bypass tray, 9, 70	Do's And Don'ts, 313
Dypuss day, 3,70	Double Copies, 166
C	_ E
Center/Border Erase, 173, 179	
Center Erase, 173, 177	Energy Saver mode, 85
Centering, 182	Enhance, 92
Changing Paper	Enlarging, 92
Tray 2, 278	Environment, 314
Changing the Paper Size, 278	Erase
Changing the Toner Bottle, 268	Border, 173, 174
Chapters, 160	Center, 173, 177
Clearing Misfeeds, 270	Center/Border, 173, 179
Clear Modes/Energy Saver key, 12	Exposure glass, 8, 23, 34
Clear/Stop key, 13	Cleaning, 317
Combination Chart, 209	Extender, 71
Combine, 105, 115	F
Connect Copy, 225, 227, 232, 328	<u>F</u>
Document Server, 228	File Merge Printing, 213
Exiting, 238	Finisher, 227
Interrupt, 228	50-Sheet Finisher, 11
Relationship, 242	Front Cover, 152, 153, 155
Connect Copy port, 9	Front cover, 8
Control Panel, 12	Function indicators, 13
Control panel, 8	Function Status indicator, 13
Copying	i unction status mulcator, 13
Connect Copy, 225	
Connect Copy, 225	

I	0
Image Density, 42, 43 Image Repeat, 168 Indicators, 12 Interrupt Copy, 86 Interrupt key, 12	On Demand Printing, 212 On indicator, 8, 13 Operation switch, 8, 13, 21 Options, 11 Original Beeper, 88 Original Mode Quality Level, 228 Originals, 23, 233
Job Preset, 80	Originals, setting, 33 Original Type, selecting, 44 Output Tray, 326 Output tray, 8, 11
Large Capacity Tray (LCT), 11, 327 Loading Paper, 263 Large Capacity Tray (LCT), 266	Output tray guide, 8, 10 P
Tray 1, 263 Tray 2, 265 Tray 3, 265	Page Numbering, 201 Paper Changing, 278 Loading, 263
Machine Environment, 314 Mainframe, 319 Main power indicator, 13 Main power switch, 8, 21 Maintenance, 317 Margin Adjustment, 171 Master unit, 227 Messages, 249 Misfeeds, 270 Mixed Sizes mode, 39 Moving, 315	Paper tray, 8 Power Connection, 315 Preset Stamp, 186 Program Changing, 77 Deleting, 78 Recalling, 79 Storing, 76 Program key, 12 Programs, 75 Punching copies, 67 Punch kit, 325
N	R
Numbering Background Numbering, 184 Page Numbering, 201 Number keys, 13	Reduce/Enlarge, 92 Reducing, 92 Remarks, 313 Removing Jammed Staples, 283 Removing Punch Waste, 285 Repeat

Image Repeat, 168

```
Safety information, 1
Sample Copy, 89
Sample Copy key, 12
Screen Contrast knob, 12
Series Copies, 138, 139
Slip Sheets, 152, 163
Sort, 55
Sorting copies into sets, 56
Specifications, 319
     50-Sheet Finisher, 323
    Connect Copy, 328
     Document Feeder, 322
     Large Capacity Tray (LCT), 327
    Mainframe, 319
     Output Tray, 326
     Punch kit, 325
Stack, 55, 59
Stamp, 184
     Background Numbering, 184
     Date Stamp, 197
     Page Numbering, 201
     Preset Stamp, 186
     User Stamp, 190
Staple, 55
Staples, 281
     Removing Jammed Staples, 283
Stapling copies, 61
Start key, 13
Sub-unit, 227
```

T

Thin mode, 41
Toner, 30
Toner Bottle
Changing, 268
Storage, 30
Two-sided Copies, 105, 110

User Codes, 87
User Stamp, 190
User Tools

Copy/Document Server Features, 287
Settings, 292
User Tools/Counter key, 12

In accordance with IEC 60417, this machine uses the following symbols for the main power switch:

- means POWER ON.
- **ம்** means STAND BY.