

A vertical column of decorative squares on the left side of the page. From top to bottom: a 2x2 grid of squares (top-right and bottom-left are black, top-left and bottom-right are grey), a 3x2 grid of squares (top-left and bottom-right are black, top-right and bottom-left are grey), a 2x2 grid of squares (top-right and bottom-left are black, top-left and bottom-right are grey), a single black square, and a single black square.

**RICOH**

# Aficio

## 551/700

Operating Instructions  
**SYSTEM SETTINGS**

Read this manual carefully before you use this product and keep it handy for future reference.

For safety, please follow the instructions in this manual.



## RICOH COMPANY, LTD.

15-5, 1 chome, Minami-Aoyama, Minato-ku, Tokyo  
Telephone: Tokyo 3479-3111

## Overseas Affiliates

### U.S.A.

RICOH CORPORATION  
5 Dedrick Place  
West Caldwell, New Jersey 07006  
Phone: +1-973-882-2000

### The Netherlands

RICOH EUROPE B.V.  
Groenelaan 3, 1186 AA, Amstelveen  
Phone: +31-(0)20-5474111

### United Kingdom

RICOH UK LTD.  
Ricoh House,  
1 Plane Tree Crescent, Feltham,  
Middlesex, TW13 7HG  
Phone: +44-(0)181-261-4000

### Germany

RICOH DEUTSCHLAND GmbH  
Mergenthalerallee 38-40,  
65760 Eschborn  
Phone: +49-(0)6196-9060

### France

RICOH FRANCE S.A.  
383, Avenue du Général de Gaulle  
BP 307-92143 Clamart Cedex  
Phone: +33-(0)1-40-94-38-38

### Spain

RICOH ESPAÑA S.A.  
Avda. Litoral Mar, 12-14,  
08005 Barcelona  
Phone: +34-(0)93-295-7600

### Italy

RICOH ITALIA SpA  
Via della Metallurgia 12,  
37139 Verona  
Phone: +39-045-8181500

### Hong Kong

RICOH HONG KONG LTD.  
23/F., China Overseas Building,  
139, Hennessy Road,  
Wan Chai, Hong Kong  
Phone: +852-2862-2888

### Singapore

RICOH ASIA PACIFIC PTE.LTD.  
260 Orchard Road,  
#15-01/02 The Heeren,  
Singapore 238855  
Phone: +65-830-5888

## Introduction

This manual contains detailed instructions on the operation and maintenance of this machine. To get maximum versatility from this machine all operators should carefully read and follow the instructions in this manual. Please keep this manual in a handy place near the machine.

Please read the Safety Information before using this machine. It contains important information related to USER SAFETY and PREVENTING EQUIPMENT PROBLEMS.



### Notes:

Some illustrations may be slightly different from your machine.

Certain options may not be available in some countries. For details, please contact your local dealer.



### Operator Safety:

This machine is considered a CDRH class 1 laser device, safe for office/EDP use. The machine contains two GaAlAs laser diodes, 5-milliwatt, 760-800 nanometer wavelength for each emitter. Direct (or indirect reflected ) eye contact with the laser beam might cause serious eye damage. Safety precautions and interlock mechanisms have been designed to prevent any possible laser beam exposure to the operator.

### Laser Safety:

The Center for Devices and Radiological Health (CDRH) prohibits the repair of laser-based optical unit in the field. The optical housing unit can only be repaired in a factory or at a location with the requisite equipment. The laser subsystem is replaceable in the field by a qualified Customer Engineer. The laser chassis is not repairable in the field. Customer engineers are therefore directed to return all chassis and laser subsystems to the factory or service depot when replacement or the optical subsystem is required.

### Warning:

Use of controls or adjustment or performance of procedures other than those specified in this manual might result in hazardous radiation exposure.

### Notes:

The model names of the machines do not appear in the following pages. Check the type of your machine before reading this manual. (For details, see ⇒ P.2 "*Machine Types*".)

- Type1: Aficio 551
- Type2: Aficio 700

Certain types might not be available in some countries. For details, please contact your local dealer.

Two kinds of size notation are employed in this manual. With this machine refer to the inch version.

For good copy quality, Ricoh recommends that you use genuine Ricoh toner.

Ricoh shall not be responsible for any damage or expense that might result from the use of parts other than genuine Ricoh parts in your Ricoh office product.

### Power Source

220 - 240V, 50/60Hz, 8A or more

Please be sure to connect the power cord to a power source as above. For details about power source, see "Power Connection" in the "Copy Reference" manual.

## Note to users in the United States of America

### Notice:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one more of the following measures:

**Reorient or relocate the receiving antenna.**

**Increase the separation between the equipment and receiver.**

**Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.**

**Consult the dealer or an experienced radio /TV technician for help.**

### Warning

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

1. Properly shielded and grounded cables and connectors must be used for connections to host computer (and/or peripheral) in order to meet FCC emission limits.
2. AC adapter with ferrite core must be used for RF interference suppression.

This device complies with Part 15 of FCC Rules.

Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Ricoh Corporation, 5 Dedrick Place, West Caldwell, NJ 07006  
973-882-2000

## Note to users in Canada

### Note:

This Class B digital apparatus complies with Canadian ICES-003.

### Remarque concernant les utilisateurs au Canada

### Avertissement:

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

In accordance with IEC 60417, this machine uses the following symbols for the main power switch:

**I** means POWER ON.

**⏻** means STAND BY.

## Introduction

This manual contains detailed instructions on the operation and maintenance of this machine. To get maximum versatility from this machine all operators should carefully read and follow the instructions in this manual. Please keep this manual in a handy place near the machine.

Please read the Safety Information before using this machine. It contains important information related to USER SAFETY and PREVENTING EQUIPMENT PROBLEMS.



### Notes:

Some illustrations may be slightly different from your machine.

Certain options may not be available in some countries. For details, please contact your local dealer.



### Operator Safety:

This machine is considered a CDRH class 1 laser device, safe for office/EDP use. The machine contains two GaAlAs laser diodes, 5-milliwatt, 760-800 nanometer wavelength for each emitter. Direct (or indirect reflected ) eye contact with the laser beam might cause serious eye damage. Safety precautions and interlock mechanisms have been designed to prevent any possible laser beam exposure to the operator.

### Laser Safety:

The Center for Devices and Radiological Health (CDRH) prohibits the repair of laser-based optical unit in the field. The optical housing unit can only be repaired in a factory or at a location with the requisite equipment. The laser subsystem is replaceable in the field by a qualified Customer Engineer. The laser chassis is not repairable in the field. Customer engineers are therefore directed to return all chassis and laser subsystems to the factory or service depot when replacement or the optical subsystem is required.

### Warning:

Use of controls or adjustment or performance of procedures other than those specified in this manual might result in hazardous radiation exposure.

### Notes:

The model names of the machines do not appear in the following pages. Check the type of your machine before reading this manual. (For details, see ⇒ P.2 *"Machine Types"*.)

- Type1: 2055DP, 3355
- Type2: 2070DP, 3370

Certain types might not be available in some countries. For details, please contact your local dealer.

Two kinds of size notation are employed in this manual. With this machine refer to the inch version.

For good copy quality, Savin recommends that you use genuine toner.

Savin shall not be responsible for any damage or expense that might result from the use of parts other than genuine parts in your office product.

### Power Source

120V, 60Hz, 20A or more

Please be sure to connect the power cord to a power source as above. For details about power source, see "Power Connection" of the "Copy Reference".

Read this manual carefully before you use this product and keep it handy for future reference.

For safety, please follow the instructions in this manual.

## Note to users in the United States of America

### Notice:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one more of the following measures:

**Reorient or relocate the receiving antenna.**

**Increase the separation between the equipment and receiver.**

**Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.**

**Consult the dealer or an experienced radio /TV technician for help.**

### Warning

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

1. Properly shielded and grounded cables and connectors must be used for connections to host computer (and/or peripheral) in order to meet FCC emission limits.
2. AC adapter with ferrite core must be used for RF interference suppression.

This device complies with Part 15 of FCC Rules.

Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

SAVIN CORPORATION, 333 Ludlow Street, Stamford, CT 06904  
203-967-5000

## Note to users in Canada

### Note:

This Class B digital apparatus complies with Canadian ICES-003.

### Remarque concernant les utilisateurs au Canada

### Avertissement:

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

In accordance with IEC 60417, this machine uses the following symbols for the main power switch:

**I** means **POWER ON.**

**⏻** means **STAND BY.**

## SAVIN CORPORATION

333 Ludlow Street, Stamford, CT 06904  
203-967-5000

# ENERGY STAR Program

ENERGY STAR®



As an ENERGY STAR Partner, we have determined that this machine model meets the ENERGY STAR Guidelines for energy efficiency.

The ENERGY STAR Guidelines intend to establish an international energy-saving system for developing and introducing energy-efficient office equipment to deal with environmental issues, such as global warming.

When a product meets the ENERGY STAR Guidelines for energy efficiency, the Partner shall place the ENERGY STAR logo onto the machine model.

This product was designed to reduce the environmental impact associated with office equipment by means of energy-saving features, such as Low-power mode.

- **Low Power mode**

This product automatically lowers its power consumption 15 minutes after the last copying or printing job has been completed. Printing is available in this mode, but if you use the copier, press the **[Clear Modes/Energy Saver]** key. For how to change the default interval before entering Low Power mode, see "Low Power Shift Time" in ⇒ P.7 "Basic Page 1".

- **Auto Off mode**

To conserve energy, this product automatically turns off 90 minutes after the last copying or printing job has been completed. Printing is available in this mode, but if you use the copier, press the operation switch. For how to change the default interval before entering Auto Off mode, see "Auto Off Timer" in ⇒ P.7 "Basic Page 1".

- **Duplex Priority**

To conserve paper resources, the Duplex function (1-Sided → 2-Sided) is selected preferentially when you turn on the operation switch or the main power switch, press the **[Clear Modes/Energy Saver]** key, or the machine resets itself automatically. To change Duplex Priority mode, see "Duplex Mode Priority" in the Copy Reference manual.

## ❖ Specification

		Type 1	Type 2
Low Power mode	Power consumption	206 Wh	219 Wh
	Default interval	15 minutes	
	Recovery time	20 seconds or less	10 seconds or less
Auto Off mode	Power consumption	8.3 Wh	
	Default interval	90 minutes	

Duplex Priority	1 Sided→2 Sided
-----------------	-----------------

---

### Recycled Paper

---

In accordance with the ENERGY STAR Program, we recommend use of recycled paper which is environment friendly. Please contact your sales representative for recommended paper.

# How to Read this Manual

---

## Symbols

---

In this manual, the following symbols are used:

 **WARNING:**

This symbol indicates a potentially hazardous situation that might result in death or serious injury when you misuse the machine without following the instructions under this symbol. Be sure to read the instructions, all of which are included in the Safety Information section in the Copy Reference manual.

 **CAUTION:**

This symbol indicates a potentially hazardous situation that might result in minor or moderate injury or property damage that does not involve personal injury when you misuse the machine without following the instructions under this symbol. Be sure to read the instructions, all of which are included in the Safety Information section in the Copy Reference manual.

\* The statements above are notes for your safety.

 **Important**

If this instruction is not followed, paper might be misfeed, originals might be damaged, or data might be lost. Be sure to read this.

 **Preparation**

This symbol indicates the prior knowledge or preparations required before operating.

 **Note**

This symbol indicates precautions for operation or actions to take after misoperation.

 **Limitation**

This symbol indicates numerical limits, functions that cannot be used together, or conditions in which a particular function cannot be used.

 **Reference**

This symbol indicates a reference.

[    ]

Keys that appear on the machine's display panel.

[    ]

Keys built into the machine's control panel.

# TABLE OF CONTENTS

- Manuals for This Machine..... 1**
- Machine Types..... 2**
  
- 1. User Tools (System Settings)**

---
- Keys for the User Tools (System Settings)..... 3**
- Accessing the User Tools (System Settings) ..... 4**
  - Exiting from the User Tools..... 5
- User Tools Menu (System Settings) ..... 6**
- Settings You Can Change with the User Tools ..... 7**
  - Basic Page 1 ..... 7
  - Basic Page 2 ..... 10
  - Set Time ..... 12
  - Paper Size Setting ..... 13
  - Count Manager ..... 17
  
- INDEX..... 18**

# Manuals for This Machine

The following three manuals have been prepared for operating this machine: this manual describing how to make System Settings for copying functions and the Copy Reference manual introducing the operating procedures for copying functions.

❖ **System Settings (this manual)**

Describes how to access the system User Tools to make the machine easier to use.

❖ **Copy Reference**

Describes the various copying functions from basic copying to more advanced functions such as reducing/enlarging copies or combining originals into one copy.

❖ **Copy Quick Guide**

Explains the most frequently used copy functions with examples. Also contains information such as the direction in which to set your originals and copying direction.


# Machine Types

This machine comes in two models which vary in copy speed. To make sure which model you have, see the inside front cover.

	Type 1	Type 2
Copy speed	55 copies/minute (A4  , 8 <sup>1</sup> / <sub>2</sub> " × 11"  )	70 copies/minute (A4  , 8 <sup>1</sup> / <sub>2</sub> " × 11"  )

# 1. User Tools (System Settings)

## Keys for the User Tools (System Settings)

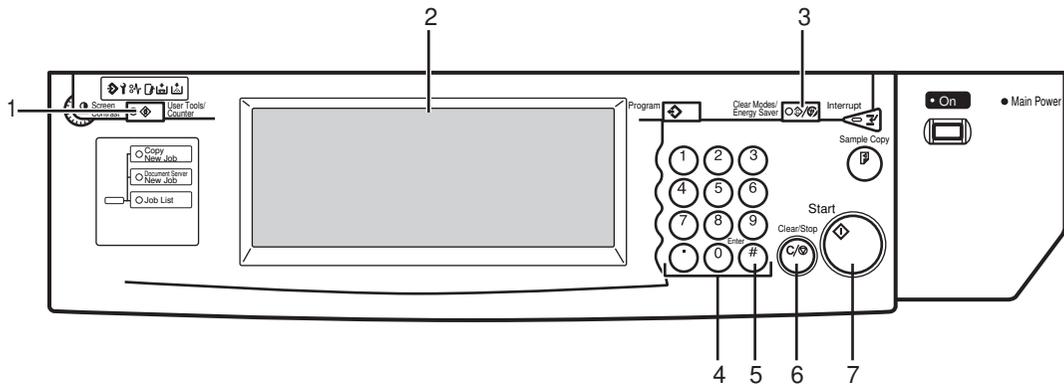

ZBQS150N

### 1. **【User Tools/Counter】** key

- User Tools  
Press to change the default settings and conditions to meet your requirements.
- Counter  
Press to check or print the total number of copies made.

### 2. **Display Panel**

Shows operation status and messages.

### 3. **【Clear Modes/Energy Saver】** key

- Clear Modes  
Press to clear any previously entered copy job settings.
- Energy Saver  
Press to switch to and from Energy Saver mode.

### 4. **Number keys**

Use to enter a numeric value.

### 5. **【#】** key

Press to set a value you have entered.

### 6. **【Clear/Stop】** key

Press to delete a number you have entered.

### 7. **【Start】** key

Press to start copying. Use to set the Auto Start.

# Accessing the User Tools (System Settings)

1

This section is for the key operators in charge of this machine. You can change or set the machine's default settings.

## Preparation

After using the User Tools, be sure to exit from the User Tools.

The selected key is highlighted.


Any changes you make with the User Tools remain in effect even if the main power switch or operation switch is turned off, or the **[Clear Modes/Energy Saver]** key is pressed.

## Reference

For information on the User Tools (Copy/Document Server Features), see the Copy Reference manual.


### 1 Press the **[User Tools/Counter]** key.

The User Tools Main Menu appears.

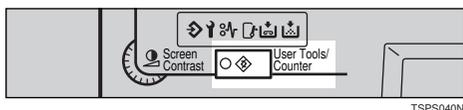


### 2 Press the **[System Settings]** key.

The System Settings menu appears.

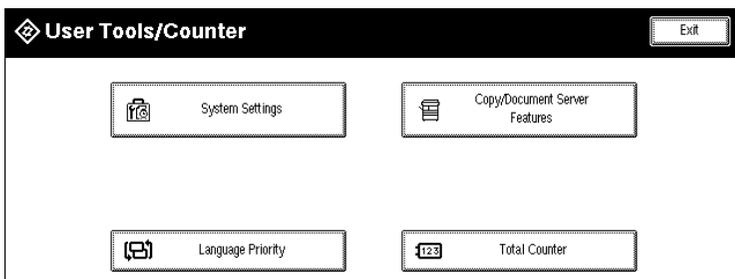

### 3 Select the desired menu and press the key.

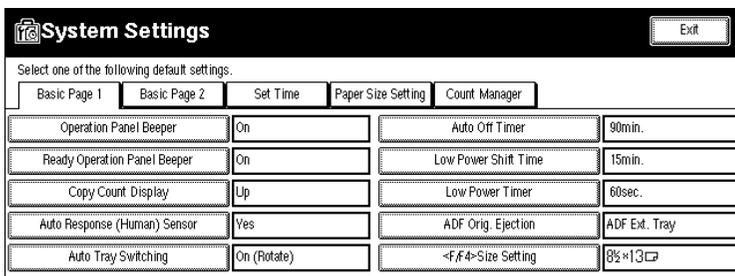

- 4 Change the settings by following the instructions on the display panel. Then press the [OK] key.

 **Note**

- [OK]: Press to set the new settings and return to the previous menu.
- [Cancel]: Press to return to the previous menu without changing any data.


---

## Exiting from the User Tools

---

- 1 After changing the User Tools settings, press the [Exit] key on the User Tools Main Menu.

Changing the User Tools is completed, and the machine is ready for copying.

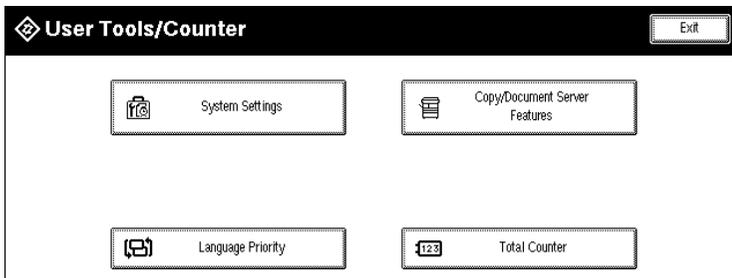


 **Note**


- To exit from the change of the machine's default settings and return to Copy mode, press the [User Tools/Counter] key.
- You can also exit from the User Tools by pressing the [User Tools/Counter] key.

# User Tools Menu (System Settings)



1

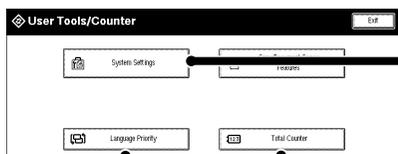



Basic Page 1

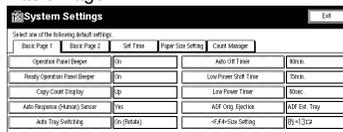


Basic Page 2

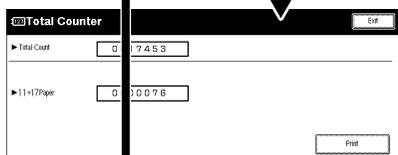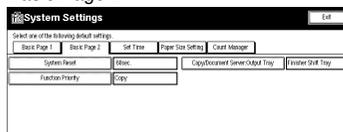

Set Time

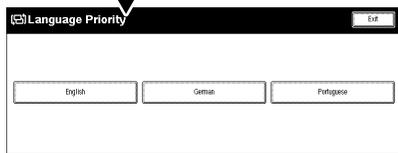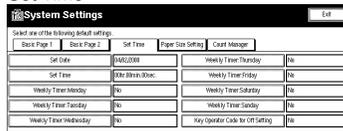

Paper Size Setting

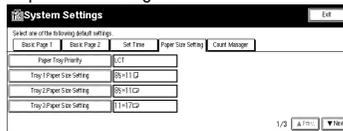

Count Manager



# Settings You Can Change with the User Tools

## Reference

For how to access the User Tools, see ⇒ P.4 “Accessing the User Tools (System Settings)”.

1

## Basic Page 1

Menu	Description
Operation Panel Beeper	<p>The beeper (key tone) sounds when a key is pressed. This beeper can be turned on or off.</p> <p> <b>Note</b> <input type="checkbox"/> Default: <i>On</i></p>
Ready Operation Panel Beeper	<p>Specify whether to sound the beeper when the machine becomes ready for copying immediately after Energy Saver mode is deactivated or the power is turned on.</p> <p> <b>Note</b> <input type="checkbox"/> If the “Operation Panel Beeper” setting is “Off”, the beeper does not sound irrespective of the “Ready Operation Panel Beeper” setting. <input type="checkbox"/> Default: <i>On</i></p>
Copy Count Display	<p>The copy counter can be set to show the number of copies made (count up) or the number of copies remaining to be made (count down).</p> <p> <b>Note</b> <input type="checkbox"/> Default: <i>Up (count up)</i></p>
Auto Response (Human) Sensor	<p>If the machine does not detect anyone using it for a certain period of time, it will switch automatically to one of the reset modes – Auto Reset, System Reset, Energy Saver mode, Low Power mode or Auto Off. You can cancel this setting.</p> <p>If “Low Power Timer” is set to “0”, “Auto Response (Human) Sensor” is disabled.</p> <p> <b>Note</b> <input type="checkbox"/> Default: <i>Yes (On)</i></p> <p> <b>Reference</b> See “Low Power Timer” in ⇒ P.7 “Basic Page 1”.</p>

Menu	Description
Auto Tray Switching	<p>When using Auto Paper Select, if you load paper of the same size in two or more trays, regardless of the paper direction, the machine automatically shifts to the other tray when the tray in use runs out of paper. This function is called "Auto Tray Switching". You can enable or disable this function.</p> <ul style="list-style-type: none"> <li>• If you select <b>[On (Rotate)]</b> The Auto Tray Switching function will take place for copying.</li> </ul> <div data-bbox="509 513 971 836" data-label="Diagram"> <p>The diagram shows three rectangular trays labeled 1, 2, and 3. Tray 1 is on the left, tray 2 is in the middle, and two tray 3 positions are on the right. An arrow points from tray 1 to tray 2. From tray 2, two arrows point to the two tray 3 positions, indicating a switch to a different tray.</p> </div> <p style="text-align: right; font-size: small;">GCAUTO0E</p> <ul style="list-style-type: none"> <li>1: Original</li> <li>2: Copy Paper (Tray 1)</li> <li>3: Copy Paper (Other Trays)</li> </ul> <ul style="list-style-type: none"> <li>• <b>Note</b></li> <li><input type="checkbox"/> The original image may not be rotated depending on the combination of selected functions.</li> <li>• If you select <b>[On (No Rotate)]</b> Only when paper of the same size and direction is loaded, the machine will continue copying. If not, the machine will stop copying and instruct you to load paper.</li> </ul> <div data-bbox="509 1290 971 1613" data-label="Diagram"> <p>The diagram shows three rectangular trays labeled 1, 2, and 3. Tray 1 is on the left, tray 2 is in the middle, and one tray 3 position is on the right. An arrow points from tray 1 to tray 2. From tray 2, an arrow points to the tray 3 position, which is crossed out with a large 'X', indicating that the function is disabled.</p> </div> <p style="text-align: right; font-size: small;">GCAUTO1E</p> <ul style="list-style-type: none"> <li>1: Original</li> <li>2: Copy Paper (Tray 1)</li> <li>3: Copy Paper (Other Trays)</li> </ul> <ul style="list-style-type: none"> <li>• If you select <b>[Off]</b>. When paper has run out, "⚠️ Load paper on ***." will be displayed, and copying will be interrupted.</li> </ul>

Menu	Description
Auto Tray Switching	<p> <b>Note</b></p> <ul style="list-style-type: none"> <li><input type="checkbox"/> Default: <i>On (Rotate)</i></li> <li><input type="checkbox"/> If you put recycled paper, translucent paper, user color paper 1, or user color paper 2 in paper trays and indicate them in the “Paper Size Setting” menu, the Auto Tray Switching function is available to these trays only when their paper types are identical.</li> </ul> <p> <b>Reference</b></p> <p>See “Special Paper Indication” in ⇒ P.13 “Paper Size Setting”.</p>
Auto Off Timer	<p>The machine turns itself off automatically to conserve energy after your job is finished, after the selected time. This function is called “Auto Off”. The time can be set from 1 to 240 minutes.</p> <p> <b>Note</b></p> <ul style="list-style-type: none"> <li><input type="checkbox"/> Default: <i>90min.</i></li> <li><input type="checkbox"/> Auto Off might not be effective when an error message is displayed.</li> <li><input type="checkbox"/> To return to the ready condition from Auto Off, the machine requires the same warm-up time as the time for becoming ready after its power is turned on.</li> </ul>
Low Power Shift Time	<p>The machine enters Low Power mode automatically after your job is finished, after the selected time. The time can be set from 1 to 240 minutes.</p> <p> <b>Note</b></p> <ul style="list-style-type: none"> <li><input type="checkbox"/> Default: <i>15min.</i></li> </ul>
Low Power Timer	<p>The machine enters to Energy Saver mode automatically after your job is finished, after the selected time. The time can be set from 10 to 999 seconds, or 0.</p> <p> <b>Note</b></p> <ul style="list-style-type: none"> <li><input type="checkbox"/> Default: <i>60sec.</i></li> <li><input type="checkbox"/> When the time is set to “0”, Energy Saver mode will not be activated.</li> </ul>

Menu	Description
ADF Orig. Ejection	<p>As a default setting, the scanned originals from the document feeder are ejected to the ADF external tray. If there is no space to attach an ADF external tray, you can change the output tray to the ADF tray. However, if the output tray is set to the ADF tray, it takes a little more time than to the ADF external tray.</p> <p> <b>Note</b></p> <ul style="list-style-type: none"> <li><input type="checkbox"/> Default: <i>ADF Ext. Tray</i></li> <li><input type="checkbox"/> Even if the ADF external tray is set, papers are ejected to the ADF tray in 2 Sided → 2 Sided copy mode.</li> </ul>
<F/F4>Size Setting	<p>Currently three types of F size are available; 8<sup>1</sup>/<sub>2</sub>" × 13", 8<sup>1</sup>/<sub>4</sub>" × 13" and 8" × 13".</p> <p>The document feeder or platen cover sensor cannot distinguish these 3 types of originals.</p> <p>This function sets the F size from the document feeder or platen cover sensor.</p> <p>Auto Paper Select or Auto Reduce/Enlarge can be used for F size originals based on this setting.</p> <p> <b>Note</b></p> <ul style="list-style-type: none"> <li><input type="checkbox"/> Default: 8<sup>1</sup>/<sub>2</sub>" × 13" </li> </ul>

## Basic Page 2

Menu	Description
System Reset	<p>If no operation is performed for a selected time after interrupt copying, the interrupt copying will be canceled. This function is called "System Reset". The time can be set from 10 to 999 seconds, or 0.</p> <p> <b>Note</b></p> <ul style="list-style-type: none"> <li><input type="checkbox"/> Default: <i>60sec.</i></li> <li><input type="checkbox"/> When the time is set to "0", System Reset will not be activated.</li> </ul>
Function Priority	<p>You can specify the mode that is displayed when the operation switch is turned on or System Reset is activated.</p> <p> <b>Note</b></p> <ul style="list-style-type: none"> <li><input type="checkbox"/> Default: <i>Copy</i></li> </ul>

Menu	Description
Copy/Document Server: Output Tray	<p>You can specify a tray to which documents are delivered.</p> <p> <b>Note</b></p> <ul style="list-style-type: none"> <li><input type="checkbox"/> You can select from “Copy tray”, “Finisher Shift Tray”, “Finisher Proof Tray”.</li> <li><input type="checkbox"/> Without the optional finisher installed, “Copy tray” is the only output tray that can be used.</li> </ul>
Staple initialization	<p>If the optional booklet finisher is installed, initialize the staple unit for the Saddle Stitch function after adding staples or removing jammed staples. When selecting “OK”, the machine staples a few times without ejecting staples .</p> <p> <b>Note</b></p> <ul style="list-style-type: none"> <li><input type="checkbox"/> <b>[Staple initialization]</b> appears only when the optional booklet finisher is installed.</li> </ul>

## Set Time

When entering Set Time mode, if a key operator code has already been set, you must enter the code (up to 8 digits).

### Reference

See “Key Operator Code” in ⇒ P.17 “Count Manager”.

Menu	Description
Set Date	Set the date for the copier's internal clock.  <b>Note</b> <input type="checkbox"/> You need to set this for the weekly timer to work properly.
Set Time	Set the time for the copier's internal clock.  <b>Note</b> <input type="checkbox"/> Enter the time using the 24-hour clock (1 second steps). <input type="checkbox"/> You need to set this for the weekly timer to work properly.
Weekly Timer:Monday Weekly Timer:Tuesday Weekly Timer:Wednesday Weekly Timer:Thursday Weekly Timer:Friday Weekly Timer:Saturday Weekly Timer:Sunday	Set the time when you want the machine to turn itself on/off for each day of the week.  <b>Important</b> <input type="checkbox"/> The timers do not work if the main power switch is turned off or the power cord is unplugged. <input type="checkbox"/> To keep the power on throughout the day, clear both the “On Set Time” and “Off Set Time” settings.  <b>Note</b> <input type="checkbox"/> Enter the time using the 24-hour clock (1 minute steps).
Key Operator Code for Off Setting	Set a key operator code (up to 8 digits) to temporarily cancel the power off setting of the weekly timer.  <b>Note</b> <input type="checkbox"/> When the weekly timers are set and the operation switch is off, you can still use the machine by doing one of the following: <ul style="list-style-type: none"> <li>• If the key operator code is set, turn on the operation switch and enter the code.</li> <li>• If the key operator code is not set, just turn on the operation switch.</li> </ul>


## About weekly timers

The weekly timers allow you to restrict use of the machine to certain periods of time of the day and week. The machine will switch itself on and off everyday at the time you specify.

### Important

- The weekly timers do not work if the main power switch is turned off or the power cord is unplugged.
- When the power is off due to the activation of the weekly timer, you can temporarily cancel the power off state by entering the key operator code (up to 8 digits) set in “Key Operator Code for Off Setting”.

## Paper Size Setting

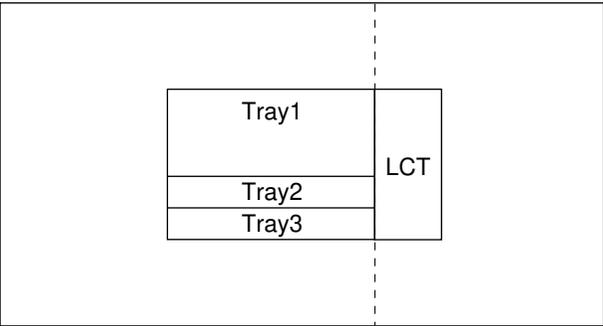Menu	Description
Paper Tray Priority	<p>You can select the paper tray which will be selected as a default in the following conditions:</p> <ul style="list-style-type: none"> <li>• When the operation switch is turned on.</li> <li>• When System Reset or Auto Reset mode is turned on.</li> <li>• When the <b>[Clear Modes/Energy Saver]</b> key is pressed.</li> <li>• When Auto Paper Select mode is selected.</li> </ul> <div style="text-align: center; margin: 10px 0;">  <p style="text-align: right; font-size: small; margin-top: 0;">GCTRAY0E</p> </div> <p> <b>Note</b></p> <ul style="list-style-type: none"> <li><input type="checkbox"/> Default: <ul style="list-style-type: none"> <li>• Machine with LCT : <i>LCT</i></li> <li>• Machine without LCT : <i>Tray 1</i></li> </ul> </li> <li><input type="checkbox"/> Large capacity tray (LCT) is optional.</li> </ul>

Menu	Description
Tray 1:Paper Size Setting Tray 2:Paper Size Setting Tray 3:Paper Size Setting	<p>Select the size of the copy paper set in the paper tray.</p> <p> <b>Note</b></p> <ul style="list-style-type: none"> <li><input type="checkbox"/> When making the paper size setting for tray 2, the setting of the paper size selector has priority.</li> <li><input type="checkbox"/> If the specified paper size differs from the size of paper actually set in the paper tray, a paper misfeed might occur because the paper size is not detected correctly.</li> <li><input type="checkbox"/> When you set the tab stock in tray 2, specify the paper size as follows:                             <ul style="list-style-type: none"> <li>• Metric version: A4 </li> <li>• Inch version: 8<sup>1</sup>/<sub>2</sub>" × 11" </li> </ul> </li> <li><input type="checkbox"/> When you set the tab stock in tray 2, you also need to specify the paper type in "Tray 2: Special Paper Indication" of the User Tools.</li> <li><input type="checkbox"/> If you wish to change the paper size set in tray 1, tray 3, and the optional large capacity tray (LCT), contact your service representative.</li> </ul> <p> <b>Reference</b></p> <p>See "Changing the Paper Size" in the Copy Reference manual.</p>
Bypass: Special Paper Indication Tray 1: Special Paper Indication Tray 2: Special Paper Indication Tray 3: Special Paper Indication LCT: Special Paper Indication	<p>You can specify the types of copy paper set in the paper tray and make them indicated.</p> <p>You can set the copy paper with the following steps.</p> <ol style="list-style-type: none"> <li>① Paper Type</li> <li>② In duplex copying the way to copy on paper. (except for "Tab Stock")</li> </ol>

Menu	Description
Bypass: Special Paper Indication Tray 1: Special Paper Indication Tray 2: Special Paper Indication Tray 3: Special Paper Indication LCT: Special Paper Indication	<p>1. Paper Type</p> <ul style="list-style-type: none"> <li>You can set only 1 type of copy paper in each paper tray.</li> <li>When specifying, the following indications are displayed.               <ul style="list-style-type: none"> <li>“Special Paper” when special paper is specified.</li> <li>“Recycled Paper” when recycled paper is specified.</li> <li>“Translucent Paper” when translucent paper is specified.</li> <li>“Tab Stock” when index tab paper is specified.</li> <li>“User Colour 1” when user color paper 1 is specified.</li> <li>“User Colour 2” when user color paper 2 is specified.</li> <li>“Thick Paper” when thick paper is specified.</li> </ul> </li> </ul> <p> <b>Note</b></p> <ul style="list-style-type: none"> <li><input type="checkbox"/> Default: <i>No Display</i></li> <li>You can set the amount of copy shift when tab stock is set in the tray. You can set the amount of shift from 0 to 15mm (in 1mm steps), 0.0" to 0.6" (in 0.1" steps).</li> </ul> <p> <b>Note</b></p> <ul style="list-style-type: none"> <li><input type="checkbox"/> Default:           <ul style="list-style-type: none"> <li>Metric version: <i>13mm</i></li> <li>Inch version: <i>0.5"</i></li> </ul> </li> <li><input type="checkbox"/> The tab stock can be set only in tray 2.</li> <li><input type="checkbox"/> When you set the tab stock in tray 2, you also need to specify the paper size in “Tray 2:Paper Size Setting” of the User Tools.</li> <li><input type="checkbox"/> The optional tab sheet tray is required to set the tab stock in tray 2.</li> <li><input type="checkbox"/> “Tab Stock” appears only when the optional output tray or 100-sheet finisher is installed.</li> </ul>
	<p>2. In duplex copying the way to copy on paper.</p> <ul style="list-style-type: none"> <li>You can specify the way to copy on paper in duplex copying. However, if “Tab Stock” is specified, you cannot make duplex copies.</li> </ul> <p> <b>Limitation</b></p> <ul style="list-style-type: none"> <li><input type="checkbox"/> You cannot specify the way to copy on paper in duplex copying when using the bypass tray.</li> </ul> <p> <b>Note</b></p> <ul style="list-style-type: none"> <li><input type="checkbox"/> Default: <i>Duplex Copy</i></li> </ul>

Menu	Description
Cover Slip Sheet 1 Slip Sheet 2	<p>You can specify any tray as a Cover Sheet or Slip Sheet 1, 2 and make them indicated.</p> <p> <b>Reference</b>                      See “Cover/Slip Sheet” in the Copy Reference manual.</p> <p> <b>Note</b></p> <ul style="list-style-type: none"> <li><input type="checkbox"/> The paper tray you have specified with “Cover” is used for the cover sheets in the Front Cover or Front/Back Cover function.</li> <li><input type="checkbox"/> The paper tray you have specified with “Slip Sheet 1” or “Slip Sheet 2” is used for the slip sheets in the Designate or Slip function.</li> </ul> <p>You can set the tray with the following steps.</p> <ol style="list-style-type: none"> <li>① Tray Selection</li> <li>② Tray Display</li> <li>③ In duplex copying the way to copy on paper.</li> </ol> <p>1. Tray Selection</p> <ul style="list-style-type: none"> <li>• You can specify any tray as a Cover Sheet or Slip Sheet 1, 2.</li> </ul> <p>2. Tray Display</p> <ul style="list-style-type: none"> <li>• To display “Cover” or “Slip Sheet”, select either “Mode Selected” or “Display Always”.</li> </ul> <p> <b>Note</b></p> <ul style="list-style-type: none"> <li><input type="checkbox"/> If you select “Mode Selected”, “Cover” or “Slip Sheet” is displayed only when the Cover or Slip Sheet function is selected.</li> </ul> <p>3. In duplex copying the way to copy on paper.</p> <ul style="list-style-type: none"> <li>• When specifying “Mode Selected”, you can specify the way to copy on paper in duplex copying.</li> </ul>

## Count Manager

When entering Count Manager mode, if a key operator code has already been set, you must enter the code (up to 8 digits).

### Reference

See “Key Operator Code” in ⇒ P.17 “Count Manager”

Menu	Description
Set User Codes	<p>You can specify whether to employ user codes to restrict copier users and manage the number of copies made.</p> <p> <b>Reference</b> For registering the user code, see “User Code Register/Change/Delete” in the Copy Reference manual.</p>
Key Counter	<p>You can specify whether to control the optional Key Counter under each user code.</p> <p> <b>Reference</b> For registering the user code, see “User Code Register/Change/Delete” in the Copy Reference manual.</p>
Set Key Card	—
Key Operator Code	<p>If you select “Yes”, only operators who know the key operator code (up to 8 digits) can access the User Tools (System Settings and Copy/Document Server Features).</p> <p> <b>Note</b></p> <ul style="list-style-type: none"> <li><input type="checkbox"/> Default: <i>No</i></li> <li><input type="checkbox"/> If you select “Yes”, you should register the key operator code and specify whether to set the key operator code on the part or all of the default settings of the User Tools (System Settings and Copy/Document Server Features). <ul style="list-style-type: none"> <li>• If you select “Part”, the key operator code is set on “Set Time” and “Count Manager” of the User Tools (System Settings and Copy/Document Server Features).</li> <li>• If you select “All default settings”, the key operator code is set on the all of the default settings of the User Tools (System Settings and Copy/Document Server Features).</li> </ul> </li> </ul>
AOF(Keep It On.)	<p> <b>Note</b></p> <ul style="list-style-type: none"> <li><input type="checkbox"/> For details about this function, contact your service representative.</li> </ul>
Counter/Print	<p>You can have various counters displayed or printed.</p> <ul style="list-style-type: none"> <li>• You can display the counter of each function.</li> <li>• You can print the counter list.</li> </ul>

# INDEX

## A

---

ADF Orig. Ejection, 10  
AOF(Keep It On.), 17  
Auto Off Timer, 9  
Auto Response (Human) Sensor, 7  
Auto Tray Switching, 8, 9

## B

---

Bypass  
*Special Paper Indication*, 14, 15

## C

---

Copy Count Display, 7  
Copy/Document Server  
*Output Tray*, 11  
Counter/Print, 17  
Cover, 16

## F

---

Function Priority, 10

## K

---

Key Counter, 17  
Key Operator Code, 17  
Key Operator Code for Off Setting, 12  
Keys for the User Tools (System Settings), 3

## L

---

LCT  
*Special Paper Indication*, 14, 15  
Low Power Shift Time, 9  
Low Power Timer, 9

## O

---

Operation Panel Beeper, 7

## P

---

Paper Tray Priority, 13

## R

---

Ready Operation Panel Beeper, 7

## S

---

Set Date, 12  
Set Key Card, 17  
Set Time, 12  
Set User Codes, 17  
Size Setting, 10  
Slip Sheet 1, 16  
Slip Sheet 2, 16  
Staple initialization, 11  
System Reset, 10

## T

---

Tray 1  
*Paper Size Setting*, 14  
*Special Paper Indication*, 14, 15  
Tray 2  
*Paper Size Setting*, 14  
*Special Paper Indication*, 14, 15  
Tray 3  
*Paper Size Setting*, 14  
*Special Paper Indication*, 14, 15

## U

---

User Tools (System Settings), 3

## W

---

Weekly Timer  
*Friday*, 12  
*Monday*, 12  
*Saturday*, 12  
*Sunday*, 12  
*Thursday*, 12  
*Tuesday*, 12  
*Wednesday*, 12