



RICOH



Aficio₆₅₀



OPERATING INSTRUCTIONS SYSTEM SETTINGS



Read this manual carefully before you use this product and keep it handy for future reference.

For safety, please follow the instructions in this manual.



RICOH COMPANY, LTD.

15-5, 1 chome, Minami-Aoyama, Minato-ku, Tokyo
Telephone: Tokyo 3479-3111

Overseas Affiliates

U.S.A.

RICOH CORPORATION
5 Dedrick Place West Caldwell, New
Jersey 07006
(TEL) 973-882-2000

Netherlands

RICOH EUROPE B.V.
Groenelaan 3 P.O. Box 114 1180
AC - Amstelveen Holland
(TEL) 020-5474111

United Kingdom

RICOH U.K. LTD.
Ricoh House 1 Plane Tree Crescent,
Feltham, Middlesex, TW13 7HG
(TEL) 181-261-4000

Germany

RICOH DEUTSCHLAND GMBH
Mergenthalerallee 38-40, 65760 Es-
chborn
(TEL) (06196) 906-0

Singapore

RICOH ASIA PACIFIC PTE. LTD.
#15-01/02 The Heeren, 260 Orchard
Road, Singapore 238855
(TEL) 65-830-5888

Spain

RICOH ESPAÑA S.A.
Guitard, 45 08014 Barcelona
(TEL) 490-09-60

Italy

RICOH ITALIA S.p.A.
Via della Metallurgia, 12 (zona Bas-
son) - 37139 VERONA
(TEL) 045-851 00 44

Hong Kong

RICOH HONG KONG LTD.
23/F., China Overseas Building, 139,
Hennessy Road, Wan Chai, Hong
Kong
(TEL) 2862-2888

France

RICOH FRANCE S.A.
383 Avenue du Général de Gaulle,
B.P. 307, 92143 Clamart Cedex
(TEL) 01-4094-3838

Introduction

This manual contains detailed instructions on the operation and maintenance of this machine. To get maximum versatility from this machine all operators should carefully read and follow the instructions in this manual. Please keep this manual in a handy place near the machine.

Please read the Safety Information before using this machine. It contains important information related to USER SAFETY and PREVENTING EQUIPMENT PROBLEMS.

Notes:

 
Some illustrations may be slightly different from your machine.

Certain options may not be available in some countries. For details, please contact your local dealer.

Operator Safety:

This machine is considered a class 1 laser device, safe for office/EDP use. The machine contains two 5-milliwatt, 760 - 800 nanometer wavelength, GaAlAs laser diodes. Direct (or indirect reflected) eye contact with the laser beam might cause serious eye damage. Safety precautions and interlock mechanisms have been designed to prevent any possible laser beam exposure to the operator.

The following label is attached on the back side of the machine.

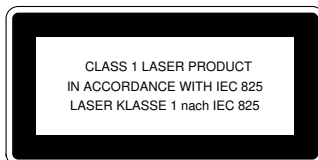

Laser Safety:

The optical housing unit can only be repaired in a factory or at a location with the requisite equipment. The laser subsystem is replaceable in the field by a qualified Customer Engineer. The laser chassis is not repairable in the field. Customer engineers are therefore directed to return all chassis and laser subsystems to the factory or service depot when replacement of the optical subsystem is required.

Warning:

Use of controls or adjustment or performance of procedures other than those specified in this manual might result in hazardous radiation exposure.

Two kinds of size notation are employed in this manual. With this machine refer to the Metric version.

For good copy quality, Ricoh recommends that you use genuine Ricoh toner.

Ricoh shall not be responsible for any damage or expense that might result from the use of parts other than genuine Ricoh parts in your Ricoh office product.

Power Source

240 V, 50 Hz, 8 A or more

Please be sure to connect the power cord to a power source as above. For details about power source, see "Power Connection" of the "Copy Reference" manual.

In accordance with ISO Standard 7001, this machine uses the following symbols for the main power switch:

I means **POWER ON**.

⏻ means **STAND BY**.

How To Read This Manual

Symbols

In this manual, the following symbols are used:

WARNING:

This symbol indicates a potentially hazardous situation that might result in death or serious injury when you misuse the machine without following the instructions under this symbol. Be sure to read the instructions, all of which are described in the “Safety Information” of the “Copy Reference” manual.

CAUTION:

This symbol indicates a potentially hazardous situation that might result in minor or moderate injury or property damage that does not involve personal injury when you misuse the machine without following the instructions under this symbol. Be sure to read the instructions, all of which are described in the “Safety Information” of the “Copy Reference” manual.

* The statements above are notes for your safety.

Important

If this instruction is not followed, paper might be misfed, originals might be damaged, or data might be lost. Be sure to read this.

Preparation

This symbol indicates the prior knowledge or preparations required before operating.

Note

This symbol indicates precautions for operation, or actions to take after misoperation.

Limitation

This symbol indicates numerical limits, functions that cannot be used together, or conditions in which a particular function cannot be used.

Reference

This symbol indicates a reference.

[]

Keys that appear on the machine's panel display.

【 】

Keys built into the machine's operation panel.

TABLE OF CONTENTS

Manuals For This Machine.....	1
1. USER TOOLS (SYSTEM SETTINGS)	
<hr/>	
Keys for User Tools (System Settings)	3
Accessing The User Tools (System Settings)	4
Exiting from User Tools.....	5
User Tools Menu (System Settings)	6
Settings You Can Change With The User Tools.....	7
Basic Page 1	7
Basic Page 2	9
Set Time	10
Paper Size Setting	11
Count Manager	13
INDEX.....	14

Manuals For This Machine

The following two manuals have been prepared for operating this machine: this manual which describes how to make system settings for copying functions and the “Copy Reference” manual which introduces the operating procedures for copying functions. Please consult the manual that suits your needs.

❖ **System Settings (this manual)**

Describes how to access the system user tools to make the machine easier to use.

❖ **Copy Reference**

Describes the various copying functions from basic copying to more advanced functions such as reducing/enlarging copies or combining originals into one copy.

 
❖ **Copy Quick Guide**

Explains the most frequently used copy functions with examples. Also contains information such as the direction in which to set your originals and copying direction.

This page is intentionally blank.

1. USER TOOLS (SYSTEM SETTINGS)

Keys for User Tools (System Settings)

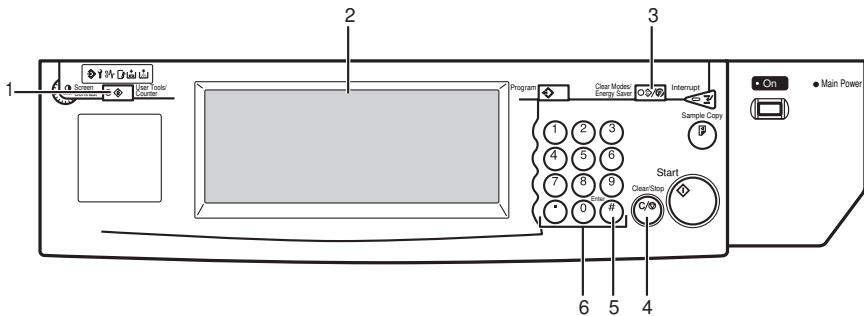

1. **[User Tools/Counter]** key

You can change the system settings and operational conditions to meet the usage. You can also display the total count.

2. **Panel Display**

Displays operation status and messages.

3. **[Clear Modes/Energy Saver]** key

4. **[Clear/Stop]** key

Press to delete a number you have entered.

5. **[#]** key

Press to set a value you have entered.

6. **[Number]** keys

Use to enter a numeric value.

Accessing The User Tools (System Settings)

1

This section is for the key operators in charge of this machine. You can change or set the machine's default settings.

Preparation

After using the user tools, be sure to exit it to return to Copy mode.

The key selected is highlighted.

 
The settings are not canceled even if the main power switch or operation switch is turned off or the **[Clear Modes/Energy Saver]** key is pressed.

Reference

For information on Copy User Tools, see the “Copy Reference” manual.


1 Press the **[User Tools/Counter]** key.

The User Tools Main Menu appears.




2 Touch the **[System Settings]** key.

 The system settings menu appears.

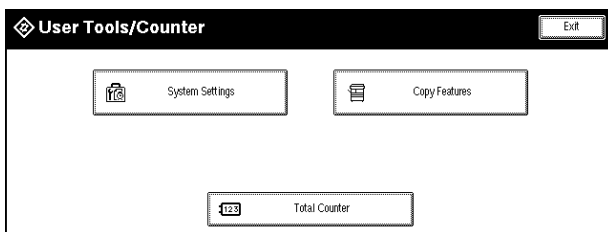

 3 Search for the desired menu and touch the key.

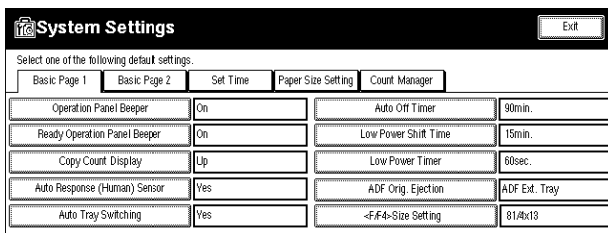

4 Change the settings by following the instructions on the panel display. Then touch the **[OK]** key.

 
Note

- ☐ **[OK]:** Touch to set the new settings and return to the previous menu.
- ☐ **[Cancel]:** Touch to return to the previous menu without changing any data.

Exiting from User Tools

1

- 1** After changing the user tools settings, press the **[User Tools/Counter]** key.
Changing the system settings ends to return to Copy mode.

**Note**

- ☐ To cancel the change of the machine's default settings and return to the copy mode, press the **[User Tools/Counter]** key.
- ☐ You can also exit from user tools by touching the **[Exit]** key on the User Tools Main Menu.

User Tools Menu (System Settings)

1

User Tools/Counter ESC

System Settings

Total Counter

Total Counter ESC

Total Count: 8888188

Print

Basic Page 1

System Settings ESC

Select one of the following default settings

Basic Page 1 | Basic Page 2 | Set Time | Paper Size Setting | Count Manager

Operation Power On Delay	0s	High On Time	10min
Ready Operation Power On Delay	0s	Low Power Off Time	30min
Copy-Credit Display	0	Low Power Time	10min
Add Inquiries (Internet Sensor)	Yes	AXI On/Off Function	Off On/Off
AXI On/Off Locking	Yes	AXI On/Off Locking	1/10/10

Basic Page 2

System Settings ESC

Select one of the following default settings

Basic Page 1 | Basic Page 2 | Set Time | Paper Size Setting | Count Manager

System Reset:

Copy/Print Tray:

Set Time

System Settings ESC

Select one of the following default settings

Basic Page 1 | Basic Page 2 | Set Time | Paper Size Setting | Count Manager

Set Date	2018/08/08	Weekly Time Priority	On
Set Time	09:00:00	Weekly Time Day	On
Weekly Time Monday	On	Weekly Time Saturday	On
Weekly Time Tuesday	On	Weekly Time Sunday	On
Weekly Time Wednesday	On	Any Operation Code for Set Locking	On

Paper Size Setting

System Settings ESC

Select one of the following default settings

Basic Page 1 | Basic Page 2 | Set Time | Paper Size Setting | Count Manager

Tray 1 Paper Size Setting	A4 R 2P	Tray 1 Special Paper Indication	On/Display
Tray 2 Paper Size Setting	A4 R 2P	Tray 2 Special Paper Indication	On/Display
Tray 3 Paper Size Setting	A4 R 2P	Tray 3 Special Paper Indication	On/Display
Tray 4 Paper Size Setting	A4 R 2P	Tray 4 Special Paper Indication	On/Display
Special Tray Special Paper Indication	Display	UCT Special Paper Indication	On/Display

Count Manager

System Settings ESC

Select one of the following default settings

Basic Page 1 | Basic Page 2 | Set Time | Paper Size Setting | Count Manager

Set Item Codes:

Any Character:

Any Operator Code:

AXI On/Off Locking:

TSPH250E





Settings You Can Change With The User Tools





Reference





For how to access the user tools, see ⇒ P.4 “Accessing The User Tools (System Settings)”.

1


Basic Page 1


Menu	Description
Operation Panel Beeper	<p>The beeper (key tone) sounds when a key is pressed. This beeper can be turned on or off.</p> <p> Note <input type="checkbox"/> Default: <i>On</i></p>
Ready Operation Panel Beeper	<p>Specify whether to sound the beeper when the machine becomes ready for copying immediately after Energy Saver mode is deactivated or the power is turned on.</p> <p> Note <input type="checkbox"/> When the “Operation Panel Beeper” is set to OFF, the beeper does not sound even if the “Ready Operation Panel Beeper” is set to ON. <input type="checkbox"/> Default: <i>On</i></p>
Copy Count Display	<p>The copy counter can be set to show the number of copies made (count up) or the number of copies remaining to be made (count down).</p> <p> Note <input type="checkbox"/> Default: <i>Up (count up)</i></p>
Auto Response (Human) Sensor	<p>If the machine dose not detect anyone using it for a certain period of time, it will switch automatically to one of the reset modes – Auto Reset, System Reset, Low Power mode or Auto Off. You can cancel this setting.</p> <p>If the “Low Power Timer” in⇒ P.7 “Basic Page 1” is set to “0”, the “Auto Response (Human) Sensor” is disabled.</p> <p> Note <input type="checkbox"/> Default: <i>Yes (On)</i></p>

Menu	Description
Auto Tray Switching	<p>If you load paper of the same size in two or more trays, the machine automatically shifts to the other tray when the tray in use runs out of paper. You can set or cancel this setting.</p> <ul style="list-style-type: none"> • If you select [Yes] (Using Auto Paper Select) If paper of the different orientation is loaded, limitless paper loading will take place for copying. • If you select [No] If paper of the same size and the same orientation is not loaded, the machine will stop copying and instruct you to load paper. <p> Note</p> <ul style="list-style-type: none"> <input type="checkbox"/> Default: Yes <input type="checkbox"/> If you put recycled paper, special paper or thin paper in paper trays using the Special Paper Indication menu, the Auto Tray Switching function is available to these trays only when their settings are identical. <p> Reference</p> <p>See "Special Paper Indication" in ⇒ P.11 "Paper Size Setting".</p>
Auto Off Timer	<p>The machine turns itself off automatically to conserve energy after your job is finished, after the selected time. This function is called "Auto Off". The time can be set from 1 to 240 minutes.</p> <p> Note</p> <ul style="list-style-type: none"> <input type="checkbox"/> Default: 90 minutes <input type="checkbox"/> Auto Off might not be effective when an error message is displayed. <input type="checkbox"/> To return to the ready condition from Auto Off, the machine requires the same warm-up time as the time for becoming ready after its power is turned on.
Low Power Shift Time	<p>The machine enters Low Power mode automatically after your job is finished, after the selected time. The time can be set from 1 to 240 minutes.</p> <p> Note</p> <ul style="list-style-type: none"> <input type="checkbox"/> Default: 15 minutes

Menu	Description
Low Power Timer	<p>The machine enters to Energy Saver mode automatically after your job is finished, after the selected time. The time can be set from 10 to 999 seconds, or 0.</p> <p>When the time is set to "0", Energy Saver mode will not be activated.</p> <p> Note</p> <p><input type="checkbox"/> Default: 60 seconds</p>
ADF Orig. Ejection	<p>As a default setting, the scanned originals from the document feeder (ADF) are ejected to the ADF external tray. But, if there is no space to attach an ADF external tray, you can change the output tray to the ADF tray. However, if the output tray is set to the ADF tray, it takes a little more time than to the ADF external tray.</p> <p> Note</p> <p><input type="checkbox"/> Default: ADF Ext. Tray</p> <p><input type="checkbox"/> Even if ADF external tray is set, papers are ejected to the ADF tray in the 2 Sided → 2 Sided copy mode.</p>
<F/F4>Size Setting	<p>Currently three types of F size are available; $8\frac{1}{2}" \times 13"$, $8\frac{1}{4}" \times 13"$ and $8" \times 13"$.</p> <p>The document feeder or platen cover sensor cannot distinguish these 3 types of originals.</p> <p>This function sets the F size from the document feeder or platen cover sensor.</p> <p>Auto Paper Select or Auto Reduce/Enlarge in the case of F size originals functions based on this setting.</p> <p> Note</p> <p><input type="checkbox"/> Default: $8\frac{1}{2}" \times 13"$ </p>

Basic Page 2

Menu	Description
System Reset	<p>If no operation is performed for a selected time after interrupt copying, the interrupt copying will be canceled. This function is called "System Reset". The time can be set from 10 to 999 seconds, or 0.</p> <p>When the time is set to "0", System Reset will not be activated.</p> <p> Note</p> <p><input type="checkbox"/> Default: 60 seconds</p>





Menu	Description
Copy:Output Tray	<p>You can specify a tray to which documents are delivered.</p> <p> Note</p> <ul style="list-style-type: none"> <input type="checkbox"/> You can select from the “Mainframe”, “Finisher-Shift tray”, “Finisher-Proof tray”. <input type="checkbox"/> Without the optional finisher installed, “Mainframe” is the only one output tray.


Set Time

When entering Set Time mode, if a key operator code has already been set, you must enter the code (up to 8 digits).

Reference

See “Key Operator Code” in ⇒ P.13 “Count Manager”.

Menu	Description
Set Date	<p>Set the date for the copier's internal clock.</p> <p> Note</p> <ul style="list-style-type: none"> <input type="checkbox"/> You need to set this for the weekly timer to work properly.
Set Time	<p>Set the time for the copier's internal clock.</p> <p> Note</p> <ul style="list-style-type: none"> <input type="checkbox"/> You need to set this for the weekly timer to work properly.
Weekly Timer:Monday Weekly Timer:Tuesday Weekly Timer:Wednesday Weekly Timer:Thursday Weekly Timer:Friday Weekly Timer:Saturday Weekly Timer:Sunday	<p>Set the times when you want the machine to turn itself on/off for each day of the week.</p> <p> Important</p> <ul style="list-style-type: none"> <input type="checkbox"/> The timers do not work if the main power switch is turned off or the power cord is unplugged. <input type="checkbox"/> To keep the power on throughout the day, set both the “On” and “Off” timers to zero. <p> Note</p> <ul style="list-style-type: none"> <input type="checkbox"/> Enter times using the 24-hour clock. (1 minute steps).

Menu	Description
Key Operator Code for Off Setting	<p>Set a key operator code (up to 8 digits) to temporarily cancel the power off setting of the weekly timer.</p> <p> Note</p> <ul style="list-style-type: none"> <input type="checkbox"/> When the weekly timers are set and the operation switch is off, you can still use the machine by doing one of the following: <ul style="list-style-type: none"> • If the key operator code is set, turn on the operation switch and enter the code. • If the key operator code is not set, just turn on the operation switch.

1



About weekly timers



The weekly timers allow you to restrict use of the machine to certain times of the day and week. The machine will switch itself on and off everyday at the times you specify.

Important

- ☐ The weekly timers allow you to restrict use of the machine to certain times of the day and week. The machine will switch itself on and off everyday at the times you specify.
- ☐ When the power is off due to the activation of the weekly timer, you can temporarily cancel the power off state by entering the key operator code (up to 8 digits) set in “Key Operator Code for Off Setting.”

Paper Size Setting

Menu	Description
Tray 1: Paper Size Setting Tray 2: Paper Size Setting Tray 3: Paper Size Setting	<p>Select the size of the copy paper set in the paper tray.</p> <p> Note</p> <ul style="list-style-type: none"> <input type="checkbox"/> Concerning the paper size setting for the Tray 2, the setting of the paper size selector has priority. <input type="checkbox"/> If the specified paper size differs from the size of paper actually set in the paper tray, a paper misfeed might occur because the paper size is not detected correctly. <input type="checkbox"/> To set a paper size for the optional 3500-sheet large capacity tray (LCT), contact your service representative. <p> Reference</p> <p>See “Changing The Paper Size” in the “Copy Reference”.</p>

Menu	Description
Bypass Tray:Special Paper Indication	Set an indication to identify the type of paper loaded in each tray.
Tray 1:Special Paper Indication	<p> Limitation</p> <p><input type="checkbox"/> The machine cannot auto-select trays that you have designated as “Thin” or “Special Paper” using the Special Paper Indication function. Therefore, if all trays designated as “Thin” or “Special Paper”, the Auto Paper Select function is not available.</p>
Tray 2:Special Paper Indication	
Tray 3:Special Paper Indication	
Tray 3:Special Paper Indication	<p> Note</p> <p><input type="checkbox"/> Default:</p> <ul style="list-style-type: none"> • Bypass Tray:Cover (Mode Selected) and Slip Sheet (Mode selected) • Tray 1: No Display • Tray 2: No Display • Tray 3: No Display • LCT: No Display <p><input type="checkbox"/> “Recycled Paper” appears on the display when recycled paper is selected, “Special Paper” when special paper, and “Thin” when thin paper.</p> <p><input type="checkbox"/> You can also have “Cover” and “Slip Sheet” displayed.</p> <p><input type="checkbox"/> To display “Cover” or “Slip Sheet”, select either “Full Time” or “Mode Selected”. If you select “Mode Selected”, “Cover” or “Slip Sheet” is displayed only when Cover or Slip Sheet function is selected.</p> <p><input type="checkbox"/> When displaying the settings of “Cover” and “Slip Sheet”, you cannot select “Full Time” for the same tray for both at the same time. Priority is given to whichever setting is set first.</p> <p><input type="checkbox"/> If “Cover” or “Slip Sheet” cannot be selected, “Cover” or “Slip Sheet” has already been selected for another tray. Cancel the setting of the other tray and start over again.</p>

Count Manager

When entering Count Manger mode, if a key operator code has already been set, you must enter the code (up to 8 digits).



Reference

See “Key Operator Code” in ⇒ P.13 “Count Manager”.

1

Menu	Description
Set User Codes	<p>Specify whether to employ user codes to restrict copier users and manage the number of copies made.</p> <p> Reference For Registering the User Code, see “User Code Register/Change/Delete” of the “Copy Reference” manual.</p>
Key Operator Code	<p>If you select “Yes”, only operators who know the key operator code (up to 8 digits) can access the “Set Time” and “Count Manager” user tools.</p> <p> Note <input type="checkbox"/> Default: No <input type="checkbox"/> If you select “Yes”, you should register the key operator code.</p>
AOF(Keep It On.)	<p> Note <input type="checkbox"/> For details of this function, contact your service representative.</p>

INDEX

A

ADF Orig. Ejection, 9
AOF (Keep it On), 13
Auto Off Timer, 8
Auto Response (Human) Sensor, 7
Auto Tray Switching, 8

B

Bypass Tray Special Paper Indication, 12

C

Clear Modes/Energy Saver key, 3
Clear/Stop key, 3
Copy Count Display, 7
Copy Output Tray, 10

K

key (Enter key), 3
Key Operator Code, 13
Keys for User Tools (System Settings), 3

L

LCT Special Paper Indication, 12
Low Power Shift Time, 8
Low Power Timer, 9

N

Number keys, 3

O

Operation Panel Beeper, 7
Key Operator Code for Off Setting, 11

P

Panel Display, 3

R

Ready Operation Panel Beeper, 7

S

Set Date, 10
Set Time, 10
Set User Code, 13

System Reset, 9

T

Tray 1 Paper Size Setting, 11
Tray 1 Special Paper Indication, 12
Tray 2 Paper Size Setting, 11
Tray 2 Special Paper Indication, 12
Tray 3 Paper Size Setting, 11
Tray 3 Special Paper Indication, 12

U

User Tools/Counter key, 3
User Tools (System Settings), 3

W

Weekly Timer Friday, 10
Weekly Timer Monday, 10
Weekly Timer Saturday, 10
Weekly Timer Sunday, 10
Weekly Timer Thursday, 10
Weekly Timer Tuesday, 10
Weekly Timer Wednesday, 10