

Errata for User Guide

This errata covers the GX 3000S, GX 3000SF and GX 3050SFN models.

Please note the following corrections to this manual.

Topic	Error	Corrections
Troubleshooting>Removing Jammed Originals and Paper>Removing Paper Jammed in the Output Tray or under the Scanner Unit	Removing Paper Jammed in the Output Tray or under the Scanner Unit	Removing Paper Jammed in the Output Tray or Internal Path
	Follow the procedure below to remove paper jammed in the output tray or under the Scanner Unit.	Follow the procedure below to remove paper jammed in the output tray or Internal Path.
Troubleshooting>Control Panel Error Messages: General>Printer Function Error Messages	Ppr Misfd: Scan.Unit/Remove Paper	Ppr Misfd: Int.Path/Remove Paper
Troubleshooting>Control Panel Error Messages: General>Copier Function Error Messages	Ppr Misfd: Scan.Unit/Remove Paper	Ppr Misfd: Int.Path/Remove Paper
GX 3000SF/GX 3050 SFN Troubleshooting>Control Panel Error Messages: General>Facsimile Function Error Messages	Paper Misfeed/Open Scanner Unit	Ppr Misfd: Int.Path/Remove Paper

Copyright © 2008

Printed in China

EN  AE  J012-6616



J0126616