
RIGOH

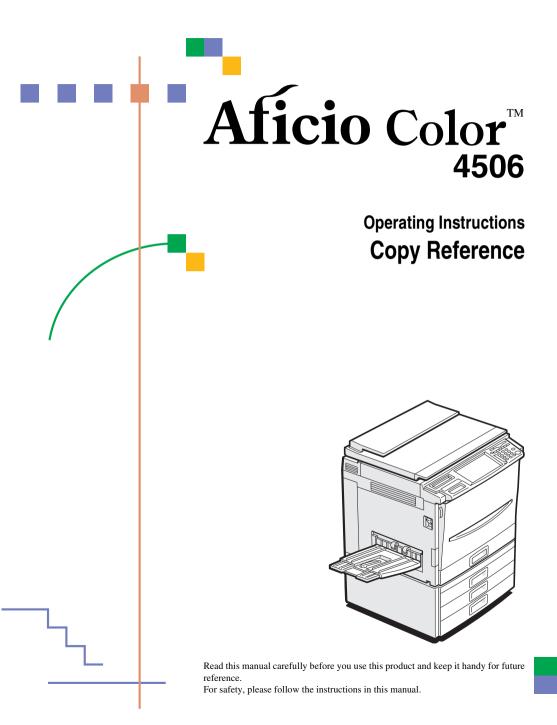



RICOH COMPANY, LTD.

15-5, Minami Aoyama 1-chome, Minato-ku, Tokyo 107-8544, Japan Phone: +81-(0)3-3479-3111

Overseas Affiliates

U.S.A.

RICOH CORPORATION 5 Dedrick Place West Caldwell, New Jersey 07006 Phone: +1-973-882-2000

The Netherlands

RICOH EUROPE B.V. Groenelaan 3, 1186 AA, Amstelveen Phone: +31-(0)20-5474111

United Kingdom

RICOH UK LTD. Ricoh House, 1 Plane Tree Crescent, Feltham, Middlesex, TW13 7HG Phone: +44-(0)20-8261-4000

Germany

RICOH DEUTSCHLAND GmbH Mergenthalerallee 38-40, 65760 Eschborn Phone: +49-(0)6196-9060

France

RICOH FRANCE S.A. 383, Avenue du Général de Gaulle BP 307-92143 Clamart Cedex Phone: +33-(0)1-40-94-38-38

Spain

RICOH ESPAÑA S.A. Avda. Litoral Mar, 12-14, 08005 Barcelona Phone: +34-(0)93-295-7600

Italy

RICOH ITALIA SpA Via della Metallurgia 12, 37139 Verona Phone: +39-045-8181500

Hong Kong

RICOH HONG KONG LTD. 21/F., Tai Yau Building, 181, Johnston Road, Wan Chai, Hong Kong Phone: +852-2862-2888

Singapore

RICOH ASIA PACIFIC PTE.LTD. 260 Orchard Road, #15-01/02 The Heeren, Singapore 238855 Phone: +65-830-5888

Introduction

This manual contains detailed instructions on the operation and maintenance of this machine. To get maximum versatility from this machine all operators should carefully read and follow the instructions in this manual. Please keep this manual in a handy place near the machine.

Please read the Safety Information before using this machine. It contains important information related to USER SAFETY and PREVENTING EQUIPMENT PROBLEMS.

••••

Notes:

Some illustrations might be slightly different from your machine.

Certain options might not be available in some countries. For details, please contact your local dealer.

Operator Safety:

This machine is considered a CDRH class 1 laser device, safe for office/EDP use. The machine contains two 15-milliwat, 760-800 nanometer wavelength, GaAIAs laser diodes. Direct (or indirect reflected) eye contact with the laser beam might cause serious eye damage. Safety precautions and interlock mechanisms have been designed to prevent any possible laser beam exposure to the operator.

Laser Safety:

The Center for Devices and Radiological Health (CDRH) prohibits the repair of laser-based optical unit in the field. The optical housing unit can only be repaired in a factory or at a location with the requisite equipment. The laser subsystem is replaceable in the field by a qualified Customer Engineer. The laser chassis is not repairable in the field. Customer engineers are therefore directed to return all chassis and laser subsystems to the factory or service depot when replacement or the optical subsystem is required.

Warning:

Use of controls or adjustment or performance of procedures other than those specified in this manual might result in hazardous radiation exposure.

Two kinds of size notation are employed in this manual. With this machine refer to the inch version.

For good copy quality, Ricoh recommends that you use genuine Ricoh toner.

Ricoh shall not be responsible for any damage or expense that might result from the use of parts other than genuine Ricoh parts in your Ricoh office product.

Power Source:

120V, 60Hz, 12A or more

Please be sure to connect the power cord to a power source as above. For details about power source, \Rightarrow P.189 *"Power Connection"*.

Notice:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one more of the following measures:

Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio /TV technician for help.

Warning

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note to users in Canada

Note:

This Class B digital apparatus complies with Canadian ICES-003.

Remarque concernant les utilisateurs au Canada

•••

Avertissement:

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

In accordance with IEC 60417, this machine uses the following symbols for the main power switch:

means POWER ON.

() means STAND BY.

Notice

Do not make copies of any item for which copying is prohibited by law.

Copying the following items is normally prohibited by local law:

Bank bills, revenue stamps, bonds, stock certificates, bank drafts, checks, passports, driver's licenses.

The color copy samples in this book may differ slightly from the actual copies due to printing effects.

The color on each Color key may differ slightly from that of the actual copy.

This machine is equipped with a function that prevents making counterfeit bank bills. Due to this function the original images similar to bank bills may not be copied properly.

Safety Information

When using your equipment, the following safety precautions should always be followed.

Safety During Operation

In this manual, the following important symbols are used:

A WARNING:

Indicates a potentially hazardous situation which, if instructions are not followed, could result in death or serious injury.

A CAUTION:

Indicates a potentially hazardous situation which, if instructions are not followed, may result in minor or moderate injury or damage to property.

A WARNING:

- Connect the power cord directly into a wall outlet and never use an extension cord.
- Disconnect the power plug (by pulling the plug, not the cable) if the power cable or plug becomes frayed or otherwise damaged.
- To avoid hazardous electric shock or laser radiation exposure, do not remove any covers or screws other than those specified in this manual.
- Turn off the power and disconnect the power plug (by pulling the plug, not the cable) if any of the following conditions exists:
 - You spill something into the equipment.
 - You suspect that your equipment needs service or repair.
 - Your equipment's cover has been damaged.
- Do not incinerate spilled toner or used toner. Toner dust might ignite when exposed to an open flame.
- Disposal can take place at our authorized dealer or at appropriate collection sites.
- Dispose of the used toner cartridge in accordance with the local regulation.

A CAUTION:

- Protect the equipment from dampness or wet weather, such as rain, snow, and so on.
- Unplug the power cord from the wall outlet before you move the equipment. While moving the equipment, you should take care that the power cord will not be damaged under the equipment.
- When you disconnect the power plug from the wall outlet, always pull the plug (not the cable).
- Do not allow paper clips, staples, or other small metallic objects to fall inside the equipment.
- Keep toner (used or unused) and toner cartridge out of the reach of children.
- For environmental reasons, do not dispose of the equipment or expended supply waste at household waste collection points. Disposal can take place at an authorized dealer or at appropriate collection sites.
- The inside of the machine could be very hot. Do not touch the parts with a label indicating the "hot surface". Otherwise it could cause a personal burn.
- Our products are engineered to meet high standards of quality and functionality, and we recommend that you only use the expendable supplies available at an authorized dealer.

How to Read This Manual

Symbols

In this manual, the following symbols are used:

A WARNING:

This symbol indicates a potentially hazardous situation that might result in death or serious injury when you misuse the machine without following the instructions under this symbol. Be sure to read the instructions, all of which are described in the Safety Information section.

A CAUTION:

This symbol indicates a potentially hazardous situation that might result in minor or moderate injury or property damage that does not involve personal injury when you misuse the machine without following the instructions under this symbol. Be sure to read the instructions, all of which are described in the Safety Information section.

WARNINGS and CAUTIONS are notes for your safety.

∰Important

If this instruction is not followed, paper might be misfed, originals might be damaged, or data might be lost. Be sure to read this.

Preparation

This symbol indicates the prior knowledge or preparations required before operating.

🖉 Note

This symbol indicates precautions for operation or actions to take after misoperation.

Limitation

This symbol indicates numerical limits, functions that cannot be used together, or conditions in which a particular function cannot be used.

℅ Reference

This symbol indicates a reference.

[]

Keys that appear on the machine's panel display.

[]

Keys built into the machine's operation panel.

TABLE OF CONTENTS

What You Can Do with This Machine	2
Guide To Components	4
Options	6
Operation Panel	7
Using the Touch Panel Display	8
Selecting Functions Entering Numbers	8 9
Color Sample Chart	10

1. Basics

Turning On the Power	11
Turning on the Main Power	11
Starting the Machine	12
Originals	14
Standard Size Originals	
Recommended Originals	14
Non-recommended Originals for the Document Feeder	14
Setting Originals on the Exposure Glass	16
Setting a Stack of Originals in the Document Feeder	17
Setting one Original at a Time in the Document Feeder	19
Setting Originals of Different Sizes in the Document Feeder	21
Setting Custom Sized Originals	22
Removing the Platen Cover to Copy a Large Original	24

2. Copying

Basic Procedure	25
Adjusting Copy Image Density	26
Twin color mode	31
Selecting the Original Image Type	33
Selecting the Copy Paper Size	36
Copying from the Bypass Tray	37
Auto Reduce/Enlarge	48
	49
Auto Off Mode	49
Interrupt copying	50
Auto Start	
Program	51
Check Modes	53
Counter	
Preset R/E	54

Zoom	57
Directional Magnification (%)	
Directional Size Magnification (inch)	60
Duplex—Making 2 Sided Copies	63
1 Sided \rightarrow 2 Sided	
$2 \text{ Sided} \rightarrow 2 \text{ Sided} \dots$	
Book \rightarrow 2 Sided	
$Multi \to 2 Sided$	
Series Copies	
$Book \rightarrow 1$ Sided	
2 Sided \rightarrow 1 Sided	
Combine	
Combine 2 Originals	
Combine 4 Originals	
Shifting the Image	
Shift Margin Adjustment	
Cover Sheet	
Front Cover Front and Back Cover	
Color Creation Color Conversion	
Color Erase	
Color Background	
Image Creation	
Mirror	
Positive/Negative	
Finishing	90
Sort	
Stack	92
Staple	93
Combination Chart	97

3. Adjustment and Color Memory

Color Balance	103
Color Balance Adjustment Color Balance Program	
Color Adjustment	
Image Adjustment Soft/Sharp, Contrast, Background Density, and Pastel U.C.R. Adjustment, A.C.S. Sensitivity and Auto Text/Photo Sensitivity	109
Program User Color Adjusting Colors Based on the Selected Color Mixing Colors Manually with the Number Keys Sampling the User Color (Option)	111 113

4. Area Editing (Option)

What is Area Editing?	117
How to Edit Areas	118
Designating Areas Designate Area Display Designate Area Tools Area Shapes Frame/Line Notes for Designating Areas	120 121 122 125
Selecting Modes for Designated Areas Area Editing Delete Area Save Area Frame/Line	131 132 133 134
Selecting Modes for Outside Designated Areas Area Shapes	
Changing Basic Settings for the Entire Image	138
Checking and Changing Areas Change Modes Adding Areas Erasing an Area Erasing a Group	140 141 142
Exiting Area Editing	145
Combination Chart for Area Editing	146

5. What to Do if Something Goes Wrong

If Your Machine Does not Operate as You Want	149
If You Cannot Make Copies as You Want	151
Loading Paper Non-recommended Paper for Paper Trays Loading Paper in the Paper Tray	154
La Changing The Toner Cartridge Pulling Out the Toner Cartridge Setting the New Toner Cartridge	156
℅ Clearing Misfeeds	161
📩 Adding Staples	164
📩 Removing Jammed Staples	166

6. Changing the Machine's Settings

Changing Paper Size	169
Changing Paper Size with the User Tools	
User Tools	173
Accessing the User Tools	173
Exiting from the User Tools	174
Setting You can Change with the User Tools (System Settings)	
Settings You can Change with the User Tools (Copier Features)	179


7. Others

Do's and Don'ts	187
Where to Put Your Machine Machine Environment Power Connection Access to Machine	188 189
Maintaining Your Machine Exposure Glass Platen Cover Document Feeder	191 191 191
Remarks Copier	
Use and Storage of Supplies Copy Paper Paper Storage Toner Storage	194 195


8. Specification

Mainframe	197
Document Feeder (Option)	201
20-bin Sorter Stapler (Option)	202
10-bin Sorter Stapler (Option)	203
3-bin Sorter (Option)	204
1000-sheet Tray Unit (Option)	205
1500-sheet Tray Unit (Option)	206
Multi-access	207
INDEX	209

What You Can Do with This Machine

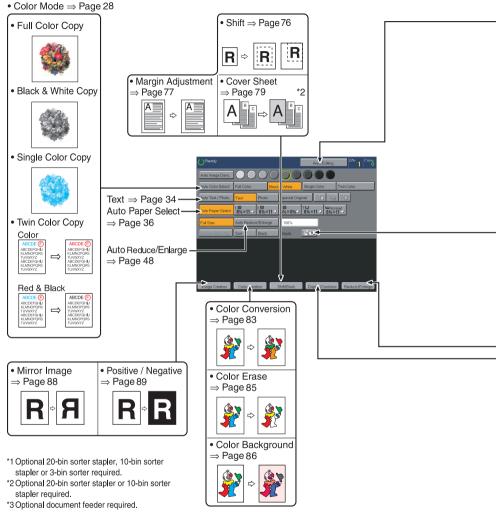


TLCX301N

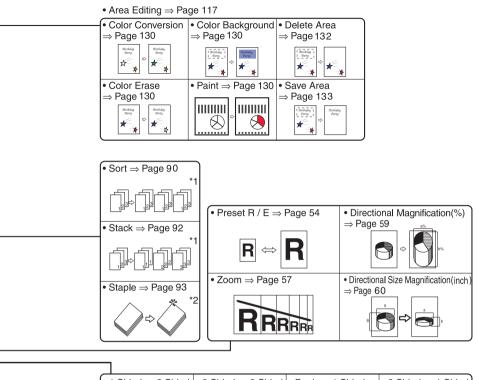

• 1 Sided \rightarrow 2 Sided	• 2 Sided \rightarrow 2 Sided	• Book \rightarrow 1 Sided	• 2 Sided \rightarrow 1 Sided
\Rightarrow Page 63	\Rightarrow Page 66	\Rightarrow Page 70	\Rightarrow Page 72
• Book \rightarrow 2 Sided	• Multi \rightarrow 2 Sided		•Combine 4 Originals
\Rightarrow Page 67	\Rightarrow Page 68		\Rightarrow Page75 *3
		2 1 💠 1 2	

Guide To Components

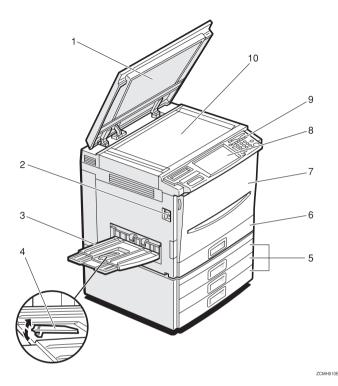

1. Platen cover (option)

Lower this cover over originals placed on the exposure glass for copying.

2. Main power switch

To start the machine, turn on this switch.

🖉 Note

□ If the machine does not operate after turning on the operation switch, check if the main power switch is turned on. If it is off, turn it on.

3. Copy tray

Completed copies are delivered here.

4. Stopper

When you copy onto thin paper, raise this to prevent curling.

5. Paper tray

Set paper here. \Rightarrow P.154 " \checkmark Loading Paper".

6. Auto duplex tray

Use to make two-sided copies.

7. Front cover

Open to access the inside of the machine.

8. Operation panel


 \Rightarrow P.7 "Operation Panel".

9. Operation switch

Press this switch to turn the power (on the **On** indicator goes on). To turn off the power off, press this switch again (the **On** indicator goes off).

10. Exposure glass

Position originals here face down for copying.

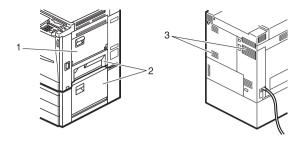

1. Bypass tray

Use to copy onto OHP transparencies, adhesive labels, translucent paper, post cards, and custom size paper, \Rightarrow P.37 "Copying from the Bypass Tray".

2. Right side cover/Lower right cover


Open this cover to remove jammed paper.

3. Ventilation holes

Prevent overheating. Do not obstruct the ventilation holes by placing or leaning an object near them. If the machine overheats, a fault might occur.

Options

This machine can be provided with the following options:

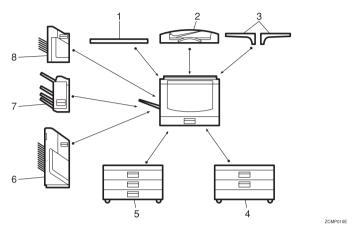

1. Platen cover

Lower this cover over originals placed on the exposure glass for copying.

2. Document feeder (ADF)

Insert a stack of originals here. They will be fed automatically.

3. Original tray

Put your originals.

4. 1000-sheet tray unit (two 500-sheet trays)

Consists of two paper trays.

Other Options:

- Controller Interface Unit
- Printer Controller

5. 1500-sheet tray unit (three 500-sheet trays)

Consists of three paper trays.

6. 20-bin sorter stapler

Sorts, stacks, and staples copies.


7. 3-bin sorter

Sorts and stacks copies.

8. 10-bin sorter stapler

Sorts, stacks, and staples copies.

Operation Panel

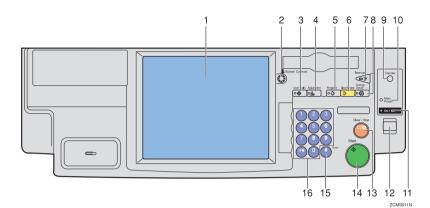

1. Touch panel display

You can see the operation status and messages here.

2. Screen Contrast knob

You can change the brightness of the display.

3. [User Tools] key

Press to change the default setting. \Rightarrow P.173 "User Tools".

4. [Adjustment] key

Press to adjust the image or color balance, or to make user colors. \Rightarrow P.103 "Adjustment and Color Memory".

5. [Program] key

Press to select the program mode. \Rightarrow P.51 "*Program*".

6. [Clear Modes] key

Press to clear the previously entered settings.

7. [Interrupt] key

Press to make interrupt copies. \Rightarrow P.50 "Interrupt copying".

8. [Energy Saver] key

Press to enter/exit the Energy Saver mode. \Rightarrow P.49 "Energy Saver Mode".

9. [Counter] key

Press to display the total number of copies made.

10. Main Power indicator

This indicator goes on when the main power switch is turned on, and goes off when the switch is turned off.

11. On indicator

This indicator goes on when the operation switch is turned on, and goes off when the switch is turned off.

12. Operation switch

Press this switch to turn the power on (the **On** indicator goes on). To turn the power off, press this switch again (the **On** indicator goes off).

13. [Clear/Stop] key

Press to cancel the copy number entered. While copying, press to stop copying. This key is also used to clear data.

14. [Start] key

Press to start copying.

15. [#] key Press to enter data in selected modes.


16. Number keys

Use to enter the desired number of copies. They are also used to enter data.

Using the Touch Panel Display

Selecting Functions

On the touch panel display, you can find keys, instructions and messages. By pressing keys on the display, you can select or deselect functions, and enter data for the selected modes. If you make a mistake and wish to clear the current settings, press the **[Clear Modes]** key.

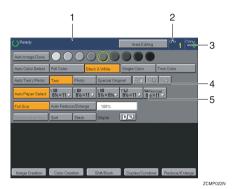

1. Messages and instructions appear here.

2. Total number of copies to make

3. COPY COUNTER

Counts number of copies made so far.

🖉 Note

□ You can select whether the copy counter counts up (counter up) or counts down (counter down). If you want to change the setting, \Rightarrow P.175 "System settings".

This machine's features are accessed by simply pressing the name of the feature and following the instructions that come up on the display.

4. Keys that have been selected.

5. Keys that have the option of being selected.

Keys that do not have the option of being selected are fainter.

In this manual, keys on the display are indicated as follows:

Example:

- Key on the display: Auto Paper Select
- In the manual: [Auto Paper Select] key

🖉 Note

□ Do not press the touch panel display with any hard or sharp object.

Entering Numbers

When the display prompts you to enter a number, type in the number with the number keys and press the **[#]** key on the display to accept it.

Should you make a mistake:

- If you have not pressed the [#] key yet, press the [Clear] key and then re-enter it. If there is not the [Clear] key on the display, press the [Clear/Stop] key.
- If you have already pressed the **[#]** key, press the item you wish to change on the display and re-enter the number with the number keys. Press the **[#]** key on the display to accept it.

Checking the Functions You Have Selected

When you set one or more copy settings, the last item you selected will remain on the screen.



1. [Check Modes] key

To check all the settings you have set so far, press the [Check Modes] key.


OReady	Area B	diling 0% 1 Conv	OReady		Area Edit	ing 0% Conv
Auto Image Dens.			Auto Image Dens.	0 0 0 0	$\bigcirc \bigcirc $	
Auto Color Select	Full Color Black & White Single Colo	Twin Color	Auto Color Select	Full Color Black	Single Color	Twin Color
Auto Text / Photo	Text Photo Special Original		Auto Text / Photo	Text Photo	Special Original	ila il-
Auto Paper Select	1 世 8½×11 マ 8½×11 リ 3 世 8½×11 マ 8½×11 リ 5½×8½マ 8½×11 リ	Normal 8½×11 ₽	Auto Paper Select	1 Ш 2 Ш 8½×11 ☑ 8½×11 ☑	3 Ш TU 5½×8½ン 8½×11 D 8	Normal ½×11 ₽
Full Size	Auto Reduce/Enlarge 73%		Full Size	Auto Reduce/Enlarge	73%	
Custom Size Orig.	Sort Stack Steple: R.B.	Check Modes	Custom Size Orig	Sort Stack	Steple: B B	Previous
Image Creation	Color Creation Shift/Book Duplex/C	ombine Reduce/Enlarge				Reduce/Enlarge
Select reproduction	ratio.	100%				Preset R/E
•	200% 121% 129% 15	5% 200% 400%				73% 12%-11
- +	25% 50% 65% 73% 7 10%-11 10%	3% 85% 93% 4-11 % 85%				•
Input Ratio	Preset R/E / Zaom Directional Mag.		Image Creation	Color Creation S	hit/Book Duplex/Com	ibine
						ZCMP050N

Color Sample Chart

This is the User Color sample. You can mix the basic colors to make your own colors (User Color).

🖉 Note

□ The color sample might differ somewhat from actual copies due to printing effects.

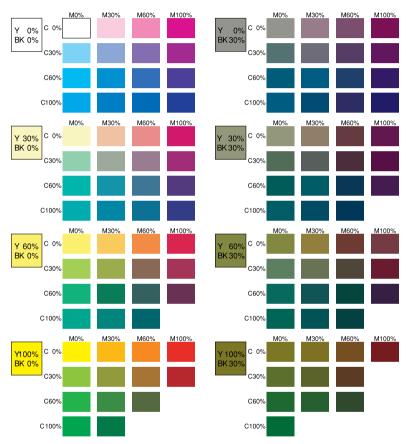

GCCLCT1E

1. Basics

Turning On the Power

To start the machine, press the operation switch to turn the power on.

🖉 Note

□ This machine automatically enters Energy Saver mode or turns itself off if you do not use the machine for a while. For details, ⇒ P.49 "Energy Saver Mode". For details Auto Timer, ⇒ P.175 "System settings".

Power Switches

This machine has the operation switch and main power switch.

.

Operation switch (right side of the operation panel)

Press this switch to activate the machine. When the machine has warmed up, you can make copies.


Main power switch (left side of the machine)

When the machine is not to be used for an extended period of time, turn off the main power switch.

Turning on the Main Power


1 Make sure that the power cord is firmly plugged into the wall outlet.

2 Turn on the main power switch.

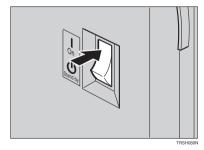

Starting the Machine

1 Press the operation switch to make the On indicator go on.

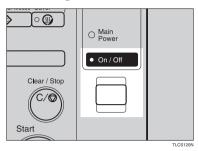

Note

- □ If the power is not turned on when the operation switch is pressed, check if the main power switch is on. If off, turn it on.
- During the warm-up period (Less than 270 seconds), you can use the Auto Start function. \Rightarrow P.51 "Auto Start".

When the machine is set for user codes

1 Enter your user code using the number keys. Then press the **[#]** key.

Note

□ To prevent others from making copies with your user code, press the [Clear Modes] key and the [Clear /Stop] key simultaneously after copying.

Reference

For more about user codes, \Rightarrow P.179 "General Features".

When the Energy Saver indicator is lit

The machine is in Energy Saver mode.

Press any key.

The machine will return to the ready condition.

Note 🖉

□ The machine will also return to the ready condition when an original is set in the document feeder, or when the platen cover or the document feeder is opened.

Shutting down the machine

1 Press the operation switch to make the On indicator go off.

Turning off the main power

1 Turn off the main power switch.

The main power indicator of the control panel goes off.

Originals

Standard Size Originals

The machine will detect originals of the following sizes and directions as standard size originals:

When you set originals on the exposure glass

Metric version	A3, B4, C, A4, C, B5, C, 8 ¹ / ₂ "×13", 8 ¹ / ₄ "×13", 8 ¹ / ₄ "×13", 8", 8", 8", 8", 8", 8", 8", 8", 8", 8
Inch version	11"×17"□, 10"×14"□, 8 ¹ /2"×14"□, 8 ¹ /2"×11"□

When you set originals in the document feeder

	A3D, B4D, A4D, B5D, A5D, A5D, B6D, 11"×17"D, 8 ¹ / ₂ "×11"D, 8
Inch version	A4 \bigcirc [], 11"×17" \bigcirc , 11"×15" \bigcirc , 10"×14" \bigcirc , 8 ¹ / ₂ "×14" \bigcirc , 8 ¹ / ₂ "×13" \bigcirc , 8 ¹ / ₂ "×11" \bigcirc [], 8 ¹ / ₄ "×13" \bigcirc , 8"×13" \bigcirc , 8"×10" \bigcirc , 5 ¹ / ₂ "×8 ¹ / ₂ " \bigcirc []

 *1 $8^{1}/_{2}$ "×13", $8^{1}/_{4}$ "×13" or 8"×13" can be set by your service representative.

Recommended Originals

₽ Reference

For originals that the document feeder can handle, \Rightarrow P.201 "Document Feeder (Option)".

Non-recommended Originals for the Document Feeder

🖉 Note


- The following types of originals are not recommended for use with the document feeder. Place them directly on the exposure glass.
 - Originals thicker than 128g/m², 34 lb
 - Originals thinner than 40g/m², 11 lb
 - For originals between 40 and 52g/m², 11 and 14 lb, the document feeder must be set to ADF Thin paper mode with the user tools.
 - Originals larger than A3, 11"×17"
 - Originals smaller than B6 \Box , $5^{1}/_{2}$ " × $8^{1}/_{2}$ " \Box
 - Folded, curled, creased, or damaged originals
 - Mailing labels, or perforated originals
 - Bound, stapled, or clipped originals

- OHP transparencies
- Translucent paper
- Pasted originals
- Damp originals
- Sticky originals
- Wavy originals
- Originals that are not made from paper
- Originals written in pencil on both sides, or two-sided carbon originals
- Thermal fax paper, CRO (camera ready originals) or aluminum foil
- Books, pamphlets, and booklets

Setting Originals on the Exposure Glass

1 Lift the platen cover or the document feeder.

2 Set the original face down on the exposure glass. The original should be aligned to the rear left corner.

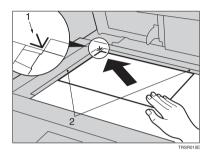

- **1.** Reference mark
- 2. Scale
 - 🖉 Note

□ Start with the first page to be copied.

1 Lower the platen cover or the document feeder.

Setting a Stack of Originals in the Document Feeder


You can insert a stack of originals into the document feeder. These originals are individually fed onto and removed from the exposure glass.

🖉 Note

- □ Some originals are unsuitable for the document feeder. \Rightarrow P.14 "Non-recommended Originals for the Document Feeder".
- Do not press down or hold originals after inserting them.
- While originals are fed from the original table to the exposure glass, do not pull them out.
- Do not lift the document feeder until the original has been completely fed out.


Correct any curl, fold, or crease in the originals before setting them.

2 Make sure the Insert Original indicator is lit and the exposure glass is clear of originals.

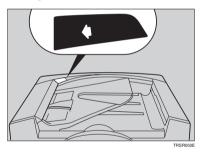

3 Adjust the guide to the original size.

4 Set the originals <u>face up</u> into the document feeder until the Insert Original indicator goes off.

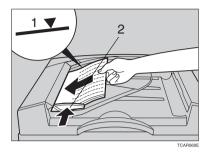

- 1. Limit mark
- 2. Original guide

🖉 Note

- \Box The last page should be on the bottom.
- □ The original guide must touch the front side of the originals.
- □ Do not stack originals above the limit mark.

Setting one Original at a Time in the Document Feeder


If you set one original at a time in the document feeder, the second and subsequent originals can be fed and copied automatically without pressing the **[Start]** key.

🖉 Note

- Do not press down or hold originals after inserting them.
- While originals are fed from the original table to the exposure glass, do not pull them out.
- Do not lift the document feeder until the original has been completely fed out.

Correct any curl, fold, or crease in the originals before setting them.

2 Make sure the Insert Original indicator is lit and the exposure glass is clear of originals.

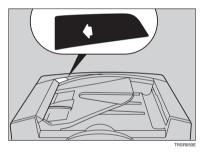

Adjust the guide to the original size.

4 Set the original <u>face up</u> into the document feeder until the Insert Original indicator goes off.

🖉 Note

- □ If you are copying a stack of originals one sheet at a time and you want to keep them in order, start with the last page of the originals.
- □ The original guide must touch the front side of the original.

5 Press the **[Start]** key.

1 While the Auto Feed indicator is lit after an original is fed, set the next original. The original is automatically fed and copied.



🖉 Note

□ You can adjust the time the machine waits before being ready for the next original with the user tools.

Setting Originals of Different Sizes in the Document Feeder

Preparation

To use this function, you have to select ADF Mixed Sizes mode with the user tools. \Rightarrow P.184 "*Duplex/ADF/Sorter*".

You can insert a stack of originals of different standard sizes (e.g. A4, B5 etc.) into the document feeder. These originals are individually fed onto and removed from the exposure glass.


Limitation

- □ The weight of originals that can be set with this function is $52 81g/m^2$, 14 20 lb.
- □ Smaller size originals might be skewed a little.

🖉 Note

- □ If your stack of originals contains pages of different sizes, make sure that:
 - Longer originals are at the bottom of the stack, and shorter originals are at the top.
 - All originals are flush with the back fence of the document feeder.

1 Align the rear and left edges of the originals as shown in the illustration.

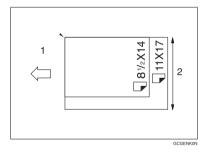

- **1.** Document feeder feed direction.
- 2. Vertical size

2 Adjust the guide to the widest original size.

B Set the aligned originals face up into the document feeder.

Setting Custom Sized Originals

When copying from custom sized originals, specify the size of the originals so that copies are well aligned.

Limitation

□ You must set your custom size originals on the exposure glass.

₽ Reference

For the standard sizes the machine can detect, \Rightarrow P.14 "Standard Size Originals".


🖉 Note

□ The dimensions you can enter must be within the following ranges:

Vertical size	50 - 297mm (in 1mm steps), 2.0" - 11.7" (in 0.1" steps)
Horizontal size	50 - 432mm (in 1mm steps), 2.0" - 17" (in 0.1" steps)

1 Select the copy paper size.

2 Press the [Custom Size Orig.] key.

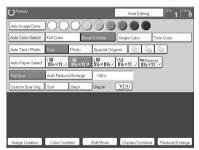

B Make sure that the [Orig. Horiz.] key is selected. Enter the horizontal size with the number keys, then press the [#] key.



🖉 Note

□ To change the value entered, press the **[Clear]** key and enter a new value.

Press the [Orig. Vert.] key and enter the vertical size with the number keys, then press the [#] key.

5 Press the [OK] key.

5 Set your original on the exposure glass, then press the **[Start]** key.


Removing the Platen Cover to Copy a Large Original

You can remove the platen cover to copy a large (more than A3, $11" \times 17"$) original.

🖉 Note

□ You cannot remove the document feeder.


To remove the platen cover, lift it out.

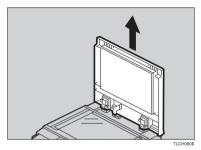

🖉 Note

□ Lift the platen cover with both hands. Place the removed cover on a flat surface, such as a desk, and where it will not be damaged.

To reset the platen cover, align the pins of the platen cover and the holes of the copier. Then push the platen cover onto the copier.

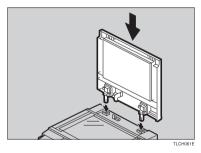


2. Copying

Basic Procedure

1 Set your original on the exposure glass or in the document feeder. ⇒ P.28 *"Full color copy mode",* ⇒ P.33 *"Auto Text/Photo mode",* or ⇒ P.36 *"Auto paper select".*


2 Make sure that the [Black & White], [Text], [Auto Paper Select], [Full Size] keys are selected.

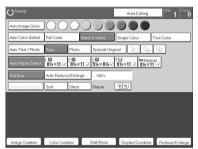

🖉 Note

- \Box Full Color copy mode. \Rightarrow P.28 "Full color copy mode".
- □ Auto Text/Photo. \Rightarrow P.33 "Auto Text/Photo mode".
- \Box Auto Paper Select. \Rightarrow P.36 "Auto paper select".


Enter the number of copies required using the number keys.

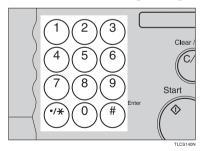

🖉 Note

□ To change the number entered, press the **[Clear/Stop]** key, then enter the new number.

4 Press the [Start] key.

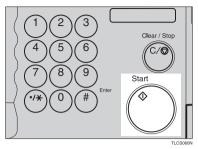

🖉 Note

- □ To stop the machine during a multi-copy run, press the [Clear/Stop] key.
- □ If you want to change the settings, press the **[Clear/Stop]** key. If you want to resume the copy run, press the **[Start]** key.
- □ To return the machine to the initial condition after copying, press the [Clear Modes] key.

Adjusting Copy Image Density

Image density affects the contrast of copies. With these functions you can control the image density so that copies match originals. Make the selection you require then set your originals and press the **[Start]** key.

Auto image density

The machine automatically controls the image density.

If Auto Color Select mode is selected, select other color modes to cancel it. ⇒ P.28 "Selecting a Color Mode".

2 Press the [Auto Image Density] key.




Manual image density

If you require darker or lighter copies, adjust the image density yourself.

1 If [Auto Image Density] key is selected, press it to cancel it.

2 Press the desired color density level.

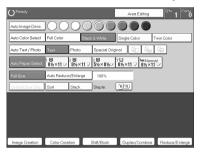


Combined auto and manual image density

Use when copying originals with a dirty background (such as newspapers). You can adjust the foreground density while masking out the dark background.

If Auto Color Select mode is selected, select other color modes to cancel it. ⇒ P.28 "Selecting a Color Mode".

2 Press the [Auto Image Density] key.

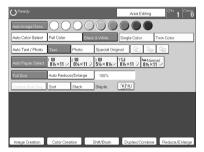

3 Press the desired color density level.

Selecting a Color Mode

Select a color mode that best suits your originals and copying requirements.

Auto color select mode

The machine automatically detects whether the original has color parts or not. Originals with only black images will be copied in Black & White mode. Originals with some color areas will be copied in Full Color mode.

🖉 Note

If you make one copy set of a black original using the document feeder, it is recommended to select Black & White mode. If you choose Auto Color Select mode, the machine will reset the color selection for every original page, taking a long time to complete the job.

Press the [Auto Color Select] key.



2 Set your originals, then press the **[Start]** key.


Full color copy mode

This function makes copies in full color.

🖉 Note

□ You can adjust the overall color tone of copies. \Rightarrow P.103 "Color Balance".

1 Make sure that the [Full Color] key is selected.

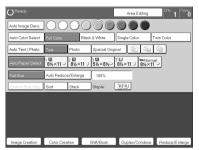


2 Set your originals, then press the **[Start]** key.

Black & White copy mode

This function makes copies in black.

Press the [Black & White] key.

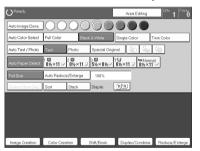

2 Set your originals, then press the [Start] key.

Single color mode

This function makes copies in single colors.

🖉 Note

- 12 basic colors: Yellow, Orange, Red, Magenta, Green, Cyan, Blue, Yellow Green, Beige, Marine Blue, Pink, Purple
- □ 15 user colors: Up to 15 colors can be manually mixed and stored in memory. \Rightarrow P.113 "Mixing Colors Manually with the Number Keys".

Basic color

Press the [Single Color] key.

2 Select the color.



🖉 Note

 \Box You can select the color density level.

Press the [OK] key.

Set your originals, then press the [Start] key.

User colors

🖉 Note

□ When Single Color copying, user colors might come out lighter.

Program User Color, \Rightarrow P.111 "Program User Color".

Press the [Single Color] key.

2 Press the [User Color 10] key.

O ^{Ready}	Area Editing 0% 1
Single Color Select color below.	Cancel OK
Each color can be adjusted with four density levels. Basic Color User Color	
User Color1 User Color2 User Color3 User Color4	User Color5
User Color6 User Color7 User Color8 User Color9	
User Color11 User Color12 User Color13 User Color14	Liser Color15 Density level
Image Creation Color Creation Shift/Book	Duplex/Combine Reduce/Enlarge

B Select the color.



🖉 Note

□ You can select the color density level.

Press the [OK] key.

5 Set your originals, then press the **[Start]** key.

Twin color mode

Two methods are available:

Color Copy

Reproduces black areas of the original in one selected color and areas in other colors using the second selected color.

🖉 Note

- You can have colored areas copied in one of the following colors: Red, Green, Blue, Yellow, Cyan, Magenta, Yellow Green, Orange, Marine Blue, Beige, Pink, Purple and User Colors
- You can have black parts copied in one of the following colors: Red, Green, Blue, Yellow, Cyan, Magenta, Yellow Green, Orange, Marine Blue, Beige, Pink, Purple, and User Colors

Red & Black

Reproduces red areas of the original in red, and areas in other colors using black.

🖉 Note

□ You cannot change the color.

Twin Color (Color Copy)

Press the [Twin Color] key.

2 Select the color you want to copy the color parts of the original in.

Twin Color			Cancel	OK.
Change Color Por Press [OK] key. Rosic Color	tion (Not Black Portic	n) of the original t	o one of the colors liste Black	d below Red & Black Col
Yellow	Beige	Orange	Red	
Yellow Green	Oyan	Pink	Magenta	
Green	Marine Blue	Blue	Purple	

B If you wish to copy black parts using a different color, press the [Change Black] key.

🖉 Note

 \Box If you don't want to do this, go to step **\Box**.

4 Select the color you want to copy the black parts of the original in. Then press the [OK] key.

5 Press the [OK] key.

6 Set your originals, then press the **[Start]** key.

Twin Color (Red & Black Copy)

🖉 Note

□ If Color Sensitivity is set to wide, the machine recognizes orange or purple as red. This adjustment affect Color Erase or Color Conversion. ⇒ P.108 "Image Adjustment"

Press the [Twin Color] key.

2 Press the [Red & Black Color] key, then press the [OK] key.



E Set your originals, then press the [Start] key.

Selecting the Original Image Type

To optimize the likeness between copies and originals, select an image type that matches your originals.

🖉 Note

□ You can adjust the readability of black lettering in colored areas, \Rightarrow P.106 "Color Adjustment".

Auto Text/Photo mode

This mode automatically detects the areas of your original containing text or photographs. The text areas are copied using Text mode, and the photographs are copied with Photo mode.

🖉 Note

- □ There are 3 types of Photo mode:
 - I [Press Print]:

Use when copying photographs or pictures that are printed on paper (e.g. magazines).

- **[Glossy Photo]**: Use when copying developed photographs.
- **[2nd Generation]**: Use when copying copies or originals generated by printers.

1 Make sure that the [Auto Text / Photo] key is selected.




2 Select the photo mode.

3 Set your originals, then press the **[Start]** key.

Text mode

This modes is suitable for copying originals consisting of characters, line diagrams, and letter, but not photographic images.

Press the [Text] key.

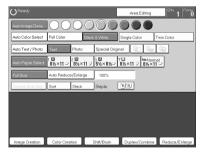

2 Set your originals, then press the **[Start]** key.

Photo mode

This mode is suitable for copying originals consisting of pictures, photographs, and screened letters/areas, but not solid letters.

🖉 Note

- □ There are 3 types of Photo mode:
 - In [Press Print]: Use when copying photographs or pictures that are printed on paper (e.g. magazines).
 - 🕞 [Glossy Photo]: Use when copying developed photographs.
 - (a) [2nd Generation]: Use when copying copies or originals generated by printers.

Press the [Photo] key.

 


2 Select the photo mode.

Set your originals, then press the [Start] key.

Special original mode

Use this function for originals written in highlight pen, originals printed from inkjet printers, or maps.



2 Select the original type from the [Highlight Pen], [Inkjet Output], and [Map] key.



E Set your originals, then press the [Start] key.

Selecting the Copy Paper Size

Select a suitable size of copy paper based on the original size and the reproduction ratio.

Auto paper select

The machine automatically selects a suitable size of copy paper based on the original size and the reproduction ratio.


₽ Reference

Regarding functions that cannot be used together with this function, \Rightarrow P.97 "Combination Chart".

🖉 Note

□ Sizes of certain originals might not be detected depending on the originals size and type. In this case, select the size manually.


1 Make sure that the [Auto Paper Select] key is selected.

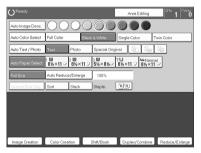

Manual paper select

You can select the copy paper manually.

Select the copy paper.

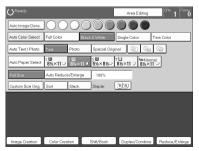

Vilmage Rotation

If the direction in which your original is set (landscape or portrait) is different from the paper you are copying onto, this function rotates the original image by 90° and fits it on the copy paper. This function works when Auto Select or Auto Reduce/Enlarge are selected. \Rightarrow P.179 "General Features"

🖉 Note

□ Image Rotation does not work with the following functions:

- Area Editing
- Series Copies (2-sided \rightarrow 1-sided)
- Duplex Copies (1-sided \rightarrow 2-sided, 2-sided \rightarrow 2-sided)
- OHP Slip Sheet

Copying from the Bypass Tray

Use the bypass tray to copy onto thick paper, adhesive labels, OHP transparencies, or custom size paper. Also use the bypass tray to copy onto the reverse side of paper that has already been copied onto.

🖉 Note


□ The following limitations apply:

$\begin{array}{ c c c c c c c c c c c c c c c c c c c$	Acceptable paper types	Normal paper (52 - 105g/m ²	14 - 28 lb)				
Post cards OHP transparencies Adhesive labels Translucent paper Standard size Metric version: Standard size Difference Standard size Metric version: Difference Difference Standard size Difference Standard size Difference Standard size Difference Standard size Difference Difference Difference Standard size Difference Difference Difference Standard size Metric version: Difference Difference Standard size Metric version: Vertical: 100 - 305mm (in 1mm steps) Horizontal: 140 - 457mm (in 1mm steps) Inch version: Vertical: 3.9" - 12.0" (in 0.1" steps) I: Horizontal Steed direction Number of sheets that can be set at one time	receptable paper types	Normal paper (52 - $105g/m^2$, 14 - 28 lb)					
OHP transparencies Adhesive labels Translucent paperMetric version: □: A3, B4, A4, B5, A5, B6, A6, 11" × 17", 12" × 18" □: A4, B5, A5, 8 ¹ /2" × 11" Inch version: □: 12" × 18", 11" × 17", 8 ¹ /2" × 11", 5 ¹ /2" × 8 ¹ /2" □: 8 ¹ /2" × 11", 5 ¹ /2" × 8 ¹ /2" □: 8 ¹ /2" × 11", 5 ¹ /2" × 8 ¹ /2"Custom sizeMetric version: □: 12" × 18", 11" × 17", 8 ¹ /2" × 11", 5 ¹ /2" × 8 ¹ /2" □: 8 ¹ /2" × 11", 5 ¹ /2" × 8 ¹ /2"Custom sizeMetric version: Vertical: 100 - 305mm (in 1mm steps) Horizontal: 140 - 457mm (in 1mm steps)I: Horizontal 2: Vertical 3: Feed directionNumber of sheets that can be set at one timeNormal paper: 50 sheets Thick paper, OHP transparencies: 30 sheets (Smaller than 8" × 13"), 15 sheets (8" × 13" or large) Adhesive labels: 30 sheets Translucent paper: 50 sheets							
Adhesive labels Translucent paperMetric version: D: A3, B4, A4, B5, A5, B6, A6, 11" × 17", 12" × 18" D: A4, B5, A5, B ¹ /2" × 11" Inch version: D: 12" × 18", 11" × 17", 8 ¹ /2" × 11", 5 ¹ /2" × 8 ¹ /2" D: 8 ¹ /2" × 11", 5 ¹ /2" × 8 ¹ /2" D: 8 ¹ /2" × 11", 5 ¹ /2" × 8 ¹ /2"Custom sizeMetric version: D: 12" × 18", 11" × 17", 8 ¹ /2" × 8 ¹ /2" D: 8 ¹ /2" × 11", 5 ¹ /2" × 8 ¹ /2"Custom sizeMetric version: Vertical: 100 - 305mm (in Imm steps) Horizontal: 140 - 457mm (in 1mm steps) Horizontal: 140 - 457mm (in 1mm steps) Horizontal: 5.5" - 18.0" (in 0.1" steps)Number of sheets that can be set at one timeNormal paper: 50 sheets Thick paper, OHP transparencies: 30 sheets (Smaller than 8" × 13"), 15 sheets (8" × 13" or large) Adhesive labels: 30 sheets Translucent paper: 50 sheets		OHP transparencies					
Translucent paperStandard sizeMetric version: $\Box: A3, B4, A4, B5, A5, B6,A6, 11" × 17", 12" × 18"\Box: A4, B5, A5, 8^1/2" × 11"Inch version:\Box: 12" × 18", 11" × 17", 8^1/2" × 11", 5^1/2" × 8^1/2"\Box: 8^1/2" × 11", 5^1/2" × 8^1/2"Custom sizeMetric version:\Box: 8^1/2" × 11", 5^1/2" × 8^1/2"Output:\Box: 100 - 305mm (inImm steps)Horizontal: 140 - 457mm (inImm steps)Horizontal: 140 - 457mm (inImm steps)I: Horizontal2: Vertical3: Feed directionNumber of sheets that can beset at one timeNormal paper: 50 sheetsThick paper, OHP transparencies: 30 sheets (Smaller than 8"× 13"), 15 sheets (8" × 13" or large)Adhesive labels: 30 sheetsTranslucent paper: 50 sheets$							
Standard sizeMetric version: $\Box: A3, B4, A4, B5, A5, B6, A6, 11" \times 17", 12" \times 18"$ $\Box: A4, B5, A5, 8^{1}/2" \times 11"$ Inch version: $\Box: 12" \times 18", 11" \times 17", 8^{1}/2" \times 11", 5^{1}/2" \times 8^{1}/2"$ $\Box: 8^{1}/2" \times 11", 5^{1}/2" \times 8^{1}/2"$ $\Box: 8^{1}/2" \times 11", 5^{1}/2" \times 8^{1}/2"$ Custom sizeMetric version: Vertical: 100 - 305mm (in Imm steps) Horizontal: 140 - 457mm (in Imm steps)I: Horizontal 2: Vertical 3: Feed directionNumber of sheets that can be set at one timeNormal paper: 50 sheetsThick paper, OHP transparencies: 30 sheets (Smaller than 8" $\times 13"$), 15 sheets (8" $\times 13"$ or large)Adhesive labels: 30 sheets Translucent paper: 50 sheets							
Number of sheets that can be set at one timeNormal paper: 50 sheets Translucent paper: 50 sheets Translucent paper: 50 sheets $\Box: A3, B4, A4, B5, A5, B6, A6, 11" \times 17", 12" \times 18"$ $\Box: A4, B5, A5, 8^{1}/_{2}" \times 11"$ $\Box: Custom size\Box: 12" \times 18", 11" \times 17", 8^{1}/_{2}" \times 11", 5^{1}/_{2}" \times 8^{1}/_{2}"\Box: 11", 5^{1}/_{2}" \times 8^{1}/_{2}"\Box: 11", 5^{1}/_{2}" \times 8^{1}/_{2}"\Box: 11", 5^{1}/_{2}" \times 8^{1}/_{2}"\Box: 100 - 305mm (inImm steps)Horizontal: 140 - 457mm (inImm steps)Horizontal: 140 - 457mm (inImm steps)Horizontal: 5.5" - 18.0" (in0.1" steps)Horizontal: 5.5" - 18.0" (in0.1" steps)Number of sheets that can beset at one timeNormal paper: 50 sheetsThick paper, OHP transparencies: 30 sheets (Smaller than 8"\times 13"), 15 sheets (8" \times 13" or large)Adhesive labels: 30 sheetsTranslucent paper: 50 sheets$		Translucent paper					
$\begin{array}{ c c c c c c c c c c c c c c c c c c c$		Standard size	Metric version:				
Inch version: Image: 12" × 18", 11" × 17", 8 ¹ /2" × 11", 5 ¹ /2" × 8 ¹ /2" Image: 12" × 18", 11" × 17", 8 ¹ /2" × 11", 5 ¹ /2" × 8 ¹ /2"Custom sizeMetric version: Vertical: 100 - 305mm (in Imm steps) Horizontal: 140 - 457mm (in Imm steps)1: Horizontal 2: Vertical 3: Feed directionInch version: Vertical: 3.9" - 12.0" (in 0.1" steps)Number of sheets that can be set at one timeNormal paper: 50 sheets Thick paper, OHP transparencies: 30 sheets (Smaller than 8" × 13"), 15 sheets (8" × 13" or large) Adhesive labels: 30 sheets Translucent paper: 50 sheets							
Number of sheets that can be set at one timeNormal paper: 50 sheets Translucent paper: 50 sheetsMetric version: Vertical: 100 - 305mm (in Imm steps) Inch version: Vertical: 3.9" - 12.0" (in 0.1" steps)Number of sheets that can be set at one timeNormal paper: 50 sheets Thick paper, OHP transparencies: 30 sheets (Smaller than 8" $\times 13"$), 15 sheets (8" $\times 13"$ or large)			\Box : A4, B5, A5, 8 ¹ / ₂ " × 11"				
Number of sheets that can be set at one timeNormal paper: 50 sheetsNormal paper: 50 sheetsNormal paper: 50 sheetsNumber of sheets that can be set at one timeNormal paper: 50 sheetsSheets (Smaller than 8" × 13"), 15 sheets (8" × 13" or large)			Inch version:				
I: Horizontal 2: Vertical 3: Feed directionMetric version: Vertical: 100 - 305mm (in 1mm steps) Horizontal: 140 - 457mm (in 1mm steps) Inch version: Vertical: 3.9" - 12.0" (in 0.1" steps)Number of sheets that can be set at one timeNormal paper: 50 sheets Thick paper, OHP transparencies: 30 sheets (Smaller than 8" $\times 13"$), 15 sheets (8" $\times 13"$ or large) Adhesive labels: 30 sheets Translucent paper: 50 sheets			$\square: 12" \times 18", 11" \times 17", 8^{1}/_{2}" \times$				
Custom sizeMetric version: Vertical: 100 - 305mm (in Imm steps) Horizontal: 140 - 457mm (in Imm steps)1:			11", $5^1/_2$ " × $8^1/_2$ "				
Image: set at one timeNormal paper: 50 sheets Thick paper, OHP transparencies: 30 sheets (Smaller than 8" × 13"), 15 sheets (8" × 13" or large)Vertical: 100 - 305mm (in Imm steps) Horizontal: 140 - 457mm (in Imm steps) Inch version: Vertical: 3.9" - 12.0" (in 0.1" steps)Number of sheets that can be set at one timeNormal paper: 50 sheets Thick paper, OHP transparencies: 30 sheets (Smaller than 8" × 13"), 15 sheets (8" × 13" or large) Adhesive labels: 30 sheets Translucent paper: 50 sheets			$\square: 8^1/_2$ " × 11", $5^1/_2$ " × $8^1/_2$ "				
Number of sheets that can be set at one time Normal paper: 50 sheets Number of sheets that can be set at one time Normal paper: 50 sheets Thick paper, OHP transparencies: 30 sheets (Smaller than 8" × 13"), 15 sheets (8" × 13" or large) Adhesive labels: 30 sheets Translucent paper: 50 sheets			Vertical: 100 - 305mm (in 1mm steps) Horizontal: 140 - 457mm (in				
I: Horizontal Steps) 1: Horizontal Horizontal: 5.5" - 18.0" (in 0.1" steps) 2: Vertical Output 3: Feed direction Normal paper: 50 sheets Number of sheets that can be set at one time Normal paper: 50 sheets Thick paper, OHP transparencies: 30 sheets (Smaller than 8" × 13"), 15 sheets (8" × 13" or large) Adhesive labels: 30 sheets Translucent paper: 50 sheets		GCBYPATE	Inch version:				
1: Horizontal 0.1" steps) 2: Vertical 0.1" steps) 3: Feed direction 0.1" steps) Number of sheets that can be set at one time Normal paper: 50 sheets Thick paper, OHP transparencies: 30 sheets (Smaller than 8" × 13"), 15 sheets (8" × 13" or large) Adhesive labels: 30 sheets Translucent paper: 50 sheets							
Number of sheets that can be set at one time Normal paper: 50 sheets Thick paper, OHP transparencies: 30 sheets (Smaller than 8" × 13"), 15 sheets (8" × 13" or large) Adhesive labels: 30 sheets Translucent paper: 50 sheets		2: Vertical					
set at one time Thick paper, OHP transparencies: 30 sheets (Smaller than 8" × 13"), 15 sheets (8" × 13" or large) Adhesive labels: 30 sheets Translucent paper: 50 sheets							
Translucent paper: 50 sheets		Thick paper, OHP transparent					
1 1		Adhesive labels: 30 sheets					
		Translucent paper: 50 sheets					
Post cards: 25 sneets		Post cards: 25 sheets					

□ Select one of the following settings or keys:

- [Normal]: normal paper
- [Thick]: thick paper, post cards, adhesive labels, translucent paper
- [OHP]: OHP transparencies
- **[Duplex Back]**: Copying onto the reverse side of paper that has been already copied onto. ⇒ P.46 "*Copying onto the reverse side of paper*".
- **[Custom Size]**: Select this after the paper type for custom sized paper. \Rightarrow P.41 "Copying onto custom size paper with the bypass tray".

 □ When you copy onto OHP transparencies, you can select whether a blank slip sheet is inserted between OHP transparencies.




- □ When you set several sheets at a time, fan them to get air between them before loading.
- □ If the copy paper is curled, gently roll it to remove the curl.
- □ When you copy onto OHP transparencies, insert them with the copy side up.
- Do not stack copy paper above the limit mark.
- □ If the copy paper is bent, correct it before setting paper in the bypass tray. If the bend is not corrected, a paper misfeed might occur.
- When the optional sorter stapler is installed, copies made onto thick or OHP transparencies are not delivered in the proof tray but in the first bin instead.
- □ When setting custom size paper, be sure to set the size after pressing the **[Custom Size]** key.

Copying onto standard size paper with the bypass tray

🖉 Note

□ When you copy onto the reverse side of paper that has been already copied onto, ⇒ P.46 "Copying onto the reverse side of paper".

Open the bypass tray.

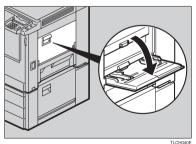


2 Press the [Normal], [Thick] or [OHP] key.



🖉 Note

 - □ Make sure that the **[Standard Size]** key is selected.
- □ When you copy onto OHP transparencies, you can select whether a blank slip sheet is inserted between OHP tranparencies.




 \mathbf{B} Press the [\mathbf{D}/\mathbf{D}] key to select the paper orientation.



Press the [OK] key.

5 Adjust the paper guides to the paper size.

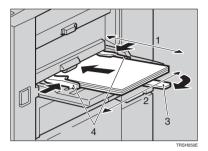

- 1. Horizontal size
- 2. Vertical size
- 3. Extender
- 4. Paper guides

🖉 Note

- □ Make sure the paper size and direction in the bypass tray is displayed on the operation panel.
- □ Make sure that the paper guides matches to the paper size. If the paper guides are not adjusted to the paper size properly, paper might be skewed or a paper misfeed might occur.
- □ With large copy paper (more than A4□, 8¹/₂"×11"□), swing out the extender.

6 With the side you wish to copy onto face up, insert the paper into the bypass tray until it stops.

Set your originals, then press the [Start] key.

Copying onto custom size paper with the bypass tray

Preparation

You can register custom paper sizes you use often in keys [Custom 1], [Custom 2], and [Custom 3] with the user tools. \Rightarrow P.175 "*System settings*".

🖉 Note

D Be sure to set the paper size or a paper misfeed might occur.

Open the bypass tray.


2 Press the [Normal], [Thick] or [OHP] key.

2

Press the [Custom Size] key.



5 Select [Custom 1], [Custom 2], [Custom 3] or [Enter Size] keys.

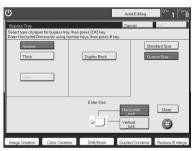

🖉 Note

□ If you selected [Custom 1], [Custom 2] or [Custom 3], go to step 🖸.


1 If you selected [Enter Size] in step **5**, enter the horizontal paper size with the number keys, then press the [#] key.



🖉 Note

□ To change the value entered, press the **[Clear]** key and enter a new value.

2 Enter the vertical paper size with the number keys, then press the [#] key.

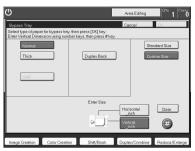

Press the [OK] key.

Adjust the paper guides to the paper size.

🖉 Note

□ Make sure that the paper guides match the paper size. If the paper guides are not adjusted to the paper size properly, paper might be skewed or a paper misfeed might occur.


Insert the paper into the bypass tray.

Set your originals, then press the [Start] key.

Making A3, $11" \times 17"$ full bleed copies

By sliding the paper guides of the bypass tray to greater than A3 (11") size, A3 $11" \times 17"$, full bleed copying mode is automatically selected.

In this mode, you can make A3, $11" \times 17"$ full bleed copies with $12" \times 18"$ paper. This is useful to make for making A3, $11" \times 17"$ size copies with a colored background (e.g. catalogues).

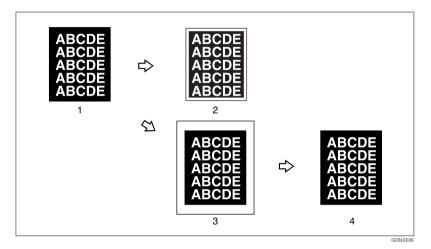

1. A3, 11" × 17" size Original

2. In standard copy mode, margins appear on copies

3. 12" × 18" Full Bleed Copy

4. Cut around the margins to produce a full image


By sliding the paper guides of the bypass tray, the machine enters A3, $11" \times 17"$, full bleed copying mode automatically.

🖉 Note


- **\Box** This function can be used with $12" \times 18"$ paper.
- □ When A3, 11" × 17" full bleed copying mode is selected, the paper direction is automatically changed to widthwise □.
- □ When A3, 11" × 17" full bleed copying is made, the original image is copied onto the center.

By sliding the paper guides of the bypass tray, the machine enters A3, $11" \times 17"$ full bleed copying mode automatically.

Pull up the tab.

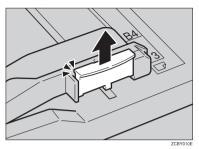

2 Leaving the tab up, slide the paper guides until they stop.

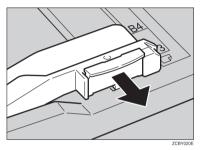

🖉 Note


- □ Make sure that the paper guides match the paper size.
- □ Be sure to return the tab to its original position before you close the bypass tray. If you do not return it correctly, the bypass tray might not close properly.

Copying onto the reverse side of paper

You can copy onto the reverse side of paper that has been already copied onto.

🖉 Note

- □ If you wish to copy 2 sided onto normal paper, use the Duplex feature. \Rightarrow P.63 "Duplex—Making 2 Sided Copies".
- □ Make sure that you set your original and the copy paper in the correct direction to achieve the results you require.

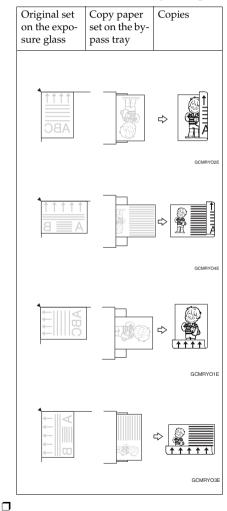

2

- □ If Duplex copying cannot be done because of paper problems, set paper on the bypass tray to copy on the front side, and once again copy on the backside.
- You cannot use this function for OHP transparencies, translucent paper, adhesive labels and postcards.
- D Do not use copy paper that has been already copied onto by other machines.
- □ If the copy paper is bent, correct it before setting paper in the bypass tray. If the bend is not corrected, a paper misfeed might occur.

1 Open the bypass tray.

2 Insert the paper into the bypass tray.

🖉 Note

□ Make sure the front side (the side that has been copied onto) faces down.

B Press the [Normal] or [Thick] key.

4 Press the $[\mathbf{D}/\mathbf{D}]$ key to select paper orientation.

5 Press the [Duplex Back] key.



🖉 Note

□ To copy onto custom size paper, press the [Custom Size] key and select or enter the size. For details, ⇒ P.41 "Copying onto custom size paper with the bypass tray".

O Press the [OK] key.

Adjust the paper guides to the paper size.


🖉 Note

□ Make sure that the paper guides match the paper size. If the paper guides are not adjusted to the paper size properly, paper might be skewed or a paper misfeed might occur.

Set your originals, then press the [Start] key.

Auto Reduce/Enlarge

The machine can select the proper reproduction ratio based on the selected paper size and the original size.

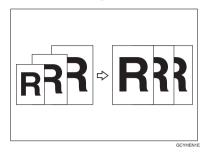


🖉 Note

□ Regarding functions that cannot be used together with this function, \Rightarrow P.97 "*Combination Chart*".

Example:

- Metric version: original: A3, copy paper: A4
- Inch version: original: 11" × 17"□, copy paper: 8¹/₂" × 11"□

Press the [Auto Reduce/Enlarge] key.

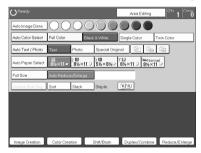


- **2** Set your original on the exposure glass or in the document feeder.
- Choose your copy paper size (e.g. A4 \Box , $8^{1/2}$ " × 11" \Box).
- 4 Press the [Start] key. The original image is enlarged or reduced to fit the selected copy paper.

Energy Saver Mode

If you do not operate the machine for a certain period after copying or press the **[Energy Saver]** key, the display goes out and the machine enters Energy Saver mode. When you press the **[Energy Saver]** key again, set originals in the document feeder or open the platen cover or document feeder, the machine returns to the ready condition. In Energy Saver mode, the machine uses less electricity.

Press the [Energy Saver] key to enter Energy Saver mode.

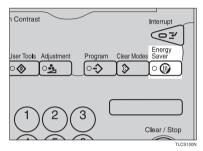

🖉 Note

□ To exit this mode, press the **[Energy Saver]** key again.

Auto Off Mode

This machine automatically turns itself off 60 minutes after the last copy or print job has finished. If you wish to make copies when the machine is in Auto Off mode, press the operation switch.

For how to change the default interval that the machine waits before entering Auto Off mode, see "Auto Timer" \Rightarrow P.175 "System settings"


Interrupt copying

Use the **[Interrupt]** key to interrupt a copy run and make urgently needed copies.

PReference

Regarding functions that cannot be used together with this function, \Rightarrow P.175 "System settings".

Press the [Interrupt] key. The machine will stop the copy run and store the present settings in memory before returning to ready condition.

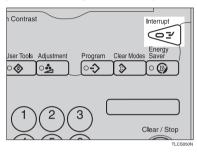

- **2** Remove the previous originals. Set your original for interrupt copying on the exposure glass or in the document feeder.
- B Make your copies.

After interrupt copying is completed, press the [Interrupt] key again. The machine will recall the previous copy settings.


5 Reset the previous originals and press the **[Start]** key to resume the previous run.

Auto Start

If you press the **[Start]** key during the warm-up period, the **[Start]** key will blink and the machine will start copying after the warm-up period.

1 Set your copy settings during the warm-up period.

2 Press the **[Start]** key.

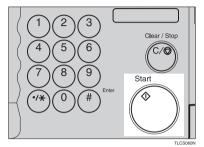

🖉 Note

□ To cancel Auto Start, press the **[Clear/Stop]** key.

Program

You can store up to five frequently used copy job settings in machine memory and recall them for future use.


🖉 Note

□ If you want to change the stored programs, store another program again.

Storing your settings

1 Set the copy settings you want to put into memory.

2 Press the **[Program]** key.

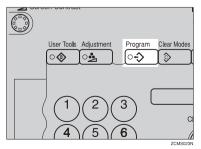

Press the [Program] key.




4 Select the program number you want to store the settings in.

🖉 Note

□ If this program number is already being used, the machine asks whether you wish to overwrite it or not. Press the **[Yes]** or **[No]** key.

Recalling your settings

Press the [Program] key.

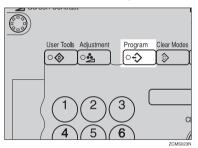

🖉 Note

- □ If you want to recall Area Edit settings stored in a program, press the **[Area Editing]** key then press the **[Program]** key.
- □ After you recall the Area Edit settings stored in a program, you can change them. However, you can not add or delete the Area/Group.

2 Press the [Recall] key.



Select the program number you want to recall. The stored settings are displayed.


Note

 \Box Only programs with \clubsuit contain a program.

Set your originals, then press the [Start] key.


Check Modes

By pressing the **[Check Modes]** key, you can see at a glance the modes you have selected.

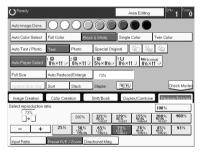


Counter

By pressing the **[Counter]** key, you can check the total number of copies made.

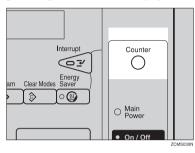

Preset R/E

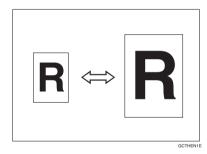

PReference

Regarding functions that cannot be used together with this function, \Rightarrow P.97 "Combination Chart".

🖉 Note

□ You can add up to two preset ratios with the user tools. \Rightarrow P.179 "General Features".

You can select a ratio regardless of the size of an original or copy paper. With some ratios, parts of the image might not be copied or margins will appear on copies.

T To return to 100%, press the **[100%]** key.

Reducing

Press the [Reduce/Enlarge] key.

2 Make sure that the [Preset R/E / Zoom] key is selected.

OReady			Area B	diting	⁰ " 1 ^{Conv}
Auto Image Dens.	10000	\odot			
Auto Color Select	Full Color Elec	< & White	Single Colo	r Twin C	olor
Auto Text / Photo	Text Photo	Special Orig	nal 👔	4. 4	
Auto Paper Select	1 Ш 2 Ш 8½×11 ⊡ 8½×11 0	3 Ш 5½×8½⊃	⊤⊔ 8½×11	≌Normal 8½×11 ₽	
Full Size	Auto Reduce/Enlarge]			
Custom Size Orig	Sort Stack	Staple:	'R'R		Check Modes
Image Creation	Color Creation	Shift/Book	Duplex/C	ombine	duce/Enlorge
Select reproduction r	atio.			100%	·]
+`	200%	121% Bij-1e %(1:17	29% 15 511 1107	5% 200% 5% 5%	5 100%
- +	25% 50%	65% 1917 468-11	73% 7	8% 85%	93%
Input Ratio	Preset R/E / Zoom Dire	ctional Mag.]		

B Select the ratio you require.

OReady				A	rea Editing	04	1 ^{Cnev}
Auto Image Dens.	100	00	\odot)	
Auto Color Select	Full Color	Black	: & White	Single	Color	Twin Cold	ır
Auto Text / Photo	Text	Photo	Special O	iginal	<u>ƙ</u>	a Gp	
Auto Paper Select	1 Ш 8½×11 ⊃	2 Ш 8½×11 D	3 Ш 5½×8½	7 U 8½×11	□ 8½×	rmal 11 ⊂	
Full Size	Auto Reduci	e/Enlarge	73%				
Custom Size Orig.	Sort	Stack	Staple:	'R'R]	6	heck Modes
Image Creation	Color Crea	tion	Shitt/Book	Dupl	ex/Combin	e Redu	ce/Enlarge
Select reproduction n	atio.					100%	
		200%	121% %**** **11**7	129% %11-17	155%	200%	400%
- +	25%	50% 1920-	65% 11:27 13:89-11	73% 1915 1948-11	78% 85-14 85-14	85% 8531 8531	93%
Input Ratio	Preset R/E	Zoom Dire	tional Mag				

Set your originals, then press the [Start] key.

Enlarging

1 Press the [Reduce/Enlarge] key.

2 Make sure that the [Preset R/E / Zoom] key is selected.


OReady			An	a Editing	0*	້ 1 ^{Cດຫ} ັ
Auto Image Dens.	1000					
Auto Color Select	Full Color	Black & White	Single C	olor	Twin Colo	r
Auto Text / Photo	Text Pr	noto Special	Driginal	in 4.	4	
Auto Paper Select	1 Ш 8½×11 ⊐ 8	⊔ %∠×11 ⊡ 5%≥×8%	i≂ 11 8‰×11	0 8½×	mol 11 🖸	
Full Size	Auto Reduce/E	nlarge				
Custom Size Orig.	Sort St	ack. Staple:	'R'R		6	heck Modes
Image Creation	Color Creation	n Shift/Book	Duple	x/Combine	Bedu	ce/Enlorge
Select reproduction	atio.				100%	
□+□		200% 121% Mp-14 41147	129% men 41147	155% 55-65 355-64	200 % 5%-6% 411-17	400%
- +	25%	50% 65%	73%	78% 85%	85% *****	93%
Input Ratio	Preset R/E / Zo	Directional Ma				

3 Select the ratio you require.

OReady				A	ea.Editing	0%	1 ^{Conv}
Auto Image Dens.	100	00	\mathbf{O}				
Auto Color Select	Full Color	Black	& White	Single	Color	Twin Colo	r
Auto Text / Photo	Text	Photo	Special O	riginal	ên 4:	4	
Auto Paper Select	1 Ш 8½×11 ⊡	² Ш 8½×11 ₪	3 回 5½×8½	⊤U 8½×11	□ <mark>□</mark> No 8½×	mal 11 🖓	
Full Size	Auto Reduc	e/Enlarge	155%				
Custom Size Orig	Sort	Stack	Staple:	'R'R]	6	heck Modes
Image Creation	Color Crea	tion	Shift/Book	Dupl	ex/Combin	e Redu	ce/Enlorge
Select reproduction r	atio.					100%	
- 155% 		200%	121% %*14 %11+17	129% 8411-17	155%	200 % 5413-47	400%
- +	25%	50% 11:07 13:07 13:07 13:07	65% 1247 486-11	73% 1935 485-11	78% 564	85% 85-13 935-11	93%
Input Ratio	Preset R/E	/Zoom Dire	ctional Mag.				

Set your originals, then press the [Start] key.

Zoom

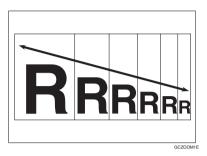

You can change the reproduction ratio from 25% to 400% in 1% steps.


🖉 Note

- You can select a ratio regardless of the size of an original or copy paper. With some ratios, parts of the image might not be copied or blank margins will appear on copies.
- □ To return to 100%, press the **[100%]** key.
- □ You can select a preset ratio which is near the desired ratio, then press the **[Zoom]** key and adjust the ratio with the **[+]** or **[-]** key.
- □ There are two ways to set the ratios.


Using the [-] and [+] keys

Press the [Reduce/Enlarge] key.

2 Make sure that the [**Preset R/E** / **Zoom**] key is selected.

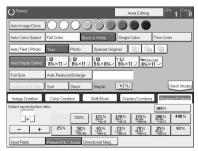

Adjust the reproduction ratio with the [+] or [-] key.

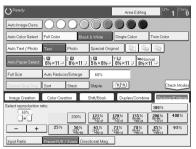


Set your originals, then press the [Start] key.

Using the number keys

Press the [Reduce/Enlarge] key.

2 Press the [Input Ratio] keys.

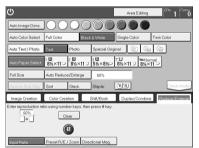

Enter the reproduction ratio with the number keys.


🖉 Note

□ To change the ratio entered, press the **[Clear]** key and enter a new ratio.

4 Press the [#] key.

5 Set your originals, then press the **[Start]** key.

Directional Magnification (%)

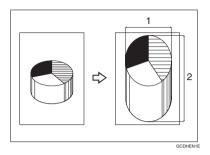

- 1. Horizontal %
- 2. Vertical %

Copies can be reduced or enlarged at different reproduction ratios horizontally and vertically.

🖉 Note


- □ You can select a ratio from between 25% to 400%.
- You can select a ratio regardless of the size of an original or copy paper. With some ratio, parts of the image might not be copied or blank margins might appear on copies.

Press the [Reduce/Enlarge] key.

2 Press the [Directional Mag.] key.

B Make sure that the [Direct. Mag.(%)] key is selected.

4 Enter the horizontal ratio with the number keys, then press the [#] key.

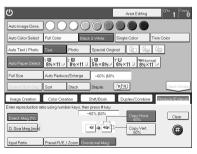


🖉 Note

□ To change the ratio entered, press the **[Clear]** key and enter a new ratio.


2

5 Enter the vertical ratio with the number keys, then press the [#] key.

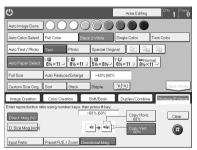

6 Set your originals, then press the **[Start]** key.

Directional Size Magnification (inch)

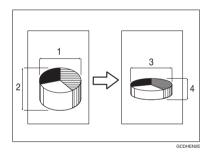

- 1. Horizontal original size
- 2. Vertical original size
- 3. Horizontal copy size

4. Vertical copy size

The suitable reproduction ratios will be automatically selected when you enter the horizontal and vertical lengths of the original and copy image you require.

🖉 Note

□ You can enter sizes within the following ranges:


Metric Version	1 - 999mm (in 1mm steps)
Inch Version	0.1" - 99.9" (in 0.1" steps)

If the calculated ratio is over the maximum or under the minimum ratio, it is corrected within the range of the ratio automatically. However, with some ratios, parts of the image might not be copied or blank margins might appear on copies. Press the [Reduce/Enlarge] key.

2 Press the [Directional Mag.] key.

B Press the [D. Size Mag.(mm)] key.

Enter the horizontal original size with the number keys, then press the [#] key.

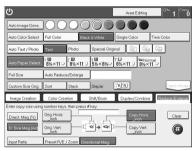


🖉 Note

 \Box To change the value entered:


- If you have not pressed the **[#]** key yet, press the **[Clear]** key and enter a new value.
- If you have already pressed the **[#]** key, select the specified key and enter the a value.

5 Enter the horizontal copy paper size with the number keys, then press the [#] key.

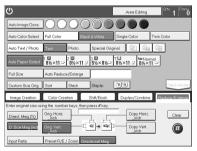


2

6 Enter the vertical original size with the number keys, then press the [#] key.

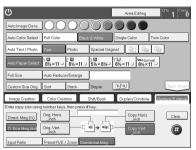


2 Enter the vertical copy paper size with the number keys, then press the [#] key.

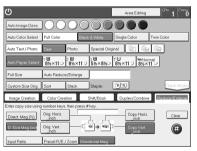

Duplex—Making 2 Sided Copies

1 Sided \rightarrow 2 Sided

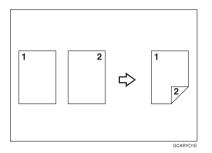

This function makes double sided copies from single sided originals.

Limitation

□ You cannot use the following kinds of copy paper with this function:

- Paper smaller than A5, $5^1/_2$ " × $8^1/_2$ "
- Translucent paper
- Adhesive labels
- OHP transparencies
- Post Cards

🖉 Note

□ The following paper limitations apply:

Metric version

	Single color	Full color
Paper weight	64 - 105g/m ²	
maximum copy quantity	B4 or smaller: 50 sheets	A3 - A5: 20 sheets
	A3: 30 sheets	

Inch version

	Single color	Full color
Paper weight	17 - 28 lb	
maximum copy quantity	$8^1/2" \times 14"$ or smaller: 50 sheets	$11" \times 17" - 5^1/_2" \times 8^1/_2": 20$ sheets
	11" × 17": 30 sheets	


🖉 Note

- $\hfill\square$ The image on the backside of copies is shifted by just the binding margin.
- $\hfill\square$ You can change the width and position of the binding margin.
- □ You can change the default binding margin.

Reference

Regarding functions that cannot be used together with this function, \Rightarrow P.97 "*Combination Chart*".

The resulting copy image will differ according to the direction in which you set your original (lengthwise D or widthwise D).

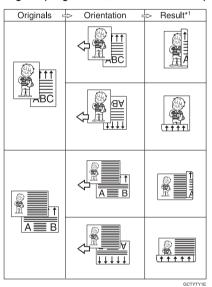

^{*1} The illustrations show the directions of copied images on the front and back, not the directions of delivery.



OReady		Area Editing 010 1 010
Auto Image Dens.	000000	
Auto Color Select	Full Color Elock & White	Single Color Twin Color
Auto Text / Photo	Text Photo Special Ori	ginal 🕼 🕼 🕼
Auto Paper Select	1 Ш 2 Ш 3 Ш 8½×11 ⊃ 8½×11 ∋ 5½×8½⊃	TU 8½×11 0 8½×11 ₽
Full Size	Auto Reduce/Enlarge 100%	
Custom Size Orig.	Sort Stack Staple:	'R'R Check Modes
Image Creation	Color Creation Shift/Book	Rustav/Rombins Reduce/Enlarge
Selectmode. Duplex Duplex Deplex	1 Sided⇒2 Sided Series 1 → 2 Sided⇒2 Sided ↓ → Book⇒2 Sided Combine ↓ → Mult⇒2 Sided Combine ↓ →	2 Sided >1 Sided

2 Press the [1 Sided \rightarrow 2 Sided] key.

OReady				Area Editi	19 0 ¹⁰ 1 Cnav
Auto Image Dens.	100	00	00		
Auto Color Select	Full Color	Black	< & White	Single Color	Twin Color
Auto Text / Photo	Text	Photo	Special Ori	ginal 🗿 (4a 4 a
Auto Paper Select	1 Ш 8½×11 ⊃	²Ш 8%⊱×11 ワ	3 Ш 5½×8½⊸	⊤⊔ 8½×11 □ 83	Normal \$×11 □
Full Size	Auto Reduce	e/Enlarge	100%		
Custom Size Orig	Sort	Stack	Staple:	'R'R	Check Modes
Image Creation	Color Crea	tion	Shift/Book	Duplex/Com	Reduce/Enlarge
Select mode.					
Duplex Urit	1 Sided->2 S	ided Seri	es <u>1</u> 3→,	Book->1 Side	ed Number of orig.
] +]	2 Sided->2 S	ided		2 Sided->1 S	ided Even
14.3	Book->2 Sid	ed Con	ıbine ∏a]ə[Combine 2 o	riginals Odd
				Combine 4 o	

Press the [Even] key or the [Odd] key according to the number of your originals.

🖉 Note


- □ When you set an odd number originals, the back side of the last page is left blank.
- □ If you don't know the total number of originals, press the **[Auto Count]** key, then press the **[Start Count]** key.

The optional document feeder is required to use Auto Count function.


Press the [OK] key.

5 Set your originals in the document feeder, then press the **[Start]** key.

2 Sided \rightarrow 2 Sided

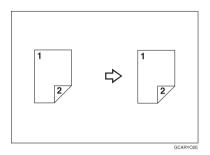

This function makes double sided copies from double sided originals.

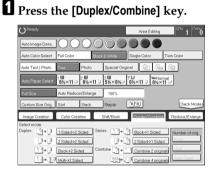


2 Press the [2 Sided \rightarrow 2 Sided] key.

OReady		Area Editing	0 th 1 0
Auto Image Dens.	100000		
Auto Color Select	Full Color Block & Wh	te Single Color	Twin Color
Auto Text / Photo	Text Photo Spei	sial Original 🗐 🚱	4
Auto Paper Select	1 Ⅲ 2 Ⅲ 3 Ⅲ 8½×11 □ 8½×11 □ 5½>	<8%⊃ 8%×11 0 8%×1	nal 1 -
Full Size	Auto Reduce/Enlarge 10	1%	
Custom Size Orig.	Sort Stack Stap	le: B'R	Check Modes
Image Creation	Color Creation Shift/E	look Busiex/Rombins	Reduce/Enlarge
Select mode.			
Duplex []→]	1 Sided->2 Sided Series	Book->1 Sided	Number of orig.
	2 Sided->2 Sided		Even
140	Book->2 Sided Combine	1 → 1 Combine 2 origin	ola Odd
L3+32	Multi->2 Sided	Combine 4 origin	Auto Count

B Set your originals in the document feeder, then press the [Start] key.

$\operatorname{Book} \to \operatorname{2}\operatorname{Sided}$

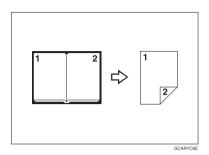

Use this feature to copy facing pages of a book or magazine onto both sides of the copy paper.

🖉 Note

- \Box Select the lengthwise \Box copy paper.
- □ The following table summarizes the relationship between the size of originals and copy paper size for full-size copying.
 - Metric version

Original	Copy Paper
A3 🗗	A4 🔽 (2-sided)
B4 🗗	B5 🔽 (2-sided)
A4 🗗	A5 🛛 (2-sided)

• Inch version


Original	Copy Paper
11"×17" 🗗	$8^{1}/_{2}$ " × 11" \Box (2-sided)
8 ¹ / ₂ "×11" □	$5^{1}/_{2}$ " × $8^{1}/_{2}$ " \square (2-sided)

Press the [Duplex/Combine] key.

OReady			Area Editing	^{0%} 1 ^{Cnm}
Auto Image Dens.	1000	0		
Auto Color Select	Full Color I	ilack & White	Single Color	Twin Colar
Auto Text / Photo	Text Photo	Special Origi	nal 🕼 🕼	4 Ge
Auto Paper Select	1 Ш 8½×11 ⊐ 8½×1	3 Ш 1 ⊽ 5½×8½⊃	⊤U 8½×11 ₪ 8½×	mol 11 -
Full Size	Auto Reduce/Enlarg	e 100%		
Custom Size Orig.	Sort Stack	Staple:	'R'R)	Check Modes
Image Creation	Color Creation	Shift/Book	Duplex/Combine	Reduce/Enlarge
Selectmode.			-	-
Duplex []→]	1 Sided->2 Sided	Series→	Book->1 Sided	Number of orig.
Q+Q	2 Sided->2 Sided		2 Sided->1 Side	d
13+2	Book->2 Sided	Combine	² Combine 2 origi	nals Odd
L I+ 72	Multi->2 Sided	199+Q	Combine 4 origi	Auto Count


2 Select the lengthwise \Box copy paper.

B Press the [Book \rightarrow 2 Sided] key.

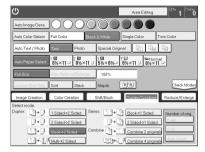

4 Set your original on the exposure glass, then press the [Start] key.

$\text{Multi} \rightarrow \text{2 Sided}$

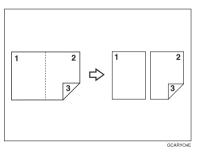

This function makes one single sided and one double sided copy from a three page pamphlet.

🖉 Note


- □ The following table summarizes the relationship between the size of originals and copy paper size for full-size copying (100%).
 - Metric version

Original	Copy Paper
A3 🗗	A4 🔽 (2-sided)
B4 🗗	B5 🔽 (2-sided)
A4 🗗	A5 🔽 (2-sided)

• Inch version


Original	Copy Paper
11"×17" 🗗	$8^1/_2$ " × 11" \square (2-sided)
8 ¹ / ₂ "×11" □	$5^{1}/_{2}$ " × $8^{1}/_{2}$ " \Box (2-sided)

Press the [Duplex/Combine] key.

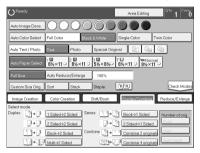

2 Select lengthwise **D** copy paper.


B Press the [Multi \rightarrow 2 Sided] key.

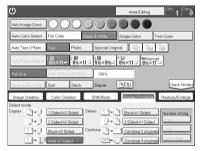

Set your originals in the document feeder, then press the [Start] key.

Series Copies

$\text{Book} \rightarrow 1 \text{ Sided}$

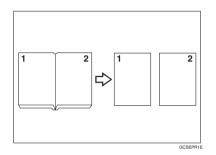

This function makes one-sided copies from two facing pages of bound (book) originals.

PReference

Regarding functions that cannot be used together with this function, \Rightarrow P.97 "*Combination Chart*".

🖉 Note

- □ The following table summarizes the relationship between the size of originals and copy paper size for full-size copying (100%).
 - Metric version

Original	Copy Paper
A3 🗗	A4 $\square \times 2$ sheets
B4 🗗	B5 $\square \times 2$ sheets
A4 🗗	A5 $\square \times 2$ sheets

• Inch version


Original	Copy Paper
11" × 17" 🗗	$8^1/_2$ " × 11" \square × 2 sheets
8 ¹ / ₂ "×11" □	$5^{1}/_{2}$ " $\times 8^{1}/_{2}$ " $\square \times 2$ sheets

Press the [Duplex/Combine] key.

OReady			Area Editing	0 th 1 0
Auto Image Dens.	1000	000		
Auto Color Select	Full Color	Black & White	Single Color	Twin Color
Auto Text / Photo	Text Photo	o Special Ori	ginal 🕼 🕼	2 G2
Auto Paper Select	1 Ш 2 Ш 8½×11 ⊐ 8½	×11 □ 3 Ш 5½×8½⊐	TU 8½×11 ∪ 8½×	rmol :11 ⊡
Full Size	Auto Reduce/Enla	rge 100%		
Custom Size Orig.	Sort Stack	Staple:	'R'R	Check Made
Image Creation	Color Creation	Shift/Book	Duplex/Combin	Reduce/Enlarge
Select mode.				
Duplex []→]	1 Sided->2 Sided	Series	Book->1 Sided	Number of orig.
	2 Sided->2 Sided	3+	2 Sided->1 Side	Even
0.00	Book->2 Sided	Combine	Combine 2 orig	inals
10+02	Multi->2 Sided		Combine 4 orig	inals Auto Count

2 Select lengthwise **D** copy paper.

B Press the [Book \rightarrow 1 Sided] key.

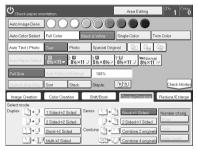


Set your originals, then press the [Start] key.

2

2 Sided \rightarrow 1 Sided


The optional document feeder is required to use this function.

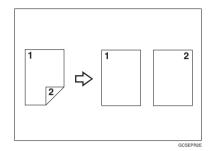


₽ Reference

Regarding functions that cannot be used together with this function, \Rightarrow P.97 "*Combination Chart*".

Press the [Duplex/Combine] key.

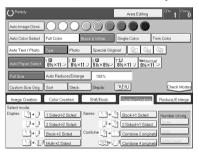

2 Select lengthwise □ copy paper.
3 Press the [2 Sided→1 Sided] key.

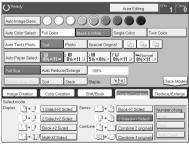


4 Set your originals in the document feeder, then press the [Start] key.

Combine

Combine 2 Originals

The optional document feeder is required to use this function.

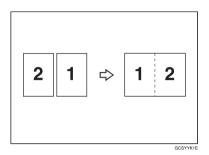

This function automatically combines two single sided originals onto one copy.

🖉 Note

- □ If the original size and direction is set differently, you cannot use the combine function.
- When you use the combine function, Auto Reduce/Enlarge is selected automatically.

 
Regarding functions that cannot be used together with this function, \Rightarrow P.97 "*Combination Chart*".

Setting originals (Originals set in the document feeder)


• Originals reading from left to right



• Originals reading from top to bottom




Press the [Duplex/Combine] key.

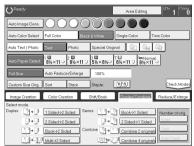


2 Select widthwise 🗗 copy paper.

B Press the [Combine 2 originals] key.

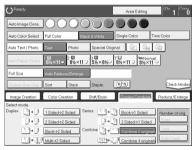

Set your originals in the document feeder, then press the [Start] key.


Combine 4 Originals

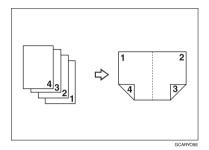

PReference


Regarding functions that cannot be used together with this function, \Rightarrow P.97 "Combination Chart".

Press the [Duplex/Combine] key.

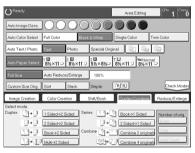

2 Select widthwise 🗖 copy paper.


B Press the [Combine 4 originals] key.

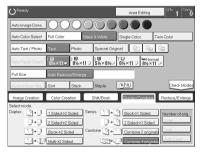

4 Set your originals in the document feeder, then press the **[Start]** key.

Shifting the Image

Shift

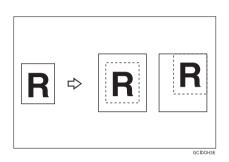

You can move the image to a corner or edge as well as center it. This function is useful when the copy paper is larger than the original.

🖉 Note


 \Box You cannot use $12" \times 18"$ size copy paper for this function.

1 Press the [Shift/Book] key.

2 Press the [Shift] key.



3 Select the direction in which you want to shift the image.

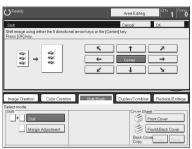

🖉 Note


□ When you want to center the image, press the **[Center]** key.

Press the [OK] key.

5 Select the copy paper size.

5 Set your originals, then press the **[Start]** key.

Margin Adjustment

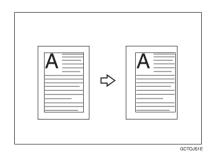

You can make a margin by shifting the image to the left or right. This function is useful when you want to bind copies.

🖉 Note

□ You can change the width of the binding margin as follows:

Metric Version	0 - 20mm (in 1mm steps)
Inch Version	0" - 0.8" (in 0.1" steps)

□ The margin width default is as follows. You can change this default setting with the user tools. \Rightarrow P.179 "General Features".

Metric Version	Front: 0mm LeftBack: 0mm Right
Inch Version	Front: 0" LeftBack: 0" Right

□ If you set too wide a margin, areas you do not want to delete might be erased.

PReference

Regarding functions that cannot be used together with this function, \Rightarrow P.179 "General Features".

1 Press the [Shift/Book] key.

2 Press the [Margin Adjustment] key.

Enter margin using the arrow keys. Press [OK] key. Front Side Margin Adjust Beck Side M	Cancel
Press [OK] key. Front Side Margin Adjust Back Side M	
0.0inch	orgin Aojust
← Clear → ← <l -="" 0.8inch="" <l<="" r="" td="" →=""><th>Clear →</th></l>	Clear →
	plex/Combine Reduce/Enlarge
Select mode. (Shit) - Shit Mergin Adjustment	Criver Sheet Front Cover Eront&Back Cover Back Cove

B Enter the margins for the front side and back side of the copy paper.

🖉 Note


- □ To change the value entered, press the **[Clear]** key and enter a new value.
- \Box To make a left margin, press the $[\rightarrow]$ key until the number displayed reaches the required setting.
- □ To make a right margin, press the [←] key until the number displayed reaches the required setting.

Press the [OK] key.

Cover Sheet

Front Cover

The optional document feeder is required to use this function.

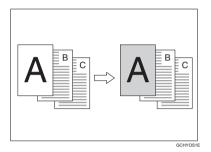

🖉 Note


- □ The cover sheets should be identical in size and direction with the copy paper.
- □ The cover sheets should be fed from the bypass tray.
- □ The covers are copied in Thick mode.

Reference

Regarding functions that cannot be used together with this function, \Rightarrow P.97 "*Combination Chart*".

When you use front cover mode with 1 Sided \rightarrow 1 Sided mode

Press the [Shift/Book] key.

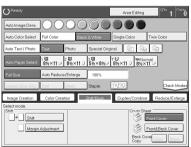


2 Press the [Front Cover] key.

B Set your originals in the document feeder, then press the **[Start]** key.

When you use Front Cover mode with 2 Sided \rightarrow 1 Sided or 2 Sided \rightarrow 2 Sided mode

- **1** Enter 2 Sided \rightarrow 1 Sided or 2 Sided \rightarrow 2 Sided mode. \Rightarrow P.72 "2 Sided \rightarrow 1 Sided" or \Rightarrow P.66 "2 Sided \rightarrow 2 Sided".
- **2** Follow steps **1** to **2** on \Rightarrow P.79 "When you use front cover mode with 1 Sided \rightarrow 1 Sided mode".
- Select [Image] or [Blank] key depending on the reverse side of first original has an image or not.

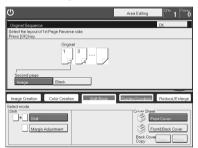


Press the [OK] key.

5 Set your originals in the document feeder, then press the **[Start]** key.


Front and Back Cover

The optional document feeder is required to use this function.

Back Cover: Copy

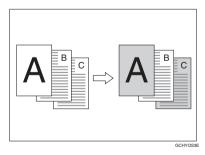

Back Cover: Blank

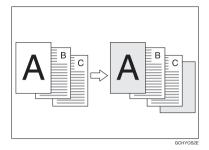

🖉 Note


- □ You can specify whether to copy onto the back cover sheet. If you select **[Copy]**, the last pages will be copied onto the back cover sheet. If you select **[Blank]**, a cover sheet will just be inserted after the last copy.
- □ The cover sheets should be identical in size and direction to the copy paper.
- **The cover sheets should be fed from the bypass tray.**
- □ The covers are copied in Thick mode.
- □ If Blank Cover mode is selected, the back cover will not be counted as a copy.

₽ Reference

Regarding functions that cannot be used together with this function, \Rightarrow P.97 "*Combination Chart*".

When you use Front & Back covers mode with 1 Sided \rightarrow 1 Sided mode

Press the [Shift/Book] key.

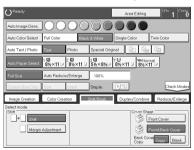

2 Press the [Front&Back Cover] key.

B Press the [Copy] or [Blank] key to choose whether to copy onto the back cover.

Set your originals in the document feeder.


5 Press the **[Start]** key.

When you use Front & Back Covers mode with 2 Sided \rightarrow 1 Sided or 2 Sided \rightarrow 2 Sided mode

1 Enter 2 Sided \rightarrow 1 Sided or 2 Sided \rightarrow 2 Sided mode. \Rightarrow P.72 "2 Sided \rightarrow 1 Sided" or \Rightarrow P.66 "2 Sided \rightarrow 2 Sided".

2 Follow steps **1** to **3** in the previous procedure.

Press the [Image] or [Blank] key depending on whether the reverse side of the first original has an image or not.

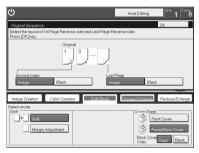


Press the [Image] or [Blank] key depending on whether the reverse side of last original has an image or not.

5 Press the [OK] key.

5 Follow steps **9** and **5** in the previous procedure.

Color Creation

Color Conversion

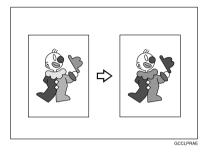

This function converts selected colors of an original into different colors on the copy.

🖉 Note

- □ Up to 4 colors can be converted at one time.
- Colors you can convert: Yellow, Red, Magenta, Green, Cyan, Blue, Black, White.
- Colors that can be converted to: Yellow, Orange, Red, Magenta, Green, Cyan, Blue, Yellow Green, Black, White, Beige, Pink, Marine Blue, Purple and User colors.
- □ This function can be made more or less sensitive to the color to be converted. It can be adjusted within five levels from "Narrow" to "Wide". ⇒ P.108 "*Image Adjustment*". For example, if red is selected as the color to be converted, "Narrow" will result in only red being converted, and "Wide" will result in other colors close to red being converted.
- □ This function can be used in Full Color mode.

Press the [Color Creation] key.

2

2 Press the [Color Conversion] key.



3 Select the original color (color to be converted).

ወ			Area	Editing	^{D™} 1 ^{Cnmy}
Color Conversion Select new color. Up to 4 conversion Basic Color	ns can be made. Wh	en finished, pres	Cance s [OK] key.	H OK	
Yellow Green	Beige Cyan	Orange Pink	Red	Black	
Green	Marine Blue	Blue	Purple		
Conversion 1 Conversion 2	Yellow +		=		
Conversion 3 Conversion 4)		_		

Select the new color (color to convert to).




5 If you want to convert more than one color, repeat steps **3** and **4**.

🖉 Note

□ If you pick the wrong color, press the **[Clear]** key.

6 Press the [OK] key.

Color Erase

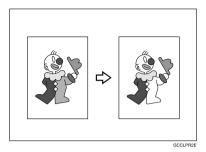


This function erases selected colors from the original image.

🖉 Note

- □ Up to 4 colors can be erased at one time.
- □ Colors that can be erased: Yellow, Red, Magenta, Green, Cyan, Blue and Black.
- □ This function can be made more or less sensitive to the color to be erased. It can be adjusted within five levels from "Narrow" to "Wide". ⇒ P.108 "Image Adjustment". For example, if red is selected as the color to be erased, "Narrow" will result in only red being erased, and "Wide" will result in other colors close to red being erased.

Press the [Color Creation] key.

2 Press the [Color Erase] key.

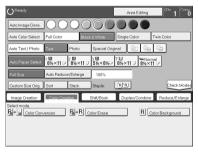

2


3 Select the color to be erased.



Press the [OK] key

5 Set your originals, then press the **[Start]** key.

Color Background

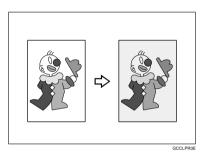


This function makes copies with the selected color background.

🖉 Note


- Colors that can be selected as a background color: Yellow, Orange, Red, Magenta, Green, Cyan, Blue, Yellow Green, Black, Beige, Pink, Marine Blue, Purple and User Colors.
- □ In this mode, color tones of photos or pictures might be changed depending on the color on the background.



2 Press the [Color Background] key.

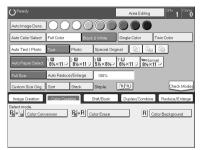

3 Select the color for the background.

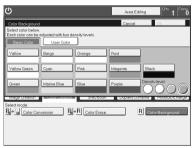


🖉 Note

 \Box You can select the color density level.

Press the [OK] key

Image Creation


Mirror

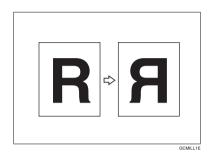


This function makes a mirror image copy of the original.

🖉 Note

□ If set the original as below when setting on the exposure glass.

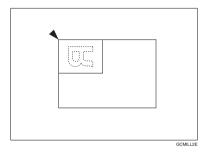


Press the [Image Creation] key.

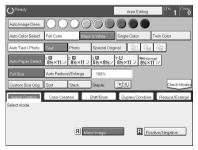

2 Press the [Mirror Image] key.


Positive/Negative

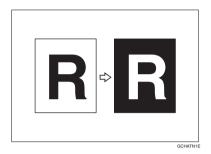

This function copies the original image in complementary colors. If you use a black and white original, black and white areas of the original are reversed.

Press the [Image Creation] key.

Press the [Positive/Negative] key.

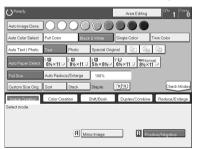

Finishing

🖉 Note


□ To avoid problems caused by curled copies, try turning over the paper stack in the paper tray. If there is no improvement, change to copy paper with less curl.

₽ Reference

Regarding functions that cannot be used together with this function, \Rightarrow P.97 "Combination Chart".

Sort

The optional 20-bin sorter stapler, 10-bin sorter stapler or 3-bin sotrer is required to use this function.

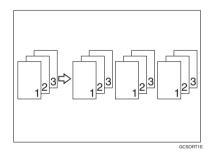

One copy of each original is delivered to each bin and copies are collated into sets.

🖉 Note

 $\hfill\square$ It is recommended to set originals in the document feeder with this function.


	20-bin sorter stapler		10-bin sorter	3-bin sorter stapler	
	Normal paper mode	Thick mode	stapler	1 st bin	2 nd or 3 rd bin
Maximum paper size	□: A3, 12" × 18"	□: A3, 12" × 18"	□: A3, 11" × 17"	□: A3, 12" × 18"	□: A3, 12" × 18"
	□ : A4, 8 ¹ / ₂ " × 11"	□ : A4, 8 ¹ / ₂ " × 11"	□ : A4, 8 ¹ / ₂ " × 11"	□ : A4, 8 ¹ / ₂ " × 11"	□ : A4, 8 ¹ / ₂ " ×11"
Minimum paper size	□: B5, 8" × 11"	□: B5, 8"× 11"	□: B5, 8" × 11"	$\square: A6, 5^1/_2"$ × 8 ¹ / ₂ "	$\square: A6, 5^1/_2" \times 8^1/_2"$
	□ : B5, 8 ¹ / ₂ " × 11"	□ : B5, 8 ¹ / ₂ " × 11"	□ : B5, 8 ¹ / ₂ " × 11"	□ : A5, 8 ¹ / ₂ " × 11"	□ : A5, 8 ¹ / ₂ " ×11"
Maximum paper capaci- ty of bins (80g/m ² , 20 lb)	A4, $8^{1}/2$ " × 11" or small- er: 30 sheets B4, 8"×13" or larger: 25 sheets	A4, $8^{1}/2$ " × 11" or small- er: 15 sheets B4, 8"×13" or larger: 12 sheets	A4, $8^{1}/2$ " × 11" or small- er: 30 sheets B4, 8"×13" or larger: 25 sheets	A4, $8^{1}/2$ " × 11" or small- er: 500 sheets B4, 8" × 13" or larger: 250 sheets	A4, $8^{1}/_{2}$ " × 11" or small- er: 250 sheets B4, 8"×13" or larger: 125 sheets

□ For sorting, the following limitations apply:

□ When you have the 3-bin sorter or 10-bin sorter stapler, you cannot use thick paper fed from the bypass tray in Sort mode.

- \Box When you have the 10-bin sorter stapler, $12" \times 18"$ size paper cannot be used.
- □ You cannot use OHP transparencies or custom size paper in Sort mode.
- □ You can make the machine select Sort mode automatically when you insert two or more originals in the document feeder and make two or more copies from each original. ⇒ P.184 "Duplex/ADF/Sorter".

Press the [Sort] key.

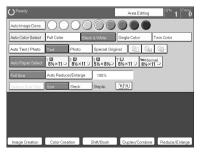


2 Set your originals in the document feeder.

B Press the [Start] key.

Stack

The optional 20-bin sorter stapler, 10-bin sorter or 3-bin sorter is required to use this function.

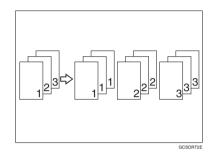

All copies of each original are delivered to the same bin.

🖉 Note

□ For stacking, the following limitations apply:


	20-bin sorter stapler		10-bin sorter	3-bin sorter stapler	
	Normal paper mode	Thick mode	stapler	1 st bin	2 nd or 3 rd bin
Maximum paper size	□: A3, 12" × 18"	□: A3, 12"× 18"	□: A3, 11" × 17"	□: A3, 12" × 18"	□: A3, 12" × 18"
	□ : A4, 8 ¹ / ₂ "	□ : A4, 8 ¹ / ₂ "	□ : A4, 8 ¹ / ₂ "	□ : A4, 8 ¹ / ₂ "	□ : A4, 8 ¹ / ₂ "
	× 11"	× 11"	× 11"	× 11"	× 11"
Minimum	□: B5, 8" ×	□: B5, 8"×	□ : B5, 8" ×	$\square: A6, 5^1/_2"$	$\square: A6, 5^1/_2"$
paper size	11"	11"	11"	× 8 ¹ / ₂ "	× 8 ¹ / ₂ "
	□ : B5, 8 ¹ / ₂ "	□ : B5, 8 ¹ / ₂ "	□ : B5, 8 ¹ / ₂ "	□ : A5, 8 ¹ / ₂ "	□ : A5, 8 ¹ / ₂ "
	× 11"	× 11"	× 11"	× 11"	×11"
Maximum	A4, $8^{1}/_{2}$ " ×				
paper capaci-	11" or small-				
ty of bins	er: 25 sheets	er: 12 sheets	er: 25 sheets	er: 500 sheets	er: 250 sheets
(80g/m ² , 20 lb)	B4, 8"×13" or larger: 20 sheets	B4, 8"×13" or larger: 10 sheets	B4, 8"×13" or larger: 20 sheets	B4, 8"×13" or larger: 250 sheets	B4, 8"×13" or larger: 125 sheets

□ When you have the 3-bin sorter or 10-bin sorter stapler, you cannot use thick paper fed from the bypass tray in Stack mode.

 \Box When you have the 10-bin sorter stapler, $12" \times 18"$ size paper cannot be used.

□ You cannot use OHP transparencies or custom size paper in Stack mode.


Press the [Stack] key.

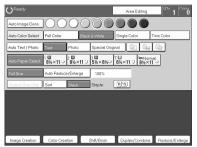

2 Set your originals in the document feeder.3 Press the [Start] key.

Staple

The optional 20-bin sorter, 10-bin sorter stapler is required to use this function.

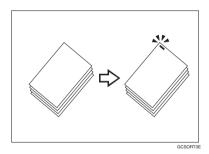

Each copy set can be stapled together.

🖉 Note

- Since the image is rotated, if the direction of the original and paper direction differ, the staples might not be in the desired position.
- □ When you select Staple mode, Sort mode is automatically selected.
- □ You cannot use Staple mode with Stack mode.
- □ When you have the 10-bin sorter stapler, you cannot use thick paper fed from the bypass tray in Staple mode.
- □ You cannot use OHP transparencies or custom size paper in Staple mode.
- □ You cannot staple different widths of paper.

□ The relationship between the orientation in which the original is set and the stapling position is shown below.

Orientation of original			Stapling position		
	Exposure glass	Document feeder	20-bin sorter stapler	10-bin sorter stapler	
₽					
		R	R	R	
			R		
₽		R	R	[©] R	
			R		

□ For stapling, the following limitations apply:

	20-bin sorter stapler	10-bin sorter stapler	
	Normal paper mode	Thick paper mode	
Maximum paper size	□: A3, 11" × 17"	□: A3, 11" × 17"	□: A3, 11" × 17"
	$\Box: A4, 8^1/_2" \times 11"$	$\Box: A4, 8^1/_2" \times 11"$	$\Box: A4, 8^1/_2" \times 11"$
Minimum paper size	\Box : B5, 8 ¹ / ₂ " × 11"	\Box : B5, 8 ¹ / ₂ " × 11"	\Box : B5, 8 ¹ / ₂ " × 11"
	\Box : B5, 8 ¹ / ₂ " × 11"	$\Box: B5, 8^1/_2" \times 11"$	\Box : B5, 8 ¹ / ₂ " × 11"
Stapler capacity (80g/m ² , 20 lb)	20 sheets	10 sheets	20 sheets


PReference

If you want to add staples, \Rightarrow P.164 " \checkmark Adding Staples".

When the stapler is jammed, \Rightarrow P.166 " $\stackrel{\bullet}{\Longrightarrow}$ Removing Jammed Staples".

Changing the staple position

If your machine is equipped with the 20-bin sorter stapler, you can select one of two stapling positions by changing the position of the stapler. Open the front cover of the sorter stapler and perform the actions illustrated below.

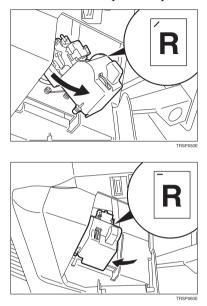

🖉 Note

 \square After changing the position of the stapler should be clicked in position.


Having copies stapled automatically after copying

The optional document feeder is required to use this function.

Press the **B**'B key.


2 Set your originals in the document feeder.

B Press the [Start] key.

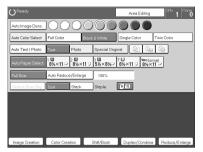

Stapling copies manually after copying

After Sort mode copying is completed, press the BB key.

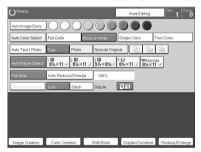

Combination Chart

 \Leftrightarrow Those modes can be used together.

- \star Those modes can be used together with some limitations.
- \rightarrow The original mode is overridden and the newly selected mode is active.

× These modes cannot be used together.

- *1 20-bin sorter stapler. ☆
 10-bin sorter stapler. ×
- *2 20-bin sorter stapler. \rightarrow 10-bin sorter stapler. \times

	Newly Selected Mode		v												Trays	Bypass Feed	Copying		1										
0	riginal Mode	Auto Image Density	Manual Image Density	Auto Color Select	Full Color	Black & White	Single Color	Twin Color		Text	Photo	Special Original	Photo Type Selection	Auto Paper Select	Copying from Paper	Standard size paper	Custom size paper		Thick paper	АНО	OHP Slip Sheet	A3 Fullbleed Copying	Duplex Back	Auto Reduce/Enlarge	Custom Size Original	Sort			Manual Staple
t	Auto Image Density		☆	\rightarrow	☆	43	☆	☆	43	자	☆			☆	☆	☆	☆	☆	☆	☆	43	☆	☆	☆	☆	☆		☆	☆
Image Density		\$		☆	43	43	\$	42	42	42	☆	43	42	42	\$	☆	☆	42	\$	42	43	43	42	☆	42	42	☆	☆	\$
e	Auto Color Select	×	公		↑	↑	→	↑	☆	$\stackrel{\circ}{\bowtie}$	公	삵	☆	×	☆	公	প্ল	☆	岔	Å	☆	Å	삵	公	☆	×	×	\star	☆
Color Mode	Full Color	☆	☆	\rightarrow		\rightarrow	\rightarrow	\rightarrow	☆	\overleftrightarrow	☆	☆	☆	☆	☆	☆	☆	☆	岔	☆	☆	☆	☆	☆	岔	★	★	\star	公
ž	Black & White	장	x	î	Ŷ		ſ	Ŷ	☆	자	☆	☆	☆	×	컶	장	쟈	☆	장	☆	☆	☆	☆	자	☆	☆	☆	☆	정
lo	Single Color	장	x	Ŷ	↑	→		↑	☆		☆	☆	☆	x	컶	장	쟈	☆	장	☆	☆	☆	☆	자	☆	☆	☆	☆	정
ŭ	Twin Color	장	x	1	1	↑	1		☆	자	☆	☆	☆	×	자	정	정	☆	자	☆	☆	☆	☆	자	☆	☆	☆	☆	정
be	Auto Text/Photo	岔	☆	岔	প্ন	☆	☆	প্ন		→	→	→	☆	☆	☆	公	ক্ষ	岔	岔	প্ন	☆	☆	☆	☆	岔	প্ন	☆	公	☆
Type	Text	☆	☆	☆	☆	Ŕ	☆	☆	↑		→	↑	×	☆	☆	☆	☆	☆	☆	☆	Ŕ	☆	☆	☆	☆	☆	☆	☆	☆
- e	Photo	☆	x	☆	☆	☆	장	☆	↑	Ļ		↑	☆	☆	장	25	25	☆	☆	☆	☆	☆	☆	쟈	☆	☆	☆	☆	챃
Original Image	Special Originals	☆	攻	☆	42	42	☆	42	1	1	→		×	42	☆	☆	☆	42	☆	42	42	42	42	42	42	42	☆	☆	☆

														i		i										i		i		i	·
		N	Newly Selected Mode															Feed	20												
																	/S	Bypass Feed	opying												
					ity										_		Tray	æ.	0					<u>8</u> 0		0	T				
С			ıl Mode	☆ Auto Image Density	☆ Manual Image Density	Auto Color Select	☆ Full Color	Black & White	Single Color	Twin Color	Auto Text/Photo	Text	Photo	Special Original	☆ Photo Type Selection	Auto Paper Select	Copying from Paper Trays		Custom size paper		Thick paper	OHP	OHP Slip Sheet	A3 Fullbleed Copying	Duplex Back	Auto Reduce/Enlarge	Custom Size Original	Sort		Auto Staple	Manual Staple
			Paper Select			×		×	×	×	×2	公	☆	☆		-	→	→	→	→	→	→	→	→	→	→	×	☆	☆	☆	☆
		Copy Trays	ying from Paper s	☆	☆	☆	☆	☆	☆	43	☆	☆	43	☆	☆	→		→	Ŷ	↑	Ŷ	→	→	→	→	☆	☆	☆	☆	☆	☆
		paper	Normal	☆	삸	☆	☆	슔	☆	\$	☆	☆	☆	☆	☆	→	→		→		→	→	→	→	☆	☆	☆	☆ *1	☆ *1	☆ *1	☆ *1
		pa	Thick OHP	☆ ☆	☆☆	☆☆	☆ ☆	☆☆	☆ ☆	☆☆	☆ ☆	☆ ☆	☆ ☆	☆ ☆	☆☆	\rightarrow	→ 、		→	→ 、		→	→	→	☆ ×	☆ ☆	☆☆				
		size	OHP Slip Sheet	ਮ ਨੂ	고 ☆	고 ☆	ਮ ਨੂ	교 ☆	교 ☆	ਮ ਨੂੰ	교 ☆	ਮ ਨੂ	ਮ ਨੂੰ	× ☆	고 ☆	→ →	→		≁ ×	↑ ↑	↑ 1	 →		→ ×	× ×	교 ☆	ਮ ਨੂ	× ×	× ×	× ×	× ×
		Standard s	on sup sheet	M	A	μ	A	μ	A	×	A	×	Ζ	A	Δ				^	-	7			^	^	м	×	Â		Â	Â
	č	er 9	Normal	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	→		→			☆	→	×	→		×	☆	×		×	×
Paner Selection	Runsee Food Conving	Custom size paper		☆	☆	☆	☆	☆	☆	42	☆	42	42	☆	☆	→	→	→		42		→	×	→	☆	×	42	×	×	×	×
			3 Fullbleed Copying	☆	☆ ☆	☆☆	☆☆	☆	☆	☆	☆ ☆	☆ ☆	☆☆	☆☆	☆ ☆	→	-		↑	☆☆	☆☆	☆	☆	 ☆	☆ 	☆ ☆	☆	☆	☆☆	× ☆	×
			Back educe/Enlarge	꾜	요 쇼	요 ☆	교 쇼	☆☆	☆ ☆	☆☆	요 ☆	요 쇼	값 ☆	교 쇼	요 슈	\rightarrow	요 ☆	☆ ☆	ম X	요 쇼	র্ম্ব ক্র	× ☆	× ☆	요 고	 ☆	ম	☆ ×	☆ ☆	요 고	ম্ব ক্ল	☆☆
			Size Original	₩ ₩	¤ ☆	₩ \$2	⊼ 2	∝ ☆	¤ ☆	⊼ ☆	¤ ☆	™ ¢	∝ ☆	∞ ☆	₩ \$\$	×	¤ ☆	∞ ☆	∧	¤ ☆	¤ ☆	∞ ☆	¤ ☆	∞ ☆	∞ ☆	×		⊼ 2	장	☆	⊼ ∑
_		ort	onze originar	☆	~	*	*	~	~ ☆	∽ ☆	~ ☆	~ ☆	☆	~ ☆	∽ ☆	^ ☆	*	*	×	☆	*1	×		~ ☆	~ ☆	^ ☆	☆		\rightarrow	~ ->	~ \$2
i	S	tack	ĸ	☆	÷	*	*	\$	☆	 ☆	☆	☆ ☆	☆	±	☆ *	±2	*	*	×	☆	*1	×		 ☆	☆	 ☆	☆ ₩	→		→	×
Finishino	S	tapl		☆	☆	*	*	☆	☆	☆	☆	☆	☆	☆	☆	☆	*	*	×	☆	*1	×		☆	☆	☆	☆	→	→		
5	(Colo	r Conversion	☆	☆	×	☆	×	×	×	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆
itec	C		r Erase	☆	☆	×	☆	☆	☆	x	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆
Color Creation	C	Colo	r Background	☆	☆	×	☆	☆	☆	\$	☆	☆	☆	☆	\$	☆	☆	☆	\$	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆
L C	N		or Image	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆
Image Creation	-		tive/Negative	☆	☆	☆	☆	☆	\$7	\$X	☆	☆	\$	☆	☆	☆	☆	\$	\$X	☆	☆	☆	☆	☆	☆	☆	☆	☆	24	☆	4
d.O.	F		et Reduce/Enlarge	公	☆	☆	☆	☆	☆	☆	☆	公	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	→	公	☆	☆	☆	☆
l e l c	Z	Loon		☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	→	☆	☆	☆	☆	☆
Reduce/Enlaroe	í N	/lagi	ctional nification (%)	☆	\$	☆	☆	☆	☆	☆	☆	\$	\$	☆	☆	☆	☆	☆	☆	☆	☆	\$	☆	\$	\$	→	\$	☆	\$	☆	4
Redi			ctional Size nification (mm)	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	→	☆	☆	☆	☆	☆

		Newly Selected Mode															ed													\square
				٨												Trays	Bypass Feed	Copying				1	1							
C		nal Mode	Auto Image Density	Manual Image Density	☆ Auto Color Select	🌣 Full Color	Black & White	Single Color		Auto Text/Photo	Text	Photo	Special Original	* Photo Type Selection	Auto Paper Select	Copying from Paper	Standard size paper	Custom size paper	Normal paper	Thick paper	OHP	OHP Slip Sheet	A3 Fullbleed Copying	🌣 Duplex Back	Auto Reduce/Enlarge	Custom Size Original	Sort	Stack	Auto Staple	Manual Staple
Υð	Μ	argin Adjustment	☆	☆			☆	첞	꼬누	첞	☆	☆	☆		☆	☆	☆	꼬누	☆	☆	☆	☆	☆		☆	×	☆	☆	☆	☆
'Bo	Ce	entering/Cornering	장	☆	쟋	☆	첫	☆	☆	x	☆	☆	첫	☆	x	전	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆
Shift/Book	Co	over Sheet	☆	☆	☆	☆	☆	장	25	장	☆	☆	☆	☆	☆	☆	×	×	×	☆	×			☆	☆	×	*1	×	*1	*1
	es	Book \rightarrow 1 Sided	☆	☆	☆	☆	☆	쳤	公	쳤	☆	☆	☆	☆	×	☆	☆	公	☆	☆	☆	☆	☆	☆	×	×	☆	☆	☆	☆
	Series	2 Side \rightarrow 1 Sided	☆	☆	☆	☆	☆	었	전	었	☆	☆	☆	\$≊	☆	☆	☆	전	☆	\$≊	☆	☆	☆	☆	☆	×	☆	☆	☆	☆
	ne	Combine 2 originals	☆	☆	岔	☆	☆	☆	☆	☆	☆	☆	☆	☆	×	☆	☆	☆	☆	☆	☆	☆	☆	☆	×	×	☆	岔	☆	☆
Duplex/Combine	Combine	Combine 4 originals	☆	☆	☆	☆	☆	24	24	24	☆	☆	☆	☆	×	☆	☆	×	☆	×	×	×	☆	☆	×	×	☆	☆	☆	☆
ē		1 Sided \rightarrow 2 Sided	☆	公	☆	☆	公	☆	$\stackrel{\wedge}{\simeq}$	☆	☆	☆	公	☆	☆	☆	☆	×	☆	×	×	×	☆	☆	公	×	☆	☆	☆	☆
X/Xe	ex	2 Sided \rightarrow 2 Sided	☆	公	☆	☆	公	☆	$\stackrel{\wedge}{\simeq}$	☆	☆	☆	公	☆	☆	☆	☆	×	☆	×	×	×	☆	☆	公	×	☆	☆	☆	☆
la	Duple	Book \rightarrow 2 Sided	☆	公	☆	☆	公	☆	$\stackrel{\wedge}{\simeq}$	☆	☆	☆	公	☆	×	☆	☆	×	☆	×	×	×	☆	☆	×	×	☆	☆	☆	☆
Õ	ñ	Multi \rightarrow 2 Sided	☆	☆	☆	☆	☆	22	☆	22	☆	☆	☆	公	×	☆	☆	×	☆	х	x	x	☆	☆	×	×	☆	☆	☆	☆
Р	rogi	am User Color	☆	公	☆	☆	公	☆	$\stackrel{\wedge}{\simeq}$	☆	☆	☆	公	☆	☆	☆	☆	$\stackrel{\wedge}{\simeq}$	☆	☆	☆	☆	☆	☆	公	公	☆	☆	☆	☆
	So	ft/Sharp	☆	☆	公	☆	☆	☆	☆	☆	公	☆	☆	☆	☆	☆	公	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	公	☆	☆
nt	Co	ontrast	☆	☆	☆	☆	☆	젔	젔	젔	☆	☆	☆	☆	☆	☆	☆	젔	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆
me	Ba	ckground Density	☆	☆	☆	☆	☆	젔	젔	젔	☆	☆	☆	☆	☆	☆	☆	젔	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆
Adjustment	Pa	stel	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆
dib	Ū.	C.R. Adjustment	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆
		C.S Sensitivity	☆	☆	☆	☆	☆	정	첞	정	☆	☆	☆	☆	☆	☆	☆	첞	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆
Image	Aı Ph	ito Text/ oto Sensitivity	☆	☆	☆	☆	☆	26	전~	26	☆	☆	☆	☆	☆	☆	☆	전~	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆
С	olo	Adjustment	☆	☆	☆	☆	×	×	×	것	☆	☆	☆	公	☆	☆	☆	☆	☆	公	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆
С	olo	Balance Adjustment	☆	☆	公	☆	☆	☆	☆	☆	公	☆	☆	☆	☆	☆	公	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	公	☆	☆
Program	tir	ter recalling your set- gs	☆	☆	☆	\$	☆	25	27	25	☆	4	☆	☆	4	4	☆	27	☆	☆	☆	42	\$	4	☆	☆	\$	☆	4	☆
Iı	nter	rupt Copying	첞	攻	Σ	攻	攻	었는	x	었는	☆	☆	攻	☆	攻	자	☆	x	☆	☆	☆	☆	攻	자	☆	Þ	×	×	х	×

0	Newly Selected Mode	Color Conversion	COLOT ETASE	Color Background	Mirror Image	☆ Positive/Negative	☆ Preset Reduce/Enlarge	Zoom	☆ Directional Magnification (%)	Directional Size Magnification (mm)	Margin Adjustment	Centering/Cornering	Cover Sheet	Book → 1 Sided	2 Sided → 1 Sided	🗱 Combine 2 originals	☆ Combine 4 originals	î	2 Sided → 2 Sided	Book → 2 Sided	Multi → 2 Sided	Program User Color	☆ Image Adjustment	Color Adjustment	☆ Color Balance Adjustment	☆ Program	☆ Interrupt Copying
	Auto Image Density	\$ 5		☆	₩	 ☆		☆	₩	[☆	☆	± ₩	2	₩ 12	☆	\$	- ☆	☆	☆	☆	 ☆	[☆	 ☆	☆	- ☆	 ☆	☆
Image Density		☆ ĭ	22	Σ	25	*	X5	4	X7	\$X	*	\$X	X5	☆	\$X	42	☆	☆	\$X	ঐ	☆	☆	☆	ঐ	☆	ঐ	\$
0		* '	*	×	꼬는	☆	x	자	x	☆	자	☆	x	☆	☆	쟈	☆	자	☆	攻	컶	장	☆	攻	장	攻	첞
po				☆	☆	☆	☆	公	$\stackrel{\wedge}{\boxtimes}$	☆	☆	公	☆	☆	公	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆
Color Mode				☆	☆	☆	\$	☆	☆	☆	☆	☆	\$	☆	☆	☆	☆	☆	☆	☆	☆	☆	公	×	☆	☆	☆
olo	0			☆	☆	☆	☆.	☆	☆	☆	☆	☆	☆.	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	Х	☆	☆	☆.
		* >		☆	☆	☆	☆	☆	☆	☆	☆	☆	☆.	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	×	☆	☆	27
Type				☆	☆	☆	☆	☆	\$	☆	☆	☆	☆	☆	☆	× ∑}	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	2
				☆	\$	☆	2	☆	\$	☆	☆	☆	2	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	\$
age				자 자	자 자	☆☆	자 자	자 자	자 자	\$2 \$2	자 자	☆☆	자 자	☆ ☆	☆☆	작 작	☆ ☆	☆ ☆	☆☆	☆	☆ ☆	☆ ☆	☆ ☆	☆	☆ ☆	☆☆	장 장
Original Image	Special Originals	A 1	~	Σ	Z	м	Z	Z	Z	Z	Z	Ø	Z	м	Ø	X	м	μ	Z	Α	Δ	м	Ø	Α	м	Α	A
	Auto Paper Select	\$	\$	☆	☆	☆	\$	☆	장	☆	☆	\rightarrow	\$	\rightarrow	☆	\rightarrow	\rightarrow	☆	☆	\rightarrow	\rightarrow	☆	☆	☆	☆	☆	☆
		\$	\$	☆	☆	☆	\$	☆	장	☆	☆	☆	\$	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆
	मु Normal		\$	\$	졌	☆	정	\$	첞	\$7	☆	☆	정	☆	☆		×	×	×	×	×	☆	☆	☆	☆	☆	公
	0			☆	☆	☆	x	\overleftrightarrow	☆	☆	☆	☆	\rightarrow	☆	☆		×	×	×	×	×	☆	公	☆	☆	☆	첞
	OHP			☆	☆	☆	公	☆	☆	☆	자	公	×	公	☆	쟈	×	×	×	×	×	☆	公	☆	☆	☆	\$
	standard	☆ ĭ	42	자	\$2	\$	42	자	42	42	☆	43	×	\$	43	\$≍	×	×	×	×	×	☆	42	\$	☆	\$	24
	Normal y			\$	☆	☆	☆.	☆	☆	☆	☆	☆		×	☆		×	×	×	×	×	☆	☆	☆	☆	☆	☆.
Paper Selection	pass Feed Cop Custom size p			화 작	자 작	☆ ☆	X2-	작	착	\$2	*	42 42	× ×	×	42 42		×	×	×	×	×	☆	☆ ☆	☆ ☆	☆	4	☆ ☆
D	iplex Back			z⊱ ≥	z⊱ ≥	¤ ☆	zt z	zt z	24 2	x - x	24 2	× ×		¤ ☆	× ×	24	^ ☆	へ ☆	~ ☆	^ ☆	~ ☆	™ ☆	⊼ ⊼	∝ ☆	™ ☆	∞ ☆	₹¢ Σ
				⊼ ∑	Σ¢ Σ	₩ ₩	~	\rightarrow	\rightarrow	\rightarrow	⊼ ∑	₩ ₩	2 √2	×	₩ ₩		×	∞ ☆	⊼ ∑	×	×	₩ \$2	₩ ₩	⊼ ∆	₩ ☆	⊼ 22	∑∱ ∑
				25	25	~ ☆	₽,	\$	₽,	¢	×	∽ ☆		×	×		×	×	×	×	×	~ ☆	~ ☆	~ ☆	~ ☆	~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~	25
	Ŭ			24	24	☆	25	24	24	~ ☆	☆	~ ☆	*1	☆ *	∵ ☆	☆	☆ *	☆ *		☆	☆ ☆	∽ ☆	∽ ☆	☆ ☆	∽ ☆	☆ ☆	24
hin				☆	☆	±	~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~	☆	 ☆	 ☆	☆	 ☆	×	☆	 ☆	☆	☆	 ☆	☆	☆	 ☆	 ☆	☆ ☆	☆	 ☆	☆	~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~
Finishing				☆ ₩	☆	☆ *	 ☆	☆	☆	 ☆	☆	₩ 1	*1	☆ ☆	₩ 1	☆	☆ *	☆	₩ 1	☆	☆	₩.	₩ ₩	☆	₩.	☆	 ☆
ц	-																	L		L							

		Newly Selected Mode								(%) u	ication (mm)															nt		
0	riai	nal Mode	Color Conversion	☆ Color Erase	Color Background	Mirror Image	Positive/Negative	Preset Reduce/Enlarge	Zoom	Directional Magnification (%)	Directional Size Magnification	Margin Adjustment	Centering/Comering	Cover Sheet	Book → 1 Sided	2 Sided → 1 Sided	Combine 2 originals	Combine 4 originals	1 Sided → 2 Sided	2 Sided → 2 Sided	Book → 2 Sided	Multi → 2 Sided	☆ Program User Color	Image Adjustment	Color Adjustment	Color Balance Adjustment	Program	Interrupt Copying
		lor Conversion		☆	₽	[☆	*	[☆	☆	[☆	 ☆	[☆	• ☆	☆	[☆	☆	☆	• ☆	☆	☆	 ۲	[☆	☆	[☆	☆	₹ 2	[☆	☆
atic	Сс	lor Erase	☆		☆	☆	×	☆	☆	☆	☆	☆	☆	☆	☆	☆	公	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆
Color Creation	Co	lor Background	42	☆		☆	*	☆	42	☆	☆	☆	☆	☆	☆	☆	42	☆	☆	\$2	☆	42	☆	☆	☆	자	42	☆
u	M	irror Image	☆	☆	☆		☆	☆	☆	☆	☆	☆	☆	☆	×	☆	×	×	☆	☆	\times	×	☆	☆	☆	☆	☆	☆
Image Creation		sitive/Negative	*	*	*	<u>م</u>		\$	×5	\$	\$	\$	\$	☆	×	*	×	×	\$	\$z	×	×	\$	\$	\$	x ²	×	*
гgе		eset Reduce/Enlarge	☆ ☆	☆ ☆	*	☆	☆☆		\rightarrow	\rightarrow \rightarrow	\rightarrow	☆ ☆	☆	☆	☆	☆	☆	☆ ☆	☆	슔	☆	*	☆	☆	☆	☆	☆	☆
nla		rectional Magnification (%)	× ☆	× ☆	☆ ☆	☆ ☆	× ☆	\rightarrow	 →	\rightarrow	\rightarrow	ਮ ਨ	☆ ☆	☆☆	☆ ☆	☆ ☆	☆ ☆	ਮ ਨ	☆ ☆	☆☆	☆ ☆	☆ ☆	☆	☆☆	☆☆	☆☆	☆☆	☆ ☆
e/E		rectional Size Magnification	ਮ ਨੂੰ	ਮ ਨੂ	ਮ ਨੂ	ਮ ਨੂ	ਮ ਨੂ	\rightarrow	\rightarrow	 →	\rightarrow	ਮ ਨੂ	ਮ ਨੂ	교 ☆	ਮ ਨੂ	ਮ ਨੂ	ਮ ਨੂ	ਮ ਨੂ	ਮ ਨੂ	교 ☆	ਮ ਨੂ	ਮ ਨੂ	고 ☆	ਮ ਨੂ	뇌 ☆	☆	ਮ ਨੂ	× ☆
Reduce/Enlarge	(m	m)						_	~	,		M																
ok		argin Adjustment	☆	☆	☆	☆	公	☆	☆	☆	☆		☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	公	☆
/Bc		ntering/Cornering	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆		☆	×	☆	×	×	☆	☆	×	×	☆	☆	☆	☆	☆	☆
Shift/Book	CC	Product 1 Cital	\$	☆	\$	☆	☆	☆	☆	☆	☆	\$	☆		×	\$	×	×	☆	☆	×	×	☆	☆	☆	*	\$	\$
	ries	Book \rightarrow 1 Sided	☆☆	☆ ☆	☆☆	× ☆	× ☆	☆ ☆	☆☆	☆ ☆	☆☆	☆	×	× ☆		\rightarrow	\rightarrow	\rightarrow	\rightarrow	\rightarrow	\rightarrow	\rightarrow	☆ ☆	☆ ☆	☆ ☆	작	☆☆	☆☆
	Seri	$2 \operatorname{Side} \rightarrow 1 \operatorname{Sided}$				X						☆	☆		\rightarrow		\rightarrow	\rightarrow	\rightarrow		\rightarrow	\rightarrow						
	ne	Combine 2 originals	☆	☆	☆	×	×	☆	☆	☆	☆	☆	×	×	\rightarrow	\rightarrow		\rightarrow	\rightarrow	\rightarrow	\rightarrow	\rightarrow	☆	☆	☆	☆	☆	☆
Duplex/Combine	Combine	Combine 4 originals	☆	☆	☆	×	×	☆	☆	☆	☆	\$	×	×	\rightarrow	\rightarrow	\rightarrow		\rightarrow	\rightarrow	\rightarrow	\rightarrow	☆	☆	☆	\$2	☆	☆
Ŭ,		$1 \operatorname{Sided} \rightarrow 2 \operatorname{Sided}$	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	\rightarrow	\rightarrow	\rightarrow	\rightarrow		\rightarrow	\rightarrow	\rightarrow	☆	☆	☆	☆	☆	☆
lex,	lex	$2 \text{ Sided} \rightarrow 2 \text{ Sided}$	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	\rightarrow	\rightarrow	\rightarrow	\rightarrow	\rightarrow		\rightarrow	\rightarrow	☆	☆	삸	\$	☆	\$
dng	Duplex	Book \rightarrow 2 Sided Multi \rightarrow 2 Sided	☆ ☆	☆ ☆	☆☆	× ×	× ×	☆☆	☆☆	☆☆	☆ ☆	☆ ☆	× ×	× ×	\rightarrow	\rightarrow	\rightarrow	\rightarrow	\rightarrow	$ \rightarrow$		\rightarrow	☆ ☆	☆ ☆	☆☆	작 장	☆ ☆	☆☆
		am User Color	ਮ ਨ	× ☆	x ☆	× ☆	× ☆	× ☆	x ☆	× ☆	¤ ☆	고 ☆	× ☆	× ☆	↑ ☆	↑ ☆	↑ ☆	↑ ☆	↑ ☆	_ ☆	→	- ☆	м	× ☆	× ☆	자 지	x ☆	¤ ☆
11		ft/Sharp	⊼ ⊼	⊼ ∆	⊼ ⊼	∞ ☆	⊼ Z	¤ ☆	₩ ₩	⊼ ∆	¤ ☆	☆	⊼ ∆	⊼ ¢	☆	☆	¤ ☆	☆	⊼ ☆	교	⊼ ☆	⊼ ⊼	 ☆	~	⊼ ☆	⊼ ∑	⊼ Z	☆
ent		ontrast	⊼ ∆	⊼ 2	⊼∱ ∑	∞ ☆	∝ ☆	¤ ☆	⊼ ∆	☆	∝ ☆	₩ ☆	☆	∞ ☆	\[\] \[\]	∞ ☆	¤ ☆	₩ ☆	☆	☆	☆	⊼∱ ∑	₩ ₩		∝ ☆	장	z 2	∞ ☆
Adjustment		ckground Density	⊼ ☆	∞ ☆	z Z	∝ &	⊼ Z	~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~	~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~	∞ ☆	∝ ☆	™ ☆	∞ ☆	~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~	~	∝ ☆	⊼ ≩	™ ☆	∝ ☆	⊼ ☆	~ &	24	∽ ☆		~	24	⊼ Z	☆
ljus		stel	∽ ☆	~ ☆	24	~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~	~ ☆	~	⊼ ☆	~ ☆	~ ☆	~ ☆	~ ☆	~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~	~	~ ☆	⊼ ∑	~ ☆	~ ☆	~	~	24	~ ☆		~ ☆	∼ ☆	⊼ ≥	~ ☆
		C.R. Adjustment		☆	☆ *	☆	\$	☆	☆ ₩	☆	☆	\$£	☆	☆	\$	☆	☆ *	\$£	☆	☆	☆	☆ *	\$		☆	 ☆	\$	☆
Image		C.S Sensitivity	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆		☆	☆	☆	公
Г	Aι	ito Text/Photo Sensitivity	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	公	☆	☆	☆		公	公	☆	公
		Adjustment	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆		☆	☆	☆
Co	_	Balance Adjustment	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆		☆	☆
Program		ter recalling your settings	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	×	☆	☆	\$2		☆
In	teri	upt Copying	×	×	×	×	×	☆	☆	☆	☆	☆	☆	×	☆	☆	☆	×	×	×	×	×	×	×	×	×	×	

3. Adjustment and Color Memory

Color Balance

This function allows you to control the overall color tone of copies by adjusting the Yellow, Magenta, Cyan and Black color balance. Nine levels of tone are available.

🖉 Note


□ The color balance will return to the default when:

- The machine is automatically reset.
- The [Clear Modes] key is pressed.
- The operation switch is turned off.
- The main power switch is turned off.

□ You can store and adjustments you make in memory and recall them later.

Color Balance Adjustment

Press the [Adjustment] key.

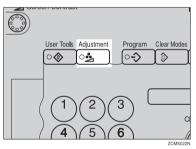

2 Make sure that the [Color Balance] key is selected.



Adjust the color balance, then press the [OK] key.

Color Balance Program

You can store the color balance setting in memory and recall it when you want to use it.

Note

□ You can store up to three color balances.

Storing the adjusted color balance

1 Change the color balance (\Rightarrow P.103 "Color Balance Adjustment"), but don't press the [OK] key.

2 Press the [Color Balance Program] key.

Color Adjustment / Program	n.	OK
Press [OK] key return to mai	n screen.	
Prog. User Color Im	age Adjustment Color Adjustment Color Balance A	a
Adjust color balance for eac	ch color.	
	Color Bale Program	ince
Color Balance Adj.		
	Clear	
Yellow	00000000	
Magenta	$\bigcirc \bigcirc $	
Cyan	00000000	
Black	000000000	
	Color Balarica Status	


Press the [Program] key.

Select a number for this setting.

Color Adjustment / Program	1		OK
Color Balance Program		Cancel	
<program> Select program number key</program>			
Recall	Program		
1 2	3		
A			
indicates that program	is already stored.	0000	-
Yellow	0000		
Magenta	0000		
Cyan	0000		
Black	0000		
		Color Balarice Status	


Recalling the color balance

Press the [Adjustment] key.

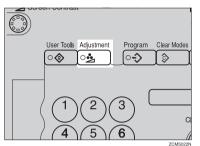

2 Make sure that the [Color Balance] key is selected.

E Press the [Color Balance Program] key.

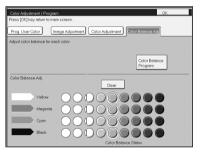

• Make sure that the [Recall] key is selected.

Color Adjustment / Program	n		OK.
Color Balance Program		Cancel	
<recall> Select program number key</recall>			
Recel	Program		
€1 2	3		
indicates that program	is already stored.		
Yellow	0000		
Magenta	0000		
Cyron	0000		
Black	0000		
		Color Balarice Status	

5 Select the setting you want to recall.

🖉 Note

 \square Only color balance programs marked with \clubsuit contain a color balance.


Color Adjustment

This function lets you alter up to three single colors by mixing them with adjacent colors in the color circle. For example, yellow can be shifted towards red to make orange, or towards green to make a yellow green. Note that only areas of the image containing this color will be modified.

🖉 Note


- $\hfill\square$ This function is only available in Full Color mode or Auto Color Select mode.
- □ The single color adjustment will return to the default when:
 - The machine is automatically reset.
 - The [Clear Modes] key is pressed.
 - The operation switch is turned off.
 - The main power switch is turned off.

Press the [Adjustment] key.

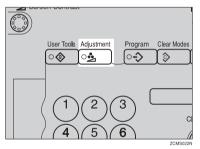


Press the [Color Adjustment] key.

B Select the color key that you want to adjust from the color circle.

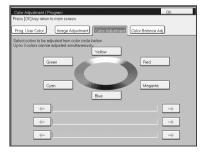

Adjust the color with the keys.

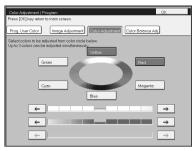

🖉 Note

- □ For example, if you wish to make yellow appear more red, press the [→] key.
- \Box If you wish to make yellow appear more green, press the [\leftarrow] key.

5 Press the [OK] key.

Image Adjustment

You can change the following default settings for image adjustment:


Soft/Sharp	You can adjust the edges of the image to make the image sharper or softer.
	\square Default: level 4
Contrast	You can adjust the contrast between light parts and dark parts of the image.
	Default: level 5
Background Density	You can adjust the background density control.
	𝒞 Note
	Default: level 5
	□ If copying a newspaper or an original with a dark background, adjust the background density to a lighter setting.
	□ If part of the original is marked with a highlighting pen, adjust the background density to a darker setting. However, because the color of a highlighting pen is difficult to duplicate, it might be copied in different colors or some colors might not be copied.
Pastel	You can make copies in pastel tones.
	Ø Note
	 Default: level 9 which yields a normal color copy
U.C.R. Adjustment	You can adjust the black toner density to make the black parts clearer in Full Color mode.
	Ø Note
	Default: <i>level</i> 5
	□ Adjust this setting to a darker setting when you want to copy letter parts clearly in black.
	 Adjust this setting to a lighter setting when the original image is dark.
A.C.S. (Auto Color Se- lection) Sensitivity	You can adjust the sensitivity when detecting whether the original has color areas in Auto Color Select mode. When set to "B&W" values, the machine will be more likely to detect originals as black originals. "Full Color" values will cause the machine to be more likely to detect origi- nals as color originals.
	Note Default: level 3
Auto Text/Photo Sen-	You can adjust the sensitivity when detecting letter and photo parts of
sitivity	an original in Auto Text/Photo mode. If letter parts photo parts of an original are not differentiated correctly, adjust this setting.
	Default: level 5

Soft/Sharp, Contrast, Background Density, and Pastel


🖉 Note

- Any settings you make with the Sharp/Soft, Contrast, Background Density and Pastel functions will be canceled under the following conditions:
 - The machine is automatically reset.
 - The [Clear Modes] key is pressed.
 - The operation switch is turned off.
 - The main power switch is turned off.

Press the [Adjustment] key.

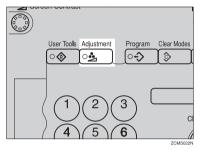

2 Press the [Image Adjustment] key.

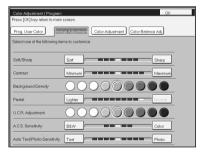

3 Adjust the settings.

PReference

For details, \Rightarrow P.108 "Image Adjustment".

4 Press the [OK] key.

🖉 Note


□ If you do not press the **[OK]** key, you can still make copies, but the Image Adjustment settings you have just entered will not used. However, any settings or featured you chose before pressing the **[Adjustment]** key will still apply.

U.C.R. Adjustment, A.C.S. Sensitivity and Auto Text/Photo Sensitivity


🖉 Note

□ Any settings you make with the U.C.R. Adjustment, A.C.S. Sensitivity, and Auto Text/Photo Sensitivity functions are not cleared by turning the power off or by pressing the **[Clear Modes]** key. They are canceled only when you overwrite them with new settings.

Press the [Adjustment] key.

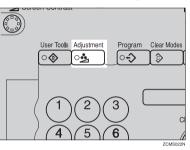

2 Press the [Image Adjustment] key.

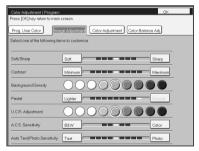

Adjust the settings.

Reference

For details, \Rightarrow P.108 "Image Adjustment".

4 Press the [OK] key.

🖉 Note

□ If you do not press the **[OK]** key, you can still make copies, but the Image Adjustment settings you have just entered will not used. However, any settings or featured you choose before pressing the **[Adjustment]** key will still apply.

Program User Color

In addition to the base colors, you can store up to 15 customized colors into memory (User Color).

Reference

For color samples \Rightarrow P.10 "Color Sample Chart".

If your machine has an option, you can sample the user color. \Rightarrow P.115 "Sampling the User Color (Option)".


🖉 Note

□ There are two ways to make user colors as follows:

- Adjusting a selected base color
- Mixing colors manually with number keys
- □ Up to 15 colors can be stored.
- □ The total percentages of the mixed colors must be 255% or less.
- If the total percentage of the mixed color is over 255%, the copier cannot create the color properly and the results will appear different.
- □ If the total percentage of the mixed colors is too low, toner may not bond to the paper properly resulting in a change in image density.
- The appearance of user colors might vary slightly according to the image type you have selected (Photo, Text, etc.).

Adjusting Colors Based on the Selected Color

Press the [Adjustment] key.

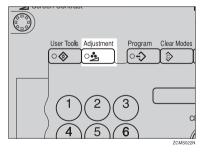


2 Press the [Prog. User Color] key.

B Select the key you wish to store the color in.

Color Adjustment / I	Program			OK
Press [OK] key return				
Prog. User Color	Image Adjustr	nent Color Adjus	tment Color Bala	nce Adj.
Select the User Colo To print sample of a			or.	
Y:M:C:BK	Y:M:C:BK	Y:M:C:BK	Y:M:C:BK	Y:M:C:BK
User Color1	User Color2	User Color3	User Color4	User Color5
Y:M:C:BK	Y:M:C:BK	Y:M:C:BK	Y:M:C:BK	Y:M:C:BK
User Color6	User Color7	User Color8	User Color9	User Color10
Y:M:C:BK	Y:M:C:BK	Y:M:C:BK	Y:M:C:BK	Y:M:C:BK
User Color11	User Color12	User Color13	User Color14	User Color15

4 Select the base color.

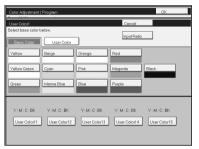

5 You can change the color density in two ways— press the [+ - keys] key.

🖉 Note

□ Increase or decrease in steps with the [+] or [-] key. Press the [+ - keys] key.



□ Enter the percentage with the number keys.—Press the **[Input Ratio]** key.




O Repeat step **D** for each color, then press the [OK] key.

2 Press the [OK] key.


Mixing Colors Manually with the Number Keys

Press the [Adjustment] key.

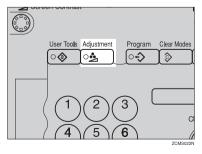

2 Press the [Prog. User Color] key.

3 Select the number that you want to store the user color in.

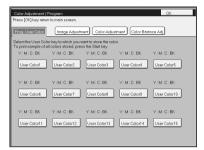


Press the [Input Ratio] key.

Color Adjustment /	Program			ОК
User Color1			Cancel	
Select base color b	pelaw.	_	Input Ratio	
Besic Color	User Color			
Yellow	Beige	Orange	Red	
Yellow Green	Oyan	Pink	Magenta	Black
Green	Marine Blue	Blue	Purple	
Y:M:C:BK	Y:M:C:BK	Y: M: C: BK	Y:M:C:BK	Y:M:C:BK
User Color11	User Color12	User Color13	User Color14	User Color15

5 Select the color that you want to adjust.

6 Enter the density with the number keys, then press the [#] key.

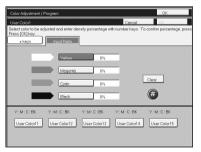

🖉 Note

□ To change the number, press the **[Clear]** key.

2 Repeat steps **5** and **6** for each color then press the [OK] key.

Press the [OK] key.


Sampling the User Color (Option)

You can print out a sample of User Colors to check the colors you have made.


🖉 Note

□ The sample will be copied on a A4 \square , $8^1/_2$ " × 11" \square sheet or a A3 \square , 11" × 17" \square sheet.

Press the [Adjustment] key.

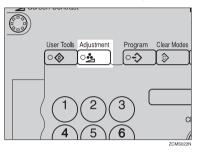

2 Press the [Prog. User Color] key.

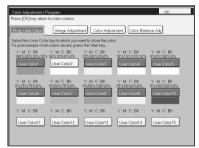


Press the [Start] key.

4. Area Editing (Option)

What is Area Editing?

If your machine has an Area Editing (Option), you can select areas of an image to be treated differently or have effects applied to them. An example is shown below.

Example:

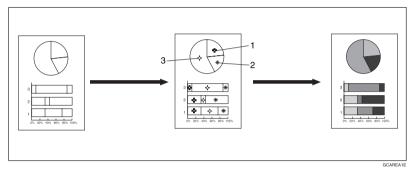

🖉 Note

□ In this chapter, multiple areas of the image that you wish to apply the same effects to are referred to as a "Group".

How to Edit Areas

Editing an image involves scanning it in to memory, choosing areas to edit and how those areas will be re-produced.

The basic steps are summarized below. Details are given in the rest of this section.

- Enter Area Editing mode. Press the [Area Editing] key.
- ② Designate areas.
 ⇒ P.119 "Designating Areas".
- ③ Select modes.
 ⇒ P.130 "Selecting Modes for Designated Areas".
- ④ Specify more areas to be treated differently (optional).
 Repeat ③ and ④.
- ⑤ Copy image. Press the [Start] key.

Designating Areas

Several tools are provided for designating areas of an image.

Area Shapes

- Rectangle: Specify two points defining the opposite diagonals of a rectangle.
- Right Angle Polygon/Polygon: Specify a sequence of points defining a polygon.
- Closed Loop: If your image contains a shape outlined in black and that outline forms a closed loop, specify a point inside the shape to designate it.
- Multi-Closed Loop: If your image contains a closed loop and that outline forms another closed loop, specify points inside of the closed loop to designate it.


Frame/Line

- Rectangle frame: Specify areas defined by a rectangular frame.
- Right Angle Polygon/Polygon frame: Specify areas defined by a polygon or right-angled polygon.
- Line: Specify a series of points linked together by straight lines.

🖉 Note

- □ You can designate many areas and apply the same changes to them all by placing them in the same Group.
- □ Different areas may be treated differently by placing them in different Groups.

Designate Area Display

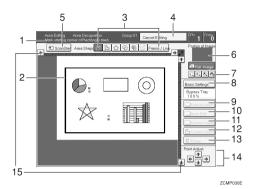

1. Message Area

Messages and instructions appear here.

2. Display Area

The image is displayed.

3. Area Shape/Frame/Line

Select the area shape or frame shape and line.

4. Cancel Editing

Exit area editing.

5. Scan Start

Scan in the original again.

6. Portion of Image

Shows the portion of the original that is currently being viewed or is enlarged.

7. Enlarge

Enlarge 4 Enlarge by about 528% Enlarge 3 Enlarge by about 394% Enlarge 2 Enlarge by about 264% Enlarge 1 Enlarge by about 200% Full Image

🖉 Note

□ After pressing the **[Enlarge]** key, mark a point in the displayed image to zoom in on.

8. Basic Settings

Change the job settings for the entire image.

9. Outside Area

Set modes for outside areas.

10. Area Edit

Edit inside the area.

11. Confirm Areas

Show selected areas, modes, and groups.

12. Confirm Selection

Complete a designated area.

13. Erase Cancel last point selected.

14. Arrow keys Move cursor in small steps.

15. Scroll key Move the portion of the original.

Note

Do not press the touch panel display with any hard or sharp object.

Designate Area Tools

🖉 Note

□ There are nine tools to designate areas.

Area Editing	Area Shape	Rectangle (\Rightarrow P.122 " <i>Rectangle</i> ".)
		Right Angle Polygon (\Rightarrow P.123 "Right Angle Polygon and Polygon".)
		Polygon (\Rightarrow P.123 "Right Angle Polygon and Polygon".)
		Closed Loop (\Rightarrow P.124 "Closed Loop".)
		Multi Closed Loop (\Rightarrow P.124 "Multi-Closed Loop".)
	Frame/Line	Rectangle frame (\Rightarrow P.122 " <i>Rectangle</i> ".)
		Right Angle Polygon frame (\Rightarrow P.126 "Right Angle Poly- gon frame and Polygon frame".)
		Polygon frame (\Rightarrow P.126 "Right Angle Polygon frame and Polygon frame".)
		Line (\Rightarrow P.127 "Line".)

🖉 Note

- □ You cannot use the optional document feeder with this function.
- □ The relationships between the position of the original and the orientation of the scanned image on the display are as follows:


Set on the exposure glass	Display
↓ ↓ Exposure glass	Display
	GCAREA5E

Area Shapes

Rectangle

1 Set your original on the exposure glass.

2 Press the [Area Editing] key.

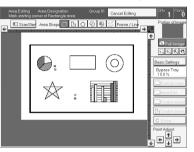


🖉 Note

□ **[Rectangle]** key is selected by default.

3 Mark the first point.

4 Mark the diagonally opposite corner of the area you wish to select.

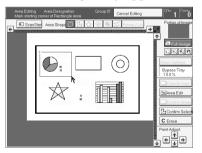

🖉 Note

- □ When you make a mistake, press the **[Erase]** key.
- □ Repeat **4** and **5** to add more rectangles.
- □ When you continue to add areas, you can select other shapes (except Closed Loop Multi-Closed Loop, Line, Frame).

5 Press the [Confirm Selection] key.

O Press the [Area Edit] key, specify your settings, then press the [OK] key.

Reference

For details, \Rightarrow P.130 "Selecting Modes for Designated Areas".


2 Press the **[Start]** key.

Right Angle Polygon and Polygon

1 Set your original on the exposure glass.

2 Press the [Area Editing] key.

Press the 🕒 [R.A. Polygon] or 🙆 [Polygon] key.

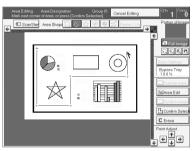

4 Mark the first point.

5 Mark the next points.

🖉 Note

When you use Right Angle Polygon mode, mark points that make right angles.

6 After making the last point, press the [Confirm Selection] key.

2 Press the [Area Edit] key, specify your settings, then press the [OK] key.

PReference

For details, \Rightarrow P.130 "Selecting Modes for Designated Areas".

8 Press the [Start] key.

Closed Loop


Limitation

□ If you specify an area with Closed Loop, you cannot specify any additional areas with other selection tools.

🖉 Note

- When you color areas with the Closed Loop, the area boundary may shift depending on the image.
- **1** Set your original on the exposure glass.
- **2** Press the [Area Editing] key.
- **3** Press the 💿 (Closed Loop) key.

4 Touch on a point inside a closed loop.

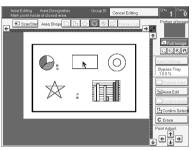

5 Press the [Confirm Selection] key.

O Press the [Area Edit] key, specify your settings, then press the [OK] key.

For details, \Rightarrow P.130 "Selecting Modes for Designated Areas".

2 Press the **[Start]** key.

Multi-Closed Loop

Limitation

If you specify an area with Multi-Closed Loop, you cannot specify any additional areas with other selection tools.


1 Set your original on the exposure glass.

2 Press the [Area Editing] key.

3 Press the 🖲 (Multi-Closed loop) key.

PReference

Press on a point inside the exterior area you wish to specify.

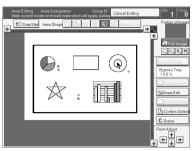

5 Press on a point inside the interior area you wish to treat differently.

🖉 Note

 \square Be sure to select a point inside of the exterior area you wish to define.

6 Press the [Confirm Selection] key.

2 Press the [Area Edit] key, specify your settings, then press the [OK] key.

PReference

For details, \Rightarrow P.130 "Selecting Modes for Designated Areas".

8 Press the [Start] key.


Frame/Line

Rectangle frame

1 Set your original on the exposure glass.

2 Press the [Area Editing] key.

- B Press the [Frame / Line] key.
- 4 Press the 🔲 (Rectangle) key.

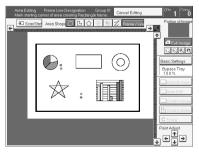

5 Mark the first point.

6 Mark the diagonally opposite corner of the area you wish to select.

2 Press the [Confirm Selection] key.

B Press the [Area Edit] key, specify your settings, then press the [OK] key.

For details, \Rightarrow P.130 "Selecting Modes for Designated Areas".

9 Press the **[Start]** key.


Right Angle Polygon frame and Polygon frame

1 Set your original on the exposure glass.

2 Press the [Area Editing] key.

B Press the [Frame / Line] key.

4 Press the
☐ (Right Angle Polygon) key or the
☐ (Polygon) key.

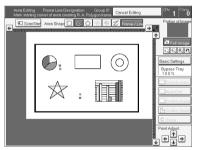

5 Mark the first point.

6 Mark the next points.

After making the last point, press the [Confirm Selection] key.

B Press the [Area Edit] key, specify your settings, then press the [OK] key.

PReference

For details, \Rightarrow P.130 "Selecting Modes for Designated Areas".

9 Press the **[Start]** key.


Line

1 Set your original on the exposure glass.

2 Press the [Area Editing] key.

B Press the [Frame / Line] key.


Press the *Z* (Line) key.

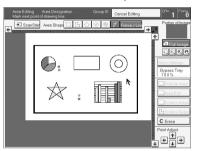

5 Mark the first point.

6 Mark the next points.

After marking the last point, press the [Confirm Selection] key.

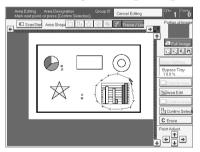

B Press the [Area Edit] key, specify your settings, then press the [OK] key.

₽Reference

For details, \Rightarrow P.130 "Selecting Modes for Designated Areas".


9 Press the **[Start]** key.

Notes for Designating Areas

The number of the points, areas, and groups that can be designated

🖉 Note


- □ Maximum number of points: 500
- □ In Right Angle Polygon mode, Polygon mode, or Line mode, the maximum number of points for one area is 30.
- □ The number of areas that can be designated is as follows:
 - Rectangle mode: maximum 250 areas
 - Right Angle Polygon mode, Polygon mode, Line mode: 500 points maximum. For example, if 10 points are designated for each area, the maximum number of areas that can be designated is 50.
 - Closed Loop mode, Multi-Closed Loop mode: maximum 500 areas
- Maximum number of groups: 20 ("Group" means a set of areas that you want to do same editions.)
- □ If you want to designate area shape like an acute angle by using Polygon mode or Line mode, see the following instructions.
 - Use two separate lines to create angle(A).
 - The first designated point(1) and the next designate point(3) should have distance of more than 4mm(0.2")(B).

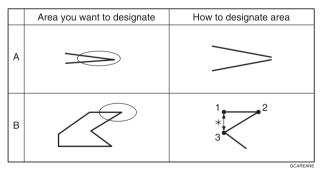

*:4mm(0.2")

🖉 Note

Do not designate an area or line which overlaps part of another area or line. If an area overlaps another one, the job settings specified last will be applied to the overlapped portion or those areas might not be copied. However, areas containing areas (see below) are permitted. Designate starting with the outermost area.

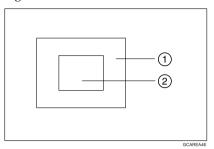

- □ These operations are available, however, under the following conditions:
 - When designating areas with Closed Loop mode, Multi-closed Loop or Frame/Line mode.
- If you mark a line and it overlaps another line you have previously marked, the last point you marked will be canceled automatically.
- If you designate an area in Right Angle Polygon mode, make sure to mark points that make right angles. If you mark a point which does not match, the editor will automatically correct it to make a right angle.
- □ If you want to designate a triangular area, use Polygon mode.
- In Closed Loop mode or Multi-Closed Loop mode, the machine might not detect a closed loop area or multi-closed loop area completely under the following conditions:
 - The outline is not completely closed, it is too light to detect, or the thickness is uneven.
 - The outline is thinner than 0.3mm.
 - The outline is not black.
 - The space between two closed loop outlines is less than 1mm.
 - The closed loop can be up to 2 meters long.
 - The area enclosed by the outline is not white.
- □ The more areas you designate, the more time copying will take.
- If you erase an area, group, or job setting, it is cleared from the display. However, the points are still stored in memory and are not cleared until you exit Area Editing. This affects the maximum number of areas you can designate.
- Closed Loop mode Multi-Closed Loop mode and Frame/Line mode cannot be used with Rectangle mode, Right Angle Polygon mode, and Polygon mode for one group at a time.
- □ If you need to align areas precisely, you can have a grid shown on the enlarged display. The grid spacing matches the scale of the display.

Selecting Modes for Designated Areas

PReference

The available modes for area editing depend on the area shape. \Rightarrow P.146 "*Combination Chart for Area Editing*".

Regarding functions that cannot be used together in area editing, \Rightarrow P.146 "Combination Chart for Area Editing".

More than one mode can be set for designated area, however, there are some limitations, \Rightarrow P.146 "*Combination Chart for Area Editing*". And up to 7 patterns of modes can be set together.

🖉 Note

Up to 20 groups of multiple areas can be edited. All the areas should belong to groups 1 ~ 20. You can select up to seven job patterns for at most 20 groups. After you have set seven patterns, the copier will only allow you to choose the pattern of a previous group. If you change the settings for one group, it will change the settings for all other groups with the same job pattern. However, if you have set a Paint, Color Background, or Frame / Line, changing the color in one group will not affect other groups. (Up to 15 colors can be selected.)

□ The modes that can be set for inside areas as follows:

- Color/Image Adjustment: Image Density, Color Mode, Original Type, Image Adjustment, Color Adjustment, Color Balance Adjustment
- Color Creation: Color Conversion, Color Erase, Color Background, Paint, Type Mask

🖉 Note

- The editing functions available when specifying area with Frame/Line mode are Width and Color.
- Color/Image Adjustment's default setting:
 - Image Density Manual Image Density
 - Color Mode Black & White
 - Original Type Text
- □ You can change the default settings. \Rightarrow P.173 "User Tools".
- Depending on the shapes of the areas, coloring or deleting near the outlines of the areas might not do well, or the outlines might become uneven.
- The way to set modes is basically the same as for the entire image. For details, refer to each page.
 - To fill an area with a selected color, select the Paint.
 - Image Density (⇒ P.26 "Adjusting Copy Image Density".)
 - Original Type (⇒ P.33 "Selecting the Original Image Type".)
 - Color Adjustment (\Rightarrow P.106 "Color Adjustment".)
 - Color Conversion (⇒ P.83 "Color Conversion".)

- Color Background (⇒ P.86 "Color Background".)
- Color Mode (⇒ P.28 "Selecting a Color Mode".)
- Image Adjustment (⇒ P.108 "Image Adjustment".)
- Color Balance Adjustment (⇒ P.103 "Color Balance Adjustment".)
- Color Erase (\Rightarrow P.85 "Color Erase".)
- Save Area (\Rightarrow P.133 "Save Area".)
- Changing Basic Settings for the Entire Image (⇒ P.138 "Changing Basic Settings for the Entire Image".)
- Change Modes (⇒ P.140 "Change Modes".)
- Adding Areas (⇒ P.141 "Adding Areas".)
- Erasing a Group (⇒ P.143 "Erasing a Group".)

Area Editing

Basic modes


Designate the areas you wish to modify.

🖉 Note

\Box For how to designate areas, \Rightarrow P.119 "Designating Areas".

Press the [Area Edit] key.

B Press the [Col. /Image Adjust.], [Color Creation] key.

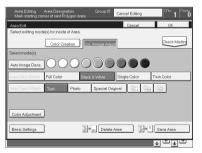

Select the effects you wish to apply.


🖉 Note

- □ Image Density, \Rightarrow P.26 "Adjusting Copy Image Density".
- \Box Color Mode, \Rightarrow P.28 "Selecting a Color Mode".
- □ Original Type, \Rightarrow P.33 "Selecting the Original Image Type".
- \Box Color Adjustment, \Rightarrow P.106 "Color Adjustment".
- □ Color Creation, \Rightarrow P.83 "Color Creation".

Press the [OK] key.Press the [Start] key.

Delete Area

This function blanks out designated areas.

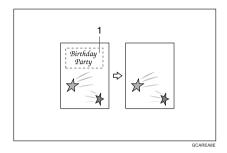

1. Designated area

Note

□ When you select Delete Area mode, previously selected modes are canceled.

Designate the areas you wish to modify.

2 Press the [Area Edit] key.

🖉 Note

 \Box For how to designate areas, \Rightarrow P.119 "Designating Areas".


B Press the [Delete Area] key.



4 Press the [OK] key.5 Press the [Start] key.

Save Area

This function blanks out all areas except those designated.

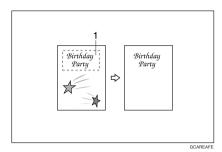

1. Designated area

🖉 Note

□ When you select Save Area mode, previously selected modes are canceled.


Designate the areas you wish to modify.

🖉 Note

 \Box For how to designate areas, \Rightarrow P.119 "Designating Areas".

2 Press the [Area Edit] key.

B Press the [Save Area] key.

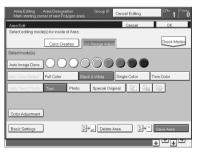

4 Press the [OK] key.5 Press the [Start] key.

Frame/Line

Editing color and widths

🖉 Note

- □ When specifying the Area for the Frame/Line mode, only the line color and width are features that can be selected.
- □ Frame/Line widths:
 - Metric version: 0.25 2.0mm (in 0.25mm steps)
 - Inch version: 0.01" 0.08" (in 0.01" steps)
- □ The frame and line width might be uneven depending on the angle of the line.


Designate the areas you wish to modify.

Note

 \Box For how to designate areas, \Rightarrow P.119 "Designating Areas".

2 Press the [Area Edit] key.

3 Select the color and widths.

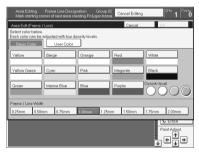

4 Press the [OK] key.

Selecting Modes for Outside Designated Areas

Reference

The available modes for area editing depend on the area shape. \Rightarrow P.146 "Combination Chart for Area Editing".

Regarding functions that cannot be used together in area editing, \Rightarrow P.146 "Combination Chart for Area Editing".

More than one mode can be set. However, there are some limitations, \Rightarrow P.146 "*Combination Chart for Area Editing*".

The modes that can be set for outside areas as follows:

- Color/Image Adjustment: Copy Image Density, Color Mode, Original Type, Image Adjustment, Color Adjustment, Color Balance Adjustment
- Color Creation: Color Conversion, Color Erase, Color Background, Paint

🖉 Note

- □ Color/Image Adjustment default settings:
 - Image Density Manual Image Density
 - Color Mode Black & White
 - Original Type Auto Text/Photo
- □ You can change the default settings. \Rightarrow P.173 "User Tools".

□ The way to set modes is basically the same as for the entire image. For details, refer to each page.

- To fill an area with a selected color, select Paint.
- Image Density (⇒ P.26 "Adjusting Copy Image Density".)
- Original Type (⇒ P.33 "Selecting the Original Image Type".)
- Color Adjustment (\Rightarrow P.106 "Color Adjustment".)
- Color Conversion (⇒ P.83 "Color Conversion".)
- Color Background (⇒ P.86 "Color Background".)
- Color Mode (⇒ P.28 "Selecting a Color Mode".)
- Image Adjustment (⇒ P.108 "Image Adjustment".)
- Color Balance Adjustment (⇒ P.103 "Color Balance Adjustment".)
- Color Erase (\Rightarrow P.85 "Color Erase".)
- Save Area (\Rightarrow P.133 "Save Area".)

Area Shapes

Basic modes




1 Designate the areas you wish to modify.

- Note
- \Box For how to designate areas, \Rightarrow P.119 "Designating Areas".

2 Press the [Outside Area] key.

Press the [Col. /Image Adjust.] or [Color Creation] key.

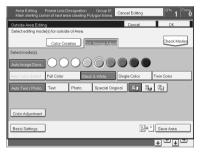

Select the effects you wish to apply.

Note

- \Box Color Creation, \Rightarrow P.83 "Color Creation".
- \square Basic Settings, \Rightarrow P.138 "Changing Basic Settings for the Entire Image".

5 Press the [OK] key.

6 Press the [Start] key.

Save Area


1 Designate the areas you wish to modify.

Note Note

 \Box For how to designate areas, \Rightarrow P.119 "Designating Areas".

2 Press the [Area Edit] or [Outside Area] key.

B Press the [Save Area] key.

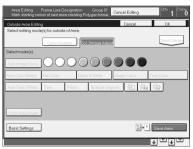

Select the effects you wish to apply [OK] key.

5 Press the [Start] key.

4

 
Changing Basic Settings for the Entire Image

You can change job settings for the entire image during area editing. The job settings that can be changed are as follows:

- Paper Select, \Rightarrow P.36 "Selecting the Copy Paper Size".
- Reduce/Enlarge (Preset R/E, Zoom, Size Magnification, Directional Magnification), ⇒ P.54 "Preset R/E".
- Shift, \Rightarrow P.76 "Shifting the Image".
- Margin Adjustment, \Rightarrow P.77 "Margin Adjustment".
- Sort/Stack/Staple (Option), ⇒ P.90 "Finishing".


🖉 Note

- □ Regarding functions that cannot be used together in area editing, \Rightarrow P.146 "*Combination Chart for Area Editing*".
- When you set Shift and Save Area together and designate more than one area in this mode, the minimum size rectangle that includes all the designated areas is shifted as follows:



- **1.** Designated Area
- 2. Area that will be shifted

Press the [Basic Settings] key.

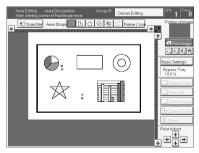

2 Change the job settings.



B Press the [OK] key.

4

Checking and Changing Areas

Use this function to check the areas you have selected and the modes you have chosen for each area.

You can:


- Change the modes for an area/group
- Add an area to a group
- Erase an area
- Erase a group

🖉 Note

□ Note that even if you erase a job setting, a group, or an area, they still consume memory until you exit Area Editing.

Change Modes


Press the [Confirm Areas] key.

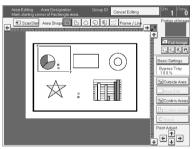

🖉 Note

□ All designated areas are displayed.

2 Select an area or a group.

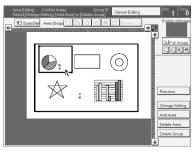


🖉 Note

140 \Box Areas in this group are highlighted.

Press the [Change Setting] key.

Change the modes, then press the [OK] key.

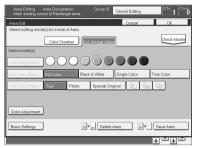


🖉 Note

- \Box Color Creation, \Rightarrow P.83 "Color Creation".
- \Box Color Adjustment, \Rightarrow P.106 "Color Adjustment".
- \square Basic Settings, \Rightarrow P.138 "Changing Basic Settings for the Entire Image".
- □ Delete Area, \Rightarrow P.132 "Delete Area".
- \Box Save Area, \Rightarrow P.133 "Save Area".

5 Press the [Previous] key.

Adding Areas


Press the [Confirm Areas] key.

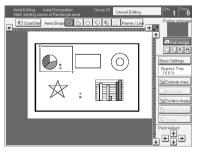

🖉 Note

□ All designated areas are displayed.

2 Select an area or a group.

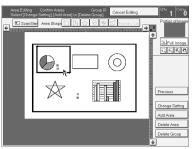

🖉 Note

□ Areas in this group are highlighted.

B Press the [Add Area] key.

Select the area shape.

5 Designate areas, then press the [Confirm Areas] key.


🖉 Note

 \Box For how to designate areas, \Rightarrow P.119 "Designating Areas".

6 Press the [**Previous**] key.

Erasing an Area


Press the [Confirm Areas] key.

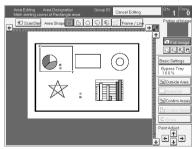

🖉 Note

□ All designated areas are displayed.

2 Select an area that you want to cancel.

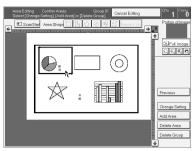

B Press the [Delete Area] key.


Press the [Yes] key.

A	vea Edit Select [Cl	ing (nangeS	Confirm Areas etting], [Add Are	za) or [Dei	Group 01 lete Group].	Cancel Ec	iñng	⁰∾ 1	Cnnv
*	Clear	all selec	ted areas?						0.00 (0.0
	No						Yes		
			X	÷				Previous Change S	
								Add Area	_
								Delete G	roup

5 Press the [Previous] key.

Erasing a Group


Press the [Confirm Areas] key.

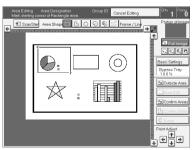

🖉 Note

□ All designated areas are displayed.

2 Select a group that you want to cancel.

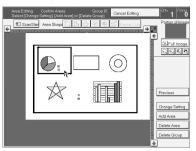


🖉 Note

□ Areas in this group are highlighted.

B Press the [Delete Group] key.


Press the [Yes] key.

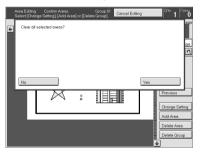


5 Press the [Previous] key.

Exiting Area Editing

Press the [Cancel Editing] key.

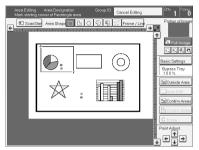

Press the [Yes] key.

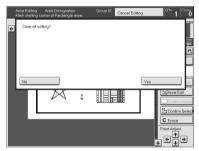

Combination Chart for Area Editing

- ① Functions available for designated areas.
- Functions available for areas outside designated areas.
- ③ Functions that can be selected together in an area.
- ④ Functions available with each shape.
- ⑤ Functions available for the entire image.
- \Leftrightarrow Those modes can be used together.
- \star Those modes can be used together with some limitations.
- \rightarrow The original mode is overridden and the newly selected mode is active.
- × These modes cannot be used together.

		0	0	2 3													
		-	Newly selected mode														
				Co	lor	Mo	de	De	en-					Co	lor		
								sit	y	Туре				Cr			
				Full Color	Black & White	Single Color	Twin Color	Manual Image Density	Auto Image Density	Auto Text Photo	Text	Photo	Special Original	Color conversion	Color Erase	Paint	Color Background
Color Mode	Full Color	*	☆		\rightarrow	\rightarrow	\rightarrow	☆	×	\rightarrow	☆	☆	☆	☆	☆	\rightarrow	☆
	Black & White	*	攻	\rightarrow		\rightarrow	\uparrow	攻	攻	\rightarrow	攻	攻	25	×	攻	\rightarrow	☆
	Single Color	×	☆	\rightarrow	\rightarrow		\rightarrow	☆	☆	\rightarrow	☆	☆	☆	×	☆	\rightarrow	☆
	Twin Color	×	☆	\rightarrow	\rightarrow	\rightarrow		☆	☆	\rightarrow	☆	☆	☆	×	×	\rightarrow	☆
Image Density	Manual Image Density	☆	☆	☆	☆	☆	☆		☆	☆	☆	☆	☆	☆	☆	☆	公
	Auto Image Density	×	☆	★	☆	☆	☆	☆		☆	☆	☆	☆	☆	☆	☆	☆
Original Type	Auto Text/Photo	×	☆	☆	☆	☆	☆	☆	☆		\rightarrow	\rightarrow	\rightarrow	☆	☆		☆
	Text	*	자	24	☆	자	\$¢	쟈	자	\rightarrow	-	\uparrow	\rightarrow	쟈	자		☆
	Photo	*	자	4	☆	첫	Ņ	자	자	\uparrow	\uparrow		\uparrow	자	자		☆
	Special Original	*	자	4	☆	첫	Ņ	자	자	\uparrow	\uparrow	\uparrow		자	자		☆
Color Creation	Color Conversion	*	자	4	×	×	×	자	자	자	자	자	자		자	\uparrow	\rightarrow
	Color Erase	*	攻	장	☆	장	×	컶	자	장	컶	자	장	컶	-	\uparrow	\rightarrow
	Paint	*	攻	×	×	×	×	×	자	×	×	×	×	\uparrow	\rightarrow		\rightarrow
	Color Background	*	자	4	☆	첫	Ņ	자	자	자	자	자	자	\uparrow	\uparrow	\uparrow	
Image Adjustment		*	攻	장	☆	장	27	컶	자	장	☆	☆	장	컶	자	\uparrow	\rightarrow
	Contrast	*	자	4	☆	첫	Ņ	자	자	자	자	자	자	자	자	자	☆
	Background Density	×	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	\rightarrow	\rightarrow
	Pastel	*	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	\rightarrow
	U.C.R. Adjustment	×	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆
Color Adjustment		★	☆	☆	\rightarrow	\rightarrow	\rightarrow	☆	☆	☆	☆	☆	☆	☆	☆	\rightarrow	☆
Color Balance Adju	stment	*	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	公
Save Area		☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	公
Delete Area		☆	×	×	×	×	×	×	×	×	×	×	×	×	×	×	×

I	0 2 3																	
			1	Newly select			ed	mo	de	-								
					Color Mode			e Den- Or			Original Color							
									sity		Туре				Creation			
									Ę,			Î						
					Full Color	Black & White	Single Color	Twin Color	Manual Image Density	Auto Image Density	Auto Text Photo	Text	Photo	Special Original	Color conversion	Color Erase	Paint	Color Background
Paper Select	Auto Paper	Select	×	×	Æ	B	ŝ	Ĥ	Z	A	A	H	Ы	ŝ	U	C	Ъ	C
	Copying from Paper Trays		×	×	1													
	Bypass Fee		×	×														
Reduce/Enlarge	Preset Redu	ice/Enlarge	×	×														
Ū	Zoom	0	×	×														
	Directional	Magnification (%)	×	×														
	Directional	Size Magnification (mm)	×	×														
Auto Reduce/Enla			×	×														
Shift/Book	Centering/ justment	Cornering, Margin Ad-	×	×														
Duplex/Combine	Series	Book \rightarrow 1 Sided	×	×														
		$2 \operatorname{Sided} \rightarrow 1 \operatorname{Sided}$	×	×														
	Duplex	$1 \operatorname{Sided} \rightarrow 2 \operatorname{Sided}$	×	×														
		$2 \operatorname{Sided} \rightarrow 2 \operatorname{Sided}$	×	×														
		$Book \rightarrow 2 Sided$	×	×														
		Multi \rightarrow 2 Sided	×	×														
	Combine Combine 2 originals		×	×														
		Combine 4 originals	×	×														
Finishing	inishing Sort/Stack/Staple			×														
Program			×	×														
Interrupt Copying			×	×														

Area Editing (Option)	
	1

			3										۲								6	
				Newly selected mode																		
			Image																			
			Ac	ljus	tme	ent	1						-		r	-						
			Soft/Sharp	Contrast	Background Density	Pastel	U.C.R. Adjustment	Color Adjustment	Color Balance Adjustment	Save Area	Delete Area		Right Rectangle	Polygon	Closed Loop	Multi Closed Loop	Line	Frame Line & Rectangle	Frame Line & Right Polygon	Frame Line & Polygon		
Color Mode	Full Color		☆	☆	☆	岔	Σ	☆	☆	☆	\rightarrow	交	☆	☆	☆	☆						
	Black & V		☆	☆	☆	☆	☆	×	☆	☆	\rightarrow	☆	☆	☆	☆	☆.						
	Single Co		岔	☆	☆	岔	公	×	☆	☆	\rightarrow	☆	☆	☆	☆	☆						
	Twin Col		岔	☆	☆	岔	公	×	☆	☆	\rightarrow	☆	☆	☆	☆	☆						
Image Density		nage Density	☆	☆	☆	☆	☆	☆	☆	☆	\rightarrow	☆	☆	☆	☆	☆						
<u> </u>		ge Density	☆	☆	☆	☆	☆	☆	☆	☆	\rightarrow	☆	☆	☆	☆	☆						
Original Type	Auto Tex	t/Photo	岔	☆	☆	岔	公	☆	☆	☆	\rightarrow	☆	☆	☆	☆	☆						
	Text		☆.	☆	☆	☆	☆	☆	☆	☆	\rightarrow	☆.	☆	☆	☆	☆						
	Photo		☆	☆	☆	☆	☆	☆	☆	☆	\rightarrow	☆	☆	☆	☆	☆						
	Special O		岔	☆	☆	岔	公	☆	☆	☆	\rightarrow	☆	☆	☆	☆	☆						
Color Creation	Color Cor		☆	☆	☆	☆	☆	☆	☆	☆	\rightarrow	☆	☆	☆	×	×						
	Color Era	se	☆	☆	☆	☆	☆	☆	☆	☆	\rightarrow	☆	☆	☆	×	×						
	Paint		×	☆	×	☆	☆	×	☆	☆	\rightarrow	☆	☆	☆	☆	☆						
	Color Background		☆	☆	☆	☆	☆	公	☆	☆	\rightarrow	☆	☆	☆	☆	☆						
Image	Soft/Sharp			☆	☆	☆	☆	☆	☆	☆	\rightarrow	☆	☆	☆	☆	☆						
Adjustment	Contrast	10 1	☆		☆	☆	☆	☆	☆	☆	\rightarrow	☆	☆	☆	☆	☆						
		nd Density	☆	☆		☆	☆	☆	\$	☆	\rightarrow	☆	☆	☆	☆	☆						
	Pastel	1:	☆	☆	☆		☆ 	☆	☆	☆	\rightarrow	☆	☆	☆	☆	☆						
	U.C.R. Ac	ijustment	☆	☆	☆	☆		☆	☆	☆	\rightarrow	☆	☆	☆	☆	☆						
Color Adjustme Color Balance	int		☆	☆	☆	☆	☆	 જ	☆	☆☆	\rightarrow	☆	☆	☆	☆	☆☆						
Save Area			☆	☆	☆		☆			ж 	\rightarrow	☆	☆	☆	☆							
Delete Area			☆ ×	☆ ×	☆ ×	☆ ×	☆ ×	☆ ×	☆ ×	×	☆	× ☆	× ☆	× ☆	× ☆	× ☆						
	Auto Pap	ar Calact	^	~	~	~	~	~	~	~		м	ы	м	м	ы					×	
Paper Select	1	from Paper Trays																			^ ☆	
		ed Copying																			☆	
Reduce/		duce/Enlarge																			☆	
Enlarge	Zoom	auce/Enlarge	-																		☆ ☆	
Linuige		al Magnification (%)	-																		*	
		al Size Magnification	-																		~ ☆	
	(mm)	an olize widghineution																			~	
Auto Reduce/Enlarge		1																	ł	☆		
Shift/Book		/Cornering, Margin	1																		☆ ☆	
	Adjustment																					
Duplex/	Series	$Book \rightarrow 1 Sided$																			×	
Combine		2 Sided \rightarrow 1 Sided																			×	
	Duplex	1 Sided \rightarrow 2 Sided																			×	
		2 Sided \rightarrow 2 Sided	1																	ļ	×	
		$Book \rightarrow 2 Sided$	1																		×	
		Multi \rightarrow 2 Sided	1																		$\begin{array}{c} \times \\ \times $	
	Combine	Combine 2 originals	1																	ł	×	
		Combine 4 originals	1																	ł	×	
Finishing	Sort/Stac	0	1																	ł	☆	
Program	л. :	1	1																		☆	
Interrupt Copyi	nσ		1																		×	

5. What to Do if Something Goes Wrong

If Your Machine Does not Operate as You Want

Check the following:

Condition	Action									
Nothing happens when the operation switch is turned on.	Is the main power switch turned on? \rightarrow Turn on the main power switch.									
Paper tray is empty.	Load paper. \Rightarrow P.154 " $rightarrow$ Loading Paper".									
Toner container is al- most empty. Or toner con- tainer is empty.	Add toner. \Rightarrow P.156 "La Changing The Toner Cartridge".									
Doors/covers are open.	Close the doors/covers.									
₿ Misfeed occurs.	Remove misfed paper. \Rightarrow P.161 " <i>H</i> Clearing Misfeeds".									
Let The machine instructs you to add staples.	Add staples. \Rightarrow P.164 " Adding Staples".									
The machine instructs you to enter your user code.	The machine is set for user code mode. Enter your user code. \Rightarrow P.179 "General Features".									
The Energy Saver indica- tor is on.	Your machine is in Energy Saver mode. \rightarrow Press the [Energy Saver] key. \Rightarrow P.49 "Energy Saver Mode".									
Misfeeds occur frequently.	Is the right kind of paper in the paper tray? → Paper size and weight must be within the specifications for this machine.									
	Is folded, wrinkled, damp, or curled paper in the paper tray? \rightarrow Always use dry, undamaged paper.									
	Is the paper properly set in the paper tray? \rightarrow Always load paper correctly.									
	Are there any pieces of misfed paper or other foreign objects in the machine?									
	\rightarrow Make sure that the paper path is completely clear of paper and other material after a misfeed.									
Staples do not come out at	There are jammed staples in the stapler.									
all.	\rightarrow Remove the jammed staples. \Rightarrow P.166 " \clubsuit Removing Jammed Staples".									
	After loading a new staple cartridge, staples might not be ejected the first few times you try to use the stapler.									
🗹 or Ů or 🕇 is lit	Contact your service representative.									

Condition	Action								
The machine cannot detect	Set custom size original on the exposure glass.								
the original size.	Input the both horizontal and vertical sizes of the custom original. \Rightarrow P.41 "Copying onto custom size paper with the bypass tray".								
	Select paper manually, not in Auto Paper Select mode.								
	Do not use Auto Reduce/Enlarge mode.								
	Set your originals.								
The machine instructs you to check the original direction.	Set the original in the same direction as the copy paper.								
The machine instructs you to check paper size.	Select the proper paper size.								
The machine cannot sort this size paper.	Select the proper paper size that can be used in Sort mode. \Rightarrow P.90 "Sort".								
The machine cannot stack this size paper.	Select the proper paper size that can be used in Stack mode. \Rightarrow P.92 "Stack".								
You cannot enter the de- sired copy set number.	You can change the maximum copy quantity that you can make at a time. \Rightarrow P.179 "General Features".								
The machine instructs you to set the duplex tray.	Reset the duplex tray correctly. \Rightarrow P.4 "Guide To Components".								
The machine instructs you to wait.	Wait for the machine to warm-up.								
The panel display is off.	Press the [Energy Saver] key to cancel Energy Saver mode.								
	Turn on the operation switch.								
	Adjust the Screen Contrast. \Rightarrow P.7 "Operation Panel".								

If you cannot correct the problem by taking the above actions, please contact your service representative.

If You Cannot Make Copies as You Want

Problem	Cause	Action				
Copies appear dirty.	The image density is too dark.	Adjust the image density. ⇒ P.26 "Adjusting Copy Image Density".				
		Adjust the background densi- ty. \Rightarrow P.108 "Image Adjust- ment".				
	The exposure glass or docu- ment feeder belt is dirty.	Clean them. \Rightarrow P.191 "Main- taining Your Machine"				
The reverse side of an original image is copied.	The image density is too dark.	Adjust the image density. \Rightarrow P.26 "Adjusting Copy Image Density".				
		If you select Black & White Copy mode or Single Color mode, place a black paper in the backside of the original and select Auto Image Densi- ty mode.				
		Lighten the background density. \Rightarrow P.108 "Image Adjust- ment".				
A shadow is copied when copying a pasted original.	The image density is too dark.	Adjust the image density. \Rightarrow P.26 "Adjusting Copy Image Density".				
		Adjust the background densi- ty. \Rightarrow P.108 "Image Adjust- ment".				
		Set the original in a different direction.				
		Put mending tape on the bound part.				
Copies are too light.	The original has a low contrast image.	Adjust the image density. \Rightarrow P.26 "Adjusting Copy Image				
	The image density is too light.	Density".				
	Damp or rough grain paper is used	Use dry paper without rough grain.				
Copy image is not clear.	The original image type (Auto Text/Photo) is not selected properly.	Select the proper original im- age type. \Rightarrow P.26 "Adjusting Copy Image Density".				
		Adjust the sharpness of the image with the Soft/Sharp function. \Rightarrow P.108 "Image Adjustment".				

Problem	Cause	Action				
The same copy area is dirty whenever making copies.	The exposure glass or docu- ment feeder belt is dirty.	Clean them. \Rightarrow P.191 "Main- taining Your Machine".				
Copies are blank or parts of the image are not copied.	The original is not set correctly.	Set the originals correctly. \Rightarrow P.16 "Setting Originals on the Exposure Glass".				
	An improper paper size is se- lected.	Select the proper paper size.				
	The selected reproduction ra- tio does not match the paper size.	Select the proper reproduc- tion ratio.				
A moire pattern is produced on copies as shown in the il- lustration.	Text mode is selected.	Select Auto Text/Photo mode or Photo mode. \Rightarrow P.33 "Select- ing the Original Image Type".				
R ⇒ R	The line images of the original might be overlapped each oth-	Place the original on the expo- sure glass at a slight angle.				
	er.	Adjust the sharpness of the image. \Rightarrow P.108 "Image Adjust- ment".				
Color tone of copies is differ- ent from that of originals.	The color balance is not set properly.	Adjust the Color Balance. \Rightarrow P.103 "Color Balance Adjust- ment".				
		Perform the Auto Color Calibration. \Rightarrow P.108 "Image Ad- justment".				
Color tone of copies is com- pletely different from that of originals.	Unsuitable color setting.	Perform Auto Color Calibra- tion (A.C.C.). \Rightarrow P.108 "Image Adjustment".				
		If you cannot correct the prob- lem by performing Auto Col- or Calibration, contact your service representative.				
Letter parts and photo parts of an original are not separated correctly.	An original has screen letters or low density letters.	Adjust the Auto Text/Photo Sensitivity to a "Text" level. \Rightarrow P.108 "Image Adjustment".				
	An original has a high con- trast photo.	Adjust the Auto Text/Photo Sensitivity to a "Photo" level.				
	An original has a photo hav- ing sequence thin lines with regular thin spaces.	⇒ P.108 "Image Adjustment".				
Color parts of an original are copied in black in Auto Color Select mode.	The original image contains small or thin color parts.	Adjust the A.C.S. Sensitivity to a "Full color" level. \Rightarrow P.108 "Image Adjustment".				

Problem	Cause	Action	
Non-color parts of an original are copied in color in Auto Color Select mode.	The machine might detect some black and white screen images (such as from newspa-	Select Black & White Copy mode. \Rightarrow P.29 "Black & White copy mode".	
	per) as a full color original.	Adjust the A.C.S. Sensitivity to a "B&W" level. \Rightarrow P.108 "Image Adjustment".	
A copy image is blurred.	The image density is too light.	Adjust the image density. ⇒ P.26 "Adjusting Copy Image Density".	
	An improper kind of paper is set.	Set the right kind of paper in the paper tray.	
		🖉 Note	
		 Copies might be blurred if you copy onto rough grain, coated, or damp pa- per. 	
	Toner is running out.	Add toner. \Rightarrow P.156 " \checkmark Changing The Toner Cartridge".	
In Margin Adjustment mode, parts of the original image are not copied.	arts of the original image are		

If you cannot correct the problem by taking the above actions, please contact your service representative.

Loading Paper

Reference

Regarding paper sizes that can be set, \Rightarrow P.197 "Mainframe".

🖉 Note

□ If you want to change the paper size, \Rightarrow P.169 "*Changing Paper Size*".

Non-recommended Paper for Paper Trays

- Folded, curled, creased, or damaged paper
- Torn paper
- Perforated paper
- Paper with conductive or low electrical resistance coating such as carbon or silver coating
- Thermal paper, art paper
- Thin paper that has low stiffness
- Damp paper
- Wavy paper
- Stapled paper
- Translucent paper
- OHP transparencies


🖉 Note

- Load paper with the side you wish to copy onto <u>face-down</u> in the paper trays. If copies are curled, try turning the copy paper over in the tray. If there is no improvement, change to copy paper with less curl.
- □ Correct curls in copy paper before loading.
- Fan copy paper to get air between the sheets before loading.
- □ When making 2-sided copies, do not load paper in the paper tray to copy on the reverse side. Use the bypass tray. ⇒ P.46 "Copying onto the reverse side of paper".

Loading Paper in the Paper Tray

1 Pull out the paper tray until it stops.


2 Remove the back fence.

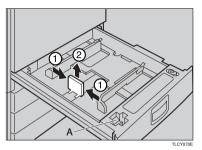

🖉 Note

 \Box For 11" × 17" paper, put the back fence inside A.

3 Square the paper and set it in the tray.

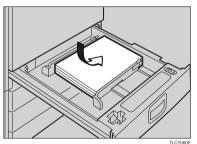

🖉 Note

- \square Do not stack paper over the limit mark.
- □ Make sure that the leading corners of the paper are under the corners.

A Reinstall the side fences.

5 Push the paper tray in until it stops.

Langing The Toner Cartridge

There are four kinds of toner (Cyan, Magenta, Yellow, and Black). When 🛓 is lit, it is time to add toner.

A WARNING:

 Do not incinerate used toner or toner containers. Toner dust might ignite when exposed to an open flame. Dispose of used toner containers in accordance with local regulations for plastics.

A CAUTION:

· Keep toner (used or unused) and toner containers out of reach of children.

A CAUTION:


 Our products are engineered to meet high standards of quality and functionality, and we recommend that you only use the expendable supplies available at an authorized dealer.

🖉 Note


- □ If you use toner other than that recommended, a fault might occur.
- When adding toner, do not turn off the operation switch. If you do, your settings are cleared.
- □ Always add toner after the machine instructs you to add toner.
- Do not use used toner. This will damage the machine.
- □ Be sure to add the correct color toner.
- You can still make about 20 copies after a ppears. This is a good time to get a new toner cartridge ready.

Pulling Out the Toner Cartridge


1 Open the front cover of the machine.

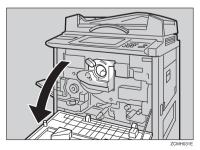


2 Pull the knob out to unlock it.

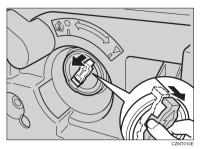

 $\mathbf{3}$ Turn it counterclockwise to the lacksquare mark.

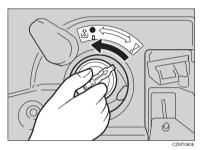

4 While holding the knob, then gently pull out the toner cartridge.

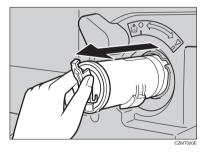


When you use the Cartridge Replacement Tool

🖉 Note


□ The cartridge replacement tool helps you to turn the knob.

1 Detach the cartridge replacement tool from the hook.


2 Set it onto the knob.

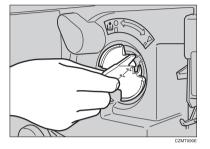

3 Turn it counterclockwise to the 🛓 mark.

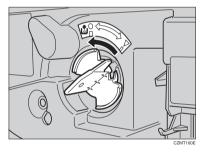

4 Turn it clockwise a little, then pull it out from the knob.

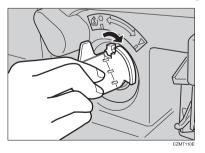


🖉 Note


□ Hang the cartridge replacement tool on the hook for future use.

Setting the New Toner Cartridge


1 Hold the new toner cartridge horizontally and shake it 5 or 6 times.

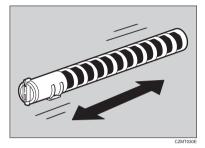


2 Remove the seal.

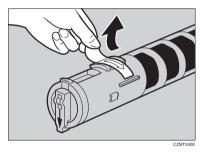

 ${f i}$ Insert the toner cartridge with the \uparrow mark at the top.

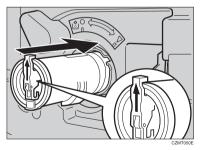

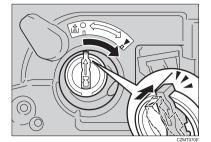

4 Turn the knob clockwise to the ▼ mark until it clicks.

🖉 Note

□ Hang the cartridge replacement tool on the hook for future use.

When you use the Cartridge Replacement Tool


Note

□ The cartridge replacement tool helps you to turn the knob.

• Set it onto the knob.



2 Turn it clockwise to the **▼** mark.

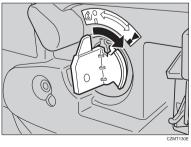

3 Detach the cartridge replacement tool from the knob.

- 🖉 Note
- □ Hang the cartridge replacement tool on the hook for future use.

№ Clearing Misfeeds

A CAUTION:

 
• The fusing section of this equipment might be very hot. You should be very careful that you don't touch this section when removing the misfed paper.

🖉 Note

- When clearing misfeeds, do not turn off the operation switch. If you do, your copy settings are cleared.
- □ To prevent misfeeds, do not leave any torn scraps of paper within the machine.
- □ If paper misfeeds occur repeatedly, contact your service representative.
- □ When clearing misfeeds, make sure that all units and levers are returned to their original position and all covers are closed.
- Do not touch originals in the document feeder when a paper misfeed occurs in the machine. If you do the machine cannot determine which originals have been copied and which haven't.

Check the Misfeed Location Display

The display shows the location of misfed paper.




Clearing Paper Misfeeds

When A, B, C, D, Y or Z is Displayed:

1 Open the front cover of the machine.

2 You can find the sticker (with **%** at the top) explaining how to remove misfed paper inside the front cover as shown in the illustration.

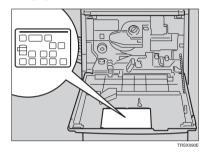


B Remove misfed paper following the instructions on the sticker.

When P is Displayed:

🔗 Note

□ This indicator is displayed only when your machine is equipped with the document feeder.


You can find a sticker (with **%** at the top), explaining how to remove the misfed paper, on the document feeder as shown in the illustration.

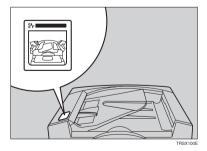

2 Remove the misfed paper following the instructions on the sticker.

When R is Displayed: (If your machine is equipped with the 20-bin sorter stapler.)


You can find a sticker (with **%** at the top) explaining how to remove the misfed paper, on the color of the sorter stapler as shown in the illustration.

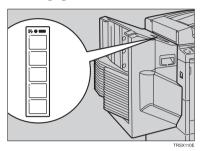

2 Remove the misfed paper following the instructions on the sticker.

When P is Displayed: (If your machine is equipped with the 10-bin sorter stapler.)

You can find the sticker (with **%** at the top), explaining how to remove the misfed paper on the cover of the sorter stapler as shown in the illustration.

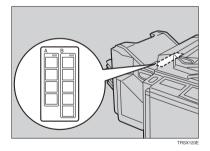

2 Remove the misfed paper following the instructions on the sticker.

📩 Adding Staples

A CAUTION:

 Our products are engineered to meet high standards of quality and functionality, and we recommend that you only use the expendable supplies available at an authorized dealer.

🖉 Note

□ If you use a staple cartridge other than that recommended, staple failure or staple jams might occur.

If the staple is coming out, press it to the proper position.

1 Open the front cover of the sorter stapler.

2 Raise the staple unit towards you.



B Remove the cartridge.



4 Hold the new cartridge as shown in the illustration, then pullout the stopper.



🖉 Note

□ If the staple is coming out, press it to the proper position.

5 Reinstall the cartridge until it clicks.



1 Push the staple unit to the original position.



2 Close the front cover of the sorter stapler.

📥 Removing Jammed Staples

🖉 Note

- □ Staples might be jammed because of curled copies. In this case, try turning the copy paper over in the tray. If there is no improvement, change the copy paper with less curl.
- □ After removing jammed staples, staples might not be ejected the first few times you try to use the stapler.

1 Open the front cover of the sorter stapler.

2 Raise the staple unit towards you.



B Remove the cartridge.



4 While pushing the lock, pull the top cover.



5 Remove the jammed staple.



6 Push the top cover until it clicks.



🖉 Note

□ If the staple is coming out, press it to the proper position.

7 Reinstall the cartridge until it clicks.



2 Push the staple unit to the original position.



2 Close the front cover of the sorter stapler.

6. Changing the Machine's Settings

Changing Paper Size

🖉 Note


 \square Be sure select the paper size with the user tools or misfeeds might occur.

Reference

For the paper sizes, weight, and capacity that can be set in each tray. \Rightarrow P.197 "*Mainframe*".

1 Make sure that the paper tray is not being used.


2 Pull out the paper tray until it stops.

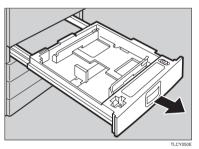

🖉 Note

□ Remove any remaining copy paper.

B Remove the screws fastening the side fences using the screwdriver.

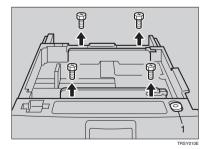


1. Screwdriver


🖉 Note

 $\hfill\square$ A screwdriver is contained in the front area of the tray.


4 Re-position the side fence to the paper size you want to use.

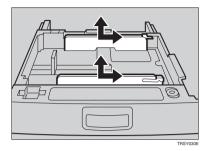

5 Fasten the fences with screws.

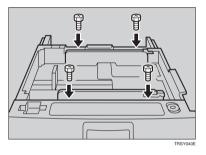


d Adjust the back fence to the new paper size.

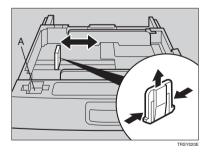

🖉 Note

 \Box For 11" × 17" paper, put the back fence inside A.

2 Square the paper and set it in the tray.

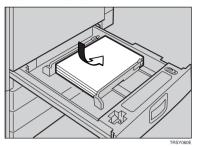

🖉 Note

- $\hfill\square$ Shuffle the paper before setting it in the tray.
- □ Do not stack paper over the limit mark.
- \square Make sure the leading corners of the paper are under the corners.


B Push the paper tray in until it stops.

2 Select the paper size with the user tools.

Changing Paper Size with the User Tools

1 Follow the steps **1** to **1** on \Rightarrow P.169 "Changing Paper Size".

2 Press the **[User Tools]** key.

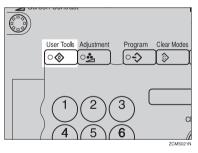

Press the [System Settings] key.

UserTools	OK
Select one of the following items to customize.	
💼 System Settings	
G Copier Features	
Auto Color Calibration	

Press the [Next] key until Tray Paper Size is displayed.

5 Press the [Change] key to select the tray.

Tray Paper Size	Tray 1	A4 🔍	Change
	Tray 2	A4 🗢	Change
	Tray 3	B5 🗢	Change
	Tray 4	5%2×8%2 D	Change
Paper Tray Priority	Tray 1	Tray 2 Tray 3 Tray 4	
Paper Tray Priority Auto Tray Switching	Tray 1	Trey 2 Trey 3 Trey 4	

6 Select the paper size, then press the **[OK]** key.

2 Press the **(User Tools)** key to exit from the user tools.

User Tools


Accessing the User Tools

This section is for the key operators in change of this machine. You can change or set the machine's default settings.

🖉 Note

□ Do not forget to exit the user tools menu after accessing it.


Press the [User Tools] key.

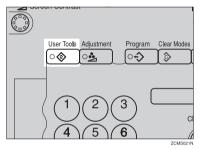

2 Press the [System Settings] or [Copier Features] key.

User Tools		QK
Selectione of the following items (o customice.	
	Auto Color Calibration	

3 Select the desired user tools menu.

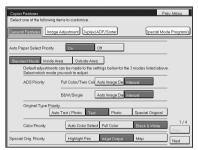

🖉 Note

- □ **[Next]**: Press to go to the next page.
- **[Prev.]**: Press to go back to the previous page.


4 Change the settings by following the instructions on the panel display.

🖉 Note

- **[Prev. Menu]** key: Press to return to the previous menu.
- □ [Cancel] key: Press to return to the previous menu without changing any data.

Exiting from the User Tools

After changing the user tools settings, press the [User Tools] key.

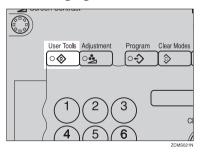

🖉 Note

□ The settings are not canceled even if the operation switch is turned off or the **[Clear Modes]** key is pressed.

Setting You can Change with the User Tools (System Settings)

PReference

For how to access the user tools, \Rightarrow P.173 "Accessing the User Tools".

System settings

Menu	Description
Function Priority	You can specify the mode to be displayed immediately after the opera- tion switch is turned on or System Reset mode is turned on.
	🖉 Note
	Default: Copier
Panel Tone	The key tone sounds when a key is pressed. This beeper can be turned on or off.
	S Note
	Default: On
Ready / Tone	Choose whether the machine beeps when it becomes ready for a copy run after power up.
	Default: On
	□ When the "Panel Tone" is set to Off, the beeper does not sound even if the "Ready/Tone" is set to On.
Auto Timer	The machine turns itself off automatically to conserve energy after your job is finished, after the selected time. This function called "Auto Off". The time can be set from 1 to 240 minutes.
	Default: 60 minutes
Control Panel Off Timer	The machine enters Energy Saver mode automatically after your job is finished, after the selected time. The time can be set from 10 to 990 seconds (in 10 seconds steps), or off. In Energy Saver mode, the panel display turns off.
	🖉 Note
	□ Default: On (60 seconds)

Menu	Description
Control Panel Off Level	 The machine enters Energy Saver Mode automatically after your job is finished. Three Energy Saver levels are available. Level 1 The back light of the panel display goes off. Warm-up time: 0 seconds Level 2 Power consumption approximately A 25% decrease compared to stand-by. Warm-up time: Approximately 80 seconds Level 3 Power consumption: Approximately A 50% decrease compared to stand-by. Warm-up time: Approximately 140 seconds
	 ✓ Note □ Default: Level 1
System Reset Timer (Printer Option Re- quired)	The machine returns to its prioritized mode automatically a certain time after your job is finished, after the selected time. The time can be set from 10 to 990 seconds (in 10 seconds steps), or off.
	NoteDefault: On (60 seconds)
Function Reset Timer (Printer Option Re- quired)	When Interleave Print is turned on and a print job comes along while the machine is busy printing another job, this delay specifies how long the machine will wait before switching to the priority print job. The time can be set from 10 to 990 seconds.
	 Note Default: On (60 seconds) The optional printer is required to use this function.
Tray Paper Size	Select the size of the copy paper set in the paper tray.
	 ✓ Note If the specified paper size differs from the size of paper actually set in the paper tray, a paper misfeed might occur because the paper size is not detected correctly. ✓ Reference For details, ⇒ P.197 "Mainframe".
Paper Tray Priority	 You can select the paper tray which will be selected as a default in the following conditions: When the main power switch or operation switch is turned on. When System Reset or Auto Reset mode is turned on. When the [Clear Modes] key is pressed. When the Auto Paper Select mode is not selected. Note Default: <i>Tray 1</i>

Menu	Description
Auto Tray Switching	If you load paper of the same size in two or more trays, the machine au- tomatically shifts another tray when the tray in use runs out of paper. You can set or cancel this setting.
	□ Default: Off
	□ This function is not available in Area Editing Mode.
3 Side Full Bleed	When this mode is off, narrow margins on all 4 sides of the original are not copied.
	GCGENK2E
	1: 2±2mm/0.08"±0.08"
	2: 2±2mm/-1.5mm. 0.08" + 0.08"/-0.06
	3: 2±2mm, 0.08"±0.08"
	4: 4±2mm, 0.2"±0.08"
	When you turn it on, margins 1, 2 and 3 are copied.
	Ø Note
	 Default: Off Non-model to be directed as marries (marries 4)
	□ You cannot cancel the leading edge margin (margin 4).
Bypass Tray Custom Size	You can register non-standard size paper when you make copies with the bypass tray.
	① Press the [Change] key.
	(2) Enter the horizontal size with the number keys, then press the [#] key.
	③ Enter the vertical size with the number keys, then press the [#] key.
	④ Press the [OK] key.
	I Note
	□ Adjustment value:
	Metric version: Vertical: 100 - 305mm
	Horizontal: 140 - 457mm
	Inch version:
	Vertical: 3.9" - 12.0" Horizontal: 5.5" - 18.0"
	Default: Custm 1

Menu	Description
Interleave Print	Turn this feature on to give print jobs priority. If a print job comes along while another job is in progress, the current job will be temporarily suspended while the print job is printed.
	□ If you select "On", various documents output to the same tray. To avoid mixing copies, you can select "Off" or specify the output bin for each function.
	Default: On
Interleave Priority	Which function has priority when interleaving delivery of prints, copies and faxes.Copier
	Printer
	• Fax
	Ø Note
	Default: Copier
Copy Count Display	The copy counter can be set to show the number of copies made (Count Up), or the number of copies remaining to be made (Count Down).
	NoteDefault: Up
Display Color Setting	You can change the color of the display editor.
	Default: Blue
Key Operator Tools	If you select "On", only operators who know the key operator code can access the "Key Operator Tools" in the System Settings and Copier Features.
	Default: Off
	□ If you select "On", you should register the key operator code.
AOF(Keep It On.)	Ø Note
	 For details about this function, contact your service representative.
Output Tray (For 3-	You can specify a bin to which documents are delivered for each fea-
bin sorter only)	ture (Copy, printer and fax).
	Default:
	Copier: First Bin
	Printer: Second Bin
	• Fax: Third Bin

Settings You can Change with the User Tools (Copier Features)

PReference

For how to access the user tools, \Rightarrow P.173 "Accessing the User Tools".

General Features

Menu	Description
Auto Paper Select Pri- ority	By default, Auto Paper Select is selected just after the machine is turned on or when modes are cleared. You can cancel this setting.
	𝒴 Note
	Default: <i>On</i>
ADS Priority (FC/ Twin)	By default, Manual Image Density is selected in Full Color mode just after the machine is turned on or when modes are cleared. You can can- cel this setting so that the Auto Image Density is selected.
	NoteDefault: Manual
ADS Priority (B&W/ SC)	As a default setting, Manual Image Density is selected in Black & White, Single Color, and Twin Color mode just after the machine is turned on or when modes are cleared. You can cancel this setting.
	ℬ Note
	D Default: Manual
Original Type Priority	You can select the original image type (Auto Text/Photo mode, Text mode, Photo mode, or Special Original mode) that is selected automat- ically just after the machine is turned on or when modes are cleared.
	Default: Auto Text/Photo mode
Color Priority	You can select the color mode (Auto Color Select mode, Full Color mode, or Black & White mode) that is selected automatically just after the machine is turned on or when modes are cleared.
	ℬ Note
	Default: Auto Color Select mode
Special Orig. Priority	You can select the special original type (Highlight Pen, Inkjet Output, or Map) that is selected automatically just after the machine is turned on or when modes are cleared.
	Ø Note
	Default: Highlight Pen
Photo Type(Auto Text/Photo) (Auto Text/Photo)	You can select the photo type (Press Print, Glossy Photo, or 2nd Gener- ation) in Auto Text/Photo mode that is selected automatically just after the machine is turned on or when modes are cleared.
	Default: Press Print

Menu	Description
Photo Type(Auto Text/Photo) (Photo)	You can select the photo type (Press Print, Glossy Photo, or 2nd Gener- ation) in Photo mode that is selected automatically just after the ma- chine is turned on or when modes are cleared.
	NoteDefault: Press Print
Copy Reset Timer	 The machine returns to its initial condition automatically after your job is finished. The time can be set from 10 to 990 seconds, or this function can be turned off. ① Select [On] or [Off] keys. ② When you select [On], enter the time with the number keys. Then,
	press the [#] key.
	Note Default: On (60 seconds)
Maximum Copy	The maximum copy quantity can be set from 1 to 100.
Quantity	Ø Note
	□ Default: Off
Tone: Original on Platen	The key tone sounds when you forgot to remove originals after copy- ing.
	ℬ Note
	Default: Off
	When the "Panel Tone" is set to Off, the beeper does not sound even if the "Original Tone" is set to On.
Front Side Margin Adjust.	You can adjust the front side margin direction and width that is select- ed as a default in "Front Side Margin Adjust" mode. You can change this setting.
	• Metric Version: left/20mm - right/20mm in 1mm steps.
	• Inch Version: left/0.8" - right/0.8" in 0.1" steps.
	Default:
	Metric version: <i>left/right 0mm</i>
P. 1.011.16	Inch version: <i>left/right 0"</i>
Back Side Margin Ad- just.	You can adjust the back side margin direction and width that is select- ed as a default in Back Side Margin Adjust. You can change this setting.
	• Metric Version: left/20mm - right/20mm in 1mm steps.
	• Inch Version: left/0.8" - right/0.8" in 0.1" steps.
	ℬ Note
	□ Default:
	Metric version: <i>left/right 0mm</i>
	 Inch version: <i>left/right</i> 0"

Menu	Description
1→2 Duplex Auto Margin Adjust.	When you use 1 Sided \rightarrow 2 Sided mode, the machine sets the back side margin automatically.
	Default: Off
Magnification Setting	Up to 2 reproduction ratios which you frequently use can be registered.
	① Press the [Setting] key.
	② Select the [User Ratio 1] or [User Ratio 2] key.
	③ Enter your desired ratio with the number keys. Then press the [#] key.
	④ Press the [OK] key.
Initial Mode Setting	You can set the machine to recall program setting when the machine is turned on or when modes are cleared.
	Default: Normal
Show Editor Grid (Option)	You can turn the grid snap on or off in the display editor. The grids may help you to mark a right angle shape.
	Default: Off
Area Shape Priority	When you designate areas, you can select the first designated shape.
(Option)	 Select the
	Default: (Rectangle) key
B&W Copy Default: Text	When you select Black & White copy mode, you can select text mode regardless of the Original Type Priority setting.
	Ø Note
	Default: Off
Image Rotation	When copying onto copy paper of the same size but different orienta- tion in Auto Paper Select or Auto Reduce/Enlarge mode, rotate the im- age by 90 degrees.
	Default: On
Priority Tray for FC	When copying in Full Color mode, the paper in the selected paper tray can be used.
	𝕜 Note
	□ Default: Off
	When you select Black copy mode, you can select Text mode re- gardless of the Orig. Mode Priority setting.

Menu	Description
Key Operator Tools	Use these tools to manage use of the machine.
	 Enter a previously registered key operator code with the number keys.
	\mathcal{P} Reference
	For details about the key operator code, \Rightarrow P.175 "System settings".
Accessible Modes Set- ting	You can assign user codes to each color mode. Operators must input their user codes before using each color mode (Full color, Black & White, Single, Twin Color).
	The machine keeps count of the number of copies made under each user code.
	① Select your desired color mode.
User Codes Setting	♦ Program
Ŭ	You can register the user codes.
	① Press the [Program] key.
	② Enter the user code with the number keys. Then press the [#] key.
	③ Select the color mode from [Full Color], [Black & White], [Single], or [Twin Color] key.
	\Box You can up to 50 user codes.
	♦ Change
	You can change the user codes.
	① Press the [Change] key.
	 Select the user code.
	③ Enter the user code with the number keys. Then press the [#] key.
	④ Select the color mode from [Full Color], [Black & White], [Single], or [Twin Color] key.
	♦ Clear
	You can clear the user codes.
	① Press the [Clear] key.
	Select the user code that you want to clear.
	③ If you want to clear the all user codes of the page, press the [Select All] key.
	□ If you want to change the [Select All] , press the [Cir All Select] key.
	④ Press the [OK] key.
	⑤ Press the [Yes] key.
	◆ Delete All
	You can delete the all registered user codes.
	① Press the [Delete All] key.
	② Press the [Yes] key.

Menu	Description
Counter Manager	 Counter List Print You can print data for all user codes. Press the [Counter List Print] key. Press the [Print Start] key.
	 Reset Counters You can check the number of copies made using each user code, and clear each code's counter. ① Press the [Reset Counters] key. ② Input the user code you want to check the number of copies made under the number keys. ③ Press the [OK] key. ④ Press the [Yes] key.
	 Delete All You can reset the counter for all user codes. ① Press the [Delete All] key. ② Press the [Yes] key.

Image Adjustment

Menu	Description		
Background Dens. of A.D.S. (FC/Twin)	The Auto Image Density levels in Full Color mode can be made lighter or darker (5 levels).		
	ℬ Note		
	Default: <i>level 3</i>		
A.C.S. Priority	You can select whether color images or black & white images are pri- ority detected in Auto Color Select mode.		
	Default: Full Color		
Color Sensitivity	When in Color Erase, Color Conversion or Twin Color (Red & Black) mode, the function can be made more or less sensitive to the color to be erased or converted. It can be adjusted within 5 levels ("Narrow" to "Wide").		
	For example, if red is selected as the color to be erased or converted, "Narrow" will result in only red being erased or converted, and "Wide" will result in other colors close to red being erased or convert- ed.		
	Default: <i>level 3</i>		

Menu	Description
Inkjet Output Mode	Specifies the type of image adjustment for Inkjet Output mode.
Setting	• 1 – emphasize yellow
	• 2 – emphasize red and yellow
	• 3 – emphasize red and blue
	If you want to emphasis yellow, select 1.
	If you want to emphasis red and yellow, select 2.
	If you want to emphasis red and blue, select 3.
	Ø Note
	Default: 1

Duplex/ADF/Sorter

26			
Menu	Description		
Duplex Tray Auto Clear	When making two-sided copies from one-sided originals, if the last original is an odd page, the last copy will be automatically delivered with the reverse side blank. You can cancel this setting.		
	Default: On		
SADF Auto Reset Timer	When you set one original at a time in the document feeder, the Auto Feed indicator lights for a selected time after an original is fed to show that the document feeder is ready for another original. The time can be set from 1 second to 99 seconds.		
	Note		
	□ Default: 5 seconds		
ADF Thin paper	Use when changing the type of originals to be fed. Select this function to avoid damaging thin originals (40 - 52g/m ² , 11-14 lb) set in the doc ument feeder.		
	Default: Off		
ADF Mixed Sizes	By default, you cannot set originals of different sizes at one time in the document feeder. You can cancel this setting.		
	Default: Off		
	□ If you select [0n] , the copying speed will be reduced.		
	When setting different length originals, all originals must be flush with the back fence of the document feeder.		
	□ Smaller originals might be skewed a little.		
ADF Auto Paper Se- lect	By default, Auto Paper Select is selected when you set originals in the document feeder. You can cancel this setting.		
	Default: On		

Menu	Description			
Full Color Copy Sort- ing	You can disable sorting, stacking, or stapling in Full Color mode to max- imize quality of full color copies.			
	D Default: On			
Auto Sort Mode	You can have the machine select Sort mode automatically when you i sert two or more originals in the document feeder and make two or more copies from each original.			
	NoteDefault: On			

Special Mode Program(s)

Special Mode	Use to recall the special modes set by your service representative.

Auto Color Calibration

Copy Mode/Printer	When the tone of a specific color is strong or the color tone of copies is	
Mode	different from that of originals, perform the procedure below to adjust the balance of the 4 basic colors.	
	① Press the [Auto Color Calibration] key.	
	② If your machine has the printer option installed, select Copy Mode or Printer Mode. Then press the [Start] key.	
	③ Press the [Print Start] key.	
	Note	
	The test pattern is delivered to the copy tray.	
	④ Set the test pattern on the exposure glass. Then press the [Scan Start] key.	
	Limitation	
	□ You cannot set the test pattern in the document feeder.	
	$\hfill\square$ To return to the previous setting, press the [Prev. Setting] key.	

7. Others

Do's and Don'ts

A CAUTION:

- Unplug the power cord from the wall outlet before you move the equipment. While moving the equipment, you should take care that the power cord will not be damaged under the equipment.
- When you use this equipment for a long time in a confined space without good ventilation, you may detect an odd smell. To keep the workplace comfortable, we recommend you keep it well ventilated.
- Do not press areas on or around the fusing unit. These areas get hot.
- After making copies continuously, the exposure glass may feel warm this is not a malfunction.
- You might feel warm around the ventilation hole. This is caused by exhaust air, and not a malfunction.
- Do not turn off the operation switch while copying or printing. Make sure that all copying or printing has finished.
- The machine might fail to produce good copy images if there should occur condensation inside caused by temperature change.
- Do not open the covers of machine while copying or printing. If you do, misfeeds might occur.
- Do not move the machine while copying or printing.
- If you operate the machine improperly or a failure occurs on the machine, your machine settings might be lost. Be sure to take a note of your machine settings.
- Supplier shall not be liable for any loss or damages resulting from a failure on the machine, loss of machine settings, and use of the machine.

Where to Put Your Machine

Machine Environment

Your machine's location should be carefully chosen because environmental conditions greatly affect its performance.

Optimum environmental conditions

A CAUTION:

- Keep the equipment away from humidity and dust. Otherwise a fire or an electric shock might occur.
- Do not place the equipment on an unstable or tilted surface. If it topples over, it could cause injury.

A CAUTION:

- If you use the equipment in a confined space, make sure there is a continuous air turnover.
- Temperature: 10-32°C, (50-89.6°F)(humidity to be 54% at 32°C, 89.6°F)
- Humidity: 15-80% (temperature to be 27°C, 80.6°F at 80%)
- A strong and level base.
- The machine must be level within 5mm, 0.2" both front to rear and left to right.
- To avoid possible built-up ozone, make sure to locate this machine in a large well ventilated room that an air turnover of more than 30m³/hr/person.

Environments to avoid

- Locations exposed to direct sunlight or strong light (more than 2,000 lux).
- Locations directly exposed to cool air from an air conditioner or heated air from a heater. (Sudden temperature changes might cause condensation within the machine.)
- Please where the machine might be subjected to frequent strong vibration.
- Dusty areas.
- Areas with corrosive gases.

Power Connection

A WARNING:

- Only connect the machine to the power source described on the inside front cover of this manual. Connect the power cord directly into a wall outlet and do not use an extension cord.
- Do not damage, break or make any modifications to the power cord. Do not place heavy objects on it. Do not pull it hard nor bend it more than necessary. These actions could cause an electric shock or fire.

A CAUTION:


 Unplug the power cord from the wall outlet before you move the equipment. While moving the equipment, you should take care that the power cord will not be damaged under the equipment.

A CAUTION:

- When you disconnect the power plug from the wall outlet, always pull the plug (not the cable).
- When the main power switch is in the Stand-by position, the optional anticondensation heaters are on. In case of emergency, unplug the machine's power cord.
- When you unplug the power cord, the anti-condensation heaters turn off.
- Make sure the plug is firmly inserted in the outlet.
- Voltage must not fluctuate than 10%
- The socket-outlet shall be installed near the equipment and shall be easily accessible.

Access to Machine

Place the machine near the power source, providing clearance as shown.

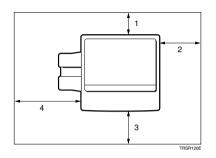

- 1. Rear: more than 10cm, 4.0"
- 2. Right: more than 37cm, 14.6"
- 3. Front: more than 70cm, 27.6"
- 4. Left: more than 40cm, 15.8"

🖉 Note

□ For the required space when options are installed, please contact your service representative.

Maintaining Your Machine

If the exposure glass, platen cover or document feeder belt is dirty, you might not be able to make copies as you want. Clean them if you find them dirty

🖉 Note

- Do not use chemical cleaner or organic solvent, such as thinner or benzene. If they get into the machine or melt plastic parts, a failure might occur.
- Do not clean parts other than those specified in this manual. Such parts should be cleaned by your service representative.
- □ Wipe the machine with a soft, damp cloth. Then wipe it with a dry cloth to remove the water.


Exposure Glass



Platen Cover



Document Feeder

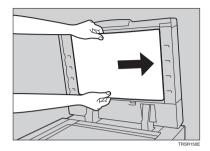


7

Remarks

Copier

- Be careful not to move the original during the scanning process.
- To avoid problems caused by curled copies, try turning over the paper stack in the paper tray. If there is no improvement, change to copy paper with less curl.
- Load paper with the copy side <u>down</u> in the paper trays. If copies are curled, try turning the copy paper over in the tray. If there is no improvement, change to copy paper with less curl.
- As a default setting, narrow margins on all four sides will not be copied as shown in the illustration.

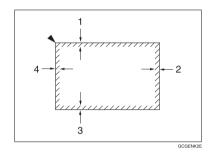

- 1. 2±2mm, 0.08"±0.08"
- 2. 2+2/-1.5mm, 0.08"+0.08"/-0.06"
- 3. 2±2mm, 0.08"±0.08"
- 4. 5±2mm, 0.2"±0.08"

Use and Storage of Supplies

Copy Paper

- Copy paper of the types or in the conditions listed below are not recommended for this copier.
 - Folded, curled, creased, or damaged paper
 - Torn paper
 - Perforated paper
 - Paper with conductive or low electrical resistance coating such as carbon or silver coating
 - Thermal paper, art paper
 - Thin paper that has low stiffness
 - Damp paper
 - Wavy paper
 - Stapled paper
 - Tlanslucent paper
- Never use ink-jet printer paper to prevent failure.
- Use a proper type OHP transparency and set it in correct direction to prevent failure.
- Fan copy paper and OHP transparencies to get air between the sheets before loading.
- Do not touch copy paper if your fingers are wet or oily; finger prints may appear on the copy.
- Load paper with the copy side down in the paper trays. If copies are curled, try turning the copy paper over in the tray. If there is no improvement, change to copy paper with less curl.
- When copying on rough surface paper, the copy image may be light.
- When setting paper thinner than $64g/m^2$, 17 lb or translucent paper in the paper trays or bypass trays, set it as shown in the figure below. The paper is divided into the vertical and horizontal types depending on the texture flow direction. If you set thin paper or translucent paper in the reverse direction, a paper jam might occur. Since A3, B4, 11" × 17", and $8^1/2$ " × 14" sizes of thin paper are set in the lengthwise direction in this machine, they must be of the vertical type.

	Texture flow	Setting pa- per in the paper trays	Setting paper in the bypass tray
Vertical type	[]]]] <		GCYOSHE
Horizontal type			GCYOSIZE

Paper Storage

Paper should always be stored properly. Improperly stored paper might result in poor image reproduction, creased copies, and paper misfeeds. Generally, avoid curling and absorption of moisture.

- Avoid storing paper in humid areas. Under high temperature and high humidity, or low temperature and low humidity conditions, store paper in a vinyl bag.
- Do not store paper where it will be exposed to heat.
- Store on a flat surface.
- Use older stock first.
- Do not lay heavy objects on paper.
- Keep open reams of paper in the package, and store as you would unopened paper.

Toner Storage

- Store in a cool, dark place.
- Never store toner where it will be exposed to heat.
- Do not lay heavy objects on toner container.

8. Specification

Mainframe

- Configuration: Desktop
- Process: Dry electrostatic transfer system
- Resolution: 600 dpi
- Gradations:
 256 gradations
- Originals: Sheet, book, objects
- Original size: Maximum: A3, 11" × 17"
- Copy paper size:
 - Trays:

A3 \overleftarrow{D} , B4 \overrightarrow{D} , A4 \overrightarrow{D} \overrightarrow{D} , B5 \overrightarrow{D} \overrightarrow{D} , A5 \overrightarrow{D} , 11" × 17" \overrightarrow{D} , 8¹/₂" × 14" \overrightarrow{D} , 8¹/₂" × 13" \overrightarrow{D} , 8¹/₂" × 14" \overrightarrow{D} , 8¹/₂" \overrightarrow{D} , 8

- Bypass Tray:
 ⇒ P.37 "Copying from the Bypass Tray".
- Copy paper weight:
 - Trays: 64 - 105g/m², 17 - 28 lb
 - Bypass tray: 52 - 160g/m², 14 - 43 lb
 - Auto Duplex Tray: $64 105g/m^2$, 17 28 lb (When you use paper heavier than $104.7g/m^2$, 28 lb, use the bypass feed table and select Thick mode.)

Copy paper capacity:

- Tray: 500 sheet
- Bypass Tray: 50 sheets

Copying speed (full size):

Full color (4 colors)

	Standard mode	OHP/Thick mode
A4 \square , 8 ¹ / ₂ "×11" \square	6 copies/minute	3 copies/minute
A3□, 11"×17"□	3 copies/minute	1.5 copies/minute

Black, Yellow, Magenta, Cyan:

	Standard mode	OHP/Thick mode
A4 \Box , 8 ¹ / ₂ "×11" \Box	31 copies/minute	5 copies/minute
A3D, 11"×17"D	15 copies/minute	2.5 copies/minute

Blue (Magenta + Cyan), Green (Yellow + Cyan):

	Standard mode	OHP/Thick mode
A4 \Box , 8 ¹ / ₂ "×11" \Box	9 copies/minute	4 copies/minute
A3□, 11"×17"□	4.5 copies/minute	2 copies/minute

Red (Yellow + Magenta):

	Standard mode	OHP/Thick mode
A4, 0, 8 ¹ / ₂ "×11"	7 copies/minute	3.5 copies/minute
A3□, 11"×17"□	3.5 copies/minute	1.5 copies/minute

Black + Yellow, Black + Magenta, Black + Cyan:

	Standard mode	OHP/Thick mode
A4 , $8^1/_2$ " × 11"	7 copies/minute	3.5 copies/minute
A3□, 11" × 17"□	3.5 copies/minute	1.5 copies/minute

First copy time:

	Standard mode	OHP/Thick mode
Full colors (4 colors)	22.4 seconds	35 seconds
Black, Yellow, Magenta, Cyan	8 seconds	23 seconds
Blue (Magenta + Cyan), Green (Yellow + Cyan)	16 seconds	27 seconds
Red (Yellow + Magenta)	16 seconds	27 seconds
Black + Yellow, Black + Ma- genta, Black + Cyan	16 seconds	27 seconds

Non-reproduction area:

- Leading edge: 5±2mm, 0.2"±0.08"
- Trailing edge: 2+2/-1.5mm, 0.08"+0.08"/-0.06"
- Side: 2±2mm, 0.08"±0.08" (Total 4mm, 0.16" or less)
- Toner replenishment:

Cartridge (220g/cartridge)

♦ Warm-up time: Less than 270 seconds (20°C, 68°F)

Reproduction ratios:

5 enlargement and 7 reduction

	Metric version	Inch version							
Enlargement	400%	400%							
	200%	200%							
	141%	155%							
	122%	129%							
	115%	121%							
Full size	100%	100%							
Reduction	93%	93%							
	82%	85%							
	75%	78%							
	71%	73%							
	65%	65%							
	50%	50%							
	25%	25%							

Power consumption:

	Copier only	Full system ^{*1}
Warm up	1.3kW	1.3kW
Stand-by	0.4kW	0.4kW
During printing	1.1kW	1.3kW
Maximum	less than 1.5kW	less than 1.5kW

^{*1} Full system: Mainframe with the document feeder, 3-bin sorter stapler and 1500 sheet tray unit. Optional printer installed.

Noise Emission *1

Sound power level

	Mainframe only	Complete System *3
Stand-by	less than 49 dB (A)	less than 50 dB (A)
During printing	less than 66 dB (A)	less than 66 dB (A)

Sound pressure level *2

	Mainframe only
Stand-by	less than 49 dB (A)
During printing	less than 66 dB (A)

 $^{\ast}1$ The above measurements made in accordance with ISO 7779 are actual value.

*2 It is measured at the position of the operator.

*3 The Complete System consists of mainframe and Sorter Stapler.

The set of the exposure glass: $(W \times D \times H \text{ up to the exposure glass})$:

620 × 744 × 620mm, 24.5" × 29.3" × 24.5"

♦ Weight:

Approximately 112kg, 244.7 lb

🖉 Note

□ Specifications are subject to change without notice.

Document Feeder (Option)

Original Feed:

Automatic reverse document feed - ARDF mode Automatic document feed - ADF mode Semi-automatic document feed - SADF mode

Original size:

A3 \square - B6 \square \square (B6 \square \square cannot be used in ARDF mode) 11" × 17" \square , 8¹/₂" × 13" \square , 8¹/₂" × 5¹/₂" \square \square

Original weight:

- SADF mode, ADF mode: 40 - 128g/m², 14 - 34 lb
- ARDF mode: 52 - 105g/m², 14 - 28 lb

(For 40 - $52g/m^2$, 11 - 14 lb originals, use ADF Thin Paper mode. B6 \Box cannot be used in ARDF Thin Paper mode)

• Maximum number of originals to be set: $50 \text{ shorts} (80 \text{ g/m}^2 20 \text{ lb})$

50 sheets (80g/m², 20 lb)

Original set: Face up, First sheet on top

- Original transport: One flat belt
- Maximum power consumption: 45W (Power is supplied from the main frame.)

Weight:

Less than 10.5kg, 23.2 lb

Dimensions (W × D × H): 610 × 507 × 130mm, 24.1" × 20.0" × 5.2"

🖉 Note

Specifications are subject to change without notice.

20-bin Sorter Stapler (Option)

Number of bins:

20 bins + proof tray

Paper size for bins (Normal paper mode):

- Sort/Stack: A3□, B4□, A4□□, B5□□, 11"×17"□, 10"×14"□, 8¹/₂"×14"□, 8¹/₂" ×13"□, 8¹/₂"×11"□□, 12"×18"□
- Staple: A3D, B4D, A4DD, B5DD, 11" × 17"D, 10" × 14"D, 8¹/₂" × 14"D, 8¹/₂" × 14"D, 8¹/₂" × 14"D, 8¹/₂"

Paper weight for bins: 52g/m² - 160g/m², 14 - 42 lb

Bin capacity (Normal paper mode):

• Sort:

A4, $8^{1}/_{2}$ " × 11" or smaller: 30 sheets (80g/m², 20 lb) A4, $8^{1}/_{2}$ " × 13" or larger: 25 sheets (80g/m², 20 lb)

 Stack: A4, 8¹/₂" × 11" or smaller: 25 sheets (80g/m², 20 lb) A4, 8¹/₂" × 13" or larger: 20 sheets (80g/m², 20 lb)

Stapler capacity (Normal paper mode): 2-30 sheets (80g/m², 20 lb)

Proof tray capacity: 100 sheets (80g/m², 20 lb)

Maximum power consumption: 35W (Power is supplied from the main frame.)

- Weight: 20.5kg, 45.2 lb
- Dimensions (W × D × H): 430 × 570 × 680mm, 17.0" × 22.5" × 26.8"
- 🖉 Note
- □ Specifications are subject to change without notice.

10-bin Sorter Stapler (Option)

Number of bins:

10 bins + proof tray

Paper size for bins:

- Sort/Stack: A3□, B4□, A4□□, B5□□, 11"×17"□, 10"×14"□, 8¹/₂"×14"□, 8¹/₂" ×13"□, 8¹/₂"×11"□□
- Staple: A3, B4, A4, C, B5, C, 11" × 17", 10" × 14", $8^1/2$ " × 14", $8^1/2$

Paper weight for bins: 52g/m² - 160g/m², 14 - 42 lb

Bin capacity:

• Sort:

A4, $8^{1}/_{2}$ " × 11" or smaller: 30 sheets (80g/m², 20 lb) B4, $8^{1}/_{2}$ " × 13" or larger: 25 sheets (80g/m², 20 lb)

 Stack: A4, 8¹/₂" × 11" or smaller: 25 sheets (80g/m², 20 lb) B4, 8¹/₂" × 13" or larger: 20 sheets (80g/m², 20 lb)

Stapler capacity:

2-20 sheets ($80g/m^2$, 20 lb)

Proof tray capacity: 100 sheets (80g/m², 20 lb)

Maximum power consumption:

33W (Power is supplied from the main frame.)

- Weight: 12.4kg, 27.4 lb
- Dimensions (W × D × H): 381 × 548 × 443mm, 15.0" × 21.6" × 17.5"

🖉 Note

□ Specifications are subject to change without notice.

3-bin Sorter (Option)

Number of bins:

3 bins

Paper size for bins:

A3, B4, A4, A4, B5, B5, A5, B6, A6, A6, 11" × 17", 10" × 14", $8^{1}/{_{2}}$ " × 14", $8^{1}/{_{2}}$ " × 14", $8^{1}/{_{2}}$ " × 13", $8^{1}/{_{4}}$ " × 13", $8^{1}/{_{2}}$ " × 11", $5^{1}/{_{2}}$ " × $8^{1}/{_{2}}$ ", 12" × 18", $8^{1}/{_{2}}$ " × 13", $8^{1}/{_{4}}$ " × 13", $8^{1}/{_{2}}$ " × 11", $5^{1}/{_{2}}$ " × $8^{1}/{_{2}}$ ", 12" × 18", $8^{1}/{_{2}}$ " × 14", $8^{1}/{_{2}}$ ",

Paper weight for bins:

- Face-up: 1st bin: 52 - 160g/m², 14 - 42 lb 2nd and 3rd bins: 52 - 105g/m², 14 - 28 lb
- Face-down: 64 - 105g/m², 17 - 28 lb

Bin capacity (Normal paper mode):

- 1^{st} bin: A4, $8^1/_2$ " × 11" or smaller: 500 sheets ($80g/m^2$, 20 lb) B4, $8^1/_2$ " × 13" or larger: 250 sheets ($80g/m^2$, 20 lb)
- 2^{nd} and 3^{rd} bins: A4, $8^1/_2$ " × 11" or smaller: 250 sheets ($80g/m^2$, 20 lb) B4, $8^1/_2$ " × 13" or larger: 125 sheets ($80g/m^2$, 20 lb)

Maximum power consumption:

30W (Power is supplied from the main frame.)

- Weight: Less than 14kg, 30.9 lb
- Dimensions (W × D × H):

361 × 483 × 427mm, 14.3" × 19.1" × 16.9"

🖉 Note

□ Specifications are subject to change without notice.

1000-sheet Tray Unit (Option)

- Copy paper weight: 64 - 105g/m², 17 - 28 lb
- ★ Available paper size: A3□, B4□, A4□□, B5□□, A5□, 11"×17"□, 8¹/₂"×14"□, 8¹/₂"×11"□□, 8"×13"□, 8¹/₂"×13"□, 5¹/₂"×8¹/₂"□
- Maximum power consumption: 50W (Power is supplied from the main frame.)
- Paper capacity: 500 sheets × 2 trays
- ♦ Dimensions (W × D × H): 620 × 680 × 390mm, 24.5" × 26.8" × 15.4"
- Weight: Approx. 32kg, 70.6 lb
- 🖉 Note
- □ Specifications are subject to change without notice.

1500-sheet Tray Unit (Option)

Copy paper weight:

- 64 105g/m², 17 28 lb
- ♦ Available paper size: A3□, B4□, A4□□, B5□□, A5□, 11"×17"□, $8^1/2$ "×14"□, $8^1/2$ "×11"□□, $8^1/2$ "×11"□□, $8^1/2$ "×14"□, $8^1/2$ "×11"□□,

Maximum power consumption: 50W (Power is supplied from the main frame.)

- Paper capacity: 500 sheets × 3 trays
- Dimensions (W × D × H): 620 × 680 × 390mm, 24.5" × 26.8" × 15.4"
- Weight: Approx. 37kg, 81.6 lb
- 🖉 Note
- □ Specifications are subject to change without notice.

Multi-access

You can carry out another job using a different function while the current job is being performed.

This allows you to handle your jobs efficiently regardless of how the machine is being used. For example:

- While making copies, the machine can send a fax message that has been stored in memory.
- The machine can receive print data in any mode.

Performing multiple functions simultaneously like this is called Multi-access.

🖉 Note

- □ You can choose which mode has highest priority for print jobs. The default is "Copy". See "Interleave Print" in \Rightarrow P.175 "System settings".
- □ If your machine is equipped with the optional 3-bin sorter, you can specify the tray used for each mode so that output can be delivered separately. If you require the optional 3-bin sorter, contact your local dealer or service representative. See "Output tray" ⇒ P.175 "*System settings*".

Sample operations

This chart is based on the following conditions:

- "16. Print Priority" is set to "Interleave" (See "16. Print Priority" in ⇒ P.175 "System settings").
- For details on operations under other conditions, contact your service representative.

Mode after you select			Со	ру			Facsimile							Printer				
					Ī			ion	Transmis- sion			Re- cep tio)-	Print				
Mode before you select		Copying	Sort *1	Copying *2	Stapling *1	Transmission Operation/ Manual Reception Operation	Scanning an original for Memory Transmission	Memory Transmission	Immediate Transmission	Memory Reception	Printing Received Data	Data Reception	Printing	L* Sort Print	*2	± Stapling		
Сору	Copying			0	×	×	×	\rightarrow	×	☆	×	☆	*5	☆	*5	*3	*5	*3
	Sort *1			Ο	×	—	×	\rightarrow	×	☆	×	☆	*4	☆	*4	*3		*3
	Sort *2			0		×	—	\rightarrow	×	첫	×	첞	*5	☆	*5		*5	—
	Stapling *1			Ο	×	—	×	\rightarrow	×	☆	×	☆	*4	☆	*4	*3	_	*3
Facsimile	acsimile Transmission Operation/ Manual Reception Operation			0	\rightarrow	\rightarrow	\rightarrow	×	×	☆	×	자	☆	☆	☆	☆	☆	攻
	Transmission	Transmission Scanning an o memory trans		×	×	×	×	×	×	☆	×	☆	☆	☆	☆	☆	☆	☆
		Memory trans	mission	자	자	자	☆	☆	以	\uparrow	×	\rightarrow	장	☆	장	자	☆	☆
		Immediate tra	nsmission	×	×	×	×	×	×	\rightarrow	×	\rightarrow	☆	☆	☆	☆	☆	☆
	Reception	Memory Reception☆		☆	☆	☆	☆	☆	☆	\rightarrow	×	\rightarrow	☆	☆	☆	☆	☆	☆
	Printing Received Data		*5	×	*5	×	☆	☆	☆	×	☆	\rightarrow	☆	*5	*3	*5	*3	
Printer	Data Reception			☆	☆	☆	☆	☆	☆	☆	☆	☆	☆	\rightarrow	\rightarrow	\rightarrow	\rightarrow	\rightarrow
	Print	Printing		*5	×	*5	×	☆	☆	☆	☆	☆	*5	☆	\rightarrow	*3	\rightarrow	*3
		Sort	*1	×	×	—	×	☆	☆	☆	☆	☆	\rightarrow	☆	\rightarrow	*3	—	*3
			*2	*5	—	*5	—	☆	☆	☆	☆	☆	*5	☆	\rightarrow	—	\rightarrow	—
1		Stapling *1		×	×	—	×	☆	☆	☆	☆	☆	\rightarrow	☆	\rightarrow	*3	—	*3

 \therefore ...means that these functions can be used together.

O...means that you can interrupt the current job with Function keys or the **[Interrupt]** key to proceed to a subsequent job.

 \rightarrow ...means that another job will automatically start after the current job is finished.

 \times ...means that you must manually start another job after the current job is finished (i.e. these functions cannot be used together).

*1 When the optional 20-bin sorter stapler or 10-bin sorter stapler is installed.

*2 When the optional 3-bin sorter is installed.

*3 When papers is left in the optional sorter stapler, remove it or the subsequent operation cannot output papers.

*4 Copies are output if you press the **[Clear Modes]** key. However, the subsequent operation will start automatically after a System Reset occurs.

*5 Both operations are performed concurrently and output is interleaved.

INDEX

 $\begin{array}{ll} 1 \text{ Sided} \rightarrow 2 \text{ Sided}, & 63 \\ 2 \text{ Sided} \rightarrow 1 \text{ Sided}, & 72 \\ 2 \text{ Sided} \rightarrow 2 \text{ Sided}, & 66 \end{array}$

A

Access to Machine, 190 Adding Areas, 141 Adding Staples, 164 Adjusting Colors Based on the Selected Color, 111 Adjusting Copy Image Density, 26 Area Editing, 131 Area Shapes, 122, 136 Auto color select mode, 28 Auto image density, 26 Auto Off Mode, 49 Auto paper select, 36 Auto Reduce/Enlarge, 48 Auto Start, 51

В

Book \rightarrow 1 Sided, 70 Book \rightarrow 2 Sided, 67

С

Change Modes, 140 Changing Basic Settings for the Entire Image, 138 Changing Paper Size, 169 Clearing Misfeeds, 161 Checking and Changing Areas, 140 Check Modes, 53 Changing The Toner Cartridge, 156 Color Adjustment, 106 Color Background, 86 Color Balance, 103 Color Balance Adjustment, 103 Color Balance Program, 104 Color Conversion, 83 Color Creation, 83 Color Erase, 85 Color Sample Chart, 10 Combination Chart, 97 Combination Chart for Area Editing, 146 Combine, 73

Combine 2 Originals, 73 Combine 4 Originals, 75 Combined auto and manual image density, 27 Copying from the Bypass Tray, 37 Counter, 54 Cover Sheet, 79

D

Delete Area, 132 Designate Area Display, 120 Designate Area Tools, 121 Designating Areas, 119 Directional Magnification (%), 59 Directional Size Magnification (inch), 60 Do's and Don'ts, 187 Duplex—Making 2 Sided Copies, 63

Ε

Energy Saver Mode, 49 Erasing a Group, 143 Erasing an Area, 142 Exiting Area Editing, 145

F

Finishing, 90 Frame/Line, 125, 134 Front and Back Cover, 80 Front Cover, 79 Full color copy mode, 28

Н

How to Edit Areas, 118

I

Image Adjustment, 108 Image Creation, 88 Interrupt copying, 50

L

Loading Paper, 154

Μ

Machine Environment, 188 Maintaining Your Machine, 191 Manual image density, 27 Manual paper select, 36 Margin Adjustment, 77 Mirror, 88 Mixing Colors Manually with the Number Keys, 113 Multi \rightarrow 2 Sided, 68

Ν

Notes for Designating Areas, 128

0

Operation Panel, 7 Options, 6 Originals, 14

Ρ

Paper Storage, 195 Photo mode, 34 Positive/Negative, 89 Power Connection, 189 Preset R/E, 54 Program, 51 Program User Color, 111

R

Removing Jammed Staples, 166

S

Safety Information, ii Sampling the User Color (Option), 115 Save Area, 133 Selecting a Color Mode, 28 Selecting Modes for Designated Areas, 130 Selecting Modes for Outside Designated Areas, 135 Selecting the Copy Paper Size, 36 Selecting the Original Image Type, 33 Series Copies, 70 Setting a Stack of Originals in the Document Feeder, 17 Setting Custom Sized Originals, 22 Setting one Original at a Time in the Document Feeder, 19 Setting Originals of Different Sizes in the Document Feeder, 21 Setting Originals on the Exposure Glass, 16 Shift, 76 Shifting the Image, 76

Soft/Sharp, Contrast, Background Density, and Pastel, 109 Sort, 90 Special original mode, 35 Specification, 197 Stack, 92 Staple, 93 Starting the Machine, 12

Т

Text mode, 34 Toner Storage, 195 Twin color mode, 31

U

U.C.R. Adjustment, A.C.S. Sensitivity and Auto Text/Photo Sensitivity, 110 User Tools, 173

W

What is Area Editing?, 117 Where to Put Your Machine, 188

Ζ

Zoom, 57