

Operating Instructions

Copy Reference



-
- 1** Placing Originals
 - 2** Copying
 - 3** Troubleshooting
 - 4** User Tools (Copier Features)
 - 5** Remarks
 - 6** Specifications

Introduction

This manual contains detailed instructions and notes on the operation and use of this machine. For your safety and benefit, read this manual carefully before using the machine. Keep this manual in a handy place for quick reference.

Important

Contents of this manual are subject to change without prior notice. In no event will the company be liable for direct, indirect, special, incidental, or consequential damages as a result of handling or operating the machine.

Notes


Some illustrations in this manual might be slightly different from the machine.

Certain options might not be available in some countries. For details, please contact your local dealer.

Laser Safety:

This machine is considered a class 1 laser device, safe for office/EDP use. The machine contains a 5-milliwatt, 760-800 nanometer wavelength, GaAIAs laser diode. Direct (or indirect reflected) eye contact with the laser beam might cause serious eye damage. Safety precautions and interlock mechanisms have been designed to prevent any possible laser beam exposure to the operator.

The following label is attached on the back side of the machine.

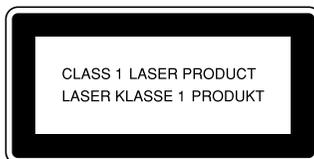

Caution:

Use of controls or adjustments or performance of procedures other than those specified in this manual might result in hazardous radiation exposure.

Notes:

The model names of the machines do not appear in the following pages. Check the type of your machine before reading this manual. (For details, see p.7 "Machine Types".)

- Type 1: 16 copies/minute (A4 \square , 8 $\frac{1}{2}$ " \times 11" \square)
- Type 2: 20 copies/minute with duplex unit (A4 \square , 8 $\frac{1}{2}$ " \times 11" \square)

Certain types might not be available in some countries. For details, please contact your local dealer.

Two kinds of size notation are employed in this manual. With this machine refer to the metric version.

For good copy quality, the supplier recommends that you use genuine toner from the supplier.

The supplier shall not be responsible for any damage or expense that might result from the use of parts other than genuine parts from the supplier with your office products.

Power Source

220 - 240V, 50/60Hz, 7A or more

Please be sure to connect the power cord to a power source as above. For details about power source, see p.57 "Power Connection".

Manuals for This Machine

The following manuals describe the operational procedures of this machine. For particular functions, see the relevant parts of the manual.

Note

- Manuals provided are specific to machine type.
- Adobe Acrobat Reader is necessary to view the manuals as a PDF file.

❖ **General Settings Guide**

Provides an overview of the machine and describes System Settings (paper trays, Key Operator Tools, etc.), and troubleshooting.

❖ **Network Guide**

Describes procedures for configuring the machine and computers in a network environment.

❖ **Copy Reference (this manual)**

Describes operations, functions, and troubleshooting for the machine's copier function.

❖ **Printer/Scanner Reference**

Describes system settings, functions, troubleshooting and operations for the machine's printer and scanner function.

❖ **Other manuals**

- Unix Supplement (Available from an authorized dealer, or as a PDF file on our Web site.)

TABLE OF CONTENTS

Manuals for This Machine	i
Notice	1
How to Read This Manual	2
Names of Major Options	3
Safety Information	4
Safety During Operation.....	4
Positions of Labels and Hallmarks for ⚠WARNING and ⚠CAUTION Labels ...	6
Machine Types	7
Control Panel	8
Display	9
Reading the Display and Using Keys.....	10
Turning On the Power	11
Turning On the Main Power	11
Turning On the Power	11
Turning Off the Power	12
Turning Off the Main Power	12
Saving Energy.....	12

1. Placing Originals

Originals	13
Sizes and Weights of Recommended Originals.....	13
Sizes Detectable with Auto Paper Select	15
Missing Image Area	16
Placing Originals	17
Original Orientation	17
Placing Originals on the Exposure Glass.....	17
Placing Originals in the ADF or ARDF	18

2. Copying

Basic Procedure	21
Copying from the Bypass Tray	22
Copier Functions	26
Adjusting Image Density	26
Selecting Original Type Setting.....	26
Selecting Copy Paper	26
Preset Reduce/Enlarge	28
Zoom	28
Auto Reduce/Enlarge	29
Sort	30
Changing the number of sets.....	31
Duplex (Type 2 only)	32
One-Sided Combine.....	34
Two-Sided Combine (Type 2 only).....	35
Series Copies.....	37

3. Troubleshooting

If Your Machine Does Not Operate As You Want	39
When a Message Is Displayed.....	39
If You Cannot Make Clear Copies	40
If You Cannot Make Copies As You Want	41
When Memory Is Full	42
📄 Loading Paper	43
Loading Paper.....	43
Orientation-Fixed Paper or Two-Sided Paper	44
📄 Adding Toner	46
Handling Toner.....	46
Toner Storage	46
Used Toner	46
Removing Toner	47
Inserting Toner	48

4. User Tools (Copier Features)

Accessing User Tools (Copier Features)	49
Changing Default Settings	49
Quitting User Tools	50
Settings You Can Change with User Tools	51
APS/ Auto R/E Priority	51
Auto Tray Switching	51
Original Type Setting	51
Duplex Mode Priority	52
Orientation	52
Max. Number of Sets	52
Original Count Display	52
Reproduction Ratio	52
Preset R/E Priority	53
Duplex Margin	53
Rotate Sort	53
Rotate Sort:Auto Continue	53
Letterhead Setting	53

5. Remarks

Do's and Don'ts	55
Where to Put Your Machine	56
Machine Environment	56
Moving.....	57
Power Connection.....	57
Access to the Machine	58
Maintaining Your Machine	59
Cleaning the Exposure Glass.....	59
Cleaning the Exposure Glass Cover	59
Cleaning the ADF or ARDF.....	59

6. Specifications

Combination Chart.....	61
Supplementary Information	62
INDEX.....	65

Notice

Important

Do not copy or print any item for which reproduction is prohibited by law.

Copying or printing the following items is generally prohibited by local law:

bank notes, revenue stamps, bonds, stock certificates, bank drafts, checks, passports, driver's licenses.

The preceding list is meant as a guide only and is not inclusive. We assume no responsibility for its completeness or accuracy. If you have any questions concerning the legality of copying or printing certain items, consult with your legal advisor.

Notice To Wireless LAN Interface (optional) Users



Notice to Users in EEA Countries

This product complies with the essential requirements and provisions of Directive 1999/5/EC of the European Parliament and of the Council of 9 March 1999 on radio equipment and telecommunications terminal equipment and the mutual recognition of their conformity.

The CE Declaration of Conformity is available on the Internet at URL:

http://www.ricoh.co.jp/fax/ce_doc/

This product is only for use in EEA or other authorized countries. Outdoor use of this product in Belgium, France, Germany, Italy, or the Netherlands is prohibited.

How to Read This Manual

Symbols

The following set of symbols is used in this manual.

WARNING:

This symbol indicates a potentially hazardous situation that might result in death or serious injury when you misuse the machine without following the instructions under this symbol. Be sure to read the instructions, all of which are described in the Safety Information section.

CAUTION:

This symbol indicates a potentially hazardous situation that might result in minor or moderate injury or property damage that does not involve personal injury when you misuse the machine without following the instructions under this symbol. Be sure to read the instructions, all of which are described in the Safety Information section.

* The statements above are notes for your safety.

Important

If this instruction is not followed, paper might be misfed, originals might be damaged, or data might be lost. Be sure to read this.

Preparation

This symbol indicates information or preparations required prior to operating.

Note

This symbol indicates precautions for operation, or actions to take after abnormal operation.

Limitation

This symbol indicates numerical limits, functions that cannot be used together, or conditions in which a particular function cannot be used.

Reference

This symbol indicates a reference.

[]

Keys that appear on the machine's display panel.

[]

Keys built into the machine's control panel.

Names of Major Options

Major options of this machine are referred to as follows in this manual:

- Auto Document Feeder → ADF
- Auto Document Feeder capable of scanning both sides of a sheet → ARDF

Safety Information

When using this machine, the following safety precautions should always be followed.

Safety During Operation

In this manual, the following important symbols are used:

⚠ WARNING:
Indicates a potentially hazardous situation which, if instructions are not followed, could result in death or serious injury.

⚠ CAUTION:
Indicates a potentially hazardous situation which, if instructions are not followed, may result in minor or moderate injury or damage to property.

⚠ WARNING:


- ***Disconnect the power plug (by pulling the plug, not the cable) if the power cable or plug becomes frayed or otherwise damaged.***
- ***To avoid hazardous electric shock or laser radiation exposure, do not remove any covers or screws other than those specified in this manual.***
- ***Turn off the power and disconnect the power plug (by pulling the plug, not the cable) if any of the following occurs:***
 - ***You spill something into the machine.***
 - ***You suspect that your machine needs service or repair.***
 - ***The external housing of your machine has been damaged.***
- ***Do not incinerate spilled toner or used toner. Toner dust might ignite when exposed to an open flame.***
- ***Disposal can take place at our authorized dealer.***
- ***Dispose of the used toner bottle in accordance with the local regulations.***
- ***Connect the machine only to the power source described on the inside front cover of this manual. Connect the power cord directly into a wall outlet and do not use an extension cord.***
- ***Do not damage, break or make any modifications to the power cord. Do not place heavy objects on it. Do not pull it hard nor bend it more than necessary. These actions could cause an electric shock or fire.***

⚠ CAUTION:

- *Protect the machine from dampness or wet weather, such as rain and snow.*
- *Unplug the power cord from the wall outlet before you move the machine. While moving the machine, you should take care that the power cord will not be damaged under the machine.*
- *When you disconnect the power plug from the wall outlet, always pull the plug (not the cable).*
- *Do not allow paper clips, staples, or other small metallic objects to fall inside the machine.*
- *Keep toner (used or unused) and toner bottle out of the reach of children.*
- *For environmental reasons, do not dispose of the machine or expended supply waste at household waste collection points. Disposal can take place at an authorized dealer.*
- *The inside of the machine could be very hot. Do not touch the parts with a label indicating the "hot surface". Otherwise, an injury might occur.*
- *Keep the machine away from humidity and dust. Otherwise a fire or an electric shock might occur.*
- *Do not place the machine on an unstable or tilted surface. If it topples over, an injury might occur.*
- *Before moving the machine, be sure to pull all four handles fully out. If not, an injury might occur. After moving the machine, return the four handles to their original positions.*
- *When the optional paper tray unit is installed, do not push the upper part of the main unit horizontally. An injury might occur if the paper tray unit becomes detached from the main unit.*
- *If you use the machine in a confined space, make sure there is a continuous air turnover.*

Positions of Labels and Hallmarks for WARNING and CAUTION Labels

This machine has labels for  WARNING and  CAUTION at the positions shown below. For safety, please follow the instructions and handle the machine as indicated.

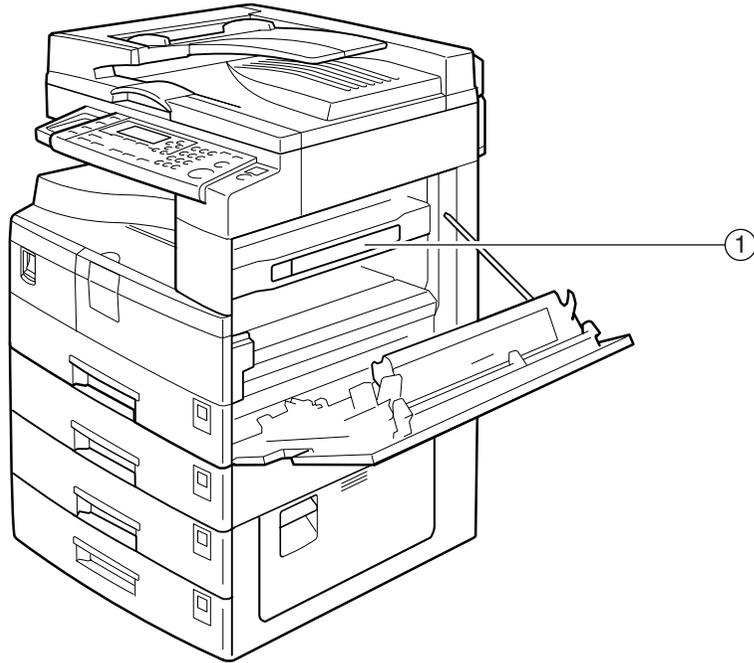

①

<p>CAUTION ATTENTION 주의 ACHTUNG ATTENZIONE PRECAUCION 注意</p>		<ul style="list-style-type: none"> • High temperature. Be careful of hot parts when clearing paper jams. • Température élevée. Attention aux pièces chaudes en supprimant un bouchage papier. • 고온이므로 용지 걸림 제거시 주의해 주십시오. • Vorsicht hohe Temperaturen! Achten Sie auf heisse Geräteteile, wenn Sie einen Papierstau beheben. • 高温。清除卡紙時請小心熱燙的部份。 	<ul style="list-style-type: none"> • Temperatura elevata. Fare attenzione alle parti calde quando si eliminano gli inceppamenti della carta. • Alta temperatura. Tenga cuidado con las partes calientes cuando elimine los atascamientos de papel. • 高温。取夾紙時，請小心高溫部份 • 高温です。用紙つまり処理は、高温部分に注意しながら行ってください。
--	---	--	--

APE023S

Machine Types

This machine comes in three models which vary by copy speed. To make sure which model you have, see the inside front cover of this manual.

	Type 1	Type 2
Copy Speed	16 copies/minute (A4 \square , 8 ¹ / ₂ " × 11" \square)	20 copies/minute (A4 \square , 8 ¹ / ₂ " × 11" \square)
Duplex unit	—	○


○: Can be used with this type.

—: Cannot be used with this type.

Control Panel

Note

These illustrations show Type 2.

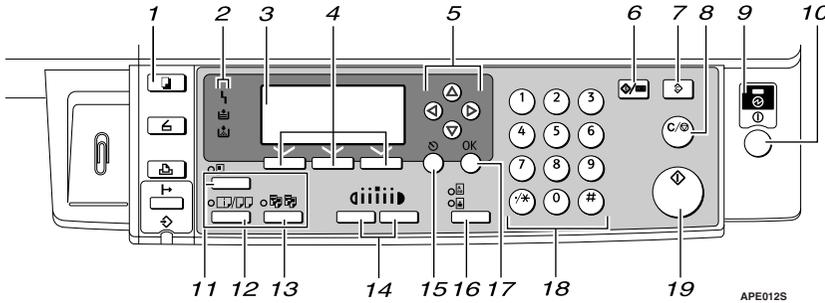

1. [Copy] key

Press to activate the copier function.

2. Indicators

Display errors and machine status.

- : Error indicator
See "Control Panel", *General Settings Guide*.
- : Add Toner indicator
See p.46 " Adding Toner".
- : Load Paper indicator
See p.43 " Loading Paper".

3. Display

Displays operation status and messages.

4. Selection keys

Correspond to items on the display. Press to select the corresponding item.

5. Scroll keys

Press to select an item.

- : scroll upward
- : scroll downward
- : scroll right
- : scroll left

Reference

See p.10 "Reading the Display and Using Keys".

6. [User Tools/Counter] key

Press to change default or operation parameters according to requirement.

7. [Clear Modes] key

Press to clear the current settings.

8. [Clear/Stop] key

Clear: clears an entered numeric value.
Stop: stops copying.

9. Main power indicator

Lights when the main power switch is turned on.

Reference

p.11 "Turning On the Power"

10. Operation switch (On indicator)

Press to turn the power on. The On indicator lights. To turn the power off, press again.

Note

This key is inactivate during scanning or while setting defaults.

Reference

p.11 "Turning On the Power"

11. [Duplex] key (Type 2 only)

Makes two-sided copies.

Reference

See p.32 "Duplex (Type 2 only)".

12. [Combine/Series] key

Press to make combine or series copies.

Reference

p.34 "One-Sided Combine"

p.35 "Two-Sided Combine (Type 2 only)"

p.37 "Series Copies"

13. **[Sort]** key

Automatically sorts copies.

14. **[Lighter]** and **[Darker]**

Press to change the image density setting. Select the image density in five increments, Lighter to Darker.

15. **[Escape]** key

Press to cancel an operation or return to the previous display.

16. **[Original Type]** key

Press to select the original type registered with **[Original Type 1 (Text)]** or **[Original Type 2 (Photo)]**. When the original type is selected, the corresponding indicator lights.

17. **[OK]** key

Press to set a selected item or entered numeric value.

18. **Number keys**

Press to enter numeric values.

19. **[Start]** key

Press to start scanning or sending.


Display

This section explains how to read the display and use the Selection key for the initial copy display.

Note

The copy display is set as the default screen when the machine is turned on.

Initial copy display

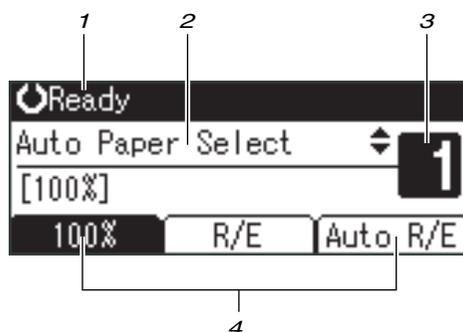

AA1024S

1. Operational status or messages

2. Messages and the selected tray appear here. Currently selected items appear in brackets.

3. Number of copies set.


4. Reduce/Enlarge ratio function for non-fixed ratios.

Reading the Display and Using Keys

This section explains how to read the display and use the selection key for the initial copy display.

Note

- The copy display is set as the default screen when the machine is turned on.

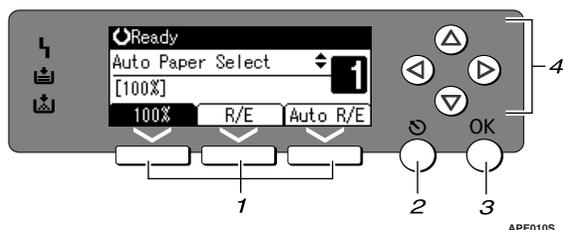

1. Selection keys

Correspond to items at the bottom line on the display.

Example: initial copy display

- When the instruction “press **[100%]** ” appears in this manual, press the left selection key.
- When the instruction “press **[R/E]** ” appears in this manual, press the centre selection key.
- When the instruction “press **[Auto R/E]** ” appears in this manual, press the right selection key.

2. **[Escape]** key

Press to cancel an operation or return to the previous display.

3. **[OK]** key

Press to set a selected item or entered numeric value.

4. Scroll keys

Press to move the cursor to each direction one by one.

When **[▲]**, **[▼]**, **[▶]**, or **[◀]** key appears in this manual, press the scroll key of the same direction.

Turning On the Power

This machine has two power switches.

❖ Operation switch (right side of the control panel)

Press to activate the machine. When the machine has finished warming up, you can operate the machine.

❖ Main power switch (left side of the machine)

Turning off this switch makes the main power indicator on the right side of the control panel go off. When this is done, machine power is completely off.

Note

- ❑ This machine automatically enters Energy Saver mode or turns itself off if you do not use it for a while. See *General Settings Guide*.


Important

- ❑ Do not turn off the main power switch immediately after turning it on. Doing so may result in damage to the memory, leading to malfunctions.

Turning On the Power

1 Press the operation switch.

The **On** indicator goes on.

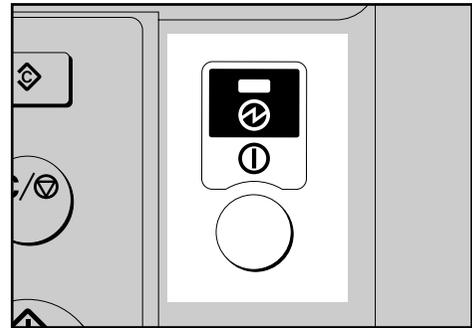


APE013S

Turning On the Main Power

1 Make sure the power cord is firmly plugged into the wall outlet.

2 Turn on the main power switch.

The main power indicator goes on.

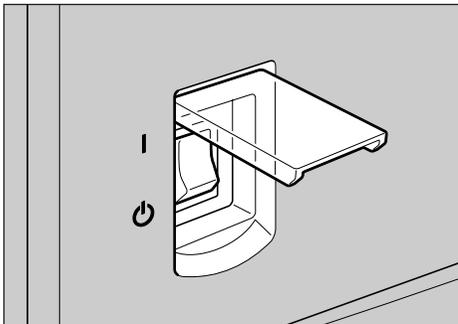

AAI027S


Note

- ❑ If the power does not come on when the operation switch is pressed, check the main power switch is on. If it is off, turn it on.

Turning Off the Power

1 Press the operation switch.

The **On** indicator goes off.

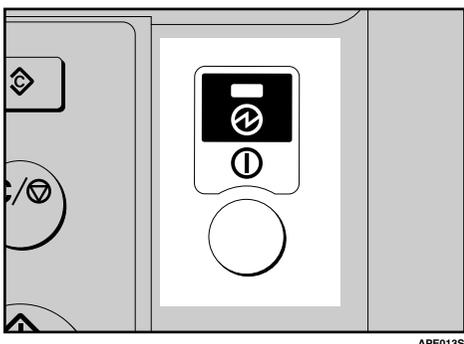

Note

- Even if you press the operation switch, the indicator does not go out, but blinks in the following cases:
 - During communication with external equipment.

Turning Off the Main Power

Important

- Do not turn off the main power switch when the **On** indicator is lit or blinking. Doing so may result in damage to the memory.
- Make sure 100% is shown as available memory on the initial scanner display before turning off the main power switch.
- Be sure to turn off the main power switch before pulling out the power plug. Not doing this may result in damage to the memory.

1 Be sure the **On** indicator is not lit.

2 Turn off the main power switch.

The main power indicator goes out.

Saving Energy

Auto Off / Low Power

The machine automatically turns itself off when the job is finished, after a certain period of time has elapsed. This function is called "Auto Off".

Note

- You can change the Auto Off time. See *General Settings Guide*.
- The Auto Off Timer function will not operate in the following cases:
 - When a warning message appears
 - When the service call message appears
 - When paper is jammed
 - When the cover is open
 - When the "Add Toner" message appears
 - When toner is being replenished
 - When the User Tools screen is displayed
 - When fixed warm-up is in progress
 - When the printer, or other functions are active
 - When operations are suspended during printing
 - When the Data In indicator is on or blinking

1. Placing Originals

Originals

Sizes and Weights of Recommended Originals

❖ Metric version

Original location	Original size	Original weight
Exposure glass	Up to A3	--
ADF or ARDF	One-sided originals: A3☐ – A5☐☐	40–128 g/m ²
	Two-sided originals: *1 A3☐ – A5☐☐	52–105 g/m ² *1

❖ Inch version

Original location	Original size	Original weight
Exposure glass	Up to 11" × 17"	--
ADF or ARDF	One-sided originals: 11" × 17"☐ – 5 ¹ / ₂ " × 8 ¹ / ₂ "☐☐	11–34 lb.
	Two-sided originals *1: 11" × 17"☐ – 5 ¹ / ₂ " × 8 ¹ / ₂ "☐☐	14–28 lb. *1

*1 The optional ARDF is required.

Note

- ☐ About 30 originals can be placed in the ADF.
- ☐ About 50 originals can be placed in the ARDF.

Non-compatible originals for the ADF or ARDF

1 Placing the following types of originals in the ADF or ARDF can cause paper misfeeds or result in damage to the originals. Place these originals on the exposure glass instead.

- Originals other than those specified on p.13 “Sizes and Weights of Recommended Originals”
- Stapled or clipped originals
- Perforated or torn originals
- Curled, folded, or creased originals
- Pasted originals
- Originals with any kind of coating, such as art paper, aluminum foil, carbon paper, or conductive paper
- Originals with perforated lines
- Originals with indexes, tags, or other projecting parts
- Sticky originals such as translucent paper
- Thin, highly flexible originals
- Thick originals such as postcards
- Bound originals such as books
- Transparent originals such as OHP transparencies or translucent paper

 **Note**

- The original might become dirty if it is written with a pencil or a similar tool.

Sizes Detectable with Auto Paper Select

❖ Metric version

Size	A3 	B4 JIS *1 	A4 	B5 JIS *1 	B5 JIS *1 	A5 	8 1/2" × 13" 
Original location							
Exposure glass	○	○	○	×	○	×	○
ADF or ARDF	○	○	○	○	○	○	○

○ : Detectable size × : Undetectable size

*1 JIS: Japanese Industrial Standard

Note


-  If you want to set up the machine to select A5  automatically, contact your service representative.

❖ Inch version


Size	11" × 17" 	8 1/2" × 14" 	8 1/2" × 13" 	8 1/2" × 11" 	5 1/2" × 8 1/2" 
Original location					
Exposure glass	○	○	○	○	×
ADF or ARDF	○	○	×	○	○

○ : Detectable size × : Undetectable size

❖ Exposure glass

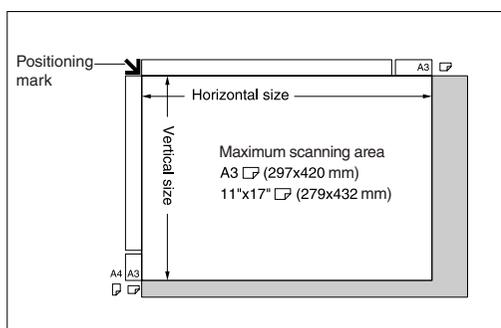

❖ **ADF or ARDF**

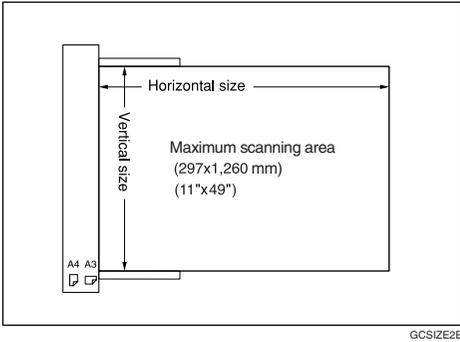

 **Note**

- ❑ When you copy custom size originals, make sure you specify the size of the originals. If not, the image may not be copied properly. See p.19 “Placing custom size originals”.

Sizes difficult to detect

It is difficult for the machine to detect the sizes of the following originals, so select the paper size manually.

- Originals with indexes, tags, or other projecting parts
- Transparent originals such as OHP transparencies or translucent paper
- Dark originals with lots of text and drawings
- Originals partially consisting of a solid image
- Originals that have solid images around their edges

Missing Image Area

Even if you place originals in the ADF or ARDF, or on the exposure glass correctly, 4 mm (0.2”) margins on all four sides might not be copied.

Placing Originals

Note

- ❑ Take care to place originals only after any correction fluid and ink has completely dried. Not taking this precaution could cause marks on the exposure glass that will be copied onto paper.

Reference

For original sizes you can set, see p.13 "Originals".

 
 
 
Original Orientation

You can set the original orientation in the following ways.

This function is useful for copying torn or large originals.

Note

- ❑ Originals should normally be aligned to the rear left corner. However, some copy functions may produce different results depending on the orientation of the originals. For details, see the explanations of each function.

Originals	ADF or ARDF	Exposure glass
		
		<small>set11EE</small>
		
		<small>set23EE</small>

Placing Originals on the Exposure Glass

- 1** Lift the exposure glass cover, ADF or ARDF.


Important

- ❑ Do not lift the exposure glass cover, ADF or ARDF forcefully. If you do, the ADF or ARDF cover might open or be damaged.

Note

- ❑ Be sure to lift the exposure glass cover, ADF or ARDF by more than 30°. Otherwise, the size of the original might not be detected correctly.

- 2** Place the original face down on the exposure glass. It should be aligned with the rear left corner.

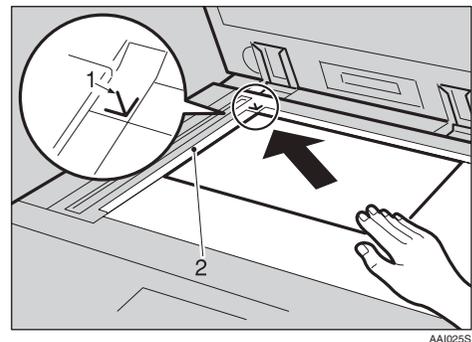

- 1.** Positioning mark
- 2.** Left scale

Note

- ❑ Start with the first page to be copied.

- 3** Lower the exposure glass cover, ADF or ARDF.

Placing Originals in the ADF or ARDF


Settings should be made in the following situations:

- ❖ **When placing custom size originals:**
p.19 “Placing custom size originals”

 **Note**


- Do not stack originals over the limit mark on the side fence of the ADF or ARDF.
- The last page should be on the bottom.
- Do not cover the sensors with your hands, or place objects on them. Doing so could cause the size to be detected incorrectly, or the paper misfeed error message to appear. Also, do not place anything on the cover, as this too could cause a malfunction.

❖ **ARDF**

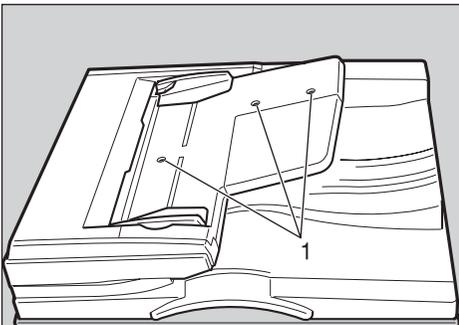

ZAAH280E


❖ **ADF**

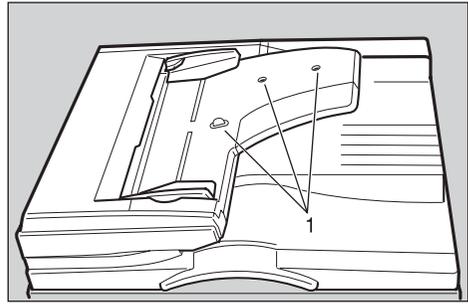

AAI036S

1. Sensor

- 1** Set the document guide to the original size.
- 2** Align the edges of the originals and place them in the ADF or ARDF with the side to be copied facing up.

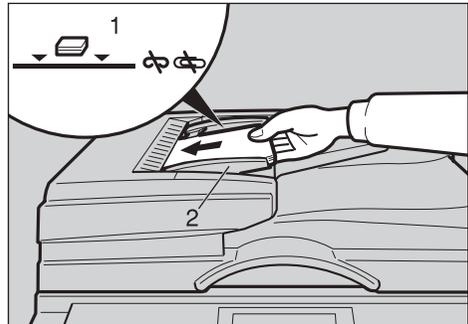

AAI026S

- 1. Limit mark**
- 2. Document guide**

 **Note**

- Straighten curls in the originals before placing them in the ADF or ARDF.
- To prevent multiple sheets feeding in at once, fan the originals before placing them in the ADF, or ARDF.
- Set the original squarely.


Placing custom size originals

When placing custom size originals in the ADF, or ARDF, specify the size of the originals.

Note

- Paper that has a vertical length of 105–297 mm (4.2"–11.6") and a horizontal length of 128–1260 mm (5.1"–49.6") can be placed with this function.

- 1 Select the paper tray using [▲] or [▼], and then press the [#] key.

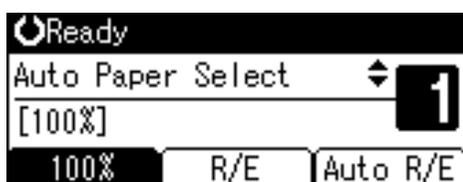


- 2 Select [Custom Size] using [▲] or [▼] key, and then press the [OK] key.



Note

- When [Auto Detect] is selected, the size of the placed original will be detected automatically.


- 3 Enter the horizontal size of the original using the number keys, and then press the [OK] key.

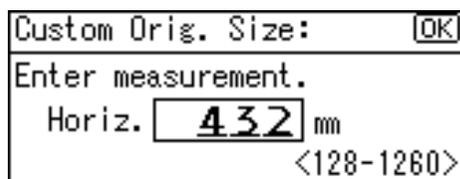

Note


- If you make a mistake, press the [Clear/Stop] key, and then enter the value again.

- 4 Enter the vertical size of the original using the number keys, and then press the [OK] key.

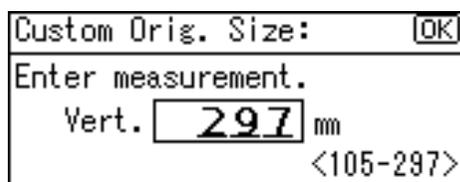

The "Programmed" message appears with your set original size.

When the custom size originals settings are registered, <[*]Ready appears on the top of copy display.

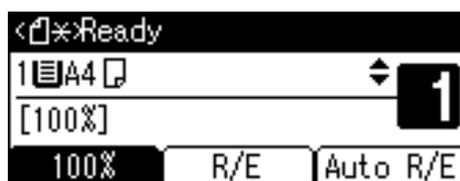


Note


- To cancel the size you have set, press the [Clear Modes] key.

Placing regular size originals

1 Select the paper tray using [▲] or [▼] key, and then press the [#] key.

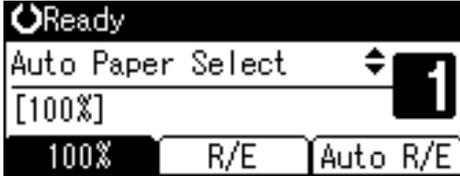


2 Select [Regular Size] using [▲] or [▼] key, and then press the [OK] key.

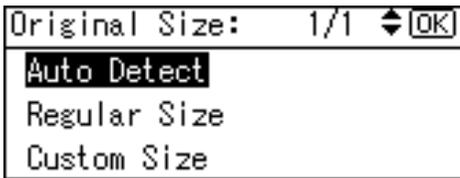

 **Note**


- When [Auto Detect] is selected, the size of the placed original will be detected automatically.

3 Select the paper size using the scroll keys, and then press [OK] key.

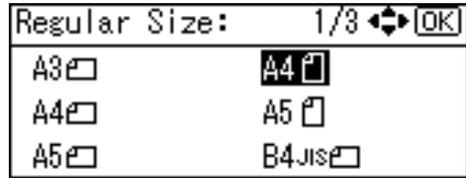

The “Programmed” message appears.

When the regular size originals settings are registered, Ready appears on the top of copy display.

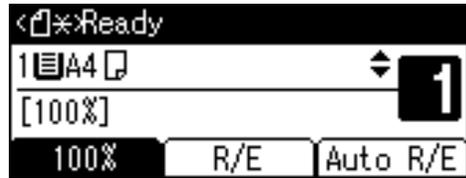

 **Note**

- To cancel the size you have set, press the [Clear Modes] key.

2. Copying

Basic Procedure

- 1 If the machine has user codes set, enter a user code (up to eight digits) using the number keys, and then press the [OK] or [#] key.


The machine is ready to copy.

Reference

For user codes, see “Key Operator Tools”, *General Settings Guide*.

- 2 Make sure "Ready" appears on the display.

❖ Initial copy display

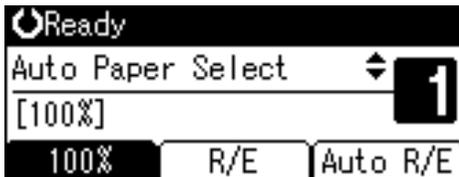

If any other function is displayed, press the [Copy] key.

- 3 Make sure no previous settings remain.

Note

- When there are previous settings remaining, press the [Clear Modes] key and enter again.

- 4 Place your originals.

Reference


p.17 “Placing Originals”

- 5 Make the necessary settings.

Reference

See the explanations for each function.

- 6 Enter the number of copies using the number keys.

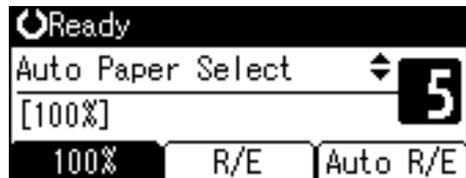

Note

- The maximum copy quantity that can be set is 99.

- 7 Press the [Start] key.

Copying starts.

Note

- Copies are delivered face down.

How to operate

- ❖ To switch between pages or select functions:

Press the scroll key.

- ❖ To stop the machine during a multi-copy run:

Press the [Clear/Stop] key.

- ❖ To return the machine to the initial condition after copying:

Press the [Clear Modes] key.

- ❖ To clear an entered value.

Press the [Clear/Stop] key.

Copying from the Bypass Tray

Use the bypass tray to copy onto OHP transparencies, thick paper, envelopes and copy paper that cannot be loaded in the paper trays.

2

Important

- ❑ Paper longer than 433 mm may become wrinkled, may not feed in, and may jam.

Note

- ❑ If you do not use standard size copy paper, or if you use special paper, you should enter its vertical and horizontal dimensions. See p.19 “Placing custom size originals”. The sizes you can enter are as follows:


Metric version	<ul style="list-style-type: none"> • Vertical: 90–297 mm • Horizontal: 148–600 mm
Inch version	<ul style="list-style-type: none"> • Vertical: 3.55"–11.69" • Horizontal: 5.83"–23.62"

- ❑ The machine can automatically detect the following sizes as regular size copy paper:

Metric version	A3☐, A4☐☐, A5☐☐, 8" × 13"☐
Inch version	11" × 17"☐, 8½" × 11"☐☐, 5½" × 8½"☐, 8½" × 14"☐


- ❑ When copying onto OHP transparencies or paper heavier than 105 g/m² (about 28 lb.), you need to specify the paper type. See p.24 “When copying onto special paper” .
- ❑ The maximum number of sheets you can load at the same time depends on paper type. The maximum number of sheets should not exceed the upper limit.

1 Open the bypass tray.

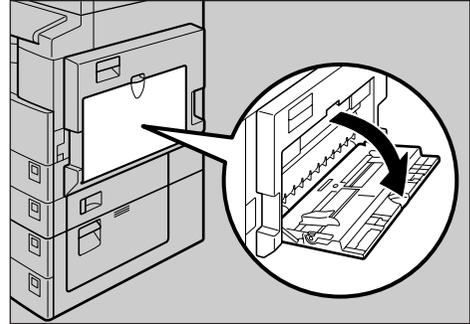

ZENY100E


2 Push up the paper guide release lever.

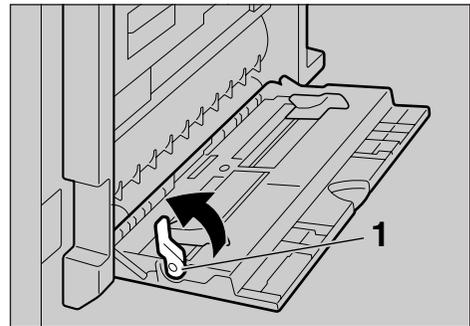

ZENY110E

1. Paper guide release lever

- 3** Insert the paper with the side you want to copy facing down, and then adjust the paper guide with the paper size.

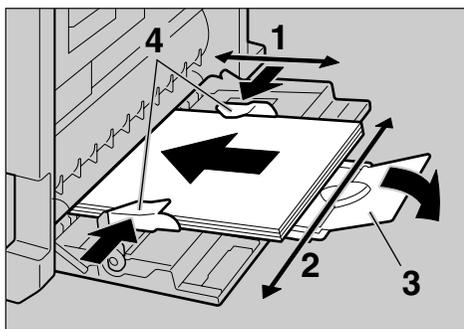

ZENY120E

1. Horizontal size
2. Vertical size
3. Extender
4. Paper guides

Note

- If the guides are not flush against the copy paper, images might be skewed or paper misfeeds might occur.
- Do not stack paper over the limit mark, otherwise images might be skewed or paper misfeeds might occur.
- Swing out the extender to support paper sizes larger than A4, 8¹/₂" × 11".
- Fan paper to get air between the sheets and avoid a multi-sheet feed.

- 4** Pull down the paper guide release lever (step 2).

The bypass tray is selected on the display.



Note

- If [Byp.] is not selected on the display, select [Byp.] using [▲] or [▼], and then press the [#] key.


- 5** Select the paper size and type.

When copying onto regular size paper


- 1** Select [Paper Size] using [▲] or [▼], and then press the [OK] key.



- 2** Select [Regular Size] using [▲] or [▼], and then press the [OK] key.

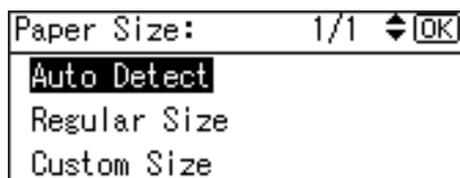

- 3 Select the paper size using the scroll keys, and then press the [OK] key.

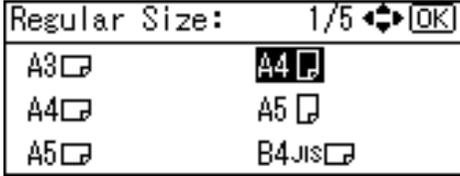

The " Programmed " message appears.

When copying onto custom size paper


Important

- You should specify the size of copy paper to avoid paper mis-feeds.


- 1 Select [Paper Size] using [▲] or [▼], and then press the [OK] key.



- 2 Select [Custom Size] using [▲] or [▼], and then press the [OK] key.

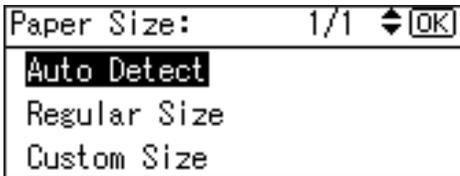


- 3 Enter the horizontal size of the original using the number keys, and then press the [OK] key.

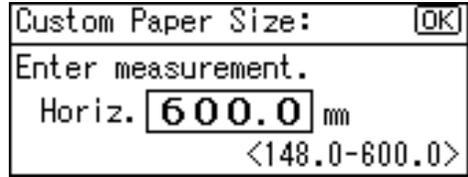

Note

- If you make a mistake, press the [Clear/Stop] key, and then enter the value again.


- 4 Enter the vertical size of the original using the number keys, and then press the [OK] key.

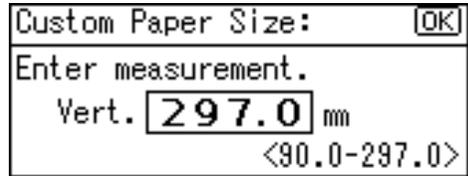

The " Programmed " message appears.

When copying onto special paper

- 1 Select [Paper Type] using [▲] or [▼], and then press the [OK] key.

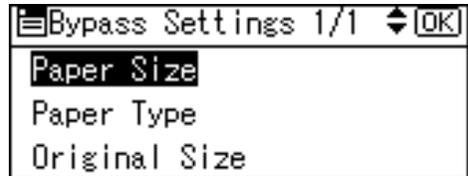

- ② Select the paper type, and then press the [OK] key.

Paper Type:	1/1	[OK]
Plain Paper		
Thick Paper		
OHP (Transparency)		

The “ Programmed ” message appears.

When copying onto envelopes

- ① Select [Paper Size] using [▲] or [▼], and then press the [OK] key.

Bypass Settings 1/1	[OK]
Paper Size	
Paper Type	
Original Size	

- ② Select [Regular Size] using [▲] or [▼], and then press the [OK] key.

Paper Size:	1/1	[OK]
Auto Detect		
Regular Size		
Custom Size		

- ③ Select the envelope size from [C6 env], [C5 env], [DL env], and then press the [OK] key.

Regular Size:	1/5	[OK]
A3	A4	
A4	A5	
A5	B4jis	

The “ Programmed ” message appears.

- ④ Press the [#] key.

Ready		
C6Env		
[100%]		
100%	R/E	Auto R/E

- ⑤ Select [Paper Type] using [▲] or [▼], and then press the [OK] key.

Bypass Settings 1/1	[OK]
Paper Size	
Paper Type	
Original Size	

- ⑥ Select [Thick Paper] using [▲] or [▼], and then press the [OK] key.

Paper Type:	1/1	[OK]
Plain Paper		
Thick Paper		
OHP (Transparency)		

The “ Programmed ” message appears.

- ⑥ Place your originals, and then press the [Start] key.

Note

- When copying onto OHP transparencies, remove copied sheets one by one.


Copier Functions

Adjusting Image Density


You can adjust copy image density to match your originals.

If you require darker or lighter copies, adjust image density accordingly.

- 1 Press the **[Lighter]** or **[Darker]** key to adjust the density.

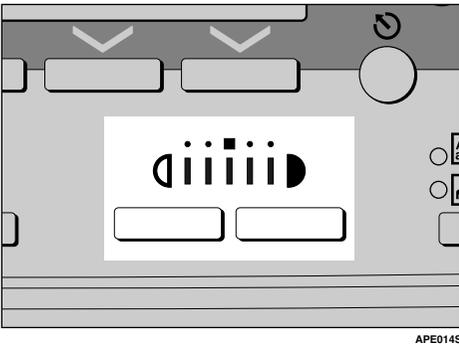

- 1 Press the **[Original Type]** key and select the original type.

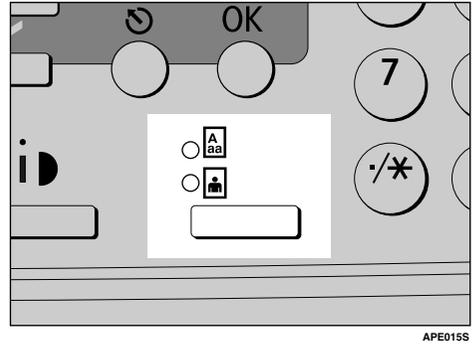

Note

- Press the **[Original Type]** key to go through the following types:

Upper indicator lit	Text
Lower indicator lit	Photo

Selecting Original Type Setting

Select one of the following two types to match your originals:

- ❖ **Text**
Select this when your originals contain only text (no pictures).
- ❖ **Photo**
This can reproduce delicate tones of photographs and pictures.

Reference
p.51 "Original Type Setting"

Selecting Copy Paper

There are two ways to select copy paper:

- ❖ **Auto Paper Select**
The machine selects a suitable size of copy paper automatically based on original size and reproduction ratio.
- ❖ **Manual Paper Select**
Choose the tray containing the paper you want to copy onto: a paper tray or the bypass tray.


Reference
p.16 "Sizes difficult to detect"

Note

- If you specify all paper trays as containing special paper, you cannot use the Auto Paper Select function.

Auto Paper Select

- 1 Make sure [Auto Paper Select] is selected.

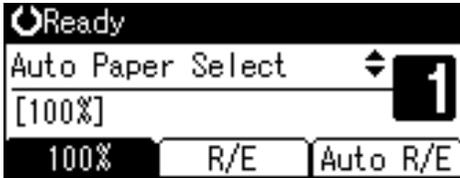

Manual Paper Select

- 1 Select the paper tray or bypass tray using [▲] or [▼].

The selected tray and the paper size appear.




Reference

p.22 "Copying from the Bypass Tray"

Rotated copy

If the orientation in which your original is placed (⏏ or ⏏) is different from that of the paper you are copying onto, this function rotates the original image by 90° to fit it on the copy paper. This function works when [Auto Paper Select] or [Auto Reduce/Enlarge] is selected. See p.26 "Auto Paper Select".

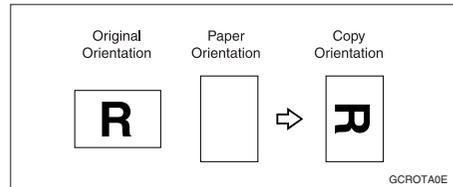


Note

- ❑ You cannot use the Rotated Copy function when enlarging onto A3, B4 JIS or 11" × 17", 8¹/₂" × 13", 8¹/₂" × 14" size paper. To do this, place your original in the ⏏ orientation.

	Original size and orientation	Copy paper size and orientation
You cannot rotate:	A4, B5 JIS, or A5 ⏏  GCROTA1E	When enlarging to: B4 JIS, A3  GCROTA2E
However, you can use:	A4, B5 JIS, or A5 ⏏  GCROTA3E	When enlarging to: B4 JIS, A3  GCROTA4E


Preset Reduce/Enlarge

You can select a preset ratio for copying.

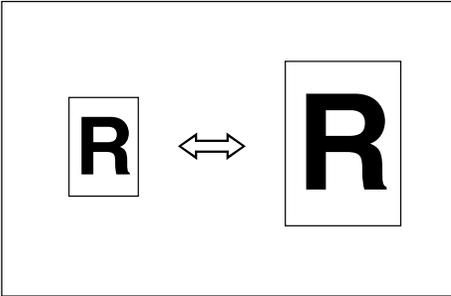

❖ Base Point

The base point of Reduce/Enlarge differs depending on how the original is scanned. When the original is placed on the exposure glass, the upper left corner is the base point. When placed in the ADF or ARDF, the bottom left corner is the base point.

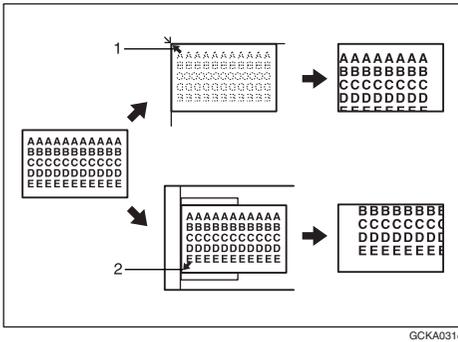

GCKA031e


1. Base point when placing on the exposure glass.

2. Base point when placing in the ADF or ARDF.


🔍 Reference

- Related default settings
- p.52 "Reproduction Ratio"
- p.53 "Preset R/E Priority"

1 Press [R/E].

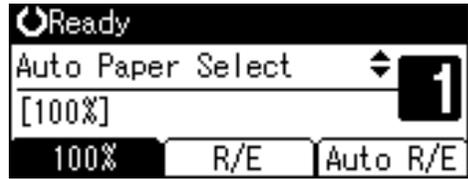

2 Press [Reduce] or [Enlarge].

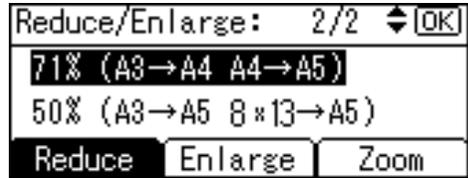


3 Select a ratio using [▲] or [▼], and then press the [OK] key.

The "Programmed" message appears.

4 Place your originals, and then press the [Start] key.

Zoom


You can change the reproduction ratio in increments of 1%.

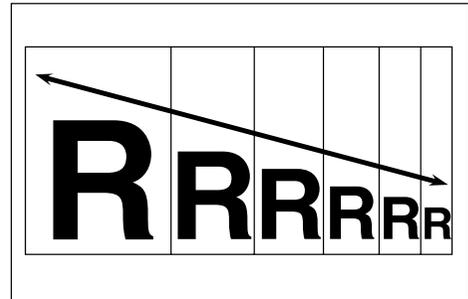


📌 Note

- ❑ You can also select a preset ratio close to the desired ratio using [Reduce] or [Enlarge], and then adjust the ratio using [▲] or [▼].


- 1 Press [R/E].

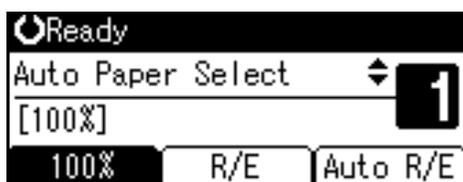

- 2 Press [Zoom].

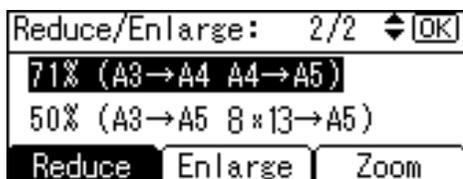

- 3 Enter the ratio.

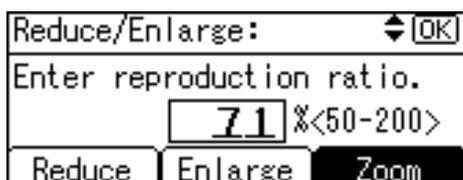

To select the ratio using [▲] and [▼]

- 1 Adjust the ratio using [▲] or [▼].

Note

- If you have incorrectly entered the ratio, readjust using [▲] or [▼].
- To change the ratio in increments of 10%, press and hold down [▲] or [▼].

- 2 Press the [OK] key.

The “ Programmed ” message appears.

To enter the ratio using the number keys


- 1 Enter the desired ratio using the number keys.
- 2 Press the [OK] key.

The “ Programmed ” message appears.

- 4 Place your originals, and then press the [Start] key.

Auto Reduce/Enlarge

You can choose an appropriate reproduction ratio based on the paper and original sizes you select.

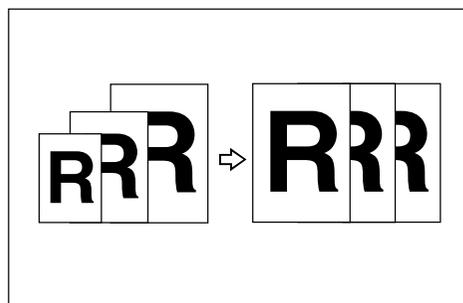

Note

- You cannot use the bypass tray with this function.
- When using Auto Reduce/Enlarge, see the following table for original sizes and orientations you can use:

❖ **Metric version**

Original location	Original size and orientation
Exposure glass	A3☐, B4 JIS☐, A4☐☐, B5 JIS☐, 8 ¹ / ₂ " × 13"☐
ADF or ARDF	A3☐, B4 JIS☐, A4☐☐, B5 JIS☐☐, A5☐☐, 8 ¹ / ₂ " × 13"☐

❖ Inch version

Original location	Original size and orientation
Exposure glass	11" × 17"  , 8 1/2" × 14"  , 8 1/2" × 11"  , 8 1/2" × 13" 
ADF or ARDF	11" × 17"  , 8 1/2" × 14"  , 8 1/2" × 11"  , 5 1/2" × 8 1/2"  

 **Reference**
p.16 "Sizes difficult to detect"

1 Press [Auto R/E].



2 Select the paper tray using [▲] or [▼].



3 Place your originals, and then press the [Start] key.

Sort


You can scan originals into memory and automatically sort copies.

 **Reference**

- Related default settings
- p.51 "Auto Tray Switching"
- p.53 "Rotate Sort"
- p.53 "Rotate Sort:Auto Continue"


❖ **Sort**

Copies are assembled as sequentially ordered sets.

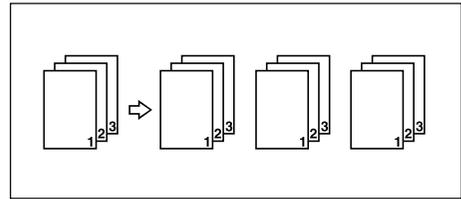

❖ **Rotate Sort**


Every other copy set is rotated by 90°   and delivered to the copy tray.

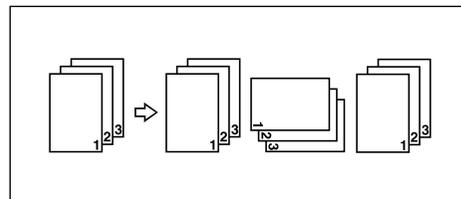

 **Note**

- To use the Rotate Sort function, select [On] in [Rotate Sort] under [Copier Features] (User Tools). See p.53 "Rotate Sort".
- To use the Rotate Sort function, two paper trays loaded with the same size and type paper, but in different orientation ( ), are required. See "Paper TypC: Tray 1-4" in "Tray Paper Settings", *General Settings Guide*.

- 1 Press the **[Sort]** key.

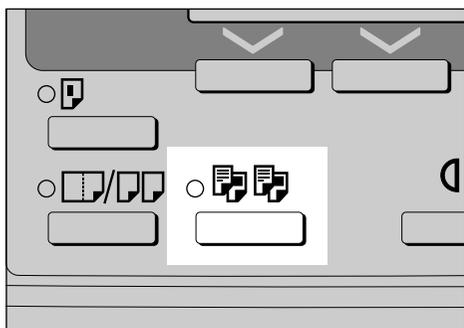


APE016S


Note

- When canceling the Sort function, press the **[Sort]** key, and make sure the **[Sort]** key indicator is off.

- 2 Select **[Sort]** or **[Rotate Sort]**, and then press the **[OK]** key.

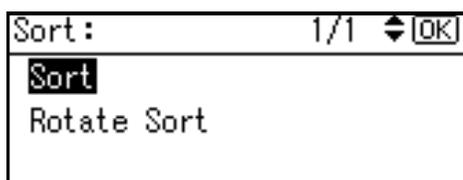

- 3 Enter the number of copy sets using the number keys.

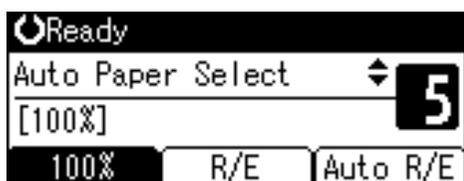

- 4 Place your originals.

Note

- When placing originals on the exposure glass, start from the first page to be copied. When placing originals in the ADF or ARDF, set the first page on top.

- 5 Press the **[Start]** key.

Note

- When placing originals on the exposure glass, press the **[#]** key after all originals are scanned.

Changing the number of sets


You can change the number of copy sets during copying.

Note


- This function can only be used when the Sort function is selected.

- 1 While " **Copying...** " is displayed, press the **[Clear/Stop]** key.

- 2 Press **[Sets]**.

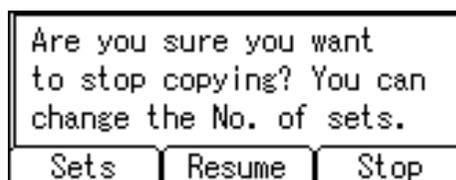

- 3 Enter the number of copy sets with the number keys, and then press **[Resume]**.

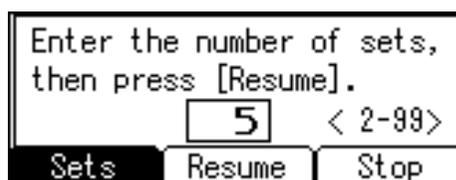

Copying starts again.

Note


- The number of sets you can enter differs depending on when the **[Clear/Stop]** key is pressed.

Duplex (Type 2 only)

There are two types of duplex:


❖ 1 Sided → 2 Sided

Copies 2 one-sided pages onto 1 two-sided page.

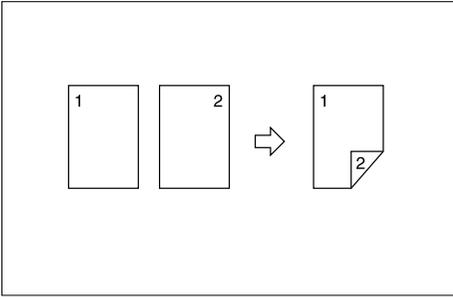





❖ 2 Sided → 2 Sided (Optional ARDF is required)

Copies 1 two-sided page onto 1 two-sided page.

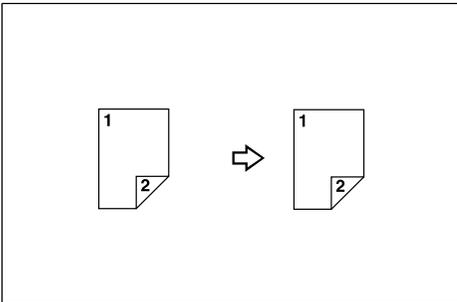

Original orientation and completed copies

    The resulting copy image will differ according to the orientation in which you place the originals (vertical  or horizontal ).

Original	How to place your original	Copy
Vertical 	Standard 	Top to Top 
	90° turn 	Top to Bottom 
Horizontal 	Standard 	Top to Top 
	90° turn 	Top to Bottom 


GCRYOU1E

*1 The table shows the orientation of images on the front and back of copies, not the orientation of delivery.

Note


- You cannot use the bypass tray with this function.
- The maximum paper weight that can be used with duplex copying is 64–90 g/m², 20–24 lb.
- You can change the margin. See p.53 “Duplex Margin”.

- 1** Press the [Duplex] key.

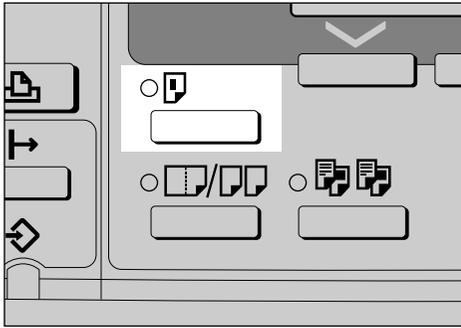


APE0175

- 2** Select the setting of original and copy type using [▲] or [▼], and then press the [OK] key.

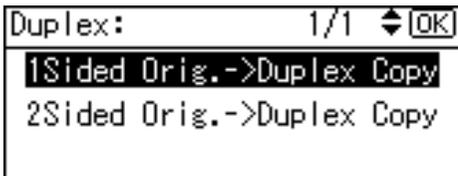


- 3** Select the orientation using [▲] or [▼], and then press the [OK] key.

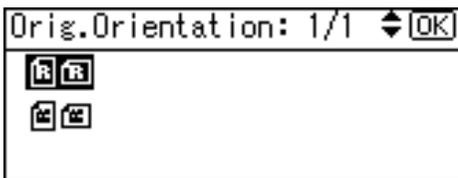

Note

- You can select the orientation of originals and copying paper when [Always Specify] is specified for [Orientation] under [Copier Features] (User Tools). See p.52 "Orientation". If it was not specified for, proceed to step **5**.

- 4** When selecting two-sided copying, select the orientation [Top to Top] or [Top to Bottom] using [▲] or [▼], and then press the [OK] key.

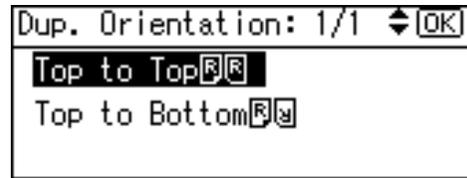

Note

- To change the copy orientation, select the original icon whose orientation is that required. See p.32 "Original orientation and completed copies".

The "Programmed" message appears.

- 5** Place your originals.

When placing originals on the exposure glass

- 1** Place the original, and then press the [Start] key.

Note

- Start from the first page to be copied.

- 2** Place the next original, and then press the [Start] key.
-

When placing a stack of originals in the ADF or ARDF

- 1** Place your originals, and then press the [Start] key.

Note


- Place the first page on top.

One-Sided Combine

You can combine several pages onto one side of a sheet.


❖ 1 Sided 2 Pages → Combine 1 Side

Copies 2 one-sided originals onto one side of a sheet.

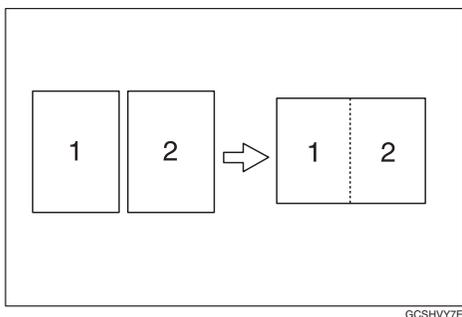


❖ 1 Sided 4 Pages → Combine 1 Side

Copies 4 one-sided originals onto one side of a sheet.

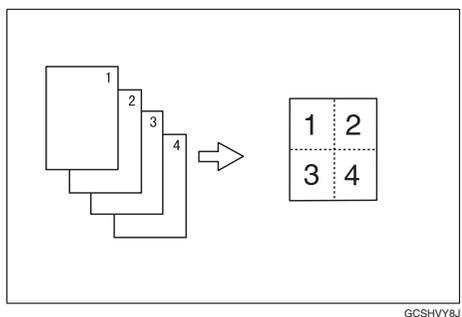


❖ 2 Sided 1 Page → Combine 1 Side (Optional ARDF is required)

Copies 1 two-sided original onto one side of a sheet.

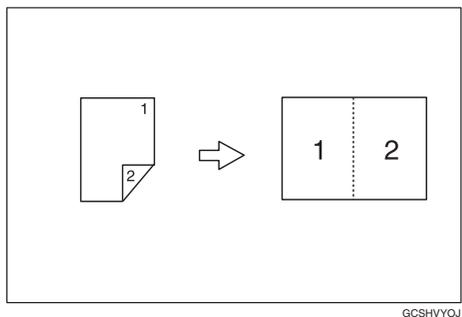


❖ 2 Sided 2 Pages → Combine 1 Side (Optional ARDF is required)

Copies 2 two-sided originals onto one side of a sheet.

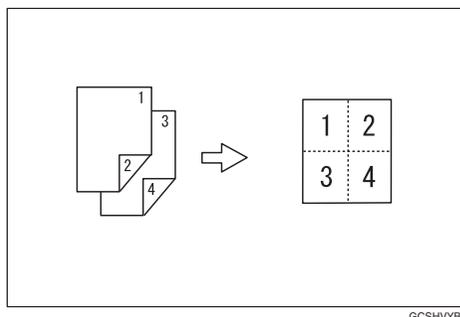


❖ Orientation of the original and image position of combine

Open to left  originals

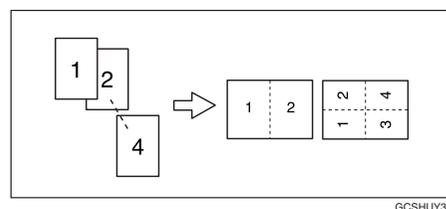


Open to top  originals

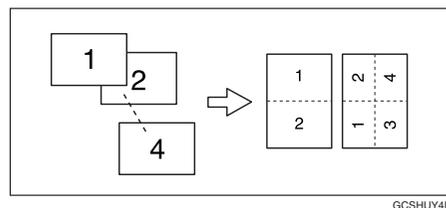


❖ **Placing originals (in the ADF or ARDF)**

- Originals read from left to right

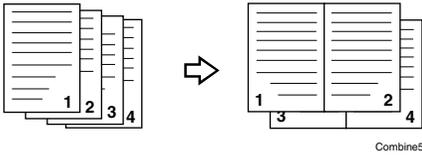


- Originals read from top to bottom

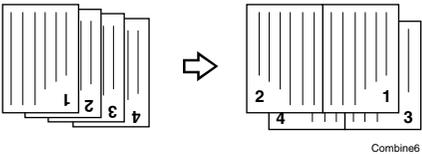


Note

- ❑ You cannot use the bypass tray with this function.

1 Press the [Combine/Series] key.

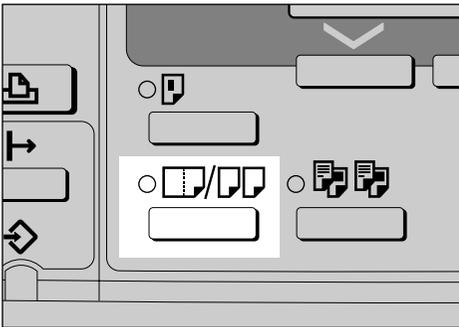


2 Select the combine mode using [▲] or [▼], and then press the [OK] key.

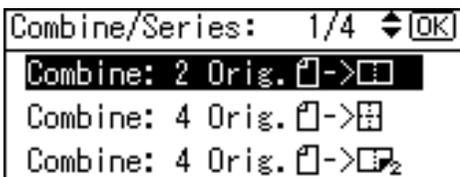

Reference

p.32 "Original orientation and completed copies"

3 Select the orientation using [▲] or [▼], and then press the [OK] key.

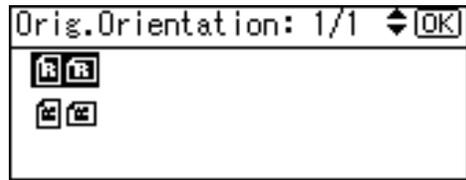

Note

- ❑ You can select the orientation of originals and copying paper when [Always Specify] is specified for [Orientation] under [Copier Features] (User Tools). See p.52 "Orientation". If it was not specified for, proceed to step 4.
- ❑ To change the copy orientation, select the icon which orientation of originals is used.

The "Programmed" message appears.


4 Place your originals, and then press the [Start] key.

Two-Sided Combine (Type 2 only)


You can combine various pages of originals into one sheet with two sides.

❖ **1 Sided 4 Pages → Combine 2 Side**

Copies 4 one-sided originals onto one sheet with two pages per side.

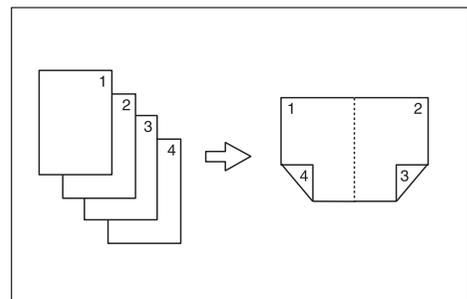


- ❖ **1 Sided 8 Pages → Combine 2 Side**
Copies 8 one-sided originals onto one sheet with four pages per side.

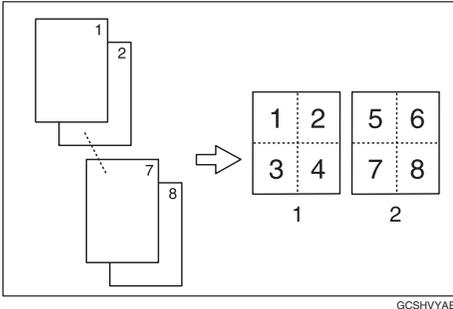

GCSHVYAE


1. Front
2. Back

- ❖ **2 Sided 4 Pages → Combine 2 Side (Optional ARDF is required)**
Copies 2 two-sided originals onto one sheet with two pages per side.

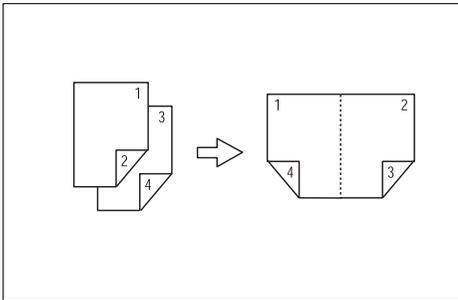


GCSHVY1E

- ❖ **2 Sided 8 Pages → Combine 2 Side (Optional ARDF is required)**
Copies 4 two-sided originals onto one sheet with four pages per side.

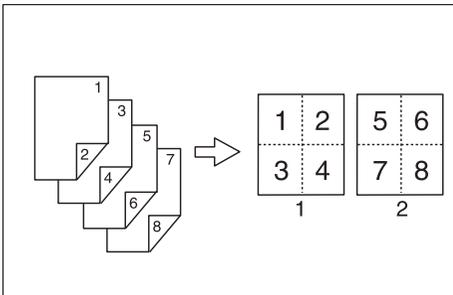

GCSHVY2E

- 1 Press the **[Combine/Series]** key.

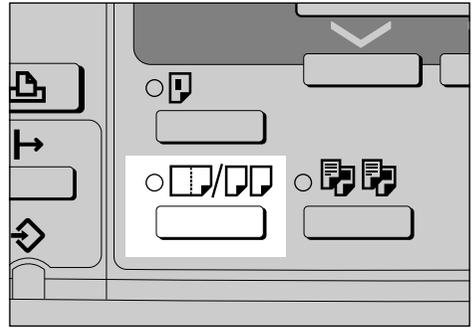


APE018S

- 2 Select the combine mode using **[▲]** or **[▼]**, and then press the **[OK]** key.




- 3 Select the orientation using **[▲]** or **[▼]**, and then press the **[OK]** key.

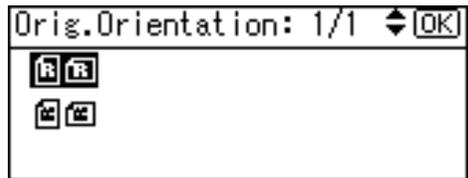

Note

- ❑ You can select the orientation of originals and two-sided copying paper when **[Always Specify]** is specified for **[Orientation]** under **[Copier Features]** (User Tools). See p.52 "Orientation". If it was not specified for, proceed to 5.

- 4** When selecting two-sided copying, select the orientation [Top to Top] or [Top to Bottom] using [▲] or [▼], and then press the [OK] key.

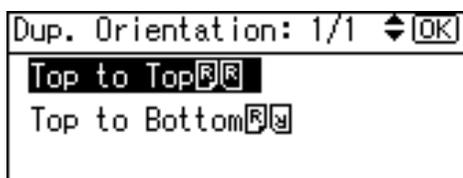


Note

- To change the copy orientation, select the original icon whose orientation is that required. See p.32 "Original orientation and completed copies".

The "Programmed" message appears.

- 5** Select the paper size using [▲] or [▼].

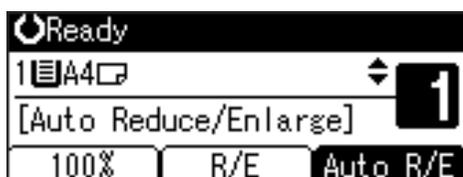


- 6** Place your originals, and then press the [Start] key.

Series Copies

You can separately copy the front and back of a two-sided original or two facing pages of a bound original onto two sheets.


❖ **2 Sided→1 Sided (Optional ARDF is required)**

Copies each side of a two-sided original onto two separate pages.

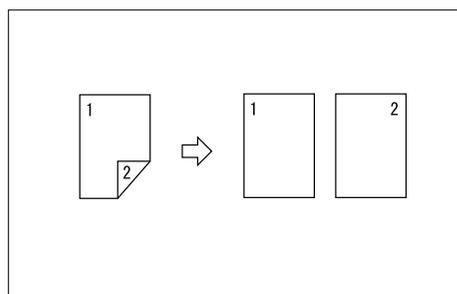

❖ **Book→1 Sided**

Copies two facing pages of a bound original (book) onto two separate pages.

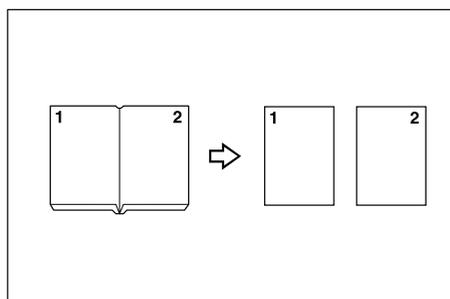

Note

- You cannot use the ADF or ARDF with Book→1 Sided function.
- You cannot use the bypass tray with Book→1 Sided function.
- See the following table for original and copy paper sizes when using a 100% ratio with Book→1 Sided function.


❖ Metric version

Original	Paper for one-sided copy
A3	A4 × 2 sheets
B4 JIS	B5 JIS × 2 sheets
A4	A5 × 2 sheets

❖ Inch version

Original	Paper for one-sided copy
11" × 17"	8 1/2" × 11" × 2 sheets
8 1/2" × 11"	5 1/2" × 8 1/2" × 2 sheets

1 Press the [Combine/Series] key

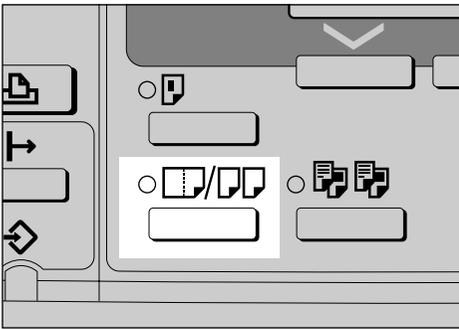

APE018S


2 Select [Series: Book Orig.] or [Series:2Sided Orig.] using [▲] or [▼], and then press the [OK] key.



Note

- When selecting [Series: Book Orig.], proceed to step **4**.

3 When selecting [Series:2Sided Orig.], select the orientation using [▲] or [▼], and then press the [OK] key.

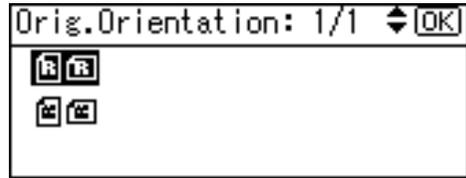

Note

- You can select the orientation of originals when [Always Specify] is specified for [Orientation] under [Copier Features] (User Tools). See p.52 "Orientation".

The "Programmed" message appears.

4 Select the paper tray using [▲] or [▼].

Note

- When you select [Series: Book Orig.], the following display appears.



5 Place your original, and then press the [Start] key.

3. Troubleshooting

If Your Machine Does Not Operate As You Want

When a Message Is Displayed

The following chart contains explanations for common messages. If other messages appear, follow the instructions as they are displayed.

Note

For messages not listed here, see *General Settings Guide*.

Message	Causes	Solutions
Cannot detect original size	Improper original is placed. See p.16 "Sizes difficult to detect".	Select paper manually, not with the Auto Paper Select function, and do not use the Auto Reduce/Enlarge function.
		Input the both horizontal and vertical sizes of the non-standard original.
	Original is not placed.	Place the original on the exposure glass. See p.17 "Placing Originals on the Exposure Glass" .
Original is not placed.	Place your originals.	
Check original orientation	Original is not placed in the proper orientation.	Change original orientation.
Check paper size	Improper paper size is set.	If you press the [Start] key, copy will start onto the selected paper.
Rotate Sort is unavailable with this paper size	A size of paper for which Rotate Sort is not available is selected.	Select a proper paper size. See p.30 "Sort".
Cannot dup. copy this size	A paper size not available with the Duplex function has been selected.	The following paper sizes are available for the Duplex function: A3  , B4 JIS  , A4  , B5 JIS  , A5  . Select one of these sizes.
Max. number of sets is *	The number of copies exceeds maximum copy quantity.	You can change the maximum copy quantity. See p.52 "Max. Number of Sets" .

If You Cannot Make Clear Copies

3

Problem	Causes	Solutions
Copies appear dirty.	Image density is too dark.	Adjust the image density. See p.26 "Adjusting Image Density".
	Auto Image Density is not selected.	Adjust the auto image density. See p.26 "Adjusting Image Density".
The reverse side of an original image is copied.	Image density is too dark.	Adjust the image density. See p.26 "Adjusting Image Density".
	Auto Image Density is not selected.	Adjust the auto image density. See p.26 "Adjusting Image Density".
A shadow appears on copies if you use pasted originals.	Image density is too dark.	Adjust the image density. See p.26 "Adjusting Image Density". Change the orientation of the original. Put mending tape over the pasted areas.
The same copy area is dirty whenever making copies.	The exposure glass or ADF or, ARDF is dirty.	Clean them. See p.59 "Maintaining Your Machine".
Copies are too light.	Image density is too light.	Adjust the image density. See p.26 "Adjusting Image Density".
	The paper size is not appropriate.	Use the recommended paper. Note □ A light copy may result when you use damp or rough grain paper.
	Toner bottle is almost empty.	Add toner. See p.46 "📄 Adding Toner".
Parts of the paper are not copied.	The original is not placed correctly.	Place originals correctly. See p.17 "Placing Originals".
	An improper paper size is selected.	Select the proper paper size.
Copies are blank.	The original is not placed correctly.	When using the exposure glass, place originals face down. When using the ADF or ARDF, place them face up. See p.17 "Placing Originals".
A moiré pattern is produced on copies. 	Your original has a dot pattern image or many lines.	Place the original on the exposure glass at a slight angle.

If You Cannot Make Copies As You Want

This section explains causes and remedies when copy results are not as expected.

❖ Basic

Problem	Causes	Solutions
You cannot combine several functions.	Selected functions cannot be used together.	Check the combination of functions and make the settings again.  Reference p.61 "Combination Chart"

❖ Edit

Problem	Causes	Solutions
When using the Duplex Margin function, parts of the original image are not copied.	You set a wide erased margin.	Set a narrower margin with User Tools. You can set the width between 0–50 mm (0"–2"). See p.53 "Duplex Margin".
	There is a lack of margin space on the opposite side of the binding position.	

❖ Combine

Problem	Causes	Solutions
When using Combine, parts of the image are not copied.	You specified a reproduction ratio that does not match the sizes of your originals and copy paper.	When you specify a reproduction ratio using the Manual Paper Select function, make sure the ratio matches your originals and the copy paper.  Note <input type="checkbox"/> Select the correct reproduction ratio before using the Combine function.
	Your originals are not identical in size and direction.	Use originals that are identical in size and direction.
Copies are not in correct order.	You placed the originals in the incorrect order.	When placing a stack of originals in the ADF or ARDF, the last page should be on the bottom.
		If you place an original on the exposure glass, start with the first page to be copied.

❖ Duplex (Type 2 only)

Problem	Causes	Solutions
Order of copies is not correct.	You set originals in the incorrect order.	When setting a stack of originals in the ADF or ARDF, the last page should be on the bottom.
		If you set an original on the exposure glass, start with the first page to be copied.
In Duplex Margin mode, parts of the original image are not copied.	The margin is too wide.	Set a narrower margin with the user tools. See "Duplex Margin" in p.53 "Duplex Margin".
When using Duplex, copy is made Top to Top even though Top to Bottom is selected.	You placed the originals in the wrong orientation.	Place the originals in the correct orientation. See p.17 "Original Orientation" .

3

When Memory Is Full

Messages	Causes	Solutions
<p>Memory is full. [Print] scanned orig., [Clear] to cancel/clear memory.</p> <p>[Clear] [Print]</p> <p> Note</p> <p><input type="checkbox"/> Copying will stop and this message will be displayed when the memory is full.</p>	The scanned original exceeds the number of pages that can be stored in memory.	Press [Print] to copy scanned originals and cancel the scanning data. Press [Clear] to cancel the scanning data and not copy.
<p>Reset * orig., then press [Resume] to scan and copy the remaining originals.</p> <p>[Stop] [Resume]</p>	The machine checks if the remaining originals should be copied, after the scanned original has been printed.	To continue copying, remove all copies, and then press [Resume] . To stop copying, press [Stop] .

Loading Paper

Reference

For paper types and sizes, see *General Settings Guide*.

3 Push the paper tray in, until it stops.


Loading Paper

Note

- You can change the paper size, see *General Settings Guide*.
- This illustration shows the paper trays (1 or 2).

1 Pull the paper tray out slowly until it stops.

2 Square the paper and load it in the tray.

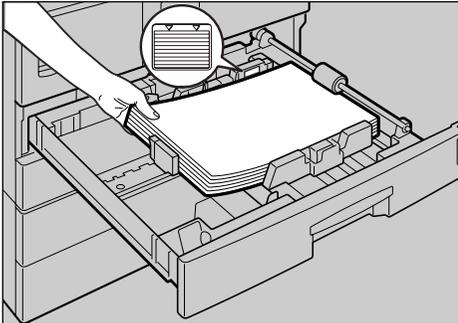

AA1022S

Important

- Check the top of the stack is not higher than the limit mark inside the tray.

Note

- Fan the paper before loading.
- Straighten curled or warped paper before loading.
- When using paper tray 1 or 2, before loading paper, push down the metal plate.

Orientation-Fixed Paper or Two-Sided Paper

Orientation-fixed (top to bottom) or two-sided paper (for example, letterhead paper, prepunched paper, or copied paper) might not print correctly, depending on how the originals and paper are placed.

Reference

p.53 "Letterhead Setting"


Note

- Select **[On]** in **[Letterhead Setting]** under **[Copier Features]** (User Tools), and then place the original and paper as shown below. When printing with the printer function, placing orientation is the same.
- Set the paper type to **[Letterhead]** in **[Tray Paper Settings]** under **[System Settings]** (User Tools). This setting is only available when the printer and scanner units are installed. For details, see *General Settings Guide*.

❖ Original Orientation

Exposure glass		ADF or ARDF	
	 *1 *2		 *2

 *1 When copying in this orientation using the duplex function, and loaded paper orientation is , place originals as shown below:



*2 When copying in this orientation using the duplex function, select **[Always Specify]** in **[Orientation]** under **[Copier Features]** (User Tools). Place originals, and then select   as the original orientation.

❖ **Loaded paper orientation**

- For machine with copier function only

Copy mode		Paper tray	Bypass tray
		Loaded paper orientation 	1 Sided
	2 Sided ^{*1}		—
Loaded paper orientation 	1 Sided		
	2 Sided ^{*1}		—

*1 Type 2 only

*2 Shows when printing on the front page.

 : Shows the paper frontside facing up.

 : Shows the paper backside facing up.

APE037S

Adding Toner

When  appears, it is time to add toner.

Handling Toner

 **WARNING:**

- *Do not incinerate used toner or toner containers. Toner dust might ignite when exposed to an open flame. Dispose of used toner containers in accordance with local regulations.*

 **CAUTION:**

- *Keep toner (used or unused) and toner containers out of reach of children.*

 **Important**

- Faults may occur if you use toner other than the recommended type.
- When adding toner, do not turn off the operation switch. If you do, settings will be lost.
- Always add toner when the machine instructs you.
- Do not repeatedly install and remove toner bottles. This will result in toner leakage.
- Do not shake the removed toner bottle. Remaining toner might scatter.

 **Note**

- You can make about 50 copies even after the  symbol begins flashing, but replace toner early to prevent poor copy quality.

Toner Storage

When storing toner, the following precautions should always be followed:


- Store toner containers in a cool, dry place free from direct sunlight.
- Store on a flat surface.

Used Toner

 **Note**


- Toner cannot be re-used.

Removing Toner

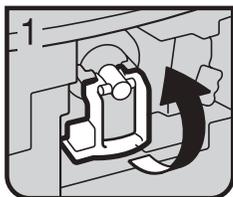


ZAAX040E

- 1: Open the front cover of the machine.
- 2: Lift the green lever.

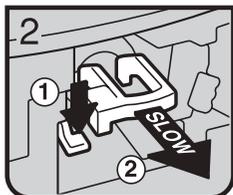

ZAAX050E

- 3: Push the green lever, and then gently pull out the holder.

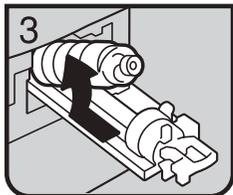


ZAAX060E


- 4: Press the toner bottle back to raise its top, and then gently pull it out.

3


Inserting Toner

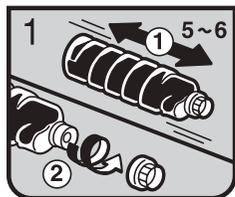

ZAAAX070E

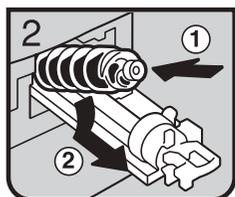

ZAAAX080E

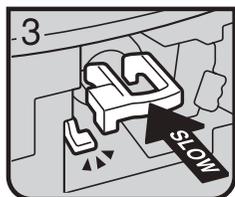

ZAAAX090E



ZAAAX100E

- 1: Hold the new bottle horizontally and shake it from side to side five or six times.
- 2: Remove the black cap.

 **Note**

- Do not remove the black cap before shaking.
- Do not remove the inner cap.

- 3: Put the toner bottle on the holder, and then pull its top forward.

- 4: Push in the green lever until it clicks.

- 5: Press down the green lever.
- 6: Close the machine's front cover.

4. User Tools (Copier Features)

Accessing User Tools (Copier Features)

This section is for key operators in charge of this machine. Key operators can change or make default settings.

Note

- ❑ Be sure to quit User Tools and return to the initial copy display when all settings are complete. This section describes system settings for the copier function.
- ❑ Selected settings are highlighted.
- ❑ Any changes made with User Tools remain in effect even if the main power switch or operation switch is turned off, or the **[Clear Modes]** key is pressed.

Reference


For details, see "User Tools (System Settings)", *General Settings Guide*.

Changing Default Settings

Note

- ❑ If a key operator code is set, the key operator code input display appears before you can change the default settings. For details about access codes, see " Key Operator Tools ", *General Settings Guide*.


- 1** Press the **[User Tools/Counter]** key.

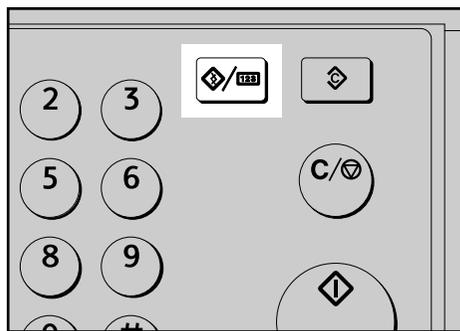


- 2** Select **[Copier Features]** using **[▲]** or **[▼]**, and then press the **[OK]** key.



- 3** Select the menu using **[▲]** or **[▼]**, and then press the **[OK]** key.

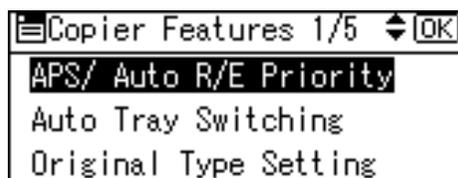

- 4** Change settings by following instructions on the display, and then press the [OK] key.

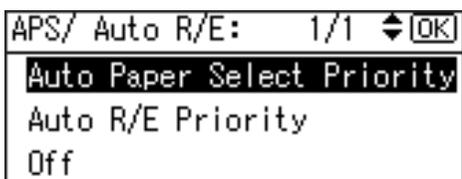


The “ Programmed ” message appears.

 **Note**

- To cancel changes made to setting and return to the initial display, press the [User Tools/Counter] key.

Quitting User Tools

- 1** Press the [User Tools/Counter] key.

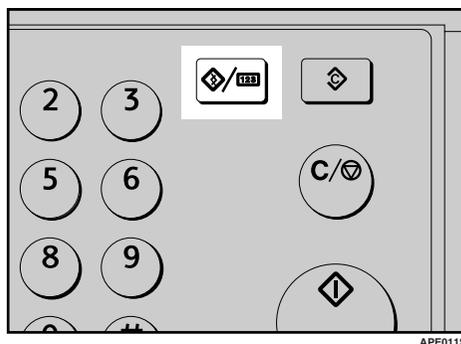

The change is made, and the machine is ready to copy.

Settings You Can Change with User Tools

APS/ Auto R/E Priority

You can select **[Auto Paper Select Priority]** (APS Priority) or **[Auto R/E Priority]** (Auto Reduce/Enlarge Priority). When you cancel this setting, select **[Off]**.

Note

Default: *Auto Paper Select Priority*

Auto Tray Switching

If you load same size paper in two or more trays, the machine automatically shifts to the other tray using image rotation when the first tray runs out of paper (if **[On]** is selected.) This function is called " Auto Tray Switching ". This setting specifies whether to use Auto Tray Switching or not.

Note

- Default: *On*
- Off : When a paper tray runs out of paper, copying is interrupted and the " Load paper " message appears.

Original Type Setting

You can adjust copy finish quality level according to original type. You can choose these functions after selecting **[Original Type 1 (Text)]** or **[Original Type 2 (Photo)]**.

- Text Mode 1
normal text originals
- Text Mode 2
newspapers, semi-transparent originals (reverse side print faintly visible)

- Photo Mode 1
text/photo images containing mostly photo areas
- Photo Mode 2
text/photo images containing mostly text areas
- Photo Mode 3
actual photographic paper
- Special Mode 1
Highly transparent originals (reverse side clearly visible), or light text on a colored background. Also for originals with very grainy backgrounds (some newspapers) and light text.
- Special Mode 2
originals with colored text and lines
- Special Mode 3
photo images created by dithering (visible dots), such as newspaper photos - normal resolution
- Special Mode 4
photo images created by dithering (visible dots), such as newspaper photos - coarse resolution
- Special Mode 5
normal text originals (reproducing the background)

Note

- Default:
 - *Original Type 1 (Text): Text Mode 1*
 - *Original Type 2 (Photo): Photo Mode 1*

Duplex Mode Priority

You can select the type of Duplex function effective when the machine is turned on, reset, or modes are cleared.

Limitation


- Available only for Type 2.

Note

- Default: *1 Sided* → *1 Sided*

Orientation

- Type 1
You can select the original orientation when making Combine/Series copies.
- Type 2
You can select the original orientation when using the Combine/Series, or two-sided originals to one-sided Duplex function.

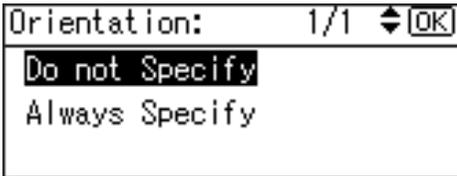

Note

- Default: *Do not Specify*
- When you select **[Always Specify]**, you must select the orientation of originals.

Max. Number of Sets

The maximum copy quantity can be set between 1 and 99 using number keys.

Note

- Default: *99 sheets*

Original Count Display

You can set to display the count of originals and copying pages on the display when **[On]** is selected.

Note

- Default: *Off*

Reproduction Ratio

You can select which reduce, enlarge, or input ratio is shown on the display with priority when **[Reduce]** or **[Enlarge]** is selected.

Note

- Default:
 - Metric version:
 - Ratio 1: 50%
 - Ratio 2: 71%
 - Ratio 3: 82%
 - Ratio 4: 93%
 - Ratio 5: 122%
 - Ratio 6: 141%
 - Ratio 7: 200%
 - Inch version:
 - Ratio 1: 50%
 - Ratio 2: 65%
 - Ratio 3: 78%
 - Ratio 4: 93%
 - Ratio 5: 121%
 - Ratio 6: 129%
 - Ratio 7: 155%

Preset R/E Priority

You can set the ratio with priority when **[R/E]** is selected.

Note

Default:

- Metric version: 71%
- Inch version: 65%

Duplex Margin

You can specify left margin on the back side of copies, and top margin on the front side. Select **[Top Margin]** or **[Left Margin]**, and then set the required value.

- Top Margin: 0 - 50 mm, 0" - 2"
- Left Margin: 0 - 50 mm, 0" - 2"

Limitation

Available only for Type 2

Note

Default:

- Metric version: 5 mm
- Inch version: 0.2 inch

Rotate Sort

You can select a Sort function: **[On]** or **[Off]**.

When you select **[On]**, you can select **[Rotate Sort]**. See p.30 "Sort".

When you select **[Off]**, you cannot select **[Rotate Sort]**. If you press the **[Sort]** key, only Sort is enabled.

Note

Default: *Off*

When using Type 1 without the optional tray, you cannot use this setting.

Rotate Sort:Auto Continue

If you select **[Off]** when the paper tray in use runs out of paper, the machine stops, allowing you to add paper so all copies can be rotate-sorted.

Note

Default: *Off*

When using Type 1 without the optional tray, you cannot use this setting.

Letterhead Setting

If you select **[On]** for this function, the machine rotates the image correctly.

Note

Default: *Off*

Orientation-fixed (top to bottom) or two-sided paper (Type 2 only) might not print correctly, depending on how the originals and paper are placed.

Reference

When using letterhead paper, check its orientation is correct. See p.44 "Orientation-Fixed Paper or Two-Sided Paper".

Do's and Don'ts

CAUTION:

- *Unplug the power cord from the wall outlet before you move the machine. While moving the machine, you should take care that the power cord will not be damaged under the machine.*

Important

- Do not turn the power off while the On indicator is lit or blinking. Doing so may damage the memory.
- Before unplugging the power cord or turning off the main power switch, make sure remaining memory space is at 100%, as shown on the display. See p.12 "Turning Off the Power" and "Turning Off the Main Power".
- When you use this machine for a long time in a confined space without good ventilation, you may detect an odd smell. To keep the workplace comfortable, we recommend that you keep it well ventilated.
- Do not touch areas on or around the fusing unit. These areas get hot.
- After making copies continuously, the exposure glass may become warm—this is not a malfunction.
- The area around the ventilation hole might feel warm. This is caused by exhaust air and is not a malfunction.
- When the machine is not in use and in stand-by mode, you may hear a small noise inside. This is caused by the image stabilization process and is not a malfunction.
- Do not turn off the operation switch while copying or printing. Make sure all copying or printing has finished first.
- The machine might not produce good copy images if condensation forms inside as a result of rapid temperature change.
- Do not open the covers of the machine while copying or printing. If you do, misfeeds might occur.
- Do not move the machine during copying or printing.
- If you operate the machine improperly or a machine failure occurs, settings might be lost. Be sure to make a note of your machine settings.
- The manufacturer shall not be liable for any loss or damage resulting from mechanical failure, loss of settings, or use of the machine.

Where to Put Your Machine

Machine Environment

Choose your machine's location carefully. Environmental conditions greatly affect its performance.

Optimum environmental conditions

⚠ CAUTION:

- *Keep the machine away from humidity and dust. Otherwise a fire or an electric shock might occur.*
- *Do not place the machine on an unstable or tilted surface. If it topples over, an injury might occur.*

⚠ CAUTION:

- *If you use the machine in a confined space, make sure there is a continuous air turnover.*
- Temperature: 10-32 °C (50-89.6 °F) (humidity to be 54% at 32 °C, 89.6 °F)
- Humidity: 15-80% (temperature to be 27 °C, 80.6 °F at 80%)
- A strong and level base.
- The machine must be level within 5 mm, 0.2 inches: both front to rear, and left to right.
- To avoid possible buildup of ozone, be sure to locate this machine in a large well ventilated room that has an air turnover of more than 30 m³/hr/person.

Environments to avoid

- Locations exposed to direct sunlight or other sources of strong light (more than 1,500 lux).
- Locations directly exposed to cool air from an air conditioner or heated air from a heater. (Sudden temperature changes can cause condensation to form inside the machine.)
- Locations close to machines generating ammonia, such as a diazo copy machine.
- Places where the machine will be subject to frequent strong vibration.
- Dusty areas.
- Areas with corrosive gases.

Moving

⚠ CAUTION:

- *Unplug the power cord from the wall outlet before you move the machine. While moving the machine, you should take care that the power cord will not be damaged under the machine.*

⚠ CAUTION:

- *Before moving the machine, be sure to pull all four handles fully out. If not, an injury might occur. After moving the machine, return the four handles to their original positions.*
- *When the optional paper tray unit is installed, do not push the upper part of the main unit horizontally. An injury might occur if the paper tray unit becomes detached from the main unit.*

⚠ Important

- ❑ Be careful when moving the machine. Take the following precautions:
 - Turn off the main power. See p.12 "Turning Off the Main Power".
 - Unplug the power cord from the wall outlet. When you pull out the plug from the socket, grip the plug to avoid damaging the cord, thereby reducing the risk of fire or electric shock.
 - Close all covers and trays, including the front cover and bypass tray.
- ❑ Do not take off the holding stand.
- ❑ Protect the machine from strong shocks. Impact can damage the memory.

Power Connection

⚠ WARNING:

- **Connect the machine only to the power source described on the inside front cover of this manual. Connect the power cord directly into a wall outlet and do not use an extension cord.**
- **Do not damage, break or make any modifications to the power cord. Do not place heavy objects on it. Do not pull it hard nor bend it more than necessary. These actions could cause an electric shock or fire.**

⚠ CAUTION:


- *Unplug the power cord from the wall outlet before you move the machine. While moving the machine, you should take care that the power cord will not be damaged under the machine.*

⚠ CAUTION:

- *When you disconnect the power plug from the wall outlet, always pull the plug (not the cable).*
- When the main power switch is in the stand-by position, the optional anti-condensation heaters are on. In an emergency, unplug the machine's power cord.
- When you unplug the power cord, the anti-condensation heaters turn off.
- Make sure the plug is inserted firmly in the wall outlet.
- Voltage must not fluctuate by more than 10%.
- The wall outlet shall be installed near the machine and shall be easily accessible.

Access to the Machine

Place the machine near the power source, providing the clearance areas shown.

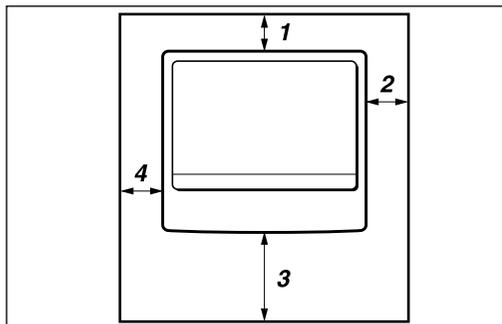

CP9991EE

5

1. Rear: 5 cm (2") or more
2. Right: 25 cm (10") or more
3. Front: 75 cm (29.6") or more
4. Left: 15 cm (6") or more

Note

- For the required space when options are installed, contact your service representative.

Maintaining Your Machine

If the exposure glass, exposure glass cover, ADF belt, or ARDF belt is dirty, copy clarity may be reduced. Clean these parts if they are dirty.

❖ Cleaning the machine

Wipe the machine with a soft, damp cloth. Then wipe it with a dry cloth to remove the water.

⚠ Important


- ❑ Do not use chemical cleaner or organic solvents such as thinner or benzene. If such substances get inside the machine or melt plastic parts, a failure might occur.
- ❑ Do not clean parts other than those explicitly specified in this manual. Other parts should only be cleaned by your service representative.

Cleaning the Exposure Glass



ND1C0200


Cleaning the Exposure Glass Cover

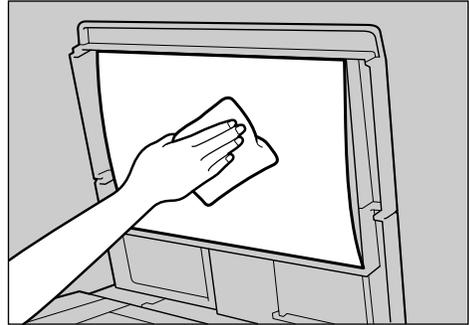

TRSR140E

5

Cleaning the ADF or ARDF

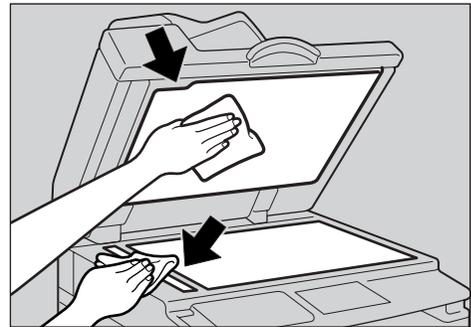

ZAAH211E

6. Specifications

Combination Chart

The combination chart below shows which functions can be used together. When you read the chart, see the following table:

○	These functions can be used together.
×	These functions cannot be used together. The first function selected will be the function you are working in.
●	These functions cannot be used together. The second function selected will be the function you are working in.

The following shows the combinations of functions.

		Function selected after															
		Auto Paper Select	Custom Size Originals	Regular Size Originals	Bypass Tray	Manual Image Density	Text Originals	Photo Originals	Auto Reduce/Enlarge	Zoom	Combine	Book → 1 Sided	2 Sided → 1 Sided	1 Sided → 2 Sided	2 Sided → 2 Sided	Sort	Rotate Sort
Function selected first	Auto Paper Select		×	×	●	○	○	○	○	○	○	○	○	○	○	○	○
	Custom Size Originals	×		●	○	○	○	○	○	○	○	○	*1	○	*1	○	○
	Regular Size Originals	×	●		○	○	○	○	○	○	○	○	○	○	○	○	○
	Bypass Tray	●	○	○		○	○	○	*3	○	*3	*3	○	*3	*3	*2	×
	Manual Image Density	○	○	○	○		○	○	○	○	○	○	○	○	○	○	○
	Text Originals	○	○	○	○	○		●	○	○	○	○	○	○	○	○	○
	Photo Originals	○	○	○	○	○	●		○	○	○	○	○	○	○	○	○
	Auto Reduce/Enlarge	×	○	○	*3	○	○	○		●	*4	●	○	○	○	○	○
	Zoom	○	○	○	○	○	○	○	●		●	○	○	○	○	○	○
	Combine	×	○	○	*3	○	○	○	○	○		●	●	●	●	○	○
	Book → 1 Sided	×	○	○	*3	○	○	○	×	○	●		●	●	●	○	○
	2 Sided → 1 Sided	○	*1	○	○	○	○	○	○	○	●	●		●	●	○	○
	1 Sided → 2 Sided	○	○	○	*3	○	○	○	○	○	●	●	●		●	○	○
	2 Sided → 2 Sided	○	*1	○	*3	○	○	○	○	○	●	●	●	●		○	○
	Sort	○	○	○	*2	○	○	○	○	○	○	○	○	○	○		●
Rotate Sort	○	○	○	×	○	○	○	○	○	○	○	○	○	○	○	○	●

*1 You cannot combine two-sided original functions with originals longer than 432mm (□).

*2 This function cannot be combined copy paper longer than 432 mm (□).

*3 When you select these functions together, the error message appears.
You cannot copy until you cancel one function.

*4 Auto Reduce/Enlarge can be set to [ON] by selecting the Combine function.

Supplementary Information

❖ Bypass Tray Copy

- The following paper sizes can be selected as standard sizes:
A3, A4, A5, B4 JIS, B5 JIS, B6 JIS, 11"×17", 8 1/2"×14", 8 1/2"×11", 5 1/2"×8 1/2", 7 1/4"×10 1/2", 8"×13", 8 1/2"×13", 8 1/4"×13", 8K, 16K, 4 1/8"×9 1/2", 3 7/8"×7 1/2", C5 Env, C6 Env, DL Env
- When the beeper is turned off, it will not sound if you insert paper into the bypass tray. See *General Settings Guide*.

❖ Preset Enlarge/Reduce

- You can select one of 7 preset ratios (3 enlargement ratios, 4 reduction ratios).
- You can select a ratio regardless of the size of an original or copy paper. With some ratios, parts of the image might not be copied or margins will appear on copies.
- Copies can be reduced or enlarged as follows:

❖ Metric version

Ratio (%)	Original → Copy paper size
200 (enlarge area by 4)	A5→A3
141 (enlarge area by 2)	A4→A3, A5→A4
122	F→A3, A4→B4 JIS
115	B4 JIS→A3
93	--
82	F→A4, B4 JIS→A4
71 (reduce area by 1/2)	A3→A4, A4→A5
65	A3→F
50 (reduce area by 1/4)	A3→A5, F→A5

❖ **Inch version**

Ratio (%)	Original → Copy paper size
200 (enlarge area by 4)	5 ¹ / ₂ " × 8 ¹ / ₂ " → 11" × 17"
155 (enlarge area by 2)	5 ¹ / ₂ " × 8 ¹ / ₂ " → 8 ¹ / ₂ " × 14"
129	8 ¹ / ₂ " × 11" → 11" × 17"
121	8 ¹ / ₂ " × 14" → 11" × 17"
93	--
85	F → 8 ¹ / ₂ " × 11"
78	8 ¹ / ₂ " × 14" → 8 ¹ / ₂ " × 11"
73	11" × 15" → 8 ¹ / ₂ " × 11"
65	11" × 17" → 8 ¹ / ₂ " × 11"
50 (reduce area by 1/4)	11" × 17" → 5 ¹ / ₂ " × 8 ¹ / ₂ "

❖ **Zoom**

- The reproduction ratios you can specify are 50–200%.
- You can select a ratio regardless of the size of an original or copy paper. With some ratios, parts of the image might not be copied or margins will appear on copies.

❖ **Sort, Rotate Sort**


- Paper sizes and orientations that can be used with the Rotate Sort function are A4 , B5 JIS , A5 , 8¹/₂" × 11" , and 5¹/₂" × 8¹/₂" .

❖ **Duplex (Type 2 only)**

- You cannot use the following copy paper with this function:
 - Paper smaller than 5¹/₂" × 8¹/₂" .
 - Paper thicker than 105 g/m², 28 lb.
 - Paper thinner than 64 g/m², 17 lb.
 - Translucent paper
 - OHP transparencies
 - Label paper (adhesive labels)
 - Postcards
- When an odd number of originals is placed in the ADF, the back of the last page of copied paper is blank.
- During copying, the image is shifted to allow for the binding margin.
- The following paper sizes can be duplexed: A3 , B4 JIS , A4 , B5 JIS , A5 , 11" × 17" , 8¹/₂" × 14" , 8¹/₂" × 11" 

❖ Combine

- When using this function, the machine selects the reproduction ratio automatically. This reproduction ratio depends on copy paper sizes and the number of originals.
- The reproduction ratios you can specify are 50–200%.
- If the calculated ratio is under the minimum ratio, it is automatically adjusted to within available range. However, with some ratios, parts of the image might not be copied.
- You cannot use custom size paper.
- If the orientation of originals is different from that of the copy paper, the machine will automatically rotate the image by 90° to make copies properly.
- If the number of originals placed is less than the number specified for combining, the last page segment is left blank as shown.

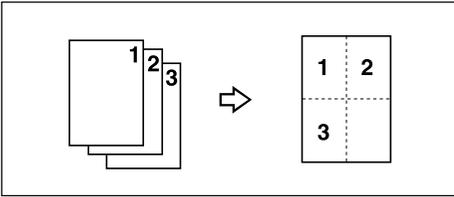**❖ Duplex Margin (Type 2 only)**

- If you set a binding margin that is too wide, part of the image may not be copied.
- When making copies using the Combine function, the binding margin is added to the copies when combining is finished.

INDEX

- 1 Sided → 2 Sided, 32
- 2 Sided → 1 Sided, 37
- 2 Sided → 2 Sided, 32

A

- Accessing user tools
 - copier features*, 49
- Adding toner, 46
- Adjusting
 - image density*, 26
- Auto
 - paper select*, 26
 - reduce/enlarge*, 29
 - tray switching*, 51
- Auto Off / Low Power, 12
- Auto paper select, 27

B

- Basic procedure, 21

C

- Changing default settings, 49
- Cleaning
 - ADF or ARDF*, 59
 - exposure glass*, 59
 - exposure glass cover*, 59
- Clear key, 8
- Clear Modes key, 8
- Combination chart, 61
- Combine
 - 1 sided 2 pages → 1 side*, 34
 - 1 sided 4 pages → 1 side*, 34
 - 1 sided 4 pages → 2 side*, 35
 - 1 sided 8 pages → 2 side*, 36
 - 2 sided 1 page → 1 side*, 34
 - 2 sided 2 pages → 1 side*, 34
 - 2 sided 4 pages → 2 side*, 36
 - 2 sided 8 pages → 2 side*, 36
- Combine key, 8
- Control panel, 8

Copier Features

- APS / auto r/e priority*, 51
- auto tray switching*, 51
- duplex margin*, 53
- duplex mode priority*, 52
- letterhead setting*, 53
- max. number of sets*, 52
- orientation*, 52
- original count display*, 52
- original type setting*, 51
- preset r/e priority*, 53
- reproduction ratio*, 52
- rotate sort*, 53
- rotate sort auto continue*, 53

Copier features, 49

Copy functions, 26

- adjusting image density*, 26
- auto reduce/enlarge*, 29
- duplex*, 32
- one-sided combine*, 34
- preset reduce/enlarge*, 28
- selecting copy paper*, 26
- selecting original type setting*, 26
- series copies*, 37
- sort*, 30
- two-sided combine*, 35
- zoom*, 28

Copying, 21

- Copying from bypass tray, 22
 - onto custom size paper*, 24
 - onto envelopes*, 25
 - onto regular size paper*, 23
 - onto special paper*, 24

Copy key, 8

Counter key, 8

D

Display, 9

Do's and Don'ts, 55

Duplex

- 1 sided → 2 sided*, 32
- 2 sided → 2 sided*, 32

Duplex key, 8

E

Environment, 56

Escape key, 9

H

Handling toner, 46

I

Indicators, 8

Inserting toner, 48

L

Lighter and Darker, 9

Loading paper, 43

M

Machine environment, 56

Main power indicator, 8

Main power switch, 11

Maintaining, 59

Manual paper select, 27

Messages, 39

Missing image area, 16

Moving, 57

N

Non-compatible originals for the ADF or ARDF, 14

Number keys, 9

O

OK key, 9

One-sided combine

 1 sided 2 pages → combine 1 side, 34

 1 sided 4 pages → combine 1 side, 34

 2 sided 1 page → combine 1 side, 34

 2 sided 2 pages → combine 1 side, 34

Operation switch, 11

Operation switch (On indicator), 8

Orientation-Fixed Paper or Two-Sided Paper, 44

Original

 combine, 34

 orientation, 17

 orientation and completed copies, 32

Originals, 13

Original Type key, 9

P

Paper

 loading, 43

Photo, 26

Placing

 custom size originals, 19

 originals, 17, 18, 19, 20

 originals in ADF/ARDF, 18

 originals on exposure glass, 17

 regular size originals, 20

Placing Originals, 13

Power connection, 57

Q

Quitting user tools, 50

R

Reading

 display, 10

 using keys, 10

Remarks, 55

Removing toner, 47

Rotated copy, 27

S

Safety information, 4

Saving energy, 12

Scroll keys, 8

Selecting

 copy paper, 26

 original type setting, 26

Selection keys, 8

Series copies

 2 sided → 1 sided, 37

 book → 1 sided, 37

Series key, 8

Sizes

 detectable by auto paper select, 15

 difficult to detect, 16

 of recommended originals, 13

Sort, 30

 rotate sort, 30

Sort key, 9

Specifications, 61

Start key, 9

Stop key, 8

Supplementary information, 62

Supplementary informations, 63

- bypass tray copy*, 62
- combine*, 64
- duplex*, 63
- duplex margin*, 64
- preset enlarge/reduce*, 62
- rotate sort*, 63
- sort*, 63
- zoom*, 63

T

Text, 26

Toner

- adding*, 46
- handling*, 46
- inserting*, 48
- removing*, 47
- storage*, 46
- used*, 46

Toner storage, 46

Troubleshooting, 39

- memory is full*, 42
- you cannot make clear copies*, 40
- you cannot make copies as you want*, 41
- your machine does not operate as you want*, 39

Turning Off

- main power*, 12
- power*, 12

Turning On, 11

- main power*, 11
- power*, 11

Two-sided combine

- 1 sided 4 pages → combine 2 side*, 35
- 1 sided 8 pages → combine 2 side*, 36
- 2 sided 4 pages → combine 2 side*, 36
- 2 sided 8 pages → combine 2 side*, 36

U

- Used toner, 46
- User Tools, 49
- User Tools key, 8

W

Weights

- of recommended originals*, 13

MEMO



Declaration of Conformity

“The Product complies with the requirements of the EMC Directive 89/336/EEC and its amending directives and the Low Voltage Directive 73/23/EEC and its amending directives.”

In accordance with IEC 60417, this machine uses the following symbols for the main power switch:

I means **POWER ON.**

⏻ means **STAND BY.**

Trademark

Acrobat® is a registered trademark of Adobe Systems Incorporated.

Other product names used herein are for identification purposes only and might be trademarks of their respective companies. We disclaim any and all rights to those marks.

Operating Instructions Copy Reference

