


Operating Instructions Copy Reference

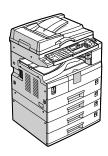

- 1 Placing Originals
- 2 Copying
- 3 Appendix

Introduction

This manual contains detailed instructions and notes on the operation and use of this machine. For your safety and benefit, read this manual carefully before using the machine. Keep this manual in a handy place for quick reference.

Important

Contents of this manual are subject to change without prior notice. In no event will the company be liable for direct, indirect, special, incidental, or consequential damages as a result of handling or operating the machine.

Do not copy or print any item for which reproduction is prohibited by law.

Copying or printing the following items is generally prohibited by local law:

bank notes, revenue stamps, bonds, stock certificates, bank drafts, checks, passports, driver's licenses.

The preceding list is meant as a guide only and is not inclusive. We assume no responsibility for its completeness or accuracy. If you have any questions concerning the legality of copying or printing certain items, consult with your legal advisor.

Notes:

Some illustrations in this manual might be slightly different from the machine.

Certain options might not be available in some countries. For details, please contact your local dealer. Depending on which country you are in, certain units may be optional. For details, please contact your

Caution:

local dealer.

Use of controls or adjustments or performance of procedures other than those specified in this manual might result in hazardous radiation exposure.

Notes:

The model names of the machines do not appear in the following pages. Check the type of your machine before reading this manual. (For details, see "Machine Types", About This Machine.)

- Type 1: 16 copies/minute (A4 □, 8¹/₂" × 11" □)
- Type 2: 20 copies/minute with duplex unit (A4 □, 8¹/₂" × 11" □)

Certain types might not be available in some countries. For details, please contact your local dealer.

Two kinds of size notation are employed in this manual. With this machine refer to the metric version.

Manuals for This Machine

Refer to the manuals that are relevant to what you want to do with the machine.

#Important

Media differ according to manu	าลทนส	m	to	according	differ	Media]
--------------------------------	-------	---	----	-----------	--------	-------	---

☐ The printed and electronic versions of a manual have the same contents.

☐ Adobe Acrobat Reader/Adobe Reader must be installed in order to view the manuals as PDF files.

☐ Depending on which country you are in, there may also be html manuals. To view these manuals, a Web browser must be installed.

About This Machine

Be sure to read the Safety Information in this manual before using the machine. This manual provides an introduction to the functions of the machine. It also explains the control panel, preparation procedures for using the machine, how to enter text, and how to install the CD-ROMs provided.

General Settings Guide

Explains User Tools settings, and Address Book procedures such as registering fax numbers, e-mail addresses, and user codes. Also refer to this manual for explanations on how to connect the machine.

Troubleshooting

Provides a guide to solving common problems, and explains how to replace paper, toner, and other consumables.

❖ Security Reference

This manual is for administrators of the machine. It explains security functions that the administrators can use to protect data from being tampered with, or prevent the machine from unauthorized use.

Also refer to this manual for the procedures for registering administrators, as well as setting user and administrator authentication.

Copy Reference

Explains Copier functions and operations. Also refer to this manual for explanations on how to place originals.

❖ Facsimile Reference

Explains Facsimile functions and operations.

Printer Reference

Explains Printer functions and operations.

Scanner Reference

Explains Scanner functions and operations.

Network Guide

Explains how to configure and operate the machine in a network environment, and use the software provided.

This manual covers all models, and includes descriptions of functions and settings that might not be available on this machine. Images, illustrations, and information about operating systems that are supported might also differ slightly from those of this machine.

Other manuals

- Manuals for This Machine
- Safety Information
- Quick Reference Copy Guide
- Quick Reference Fax Guide
- Quick Reference Printer Guide
- Quick Reference Scanner Guide
- PostScript3 Supplement
- UNIX Supplement
- Manuals for DeskTopBinder Lite
 - DeskTopBinder Lite Setup Guide
 - DeskTopBinder Introduction Guide
 - Auto Document Link Guide

8	Note
	Manuals provided are specific to machine types.
	For "UNIX Supplement", please visit our Web site or consult an authorized dealer.
	"PostScript3 Supplement" and "UNIX Supplement" include descriptions of functions and settings that might not be available on this machine.


What You Can Do with This Machine

Available functions differ depending on the model and options.


p.2 "Functions Requiring Optional Configurations"

Types of Duplex Copies


❖ 1 Sided 2 Pages → 2 Sided 1 Page See p.47 "Duplex (Type 2 only)".

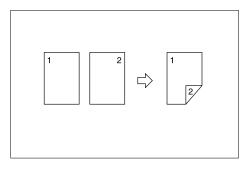

❖ 2 Sided 1 Page → 2 Sided 1 Page See p.47 "Duplex (Type 2 only)".

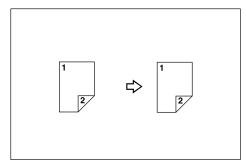


❖ 1 Sided 4 Pages → Combine 2 Sided 1 Page See p.53 "Two-Sided Combine (Type 2 only)".

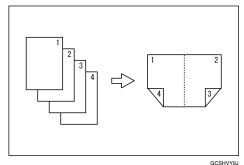

❖ 1 Sided 8 Pages → Combine 2 Sided 1 Page


See p.53 "Two-Sided Combine (Type 2 only)".

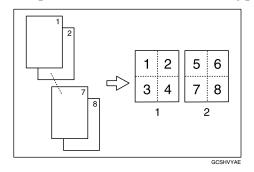

- 1 Front
- 2 Back


❖ 2 Sided 2 Pages → Combine 2 Sided 1 Page

See p.53 "Two-Sided Combine (Type 2 only)".

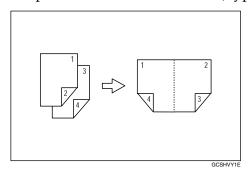

❖ 2 Sided 4 Pages → Combine 2 Sided 1 Page

See p.53 "Two-Sided Combine (Type 2 only)".

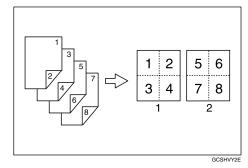


- 1 Front
- 2 Back


Combining Multiple Pages onto a Single Page

See p.50 "One-Sided Combine".


❖ 1 Sided 2 Pages → Combine 1 Sided 1 Page

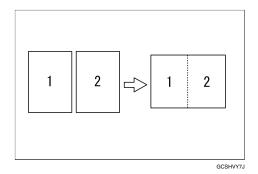


 $\ \, \textbf{1} \,\, \textbf{Sided} \,\, \textbf{4} \,\, \textbf{Pages} \rightarrow \textbf{Combine} \,\, \textbf{1} \,\, \textbf{Sided} \,\, \textbf{1} \,\, \textbf{Page} \\$

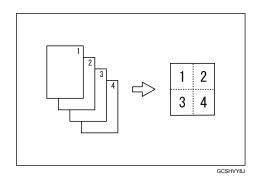

 \clubsuit 2 Sided 1 Page \rightarrow Combine 1 Sided 1 Page

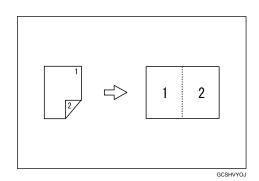


❖ 2 Sided 2 Pages → Combine 1 Sided 1 Page

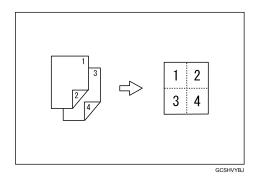


Copying Originals Such as Books

See p.56 "Series Copies".

\clubsuit Bound Originals \rightarrow 1 Sided 2 Pages

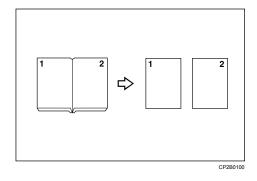

❖ 2 Sided 1 Page → 1 Sided 2 Pages

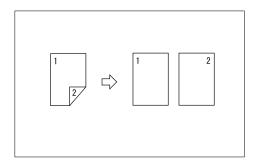

Copying onto Envelopes

❖ Envelope

See p.32 "When Copying onto Envelopes".

TABLE OF CONTENTS

Manuals for This Machine	i
What You Can Do with This Machine	iii
Types of Duplex Copies	ii
Combining Multiple Pages onto a Single Page	V
Copying Originals Such as Books	v
Copying onto Envelopes	V
How to Read This Manual	
Symbols	
Names of Major Options	1
Functions Requiring Optional Configurations	2
Display	3
Reading the Display	3
Using the Keys on the Control Panel	4
User Tools Menu (Copier Features)	5
1. Discourse Oxiginals	
1. Placing Originals	
Originals	7
Sizes and Weights of Recommended Originals	
Sizes Detectable by Auto Paper Select	
Missing Image Area	
Placing Originals	
Original Orientation	
Placing Originals on the Exposure Glass	
Placing Originals in the ADF or ARDF	
Specifying the Original Size When a Paper Tray is Selected	
Specifying the Original Size When the Bypass Tray is Selected	18
2. Copying	
Basic Procedure	
Copying from the Bypass Tray	
Loading Paper on the Bypass Tray	
When Copying onto Regular Size Paper	
When Copying onto Custom Size Paper	
When Copying onto OHP Transparencies	29
When Copying onto Thick Paper	30
When Copying onto Envelopes	32
Copy Functions	36
Adjusting Image Density	36
Original Type Setting	
Selecting Copy Paper	
Preset Reduce/Enlarge	
Zoom	
Auto Reduce/Enlarge	
Sort	
Duplex (Type 2 only)	
One-Sided Combine Two-Sided Combine (Type 2 only)	
Series Conies	56 56

3. Appendix

Combination Chart	59
Supplementary Information	60
INDEX	63

How to Read This Manual

Note

- ☐ For proper use of this product, be sure to read About This Machine first.
- ☐ Supplementary information about the copier mode is described in "Supplementary Information".

₽ Reference

p.60 "Supplementary Information"

Symbols

This manual uses the following symbols:

MARNING:

Indicates important safety notes.

Ignoring these notes could result in serious injury or death. Be sure to read these notes. They can be found in the "Safety Information" section of About This Machine.

CAUTION:

Indicates important safety notes.

Ignoring these notes could result in moderate or minor injury, or damage to the machine or to property. Be sure to read these notes. They can be found in the "Safety Information" section of About This Machine.

#Important

Indicates points to pay attention to when using the machine, and explanations of likely causes of paper misfeeds, damage to originals, or loss of data. Be sure to read these explanations.

Note

Indicates supplementary explanations of the machine's functions, and instructions on resolving user errors.

This symbol is located at the end of sections. It indicates where you can find further relevant information.

[]

Indicates the names of keys that appear on the machine's display panel.

Indicates the names of keys on the machine's control panel.

Names of Major Options

Major options of this machine are referred to as follows in this manual:

- Auto document feeder → ADF
- Auto document feeder capable of scanning both sides of a sheet → ARDF

Functions Requiring Optional Configurations

Certain functions require special machine configuration and extra options. See the table below.

Function Option	Paper Tray Unit (1- or 2-tray type)	ARDF
Duplex (Type 2 Only)	-	-
2 Sided→Duplex (Type 2 Only)	-	Required
1 Sided→2 Sided Combine/Series (Type 2 Only)	-	-
2 Sided→1 Sided Combine/Series	-	Required
2 Sided→2 Sided Combine/Series (Type 2 Only)	-	Required
Sort	-	-
Rotate Sort	Required*	-

 $^{^{\}ast}$ To use Rotate Sort with Type 1, an optional paper tray unit is required. (Type 2 supports Rotate Sort as standard.)

Display


This section explains how to read the display and how to use the selection keys on the initial copy display.

Note

 \Box The copy display is set as the default screen when the machine is turned on.


Reading the Display

❖ Initial copy display

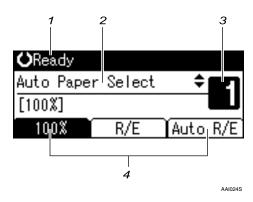

- 1. Displays operational status and messages.
- 2. Displays the current paper tray and selected items that appear in brackets.
- 3. Displays the number of copies set.
- 4. Displays frequently used functions.

Using the Keys on the Control Panel

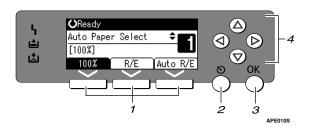

1. Selection keys

Correspond to items at the bottom line on the display.

Example: initial copy display

- When the instruction "press [100%]"
 appears in this manual, press the left selection key.
- When the instruction "press [R/E]" appears in this manual, press the centre selection key.
- When the instruction "press [Auto R/E]" appears in this manual, press the right selection key.

2. [Escape] key

Press to cancel an operation or return to the previous display.

3. [OK] key

Press to set a selected item or entered numeric value.

4. Scroll keys

Press to move the cursor to each direction one by one.

When $[\blacktriangle]$, $[\blacktriangledown]$, or $[\blacktriangleleft]$ key appears in this manual, press the scroll key of the same direction.

User Tools Menu (Copier Features)

This section describes items you can set in the copier feature. The copier features screen can be displayed by pressing the **[User Tools/Counter]** key. For details about how to set up these items, see General Settings Guide.

Item	Description
APS/ Auto R/E Priority	You can select [Auto Paper Select Priority] (APS Priority) or [Auto R/E Priority] (Auto Reduce/Enlarge Priority).
Auto Tray Switching	If you load same size paper in two or more trays, the machine automatically shifts to the other tray using image rotation when the first tray runs out of paper (if [On] is selected.) This function is called "Auto Tray Switching". This setting specifies whether to use Auto Tray Switching or not.
Original Type Setting	You can adjust copy finish quality level according to original type. You can choose these functions after selecting [Original Type 1 (Text)] or [Original Type 2 (Photo)].
Duplex Mode Priority	You can select the type of Duplex function effective when the machine is turned on, reset, or modes are cleared.
Orientation	You can select the original orientation when using the Combine/Series, or two-sided originals to one-sided duplex function. The default setting is [Do not Specify] .
Max. Number of Sets	The maximum copy quantity can be set between 1 and 99 using the number keys.
Original Count Display	You can set to display the count of originals and copying pages on the display when [On] is selected.
Reproduction Ratio	You can select which reduce, enlarge, or input ratio is shown on the display with priority when [Reduce] or [Enlarge] is selected.
Preset R/E Priority	You can set the ratio with priority when [R/E] is selected.
Duplex Margin	Specify left margin on the back side of copies, and top margin on the front side.
Rotate Sort	Specify whether or not to select Rotate Sort when [Sort] key is pressed.
Rotate Sort:Auto Continue	If you select [Off] when the paper tray in use runs out of paper, the machine stops, allowing you to add paper so all copies can be rotate-sorted.
Letterhead Setting	If you select [On] for this function, the machine rotates the image correctly.
Menu Protect	You can prevent unauthenticated users from changing the user tools settings.

1. Placing Originals

This chapter describes the types of originals you can set and how to place originals.

Originals

This section describes the types of originals that can be placed, paper sizes that are automatically detected, and missing image area.

Sizes and Weights of Recommended Originals

The following describes recommended paper sizes and weights, and non-recommended originals for the ADF or ARDF.

Metric version

Where original is placed	Original size	Original weight
Exposure glass	Up to A3	
ADF / ARDF	One-sided originals: A3□ – A5□□	ADF: 52-105 g/m ² ARDF: 40-128 g/m ²
	Two-sided originals: * A3□ – A5□□	64–105 g/m ² *

Inch version

Where original is placed	Original size	Original weight
Exposure glass	Up to 11" × 17"	
ADF / ARDF	One-sided originals: $11" \times 17" \square - 5^1/_2" \times 8^1/_2" \square \square$	ADF: 14-28 lb. ARDF: 10-34 lb.
	Two-sided originals: * $11" \times 17" \square - 5^1/_2" \times 8^1/_2" \square \square$	17–28 lb.*

^{*} The optional ARDF is required.

Note

- ☐ About 30 originals can be placed in the ADF.
- ☐ About 50 originals can be placed in the ARDF.

Non-compatible originals for the ADF or ARDF

Placing the following types of originals in the ADF or ARDF can cause paper misfeeds or light and black lines, or result in damage to the originals. Place these originals on the exposure glass instead.

- Originals other than those specified in "Sizes and Weights of Recommended Originals"
- Stapled or clipped originals
- Perforated or torn originals
- Curled, folded, or creased originals
- · Pasted originals
- Originals with any kind of coating, such as thermal fax paper, art paper, aluminum foil, carbon paper, or conductive paper
- Originals with perforated lines
- Originals with indexes, tags, or other projecting parts
- Sticky originals such as translucent paper
- Thin or highly flexible originals
- Thick originals such as postcards
- Bound originals such as books
- Transparent originals such as OHP transparencies or translucent paper
- Originals that are still wet with ink or correction fluid

Note

☐ The original might become dirty if it is written with a pencil or a similar tool.

Sizes Detectable by Auto Paper Select

Sizes detectable from the exposure glass, and ADF or ARDF are:

❖ Metric version

Size Location of the original	A3D	B4 JIS *1 □	A4₽₽	B5 JIS *1	B5 JIS *1	A5 🕽 🗗	8 ¹ / ₂ " × 13" □
Exposure glass	0	0	0	×	0	× *2	0
ADF / ARDF	0	0	0	0	0	0	0

O : Detectable × : Undetectable

❖ Inch version

Size Location of the original	11"×17" □	8 ¹ / ₂ " × 14"	8"×13" □	$8^1/_2$ " × 11"	5 ¹ / ₂ " × 8 ¹ / ₂ "
Exposure glass	0	0	0	0	× *1
ADF / ARDF	0	0	×	0	0


O: Detectable ×: Undetectable

JIS: Japanese Industrial Standard
 If you want to make A5 □ paper detectable, contact your service representative.


If you want to make $5^1/2^{"} \times 8^1/2^{"} \square$ paper detectable, contact your service representative.

Maximum scanning area

Exposure glass

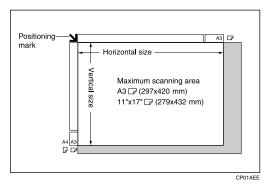

❖ ADF or ARDF

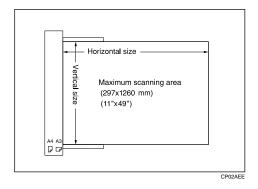

Note

☐ When you copy custom size originals, make sure you specify the size of the originals. If not, the image may not be copied properly.

p.16 "Specifying the Original Size When a Paper Tray is Selected" p.18 "Specifying the Original Size When the Bypass Tray is Selected"


Sizes difficult to detect

It is difficult for the machine to detect the sizes of the following originals. Even if Auto Paper Select is set, the correct paper size may not be selected, so select the paper size manually.

- Originals with indexes, tags, or other projecting parts
- Transparent originals such as OHP transparencies or translucent paper
- Dark originals with a lot of text and drawings
- Originals which partially contain a solid image
- Originals which have solid images at their edges

Missing Image Area

Even if you correctly place originals in the ADF or ARDF, or on the exposure glass, margins of a few millimeters on all four sides of the original might not be copied.

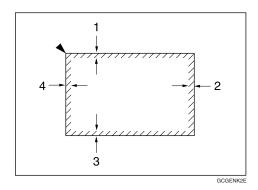

- 1 0.5 mm (0.02") or more
- 2 0.5 mm (0.02") or more
- $32 \pm 1.5 \text{ mm} (0.08" \pm 0.06")$
- $42 \pm 1.5 \text{ mm} (0.08" \pm 0.06")$

Placing Originals

This section describes the procedure for placing originals on the exposure glass and in the ADF or ARDF.


Take care to place originals after any correction fluid and ink has completely dried. Not taking this precaution could cause marks on the exposure glass that will be copied onto paper.

p.7 "Originals"

Original Orientation

You can set the original orientation in the following ways.

This function is useful for copying torn or large originals.

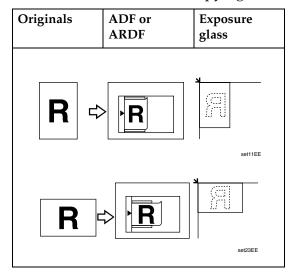

Note

☐ Originals should normally be aligned to the rear left corner. However, some copy functions may produce different results depending on the orientation of the originals. For details, see the explanations of each function.

p.47 "Duplex (Type 2 only)" p.50 "One-Sided Combine"

p.53 "Two-Sided Combine (Type 2 only)"

p.56 "Series Copies"

Placing Originals on the Exposure Glass

Place originals on the exposure glass.


∰Important

- ☐ Do not lift the exposure glass cover, ADF, or ARDF forcefully. Otherwise, it will be damaged, or the cover of the ADF or ARDF might open.
- Lift the exposure glass cover, ADF, or ARDF.

 Be sure to lift the exposure glass cover, ADF, or ARDF by more than 30 degrees.

 Otherwise, the size of the original might not be detected correctly.
- 2 Place the original face down on the exposure glass. The original should be aligned with the rear left corner.

Start with the first page to be copied.

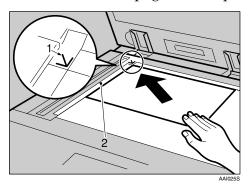

- 1 Positioning mark
- 2 Left scale
- **3** Lower the exposure glass cover, ADF, or ARDF.

Placing Originals in the ADF or ARDF


Place originals in the ADF or ARDF.

Settings should be made when placing custom size originals.

When placing custom size originals:


See p.16 "Specifying the Original Size When a Paper Tray is Selected" and p.18 "Specifying the Original Size When the Bypass Tray is Selected".

❖ ARDF

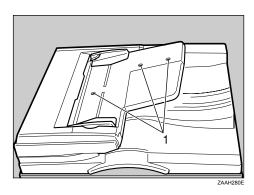

1 Sensors

❖ ADF

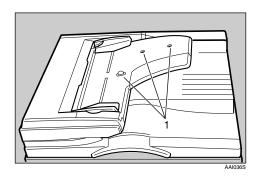


1 Sensors

- 1 Adjust the document guide to the original size.
- 2 Set the aligned originals face up into the ADF or ARDF.

Do not stack originals beyond the limit mark.

The first page should be on the top.

Be sure not to block the sensor or load the original untidily. Doing so may cause the machine to detect the size of the scanned image incorrectly or display a paper misfeed message. Also, be sure not to place originals or other objects on the top cover. Doing so may cause a malfunction.

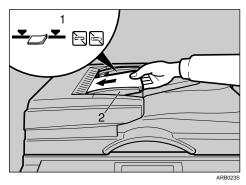

- 1 Limit mark
- 2 Document guide

Note

- ☐ Straighten curls in the originals before placing them in the ADF or ARDF.
- ☐ To prevent multiple sheets from being fed at once, fan the originals before placing them in the ADF or ARDF.
- ☐ Set the originals squarely.


Specifying the Original Size When a Paper Tray is Selected

You can select either regular or custom for the size of the original when a paper tray is selected.

Regular sizes


When placing regular size originals on the exposure glass, or in the ADF or AR-DF, select the size of the originals from the regular sizes shown on the display.

1 Select a desired paper tray using [▲] or [▼].

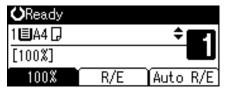


- Press the [#] key.
- **3** Select [Regular Size] using [▲] or [▼], and then press the [OK] key.

When [Auto Detect] is selected, the size of the placed original will be detected automatically.

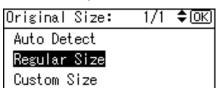


Select the original size using the scroll keys, and then press the [OK] key.

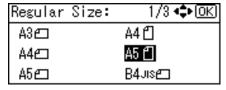

The "Programmed" message appears.

When the regular size originals settings are registered, **\text{\$\text{\le ady}}\$ appears on the top of the copy display.

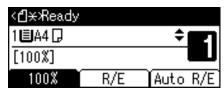

- Note
- ☐ This function is not available in Auto Paper Select mode.
- ☐ To cancel the size you have set, press the [Clear Modes] key.

Custom sizes


When placing custom size originals on the exposure glass, or in the ADF or AR-DF, specify the size of the originals using the number keys.

∰Important

- \square Originals that have a vertical length of 105–297 mm (4.2"-11.6") and a horizontal length of 128-1,260 mm (5.1"-49.6") can be specified.
- **1** Select a desired paper tray using [▲] or [▼].




- Press the [#] key.
- **3** Select [Custom Size] using [▲] or [▼], and then press the [OK] key.

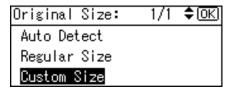

Enter the horizontal size of the original (Horiz.) with the number keys, and then press the [OK] key.



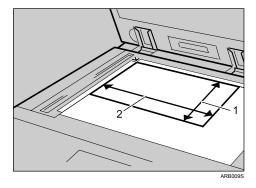


- 1 Vertical size
- 2 Horizontal size

Enter the vertical size of the original (Vert.) with the number keys, and then press the [OK] key.



The "Programmed" message appears.

When the custom size originals settings are registered, **Aeady* appears on the top of the copy display.

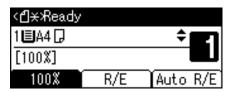

- Note
- ☐ This function is not available in Auto Paper Select mode.
- ☐ If you make a mistake in step ② or ⑤, press the [Clear/Stop] key, and then enter the value again.
- ☐ To cancel the size you have set, press the [Clear Modes] key.


Specifying the Original Size When the Bypass Tray is Selected

You can select either regular or custom for the size of the original when the bypass tray is selected.

Regular sizes

When placing regular size originals on the exposure glass, or in the ADF or AR-DF, select the size of the originals from the regular sizes shown on the display.

1 Select [Bypass] using [▲] or [▼].

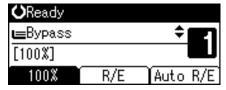


Press the [#] key.

3 Select [Original Size] using [▲] or [▼], and then press the [OK] key.




4 Select [Regular Size] using [♠] or [▼], and then press the [OK] key.

When **[Auto Detect]** is selected, the size of the placed original will be detected automatically.

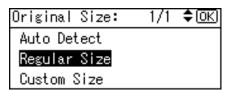


5 Select the original size using the scroll keys, and then press the [OK] key.

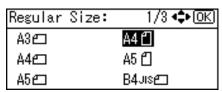

The "Programmed" message appears.

When the regular size originals settings are registered, **\text{\section} \text{\text{\$\section}} \text{\$\text{\$\section}} \text{\$\text{\$\section}\$ appears on the top of the copy display.

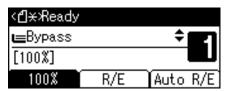


- Note
- $\hfill\Box$ This function is not available in Auto Paper Select mode.
- ☐ To cancel the size you have set, press the [Clear Modes] key.

Custom sizes


When placing custom size originals on the exposure glass, or in the ADF or AR-DF, specify the size of the originals using the number keys.

∰Important


- □ Originals that have a vertical length of 105–297 mm (4.2"-11.6") and a horizontal length of 128-1,260 mm (5.1"-49.6") can be specified.
- **1** Select [Bypass] using [▲] or [▼].

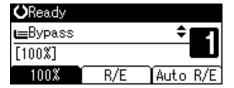


- Press the [#] key.
- Select [Original Size] using [▲] or [▼], and then press the [OK] key.

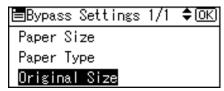


4 Select [Custom Size] using [▲] or [▼], and then press the [OK] key.

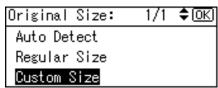

Enter the horizontal size of the original (Horiz.) with the number keys, and then press the [OK] key.

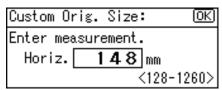


6 Enter the vertical size of the original (Vert.) with the number keys, and then press the [OK] key.

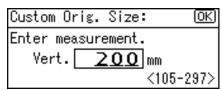

The "Programmed" message appears.

When the custom size originals settings are registered, **Ready* appears on the top of the copy display.

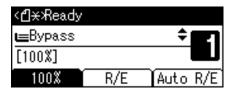

Note

- ☐ This function is not available in Auto Paper Select mode.
- ☐ If you make a mistake in step ⑤ or ⑥, press the 〔Clear/Stop〕 key, and then enter the value again.
- ☐ To cancel the size you have set, press the [Clear Modes] key.

2. Copying

This chapter describes procedures for making copies in various modes.

Basic Procedure


This section describes the basic procedure for making copies.

#Important

- ☐ When User Code Authentication is set, enter your user code (up to eight digits) with the number keys so that the machine accepts copy jobs. See "Authentication Information (For machine with copier function only)", General Settings Guide.
- □ When Basic Authentication, Windows Authentication, LDAP Authentication, or Integration Server Authentication is set, enter your login user name and user password so that the machine accepts copy jobs. Ask the administrator for the login user name and login password. For details, see "When the Authentication Screen is Displayed", About This Machine.
- 1 Make sure "Ready" appears on the screen.

If any other function is displayed, press the [Copy] key.

Initial copy display

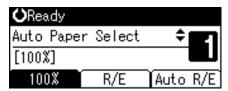


2 Make sure no previous settings remain.

When there are previous settings remaining, press the [Clear Modes] key.

- **3** Place the originals.
- 4 Make desired settings.
- **E** Enter the number of copies using the number keys.

The maximum copy quantity that can be set is 99.

Press the [Start] key.

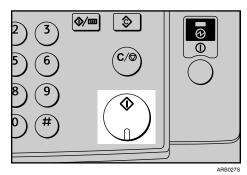

The machine starts copying.

When placing originals on the exposure glass, press the [#] key after all originals are scanned.

Copies are delivered face down.

Note

- ☐ Always log off when you have finished using the machine to prevent unauthorized users from using the machine.
- ☐ To stop the machine during a multicopy run, press the [Clear/Stop] key.
- ☐ To return the machine to its initial state after copying, press the [Clear Modes] key.
- ☐ To clear an entered value, press the [Clear/Stop] key.
- ☐ To switch between pages or selectable functions, press the scroll keys.

₽ Reference

"When the Authentication Screen is Displayed", About This Machine

Copying from the Bypass Tray

Use the bypass tray to copy onto OHP transparencies, thick paper, envelopes, and paper that cannot be loaded in the paper trays.

∰Important

- □ Paper that has a vertical length of 90-297 mm (3.55"-11.69") and a horizontal length of 148-600 mm (5.83"-23.62") can be copied from the bypass tray. However, when paper larger than 433 mm (17.1") in size is used, the paper may become wrinkled, may not be fed into the machine, or may cause paper jams.
- ☐ The machine can detect the following sizes as regular size paper:
 - Metric version A3□, A4□□, A5□□, 8" × 13"□
 - Inch version $11" \times 17" \square$, $8^1/_2" \times 14" \square$, $8^1/_2" \times 11" \square$ \square , $5^1/_2" \times 8^1/_2" \square$ If you want to use the size of paper other than the above, be sure to specify the size.

"Copy Paper", About This Machine


Loading Paper on the Bypass Tray

Use the bypass tray to copy onto OHP transparencies, thick paper, envelopes and paper that cannot be loaded in the paper trays.


∰Important

- □ When copying on OHP transparencies or paper heavier than 105 g/m^2 (about 28 lb.) you need to specify the type and size of paper.
- ☐ The maximum number of sheets you can load into the bypass tray depends on the paper type. When loading paper, make sure the top of the stack is not higher than the limit mark of the bypass tray.

1 Open the bypass tray.

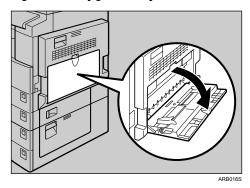

2 Push up the paper guide release lever.

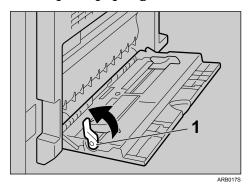

1 Paper guide release lever


Insert the paper face down, and then align the paper guides to the paper size.

If the guides are not flush against the paper, images might be skewed or paper misfeeds might occur.

Do not stack paper over the limit mark, otherwise, images might be skewed or paper misfeeds might occur.


Swing out the extender to support paper sizes larger than A4 \square or $8^1/2$ " × 11" \square .

To prevent multiple sheets from being fed at once, fan paper before placing it on the tray.

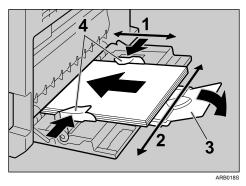


- 1 Horizontal size
- 2 Vertical size
- 3 Extender
- 4 Paper guides

4 Pull down the paper guide release lever.

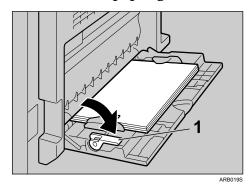

1 Paper guide release lever

The bypass tray is selected on the display.

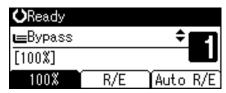

- **5** Select the size and type of the paper, if required.
 - Note
 - ☐ If [Bypass] is not selected on the display in step ①, select [Bypass] using [▲] or [▼], and then press the [#] key.


When Copying onto Regular Size Paper

Makes copies onto regular size paper from the bypass tray.

- **1** Select [Bypass] using [▲] or [▼].
- 2 Load paper face down on the bypass tray.
- Press the [#] key.
- Select [Paper Size] using [▲] or [▼], and then press the [OK] key.



5 Select [Regular Size] using [▲] or [▼], and then press the [OK] key.

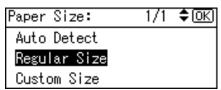

6 Select the paper size using the scroll keys, and then press the [OK] key.

Regular Size:	1/5 ♦• OK
A3 □ →	A4 🖫
A4□∂	A5 🖫
A5 □ -	B4Jis⊟

The "Programmed" message appears.


- Place the originals, and then press the [Start] key.
- When the copy job is finished, press the [Clear Modes] key to clear the settings.
 - **₽** Reference

p.25 "Loading Paper on the Bypass Tray"


When Copying onto Custom Size Paper

Makes copies onto custom size paper from the bypass tray.


- **1** Select [Bypass] using [▲] or [▼].
- 2 Load paper face down on the bypass tray.
- Press the [#] key.
- **A** Select [Paper Size] using [▲] or [▼], and then press the [OK] key.

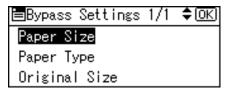


5 Select [Custom Size] using [▲] or [▼], and then press the [OK] key.

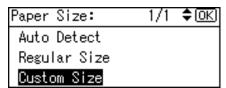

6 Enter the horizontal size of the paper (Horiz.) with the number keys, and then press the [OK] key.

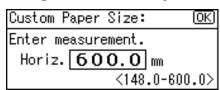

2 Enter the vertical size of the paper (Vert.) with the number keys, and then press the [OK] key.

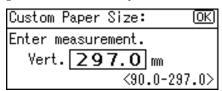

The "Programmed" message appears.

- Place the originals, and then press the [Start] key.
- When the copy job is finished, press the [Clear Modes] key to clear the settings.
 - Note
 - ☐ If you make a mistake in step ⑤ or ⑥, press the 〔Clear/Stop〕 key, and then enter the value again.

p.25 "Loading Paper on the Bypass Tray"


When Copying onto OHP Transparencies

When copying onto OHP transparencies, select **[OHP (Transparency)]** in Paper Type.


∰Important

- ☐ OHP transparencies must be loaded face down in the tray with the notched corner of the sheet in the appropriate corner of the tray.
- ☐ To prevent multiple sheets from being fed at once, fan OHP transparencies before placing them on the tray.
- \square Remove copied sheets from the internal tray one by one.
- **1** Select [Bypass] using [▲] or [▼].
- 2 Load OHP transparencies face down on the bypass tray.
- Press the [#] key.


4 Select [Paper Type] using [▲] or [▼], and then press the [OK] key.

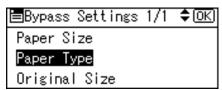

5 Select [OHP (Transparency)] using [▲] or [▼], and then press the [OK] key.

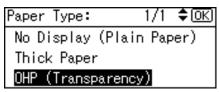

The "Programmed" message appears.

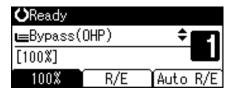

- **6** Select the paper size, if required.
- **7** Place the originals, and then press the [Start] key.
- When the copy job is finished, press the [Clear Modes] key to clear the settings.
 - Note
 - ☐ Printing on OHP transparencies is slower than printing on plain paper.

p.25 "Loading Paper on the Bypass Tray"


When Copying onto Thick Paper

When copying onto thick paper, select [Thick Paper] in Paper Type.


∰Important

- ☐ To prevent multiple sheets from being fed at once, fan paper before placing it on the tray.
- **1** Select [Bypass] using [▲] or [▼].
- 2 Load thick paper face down on the bypass tray.
- Press the [#] key.


Select [Paper Type] using [▲] or [▼], and then press the [OK] key.

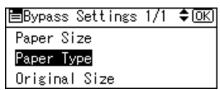

5 Select [Thick Paper] using [▲] or [▼], and then press the [OK] key.

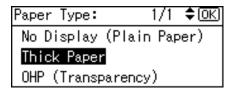

The "Programmed" message appears.

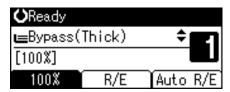


- 1 Place the originals, and then press the [Start] key.
- When the copy job is finished, press the [Clear Modes] key to clear the settings.
 - **𝚱** Note
 - ☐ Printing on thick paper is slower than printing on plain paper.
 - Reference
 p.25 "Loading Paper on the Bypass Tray"

When Copying onto Envelopes


When copying onto envelopes, select the envelope size in Paper Size, and **[Thick Paper]** in Paper Type.

∰Important

☐ Before loading envelopes, use a pen or similar to flatten their edges.

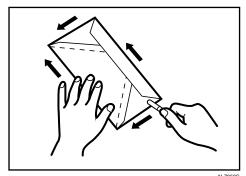


ALZ050S

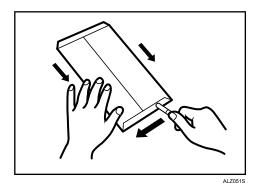

Printable area


The following areas of envelopes can be printed on:

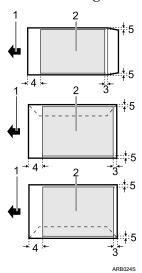

- 1 Feeding direction
- 2 Printable area
- 3 20 mm (0.79")
- 4 10 mm (0.40")
- 5 5 mm (0.20")

Orientation of Originals and Envelopes


Originals and envelopes must be placed in the following orientation. To minimize waste and time, check that originals and envelopes are loaded in the correct orientation.

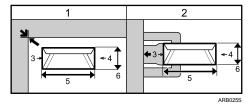

The illustration shows the correct orientation of originals and envelopes.

- 1 Original on the exposure glass
- 2 Envelope on the bypass tray
- 3 Top
- 4 Bottom
- 5 Horizontal size
- 6 Vertical size

- **1** Select [Bypass] using [▲] or [▼].
- 2 Load envelopes face down on the bypass tray.

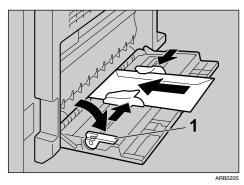

1 Paper guide release lever

- Press the [#] key.
- Select [Paper Size] using [▲] or [▼], and then press the [OK] key.




5 Select [Regular Size] using [▲] or [▼], and then press the [OK] key.

Paper Size:	1/1	♦ [0K]
Auto Detect		
Regular Size		
Custom Size		

Select the envelope size from [C6 Env.□], [C5 Env.□], and [DL Env.□] using [▲] or [▼], and then press the [OK] key.


Regular Size:	2/5 ♦ • OK
B5JIS 🖟	B5us ⊡
B6us⊟	C5Env.□
C6Env ⊑ ⊋	DLEnv□

The "Programmed" message appears.

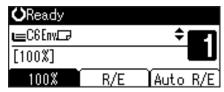


Press the [#] key.


3 Select [Paper Type] using [▲] or [▼], and then press the [OK] key.

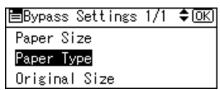

② Select [Thick Paper] using [▲] or [▼], and then press the [OK] key.

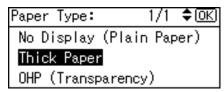

The "Programmed" message appears.

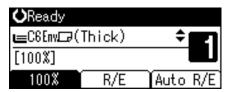

- Place the original, and then press the [Start] key.
- When the copy job is finished, press the [Clear Modes] key to clear the settings.

₽ Reference

p.25 "Loading Paper on the Bypass Tray"


Copy Functions

Adjusting Image Density

You can adjust the image density in five levels. If you want darker or lighter copies, adjust the image density accordingly.

1 Press the [Lighter] or [Darker] key to adjust the image density.

The density indicator "\" moves.

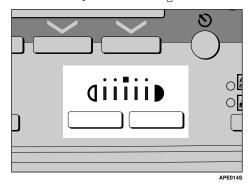

Original Type Setting

Select one of the following original types to match your originals:

❖ Text

Select this mode when your originals contain only text (no pictures).


Photo

Delicate tones of photographs and pictures can be reproduced with this mode.

- When copying developed photographs
- When copying photographs or pictures that are printed on paper (e.g. magazines)
- When copying originals generated by colour copiers

Press the [Original Type] key to select the original type.

The indicator of the selected original type goes on.

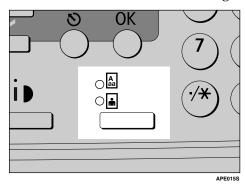

Upper indicator: Text Lower indicator: Photo

"Original Type Setting", General Settings Guide

Selecting Copy Paper

There are two ways to select paper:

❖ Auto Paper Select

The machine selects a suitable size of paper automatically based on the original size and reproduction ratio.

❖ Manual Paper Select

Choose a tray containing the paper you want to copy onto: the paper trays or the bypass tray.

See the following table for paper sizes and orientations that can be used with Auto Paper Select (when copying at a ratio of 100%).

❖ Metric version

Original location	Paper size and orientation					
Exposure glass	A3□, B4 JIS□, A4 □□, B5 JIS □, A5 □ *1, 81/2" × 13"□					
ADF / ARDF	A3□, B4 JIS□, A4□□, B5 JIS□□, A5□□ *2, 8¹/2" × 13"□					

Inch version

Original location	Paper size and orientation						
Exposure glass	$11" \times 17" \square, 8^1/_2" \times 14" \square, 8^1/_2" \times 13" \square, 8^1/_2" \times 11" \square \square, 5^1/_2" \times 8^1/_2" \square^{*1}$						
ADF / ARDF	$11" \times 17" \square 7, 8^1/2" \times 14" \square 7, 8^1/2" \times 11" \square \square 7, 5^1/2" \times 8^1/2" \square \square ^{*2}$						

^{*1} If you want to use A5 \square or $5^1/2$ " \times $8^1/2$ " \square with Auto Paper Select, contact your service representative.

Note

☐ If special paper is selected in Paper Type for all paper trays, you cannot use the Auto Paper Select function.


p.10 "Sizes difficult to detect"

^{*2} An optional paper tray unit is required.

Auto Paper Select

The machine selects a suitable size of paper automatically based on the original size and the reproduction ratio.

1 Make sure that [Auto Paper Select] is selected.

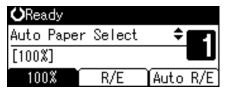




- ☐ If [Auto Paper Select] is not selected, select [Auto Paper Select] by using [▲] or [▼].
- ☐ Paper placed in the bypass tray will not be selected with Auto Paper Select.

Manual Paper Select

Choose a tray containing the paper you want to copy onto: the paper trays or the bypass tray.


1 Select a desired tray using [▲] or [▼].

The selected tray and paper size are displayed.

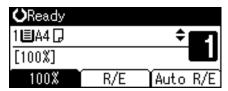

Rotated Copy

If the orientation in which your original is placed ($\square \square$) is different from that of the paper you are copying onto, the machine automatically rotates the original image by 90° and fits it on the paper.

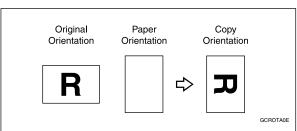

Note

- ☐ This function works when Auto Paper Select or Auto Reduce/Enlarge is selected.
- ☐ The default setting for Auto Tray Switching is **[On]**. You cannot use the Rotated Copy function if this setting is changed to **[Off]**.
- ☐ You cannot use the Rotated Copy function when enlarging onto A3 or B4 JIS, or $11" \times 17"$ or $8^1/_2" \times 14"$ size paper. In this case, place your original in the ☐ orientation.

	Origina	l size and orientation		Paper size and orio					
You cannot rotate:	A4, B5 JIS, or A5	GCROTAIE	When enlarging to →	B4 JIS or A3	GCROTAZE				
However, you can use:	A4, B5 JIS, or A5	R	When enlarging to \rightarrow	B4 JIS or A3	R				

p.25 "Copying from the Bypass Tray"


p.39 "Auto Paper Select"

p.44 "Auto Reduce/Enlarge"

"Auto Tray Switching", General Settings Guide

Preset Reduce/Enlarge


You can select a preset reduce or enlarge ratio for copying.

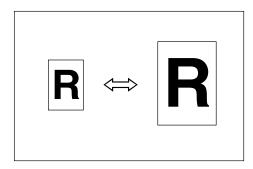


❖ Base Point

The base point of Reduce/Enlarge differs depending on how the original is scanned. When the original is set on the exposure glass, the upper left corner will be the base point. When it is set in the ADF or ARDF, the bottom left corner of the original will be the base point.


The figure below is the resulting copy images that differ depending on how the original is scanned.

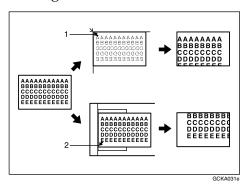

- 1 Base point when placing on the exposure glass
- 2 Base point when placing in the ADF or ARDF
- Press [R/E].

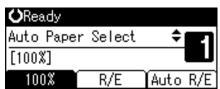

Press [Enlarge] or [Reduce].

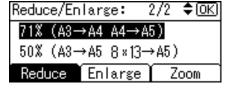

3 Select a ratio using [▲] or [▼], and then press the [OK] key.

The "Programmed" message appears.


Place the originals, and then press the [Start] key.

"Reproduction Ratio", General Settings Guide

"Preset R/E Priority", General Settings Guide

Zoom


You can change the reproduction ratio in increments of 1%.

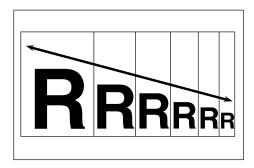


Selecting a ratio using the scroll keys

Select a ratio using (▲) or (▼).


Press [R/E].

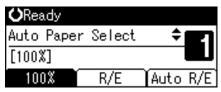

2 Select a preset ratio which is close to the desired ratio with [Enlarge] or [Reduce] and then press [Zoom].

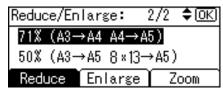

3 Specify a ratio using [▲] or [▼], and then press the [OK] key.

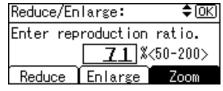

Pressing 【▲】 or 【▼】 changes the ratio in increments of 1%. Pressing and holding down the relevant key changes the ratio in increments of 10%.

The "Programmed" message appears.

4 Place the original, and then press the [Start] key.




☐ If you make a mistake in step **3**, readjust it using **()** or **()**.


Entering a ratio with the number keys

Select a ratio using the number keys.


Press [R/E].

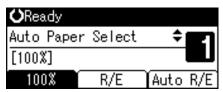

Press [Zoom].

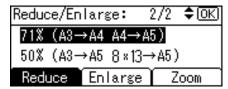

Enter the desired ratio with the number keys, and then press the [OK] key.

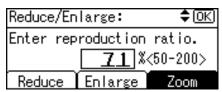

The "Programmed" message appears.


Place the original, and then press the [Start] key.



☐ If you make a mistake in step ⑤, press the [Clear/Stop] key, and then enter the value again.

Auto Reduce/Enlarge

The machine automatically selects an appropriate reproduction ratio based on the paper and original sizes you select.

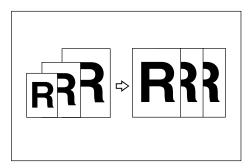

#Important

- ☐ You cannot use the bypass tray with this function.
- ☐ When using Auto Reduce/Enlarge, see the following table for paper sizes and orientations you can use:

❖ Metric version


Where original is placed	Paper size and orientation					
Exposure glass	A3, B4, JIS, A4, B5, JIS, A5, A5, *1, 8 ¹ / ₂ " × 13"					
ADF / ARDF	A3□, B4 JIS□, A4□□, B5 JIS□□, A5□□ *2, 8¹/2" × 13"□					

❖ Inch version


Where original is placed	Paper size and orientation						
	$11" \times 17" \square, 8^1/_2" \times 14" \square, 8^1/_2" \times 13" \square, 8^1/_2" \times 11" \square \square, 5^1/_2" \times 8^1/_2" \square^{*1}$						
ADF / ARDF	$11" \times 17" \square$, $8^1/_2" \times 14" \square$, $8^1/_2" \times 11" \square$ \square , $5^1/_2" \times 8^1/_2" \square$ *2						

^{*1} If you want to use A5 \square or $5^1/2'' \times 8^1/2'' \square$ with this function, contact your service representative.
*2 An optional paper tray unit is required.

1 Press [Auto R/E].

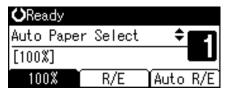

2 Select the paper size using [▲] or [▼].

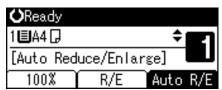

Place the originals, and then press the [Start] key.

The machine automatically selects an appropriate ratio and then begins copying.

p.10 "Sizes difficult to detect"

Sort


The machine assembles copies as sets in sequential order.

∰Important

- ☐ To use the Rotate Sort function, two paper trays loaded with paper of the same size and type, but in different orientation (☐ ☐), are required. See "Paper Type: Tray 1-4", General Settings Guide.
- ☐ You cannot use the bypass tray with Rotate Sort.


❖ Sort

Copies are assembled as sets in sequential order.

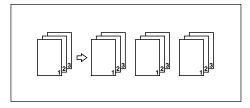


Rotate Sort

Every other copy set is rotated by 90 degrees ($\square \square$) and delivered to the copy tray.

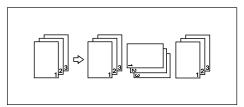


1 Press the [Sort] key.

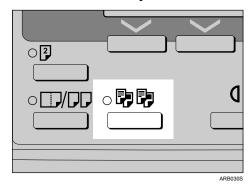

The indicator goes on.

2 Select [Sort] or [Rotate Sort] using [▲] or [▼], and then press the [OK] key.

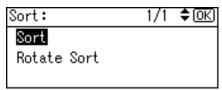

The "Programmed" message appears.

- **B** Enter the number of copy sets using the number keys.
- 4 Place the originals.

When placing originals on the exposure glass, start with the first page to be copied. When placing originals in the ADF or ARDF, set the first page on the top.

Press the [Start] key.

When placing originals on the exposure glass, press the [#] key after all originals are scanned.

- Note
- ☐ To display the screen in step ②, select [On] for [Rotate Sort] with Copier Features in User Tools.
- ☐ To cancel the Sort function in step ①, press the [Sort] key again. Make sure the indicator goes off.

₽ Reference

"Rotate Sort", General Settings Guide

"Rotate Sort: Auto Continue", General Settings Guide

"Auto Tray Switching", General Settings Guide


"Paper Type: Tray 1-4", General Settings Guide

Changing the number of sets


You can change the number of copy sets during copying.

∰Important

- ☐ This function can only be used when the Sort function is turned on.
- 1 While "Copying..." is displayed, press the [Clear/Stop] key.
- 2 Press [Sets].

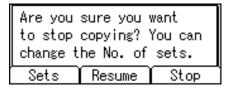

Enter the number of copy sets with the number keys, and then press [Resume].

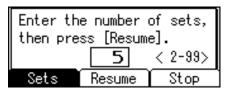

Copying starts again.

- Note
- ☐ The number of sets you can enter in step ② differs depending on when the 【Clear/Stop】 key is pressed.

Duplex (Type 2 only)


There are two types of Duplex available.

∰Important

☐ You cannot use the bypass tray with this function.


❖ 1 Sided \rightarrow 2 Sided

Copies 2 one-sided pages to 1 two-sided page.

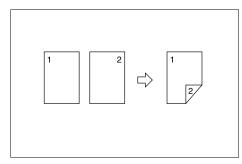

❖ 2 Sided → 2 Sided

Copies 1 two-sided page to 1 two-sided page.

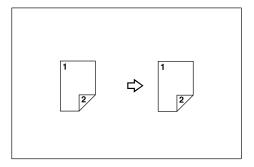


Note

☐ An optional ARDF is required to scan two-sided originals.

Original orientation and completed copies


The resulting copy image will differ according to the orientation in which you place the originals (vertical \square) or horizontal \square).

The table shows the orientation of images on the front and back of copies, not the orientation of delivery.

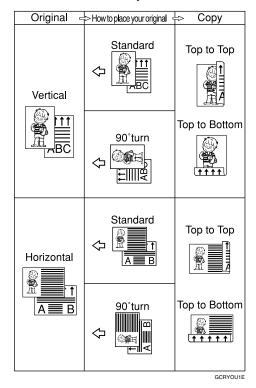


48

1 Press the [Duplex] key.

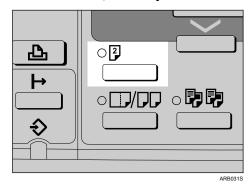


The indicator goes on.


2 Select the duplex mode using [▲] or [▼], and then press the [OK] key.

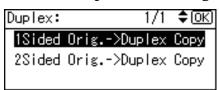

3 Select the original orientation using [▲] or [▼], and then press the [OK] key.

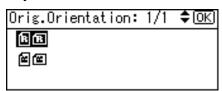

Select the duplex orientation using [▲] or [▼], and then press the [OK] key.

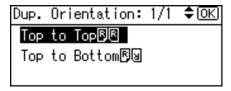

The "Programmed" message appears.

5 Place the originals.

When placing originals on the exposure glass, start with the first page to be copied. When placing originals in the ADF or ARDF, set the first page on the top.

6 Press the [Start] key.

When placing originals on the exposure glass, press the [#] key after all originals are scanned.

- Note
- \square The paper weight that can be used with duplex copying is 64-90 g/m² (20-24 lb.)
- ☐ To cancel the Duplex function in step ☐, press the [Duplex] key again. Make sure the indicator goes off.
- ☐ To display the screens in steps 3 and 4, select [Always Specify] for [Orientation] with Copier Features in User Tools. If [Do not Specify] is selected, proceed to step **5**.
- ☐ You can change the margins of duplex copies.

"Duplex Margin", General Settings Guide

"Orientation", General Settings Guide

One-Sided Combine


Combines several pages to one side of a sheet.

There are four types of One-Sided Combine available.

#Important

- ☐ You cannot use the bypass tray with this function.
- ❖ 1 Sided 2 Pages → Combine 1 Side


Copies 2 one-sided originals to one side of a sheet.

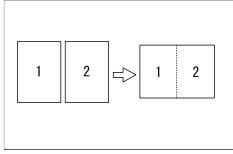

GCSHVY7J


❖ 1 Sided 4 Pages → Combine 1 Side

Copies 4 one-sided originals to one side of a sheet.

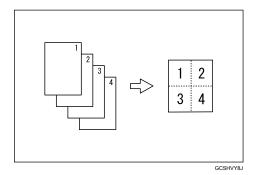


❖ 2 Sided 1 Page → Combine 1 Side

Copies 1 two-sided original to one side of a sheet.

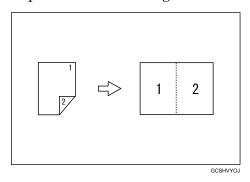

❖ 2 Sided 2 Pages → Combine 1 Side

Copies 2 two-sided originals to one side of a sheet.

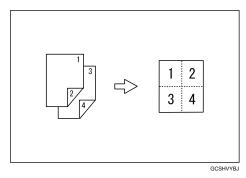


Note


☐ An optional ARDF is required to scan two-sided originals.

Original orientation and image position of Combine

Open to left (\square) originals

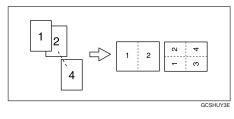


Open to top (\square) originals

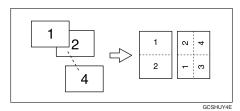


51

Placing originals (originals placed in the ADF or ARDF)


• Originals read from left to right

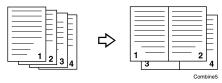

• Originals read from top to bottom

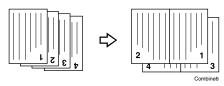


1 Press the [Combine/Series] key.

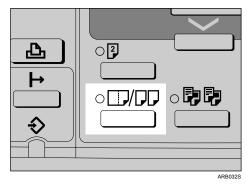


The indicator goes on.

2 Select the combine mode using [▲] or [▼], and then press the [OK] key.

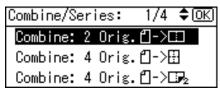


3 Select the original orientation using [▲] or [▼], and then press the [OK] key.

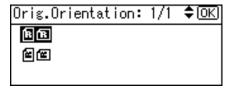

The "Programmed" message appears.

1 Select the paper size using **(**▲**)** or **(**▼**)**, and then press the **(**OK**)** key.

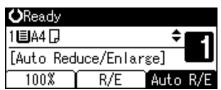

- **5** Place the originals, and then press the [Start] key.
 - Note
 - ☐ To cancel the One-Sided Combine function in step ①, press the [Combine/Series] key again. Make sure the indicator goes off.
 - ☐ To display the screen in step ③, select [Always Specify] for [Orientation] with Copier Features in User Tools. If [Do not Specify] is selected, proceed to step ④.

"Orientation", General Settings Guide

Two-Sided Combine (Type 2 only)

Combines various pages of originals onto one two-sided sheet.


There are four types of Two-Sided Combine.

∰Important

☐ You cannot use the bypass tray with this function.


$\ \, \textbf{1 Sided 4 Pages} \rightarrow \textbf{Combine 2 Sides}$

Copies 4 one-sided originals to one sheet with two pages per side.

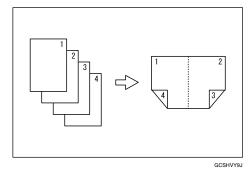

❖ 1 Sided 8 Pages → Combine 2 Sides


Copies 8 one-sided originals to one sheet with four pages per side.

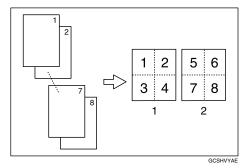

- 1 Front
- 2 Back


\clubsuit 2 Sided 2 Pages \rightarrow Combine 2 Sides

Copies 2 two-sided originals to one sheet with two pages per side.

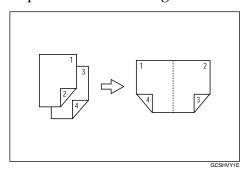


\clubsuit 2 Sided 4 Pages \rightarrow Combine 2 Sides

Copies 4 two-sided originals to one sheet with four pages per side.

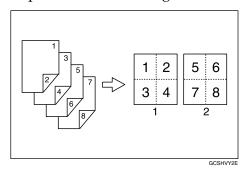


- 1 Front
- 2 Back

1 Press the [Combine/Series] key.

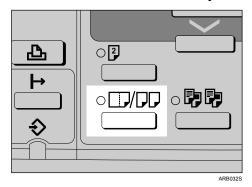


The indicator goes on.


2 Select the combine mode using [▲] or [▼], and then press the [OK] key.

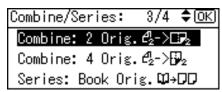

3 Select the original orientation using [▲] or [▼], and then press the [OK] key.

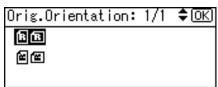


Select the duplex orientation using [▲] or [▼], and then press the [OK] key.

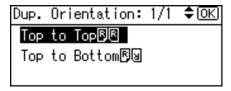

The "Programmed" message appears.

5 Select the paper size using [▲] or [▼], and then press the [OK] key.

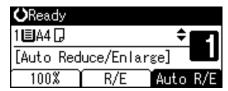

1 Place the originals, and then press the [Start] key.

Note

- ☐ An optional ARDF is required to scan 2-sided originals.
- ☐ To cancel the Two-Sided Combine function in step ①, press the [Combine/Series] key again. Make sure the indicator goes off.
- ☐ To display the screens in steps ② and ②, select [Always Specify] for [Orientation] with Copier Features in User Tools. If [Do not Specify] is selected, proceed to step ⑤.

₽ Reference

"Orientation", General Settings Guide

Series Copies

You can separately copy the front and back of a two-sided original or two facing pages of a bound original onto two sheets.

#Important

☐ See the following table for original and paper sizes when using a 100% ratio with the Book→1 Sided function.

❖ Metric version

Original	Paper for 1-sided copy
A3D	$A4 \square \times 2$ sheets
B4 JIS□	B5 JIS × 2 sheets
A4D	A5 \square × 2 sheets


❖ Inch version

Original	Paper for 1-sided copy
11" × 17"□	$8^{1}/_{2}$ " × 11" \square × 2 sheets
8 ¹ / ₂ " × 11"□	$5^1/_2$ " \times $8^1/_2$ " \square \times 2 sheets

- \square You cannot use the Book \rightarrow 1 Sided function from the ADF or ARDF.
- ☐ You cannot use the bypass tray with the Book→1 Sided function.


❖ Book → 1 Sided

Copies two facing pages of a bound original (book) to two separate pages.

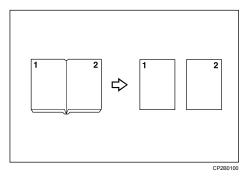


❖ 2 Sided→1 Sided

Copies each side of a two-sided original to two separate pages.

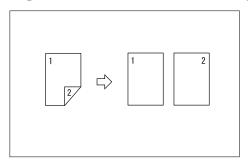

1 Press the [Combine/Series] key.

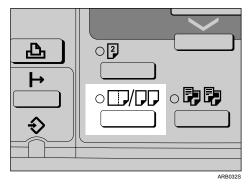


The indicator goes on.

Select [Series: Book Orig.] or [Series:2Sided Orig.] using [▲] or [▼], and then press the [OK] key.


Combine/Series: 3/4 ♣OK)
Combine: 2 Orig. 42->□42
Combine: 4 Orig. 42->□42
Series: Book Orig. 100+□□

When selecting [Series: Book Orig.], proceed to step 4.

Select the original orientation using [▲] or [▼], and then press the [OK] key.

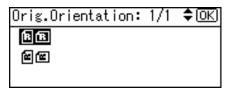


The "Programmed" message appears.

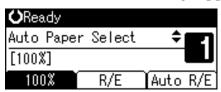

Proceed to step **5**.

4 Select the paper size using [▲] or [▼], and then press the [OK] key.

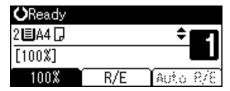

- Place the originals, and then press the [Start] key.
 - Note
 - \square An optional ARDF is required to scan 2-sided originals.

 - ☐ To display the screen in step ③, select [Always Specify] for [Orientation] with Copier Features in User Tools. If [Do not Specify] is selected, proceed to step ④.

"Orientation", General Settings Guide

3. Appendix

Combination Chart

This chapter describes the copy machine's specifications and the function compatibility.

The combination chart given below shows which modes can be used together.

Blank: These modes can be used together.

- × : These modes cannot be used together. The first mode selected will be the mode you are working in.
- : These modes cannot be used together. The second mode selected will be the mode you are working in.

The following shows the combinations of functions.

\setminus							Se	conc	l mo	de s	elec	ted					
	Functions	Auto Paper Select	Custom Size Originals	Regular Size Originals	Bypass Tray	Manual Image Density	Text Mode	Photo Mode	Auto Reduce/Enlarge	Zoom	Combine	Book → 1 sided	2 sided → 1 sided	1 sided → 2 sided	2 sided → 2 sided	Sort	Rotate Sort
	Functions																
	Auto Paper Select		×	×	•				•		•	•					
	Custom Size Originals	×		•									*1		*1		
	Regular Size Originals	×	•														
	Bypass Tray	•							*3		*3	*3		*3	*3	*2	×
g	Manual Image Density					/											
cte	Text Mode						/	•									
selected	Photo Mode						•	\setminus									
	Auto Reduce/Enlarge	×			*3				\setminus	•	*4	•					
First mode	Zoom								•		•						
ĮΕ	Combine	×			*3							•	•	•	•		
irst	Book → 1 sided	×			*3				×		•		•	•	•		
[E	2 sided \rightarrow 1 sided		*1								•	•		•	•		
	1 sided \rightarrow 2 sided				*3						•	•	•		•		
	2 sided \rightarrow 2 sided		*1		*3						•	•	•	•			
	Sort				*2												•
	Rotate Sort				X											•	

 $^{^{*1}}$ Originals that are 433 mm or longer cannot be used with the two-sided original function.

*2 This combination is not available on paper that is 433 mm or longer.

^{*3} An error message appears if you specify these combinations. You cannot make copies until one of the functions is canceled.

^{*4} Auto Reduce/Enlarge can be set if the Combine function is selected first.

Supplementary Information

The following describes the detailed specifications of the respective functions.

Bypass Tray Copy

- The following paper sizes can be selected. A3\$\oplus\$, A4\$\oplus\$\oplus\$, A5\$\oplus\$\oplus\$, B4 JIS\$\oplus\$, B5 JIS\$\oplus\$\oplus\$, B6 JIS\$\oplus\$, 11" \times 17"\$\oplus\$, $8^1/_2$ " \times 13"\$\oplus\$, $8^1/_2$ " \times 13"\$\oplus\$, $8^1/_2$ " \times 13"\$\oplus\$, $8^1/_2$ " \times 11"\$\oplus\$\oplus\$, $7^1/_4$ " \times 10^1/2"\$\oplus\$\oplus\$, $5^1/_2$ " \times 8^1/2"\$\oplus\$, 8K\$\oplus\$, 16K\$\oplus\$\oplus\$\oplus\$, C6 Envelope\$\oplus\$, C5 Envelope\$\oplus\$, DL Envelope\$\oplus\$, $4^1/_8$ " \times 9^1/2"\$\oplus\$, $3^7/_8$ " \times 7^1/2"\$\oplus\$\oplus\$
- When the beeper is turned off, it will not sound if you insert paper into the bypass tray.

❖ Preset Reduce/Enlarge

- You can select one of seven preset ratios (three enlargement ratios, four reduction ratios). To change a ratio assigned to Preset Reduce/Enlarge, use Copier Features in User Tools.
- Copies can be reduced or enlarged as follows:

Metric version

Ratio (%)	Original → Paper size
200 *1 (enlarge area by 4)	A5→A3
141 *1 (enlarge area by 2)	A4→A3, A5→A4
122 *1	F→A3, A4→B4 JIS
115	B4 JIS→A3
93 *1	
87	
82 *1	F→A4, B4 JIS→A4
71 *1 (reduce area by 1/2)	A3→A4, A4→A5
65	A3→F
50^{*1} (reduce area by $^{1}/_{4}$)	A3→A5, F→A5

^{*1} Default settings

Inch version

Ratio (%)	Original \rightarrow Paper size
200 (enlarge area by 4)	$5^1/_2$ " × $8^1/_2$ " $\rightarrow 11$ " × 17"
155 *1 (enlarge area by 2)	$5^1/_2$ " $\times 8^1/_2$ " $\to 8^1/_2$ " $\times 14$ "
129 *1	$8^{1}/_{2}" \times 11" \rightarrow 11" \times 17"$
121 *1	$8^{1}/_{2}$ " × 14" \rightarrow 11" × 17"
93 *1	
85	$F \rightarrow 8^1/_2" \times 11"$
78 *1	$8^{1}/_{2}$ " × 14" \rightarrow $8^{1}/_{2}$ " × 11"
73	$11" \times 15" \rightarrow 8^{1}/_{2}" \times 11"$
65 *1	$11" \times 17" \rightarrow 8^{1}/_{2}" \times 11"$
50^{*1} (reduce area by $^{1}/_{4}$)	$11" \times 17" \rightarrow 5^{1}/_{2}" \times 8^{1}/_{2}"$

^{*1} Default settings

 You can select a ratio regardless of the size of an original or paper. With some ratios, parts of the image might not be copied or margins will appear on copies.

❖ Zoom

- The reproduction ratios you can specify are 50–200 %.
- You can select a ratio regardless of the size of an original or paper. With some ratios, parts of the image might not be copied or margins will appear on copies.

❖ Sort, Rotate Sort

• Paper sizes and orientations that can be used in the Rotate Sort function are as follows:


A4 $\square \square$, B5 JIS $\square \square$, A5* $\square \square$, 8¹/₂" × 11" $\square \square$, 5¹/₂" × 8¹/₂"* $\square \square$, 16K $\square \square$ * An optional paper tray unit is required.

❖ Duplex (Type 2 only)

- The following paper sizes and orientations can be duplexed. A3 \square , B4 JIS \square , A4 \square , B5 JIS \square , A5 \square , A5 \square , 11" × 17" \square , 8¹/₂" × 14" \square , 8¹/₂" × 13" \square , 8¹/₂" × 11" \square , 8¹/₄" × 14" \square , 8¹/₄" × 13" \square , 8" × 13" \square , 7¹/₄" × 10¹/₂" \square , 8K \square , 16K \square
- You cannot use the following paper with this function:
 - Paper smaller than A5 $(7^1/_4" \times 10^1/_2")$
 - Paper thicker than 90 g/m² (24 lb.)
 - Paper thinner than 64 g/m² (17 lb.)
 - Translucent paper
 - Label paper (adhesive labels)
 - OHP transparencies
 - Thick paper
 - Envelopes
- When an odd number of originals is placed in the ADF or ARDF, the back of the last page of copied paper is blank.
- During copying, the image is shifted to allow for the binding margin.

Combine

- In this mode, the machine selects the reproduction ratio automatically. This reproduction ratio depends on paper size and the number of originals.
- The selectable reproduction ratios are 50–200 %.
- If the calculated ratio is under the minimum ratio, it is automatically adjusted to within the available range. However, with some ratios, parts of the image might not be copied.
- If the orientation of originals is different from that of the paper, the machine will automatically rotate the image by 90° to make copies properly.
- If the number of originals placed is less than the number specified for combining, the last page segment is left blank as shown.

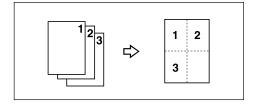

❖ Duplex Margin (Type 2 only)

- If you set a binding margin that is too wide, parts of the image may not be copied.
- When making copies using the Combine function, a binding margin is added to copies after the images are combined.

INDEX

Copy Paper, 38 Custom size originals, 17, 20 1 Sided 2 Pages to Combine 1 Side, 50 Custom Size Paper, 28 1 Sided 4 Pages to Combine 1 Side, 50 D 1 Sided 4 Pages to Combine 2 Sides, 53 1 Sided 8 Pages to Combine 2 Sides, 53 Darker key, 36 1 Sided to 2 Sided, 47 Detectable sizes, 9 2 Sided 1 Page to Combine 1 Side, 50 Display, 3 2 Sided 2 Pages to Combine 1 Side, 50 Document guide, 14 2 Sided 2 Pages to Combine 2 Sides, 53 Duplex, 47, 60 2 Sided 4 Pages to Combine 2 Sides, 53 Duplex key, 47 2 Sided to 1 Sided, 56 Duplex Margin, 5, 60 2 Sided to 2 Sided, 47 Duplex Mode Priority, 5 Α Е ADF, 1, 9, 14 Enlarge, 40, 44 Adjusting Image Density, 36 Envelopes, 32 APS/ Auto R/E Priority, 5 Escape key, 4 ARDF, 1, 2, 9, 14 Exposure glass, 9, 13 Auto Document Feeder, 1 Extender, 25 Auto Paper Select, 9, 38, 39 Auto Reduce/Enlarge, 44 Auto Tray Switching, 5 Functions Requiring Optional Configurations, 2 В Н Base Point, 40 Basic procedure for making copies, 23 Horizontal size, 17, 20, 25, 28 Book to 1 Sided, 56 How to Read This Manual, 1 Bypass Tray, 18, 25 Bypass Tray Copy, 60 С Image Position of Combine, 50 Initial copy display, 3, 23 Changing the Number of Sets, 47 Combination Chart, 59 K Combine, 50, 53, 60 Keys on the Control Panel, 4 Combine/Series key, 51, 53, 56 Combining Multiple Pages onto a Single Page, v Control Panel, 4 Copier Features, 5 Letterhead Setting, 5 Copy Functions, 36 Lighter key, 36 Copying, 23 Limit mark, 14 Copying from the Bypass Tray, 25 Loading Paper on the Bypass Tray, 25

Copying onto Custom Size Paper, 28 Copying onto Envelopes, vi, 32 Copying onto OHP transparencies, 29 Copying onto Regular Size Paper, 27 Copying onto Thick Paper, 30 Copying Originals Such as Books, vi

Copy key, 23

M

Manual Paper Select, 38, 39 Maximum scanning area, 9 Max. Number of Sets, 5 Menu Protect, 5 Missing Image Area, 11

Ν

Non-compatible originals for the ADF or ARDF, 8 Number keys, 17, 20, 23, 28, 43, 45, 47

0

OHP transparencies, 29
OK key, 4
One-Sided Combine, 50
Orientation, 5
Orientation of Originals and Envelopes, 32
Original Count Display, 5
Original Orientation, 12, 47, 50
Originals, 7
Original size, 7, 9
Original Type key, 37
Original Type Setting, 5, 37
Original weight, 7

Ρ

Paper, 38
Paper guide release lever, 25
Paper guides, 25
Paper Tray, 16
Paper Tray Unit, 2
Photo, 37
Placing custom size originals, 17, 20
Placing Originals, 7, 12
Placing Originals in the ADF or ARDF, 14
Placing Originals on the Exposure Glass, 13
Placing regular size originals, 16, 18
Positioning mark, 9
Preset Reduce/Enlarge, 40, 60
Preset R/E Priority, 5
Printable area, 11, 32

R

Ratio, 42, 43, 60 Reading the Display, 4 Recommended originals, 7 Reduce, 40, 44 Regular size originals, 16, 18 Regular Size Paper, 27 Reproduction Ratio, 5 Rotated Copy, 39 Rotate Sort, 5, 45, 60

S

Scroll keys, 4, 42
Selecting a Paper Tray, 16
Selecting Copy Paper, 38
Selecting the Bypass Tray, 18
Selection keys, 4
Series Copies, 56
Sizes Detectable by the Auto Paper Select, 8
Sizes difficult to detect, 10
Sort, 45, 60
Sort key, 45
Supplementary Information, 60
Symbols, 1

T

Text, 37 Thick paper, 30 Two-Sided Combine, 53 Types of Duplex Copies, iii

U

User Tools, 5 Using the Keys on the Control Panel, 4

V

Vertical size, 17, 20, 25, 28

W

What You Can Do with This Machine, iii

Ζ

Zoom, 42,60

64 GB GB B843-7551



Declaration of Conformity

"The Product complies with the requirements of the EMC Directive 89/336/EEC and its amending directives and the Low Voltage Directive 73/23/EEC and its amending directives."

In accordance with IEC 60417, this machine uses the following symbols for the main power switch:

- I means POWER ON.
- () means STAND BY.

Trademarks

Acrobat® is a registered trademark of Adobe Systems Incorporated.

Other product names used herein are for identification purposes only and might be trademarks of their respective companies. We disclaim any and all rights to those marks.



