


Quick Reference Copy Guide

⇒Please put this guide above your machine <=

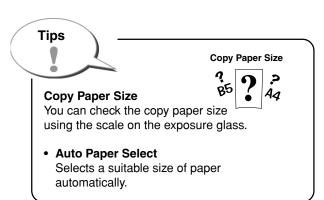

1. Indicators Display errors and machine status.

2. Display

Displays operation status and messages. 3. Selection keys

Correspond to items on the display. Press to select the corresponding item.

4. Scroll keys

Press to select an item.

5. [User Tools/Counter] key

Press to change default or operation parameters according to require-

6. [Clear Modes] key

Press to clear the current settings. 7. [Clear/Stop] key Clear: clears an entered numeric value.

Stop: stops copying. 8. Main power indicator

Lights when the main power switch is turned on.

9. Operation switch (On indicator)

Press to turn the power on. The On indicator lights. To turn the power off.

10. [Duplex] key (Type 2 only) Makes two-sided copies

11. [Combine/Series] key Press to make combine or series

12. [Sort] key

Automatically sorts copies.

13. [Lighter] and [Darker] key

Press to change the image density setting. Select the image density in five increments, Lighter to Darker.

14. [Escape] key

Press to cancel an operation or return to the previous display.

15. [Original Type] key

Press to select the original type registered with [Original Type 1 (Text)] or [Original Type 2 (Photo)]. When the original type is selected, the corresponding indicator lights.

16. [OK] key


Press to set a selected item or entered


numeric value. 17. Number keys

Press to enter numeric values.

18. [Start] key

Press to start scanning or sending.

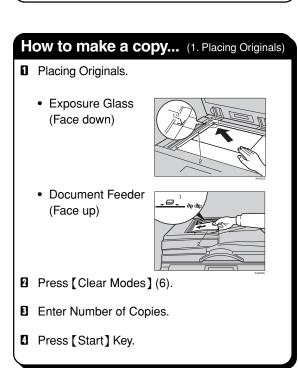

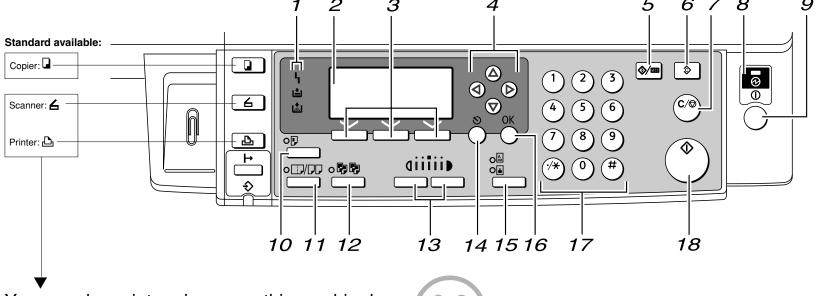

You can also print and scan on this machine! Please ask your sales person for these options.



