 
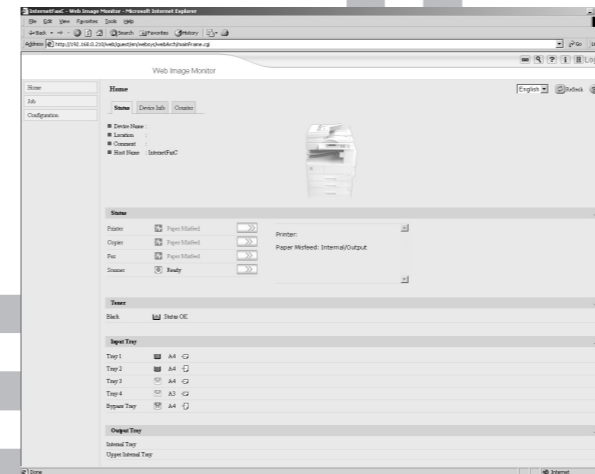 
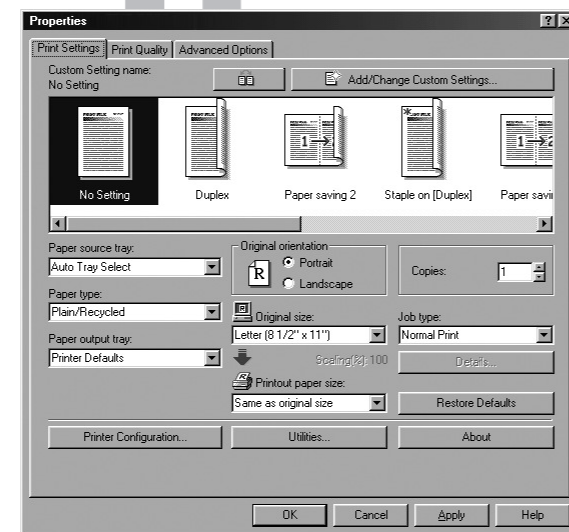 


## Quick Reference Printer Guide

⇒ Please use this guide from behind your PC ⇐

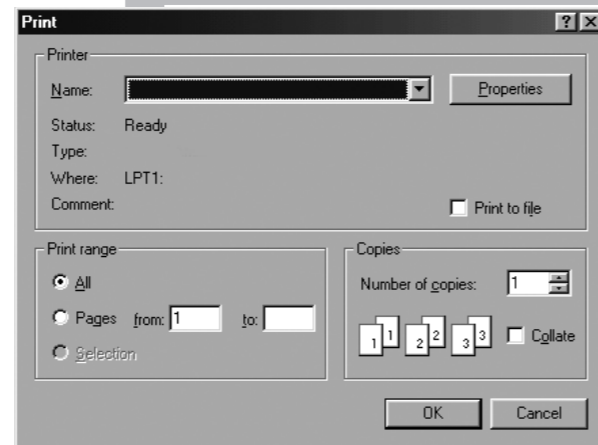

### How to install a printer driver...

- 1 Insert the CD-ROM 'Printer Drivers and Utilities' into the CD-ROM drive.
- 2 Select a language and click [OK].
- 3 Select [Quick Install]. (PCL and RPCS printer driver plus DeskTopBinder-SmartDeviceMonitor for Client are installed)
- 4 Click [I accept the agreement], and then click [Next >].
- 5 Select the required model.
- 6 Click [Install].
- 7 Click [Finish], click [Exit].

### How to prepare printing...

- 1 Select [Start], [Settings], [Printers].
- 2 Select the required printer and RPCS driver by right-click.
- 3 Select [Set as Default Printer].
- 4 Select [Printing Preferences...].
- 5 You get a message 'Configure...', press [OK].
- 6 Select the options in [Change Accessories] that have been installed on the machine and press [OK].
- 7 The next screen opens. Set original paper size.
- 8 Press [Add/Change Custom Settings...]. Make your settings under [Setup], [Edit], [Finishing] and [Misc.].
- 9 Press [Save as], give custom setting a name and press [OK].

### How to print...

- 1 Open your document.
- 2 - Press directly the 'Print' icon, or  
- Press [File], [Print], [Properties].
- 3 Choose one of the pre-settings or make a new setting.
- 4 Press [OK].
- 5 Press [Number of copies].
- 6 Press [OK].

### How to use Web Image Monitor...

- 1 Start a Web browser.
- 2 Enter the IPv4 address of your machine as a URL.
- 3 Choose from one of the following functions:
  - Home
  - Job
  - Configuration

#### Why use it?

- To have access to the machine anywhere via the web.
- To manage certain functions from your pc, which is easier to use.

### How to monitor your machine in the network...

- ! Use SmartDeviceMonitor, which is automatically installed with your printer drivers.
- 1 Right-click the green PC icon at the bottom of your screen.
  - 2 Select [Properties], [Option...], [Network Devices] and press [Browse...].
  - 3 Select your machine and press [OK].
  - 4 Select a machine in [Printers Folder] and select [To be monitored]. Select [Displayed on Task Bar].
- ! If you select this machine from the SmartDeviceMonitor icon, you can see the [Status], [Configuration] and [Job History]. Next time you print, you get a message on your pc in case of any failure.