Quick Reference Copy Guide

⇒Please put this guide above your machine <=

- 1. Indicators
- 2. Display panel

3. Selection keys

Correspond to items on the display. Press to select the corresponding item.

4. Scroll keys

Press to select an item

- []: scrolls upward
- [▼]: scrolls downward
- [►]: scrolls right [◀]: scrolls left

5. [User Tools/Counter] key 6. [Clear Modes] key

Press to clear the current settings.

7. [Clear/Stop] key

- Clear: clears an entered numeric value.
- Stop: stops a job in progress, such as scanning, faxing, or printing.
- 8. Main power indicator 9. Operation switch
- 10. [Start] key

Press to start copying, printing, scanning, or faxing.

11. [#] key

12. Number keys

13. [OK] key

Press to set a selected item or an entered numeric value.

14. [Original] key 15. [Escape] key

Press to cancel operation or return to

the previous display.

16. [Lighter] key, [Darker] key 17. [Sort] key

 
Press to automatically sort printed


18. [Duplex] key


Press to make 2-sided copies.


19. [Combine/Series] key


- · Combine: combines and prints the pages of a multiple-sheet original onto a single-
- · Series: copies each side of a 2-sided original to two separete pages.




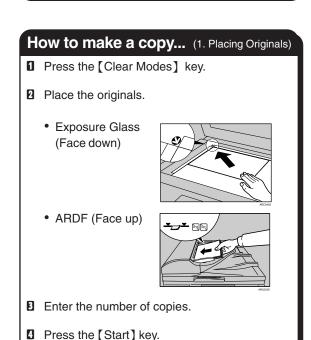

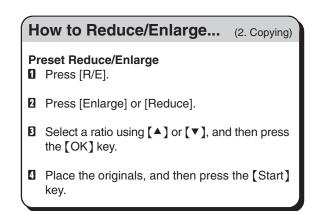

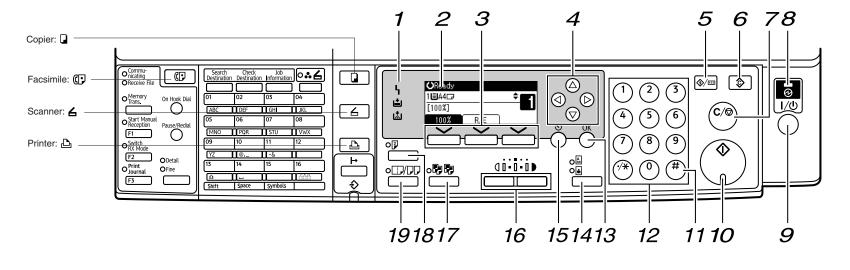

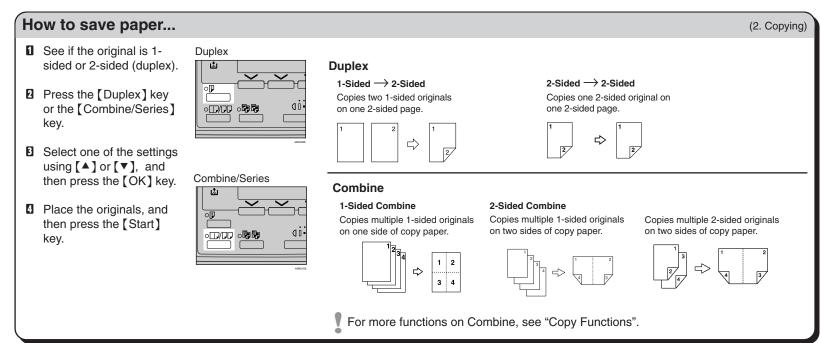

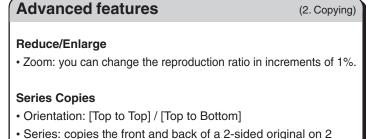

sheets.

