Quick Reference Printer Guide

\Rightarrow Please use this guide from behind your PC \Leftrightarrow

? ×

How to install a printer driver...

- Insert the CD-ROM 'Printer Drivers and Utilities' into the CD-ROM drive.
- 2 Select a language and click [OK].
- **B** Select [Quick Install]. (PCL and RPCS printer driver plus DeskTopBinder-SmartDeviceMonitor for Client are installed)
- Click [I accept the agreement], and then click [Next >].
- Select the required model.
- Click [Install].
- 2 Click [Finish], click [Exit].

ال المراجع (ع) المراجع (المراجع (ع) المراجع (المراجع (ع) المراجع (ع) المر
ال المراجع (عالم) المراجع (عالم) المراجع (عالم)
ال (المراجع ال المراجع المراجع ا
ال (المراجع ال المراجع المراجع ا
() () () () () ()
ا (موجع ا
E Q C
English I
English 🖉
English 🖬
English 🗶 [

How to prepare printing...

- **1** Select [Start], [Settings], [Printers].
- 2 Select the required printer and RPCS driver by right-click.
- B Select [Set as Default Printer].
- Select [Printing Preferences...].
- J You get a message 'Configure...', press [OK].
- **G** Select the options in [Change Accessories] that have been installed on the machine and press [OK].
- **1** The next screen opens. Set original paper size.
- Dress [Add/Change Custom Settings...]. Make your settings under [Setup], [Edit], [Finishing] and [Misc.].
- Press [Save as], give custom setting a name and press [OK].

How to print...

- Open your document.
- 2 Press directly the 'Print' icon. or - Press [File], [Print], [Properties].
- **B** Choose one of the pre-settings or make a new setting.
- Press [OK].
- D Press [Number of copies].
- Press [OK].

- on Task Bar].



How to use Web Image Monitor...

- Start a Web browser.
- 2 Enter the IPv4 address of your machine as a URL.
- **B** Choose from one of the following functions: Home
- Job
- Configuration

Why use it?

- To have access to the machine anywhere via the web. • To manage certain functions from your pc, which is easier
- to use.

How to monitor your machine in the network...

Use SmartDeviceMonitor, which is automatically installed with your printer drivers.

1 Right-click the green PC icon at the bottom of your screen.

2 Select [Properties], [Option...], [Network Devices] and press [Browse...].

B Select your machine and press [OK].

Select a machine in [Printers Folder] and select [To be monitored]. Select [Displayed]

If you select this machine from the SmartDeviceMonitor icon, you can see the [Status], [Configuration] and [Job History]. Next time you print, you get a message on your pc in case of any failure.