



## **Quick Reference Copy Guide**

# ⇒Please put this guide above your machine <



### **Copy Paper Size**

You can check the copy paper size using the scale on the exposure glass.

### **Auto Paper Select**

Selects a suitable size of paper automatically.

1. [Combine/Series] key

Press to make combine or series copies.

### 2. [Duplex] key

Makes two-sided copies. (Some models do not have the [Duplex] key.)

### 3. [ID Card Copy] key

Press to enter ID card copy mode for the current job.

#### 4. Indicators

Display errors and machine status. 5. Display

Displays operation status and messages.

#### 6. Scroll keys

Press to select an item

#### [Reset] key

9 On indicator

Press to clear the current settings. 8. [User Tools/Counter] key

### Press to change default or operation parameters according to requirement.

The On indicator lights when the operation switch is turned on.

### 10. Main power indicator

Lights when the main power switch is turned on

#### 11. Operation switch

Press to turn the power on. The On indicator lights. To turn the power off, press

### 12. [Sort] key

Automatically sorts copies.

### 13. [Lighter] and [Darker] kev Press to change the image density setting. Select the image density in five increments, Lighter to Darker.

### 14. [Original Type] key

Press to select the original type registered with [Original Type 1 (Text)] or [Original Type 2 (Photo)]. When the original type is selected, the corresponding indicator lights.

### 15. Selection keys

Correspond to items on the display. Press to select the corresponding item. 16. [Escape] key

### Press to cancel an operation or return

to the previous display.

### 17. [OK] key

Press to set a selected item or entered numeric value

### 18. Number keys

Press to enter numeric values.

### 19. [Start] key

Press to start scanning or sending. 20. [Clear/Stop] key

Clear: clears an entered numeric value

Stop: stops copying.











