

# **UNIX Supplement**



Read this manual carefully before you use this machine and keep it handy for future reference. For safe and correct use, be sure to read the Safety Information in "About This Machine" before using the machine.

#### Introduction

This manual contains detailed instructions and notes on the operation and use of this machine. For your safety and benefit, read this manual carefully before using the machine. Keep this manual in a handy place for quick reference.

#### Important

Contents of this manual are subject to change without prior notice. In no event will the company be liable for direct, indirect, special, incidental, or consequential damages as a result of handling or operating the machine.

#### Notes

Some illustrations in this manual might be slightly different from the machine.

#### Trademarks

UNIX is a registered trademark in the United States and other countries, licensed exclusively through X/Open Company Limited.

PostScript and Acrobat are registered trademarks of Adobe Systems, Incorporated.

Sun, SunOS and Solaris are trademarks or registered trademarks of Sun Microsystems, Inc. in the United States and other countries.

HP-UX is a registered trademark of Hewlett-Packard Company.

LINUX is a trademark of Linus Torvalds.

RED HAT is a registered trademark of Red Hat, Inc.

Other product names used herein are for identification purposes only and might be trademarks of their respective companies. We disclaim any and all rights to those marks.

# TABLE OF CONTENTS

Manuals for This Printer	.1
How to Read This Manual	.3
Symbols	.3

### 1. UNIX Configuration

Before Setup	5
Using the lp / lpr commands	
Using the rsh / rcp / ftp commands	
Using the Installation Shell Script	
Assigning the IP Address	
Executing the Installation Shell Script	
After Executing the Installation Shell Script	
Printing Method.	
Printing with lpr, lp	
Printing with rsh, rcp, ftp	
Printer Status	
Viewing the Print Job Status with Ipq and Ipstat	
Viewing the Printer Status with rsh and ftp	
Copying Information to a File	
Specifying the Device Option	
Configuring the Device Option	
Printer Language	
Text Printing	23
Input Tray	23
Paper Size	24
Paper Type	25
Output Tray	
Copies	
Duplex Printing	
Binding	
Orientation	
Resolution	
Staple	
Symbol Set	
INDEX	32

# **Manuals for This Printer**

Refer to the manuals that are relevant to what you want to do with the machine.

#### ∰Important

- □ Media differ according to manual.
- **□** The printed and electronic versions of a manual have the same contents.
- □ Adobe Acrobat Reader/Adobe Reader must be installed in order to view the manuals as PDF files.
- Depending on which country you are in, there may also be html manuals. To view these manuals, a Web browser must be installed.

#### \* About This Machine

Be sure to read the Safety Information in this manual before using the machine.

This manual provides an introduction to the functions of the machine. It also explains the control panel, preparation procedures for using the machine, how to enter text, and how to install the CD-ROMs provided.

#### General Settings Guide

Explains User Tools settings, and Address Book procedures such as registering fax numbers, e-mail addresses, and user codes. Also refer to this manual for explanations on how to connect the machine.

#### Troubleshooting

Provides a guide to solving common problems, and explains how to replace paper, toner, and other consumables.

#### Security Reference

This manual is for administrators of the machine. It explains security functions that you can use to prevent unauthorized use of the machine, data tampering, or information leakage.

For enhanced security, we recommend the following settings.

- Install the Server Certificate.
- Enable SSL(Secure Sockets Layer) Encryption.
- Change the user name and password of the administrator using Web Image Monitor.

For details, see "Setting Up the Machine", Security Reference.

Be sure to read this manual when setting the enhanced security functions, or user and administrator authentication.

#### Copy Reference

Explains Copier functions and operations. Also refer to this manual for explanations on how to place originals.

#### Facsimile Reference

Explains Facsimile functions and operations.

#### Printer Reference

Explains Printer functions and operations.

#### Scanner Reference

Explains Scanner functions and operations.

#### Network Guide

Explains how to configure and operate the machine in a network environment, and use the software provided.

This manual covers all models, and includes descriptions of functions and settings that might not be available on this machine. Images, illustrations, and information about operating systems that are supported might also differ slightly from those of this machine.

#### Other manuals

- Manuals for This Machine
- Safety Information
- Quick Reference Copy Guide
- Quick Reference Fax Guide
- Quick Reference Printer Guide
- Quick Reference Scanner Guide
- PostScript 3 Supplement
- UNIX Supplement (This manual)
- Manuals for DeskTopBinder Lite
  - DeskTopBinder Lite Setup Guide
  - DeskTopBinder Introduction Guide
  - Auto Document Link Guide

### 🖉 Note

- □ Manuals provided are specific to machine types.
- □ For "UNIX Supplement", please visit our Web site or consult an authorized dealer.
- "PostScript3 Supplement" and "UNIX Supplement" include descriptions of functions and settings that might not be available on this machine.

# How to Read This Manual

### Symbols

This manual uses the following symbols:

### A WARNING:

Indicates important safety notes.

Ignoring these notes could result in serious injury or death. Be sure to read these notes. They can be found in the "Safety Information" section of About This Machine.

### A CAUTION:

Indicates important safety notes.

Ignoring these notes could result in moderate or minor injury, or damage to the machine or to property. Be sure to read these notes. They can be found in the "Safety Information" section of About This Machine.

### Important

Indicates points to pay attention to when using the machine, and explanations of likely causes of paper misfeeds, damage to originals, or loss of data. Be sure to read these explanations.

### 🔗 Note

Indicates supplementary explanations of the machine's functions, and instructions on resolving user errors.

#### ₽ Reference

This symbol is located at the end of sections. It indicates where you can find further relevant information.

### []

Indicates the names of keys that appear on the machine's display panel.

### 

Indicates the names of keys on the machine's control panel.

# 1. UNIX Configuration

This section explains how to set up a network printer and check print status using UNIX.

# **Before Setup**

### ∰Important

**D** To print from a UNIX workstation, use a file that the printer supports.

Setting up varies depending on the printing commands. Make sure to make settings accordingly.

### Using the lp / lpr commands

**1** Use the installation shell script to register the device option, as well as the printer host name and the IP address.

See p.6 "Using the Installation Shell Script".

### **2** Start printing.

See p.15 "Printing Method".

### Using the rsh / rcp / ftp commands

### **1** Edit the host file to register the printer host name and the IP address.

### **2** Start printing.

See p.15 "Printing Method".

### ✓ Reference

See p.10 "After Executing the Installation Shell Script" for host file editing.

### 🔗 Note

If you cannot edit the host file, use the install shell script to register the host name.

# Using the Installation Shell Script

The installation shell script helps with the setup process. The installation shell script automates some of the tasks in configuring /etc/hosts, /etc/printcap; creating the spool directory for BSD UNIX; and running the lpadmin command for System V UNIX.

#### ∰Important

The installation shell script can be used on the following workstations: (it cannot be used with other types of workstations.)

- SunOS 4.x.x
- Solaris 2.x(Sun OS 5.x), Solaris 7, Solaris 8, Solaris 9
- HP-UX
- Redhat Linux
- UnixWare
- OpenServer

#### 🖉 Note

- Depending on security settings when installed, rsh / rcp /telnet may not be usable with Red Hat 7.1 or later. Change the security level to allows use of rsh / rcp /telnet. For details about how to change the setting, see the operating instructions for Red Hat.
- When you use NIS (Network Information Service) or DNS, you should configure the server before running the installation shell script.
- □ Installation shell script does not support CUPS. For details about the settings of CUPS, see the manual that comes with the UNIX workstation , and the CUPS' manual.
- When you use Solaris and HP-UX, you can set UNIX configuration with admintools that came with Solaris and HP-UX. For details about setting using the admintools, see the admintool's manual.

#### 

For details about the configuration utility of your operating system, see the manual that came with the utility.

### **Assigning the IP Address**

#### ∰Important

□ Configure the machine to use TCP/IP.

- Make sure that TCP/IP on the machine is set to active. (Default setting is active.)
- Assign an IP address to the machine and configure the other settings required for TCP/IP.

#### 

For details about how to make the above settings, see the manual that comes with this machine.

#### Checking the IP address configuration

Follow the procedure below to make sure that the IP address has been configured correctly.

• The following procedure uses the sample IP address: 192.168.15.16.

### Enter the following:

#### # ping 192.168.15.16

If the address has been configured correctly, the following message appears:

#### 192.168.15.16 is alive

If the address has been configured incorrectly, the following message appears:

#### no answer from 192.168.15.16

#### 🖉 Note

When you use NIS, the IP address and host name are written to /etc/hosts on the master server. When you use DNS, the information is written to a data file on the name server. After writing the host name and IP address to the file, make sure that the configuration is correct by pinging the host.

#### # ping host\_name

If the host name is registered with an IP address, the server can access the printer using its host name instead of its IP address.

### **Executing the Installation Shell Script**

Having configured the printer IP address, follow the procedure below to execute the installation shell script and set up the workstation printing environment.

#### ∰Important

- Before executing the installation shell script, the IP address, host name and printer name are required.
- □ The following procedures use the sample IP address: 192.168.15.16; sample host name: nphost; and sample printer name: np.
- Download the installation shell script from our Web site. Keep the installation shell script as local folders.

**1** Move to the directory that has kept the installation shell script.

**2** Run the installation shell script.

```
# sh ./install
```

Insert a period and slash before the current directory.

Enter a number to select the workstation operating system that you are using.

```
Network printer install shell
Select your workstation OS type
1.SunOS 4.x.x
2.Solaris 2.x, Solaris 7-9 (SunOS5.x)
3.HP-UX
4.UnixWare
5.Linux
6.OpenServer
7.Quit
Enter <1-7>:
2
```

If you select "7", the installation shell script ends.

#### Enter the printer's IP address.

Enter Printer host IP address <xxx.xxx.xxx> [return=skip]:
192.168.15.16

If the host name of the printer has already been configured, press the **[RE-TURN]** (**[ENTER]**) key. Nothing will be added to the /etc/hosts file.

#### **5** Enter the printer's host name.

#### Enter Printer host name : nphost

If no IP address was entered in step **4**, nothing is added to the /etc/hosts file.

### **6** Configure the printer name.

#### Enter logical printer name [default nphost\_prn]

If you want to use the default name, press the **[RETURN]** (**[ENTER]**) key. Enter a new name, if you want to use a different one.

The host name entered in step **5** followed by "\_prn" appears in "default".

### **U** Set the print option.

#### Enter remote printer name [default lp]:

- Press the **[RETURN]** (**[ENTER]**) key, and printing with PCL is enabled.
- If you want to set the device option, enter the option parameter.

#### Enter remote printer name [default lp]:tray=tray1

• If you enter "text", text printing is enabled. If you enter "text", printing with PCL is disabled.

#### Enter remote printer name [default lp]:text

You can enter up to 14 characters for HP-UX 11.0, 256 for Solaris 8 and Red Hat Linux 7.0, and 51 for Red Hat Linux 6.2.

After setup with the installation shell script is complete, and if you entered the IP address in step **4**, the following message appears:

hosts file is modified

### Perform a test print to make sure that the settings are correct.

# lpr -Pnp file\_name

```
# lp -d np file_name
```

- Note 🖉
- SunOS, UnixWare, and OpenServer appear on the screen, but they are not supported. Use Solaris, HP-UX, or Linux.
- □ The IP address will be added to the /etc/hosts file.
- □ The host name will be added to the /etc/hosts file.
- □ When printing with the lp command, use (\_) instead of (=) and (;) instead of (,) for operating systems that cannot use (=) and (,) such as Solaris 2.5 or later.

#### PReference

For details about how to download the installation shell script, contact your sales or service representative.

For details about lpr and lp, see p.15 "Printing Method".

For details about the device option, see p.20 "Specifying the Device Option".

#### Deleting the printer

To print using the lp or lpr command, the option specified when the installation shell script is executed is used. Change the option in accordance with the work-station you are using.

#### BSD UNIX workstation, Linux

Delete the printer entry from /etc/printcap, and then execute the installation shell script again. Select options during the setup process.

Alternatively, search the printer entry from /etc/printcap, and change its rp capability to option setting.

#### Solaris, HP-UX

Delete the printer entry, and then execute the installation shell script again. Select options during the setup process. To delete the printer entry, follow the procedure below:

① Stop the scheduler.

#### # /usr/sbin/lpshut

Delete the printer.

#### # /usr/sbin/lpadmin -x printer\_name

- ③ Restart the scheduler.
  - # /usr/lib/lpsched

### After Executing the Installation Shell Script

The printing environment is set up automatically when the installation shell script is executed.

This section describes setup contents when the installation shell script is executed under Red Hat Linux, Solaris, and HP-UX.

#### Linux

#### Adding the IP address and host name to the /etc/hosts file

The following line is added to the /etc/hosts file. The IP address and printer host name which you previously entered in the installation script will be used: **192.168.15.16** *nphost* **# Network Printer** 

• **192.168.15.16** is the IP address, **nphost** is the host name, from # to the end of the line is the comment.

#### 🖉 Note

- The /etc/hosts file contains a list of the IP addresses and host names of all hosts communicating on the network. Each entry is delimited with a space or a tab, and each line is separated with a return.
- □ If you do not use NIS or DNS, you must manually enter the IP address and host name of each workstation using the network printer in the /etc/hosts file.

#### ✤ Adding an entry to the /etc/printcap file

The following entry is added to the /etc/printcap file, which is the configuration for printing with the lpr command. In order to use the lpr command to print, you need to edit the /etc/hosts file, add an entry for the network printer to the /etc/printcap file and create a spool directory:

#### ##PRINTTOOL3## REMOTE

```
np |Network Printer:\
    :rm=nphost:\
    :rp=option:\
    :sd=/var/spool/lpd/npd:\
    :lf=/var/log/npd-errs:\
    :sh:\
    :mx#0:
```

#### 🖉 Note

- The /etc/printcap file is used to register the name and attributes of a printer. You must make an entry for the network printer in the /etc/printcap file of all workstations using the network printer.
- □ You must make an entry for each printer option when using the same printer.
- Each entry is separated with colons into several fields. The syntax is to begin each entry with a colon, followed by the entry, and then end with a colon, a back slash, and then a return.
- The first line of the field is the name of the printer. You use this name when logging on to a network printer from a workstation. You can define several different names by separating each name with the "|" character.
- □ The second and following lines contain the printer's attributes. Attributes are represented by two-character names referred to as capabilities. For details about capabilities, see the following table:

Capability	Explanation	Value required for the network printer.
rm	Host name of the printer.	The host name that was registered with the /etc/hosts file.
rp	Optional specification. "lp" will be assigned, if the option is not used.	Select options for printing. For de- tails about available options, see p.20 "Specifying the Device Op- tion".
sd	Path name of the spool directory.	Path name of the spool directory that is to be created.
lf	Path name of the log file.	Path name of the log file. For example /var/log/lpd-errs.
mx	Maximum file size which the di- rectory can copy. When set to 0, the size is unlimited. If nothing is en- tered, the size is set to 1024 k.	None, or something suitable.

#### Making the spool directory

Create a spool directory under /var/spool/lpd. The name of the spool directory should be the name of the printer followed by a "d".

#### 🖉 Note

- The spool directory is used to control data used for print jobs. For example, when a print job is created, a temporary copy of the data used is created in the spool directory. All workstations accessing the network printer need to have a spool directory for the network printer.
- A spool directory should be made for every network printer entry listed in the /etc/printcap file.
- The spool directory should normally be made under /var/spool/lpd and the name should match that listed under the sd capability in /etc/printcap. Change the owner and group of the directory to root and lp. The following examples show how to make a /var/spool/lpd/npd spool directory:

```
# cd /var/spool/lpd
# mkdir npd
# chown root npd
# chgrp lp npd
```

#### Making the log file

Error messages are logged to a file created in the /var/log directory. The log file name is the printer name followed by "d-errs".

#### 🔗 Note

- □ The log file is used for logging errors or warning messages by the UNIX workstation.
- The log file should be made for every network printer entry listed in the /etc/printcap file.
- The log file should normally be made under /var/log directory and the name should match that listed under the lf capability in /etc/printcap. Change the owner and group of the log file to root and lp. The following examples show how to make a /var/log/npd-errs file:

```
# cd /var/log
# touch npd-errs
# chown root npd-errs
# chgrp lp npd-errs
```

#### Solaris

#### \* Adding the IP address and host name to the /etc/hosts file

The following line is added to the /etc/hosts file. The IP address and printer host name previously entered in the installation script will be used.

```
192.168.15.16 nphost # Network Printer
```

• **192.168.15.16** is the IP address, **nphost** is the host name, from # to the end of the line is the comment.

#### 🖉 Note

- The /etc/hosts file contains a list of IP addresses and host names of all hosts communicating on the network. Each entry is delimited with a space or a tab, and each line is separated with a return.
- If you do not use NIS or DNS, you must manually enter the IP address and host name of each workstation using the network printer in the /etc/hosts file.

#### \* Registering the printer

The installation shell script registers the printer as a remote printer following the procedure below:

 If your workstation is Solaris 2.5.1, register the print server and print client to the print service.

#### # lpsystem -t bsd -R 0 -y Network Printer nphost

② Register the printer as a remote printer.

- # lpadmin -p np -s nphost!option -T dump -I any
- **np** is the printer name, **nphost** is the host name. For details about "option", see p.20 "Specifying the Device Option".

"lp" will be assigned, if the option is not used. When printing with the lp command, use (\_) instead of (=) and (;) instead of (,) for operating systems that cannot use (=) and (,) such as Solaris 2.5 or later.

③ If your workstation is Solaris 2.5.1, set the print job to active so it can be accepted by the print queue.

#### /usr/lib/accept np

④ If your workstation is Solaris 2.5.1, set the print job to active to print.

#### /usr/lib/enable np

#### HP-UX

#### Adding the IP address and host name to the /etc/hosts file

The following line is added to the /etc/hosts file. The IP address and printer host name previously entered in the installation script will be used:

#### 192.168.15.16 np # Network Printer

• **192.168.15.16** is the IP address, **np** is the host name, from **#** to the end of the line is the comment.

#### 🖉 Note

- The /etc/hosts file contains a list of IP addresses and host names of all hosts communicating on the network. Each entry is delimited with a space or a tab, and each line is separated with a return.
- If you do not use NIS or DNS, you must manually enter the IP address and host name of each workstation using the network printer in the /etc/hosts file.

#### Registering the printer

The installation shell script registers the printer as a remote printer following the procedure below:

① Stop the scheduler.

#### /usr/lib/lpshut

② Register the printer.

#### /usr/lib/lpadmin -Pnp -v/dev/null -mrmodel

#### -ormnphost -orpoption -ob3

- **np** is the printer name, **nphost** is the host name.
   For details about "option", see p.20 "Specifying the Device Option".
   "lp" will be assigned, if the option is not used.
- ③ Set the printer so the print job is listed in the print queue.

#### /usr/lib/accept np

④ Set the printer to perform the print job.

#### /usr/lib/enable np

Restart the scheduler.

#### /usr/lib/lpsched

## **Printing Method**

### Printing with lpr, lp

Execute one of the following commands according to type of workstation used:

#### BSD UNIX workstation, Linux

% lpr -Pprinter\_name file\_name [file\_name...] For example:

The printer name is np, file names are file1 and file2

% lpr -Pnp file1 file2

Solaris, HP-UX

% lp -d printer\_name file\_name [file\_name...] For example:

The printer name is np, file names are file1 and file2

% lp -d np file1 file2

#### 🖉 Note

- "printer\_name" is the name entered when executing the installation shell script.
- $\Box$  You can use wild cards (\* or ?) for the file name.
- □ The message "print session full" appears when the maximum number of print requests has been reached (max. 5 sessions —Job Spool setting available). You should try to print again when the number of requests is less than five. You can check the number of print requests using telnet. For details about using telnet, see the manual that comes with this machine.
- The number of print sessions does not change, whether you increase or reduce the machine's total memory size.

### Printing with rsh, rcp, ftp

You can also print using the rsh, rcp and ftp commands.

#### 🖉 Note

- **D** Print using a format the printer supports.
- □ You should try to print again when the number of requests is zero.
- □ The message "print session full" appears when the maximum number of print requests is reached.
- The maximum number of print sessions varies depending on the command. When using the rsh, rcp command, the maximum number of print sessions is 5; when using the ftp command, the number is 3.

#### rsh

#### % rsh host\_name print < file\_name

For example:

host name is nphost, file name is file1

```
% rsh nphost print < file1
```

#### 🖉 Note

**"host\_name**" is the name entered when executing the installation shell script.

□ If you are using HP-UX, use the remsh command instead of rsh.

#### rcp

#### To specify and print the file

% rcp file\_name [file\_name...] host\_name: For example: host name is nphost, file names are file1 and file2 % rcp file1 file2 nphost:

To print all of the files in a directory

```
% rcp -r directory_name host_name:
For example:
host name is nphost, directory name is directory
% rcp -r directory1 nphost:
```

#### 🖉 Note

- **"***histamine*" is the name entered when executing the installation shell script.
- $\Box$  You can use wild cards ( \* or ? ) for the file name.

#### ftp

Use the put or mput commands depending on the number of files to be printed.

#### ∰Important

□ File names cannot contain "=" or ",".

□ You can use wild cards (\* or ?) for the file name with the mput command.

#### ✤ To print one file

ftp> put file\_name

✤ To print several files

#### ftp> mput file\_name [file\_name...]

The following procedure shows an example of how to print a file using ftp. It is not possible to set options with the mput command:

**1** Start ftp using the IP address or host name of the printer.

#### % ftp IP\_address

Enter the user name. Skip the password, and then press the [RETURN] ([EN-TER]) key.

Name: Password:

#### **U** Set the file transfer mode to binary.

#### ftp> bin

If the file transfer mode is not set to binary, the image may not be printed correctly.

### 4 Print the file.

For example, to print the file named file1:

ftp> put file1

For example, to print the two files named file1 and file2:

#### ftp> mput file1 file2

#### **5** Exit ftp.

ftp> bye

# **Printer Status**

You can use the following commands to have information and printer status displayed or copied to a file.

Use the lpq or lpstat command to display the status of the printer or information about print jobs.

Use the rsh, rcp or ftp commands to get more detailed information from the printer.

### Viewing the Print Job Status with Ipq and Ipstat

```
BSD UNIX workstation, Linux
```

```
% lpq -Pprinter_name
For example: Printer name is np
```

% lpq -P*np* 

System V UNIX, Solaris, HP-UX

% lpstat -o printer\_name For example: Printer name is np

```
% lpstat -o np
```

```
🔗 Note
```

□ If you are using HP-UX, do not put a space between "-o" and "printer name".

### Viewing the Printer Status with rsh and ftp

Use the rsh or ftp command to display printer status or information about print jobs using specified parameters.

You can use these commands for BSD and System V UNIX.

If your workstation is HP-UX, use the remsh command instead of rsh.

```
rsh
% rsh host_name parameter
ftp
% ftp host_name
User user_name
password:
ftp> get parameter -
```

ParameterInformation returnedstatStatus of the printer.<br/>Information about print jobs.infoInformation about print jobs.prnlogRecord of the last 10 jobs printed.syslogRecord of messages about the network interface board.

Parameters that can be used with rsh, rcp and ftp :

#### 🖉 Note

- □ Leave the user name and password blank, and then press the **[RETURN]**(**[ENTER]**) key.
- "-" indicates standard output. Display will be displayed on screen if standard output has not been specified.

### **Copying Information to a File**

Use the rcp or ftp command to copy information about specified parameters to a file.

You can use these commands for BSD and System V UNIX.

#### ∰Important

□ The same parameters are used as those above.

```
rcp
% rcp host_name:parameter file_name
ftp
% ftp host_name
User: user_name
password:
ftp> get parameter file_name
```

#### 🖉 Note

Leave the user name and password blank, and then press the [RETURN] ([EN-TER]) key.

# Specifying the Device Option

With the following options, you can print with specific printer functions.

This manual covers all models, and therefore contains functions and settings that may not be available for your model.

### **Configuring the Device Option**

#### ∰Important

- The optional character strings the printer can recognize contain a maximum of 512 bytes.
- The number of available characters used as options is limited, depending on operating systems.

The configuration of the print option varies, depending on printing commands.

• rsh

% rsh host\_name print option1=value1,... < file\_name

• rcp

```
% rcp file_name host_name:option1=value1, ...
```

• ftp

#### ftp> put file\_name option1=value1,...

*Host\_name* is the printer host name. *File\_name* is the file name you want to print. The device option is specified in the form of *"option=value"*. For details about types of device options and values, see the following explanations.

For example, the following settings are for printing with rsh, rcp, and ftp : switch to PCL, feed paper from paper feed tray 1, set the printing amount to 3 sets, and print with the resolution set to 600 dpi (host\_name :nphost, file\_name :file1).

• rsh

```
% rsh nphost print filetype=pcl,tray=tray1,copies=3,res-
olution=600 < file1</pre>
```

```
• rcp
```

% rcp file1 nphost:filetype=pcl,tray=tray1,copies=3,resolution=600

• ftp

```
ftp> put file1 filetype=pcl,tray=tray1,copies=3,resolu-
tion=600
```

### 🖉 Note

- □ Multiple options must be separated by commas (,). Do not use spaces.
- When the printing file contains the PCL, PJL commands control of the option, the command takes priority.
- Enter the option using the lp or lpr command, when the shell script is implemented. The option settings made here are configured as default. You must create another printer if you want to change printer option settings. For details about changing the configured option, see p.10 "Deleting the printer".
- □ When printing with the lp command, use (\_) instead of (=) and (;) instead of (,) for operating systems that cannot use (=) and (,) such as Solaris 2.5 or later.

#### Using the cd command with ftp

For printing with ftp, if the option is specified using the cd command, it becomes available whenever the put or mput command is used.

ftp> cd option

#### 🖉 Note

□ The pwd command shows the current option settings.

ftp> pwd

Device option	Value	Function summary.
filetype	pcl, postscript(rps), pdf	Specifies the printer language for printing.
filter	text	Specifies the text printing.
tray	tray1~tray4, bypass, all.	Specifies the input tray.
paper	a3~a6, jisb4-jisb6, ledger, let- ter, halfletter, legal, executive, fgl, foolscap, folio, com10, C5, C6, dl, monarch, k8, k16, cus- tom	Specifies the paper size.
papertype	plain, recycled, special, thick, transparency, color, letter- head, preprinted, pre- punched, labels, bond, cardstock, plainorrecycled, auto	Specifies the paper type.
outbin	upper, inner, finishershift	Specifies the output tray.
copies	Number of copies (1–9999)	Specifies the number of copies.
qty	Number of collated sets (1– 999)	Specifies the number to col- late.

#### List of the device options

Device option	Value	Function summary.
duplex	on, off	Specifies whether duplex printing is on or off.
binding	longedge, shortedge, left, right, top	Specifies the binding direction for duplex printing.
orientation	portrait, landscape	Specifies the feed direction of the paper.
resolution	value of resolution (300, 600)	Specifies the resolution for printing.
staple	lefttopslantport, lefttopslant- land, lefttopvertport, left- topvertland, lefttophorizport, lefttophorizland, left2port, left2land, righttopslantport, righttopslantland, righttopvert- port, righttopvertland, rightto- phorizport, righttophorizland, right2port, right2land, top2port, top2land, lefttop, righttop, off	Specifies the staple position.
symbol set	desktop, iso4, iso6, iso11, iso15, iso17, iso21, iso60, iso69, iso11, isol2, isol5, legal, math8, mspubl, pc8, pc850, pc852, pc8dn, pc8tk, pifont, psmath, pstext, roman8, vnintl, vnmath, vnus, win30, win11, winl2, win15	Specify the set of print charac- ters.

### **Printer Language**

Select a printer language to print.

```
filetype=printer language
```

#### fil=printer language

Printer language	Value
PCL	pcl
PostScript3	postscript or rps
PDF	pdf

The following sample shows how to print with PCL (host name: nphost, file name: file1):

• rsh

```
% rsh nphost print filetype=pcl < file1
```

• rcp

```
% rcp file1 nphost:filetype=pcl
```

- ftp
- ftp> put file1 filetype=pcl

### **Text Printing**

Set this function when printing text files directly.

#### filter=text

The following sample shows how to print text files directly.

```
• rsh
```

% rsh nphost print filter=text < file1

• rcp

% rcp file1 nphost:filter=text

• ftp

ftp> put file1 filter=text

### Input Tray

Select a default input tray.

### ∰Important

□ Only installed input trays are available.

```
tray=value of input tray
```

Input tray	Value
Tray 1	tray1
Tray 2	tray2
Tray 3	tray3
Tray 4	tray4
Bypass tray	bypass
Auto Tray Select	all

The following sample shows how to print from tray 2 (host name: nphost, file name: file1):

• rsh

% rsh nphost print tray=tray2 < file1

• rcp

% rcp file1 nphost:tray=tray2

• ftp

ftp> put file1 tray=tray2

### Paper Size

Select the paper size.

#### ∰Important

□ Only the loaded paper sizes are available.

```
paper=value of paper size
```

Paper size	Value
A3	a3
A4	a4
A5	a5
B4JIS (Japanese Industrial Standard)	jisb4
B5JIS	jisb5
B6JIS	jisb6
11 × 17	ledger
$8^{1}/_{2} \times 11$	letter
$5^{1}/_{2} \times 8^{1}/_{2}$	halfletter
$8^{1}/_{2} \times 14$	legal
$7^{1}/_{4} \times 10^{1}/_{2}$	executive
8 × 13	fgl
$8^{1}/_{2} \times 13$	foolscap
$8^{1}/_{4} \times 13$	folio
4 <sup>1</sup> / <sub>8</sub> "×9 <sup>1</sup> / <sub>2</sub> "	com10
6.38" × 9.02"	C5
4.49" × 6.38"	C6
4.33" × 8.66"	dl
3 <sup>7</sup> / <sub>8</sub> "×7 <sup>1</sup> / <sub>2</sub> "	monarch
10 <sup>1</sup> / <sub>2</sub> " × 15.35"	k8
7.68" × 10 <sup>1</sup> / <sub>2</sub> "	k16
Custom size	custom

The following sample shows how to print using A4 size paper (host name: nphost, file name: file1):

• rsh

```
% rsh nphost print paper=a4 < file1
```

- rcp
  - % rcp file1 nphost:paper=a4

ftp
 ftp> put file1 paper=a4

### Paper Type

Select the paper type.

#### ∰Important

**O**nly the loaded paper types are available.

#### mediatype=value of paper type

Paper type	Value
Plain paper/recycled paper	plainorrecycled
Plain paper	plain
Preprinted paper	preprinted
Prepunched paper	prepunched
Letterhead	letterhead
Recycled paper	recycled
Color paper	color
Special paper	special
Thick paper	thick
OHP transparency	transparency
Labels	labels
Bond paper	bond
Cardstock	cardstock
Auto Paper Select	auto

The following sample shows how to print using recycled paper (host name: nphost, file name: file1):

• rsh

% rsh nphost print mediatype=recycled < file1

• rcp

% rcp file1 nphost:mediatype=recycled

• ftp

% ftp> put file1 mediatype=recycled

### **Output Tray**

Select the output tray.

#### outbin=value of output tray

#### ∰Important

Only installed output trays are available.

#### Value

upper, inner, finishershift

#### Reference

For details about available output tray, see the manual that comes with this machine.

The following sample shows how to print to the standard tray (standard tray: upper, host name: nphost, file name: file1):

• rsh

% rsh nphost print outbin=upper < file1

• rcp

% rcp file1 nphost:outbin=upper

• ftp

ftp> put file1 outbin=upper

### Copies

Specify the number of copies.

```
copies=number of copies (1 to 9999)
```

#### ∰Important

Do not specify "copies" and "qty <sup>\*1</sup>" commands at the same time.

<sup>\*1</sup> "qty" specifies the number of collated sets.

The following sample shows how to print 10 copies (host name: nphost, file name: file1):

• rsh

% rsh nphost print copies=10 < file1

• rcp

% rcp file1 nphost:copies=10

• ftp

ftp> put file1 copies=10

### **Duplex Printing**

This option enables duplex printing.

#### ∰Important

**The duplex unit is required.** 

#### duplex=value of duplex printing

Duplex printing	Value
enable	on
disable	off

The following sample shows how to set duplex printing (host name: nphost, file name: file1):

• rsh

```
% rsh nphost print duplex=on, binding=longedge < file1
```

• rcp

% rcp file1 nphost:duplex=on,binding=longedge

• ftp

ftp> put file1 duplex=on,binding=longedge

#### 🖉 Note

□ Before selecting duplex, the binding option must be set to on.

**D** Data and paper volume affect the completion of the print job.

#### PReference

For details about available paper size for duplex printing, see the manual that comes with this machine.

### Binding

Select the binding direction for duplex printing.

#### ∰Important

**The duplex unit is required.** 

#### binding=value of binding

Binding direction	Value
Longedge	longedge
Shortedge	shortedge
Left	left
Right	right
Тор	top

The following sample shows how to set duplex printing and long-edge binding (host name: nphost, file name: file1):

• rsh

% rsh nphost print duplex=on, binding=longedge < file1

• rcp

% rcp file1 nphost:duplex=on,binding=longedge

• ftp

ftp> put file1 duplex=on,binding=longedge

#### Note 🖉

- □ Before selecting the binding option, the duplex option must be set to on.
- **D** Data and paper volume affect completion of the print job.

### Orientation

Select the paper feed orientation.

#### ∰Important

□ This function is only for PCL.

#### orientation=feed direction (portrait or landscape)

Orientation	value
Portrait	portrait
Landscape	landscape

The following sample shows how to print the paper vertically using the orientation function (host name : nphost, file name : file1):

• rsh

```
% rsh nphost print orientation=portrait < file1
```

• rcp

% rcp file1 nphost:orientation=portrait

• ftp

ftp> put file1 orientation=portrait

### Resolution

Select the printing resolution.

```
resolution=value of resolution
```

Resolution	Value
600 dpi	600
300 dpi	300

The following sample shows how to print with 600 dpi and better quality. (host name: nphost, file name: file1):

• rsh

```
% rsh nphost print resolution=600 < file1
```

• rcp

% rcp file1 nphost:resolution=600

• ftp

ftp> put file1 resolution=600

### Staple

Select the staple position for the output.

#### ∰Important

**D** When using this option, the optional finisher unit is required.

staple=value of staple position

Position	Value
Off	off
Left top	lefttop
Right top	righttop
Left top horiz	lefttophorizland, lefttophorizport
Left top slant	lefttopslantland, lefttopslantport
Left top vert	lefttopvertland, lefttopvertport
Right top horiz	righttophorizland, righttophorizport
Right top slant	righttopslantland, righttopslantport
Right top vert	righttopvertland, righttopvertport
Left 2	left2land, left2port
Right 2	right2land, right2port
Top 2	top2land, top2port

The following sample shows how to print with the staple on the upper left using finisher shift tray (host name : nphost, file name : file1, finisher shift tray: finishershift):

• rsh

% rsh nphost print staple=lefttop,outbin=finishershift < file1

• rcp

```
% rcp file1 nphost:staple=lefttop,outbin=finishershift
```

• ftp

ftp> put file1 staple=lefttop,outbin=finishershift

#### 🖉 Note

□ Available staple positions vary depending on type of installed output tray. For details about staple, see the manual that comes with this machine.

### Symbol Set

Select the set of print characters for the chosen font.

#### ∰Important

 $\Box$  This function is only for PCL.

```
symset=value of font
```

Font	Value
Desktop	desktop
ISO 4	iso4
ISO 6	iso6
ISO 11	iso11
ISO 15	iso15
ISO 17	iso17
ISO 21	iso21
ISO 60	iso60
ISO 69	iso69
ISO L1	isol1
ISO L2	isol2
ISO L5	isol5
Legal	legal
Math-8	math8
MS Publ	mspubl
PC-8	pc8
PC-850	pc850

Font	Value
PC-852	pc852
PC-8 D/N	pc8dn
PC8-TK	pc8tk
Pifont	pifont
PS Math	psmath
PS Text	pstext
Roman-8	roman8
VN Intl	vnintl
VN Math	vnmath
VN US	vnus
Win 3.0	win30
Win L1	winl1
Win L2	winl2
Win L5	winl5

The following sample shows how to print the ISO 4 character set (host name : nphost, file name : file1):

• rsh

```
% rsh nphost print symset=iso4 < file1
```

• rcp

% rcp file1 nphost:symset=iso4

• ftp

ftp> put file1 symset=iso4

# INDEX

#### A

About This Machine, 1

#### В

Binding, 27 binding, 21 BSD UNIX workstation, 10, 15, 18

#### С

Copies, 26 copies, 21 Copy Reference, 1

#### D

Deleting the printer, 10 Device Option, 20 duplex, 21, 27 Duplex Printing, 27

#### F

Facsimile Reference, 1 filetype, 21, 22 filter, 21, 23 ftp, 5, 16, 17, 18, 19, 20, 23

#### G

General Settings Guide, 1

#### Η

How to Read This Manual, 3 HP-UX, 10, 14, 15, 18

#### I

Input Tray, 23 Installation Shell Script, 6, 8, 10 IP Address, 7

### L

Linux, 10, 15, 18 lp, 5, 15 lpq, 18 lpr, 5, 15 lpstat, 18

#### Ν

Network Guide, 1

#### 0

Orientation, 28 orientation, 21 outbin, 21, 26 Output Tray, 26

#### Ρ

paper, 21, 24 Paper Size, 24 Paper Type, 25 papertype, 21, 25 PCL, 22 PDF, 22 PostScript3, 22 Printer Language, 22 Printer Reference, 1 Printer Status, 18 Printing Method, 15 Print Job Status, 18

#### Q

qty, 21

#### R

rcp, 5, 16, 19, 20, 23 Resolution, 29 resolution, 21 rsh, 5, 16, 18, 20, 23 Scanner Reference, 1 Security Reference, 1 Setup, 5 Solaris, 10, 13, 15, 18 Staple, 29 staple, 21 Symbols, 3 Symbol Set, 30 symbol set, 21 symset, 30 System V UNIX, 18

#### Т

Text Printing, 23 tray, 21, 23 Troubleshooting, 1



GB GB AE AE









