





**9228/9233**  
MP 2851/MP 3351  
*LD528/LD533*

**Aficio™** MP 2851/3351

## Operating Instructions Troubleshooting

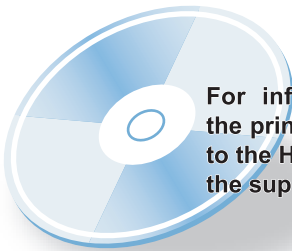

For information not in  
the printed manual, refer  
to the HTML/PDF files on  
the supplied CD-ROM.

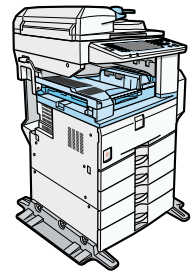

- 
- 1** When the Machine Does Not Operate As Wanted
  - 2** Troubleshooting When Using the Copy/Document Server Function
  - 3** Troubleshooting When Using the Facsimile Function
  - 4** Troubleshooting When Using the Printer Function
  - 5** Troubleshooting When Using the Scanner Function
  - 6** Adding Paper, Toner and Staples
  - 7** Clearing Misfeeds
  - 8** Remarks

## **Introduction**

This manual contains detailed instructions and notes on the operation and use of this machine. For your safety and benefit, read this manual carefully before using the machine. Keep this manual in a handy place for quick reference.

## **Important**

Contents of this manual are subject to change without prior notice. In no event will the company be liable for direct, indirect, special, incidental, or consequential damages as a result of handling or operating the machine.

## **Caution:**

Use of controls or adjustments or performance of procedures other than those specified in this manual might result in hazardous radiation exposure.

## **Notes:**

Some illustrations in this manual might be slightly different from the machine.

Certain options might not be available in some countries. For details, please contact your local dealer.

Depending on which country you are in, certain units may be optional. For details, please contact your local dealer.

Two kinds of size notation are employed in this manual. With this machine refer to the inch version.

For good copy quality, the supplier recommends that you use genuine toner from the supplier.

The supplier shall not be responsible for any damage or expense that might result from the use of parts other than genuine parts from the supplier with your office products.

## **Power Source**

120 V, 60 Hz, 12 A or more

Please be sure to connect the power cord to a power source as above. For details about power source, see p.137 "Power Connection".

---

# Manuals for This Machine

Read this manual carefully before you use this machine.

Refer to the manuals that are relevant to what you want to do with the machine.

## Important

- Media differ according to manual.
- The printed and electronic versions of a manual have the same contents.
- Adobe Acrobat Reader/Adobe Reader must be installed in order to view the manuals as PDF files.
- A Web browser must be installed in order to view the html manuals.

## About This Machine

Before using the machine, be sure to read the section of this manual entitled Safety Information.

This manual provides an introduction to the functions of the machine. It also explains the control panel, preparation procedures for using the machine, how to enter text, and how to install the CD-ROMs provided.

## Troubleshooting

Provides a guide to solving common problems, and explains how to replace paper, toner, staples, and other consumables.

## Copy/ Document Server Reference

Explains Copier and Document Server functions and operations. Also refer to this manual for explanations on how to place originals.

## Facsimile Reference

Explains Facsimile functions and operations.

## Printer Reference

Explains Printer functions and operations.

## Scanner Reference

Explains Scanner functions and operations.

## Network Guide

Explains how to configure and operate the machine in a network environment, and use the software provided.

## General Settings Guide

Explains User Tools settings, and Address Book procedures such as registering fax numbers, e-mail addresses, and user codes. Also refer to this manual for explanations on how to connect the machine.

---

## Security Reference

This manual is for administrators of the machine. It explains security functions that you can use to prevent unauthorized use of the machine, data tampering, or information leakage. For enhanced security, we recommend that you first make the following settings:

- Install the Device Certificate.
- Enable SSL (Secure Sockets Layer) Encryption.
- Change the user name and password of the administrator using Web Image Monitor.

For details, see "Setting Up the Machine", Security Reference.

Be sure to read this manual when setting the enhanced security functions, or user and administrator authentication.

## PostScript 3 Supplement

Explains how to set up and use PostScript 3.

## Information

Contains general notes on the machine, and information about the trademarks of product names used in the manuals.

## Other manuals

- UNIX Supplement
- Extended Feature Settings Reference <Device Version>
- Extended Feature Settings Reference <Web Version>
- App2Me Start Guide

### Note

- Manuals provided are specific to machine types.
- For "UNIX Supplement", please visit our Web site or consult an authorized dealer. This manual includes descriptions of functions and settings that might not be available on this machine.
- The following software products are referred to using general names:

Product name	General name
DeskTopBinder Lite and DeskTopBinder Professional <sup>*1</sup>	DeskTopBinder

<sup>\*1</sup> Optional

# TABLE OF CONTENTS

Manuals for This Machine.....	1
How to Read This Manual.....	6
Symbols.....	6
Names of Major Options.....	6
<b>1. When the Machine Does Not Operate As Wanted</b>	
Indicators.....	7
Panel Tone.....	8
Checking Machine Status and Settings.....	9
When an Indicator to the Right of a Function Key Is Lit.....	12
When You Have Problems Operating the Machine.....	14
When a Job Is Not Performed.....	18
<b>2. Troubleshooting When Using the Copy/Document Server Function</b>	
Messages Displayed When Using the Copy/Document Server Function.....	21
When You Cannot Make Clear Copies.....	24
When You Cannot Make Copies As Wanted.....	27
When Memory Is Full.....	33
<b>3. Troubleshooting When Using the Facsimile Function</b>	
Adjusting the Volume.....	35
Messages Displayed When Using the Facsimile Function.....	37
When You Cannot Send or Receive Fax Messages As Wanted.....	47
When Memory Is Full.....	53
If an Error Report Is Printed.....	54
Turning Off the Main Power / In the Event of Power Failure.....	55
When an Error Occurs Using Internet Fax.....	56
Error Mail Notification.....	56
Error Report (E-mail).....	56
Server-Generated Error E-mail.....	56
<b>4. Troubleshooting When Using the Printer Function</b>	
Messages Displayed When Installing the Printer Driver.....	57
Windows 2000.....	57
Windows XP Professional or Windows Server 2003/2003 R2.....	57
Windows XP Home Edition.....	58
Windows Vista or Windows Server 2008.....	58

---

If USB Connection Fails.....	60
Messages Displayed When Using the Printer Function.....	61
Status Messages.....	61
Messages Displayed on the Control Panel When Using the Printer Function.....	62
Messages Printed on the Error Logs or Reports.....	64
Checking the Error Log.....	69
When You Cannot Print.....	71
When the Data In Indicator Does Not Light Up or Flash.....	73
Other Printing Problems.....	75

## 5. Troubleshooting When Using the Scanner Function

---

When Scanning Is Not Done As Expected.....	83
When You Cannot Send Scanned Files.....	85
When Stored Files Cannot Be Accessed.....	85
When You Cannot Browse the Network to Send a Scan File.....	85
When the TWAIN Driver Cannot Be Started.....	85
When Stored Files Cannot Be Edited.....	86
When the Network Delivery Function Cannot Be Used.....	86
When S/MIME Cannot Be Used.....	86
Operations Are Not Possible When Messages Are Displayed.....	87
Messages Displayed When Using the Scanner Function.....	88
Messages Displayed on the Control Panel When Using the Scanner Function.....	88
Messages Displayed on the Client Computer.....	95

## 6. Adding Paper, Toner and Staples

---

Loading Paper.....	101
Loading Paper into the Paper Trays.....	101
Loading Paper into the Large Capacity Tray.....	103
Orientation-Fixed Paper or Two-Sided Paper.....	104
Changing the Paper Size.....	106
Changing the Paper Size in the Paper Trays.....	106
Changing to a Size That Is Not Automatically Detected.....	108
Adding Toner.....	111
Removing Toner.....	112
Inserting Toner.....	112

---

Sending Faxes or Scanned Documents When Toner Has Run Out.....	113
Used Toner.....	114
Adding Staples.....	115
500-sheet Finisher.....	115
1000-sheet Finisher.....	116
Booklet Finisher.....	116
Replacing the Stamp Cartridge.....	118

## 7. Clearing Misfeeds

---

Removing Jammed Paper.....	121
Locating Jammed Paper.....	121
Removing Jammed Paper.....	123
Removing Jammed Staples.....	130
500-sheet Finisher.....	130
1000-sheet Finisher.....	131
Booklet Finisher.....	131
Removing Punch Waste.....	133
Booklet Finisher.....	133

## 8. Remarks

---

Where to Put Your Machine.....	135
Machine Environment.....	135
Power Connection.....	137
Maintaining Your Machine.....	139
Cleaning the Exposure Glass.....	139
Cleaning the Exposure Glass Cover.....	139
Cleaning the Auto Document Feeder.....	140
Cleaning the Power Cable Plug.....	140

<b>INDEX</b> .....	141
--------------------	-----

---

# How to Read This Manual

---

## Symbols

---

This manual uses the following symbols:

### **Important**

Indicates points to pay attention to when using the machine, and explanations of likely causes of paper misfeeds, damage to originals, or loss of data. Be sure to read these explanations.

### **Note**

Indicates supplementary explanations of the machine's functions, and instructions on resolving user errors.

### **Reference**

This symbol is located at the end of sections. It indicates where you can find further relevant information.

[ ]

Indicates the names of keys on the machine's display or control panels.

---

## Names of Major Options

---

Major options of this machine are referred to as follows in this manual:

- Auto Document Feeder → ADF
- Large Capacity Tray → LCT











# 1. When the Machine Does Not Operate As Wanted

This chapter describes basic troubleshooting procedures that are applicable to all functions of this machine.

## Indicators

This section describes the indicators displayed when the machine requires the user to remove misfed paper, to add paper or to perform other procedures.

Indicator	Status
 : Misfeed indicator	Appears when a misfeed occurs. See p.121 "Removing Jammed Paper".
 : Load Paper indicator	Appears when paper runs out. See p.101 "Loading Paper".
 : Add Toner indicator	Appears when toner runs out. See p.111 "Adding Toner".
 : Add Staple indicator	Appears when staples run out. See p.115 "Adding Staples".
 : Waste Toner Full indicator	Appears when the waste toner bottle is full. Contact your sales or service representative.
 : Empty Hole Punch Receptacle indicator	Appears when the hole punch receptacle is full. See p.133 "Removing Punch Waste".
 : Service Call indicator	Appears when the machine is malfunctioning or requires maintenance.
 : Open Cover indicator	Appears when the front cover, etc., is open.

## Panel Tone

The following table describes the meaning of the various beep patterns that the machine produces to alert users about left originals and other machine conditions.

Beep pattern	Meaning	Cause
Single short beep.	Panel/screen input accepted.	A control panel or screen key was pressed.
Short, then long beep.	Panel/screen input rejected.	An invalid key was pressed on the control panel or screen, or the entered password was incorrect.
Single long beep.	Job completed successfully.	A Copier/Document Server Features job has finished.
Two long beeps.	Machine has warmed up.	After cooling or being switched on, the machine has fully warmed up and is ready for use.
Five long beeps.	Soft alert.	The initial screen returns when the machine goes into energy-saving mode and when simplified display is canceled.
Five long beeps repeated four times.	Soft alert.	An original has been left on the exposure glass or paper is empty.
Five short beeps repeated five times.	Strong alert.	The machine requires user attention because paper has jammed, the toner needs replenishing, or other problems have occurred.

### ↓ Note

- Users cannot mute the machine's beep alerts. When the machine beeps to alert users of a paper jam or toner request, if the machine's covers are opened and closed repeatedly within a short space of time, the beep alert might continue, even after normal status has resumed.
- You can select to enable or disable beep alerts. For details about Panel Key Sound, see "System Settings", General Settings Guide.

# Checking Machine Status and Settings

You can check the machine's system status.

## Maintenance Info

1

You can check the following items under [Maintenance Info]:

- [Remaining Toner]  
Displays the amount of remaining toner.
- [No Staples]  
Displays whether there are staples remaining or not.
- [Punch Receptacle Full]  
Displays whether the hole punch receptacle is full.
- [Paper Tray]  
Displays the paper type and size loaded in the paper tray.
- [Output Tray Full]  
Displays whether the output tray is overloaded.
- [Original Misfeed]  
Displays state of and solutions for original misfeeds.
- [Paper Misfeed]  
Displays state of and solutions for paper jams.
- [Cover Open]  
Indicates whether front cover, duplex unit, etc., is open.

## Data Storage

You can check the following items under [Data Storage]:

- [HDD Remaining Memory]  
Displays the amount of available hard disk drive memory.
- [HDD File(s)]  
Displays the total number of jobs stored in the hard disk drive.
- [Print Job(s)]  
Displays the number of jobs for "Hold Print", "Stored Print", "Locked Print", and "Sample Print".
- [Fax TX / RX File(s)]  
Displays the number of "Transmission Standby File(s)", "Memory Lock File(s)", "RX Print Standby File(s)", and other files stored in the hard disk drive.
- [Memory Erase Status]

Displays the state of the memory data.

### Machine Address Info

You can check the following items under [Machine Address Info]:


- [Fax No.]  
Displays the machine's fax number.
- [H.323 Own Fax No.]  
Displays the machine's alias telephone number.
- [SIP User Name]  
Displays the machine's SIP user name.
- [Fax E-mail Account]  
Displays the machine's fax e-mail account.
- [Machine IPv4 Address]  
Displays the machine's IPv4 address.
- [Machine IPv6 Address]  
Displays the machine's IPv6 address.

### Inquiry


You can check the following items under [Inquiry]:

- [Machine Repairs]  
Displays the machine number and contact number that are required for service.
- [Sales Representative]  
Displays the sales representative's telephone number.
- [Supply Order]  
Displays the contact number for placing supply orders.
- [Supply Details]  
Displays the name of toner, staples, etc., used on the machine.


1. On the control panel, press [System Status].

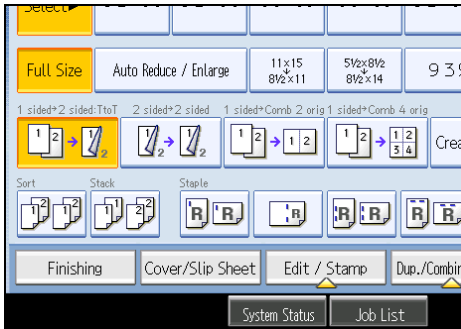

2. Press each tab and check the contents.

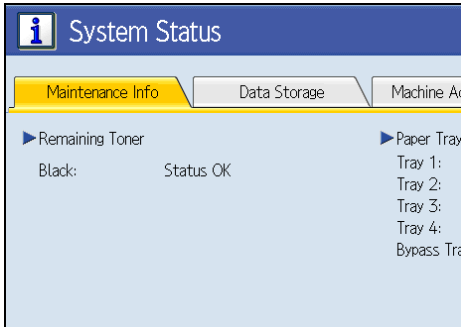

3. After checking the information, press [Exit]. The previous screen returns.

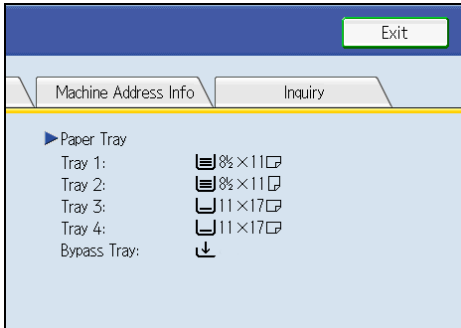

**Note**

- [No Staples], [Punch Receptacle Full], [Output Tray Full], [Original Misfeed], [Paper Misfeed], and [Cover Open] appear on the [Maintenance Info] tab only when these errors occur.
- Depending on the security settings, the "Machine Address Info" tab might not be displayed.
- For details about how to locate and remove misfeeds, see "Removing Jammed Paper".


**Reference**

- p.121 "Removing Jammed Paper"

# When an Indicator to the Right of a Function Key Is Lit

1

When an indicator to the right of a function key lights up, press the corresponding function key. Then, follow the instructions displayed on the control panel.

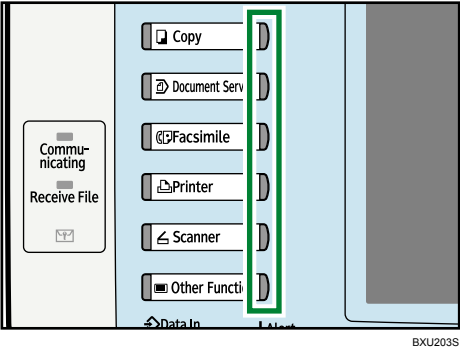

If an error occurs in the function you are using, check the message that appears on the control panel, and then refer to "Messages Displayed" for the relevant function.

Following describe the main reasons the indicator lights up.

Problem	Cause	Solution
Documents and reports do not print out.	The paper output tray is full.	Remove the prints from the tray.
Documents and reports do not print out.	There is no paper left.	Load paper. See p.101 "Loading Paper".
An error has occurred.	The function whose indicator is lit is defective.	Record the code number shown on the display and contact your service representative. See "Messages Displayed" of each chapter.  You can use other functions normally.

Problem	Cause	Solution
The machine is unable to connect to the network.	A network error has occurred.	<ul style="list-style-type: none"><li>• Check the displayed message and take an appropriate action. See "Messages Displayed" of each chapter.</li><li>• Check that the machine is correctly connected to the network, and that the machine is correctly set. For details about how to connect the network, see "Connecting the Machine", General Settings Guide.</li><li>• Contact the network administrator.</li><li>• If the indicator is still lit even after trying to solve the problem as described here, contact your service representative.</li></ul>

# When You Have Problems Operating the Machine

1

This section describes common problems and messages.

If other messages appear, follow the instructions displayed.

Problem	Cause	Solution
Although the copier screen appears when the machine is turned on using the main power switch, it cannot be switched to another screen by pressing the [Printer] or [Scanner] key.	Functions other than the copier function are not yet ready.	Wait a little longer.
The machine has just been turned on and the User Tools screen is displayed, but the User Tools menu has items missing.	Functions other than the copier function are not yet ready. Time required varies by function. Functions appear in the User Tools menu when they become ready for use.	Wait a little longer.
The operation switch indicator continues blinking and does not turn off when pressed.	This occurs in the following cases: <ul style="list-style-type: none"> <li>• The exposure glass cover or ADF is open.</li> <li>• The machine is communicating with external equipment.</li> <li>• The hard disk is active.</li> <li>• The machine is cooling down.</li> </ul>	<ul style="list-style-type: none"> <li>• Close the exposure glass cover or ADF, and check if the machine is communicating with external equipment.</li> <li>• Wait a little longer.</li> </ul>
The display is off.	The machine is in Energy Saver mode.	Press the [Energy Saver] key to cancel Energy Saver mode.
The display is off.	The operation switch is turned off.	Turn on the operation switch.
Nothing happens when the operation switch is turned on.	The main power switch is turned off.	Turn on the main power switch.



Problem	Cause	Solution
"Please wait." appears.	This message appears when you turn on the operation switch.	Wait for a while. If the machine does not get ready in a minute, contact your service representative.
"Please wait." appears.	This message appears when the machine is warning up.	<ul style="list-style-type: none"> <li>• Wait for a while. If the machine does not get ready in a couple of minutes, contact your service representative.</li> <li>• Wait until the message disappears. Do not turn off the main power switch while the message is showing.</li> </ul>
"Please wait." appears.	This message appears when you change the toner cartridge.	Wait for a while. If the message does not disappear in two minutes, contact your service representative.
"Memory is full. Do you want to store scanned file?" appears.	The scanned originals exceed the number of sheets/pages that can be stored in the hard disk.	<ul style="list-style-type: none"> <li>• Press [Store File] to store pages that have been scanned. Delete unnecessary files by pressing [Delete File].</li> <li>• Press [No] if you are not storing pages that have been scanned. Delete unnecessary files by pressing [Delete File].</li> </ul>
The user code entry screen is displayed.	Users are restricted by User Code Authentication.	Enter the user code (up to eight digits), and then press [OK].
The Authentication screen appears.	Basic Authentication, Windows Authentication, LDAP Authentication or Integration Server Authentication is set.	Enter your login user name and user password. See "When the Authentication Screen is Displayed", About This Machine.
"Authentication has failed." appears.	The entered login user name or login password is not correct.	Inquire the user administrator for the correct login user name and login password.
"Authentication has failed." appears.	The machine cannot perform authentication.	Contact the administrator.

Problem	Cause	Solution
"You do not have the privileges to use this function." continues to be displayed even though you have entered a valid user name.	The logged in user name does not have permission for the selected function.	Contact the administrator about the permission for the required function.
An error message remains, even if misfed paper is removed.	<ul style="list-style-type: none"> <li>When a misfeed message appears, it remains until you open and close the cover as required.</li> <li>Paper is still jammed in the tray.</li> </ul>	Remove misfed paper, and then open and close the cover. See p.121 "Removing Jammed Paper".
An error message remains, even if consumables are replaced and/or misfed paper is removed.	This may occur if the HDD is not installed.	Press the [Start] key.
Original images are printed on the reverse side of the paper.	You may have loaded the paper incorrectly.	Load paper correctly. Place paper in the paper tray with the print side up. Load paper into the bypass tray with the print side down.
Misfeeds occur frequently.	The tray's side or end fences may not be set properly.	<ul style="list-style-type: none"> <li>Remove the misfed paper. See p.121 "Removing Jammed Paper".</li> <li>Check the side or end fences are set properly. Also, check the side fences are locked. See p.106 "Changing the Paper Size".</li> </ul>
Misfeeds occur frequently.	Paper of undetectable size has been loaded.	<ul style="list-style-type: none"> <li>Remove the misfed paper. See p.121 "Removing Jammed Paper".</li> <li>If you load a paper size that is not selected automatically, you need to specify the paper size with the control panel. See p.106 "Changing the Paper Size".</li> </ul>

Problem	Cause	Solution
Misfeeds occur frequently.	There is a foreign object on the finisher tray.	<ul style="list-style-type: none"> <li>Remove the misfed paper. See p.121 "Removing Jammed Paper".</li> <li>Do not place anything on the finisher tray. It may cause a paper jam.</li> </ul>
Misfeeds occur frequently.	The staple cartridge is not set correctly.	Set the staple cartridge properly. The booklet finisher requires the saddle stitch staple cartridge also. For details about how to add staples, see p.115 "Adding Staples".
Cannot print in duplex mode.	Duplex printing cannot be done with paper set in the bypass tray.	When using duplex printing, make settings to use paper from a tray other than the bypass tray.
Cannot print in duplex mode.	[Apply Duplex] is set to [No] for "Paper Type".	In [Tray Paper Settings], under "Paper Type", set [Apply Duplex] to [Yes].
Cannot print in duplex mode.	You cannot select duplex printing if the paper type is set to [OHP (Transparency)], [Thin Paper], [Label Paper], or [Thick Paper].	In [Tray Paper Settings], under "Paper Type", select a paper type other than [OHP (Transparency)], [Thin Paper], [Label Paper], or [Thick Paper].

#### ↓ Note

- If you cannot make copies as you want because of paper type, paper size, or paper capacity problems, use recommended paper. See "Recommended Paper Sizes and Types", About This Machine.
- Using curled paper often causes misfeeds, soiled paper edges, or slipped positions while performing staple or stack printing. When using curled paper, take the stiffness out of the paper with your hands to straighten out the curl, or load the paper up side down. Also, to prevent paper from curling, lay paper on a flat surface, and do not lean it against the wall.

## When a Job Is Not Performed

1

If you are not able to carry out your job, it may be that the machine is being used by another function.

Wait until the current job is completed before trying again. In certain cases, you can carry out another job using a different function while the current job is being performed. Performing multiple functions simultaneously like this is called "Multi-accessing".

Combination Chart

### Function Compatibility

The chart shows Function Compatibility when print priority is set to [Interleave]. For details about Print Priority, see "System Settings", General Settings Guide.

△: Simultaneous operations are possible.

●: Operation is enabled when the relevant function key is pressed and remote switching (of the scanner/external extension) is done.

○: Operation is enabled when the [Interrupt] key is pressed to interrupt the preceding operation.

→: Operation is performed automatically once the preceding operation ends.

×: The operation must be started once the preceding operation ends. (Simultaneous operations are not possible.)

Mode after you select  Mode before you select		Copy			Interrupt Copying	Facsimile							Printer		Scanner	TWAIN	Document Server		DeskTop Binder	Web Document Server					
		Operations for Copying	Stapling	Sort		Operations for Copying	Copying	Transmission Operation/Manual Reception Operation	Scanning an Original for Memory Transmission	Memory Transmission	Immediate Transmission	Memory Reception	Printing Received Data	Print											
														Operations for Scanning	Scanning	Scanning	Operations for Document Server	Scanning a Document to Store in Document Server	Printing from Document Server	Printing from Document Server	Sending a Facsimile from Document Server	Printing			
Copy	Operations for Copying	x	x	x	○	○	●	●	△	●	△	△	△	△	△	●	●	●	●	●	△	△	△		
	Stapling	△*1	→*1	→*1	○	○*5	●	●*2	△	●*2	△	△	△	△	△	→	●	●*2	●*2	●	●*2	△*4	△	△	△*4
	Sort	△*1	→*1	→*1	○	○	●	●*2	△	●*2	△	△	△	△	△	△	●	●*2	●*2	●	●*2	△	△	△	△
Interrupt Copying	Operations for Copying	○	○	○	x	x	x	x	△	x	△	△	△	△	△	x	x	x	x	x	x	x	△	△	△
	Copying	○	○	○	x	x	x	x	△	x	△	→	△	→	→	x	x	x	x	x	x	→	△	△	→
Facsimile	Transmission Operation/Manual Reception Operation	●	●	●	○	○	x	x	△	x	△	△	△	△	△	●	●	●	●	●	●	△	△	△	
	Scanning an Original for Memory Transmission	x	x	x	x	x	x	x	△	x	△	△	△	△	△	x	x	x	x	x	x	△	△	△	
	Memory Transmission	△	△	△	△	△	△	△	△*3	△*3	△*3	△*7	△	△	△	△	△	△	△	△	△	△	△*3	△	
	Immediate Transmission	x	x	x	x	x	x	x	△*3	x	△*3	△	△	△	△	x	x	x	x	x	x	△	△*3	△	
	Memory Reception	△	△	△	△	△	△	△	△*3	△*3	△*3	△*7	△	△	△	△	△	△	△	△	△	△	△*3	△	
	Printing Received Data	△	△	△	△	△	△	△	△*7	△*7	x	△	△	△	△	△	△	△	△	△	△	△	△*7	△	
Printer	Data Reception	△	△	△	△	△	△	△	△	△	△	△	→	→	→	△	△	△	△	△	△	△	△	△	
	Printing	△	△	△	○	○	△	△	△	△	△	△	△	→	→	△	△	△	△	△	△	△	△	△	
	Stapling	△	→	△	○	○*5	△	△	△	△	△	△	△	→	→	△	△	△	△	△	△	△*4	△	△*4	
Scanner	Operations for Scanning	●	●	●	○	○	●	●	△	●	△	△	△	△	△	x	x	●	●	●	●	△	△	△	
	Scanning	●	●*2	●*2	○*2	○*2	●	●*2	△	●*2	△	△	△	△	△	x	x	x	●	●*2	●	△	△	△	
TWAIN	Scanning	x	x	x	x	x	x	x	△	x	△	△	△	△	△	x	x	x	x	x	x	△	△	△	
Document Server	Operations for Document Server	●	●	●	○	○	●	●	△	●	△	△	△	△	△	●	●	●	x	x	x	△	△	△	
	Scanning a Document to Store in Document Server	●	x	x	○	○	●	x	△	x	△	△	△	△	△	●	●*2	x	x	x	x	△	△	△	
	Printing from Document Server	●	△*4	△	○	○	△	△	△	△	△	△	△	△	△	△	△	△	△	△*6	△*6	△*6	△	△	
DeskTop Binder	Printing from Document Server	△	△*4	△	△	△	△	△	△	△	△	△	△	△	△	△	△	△	△	△	△	→	△	△	
	Sending a Facsimile from Document Server	△	△	△	△	△	△	△*3	△*3	△*3	△*3	△*7	△	△	△	△	△	△	△	△	△	→	△	△	
Web Document Server	Printing	△	△*4	△	△	△	△	△	△	△	△	△	△	△	△	△	△	△	△	△	△	△	△	△	

BBR001S

- \*1 Simultaneous operations are only possible after the preceding job documents are all scanned and [New Job] appears.
- \*2 You can scan a document after the preceding job documents are all scanned.
- \*3 Operation is possible when extra lines are added.
- \*4 During stapling, printing automatically starts after the current job.
- \*5 Stapling is not available.
- \*6 Simultaneous operation becomes possible after you press [New Job].
- \*7 During parallel reception, any subsequent job is suspended until the reception is completed.

### ↓ Note

- Stapling cannot be used at the same time for multiple functions.

- If the machine is capable of executing multiple functions simultaneously, specify which function should have priority in "Print Priority". This setting is factory-preset to "Display Mode". For details about Print Priority, see "System Settings", General Settings Guide.
- When the 500-sheet finisher, the 1000-sheet finisher, or the booklet finisher is installed on the machine, you can specify the output tray where documents are delivered. For details about Output Tray Settings, see "System Settings", General Settings Guide.
- While printing is in progress, scanning a document using another function may take longer than usual.

## 2. Troubleshooting When Using the Copy/Document Server Function

This chapter describes likely causes of and possible solutions for copier/document server function problems.

### 2

## Messages Displayed When Using the Copy/Document Server Function

This section describes the machine's main messages. If other messages appear, follow the instructions they contain.

### ★ Important

- If you cannot make copies as you want because of the paper type, paper size or paper capacity problems, use recommended paper. See "Recommended Paper Sizes and Types", About This Machine.
- For messages that are not listed here, see "When You Have Problems Operating the Machine".

### 📖 Reference

- p. 14 "When You Have Problems Operating the Machine"

Message	Cause	Solution
"Authentication has failed."	The entered login user name or login password is not correct.	Inquire the user administrator for the correct login user name and login password.
"Authentication has failed."	The machine cannot perform authentication.	Contact the administrator.
"Cannot detect original size."	The original placed on the exposure glass is a non-standard size.	<ul style="list-style-type: none"><li>• Place the original on the exposure glass again. Face the originals down.</li><li>• If the machine cannot detect the size of the original, specify the size manually - do not use Auto Paper Select mode or the Auto Reduce/Enlarge function. See "Specifying Original Sizes", Copy/Document Server Reference.</li></ul>

Message	Cause	Solution
"Cannot detect original size."	Original is not placed, or the original placed on the exposure glass is a nonstandard size.	<ul style="list-style-type: none"> <li>Place the original correctly.</li> <li>Specify the paper size.</li> <li>When placing an original directly on the exposure glass, the lifting/lowering action of the ADF triggers the automatic original size detection process. Lift the ADF by more than 30 degrees.</li> </ul>
"Cannot punch this paper size."	The Punch function cannot be used with paper size selected.	Select a proper paper size. See "Supplementary Information", Copy/Document Server Reference.
"Cannot staple paper of this size."	The Staple function cannot be used with paper size selected.	Select a proper paper size. See "Supplementary Information", Copy/Document Server Reference.
"Check original orientation."	Original is not placed in a proper orientation.	Change the orientation of the original.
"Check paper size."	An irregular paper size is set.	If you press the [Start] key, copy will start onto the selected paper.
"Duplex is not available with this paper size."	A paper size not available in Duplex mode has been selected.	Select a proper paper size. See "Supplementary Information", Copy/Document Server Reference.
"Exceeded max. number of pages per file. Do you want to store the scanned pages as 1 file?"	The number of scanned pages exceeds the capacity per file of the Document Server.	To store scanned pages as a file, press [Store File]. Scanned data is stored as a file in the Document Server. If you do not want to store scanned pages, press [No]. Scanned data is deleted.
"File being stored exceeded max. number of pages per file. Copying will be stopped."	The scanned originals have too many pages to store as one document.	Press [Exit], and then store again with an appropriate number of pages.
"Magazine or Booklet mode is not available due to mixed image mode."	You selected the "Magazine" or "Booklet" function for originals scanned using different functions, such as copy and printer.	Make sure originals for the "Magazine" or "Booklet" function are scanned using the same function.



Message	Cause	Solution
"Maximum number of sets is n." (A figure is placed at n.)	The number of copies exceeds the maximum copy quantity.	You can change the maximum copy quantity from [Max. Copy Quantity] in [General Features] under [Copier / Document Server Features].
"Original is being scanned by another function. Switch to the following function, then press the Stop key to cancel scanning or press the Start key to continue."	A function of the machine other than the Copier function is being used such as the Document Server function.	Cancel the job in progress. For example, press [Exit], and then press the [Document Server] key. Next, press the [Clear/Stop] key. When the message "The Stop key has been pressed. Are you sure you want to stop copying?" appears, press [Stop].
"Please wait."	The destination list is being updated from the network using Web Image Monitor.	Wait until the message disappears. Do not switch off the power while this message is displayed. Depending on the number of destinations to be updated, there may be some delay before you can resume operation. Operations are not possible while this message is displayed.
"Rotate Sort is not available with this paper size."	A size of paper for which Rotate Sort is not available is selected.	Select a proper paper size. See "Supplementary Information", Copy/Document Server Reference.
"The selected file(s) contained file(s) without access privileges. Only file(s) with access privileges will be deleted."	You have tried to delete files without the authority to do so.	Files can be deleted by the person who created the file. To delete a file which you are not authorized to delete, contact the person who created the file.
"You do not have the privileges to use this function."	The logged in user name does not have permission for the selected function.	Contact the administrator about the permission for the required function.


## When You Cannot Make Clear Copies

This section describes likely causes of and possible solutions for unclear copies.

2

Problem	Cause	Solution
Copies appear dirty.	Image density is too high.	Adjust the image density settings. See "Adjusting Copy Image Density", Copy/Document Server Reference.
Copies appear dirty.	Auto Image Density is not selected.	On the control panel, select [Auto Density].
The reverse side of an original image is copied.	Image density is too high.	Adjust the image density settings. See "Adjusting Copy Image Density", Copy/Document Server Reference.
The reverse side of an original image is copied.	Auto Image Density is not selected.	On the control panel, select [Auto Density].
A shadow appears on copies if you use pasted originals.	Image density is too high.	<ul style="list-style-type: none"> <li>Adjust the image density settings. See "Adjusting Copy Image Density", Copy/Document Server Reference.</li> <li>Change the orientation of the original.</li> <li>Put mending tape on the pasted part.</li> </ul>
The same copy area is dirty whenever making copies.	The exposure glass, scanning glass, or ADF is dirty.	Clean them. See p.139 "Maintaining Your Machine".
The same copy area is dirty whenever making copies.	<ul style="list-style-type: none"> <li>The original that has already been printed is scanned.</li> <li>Original Type is set to [Text / Photo], and an original with text and photographs that can hardly be distinguished from each other is loaded.</li> </ul>	On the control panel, press [Generation Copy], and then begin copying.

Problem	Cause	Solution
Copies are too light.	Image density is too light.	Adjust the image density settings. See "Adjusting Copy Image Density", Copy/Document Server Reference.
Copies are too light.	A light copy may result when you use damp or rough grain paper.	Use recommended paper only and be sure its storage environment meets the recommended temperature and humidity conditions. For details about recommended paper and the proper way to store it, see "Recommended Paper Sizes and Types" and "Paper Storage", About This Machine.
Copies are too light.	Toner cartridge is almost empty.	Add toner. See p.111 "Adding Toner".
Parts of images are not copied.	The original is not set correctly.	Set originals correctly. See "Placing Originals", Copy/Document Server Reference.
Parts of images are not copied.	The correct paper size is not selected.	Select the proper paper size.
Parts of images are not copied.	Even if you place originals in the ADF correctly, margin of a few millimeters on all four sides of the original might not be copied.	Use "Create Margin" function to reduce the image of its original size. For details about missing image area, see "Missing Image Area", Copy/Document Server Reference.
Images appear only partially.	The paper is damp.	Use paper that has been stored in the recommended temperature and humidity condition. For details about the proper way to store it, see "Paper Storage", About This Machine.
Black lines appear.	The exposure glass or scanning glass is dirty.	Clean them. See p.139 "Maintaining Your Machine".
White lines appear.	The exposure glass or scanning glass is dirty.	Clean them. See p.139 "Maintaining Your Machine".
White lines appear.	When  is blinking, toner is beginning to run out.	Add toner. See p.111 "Adding Toner".

Problem	Cause	Solution
Copies are blank.	The original is not set correctly.	When using the exposure glass, face the originals down. When using the ADF, face them up.
<p>A moire pattern is produced on copies.</p> 	Your original has a dot pattern image or many lines.	Place the original on the exposure glass at a slight angle.
Black spots appear on the copy of a photographic print.	Because of high humidity, the photographic print has stuck to the exposure glass.	<p>Place the print on the exposure glass in either of the following ways:</p> <ul style="list-style-type: none"> <li>Place an OHP transparency on the exposure glass, and then place the print on the OHP transparency.</li> <li>Place the print on the exposure glass, and then place two or three sheets of white paper on it. Leave the ADF open when copying.</li> </ul>
The image on the back side of duplex copies has mottled blank patches or is smudged.	Missing patches and smudges are caused by moisture leaking from the paper.	<ul style="list-style-type: none"> <li>Do not install the machine in areas that are susceptible to low temperatures.</li> <li>Use paper that has been stored where temperature and humidity conditions meet the limitations we recommend. For details about the paper storage conditions we recommend, see "Paper Storage", About This Machine.</li> </ul>

# When You Cannot Make Copies As Wanted

This section describes likely causes of and possible solutions for unsatisfactory copy results.

## Basic

Problem	Cause	Solution
Misfeeds occur frequently.	The number of sheets loaded exceeds the capacity of the machine.	<ul style="list-style-type: none"> <li>When loading paper into the paper tray, load paper only as high as the upper limit markings on the side fences of the paper.</li> <li>When loading paper on the bypass tray, load only as much paper as can be held between the guides on the bypass tray.</li> </ul>
Misfeeds occur frequently.	The paper tray's side fences are set too tightly.	Push the side fences lightly, and then reset it.
Misfeeds occur frequently.	The paper is damp.	Use paper that has been stored in the recommended temperature and humidity condition. See "Paper Storage", About This Machine.
Misfeeds occur frequently.	The paper is too thick or too thin.	Use recommended paper. See "Recommended Paper Sizes and Types", About This Machine.
Misfeeds occur frequently.	The copy paper is wrinkled or has been folded/creased.	Use recommended paper only and be sure its storage environment meets the recommended temperature and humidity conditions. For details about recommended paper and the proper way to store it, see "Recommended Paper Sizes and Types" and "Paper Storage", About This Machine.
Misfeeds occur frequently.	Printed paper is being used.	Do not use paper that has been already copied or printed onto.
Copy paper becomes creased.	The paper is damp.	Use paper that has been stored in the recommended temperature and humidity condition. See "Paper Storage", About This Machine.

Problem	Cause	Solution
Copy paper becomes creased.	The paper is too thin.	Use recommended paper. See "Recommended Paper Sizes and Types", About This Machine.
Copies are not stapled.	There are jammed staples in the stapler.	Remove jammed staples. See p.130 "Removing Jammed Staples".
Copies are not stapled.	Copy paper is curled.	Turn the copy paper over in the tray.
Copies are stapled as separate batches.	The number of copies is too great for the stapler to staple as a single batch.	Check the stapler capacity. See "Supplementary Information", Copy/Document Server Reference.
Staples are wrongly positioned.	Originals are not set correctly.	Check the correct position to place the originals. For details about how to place originals with stapling, see "Staple", Copy/Document Server Reference.
Paper does not output during printing with stapling.	When you stop printing while using the staple function, paper not stapled during printing may be left in the staple unit.	Press the [Clear Modes] key and cancel copy settings, including stapling.
Saddle-stitched documents come apart and do not stack properly.	Certain types of paper are resistant to folding and open out after being folded and stitched.	Use recommended paper. See "Recommended Paper Sizes and Types", About This Machine.
You cannot combine several functions.	Selected functions cannot be used together.	Check the combination of functions and make the settings again. See "Function Compatibility", Copy/Document Server Reference.
When sorting, the pages are divided into two blocks.	The memory became full in the middle of sorting and the pages were delivered in two blocks.	In [Copier / Document Server Features], under [Input / Output], set [Memory Full Auto Scan Restart] to [Off].
The copy is grayed out or a text pattern appears in the background of the copy.	You have copied a copy-guarded document protected from unauthorized copying.	Check the document. For details about how to prevent unauthorized copying of the document, see "Preventing an Unauthorized Copy", About This Machine.

Problem	Cause	Solution
Images are skewed.	The side fences in the paper feed tray are not set properly.	Make sure the side fences are set properly. For details about how to set the side fences, see p.106 "Changing the Paper Size".
Images are skewed.	The paper is feeding in at a slant.	Load the paper correctly. See p.101 "Loading Paper".
Edges of sheets are creased.	The paper is damp.	Use paper that has been stored in the recommended temperature and humidity conditions. See "Paper Storage", About This Machine.
Edges of sheets are creased.	You are using non-recommended paper.	Use recommended paper. See "Recommended Paper Sizes and Types", About This Machine.
Sheets are feeding in together, resulting in jams.	Sheets are sticking together.	Fan the pages to loosen the paper before loading it. Alternatively, feed the paper one sheet at a time.
"Add Staple" message appears and the Staple function cannot be used.	The staple cartridge is not set properly.	Make sure the staple cartridge is set properly.

**Edit**

Problem	Cause	Solution
In "Double Copies" mode, parts of the original image are not copied.	Combination of original and copy paper is not correct.	Specify the paper size again. For example, select 11 × 17□ for 8 <sup>1</sup> / <sub>2</sub> × 11□ originals. See "Double Copies", Copy/Document Server Reference.
In "Erase Border", "Erase Center", or "Erase Center / Border" mode, parts of the original image are not copied.	You set a wide erased margin.	Make the margin width narrower. You can adjust it between 2 - 99 mm (0.1 - 3.9 inches).

Problem	Cause	Solution
In "Erase Border", "Erase Center", or "Erase Center / Border" mode, parts of the original image are not copied.	Originals are not scanned correctly.	Place the originals correctly.
In "Margin Adjustment" mode, parts of the original image are not copied.	<ul style="list-style-type: none"> <li>You set a wide erased margin.</li> <li>There is a lack of margin space on the opposite side of the binding position.</li> </ul>	Set a narrower margin with User Tools. You can set the width between 0 - 30 mm (0 - 1.2 inches).
In "Image Repeat" mode, the original image is not copied repeatedly.	You selected copy paper the same size as the originals, or you did not select the proper reproduction ratio.	Select copy paper larger than the originals or select the proper reproduction ratio.

**Stamp**

Problem	Cause	Solution
The stamp position is wrong.	The paper orientation is wrong.	Check the paper orientation and stamp position.
The stamp is not printed on the back side of sheets when duplex copying.	The back side stamp position is incorrect for the paper size.	Reset the back side stamp position. For details about Duplex Back Page Stamping Position, see "Stamps", Copy/Document Server Reference.

**Combine**

Problem	Cause	Solution
Copies made with the "Booklet" or "Magazine" function cannot be folded into a book correctly.	You selected a setting ("Open to Left" or "Open to Right") that does not match the orientation of originals.	In [Copier / Document Server Features], under [Edit], set [Orientation: Booklet, Magazine] properly.



Problem	Cause	Solution
When using "Combine", parts of the image are not copied.	You specified a reproduction ratio that does not match the sizes of your originals and copy paper.	When you specify a reproduction ratio using Manual Paper Select mode, make sure the ratio matches your originals and the copy paper. Select the correct reproduction ratio before using Combine mode. See "One-Sided Combine", "Two-Sided Combine", or "Auto Reduce/Enlarge", Copy/Document Server Reference.
Copies are not in correct order.	You placed the originals in the incorrect order.	When placing a stack of originals in the ADF, the last page should be on the bottom.  If you place an original on the exposure glass, start with the first page to be copied.

### Duplex

Problem	Cause	Solution
Cannot print in duplex mode.	You have loaded paper on the bypass tray.	Remove paper loaded on the bypass tray. Load paper in a tray other than bypass tray.
Cannot print in duplex mode.	You have loaded paper exceeding 105 g/m <sup>2</sup> .	Change the paper.
Cannot print in duplex mode.	[Apply Duplex] is set to [No] for "Paper Type".	In [Tray Paper Settings], under "Paper Type", set [Apply Duplex] to [Yes].
Copies are not in correct order.	You placed the originals in the incorrect order.	When placing a stack of originals in the ADF, the last page should be on the bottom.  If you place an original on the exposure glass, start with the first page to be copied.
When using "Duplex", copy is made top to bottom even though [Top to Top] is selected.	You placed the originals in the wrong orientation.	Place the original in the correct orientation. See "Duplex", Copy/Document Server Reference.

**Document Server**

Problem	Cause	Solution
Cannot access file.	The file is password protected.	<p>Contact the administrator.</p> <p>To delete the files stored in the document server, select [Delete All Files in Document Server] under [Administrator Tools] in [System Settings]. As this will permanently delete every single file, make sure the document server does not contain any files you want to keep. For details about Delete All Files in Document Server, see "System Settings", General Settings Guide.</p>
You cannot find out what is stored in a file.	You may not be able to ascertain the contents of a file simply from the file name.	<p>You can switch the Select File screen between "List" and "Thumbnails" display to check the contents of the file. Check information other than the file name.</p> <ul style="list-style-type: none"> <li>List display The file name, data of storage, and user name are shown.</li> <li>Thumbnails display An image of the stored file appears.</li> </ul> <p>You can enlarge the image by pressing [Preview]. See "Preview Display", Copy/Document Server Reference.</p>
Memory frequently becomes full.	The document server memory is full.	<p>Delete unnecessary files. On the file selection display, select unnecessary files, and then press [Delete File]. If this does not increase available memory, do the following.</p> <ul style="list-style-type: none"> <li>Switch to the scanner screen, and then delete unnecessary files stored under the scanner function.</li> <li>Switch to the printer screen, and then delete unnecessary files stored under Sample Print, Locked Print, Hold Print, or Stored Print.</li> </ul>

Problem	Cause	Solution
"Cannot display preview of this page." appears, and you can not check the thumbnail image.	The image data may have been corrupted.	Press [Exit] to display the preview screen without a thumbnail.  If the selected document contains several pages, press [Switch] on the "Display Page" area to change the page, and then a preview of the next page will appear.

## When Memory Is Full

This section describes likely causes of and possible solutions for problems related to full memory.

Message	Cause	Solution
"Memory is full. nn originals have been scanned. Press [Print] to copy scanned originals. Do not remove remaining originals."  "n" in the message represents a changeable number.	The scanned originals exceeds the number of pages that can be stored in memory.	Press [Print] to copy scanned originals and cancel the scanning data. Press [Stop] to cancel the scanning data and not copy.
"Press [Continue] to scan and copy remaining originals."	The machine checked if the remaining originals should be copied, after the scanned originals were printed.	To continue copying, remove all copies, and then press [Continue]. To stop copying, press [Stop].

### ↓ Note

- If you set [Memory Full Auto Scan Restart] in [Input / Output] of User Tools to [On], even if the memory becomes full, the memory overflow message will not be displayed. The machine will make copies of the scanned originals first, and then automatically proceed to scan and to copy the remaining originals. In this case, the resulting sorted pages will not be sequential. For details about Memory Full Auto Scan Restart, see "Copier/Document Server Features", General Settings Guide.



# 3. Troubleshooting When Using the Facsimile Function

This chapter describes likely causes of and possible solutions for facsimile function problems.

## Adjusting the Volume

This section describes how to adjust the volume.

You can change the volume of the following sounds that the machine makes.

### On Hook Mode

Heard when [On Hook] is pressed.

### At Transmission

Heard when "Immediate Transmission" is performed.

### At Reception

Heard when the machine receives a document.


### At Dialing

Heard after pressing the [Start] key, until the line connects to the destination.

### At Printing

Heard when a received document is printed.


1. Press the [User Tools / Counter] key.

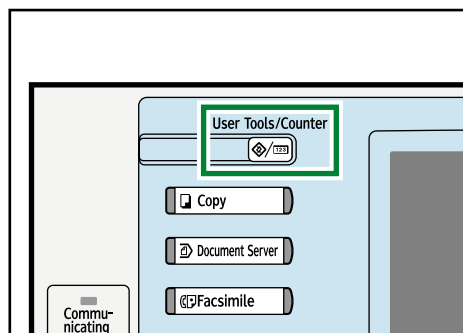


BBT052S

2. Press [Facsimile Features].
3. Check that [General Settings] screen appears.

4. Press [Adjust Sound Volume].

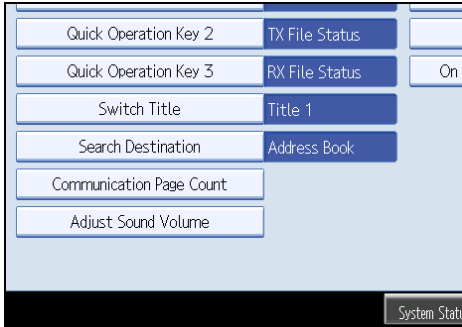

5. Press [Lower] or [Louder] to adjust the volume, and then press [OK].

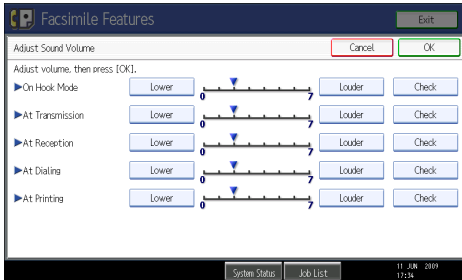

You can hear the actual volume by pressing [Check].

If you press [Cancel], the volume setting is canceled. The display returns to that of step 4.

You can set the volume level to between 0 and 7.

6. Press the [User Tools / Counter] key.

The standby display appears.

↓ Note

- You can adjust the On Hook volume when you press [On Hook]. See "On Hook Dial", Facsimile Reference.

# Messages Displayed When Using the Facsimile Function

This section describes the machine's main messages. If other messages appear, follow their instructions.

Message	Cause	Solution
"Authentication has failed."	The entered login user name or login password is not correct.	Inquire the user administrator for the correct login user name and login password.
"Authentication has failed."	The machine cannot perform authentication.	Contact the administrator.
"Cannot detect original size. Select scan size."	The machine failed to detect the size of the original.	On the control panel, under [Scan Size], specify the scan area in [Scan Settings], and then resend the document.
"Cannot find the specified path. Please check the settings."	The name of the computer or folder entered as the destination is wrong.	Check whether the computer name and the folder name for the destination are correct.
"Check whether there are any network problems." [13-10]	The alias telephone number you entered is already registered on the gatekeeper by another device.	<ul style="list-style-type: none"> <li>In [Facsimile Features], under [Initial Settings], select [H.323 Settings], and then check the alias telephone number is correctly programmed. You can also use the Web Image Monitor for confirmation. See the Web Image Monitor's Help.</li> <li>Contact the network administrator.</li> </ul>
"Check whether there are any network problems." [13-11]	Cannot access gatekeeper.	<ul style="list-style-type: none"> <li>In [Facsimile Features], under [Initial Settings], select [H.323 Settings], and then check "Gatekeeper Address" is correctly programmed. You can also use the Web Image Monitor for confirmation. See the Web Image Monitor's Help.</li> <li>Contact the network administrator.</li> </ul>

Message	Cause	Solution
"Check whether there are any network problems." [13-17]	Registering of user name is rejected by SIP server.	<ul style="list-style-type: none"> <li>• In [Facsimile Features], under [Initial Settings], select [SIP Settings], and then check "SIP Server IP Address" and "SIP User Name" are correctly programmed. You can also use the Web Image Monitor for confirmation. See the Web Image Monitor's Help.</li> <li>• Contact the network administrator.</li> </ul>
"Check whether there are any network problems." [13-18]	Cannot access SIP server.	<ul style="list-style-type: none"> <li>• In [Facsimile Features], under [Initial Settings], select [SIP Settings], and then check "SIP Server IP Address" is correctly programmed. You can also use the Web Image Monitor for confirmation. See the Web Image Monitor's Help.</li> <li>• Contact the network administrator.</li> </ul>
"Check whether there are any network problems." [13-24]	The password registered for the SIP server is not the same as the password registered for this machine.	Contact the administrator.



Message	Cause	Solution
"Check whether there are any network problems." [13-25]	In [Effective Protocol], the IP address is not enabled, or an incorrect IP address has been registered.	<ul style="list-style-type: none"> <li>• In [System Settings], under [Interface Settings], select [Effective Protocol], and then check "IPv4" is programmed to "Active". You can also use the Web Image Monitor for confirmation. See the Web Image Monitor's Help.</li> <li>• In [System Settings], under [Interface Settings], select [Machine IPv4 Address], and then check the IP address is correctly programmed. You can also use the Web Image Monitor for confirmation. See the Web Image Monitor's Help.</li> <li>• Contact the administrator.</li> </ul>
"Check whether there are any network problems." [13-26]	The "Effective Protocol" and "SIP Server IP Address" settings are different, or an incorrect IP address has been registered.	<ul style="list-style-type: none"> <li>• In [System Settings], under [Interface Settings], check the IP address is correctly programmed. You can also use the Web Image Monitor for confirmation. See the Web Image Monitor's Help.</li> <li>• Contact the administrator.</li> </ul>

Message	Cause	Solution
"Check whether there are any network problems." [14-01]	The DNS server, SMTP server, or folder specified for transfer to was not found, or, the destination for Internet Fax around (not through) the SMTP server could not be found.	<ul style="list-style-type: none"><li>• In [System Settings], under [Interface Settings], check the DNS server is correctly programmed. You can also use the Web Image Monitor for confirmation. See the Web Image Monitor's Help.</li><li>• In [System Settings], under [File Transfer], select [SMTP Server], and then check "Server Name" or "Port No." is correctly programmed. You can also use the Web Image Monitor for confirmation. See the Web Image Monitor's Help.</li><li>• Check that the folder for transfer is correctly specified.</li><li>• Check that the computer in which the folder for transfer is specified is correctly operated.</li><li>• Check that the LAN cable is correctly connected to the machine.</li><li>• Contact the network administrator of the destinations.</li><li>• Contact the network administrator.</li></ul>

Message	Cause	Solution
"Check whether there are any network problems." [14-09]	E-mail transmission was refused by SMTP authentication, POP before SMTP authentication or login authentication of the computer in which the folder for transfer is specified.	<ul style="list-style-type: none"> <li>• In [System Settings], under [File Transfer], select [SMTP Authentication], [POP before SMTP], or [Fax E-mail Account], and then check that "User Name" and "Password" are correctly programmed. You can also use the Web Image Monitor for confirmation. See the Web Image Monitor's Help.</li> <li>• Check that the user ID and password for the computer in which the folder for transfer is specified are correctly programmed.</li> <li>• Check that the folder for transfer is correctly specified.</li> <li>• Check that the computer in which the folder for transfer is specified is correctly operated.</li> <li>• Contact the network administrator.</li> </ul>
"Check whether there are any network problems." [14-33]	Neither the machine's nor the administrator's e-mail address is registered.	<ul style="list-style-type: none"> <li>• In [System Settings], under [File Transfer], select [Fax E-mail Account], and then check that "E-mail Address" is correctly programmed. You can also use the Web Image Monitor for confirmation. See the Web Image Monitor's Help.</li> <li>• Contact the network administrator.</li> </ul>
"Check whether there are any network problems." [15-01]	No POP3/IMAP4 server address is programmed.	<ul style="list-style-type: none"> <li>• In [System Settings], under [File Transfer], select [POP3 / IMAP4 Settings], and then check "Server Name" is correctly programmed. You can also use the Web Image Monitor for confirmation. See the Web Image Monitor's Help.</li> <li>• Contact the network administrator.</li> </ul>

Message	Cause	Solution
"Check whether there are any network problems." [15-02]	Cannot log on to the POP3/IMAP4 server.	<ul style="list-style-type: none"><li>• In [System Settings], under [File Transfer], select [Fax E-mail Account], and then check that "User Name" and "Password" are correctly programmed. You can also use the Web Image Monitor for confirmation. See the Web Image Monitor's Help.</li><li>• Contact the network administrator.</li></ul>
"Check whether there are any network problems." [15-03]	No machine e-mail address is programmed.	<ul style="list-style-type: none"><li>• In [System Settings], under [File Transfer], check that the machine e-mail address is correctly programmed. You can also use the Web Image Monitor for confirmation. See the Web Image Monitor's Help.</li><li>• Contact the network administrator.</li></ul>

Message	Cause	Solution
"Check whether there are any network problems." [15-11]	Cannot find the DNS server or POP3/IMAP4 server.	<ul style="list-style-type: none"> <li>• In [System Settings], under [Interface Settings], check the IP address of the DNS Server is correctly programmed. You can also use the Web Image Monitor for confirmation. See the Web Image Monitor's Help.</li> <li>• In [System Settings], under [File Transfer], select [POP3 / IMAP4 Settings], and then check "Server Name" is correctly programmed. You can also use the Web Image Monitor for confirmation. See the Web Image Monitor's Help.</li> <li>• In [System Settings], under [File Transfer], select [E-mail Communication Port], and then check the port number of the POP3/IMAP4 server is correctly programmed. You can also use the Web Image Monitor for confirmation. See the Web Image Monitor's Help.</li> <li>• Check that the LAN cable is correctly connected to the machine.</li> <li>• In [System Settings], under [File Transfer], select [Reception Protocol], and then check the reception protocol is correctly programmed. You can also use the Web Image Monitor. See the Web Image Monitor's Help.</li> <li>• Contact the network administrator.</li> </ul>

Message	Cause	Solution
"Check whether there are any network problems." [15-12]	Cannot log on to the POP3/IMAP4 server.	<ul style="list-style-type: none"> <li>• In [System Settings], under [File Transfer], select [Fax E-mail Account], and then check that "User Name" and "Password" are correctly programmed. You can also use the Web Image Monitor for confirmation. See the Web Image Monitor's Help.</li> <li>• In [System Settings], under [File Transfer], check that the user name and password for POP before SMTP authentication are correctly programmed. You can also use the Web Image Monitor for confirmation. See the Web Image Monitor's Help.</li> <li>• Contact the network administrator.</li> </ul>
"Connection with LDAP server has failed. Check the server status."	A network error has occurred and connection has failed.	<ul style="list-style-type: none"> <li>• Try the operation once more. If the message is still shown, the network may be crowded.</li> <li>• In [System Settings], under [Administrator Tools], check the settings of LDAP server. For details, see "Programming the LDAP server", General Settings Guide.</li> </ul>
"Error occurred, and transmission was canceled."	<ul style="list-style-type: none"> <li>• Original jammed during Immediate Transmission.</li> <li>• A problem occurred in the machine, or noise occurred on the telephone line.</li> </ul>	Press [Exit], and then send the documents again.
"Exceeded max. No. of display search results. Max.: n" (A figure is placed at n.)	The number of search results has exceeded the maximum number of items that can be displayed.	Search again after changing the search conditions.

Message	Cause	Solution
"Exceeded time limit for LDAP server search. Check the server status."	A network error has occurred and connection has failed.	<ul style="list-style-type: none"> <li>Try the operation once more. If the message is still shown, the network may be crowded.</li> <li>In [System Settings], under [Administrator Tools], check the settings of LDAP server. For details, see "Programming the LDAP server", General Settings Guide.</li> </ul>
"Functional problems with facsimile. Data will be initialized."	There is a problem with the fax.	Record the code number shown on the display and contact your service representative. Other functions can be used.
"LDAP server authentication has failed. Check the settings."	A network error has occurred and connection has failed.	Make settings correctly for the user name and the password for LDAP server authentication.
"Original is being scanned by another function. Switch to the following function, then press the Stop key to cancel scanning or press the Start key to continue."	A function of the machine other than the Facsimile function is being used such as the Document Server function.	Before sending a file by fax, cancel the job in progress. For example, press [Exit], and then press the [Document Server] key. Next, press the [Clear/Stop] key. When the message "The Clear / Stop key was pressed. Are you sure you want to stop scanning?" appears, press [Stop].
"Put original back, check it and press the Start key."	Original jammed during Memory Transmission.	Press [Exit], and then send the documents again.
"Remove the paper from Internal Tray 1."	Internal tray 1 is full.	Remove the paper. If the other tray is also full, the tray name shown on the display changes. Remove paper from the tray indicated on the display.
"Some invalid destination(s) contained. Do you want to select only valid destination (s)?"	The specified group contains fax destinations, e-mail destinations, and/or folder destinations, either of which are incompatible with the specified transmission method.	In the message that appears at each transmission, press [Select].

Message	Cause	Solution
"The selected file(s) contained file(s) without access privileges. Only file(s) with access privileges will be deleted."	You tried to delete a document for which you do not have permission to delete.	Only the administrator can delete this document. Contact the administrator if you want to delete a document for which you do not have permission to delete.
"Updating the destination list... Please wait. Specified destination(s) or sender's name has been cleared."	The destination list is being updated from the network using Web Image Monitor.	Wait until the message disappears. Do not switch off the power while this message is displayed. Depending on the number of destinations to be updated, there may be some delay before you can resume operation. Operation is not possible while this message is displayed.
"You do not have the privileges to use this function."	The logged in user name does not have permission for the selected function.	Contact the administrator about the permission for the required function.

### Note

- If "Check whether there are any network problems." appears, the machine is not correctly connected to the network or the settings of the machine are not correct. If you do not need to connect to a network, you can specify the setting so this message is not displayed, and then the [Facsimile] key no longer lights. For details about how to do this, see "Parameter Settings", General Settings Guide. If you reconnect the machine to the network, be sure to set "Display" by configuring the appropriate User Parameter.
- If the paper tray runs out of paper, "There is no paper. Load paper." appears on the display, asking you to add paper. If there is paper left in the other trays, you can receive documents as usual, even if the message appears on the display. You can turn this function on or off with "Parameter Settings". For details about how to do this, see "Parameter Settings", General Settings Guide.



# When You Cannot Send or Receive Fax Messages As Wanted

This section describes likely causes of and possible solutions for transmission and reception-related problems.

## Transmission/Reception

Problem	Cause	Solution
Both transmission and reception are impossible.	The modular cord may be disconnected.	Make sure the modular cord is correctly connected. See "Connecting the Machine to a Telephone Line and Telephone", General Settings Guide.
Both transmission and reception are impossible.	The terminal adaptor setting is incorrect.	Check the setting.

3

## Transmission

Problem	Cause	Solution
Document appears blank at the other end.	The original was placed upside down.	When the original is placed directly on the exposure glass, the side to be scanned must face down. When the original is fed via the ADF, the side to be scanned must face up.
Printed or sent images are spotty.	The ADF, exposure glass or scanning glass is dirty.	Clean them. See p.139 "Maintaining Your Machine". Make sure ink or correction fluid is dry before placing originals.
Reception is possible, but transmission is impossible.	The terminal adaptor setting is incorrect.	Check the setting.
Reception is possible, but transmission is impossible.	There are regions and telephone exchanges where a dial tone can not be detected.	Turn the dial tone detection off in User Parameters. For details about how to do this, see "Parameter Settings", General Settings Guide.
Transmission failed due to "maximum e-mail size" error.	If the e-mail size specified on the machine is too large, the Internet Fax document cannot be sent.	In [Facsimile Features], under [Send Settings], set [Max. E-mail Size] to [Off], or set the maximum e-mail size to larger value. Then, re-send the document.

Problem	Cause	Solution
When using On Hook Dial or Manual Dial, "Receiving" appears and transmission is not allowed.	If the machine fails to detect the size of the original when [Start] key is pressed, it performs a receiving operation.	Press [Scan Size] in [Scan Settings], select the scan area, and then resend the document.  If you use On Hook Dial or Manual Dial frequently, it is recommended that you set "Receive documents by pressing the [Start] key when originals are not set." to "Off" in User Parameters. If this is set to "Off", when using Manual Dial you cannot receive by pressing the [Start] key. For details about how to do this, see "Parameter Settings", General Settings Guide.
LAN-Fax Driver does not work.	The entered login user name, login password, or driver encryption key is incorrect.	Check your login user name, login password, or driver encryption key, and enter them correctly. Contact the administrator.
LAN-Fax Driver does not work.	A high security level is set by the extended security function.	Contact the administrator.
Although a group specification was set for the following, reception was not possible.  Receiving Station of Information Box, Forwarding, Forwarding of Special Sender, Reception Report e-mail, Email TX Results, routing e-mail received via SMTP.	The number of specified destinations exceeds the maximum number that can be specified as a group.	A maximum of 500 parties can be specified for a group. Check if there are over the specified numbers registered in the address book. If a group was registered in another group or specified as Receiving Stations 1 to 5 for the Transfer Box, transmission is canceled but an error message does not appear.


**Reception**

Problem	Cause	Solution
The machine failed to print received fax documents.	If this happened when the Receiving File indicator was lit, low paper may have caused printing to stop.	<ul style="list-style-type: none"> <li>• Load paper into the tray.</li> <li>• Add toner.</li> </ul> For details about Substitute Reception, see "Substitute Reception", Facsimile Reference.
The machine failed to print received fax documents.	In [Facsimile Features], under [Reception Settings], [Store] has been selected for [Reception File Setting].	Print the fax documents using a Web browser or the Print Stored RX File function. See "Printing Received and Stored Documents" and "Viewing, Printing, and Deleting Received Fax Documents Using a Web Image Monitor", Facsimile Reference.
The machine failed to print received fax documents.	Load Paper indicator is lit.	Load paper into the tray. See p.101 "Loading Paper".
Transmission is possible, but reception is impossible.	The terminal adaptor setting is incorrect.	Check the setting.
While pressing [Manual E-mail RX], "Cannot receive E-mails currently." appears and e-mail cannot be received.	The machine is receiving an ondemand e-mail message (e-mail inquiry from the administrator).	After the e-mail is received, press [Manual E-mail RX], and then try again.

**Printing**

Problem	Cause	Solution
Print is slanted.	The tray's side fences might not be locked.	Check the side fences are locked. See p.106 "Changing the Paper Size".
Print is slanted.	The paper is fed at a slant.	Load the paper correctly. See p.101 "Loading Paper".
Print is slanted.	The cover of the machine is open.	Check the cover is closed properly.
Misfeeds occur frequently.	The paper tray's side fences are set too tightly.	Push the side fences lightly, and then reset it.

Problem	Cause	Solution
Misfeeds occur frequently.	The number of feeding in the paper tray exceeds the capacity of the machine.	<ul style="list-style-type: none"> <li>When loading paper into the paper tray, load paper only as high as the upper limit markings on the side fences of the paper.</li> <li>When loading paper on the bypass tray, load only as much paper as can be held between the guides on the bypass tray.</li> </ul>
Misfeeds occur frequently.	The paper is damp.	Use paper that has been stored in the recommended temperature and humidity condition. See "Paper Storage", About This Machine.
Misfeeds occur frequently.	The paper is too thick or too thin.	Use recommended paper. See "Recommended Paper Sizes and Types", About This Machine.
Misfeeds occur frequently.	Printed paper is being used.	Do not load sheets that have already been copied or printed onto by another machine.
Misfeeds occur frequently.	Sheets are sticking together.	Fan the sheets thoroughly before loading them. Alternatively, feed the sheets into the machine one at a time.
Misfeeds occur frequently.	The copy paper is wrinkled or has been folded/creased.	Use recommended paper only and be sure its storage environment meets the recommended temperature and humidity conditions. For details about recommended paper and the proper way to store it, see "Recommended Paper Sizes and Types" and "Paper Storage", About This Machine.
Sheets are feeding in together, resulting in jams.	The pages are sticking together.	Fan the sheets thoroughly before loading them. Alternatively, feed the sheets into the machine one at a time.
Copy paper becomes creased.	Printed paper is being used.	Do not use paper that has been already copied or printed onto.

Problem	Cause	Solution
Edges of sheets are creased.	The paper is damp.	Use paper that has been stored in the recommended temperature and humidity conditions. See "Paper Storage", About This Machine.
Edges of sheets are creased.	You are using non-recommended paper.	Use recommended paper. See "Recommended Paper Sizes and Types", About This Machine.
Copy paper becomes creased.	The paper is damp.	Use paper that has been stored in the recommended temperature and humidity condition. See "Paper Storage", About This Machine.
Copy paper becomes creased.	The paper is too thin.	Use recommended paper. See "Recommended Paper Sizes and Types", About This Machine.
Images are only partially printed.	The paper is damp.	Use paper that has been stored in the recommended temperature and humidity condition. See "Paper Storage", About This Machine.
Black lines appear on the print produced at the destination.	The ADF, exposure glass or scanning glass is dirty.	Clean them. See p.139 "Maintaining Your Machine".
Background of received images appears dirty. Images from the back of the page appear.	Image density is too high.	Adjust the scan density settings. For details about how to change the density, see "Density (Contrast)", Facsimile Reference.
Received image is too light.	When using moist, rough, or processed paper, areas of print may not be fully reproduced.	Use recommended paper. See "Recommended Paper Sizes and Types", About This Machine.
Received image is too light.	When  is blinking, toner is beginning to run out.	Add toner. See p.111 "Adding Toner".
Received image is too light.	The image density has been set too low.	Increase the scanning density. For details about how to change the density, see "Density (Contrast)", Facsimile Reference.

Problem	Cause	Solution
Received image is too light.	The original of the transmitted fax was printed on paper that is too thin.	Ask the sender to reprint the original on thicker paper and fax it again.

**Others**

Problem	Cause	Solution
All fax documents stored in memory have been lost. Those documents include ones stored through Memory Transmission/Reception, Memory Lock, or Substitute Reception.	When about one hour passes after power to the machine is turned off, all fax documents stored in memory are lost.	If any documents have been lost for this reason, a Power Failure Report is automatically printed when the machine is turned on. If fax documents stored for Memory Transmission have been lost, check the destinations and resend the documents. If fax documents received through Memory, Memory Lock or Substitute Reception have been lost, ask the senders to resend the documents. See p.55 "Turning Off the Main Power / In the Event of Power Failure".
When a correct password is entered, you cannot print documents that appear in the Personal box or Information box, or transmit / print out stored documents.	Documents are locked by a security function if incorrect passwords are entered a certain number of times.	Contact the administrator.
[Prg. Dest.] or [Manual Entry] does not appear.	This function is made unavailable by the enhanced security function.	Contact the administrator.
The following functions are not available: Forwarding, Store File in the Information Box, routing e-mail received via SMTP.	This function is made unavailable by the enhanced security function.	Contact the administrator.

Problem	Cause	Solution
If several destinations are selected for the broadcasting sequence, the data is sent over several transmissions.	Encrypted e-mails are sent to the destinations for which S/MIME authentication is set, and plain text e-mails are sent to the destinations for which S/MIME authentication is not set.	Make sure S/MIME-authentication destinations are separate from plain text destinations.  Contact the administrator for details about destination settings.
Cannot print JPEG format files with the Mail to Print function.	Only JFIF files are printable. (JFIF is a JPEG subformat.)	Make sure the files you are trying to print are in JFIF subformat.

## When Memory Is Full

This section describes likely causes of and possible solutions for problems related to full memory.

Message	Cause	Solution
"Memory is full. Cannot scan more. Transmission will be stopped."	The memory is full.	If you press [Exit], the machine returns to standby mode and starts transmitting the stored pages.  Check the pages that have not been sent using the Communication Result Report, and then resend those pages.

## If an Error Report Is Printed

An Error Report is printed if a document cannot be successfully sent or received.

Possible causes include a problem with the machine or noise on the telephone line. If an error occurs during transmission, resend the original. If an error occurs during reception, ask the sender to resend the document.

### ★ Important

- If an error happens frequently, contact your service representative.
- The "Page" column gives the total number of pages. The "Page not sent" or "Page not received" column gives the number of pages not sent or received successfully.
- You can display destinations by configuring the appropriate User Parameter. For details about how to do this, see "Parameter Settings", General Settings Guide.
- You can display sender names by configuring the appropriate User Parameter. For details about how to do this, see "Parameter Settings", General Settings Guide.



# Turning Off the Main Power / In the Event of Power Failure

The following notes concern power failure and turning off the machine.

## CAUTION

- When you disconnect the power plug from the wall outlet, always pull the plug (not the cable).

## Important

- Do not turn off the main power switch while the power indicator is lit or blinking. If you do, the hard disk and memory may be damaged and failure could result.
- Turn off the main power switch before pulling out the plug. If you pull out the plug with the switch on, the hard disk and memory may be damaged and failure could result.
- Make sure 100% is shown on the display before you unplug the machine. If a lower value is shown, some data is currently present in memory.
- Right after a power failure, the internal battery needs to be sufficiently recharged to guard against future data loss. Keep the machine plugged in and the main power switch on for about 24 hours after the power loss.

Even if the main power switch is turned off, the contents of the machine memory (for example, programmed numbers) will not be lost. However, if power is lost for about one hour because the main power switch is turned off, there is a power cut, or the power cable is removed, contents of the Fax memory are lost. Lost items will include any fax documents stored in memory using Memory Transmission/Reception, or Memory Lock.

If a file was deleted from memory, a Power Failure Report is automatically printed as soon as the power is restored.

This report can be used to identify lost files. If a memory stored for Memory Transmission was lost, resend it. If a document received by Memory Reception or Substitute Reception was lost, ask the sender to resend it.

## When an Error Occurs Using Internet Fax

This section describes reports that the machine sends if an Internet Fax error occurs.

---

### Error Mail Notification

---

The machine sends the Error Mail Notification to the sender when it is unable to successfully receive a particular e-mail message. A "cc" of this notification is also sent to the administrator's e-mail address when one is specified.

#### ★ Important

- If an incoming Internet Fax from another party bypasses the SMTP server, even if reception is not successful, an Error Mail Notification is not sent to the sender.

#### ↓ Note

- You can select to send Error Mail Notification by configuring the appropriate User Parameter. For details about how to do this, see "Parameter Settings", General Settings Guide.
- If Error Mail Notification cannot be sent, the Error Report (E-mail) is printed by the machine.
- If an error occurs when an e-mail is received via SMTP, the SMTP server sends an error e-mail to the originator of the document.

---

### Error Report (E-mail)

---

The Error Report (E-mail) is printed by the machine when it is unable to send an Error Mail Notification.

---

### Server-Generated Error E-mail

---

The transmitting server sends this error e-mail to the originator of e-mail that cannot be transmitted successfully (due to reasons such as specifying an incorrect e-mail address).

#### ★ Important

- If an Internet Fax transmission bypasses the SMTP server, even if transmission is not successful, an error e-mail is not sent from the server.

#### ↓ Note

- After a server-generated error e-mail is printed, the first page of the sent document is printed.

## 4. Troubleshooting When Using the Printer Function

This chapter describes likely causes of and possible solutions for printer function problems.

### Messages Displayed When Installing the Printer Driver

This section describes what to do if a message appears when installing the printer driver.

Message number 58 or 34 indicates that the printer driver cannot be installed using Auto Run. Install the printer driver using [Add Printer] or [Install Printer].

Message number 58 appears if there is a newer version of the printer driver already installed.

4

#### Windows 2000

This section describes the procedure under Windows 2000.

1. On the [Start] menu, point to [Settings], and then click [Printers].
2. Double-click the Add Printer icon.
3. Follow the instructions in Add Printer Wizard.

If the printer driver is on a CD-ROM, the location of the driver is "\DRIVERS\ (PCL5E or PS)\XP\_VISTA \ (language)\DISK1" or "\DRIVERS\PCL6\XP\_VISTA\MUI\DISK1". If the installer starts, click [Cancel] to quit.

4. Specify a port.

#### Note

- Available ports vary according to your Windows operating system or the type of interface. For details, see "Preparing the Machine", Printer Reference.
- The PCL6 printer driver is installed in the language specified by your operating system.

#### Windows XP Professional or Windows Server 2003/2003 R2

This section describes the procedure under Windows XP Professional or Windows Server 2003/2003 R2.

1. On the [Start] menu, click [Printers and Faxes].
2. Click [Add a printer].

**3. Follow the instructions in Add Printer Wizard.**

If the printer driver is on a CD-ROM, the location of the driver is "\\DRIVERS\\(PCL5E or PS)\\XP\_VISTA\\(language)\\DISK1" or "\\DRIVERS\\PCL6\\XP\_VISTA\\MUI\\DISK1". If the installer starts, click [Cancel] to quit.

**4. Specify a port.**

**Note**

- Available ports vary according to your Windows operating system or the type of interface. For details, see "Preparing the Machine", Printer Reference.
- The PCL6 printer driver is installed in the language specified by your operating system.

## 4

---

### Windows XP Home Edition

---

This section describes the procedure under Windows XP Home Edition.

1. On the [Start] menu, click [Control Panel].
2. Click [Printer and Other Hardware].
3. Click [Printers and Faxes].
4. Click [Add a Printer].
5. Follow the instructions in Add Printer Wizard.

If the printer driver is on a CD-ROM, the location of the driver is "\\DRIVERS\\(PCL5E or PS)\\XP\_VISTA\\(language)\\DISK1" or "\\DRIVERS\\PCL6\\XP\_VISTA\\MUI\\DISK1". If the installer starts, click [Cancel] to quit.

**6. Specify a port.**

**Note**

- Available ports vary according to your Windows operating system or the type of interface. For details, see "Preparing the Machine", Printer Reference.
- The PCL6 printer driver is installed in the language specified by your operating system.

---

### Windows Vista or Windows Server 2008

---

This section describes the procedure under Windows Vista.

1. On the [Start] menu, click [Control Panel].
2. Click [Hardware and Sound].
3. Click [Printers].
4. Click [Add a printer].

**5. Follow the instructions in Add Printer Wizard.**

If the printer driver is on a CD-ROM, the location of the driver is "\DRIVERS\ (PCL5E or PS)\XP\_VISTA \ (language)\DISK1" or "\DRIVERS\PCL6\XP\_VISTA\MUI\DISK1". If the installer starts, click [Cancel] to quit.

**6. Specify a port.****↓ Note**

- Available ports vary according to your Windows operating system or the type of interface. For details, see "Preparing the Machine", Printer Reference.
- The PCL6 printer driver is installed in the language specified by your operating system.

# If USB Connection Fails

This section describes how to troubleshoot a problem related to USB connections.

Problem	Cause	Solution
The machine is not automatically recognized.	The USB cable is not connected properly.	Disconnect the USB cable, and then turn off the main power switch. Turn the machine on again. When the machine has fully booted up, reconnect the USB cable.
Windows has already configured the USB settings.	Check whether the computer has identified the machine as an unsupported device.	Open Windows' Device Manager, and then, under [Universal Serial Bus controllers], remove any conflicting devices. Conflicting devices have a [!] or [?] icon by them. Take care not to accidentally remove required devices. For details, see Windows Help.

# Messages Displayed When Using the Printer Function

This section describes the principal messages that appear on the panel display. If a message not described here appears, act according to the message.

## Status Messages

This section describes the machine status messages.

Message	Status
"Hex Dump Mode"	In the Hex Dump mode, the machine receives data in hexadecimal format. Turn off the machine after printing, and then turn back on.
"Job Suspended..."	Printing was temporarily stopped by SmartDeviceMonitor for Client.  You can resume printing via [My Job List] in SmartDeviceMonitor for Client, or via the Web Image Monitor. To resume printing via Web Image Monitor, check with your system administrator first.
"Offline"	The machine is offline. To start printing, switch the machine online by pressing [↗Online].
"Please wait."	This message might appear for a second or two while the machine is preparing, performing initial adjustments, or adding toner. Wait a while.
"Printing..."	The machine is printing. Wait a while.
"Ready"	This is the default ready message. The machine is ready for use. No action is required.
"Resetting job..."	The machine is resetting the print job. Wait until "Ready" appears on the display panel.
"Setting change..."	The machine is setting changing. You cannot use the control panel while this message is displayed. Wait a while.
"Waiting for print data..."	The machine is waiting for the next data to print. Wait a while.

## Messages Displayed on the Control Panel When Using the Printer Function

This section describes likely causes of and possible solutions for the error messages that appear on the control panel.

### ↓ Note

- Before turning the main power off, see "Turning On/Off the Power", About This Machine.

Message	Cause	Solution
"Authentication has failed."	The entered login user name or login password is not correct.	Inquire the user administrator for the correct login user name and login password.
"Authentication has failed."	The machine cannot perform authentication.	Contact the administrator.
"Cannot connect with the wireless card. Turn the main power switch off, then check the card."	<ul style="list-style-type: none"> <li>• The wireless LAN interface unit was not inserted when the machine was turned on.</li> <li>• The wireless LAN interface unit was pulled out after the machine turned on.</li> <li>• The settings are not updated although the unit is detected.</li> </ul>	Turn off the machine, and check the wireless LAN interface unit is inserted correctly. Then, turn the machine on again. If the message appears again, call your service representative.
"Load following paper in n." "To cancel job, press [Job Reset]." (A figure is placed at n)	The printer driver settings are incorrect or the tray does not contain paper of the size selected in the printer driver.	Check that the printer driver settings are correct, and then load paper of the size selected in the printer driver into the input tray. For details about how to change the paper size, see p.106 "Changing the Paper Size".
"Paper size and type are mismatched. Select another tray from the following and press [Continue]. To cancel job, press [Job Reset]. Paper size and type can also be changed in User Tool."	The printer driver settings are incorrect or the tray does not contain paper of the size or type selected in the printer driver.	Check that the printer driver settings are correct, and then load paper of the size selected in the printer driver into the input tray. For details about how to change the paper size, see p.106 "Changing the Paper Size".



Message	Cause	Solution
"Parallel I/F board has a problem."	An error has occurred in the parallel interface board.	Turn the main power switch off, and back on again. If the message appears again, contact your service representative.
"Printer font error."	An error has occurred in the font settings.	Contact your service representative.
"Problem with Hard Disk."	An error has occurred in the hard disk drive.	Turn the main power switch off, and back on again. If the message appears again, contact your service representative.
"Problem with the network interface."	An error has occurred in the Ethernet board.	Turn the main power switch off, and back on again. If the message appears again, contact your service representative.
"Problems with the wireless board."	Access to the wireless board in which the wireless LAN interface unit is inserted is possible, but an error was detected.	Turn the main power switch off, and check the wireless board is inserted correctly. And then, turn the main power switch on again. If the message appears again, contact your service representative.
"Problems with the wireless card."	<ul style="list-style-type: none"> <li>The installed wireless LAN or Bluetooth card is not compatible with this machine.</li> <li>An error has occurred in either the wireless LAN or Bluetooth card.</li> </ul>	Turn the main power switch off, and check the wireless card. And then, turn the main power switch on again. If the message appears again, contact your service representative.
"The selected file(s) contained file(s) without access privileges. Only file(s) with access privileges will be deleted."	You have tried to delete files without the authority to do so.	Files can be deleted by the person who created the file. To delete a file which you are not authorized to delete, contact the person who created the file.

Message	Cause	Solution
"The tray selected for other pages is the same as the one for Slip Sheets ([Designate]). Cannot print." "Check the setting."	The tray selected for other pages is the same as the one for slip sheets.	Reset the job. Be sure the tray you select for slip sheets is not providing paper for other pages.
"Updating the destination list... Please wait. Specified destination(s) or sender's name has been cleared."	The destination list is being updated from the network using Web Image Monitor.	Wait until the message disappears. Do not switch off the power while this message is displayed. Depending on the number of destinations to be updated, there may be some delay before you can resume operation. Operations are not possible while this message is displayed.
"USB has a problem."	An error has occurred in the USB interface.	Turn the main power switch off, and back on again. If the message appears again, contact your service representative.
"You do not have the privileges to use this function."	The logged in user name does not have permission for the selected function.	Contact the administrator about the permission for the required function.

## Messages Printed on the Error Logs or Reports

This section describes likely causes of and possible solutions for the error messages that are printed on the error logs or reports.

Message	Cause	Solution
"84: Error"	There is no work area available for image processing.	<ul style="list-style-type: none"> <li>In [Printer Features], under [System], set [Memory Usage] to [Font Priority].</li> <li>Decrease the number of files sent to the machine.</li> </ul>
"85: Error"	The specified graphics library is unavailable.	Check that the data is valid.

Message	Cause	Solution
"86: Error"	Parameters of the control code are invalid.	Set the parameters correctly.
"91: Error"	Printing was canceled by the auto job cancel function due to a command error.	Check that the data is valid.
"92: Error"	Printing was canceled because [Job Reset] or the [Clear/Stop] key was selected on the machine's control panel.	Perform the print operation again if necessary.
"Address book is currently in use by another function. Authentication has failed."	The machine currently cannot perform authentication because the address book is being used by another function.	Wait a while, and then retry the operation.
"Auto-registration of user information has failed."	Automatic registration of information for LDAP Authentication or Windows Authentication failed because the address book is full.	Contact the administrator.
"Cannot store data of this size."	The paper size exceeded the capacity of the document server.	Reduce the paper size of the file that you want to send to a size that the document server can store. Custom size files can be sent but not stored afterward.
"Collate Cancelled"	Collate was canceled.	Turn the main power switch off and then back on again. If the message appears again, contact your sales or service representative.
"Data Storage Error"	You tried to print a Sample Print, Locked Print, Hold Print, or Stored Print file, or to store a file in the document server when the HDD is malfunctioning.	Contact your service representative.

Message	Cause	Solution
"Document server is not available to use. Cannot store."	You cannot use the document server function.	Contact the administrator.
"Duplex Cancelled"	Duplex printing was canceled.	<ul style="list-style-type: none"> <li>Select the proper paper size for the duplex function. See "Specifications for the Main Unit", About This Machine.</li> <li>In [Tray Paper Settings], under "Paper Type", set [Apply Duplex] to [Yes].</li> </ul>
"Exceeded max capacity of document server. Cannot store."	The HDD became full after a file was stored.	Delete some of the files stored in the document server or reduce the size that you want to send.
"Exceeded max. capacity of system file. Cannot print PDF file(s)."	PDF file do not print out because the capacity of file system is full.	Delete all unnecessary files from the hard disk, or decrease the file size sent to the machine.
"Exceeded max number of files of document server. Cannot store."	The maximum file capacity of the document server was exceeded.	Delete some of the files stored in the document server.
"Exceeded max number of pages of document server. Cannot store."	The maximum page capacity of the document server was exceeded.	Delete some of the files stored in the document server or reduce the number of pages that you want to send.
"Exceeded Max. Pages (Collate)"	The number of pages exceeds the maximum number of sheets that you can use Collate with.	Reduce the number of pages to print.
"Exceeded Max. Stored Files"	While printing a Sample Print, Locked Print, Hold Print or Stored Print file, the maximum file capacity was exceeded.	Delete unneeded files stored in the machine.
"Exceeded Max. Stored Pages"	While printing a Sample Print, Locked Print, Hold Print or Stored Print file, the maximum page capacity was exceeded.	Delete unneeded files stored in the machine. Reduce the number of pages to print.

Message	Cause	Solution
"File system error. Cannot print PDF file(s)."	PDF direct printing could not be performed because the file system could not be obtained.	In [Printer Features], under [System], set [Memory Usage] to [Font Priority].
"HDD Full"	The HDD became full while printing a Sample Print, Locked Print, Hold Print or Stored Print file.	Delete unneeded files stored in the machine.  Alternatively, reduce the data size of the Sample Print, Locked Print, Hold Print or Stored Print file.
"HDD Full"	When printing with the PostScript 3 printer driver, the HDD's capacity for fonts and forms has been exceeded.	Delete unneeded forms or fonts registered in the machine.
"I/O Buffer Overflow"	An input buffer overflow occurred.	<ul style="list-style-type: none"> <li>In [Printer Features], under [System], set [Memory Usage] to [Font Priority].</li> <li>In [Printer Features], under [Host Interface], select [I/O Buffer], and then set the maximum buffer size to a larger value.</li> <li>Reduce the number of files being sent to the machine.</li> </ul>
"Information for user authentication is already registered for another user."	The user name for LDAP or Integration Server authentication was already registered in a different server with a different ID, and a duplication of the user name occurred due to a switching of domains (servers), etc.	Contact the administrator.
"Job cancelled because capture file could not be stored: Exceeded max. files."	The maximum file capacity of the document server was exceeded.	Delete the files stored in the document server.
"Job cancelled because capture file could not be stored: Exceeded max. memory."	The HDD became full after a file was stored.	Delete the files stored in the document server or reduce the file size to be sent.

Message	Cause	Solution
"Job cancelled because capture file could not be stored: Exceeded max pages per file."	The maximum page capacity of the document server was exceeded.	Delete some of the files stored in the document server or reduce the number of pages that you want to send.
"No response from the server. Authentication has failed."	A timeout occurred while connecting to the server for LDAP authentication or Windows Authentication.	Check the status of the server.
"Output Tray Changed"	The output tray was changed because the paper size of the specified output tray is limited.	Specify the proper output tray.
"PDF file error. Cannot print."	A syntax error, etc., occurred.	Check that the PDF file is valid.
"PDF file printing is not allowed. Cannot print."	The PDF document you have tried to print has no privileges to print.	Contact the owner of the document.
"PDF password is incorrect. Cannot print."	The password of the encrypted PDF file has been entered incorrectly.	Enter the correct password.
"Print Overrun"	Images were discarded while printing.	<b>Only when using PCL5e</b> On the printer driver's [Print Quality] tab, select a lower resolution in the "Resolution" area.
"Punch Cancelled"	Punch printing was canceled.	Check the paper orientation, print orientation, and punch position. Certain settings can produce print results that might not be as expected.
"Receiving data failed."	Data reception was aborted.	Resend the data.
"Staple Cancelled"	Stapling printing was canceled.	Check the paper orientation, paper quantity, print orientation, and staple position. Certain settings can produce print results that might not be as expected.

Message	Cause	Solution
"The selected paper size is not supported. This job has been cancelled."	Job reset is automatically performed if the specified paper size is incorrect.	Specify the correct paper size and print the file again.
"You do not have a privilege to use this function. This job has been cancelled."	The entered login user name or login password is not correct.	Check that the user name and password are correct.
"You do not have a privilege to use this function. This job has been cancelled."	The logged in user is not allowed to use the selected function.	Contact the administrator.

If the printing does not start, contact your service representative.

#### Note

- The contents of errors may be printed on the Configuration Page. Check the Configuration Page in conjunction with the error log. For details about how to print the Configuration Page, see "List / Test Print", General Settings Guide.


## Checking the Error Log

If files could not be stored due to printing errors, identify the cause of the errors by checking the error log on the control panel.

#### Important


- The most recent 30 errors are stored in the error log. If a new error is added when there are 30 errors already stored, the oldest error is deleted. However, if the earliest error is a Sample Print, Locked Print, Hold Print, or Stored Print error, it is not deleted. The error is stored separately until the number of errors reaches 30.
- If the main power switch is turned off, the log is deleted.
- You cannot view [Error Log] on the simplified display.

1. Press the [Printer] key to display the printer screen.

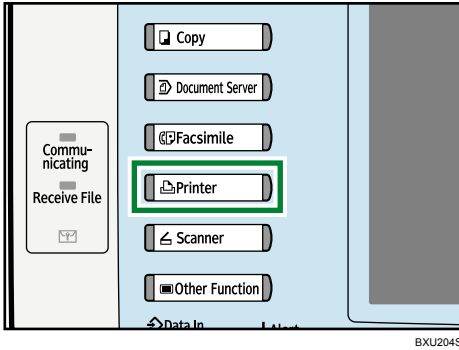

4

2. Press [Error Log].

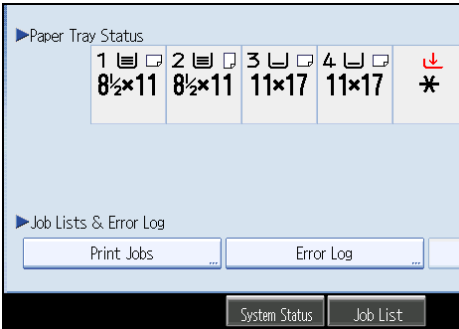

An error log list appears.

3. Press the desired job list, and then press [Details].

A detailed error log appears.



# When You Cannot Print

This section describes what to do if printing does not start even after performing [Print].

Problem	Cause	Solution
Printing does not start.	The power is off.	Check the cable is securely plugged into the power outlet. Turn on the main power switch.
Printing does not start.	The machine is set to "Offline".	Press [ <b>Online</b> ].
Printing does not start.	The cause is displayed on the display of the control panel.	Check the error message or warning status on the display panel and take the required action.
Printing does not start.	The interface cable is not connected correctly.	Connect the interface cable securely. If it has a fastener, fasten that securely as well. See "Connecting to the Interfaces", General Settings Guide.
Printing does not start.	The correct interface cable is not being used.	The type of interface cable you should use depends on the computer. Be sure to use the correct one. If the cable is damaged or worn, replace it. See "Connecting to the Interfaces", General Settings Guide.
Printing does not start.	The interface cable was connected after the machine was switched on.	Connect the interface cable before turning on the machine.
Printing does not start.	If the machine is using wireless LAN, failure to print might result from a weak wireless signal.	In [System Settings], under [Interface Settings], select [Wireless LAN], and then press [Wireless LAN Signal] to check signal status. If signal quality is poor, move the machine to a location where radio waves can pass or remove objects that might cause interference.  (You can check signal status only when using wireless LAN in the infrastructure mode.)

Problem	Cause	Solution
Printing does not start.	If the machine is using wireless LAN, SSID settings are incorrect.	Check using the machine's display panel that the SSID is correctly set. See "Connecting the Machine", General Settings Guide.
Printing does not start.	If the machine is using wireless LAN, the receiver's MAC address may be preventing communication with the access point.	Check access point settings when in the infrastructure mode. Depending on the access point, client access may be limited by MAC address. Also, check there are no problems in transmission between access point and wired clients, and between access point and wireless clients.
Printing does not start.	The wireless LAN interface is not working.	Confirm the orange LED is lit, and the green LED is lit or blinks during transmission.
Printing does not start.	The login user name, login password, or driver encryption key is invalid.	Check the login user name, login password, or driver encryption key.
Printing does not start.	Advanced encryption has been set using the extended security function.	Check the settings of the extended security function with the administrator.
Data In indicator does not light up or flash.	If the Data In indicator does not light up or flash even after the print job starts, the machine has not received the data.	<ul style="list-style-type: none"> <li>When the machine is connected to a computer via a cable, check the computer print port settings are correct. For details, see p.73 "When the Data In Indicator Does Not Light Up or Flash".</li> <li>When it is networked with a computer, contact the administrator.</li> </ul>
[List / Test Print] is disabled.	A mechanical error might have occurred.	Contact your service representative.

Problem	Cause	Solution
Printing does not start when using the extended wireless LAN in Ad-hoc mode.	The correct Communication mode is not set.	<ul style="list-style-type: none"> <li>• Turn the main power off and back on. See "Turning On/Off the Power", About This Machine.</li> <li>• In [System Settings], under [Interface Settings], select [Wireless LAN], and then set [Communication Mode] to [802.11 Ad-hoc Mode] and [Security Method] to [Off]. Then at the other side, set [SSID Setting] and [Ad-hoc Channel] to the same values.</li> </ul>

If the printing does not start, consult your service representative.

## When the Data In Indicator Does Not Light Up or Flash

When the Data In indicator does not light up or flash after starting a print job, data is not being sent to the machine.

### When the machine is connected to the computer using the interface cable

This section describes how to check the print port when the Data In indicator does not light up or blink.

Check if the print port setting is correct. When it is connected using a parallel interface, connect it to LPT1 or LPT2.

#### For Windows 2000

1. Click the [Start] button, point to [Settings], and then click [Printers].
2. Click the icon of the machine. On the [File] menu, click [Properties].
3. Click the [Ports] tab.
4. In the [Print to the following port(s)] list, confirm the correct port is selected.

#### For Windows XP Professional or Windows Server 2003/2003 R2

1. Click the [Start] button, and then click [Printers and Faxes].
2. Click the icon of the machine. On the [File] menu, click [Properties].
3. Click the [Ports] tab.
4. In the [Print to the following port(s)] list, confirm the correct port is selected.

#### **For Windows XP Home Edition**

1. Click the [Start] button, and then click [Control Panel].
2. Click [Printers and Other Hardware].
3. Click [Printers and Faxes].
4. Click the icon of the machine. On the [File] menu, click [Properties].
5. Click the [Ports] tab.
6. In the [Print to the following port(s)] list, confirm the correct port is selected.

#### **For Windows Vista or Windows Server 2008**

1. Click the [Start] button, and then click [Control Panel].
2. Click [Printers].
3. Click the icon of the machine. On the [Organize] menu, click [Properties].
4. Click the [Ports] tab.
5. In the [Print to the following port(s)] list, confirm the correct port is selected.

#### **Network connection**


---


Contact the network administrator.

## Other Printing Problems

This section describes likely causes of and possible solutions for problems that can occur when printing from a computer.

### When you cannot print clearly

Problem	Cause	Solution
The printed image is smudged.	Settings for thick paper have not been made when printing on thick paper in the bypass tray.	<p><b>PCL 5e</b></p> <p>On the printer driver's [Paper] tab, select [Bypass Tray] in the "Input Tray:" list. And then in the "Type:" list, select "Thick".</p> <p><b>PCL 6</b></p> <p>On the printer driver's [Detailed Settings] tab, click [Paper] in the "Menu:", and select [Bypass Tray] in the "Input Tray:" list. And then in the "Paper Type:" list, select "Thick".</p> <p><b>PostScript 3</b></p> <p>On the printer driver's [Detailed Settings] tab, click [Paper] in the "Menu:", and select [Bypass Tray] in the "Paper Source:" list. And then in the "Media Type:" list, select "Thick".</p>
The printed image is faded over the entire page.	When  is blinking, toner is beginning to run out.	Add toner. See p. 111 "Adding Toner".
The printed image is faded over the entire page.	The paper is damp.	Use paper that has been stored in the recommended temperature and humidity condition. See "Paper Storage", About This Machine.
The printed image is faded over the entire page.	The paper is unsuitable.	Use recommended paper. Printing on coarse or treated paper might result in faint print image. See "Recommended Paper Sizes and Types", About This Machine.

Problem	Cause	Solution
The printed image is faded over the entire page.	If the [Toner Saving] is selected in the printer driver settings, the entire page will be faded when printed.	<p><b>PCL 5e</b></p> <p>On the printer driver's [Print Quality] tab, select [Off] in the "Toner Saving" area.</p> <p><b>PCL 6</b></p> <p>On the printer driver's [Detailed Settings] tab, click [Print Quality] in the "Menu:", and then select [Off] in the "Toner Saving:" list.</p> <p><b>PostScript 3</b></p> <p>On the printer driver's [Detailed Settings] tab, click [Print Quality] in the "Menu:", and then select [Off] in the "Print Mode" list.</p>
Images smudge when rubbed. (Toner is not fixed.)	The specified paper type and the paper that is actually loaded might be different. For example, thick paper might be loaded but not specified as the paper type.	<p><b>PCL 5e</b></p> <p>On the printer driver's [Paper] tab, select a proper paper type in the [Type:] list.</p> <p><b>PCL 6</b></p> <p>On the printer driver's [Detailed Settings] tab, click [Paper] in the "Menu:", and then select a proper paper type in the "Paper Type:" list.</p> <p><b>PostScript 3</b></p> <p>On the printer driver's [Detailed Settings] tab, click [Paper] in the "Menu:", and then select a proper paper type in the "Media Type:" list.</p>
The printed image is different from the image on the computer's display.	With certain functions, such as enlargement and reduction, image layout might be different to that on the computer display.	In the application, change the layout, character size, and character settings.
White lines appear.	When  is blinking, toner is beginning to run out.	Add toner. See p.111 "Adding Toner".

Problem	Cause	Solution
When printing graphics, the output and the screen are different.	If the printer driver is configured to use the graphics command, the graphics command from the machine is used to print.	If you want to print accurately, set the printer driver to print without using the graphics command. See the printer driver Help.
Lines of garbled or unwanted alphanumeric characters appear.	An incorrect printer language might have been selected.	Set the correct printer language.
Images are cut off, or excess is printed.	You may be using paper smaller than the size selected in the application.	Use the same size paper as that selected in the application. If you cannot load paper of the correct size, use the reduction function to reduce the image, and then print. See the printer driver Help.
Photo images are coarse.	Some applications print at lower resolution.	Use the application's settings to specify a higher resolution.
Fine dot patterns are not printed, or solid lines are printed as broken lines.	Dither patterns do not match.	<b>Only when using PostScript 3</b> On the Printer driver's [Detailed Settings] tab, click [Print Quality] in the "Menu:", and then change the "Dithering" setting.
Fine lines are fuzzy, of inconsistent thickness, or do not appear.	Super fine lines have been specified in the application.	<b>Only when using PostScript 3</b> On the Printer driver's [Detailed Settings] tab, click [Print Quality] in the "Menu:", and then change the "Dithering" setting.  If the problem continues after you change the dithering settings, use the settings of the application in which the image was created to change the thickness of the lines.

**When paper is not fed properly**

Problem	Cause	Solution
Paper is not fed from the selected tray.	When you are using a Windows operating system, printer driver settings override those settings using the display panel.	<p><b>PCL 5e</b></p> <p>On the printer driver's [Paper] tab, select the desired input tray in the "Input Tray:" list.</p> <p><b>PCL 6</b></p> <p>On the Printer driver's [Detailed Settings] tab, click [Paper] in the "Menu:", select the desired input tray in the "Input Tray:" list.</p> <p><b>PostScript 3</b></p> <p>On the Printer driver's [Detailed Settings] tab, click [Paper] in the "Menu:", select the desired input tray in the "Paper Source:" list.</p>
Images are printed at a slant.	The tray's side fences might not be locked.	Check the side fences are locked. See p.106 "Changing the Paper Size".
Images are printed at a slant.	The paper is feeding in at a slant.	Load the paper correctly. See p.101 "Loading Paper".
Misfeeds occur frequently.	The number of sheets loaded exceeds the capacity of the machine.	<ul style="list-style-type: none"> <li>When loading paper into the paper tray, load paper only as high as the upper limit markings on the side fences of the paper.</li> <li>When loading paper on the bypass tray, load only as much paper as can be held between the guides on the bypass tray.</li> </ul>
Misfeeds occur frequently.	The paper is damp.	Use paper that has been stored in the recommended temperature and humidity condition. See "Paper Storage", About This Machine.
Misfeeds occur frequently.	The paper is too thick or too thin.	Use recommended paper. See "Recommended Paper Sizes and Types", About This Machine.



Problem	Cause	Solution
Misfeeds occur frequently.	The copy paper is wrinkled or has been folded/creased.	Use recommended paper only and be sure its storage environment meets the recommended temperature and humidity conditions. For details about recommended paper and the proper way to store it, see "Recommended Paper Sizes and Types" and "Paper Storage", About This Machine.
Misfeeds occur frequently.	Printed paper is being used.	Do not use paper that has been already copied or printed onto.
Misfeeds occur frequently.	The paper tray's side fences are set too tightly.	Push the side fences lightly, and then reset it.
Copy paper becomes creased.	The paper is damp.	Use paper that has been stored in the recommended temperature and humidity condition. See "Paper Storage", About This Machine.
Copy paper becomes creased.	The paper is too thin.	Use recommended paper. See "Recommended Paper Sizes and Types", About This Machine.
Duplex printing is malfunctioning.	Duplex printing cannot be done with paper set in the bypass tray.	When using duplex printing, make settings to use paper from a tray other than the bypass tray.
Duplex printing is malfunctioning.	You have loaded thick paper heavier than 105 g/m <sup>2</sup> .	Change the paper.
Duplex printing is malfunctioning.	[Apply Duplex] is set to [No] for "Paper Type".	In [Tray Paper Settings], under "Paper Type", set [Apply Duplex] to [Yes].
Duplex printing is malfunctioning.	You cannot select duplex printing if the paper type is set to [OHP (Transparency)], [Thin Paper], [Label Paper], or [Thick Paper].	In [Tray Paper Settings], under "Paper Type", select a paper type other than [OHP (Transparency)], [Thin Paper], [Label Paper], or [Thick Paper].

**Other printing problems**

Problem	Cause	Solution
It takes a long time to complete a print job.	"Sleep mode" might be set.	The machine requires time to warm up if it has been in "Sleep mode". In [System Settings], under [Timer Settings], select [Auto Off Timer], and then specify "Sleep mode".
It takes a long time to complete a print job.	Photographs and other data intensive pages take a long time for the machine to process, so simply wait when printing such data.	<p>If the Data In indicator is blinking, data has been received by the printer. Wait for a moment.</p> <p>Changing the following settings with the printer driver may help speed up printing:</p> <p><b>Only when using PCL5e</b></p> <p>On the printer driver's [Print Quality] tab, select a lower resolution in the "Resolution" area.</p>
Images are printed in the wrong orientation.	The feed orientation you selected and the feed orientation selected in the printer driver's option setup might not be the same.	Set the machine's feed orientation and the printer driver's feed orientation accordingly. See the printer driver Help.
When using Windows 2000/ XP/ Vista and Windows Server 2003/ 2003 R2/2008, optional components connected to the machine are not recognized.	Bidirectional communication is not working.	Set up optional devices on the Properties of the printer. See the printer driver Help.
When using Windows 2000/ XP/ Vista and Windows Server 2003/ 2003 R2/2008, combined printing, booklet printing, or Auto Reduce / Enlarge printing does not come out as expected.	The correct application or printer driver settings are not made.	Make sure the application's paper size and orientation settings match those of the printer driver. If a different paper size and orientation are set, select the same size and orientation.

Problem	Cause	Solution
A print instruction was issued from the computer, but printing did not start.	User Authentication may have been set.	Contact the administrators.
The print job is not canceled even when the machine is switched to offline status.	Even when the machine is offline, printing is performed when [Job Acceptance Priority] has been set in [Parallel Interface] in the [Interface Settings] in the [System Settings] menu.	Change the setting of Signal Control to Printer priority. See "Interface Settings", General Settings Guide.
PDF files do not print out/ cannot perform PDF direct print.	PDF files are password-protected.	To print password-protected PDF files, enter the password in the [PDF Menu] or on Web Image Monitor. For details, see "Printing a PDF File Directly", Printer Reference, or the Web Image Monitor's Help.
PDF files do not print out/ cannot perform PDF direct print.	PDF files cannot be printed if they are print-disabled in PDF file security setting.	Change the PDF file security setting.
PDF files do not print out/ cannot perform PDF direct print.	High compression PDF files created using the machine's scanner function cannot print directly.	Open the application used to create the PDF, and then print the file using the application's driver.  Re-save the file in normal (non-compressed) PDF format.  Some types of High Compression PDF files are not supported. Consult your sales representative about the supported file types.
PDF direct print produces strange or malformed characters.	Fonts were not embedded.	Embed fonts in the PDF file you want to print and then print.
Printing by Bluetooth is slow.	The number of jobs exceeds the capacity of the machine.	Reduce the number of jobs.

Problem	Cause	Solution
Printing by Bluetooth is slow.	<ul style="list-style-type: none"><li>• A communication error might have occurred.</li><li>• Interference from the wireless LAN devices can reduce communication speed.</li><li>• Bluetooth transmission speeds are not high.</li></ul>	<ul style="list-style-type: none"><li>• Remove the machine from close proximity with the wireless LAN devices.</li><li>• If there are active wireless LAN devices or other Bluetooth devices nearby, relocate the machine or disable those devices.</li></ul>

4

If the problem cannot be solved, contact your service representative.

# 5. Troubleshooting When Using the Scanner Function

This chapter describes likely causes of and possible solutions for scanner function problems.

## When Scanning Is Not Done As Expected

This section describes causes and remedies when scan results are not as expected.

Problem	Cause	Solution
The scanned image is dirty.	The exposure glass, scanning glass or ADF is dirty.	Clean them. See p.139 "Maintaining Your Machine".
The image is distorted or out of position.	The original was moved during scanning.	Do not move the original during scanning.
The image is distorted or out of position.	The original was not pressed flat against the exposure glass.	Make sure the original is pressed flat against the exposure glass.
The scanned image is upside down.	The original was placed upside down.	Place the original in the correct orientation. See "Setting of Original Feed Type", Scanner Reference.
No image results from scanning.	The original was placed with the front and back reversed.	When the original is placed directly on the exposure glass, the side to be scanned must face down. When the original is fed via the ADF, the side to be scanned must face up.
Images are scanned in rotated.	If you set the original with its top edge backward and save full color/gray scale images as a TIFF or JPEG file, they are scanned in rotated.	When placing a stack of originals in the ADF, place their top edges first. See "Setting of Original Feed Type", Scanner Reference.

Problem	Cause	Solution
The scanned image contains white spaces.	<ul style="list-style-type: none"><li>• If you scan originals using functions other than the network TWAIN scanner function, certain paper size and resolution settings may produce scanned images that are larger than the specified size because of margins being added to the sides.</li><li>• If the File Format Converter (optional) is installed, the margins may become wider.</li></ul>	Scanning at a higher resolution may reduce the margins.
The scanned image is grayed out or a text pattern appears in the background.	You have scanned a copy guarded document protected from unauthorized copying.	Check the document. For details about how to prevent unauthorized copying of the document, see "Preventing an Unauthorized Copy", About This Machine.
After an original is scanned, the following settings are canceled:  Destination, Sender, E-mail text, Subject, and File name	To prevent the scanned data being sent to the wrong destination, this machine has a function that cancels the settings once the scanned data is sent.	Contact your service representative.

# When You Cannot Send Scanned Files

This section describes likely causes of and solutions for problems related to network delivery and sending e-mail.

## When Stored Files Cannot Be Accessed

This section describes likely causes of and possible solutions for job access-related problems.

Problem	Cause	Solution
The stored file is locked and is not accessible.	The file, which is password protected, is locked because the password was incorrectly entered ten times.	Contact the administrator.

5

## When You Cannot Browse the Network to Send a Scan File

This section describes likely causes of and possible solutions for the network browsing failing to operate when files are sent.

Problem	Cause	Solution
The network cannot be browsed when specifying the destination folder.	The following machine settings may not be correct: <ul style="list-style-type: none"> <li>• IP address</li> <li>• Subnet Mask</li> </ul>	Check the settings. See "Connecting the Machine", General Settings Guide.

## When the TWAIN Driver Cannot Be Started

This section describes likely causes of and possible solutions for the TWAIN driver-related problems.

Problem	Cause	Solution
The Scanner Properties dialog box cannot be displayed.	Advanced encryption has been specified in the extended security setting.	For details about the extended security setting, contact an administrator.

## When Stored Files Cannot Be Edited

This section describes likely causes of and possible solutions for stored files being unable to be edited.

Problem	Cause	Solution
Stored files cannot be deleted. File names and passwords cannot be changed. Files cannot be redelivered.	Limits have been imposed using the available extended security function.	Contact the administrator.

## When the Network Delivery Function Cannot Be Used

5

This section describes likely causes of and possible solutions for the network delivery function problems.

Problem	Cause	Solution
Cannot use the network delivery function.	The delivery software may be an old version or a security setting may be specified.	Contact the administrator.
Cannot use the network delivery function.	The network delivery function setting is not correct.	Specify it correctly. See "Network Settings Required to Use the Network Delivery Scanner", General Settings Guide.

## When S/MIME Cannot Be Used

This section describes likely causes of and possible solutions for S/MIME-related problems.

Problem	Cause	Solution
If several destinations are selected for the broadcasting sequence, the data is sent over twice.	Encrypted e-mails are sent to the destinations for which S/MIME authentication is set, and plain text e-mails are sent to the destinations for which S/MIME authentication is not set.	Make sure S/MIME-authentication destinations are separate from plain text destinations.  Contact the administrator for details about destination settings.



Problem	Cause	Solution
When putting a signature on an e-mail using S/MIME, an e-mail address for "Sender" is not set for "From".	When S/MIME is applied, the administrator appears in the "From" field, and the sender appears in the "Reply-to" field.	Contact the administrator.

**Note**

- Using S/MIME makes e-mail larger than when not using S/MIME.

## Operations Are Not Possible When Messages Are Displayed

This section describes likely causes of and possible solutions for messages that appear and when the machine fails to operate.

Message	Cause	Solution
"Updating the destination list... Please wait. Specified destination(s) or sender's name has been cleared."	The destination list is being updated from the network using Web Image Monitor.	Wait until the message disappears. Do not switch off the power while this message is displayed. Depending on the number of destinations to be updated, there may be some delay before you can resume operation. Operations are not possible while this message is displayed.

## Messages Displayed When Using the Scanner Function

This section describes likely causes of and possible solutions for error messages that may appear on the machine's control panel and the client computer.

### Messages Displayed on the Control Panel When Using the Scanner Function

This section describes likely causes of and possible solutions for the error messages that appear on the control panel.

#### ★ Important

- If a message not described here appears, act according to the message. For details about how to turn off the main power switch, see "Turning On/Off the Power", About This Machine.

Message	Cause	Solution
"Authentication has failed."	The entered login user name or login password is not correct.	Inquire the user administrator for the correct login user name and login password.
"Authentication has failed."	The machine cannot perform authentication.	Contact the administrator.
"Authentication with the destination has failed. Check settings. To check the current status, press [Scanned Files Status]."	The entered user name or password was invalid.	<ul style="list-style-type: none"> <li>• Check that the user name and password are correct.</li> <li>• Check that the ID and password for the destination folder are correct.</li> <li>• A password of 128 or more characters may not be recognized.</li> </ul>
"Cannot detect original size. Select scan size."	The original placed on the exposure glass is a nonstandard size.	<ul style="list-style-type: none"> <li>• Place the original correctly.</li> <li>• Specify the scan size.</li> <li>• When placing an original directly on the exposure glass, the lifting/lowering action of the ADF triggers the automatic original size detection process. Lift the ADF by more than 30 degrees.</li> </ul>

Message	Cause	Solution
"Cannot find the specified path. Please check the settings."	The destination computer name or folder name is invalid.	Check whether the computer name and the folder name for the destination are correct.
"Cannot find the specified path. Please check the settings."	An antivirus program or a firewall is preventing the machine connecting to your computer.	<ul style="list-style-type: none"> <li>• Antivirus programs and firewalls can prevent client computers from establishing connection with this machine.</li> <li>• To prevent an antivirus application blocking the connection, register the facsimile program in the antivirus program's exclusion list. For details about the procedure for excluding a program, see your antivirus application's Help.</li> <li>• To prevent a firewall blocking the connection, register the machine's IP address in the firewall's IP address exclusion settings. For details about the procedure for excluding an IP address, see your firewall's Help.</li> </ul>
"Captured file exceeded max. number of pages per file. Cannot send the scanned data."	The maximum number of pages per file has been exceeded.	Reduce the number of pages in the transmitted file, and then resend the file. See "Storage function", Scanner Reference.
"Connection with LDAP server has failed. Check the server status."	A network error has occurred and connection has failed. Try the operation once more.	<ul style="list-style-type: none"> <li>• Try the operation once more. If the message is still shown, the network may be crowded.</li> <li>• In [System Settings], under [Administrator Tools], check the settings of LDAP server. For details, see "Programming the LDAP server", General Settings Guide.</li> </ul>

Message	Cause	Solution
"Destinations to which encrypted files will be sent contain users without certificates or with invalid certificates. Check the destinations."	The destination's S/MIME certificates are invalid or cannot be found.	Contact the administrator.
"Destinations to which encrypted files will be sent contain users that could not be verified by the certificates. Check the destinations."	S/MIME certificates are valid, but the Certificate Authority could not be found for the destination.	Contact the administrator.
"Entered user code is not correct."	You have entered an incorrect user code.	Check the authentication settings, and then enter a correct user code.
"Exceeded max. E-mail size. Sending E-mail has been cancelled. Check [Max. E-mail Size] in Scanner Features."	The maximum e-mail size has been exceeded.	<ul style="list-style-type: none"> <li>• In [Scanner Features], under [Send Settings], increase the size of [Max. E-mail Size].</li> <li>• In [Scanner Features], under [Send Settings], set [Divide &amp; Send E-mail] to [Yes (per Page)] or [Yes (per Max. Size)].</li> </ul>
"Exceeded max. No. of results to display. Max.: n" (A figure is placed at n.)	Search results have exceeded the max. displayable number.	Search again after changing the search conditions.
"Exceeded max. data capacity. Check scanning resolution, then press Start key again."	The scanned data exceeded maximum data capacity.	Specify the scan size and resolution again. Note that it may not be possible to scan very large originals at a high resolution. See "Relationship between Resolution and Scan Size", Scanner Reference.
"Exceeded max. data capacity. Check the scanning resolution, then reset original (s)."	The scanned original exceeded maximum data capacity.	Specify the scan size and resolution again. Note that it may not be possible to scan very large originals at a high resolution. See "Relationship between Resolution and Scan Size", Scanner Reference.

Message	Cause	Solution
"Exceeded max. number of alphanumeric characters for the path."	The maximum number of specifiable alphanumeric characters in a path has been exceeded.	The maximum number of characters which can be entered for the path is 256. Check the number of character you entered, and then enter the path again.
"Exceeded max. number of alphanumeric characters."	The maximum enterable number of alphanumeric characters has been exceeded.	Make sure the maximum number of characters which can be entered, and then enter it again. See "Values of Various Set Items for Transmission/Storage/Delivery Function", Scanner Reference.
"Exceeded max. number of files which can be sent at the same time. Reduce the number of the selected files."	The number of files exceeded the maximum number possible.	Reduce the number of files and send them again.
"Exceeded max. number of files which can be used in Document Server at the same time."	The maximum number of files that can be stored in the document server has been exceeded.	Check the files stored by the other functions, and then delete unneeded files. For details about how to delete files, see "Document Server", Copy/Document Server Reference.
"Exceeded max. number of pages per file. Do you want to store the scanned pages as 1 file?"	The file being stored has exceeded the max. number of pages for one file.	Specify whether to store the data or not. Scan the pages that were not scanned and store them as a new file. See "Storing Files Using the Scanner Function", Scanner Reference.
"Exceeded max. number of standby files. Try again after the current file is sent."	The maximum number of standby files was exceeded.	There are 100 files waiting in the sending queue for e-mail, Scan to Folder, or delivery functions. Wait until files have been sent.
"Exceeded max. number of stored files. Cannot send the scanned data as capturing files is unavailable."	Too many files are waiting to be delivered.	Try again after they have been delivered.
"Exceeded max. page capacity per file. Press [Send] to send the scanned data, or press [Cancel] to delete."	The number of scanned pages exceeded maximum page capacity.	Select whether to send the data so far.

Message	Cause	Solution
"Exceeded maximum number of file to store. Delete all unnecessary files."	Too many files are waiting to be delivered.	Try again after they have been delivered.
"Exceeded time limit for LDAP server search. Check the server status."	A network error has occurred and connection has failed.	<ul style="list-style-type: none"> <li>Try the operation once more. If the message is still shown, the network may be crowded.</li> <li>In [System Settings], under [Administrator Tools], check the settings of LDAP server. For details, see "Programming the LDAP server", General Settings Guide.</li> </ul>
"Invalid certificates or no S/MIME certificates were found."	The destination's S/MIME certificates are invalid or cannot be found.	Contact the administrator.
"LDAP server authentication has failed. Check the settings."	The user name and password differ from those set for LDAP Authentication.	In [System Settings], under [Administrator Tools], check the settings of LDAP server. For details, see "Programming the LDAP server", General Settings Guide.
"Memory is full. Cannot scan. The scanned data will be deleted."	Because of insufficient hard disk space, the first page could not be scanned.	Try one of the following measures: <ul style="list-style-type: none"> <li>Wait for a while, and then retry the scan operation.</li> <li>Reduce the scan area or scanning resolution. See "Items for Specifying Scan Settings", Scanner Reference.</li> <li>Delete unneeded stored files. See "Deleting a Stored File", Scanner Reference.</li> </ul>
"Memory is full. Do you want to store scanned file?"	Because there is not enough free hard disk space in the machine for storing in the Document Server, only some of the pages could be scanned.	Specify whether to use the data or not.

Message	Cause	Solution
"Memory is full. Scanning has been cancelled. Press [Send] to send the scanned data, or press [Cancel] to delete."	Because there is not enough free hard disk space in the machine for delivering or sending by e-mail while storing in the Document Server, only some of the pages could be scanned.	Specify whether to use the data or not.
"No paper. Load paper of one of the following sizes."	No paper is set in the specified paper tray.	Load paper of the sizes listed in the message. See p.101 "Loading Paper".
"Original is being scanned by another function. Switch to the following function, then press the Stop key to cancel scanning or press the Start key to continue."	A function of the machine other than the Scanner function is being used such as the Copier function.	Cancel the job in progress.  For example, press [Exit], and then press the [Copy] key. Next, press the [Clear/Stop] key. When the message "The Clear / Stop key was pressed. Are you sure you want to stop scanning?" appears, press [Stop].
"Output buffer is full. Sending the data has been cancelled. Please try again later."	Too many jobs are in standby state, and sending was canceled.	Retry sending after sending jobs in standby state completes.
"SMTP authentication E-mail address and Administrator E-mail address mismatch."	The SMTP authentication e-mail address and the administrator's e-mail address do not match.	Contact the administrator.
"Scanner journal is full." "Please check Scanner Features."	"Print & Delete Scanner Journal" in [Scanner Features] is set to [Do not Print: Disable Send], and Scanner Journal is full.	Print or delete Scanner Journal. For details, see "Scanner Features", Scanner Reference.
"Selected file is currently in use. File name cannot be changed."	You cannot change the name of a file whose status is "Waiting..." or that is being edited with DeskTopBinder.	Cancel transmission ("Waiting..." status cleared) or the DeskTopBinder setting, and then change the file name.

Message	Cause	Solution
"Selected file is currently in use. Password cannot be changed."	You cannot change the password of a file whose status is "Waiting..." or that is being edited with DeskTopBinder.	Cancel transmission ("Waiting..." status cleared) or the DeskTopBinder setting, and then change the password.
"Selected file is currently in use. User name cannot be changed."	You cannot change the sender's name whose status is "Waiting..." or that is being edited with DeskTopBinder.	Cancel transmission ("Waiting..." status cleared) or the DeskTopBinder setting, and then change the user name.
"Sending the data has failed. The data will be resent later."	A network error has occurred and a file was not sent correctly.	Wait until sending is retried automatically after the preset interval. If sending fails again, contact the network administrator.
"Some invalid destination(s) contained. Do you want to select only valid destination(s)?"	The specified group contains e-mail destinations and Scan to Folder destinations, either of which are incompatible with the specified transmission method.	In the message that appears at each transmission, press [Select].
"Some of selected files are currently in use. They could not be deleted."	You cannot delete a file which is waiting to be transmitted ("Waiting..." status displayed) or whose information is being changed with DeskTopBinder.	Cancel transmission ("Waiting..." status cleared) or the DeskTopBinder setting, and then delete the file.
"The destination list has been updated. Specified destination(s) or sender's name has been cleared."	A specified destination or sender's name was cleared when the destination list in the delivery server was updated.	Specify the destination or sender's name again.
"The selected file(s) contained file(s) without access privileges. Only file(s) with access privileges will be deleted."	You have tried to delete files without the authority to do so.	The files can be deleted by the file administrator. To delete a file which you are not authorized to delete, contact the administrator.



Message	Cause	Solution
"Transmission has failed. Insufficient memory in the destination hard disk. To check the current status, press [Scanned Files Status]."	Transmission has failed. There was not enough free space on the hard disk of the SMTP server, FTP server, or client computer at the destination.	Allocate sufficient space.
"Transmission has failed. To check the current status, press [Scanned Files Status]."	While a file was being sent, a network error occurred and the file could not be sent correctly.	Try the operation once more. If the message is still shown, the network may be crowded. Contact the network administrator. If multiple files were sent, use the Scanned Files Status screen to check for which file the problem occurred.
"Updating the destination list has failed. Try again?"	A network error has occurred.	Check whether the server is connected.
"Updating the destination list... Please wait. Specified destination(s) or sender's name has been cleared."	The destination list is being updated.	If a destination or sender's name was already selected, re-select it after this message disappears.
"You do not have the privileges to use this function."	The logged in user name does not have permission for the selected function.	Contact the administrator about the permission for the required function.

## Messages Displayed on the Client Computer

This section describes likely causes of and possible solutions for the main error messages displayed on the client computer when using the TWAIN driver.

### ★ Important

- If a message not described here appears, act according to the message. For information about how to turn off the main power switch, see "Turning On/Off the Power", About This Machine.

Message	Cause	Solution
"Any of Login User Name, Login Password or Driver Encryption Key is incorrect."	The entered login user name, password, or driver encryption key was invalid.	<ul style="list-style-type: none"> <li>Check the login user name, login password, and driver encryption key.</li> <li>Permission to use this function has not been granted. Contact the administrator.</li> </ul>
"Cannot add any more scanning mode."	The maximum number of registerable scan modes has been exceeded.	The maximum number of modes that can be stored is 100. Delete unneeded modes.
"Cannot connect to the scanner. Check the network Access Mask settings in User Tools."	An access mask is set.	Contact the network or scanner administrator.
"Cannot detect the paper size of the original. Specify the scanning size."	The set original was misaligned.	<ul style="list-style-type: none"> <li>Place the original correctly.</li> <li>Specify the scan size.</li> <li>When placing an original directly on the exposure glass, the lifting/lowering action of the ADF triggers the automatic original size detection process. Lift the ADF by more than 30 degrees.</li> </ul>
"Cannot find "XXX" scanner used for the previous scan. "YYY" will be used instead." ( "XXX" and "YYY" indicate scanner names.)	The main power switch of the previously used scanner is not set to "On".	Check whether the main power switch of the scanner used for the previous scan is turned on.

Message	Cause	Solution
"Cannot find "XXX" scanner used for the previous scan. "YYY" will be used instead." ( "XXX" and "YYY" indicate scanner names.)	The machine is not connected to the network correctly.	<ul style="list-style-type: none"> <li>• Check the previously used scanner is connected to the network correctly.</li> <li>• Cancel the Personal Firewall of the client computer. For details, see Windows Help.</li> <li>• Use an application such as telnet to make sure SNMPv1 or SNMPv2 is set as the machine's protocol. See "Connecting the Machine", General Settings Guide and "Using telnet", Network Guide.</li> <li>• Select the scanner used for the previous scan.</li> </ul>
"Cannot specify any more scanning area."	The maximum number of registerable scan areas has been exceeded.	The maximum number of scanning areas that can be stored is 100. Delete unneeded scanning area.
"Clear Misfeed(s) in ADF."	A paper misfeed has occurred inside the ADF.	<ul style="list-style-type: none"> <li>• Remove jammed originals, and place them again. For details, see p.121 "Removing Jammed Paper".</li> <li>• Check whether the originals are suitable to be scanned by the machine.</li> </ul>
"Communication error has occurred on the network."	A communication error has occurred on the network.	Check whether the client computer can use the TCP/IP protocol.
"Entered User Code is not registered or you do not have access privileges to use the scanner function, please contact your administrator."	Access is restricted with user codes.	Contact the administrator of the machine.

Message	Cause	Solution
"Error has occurred in the scanner driver."	An error has occurred in the driver.	<ul style="list-style-type: none"> <li>• Check whether the network cable is connected correctly to the client computer.</li> <li>• Check whether the Ethernet board of the client computer is recognized correctly by Windows.</li> <li>• Check whether the client computer can use the TCP/IP protocol.</li> </ul>
"Error has occurred in the scanner."	The application-specified scan conditions have exceeded the setting range of the machine.	<ul style="list-style-type: none"> <li>• Check whether the scanning settings made with the application exceed the setting range of the machine.</li> <li>• Disable the client computer's own firewall. For details, see Windows Help.</li> </ul>
"Fatal error has occurred in the scanner."	An unrecoverable error has occurred on the machine.	An unrecoverable error has occurred in the machine. Contact your service representative.
"Insufficient memory. Close all other applications, then restart scanning."	Memory is insufficient.	<ul style="list-style-type: none"> <li>• Close all the unnecessary applications running on the client computer.</li> <li>• Uninstall the TWAIN driver, and then reinstall it after restarting the computer.</li> </ul>
"Insufficient memory. Reduce the scanning area."	Scanner memory is insufficient.	<ul style="list-style-type: none"> <li>• Reset the scan size.</li> <li>• Lower the resolution.</li> <li>• Set with no compression. See TWAIN Driver help.</li> </ul> <p>The problem may be due to the following cause:</p> <ul style="list-style-type: none"> <li>• Scanning cannot be performed if large values are set for brightness when using halftone or high resolution. See "Relationship between Resolution and Scan Size", Scanner Reference.</li> </ul>

Message	Cause	Solution
"Invalid Winsock version. Please use version 1.1 or higher."	You are using an invalid version of Winsock.	Install the operating system of the computer or copy Winsock from the operating system CD-ROM.
"No response from the scanner."	The machine or client computer is not connected to the network correctly.	Check whether the machine or client computer is connected to the network correctly.
"No response from the scanner."	The network is crowded.	Wait for a while, and then try to reconnect.
"Scanner is in use for other function. Please wait."	A function of the machine other than the Scanner function is being used such as the Copier function.	<ul style="list-style-type: none"> <li>• Wait for a while and reconnect.</li> <li>• Cancel the job in progress.</li> </ul> <p>For example, press [Exit], and then press the [Copy] key. Next, press the [Clear/Stop] key. When the message "The Clear / Stop key was pressed. Are you sure you want to stop scanning?" appears, press [Stop].</p>
"Scanner is not available on the specified device."	The TWAIN scanner function cannot be used on this machine.	Contact your service representative.
"Scanner is not available. Check the scanner connection status."	The machine's main power switch is off.	Set the main power switch to "On".
"Scanner is not available. Check the scanner connection status."	The machine is not connected to the network correctly.	<ul style="list-style-type: none"> <li>• Check whether the machine is connected to the network correctly.</li> <li>• Deselect the personal firewall function of the client computer. For details, see Windows Help.</li> <li>• Use an application such as telnet to make sure SNMPv1 or SNMPv2 is set as the machine's protocol. See "Connecting the Machine", General Settings Guide and "Using telnet", Network Guide.</li> </ul>

Message	Cause	Solution
"Scanner is not ready. Check the scanner and the options."	The ADF cover is open.	Check whether the ADF cover is closed.
"The name is already in use. Check the registered names."	You tried to register a name that is already in use.	Use another name.

# 6. Adding Paper, Toner and Staples

This chapter explains how to load paper, add toner and staples, and replace the stamp cartridge.

## Loading Paper

This section describes what to do when paper runs out and needs reloading.

### CAUTION

- When loading paper, take care not to trap or injure your fingers.

### Note

- Fan the paper before loading.
- Straighten curled or warped paper before loading.
- For details about paper sizes and types, see "Recommended Paper Sizes and Types", About This Machine.
- To load paper in the bypass tray, see "Copying from the Bypass Tray", Copy/Document Server Reference.

6


## Loading Paper into the Paper Trays

This section describes how to load paper into the paper trays.

### Important

- Various sizes of paper can be loaded in the paper trays by adjusting the positions of side fences and end fence.
  - Check the paper edges are aligned with the right side.
  - Each tray can hold up to 500 sheets of paper. Do not stack paper over the limit mark.
  - When loading small quantities of paper, be careful not to squeeze the side fences in too tightly, as the paper will not feed properly.
  - If you add paper to a paper tray with paper left inside, a misfeed might occur.
1. Make sure the paper tray is not in use.
  2. Pull the paper tray out slowly until it stops.


3. While pinching the release lever, slide the end fence outward.

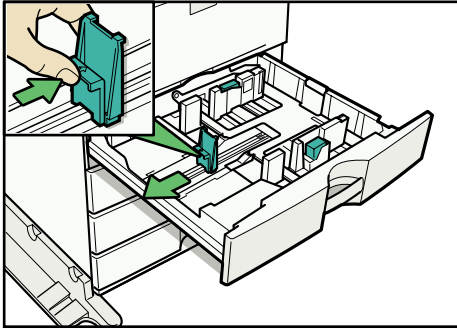

BBT001S

4. Square the paper and place it print side up.

Do not stack paper over the limit mark.

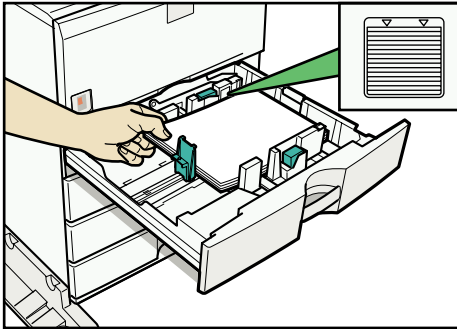

BBT002S

5. Position the end fence flush against the paper.
6. Push the paper tray in until it stops.

### Setting special paper in paper tray 2


---

This section describes how to load special paper into paper tray 2.

1. Pull out the paper tray until it stops.



2. Load the special paper print side up below the limit mark of the tray.

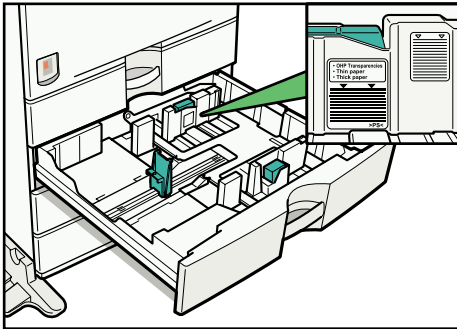

BBT019S

3. Push the paper tray in until it stops.


## Loading Paper into the Large Capacity Tray

This section describes how to load paper into the LCT.

### ★ Important


- Load paper of the same size and orientation in both left and right side trays.
- For the right stack, align the right edge of the paper with the right edge of the tray. For the left stack, align the left edge of the paper with the left edge of the tray.
- The LCT uses  $8\frac{1}{2} \times 11$  paper. If you want to load A4 paper, contact your service representative.
- Each tray can hold up to 1,000 sheets of paper. Do not stack paper over the limit mark.

1. Carefully pull out the LCT until it stops.

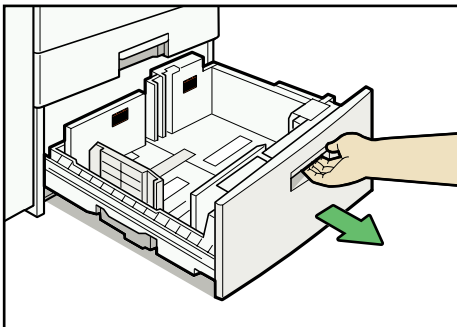

BBT012S

**2. Square the paper and place it print side up.**

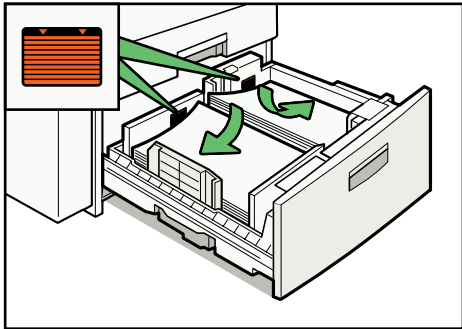

BBT013S

The machine cannot detect stacks of ten or fewer sheets. If the stack on the left side of the tray contains ten or fewer sheets, the machine will not detect it and not move it to the right side of the tray. Check the number of sheets remaining on the left and if there are 10 or fewer, transfer them by hand to the right side of the tray.

**3. Carefully push the LCT fully in.**






**6**

**Orientation-Fixed Paper or Two-Sided Paper**







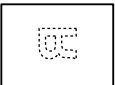





This section describes loading paper that has a specified orientation and printing side (such as letterhead paper).


Orientation-fixed (top to bottom) or two-sided paper (for example, letterhead paper, punched paper, or copied paper) might not print correctly, depending on how the originals and paper are placed. Set [Letterhead Setting] to [Yes] in [Input / Output] under [Copier / Document Server Features], and then place the original and paper as shown below. For details about Letterhead Setting, see "Copier/Document Server Features", General Settings Guide. When printing with the printer function, placement orientation is the same.


**Original Orientation**

Exposure glass		ADF	
	<ul style="list-style-type: none"><li>• copy</li><li>• scanner</li></ul>  		
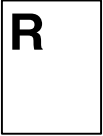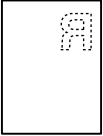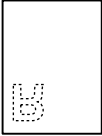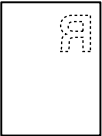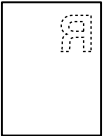
## Paper Orientation

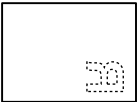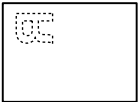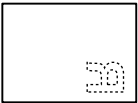Copy Mode		Paper Tray	Large Capacity Tray	Bypass Tray	
				Original on the exposure glass	Original on the ADF
	1 Sided				
	2 Sided			—	—
	1 Sided		—		
	2 Sided		—	—	—

 : Shows the paper frontside facing up.

 : Shows the paper backside facing up.

BXV201S

## Changing the Paper Size

This section describes how to change the paper size.

### ★ Important

- If you want to change the paper size set in the LCT, contact your service representative.

### ↓ Note

- Be sure to select the paper size with User Tools. If you do not, misfeeds might occur. For details about Tray Paper Size, see "System Settings", General Settings Guide.
- Fan the paper before loading.
- Straighten curled or warped paper before loading.
- For details about paper sizes and types, see "Recommended Paper Sizes and Types", About This Machine.

---

## Changing the Paper Size in the Paper Trays

---

### 6


This section describes how to change the paper size in the paper trays.

### ★ Important

- If a paper tray is pushed vigorously when putting it back into place, the position of the tray's side fences may slip out of place.
- Do not stack paper over the limit mark.
- Check the paper edges are aligned with the right side.
- When loading small quantities of paper, be careful not to squeeze the side fences in too tightly, as the paper will not feed properly.


1. Make sure the paper tray is not in use.
2. Pull the paper tray out slowly until it stops.
3. Remove any remaining copy paper.

4. While pinching the release lever, slide the end fence outward.

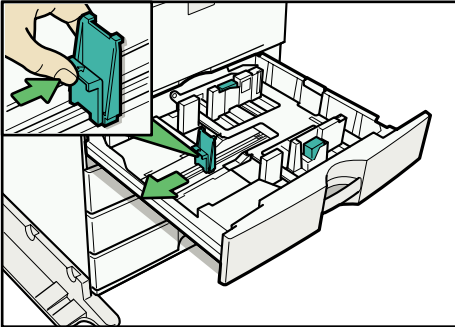


BBT001S

5. Press down the release button.

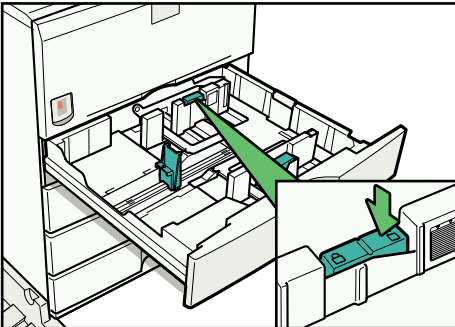

BBT003S


6. While pressing the release lever, slide the side fences outward.

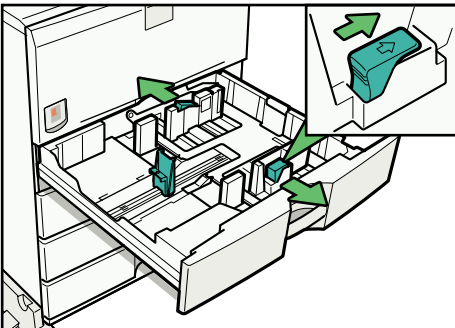

BBT004S


7. Square the paper and place it print side up.

Do not stack paper over the limit mark.

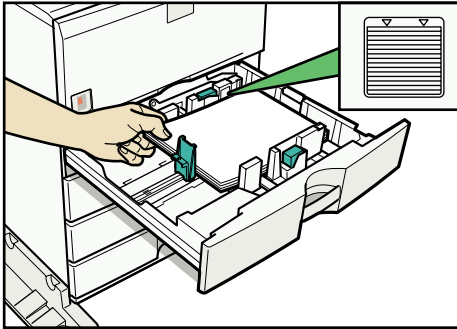


BBT002S

8. While pressing the release lever, push in the side and end fences until they are flush against the paper's edges.

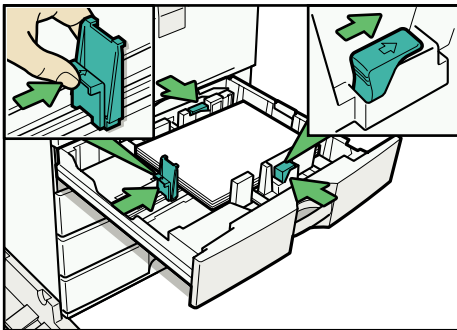

BBT005S

9. Press down the lock button.

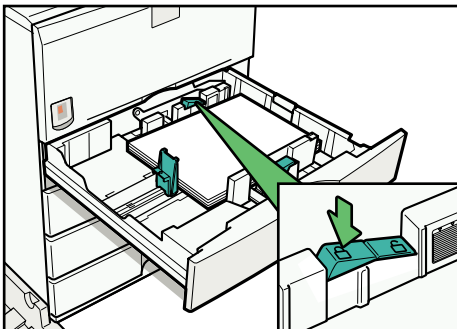

BBT006S

10. Push the paper tray in until it stops.


---

## Changing to a Size That Is Not Automatically Detected


---

If you load a paper size that is not selected automatically, you need to specify the paper size with the control panel. This section describes how to load such paper.


1. Press the [User Tools / Counter] key.

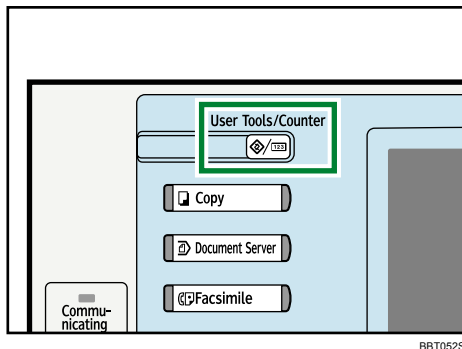


2. Press [System Settings].
3. Press [Tray Paper Settings] tab.

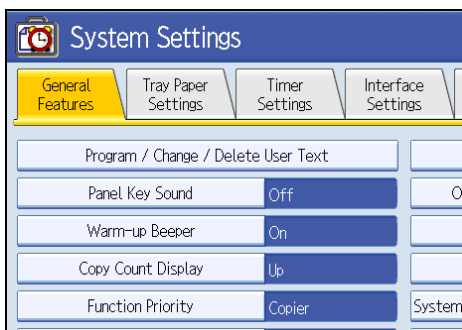


4. Select the tray for which you want to change the paper settings.

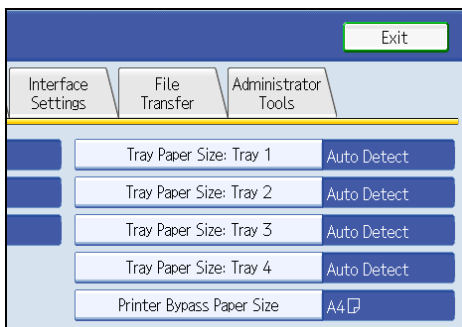

5. Select the loaded paper size and feed direction, and then press [OK].

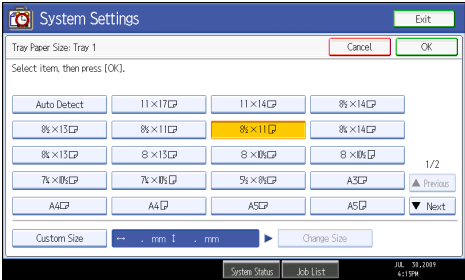

The set paper size and feed direction is displayed.

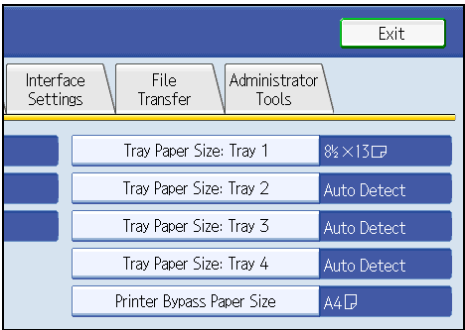

6. Press the [User Tools / Counter] key.

The initial display is shown.

**Note**

- For details about paper sizes selected automatically, see "Recommended Paper Sizes and Types", About This Machine.
- If you want to print on paper that is selected automatically after printing on a paper size that is not selected automatically, you must return the setting to "Auto Detect". Reload the paper, and select "Auto Detect" in step 5. The setting is returned to "Auto Detect".



# Adding Toner

This section describes how to add and store toner.

## **WARNING**

- Do not incinerate used toner or toner containers. Toner dust might ignite when exposed to an open flame. Dispose of used toner containers in accordance with local regulations.

## **CAUTION**

- Keep toner (used or unused) and toner containers out of reach of children.

## **CAUTION**

- If toner or used toner is inhaled, gargle with plenty of water and move into a fresh air environment. Consult a doctor if necessary.

## **CAUTION**

- If toner or used toner gets into your eyes, flush immediately with large amounts of water. Consult a doctor if necessary.

## **CAUTION**

- If toner or used toner is swallowed, dilute by drinking a large amount of water. Consult a doctor if necessary.

## **CAUTION**

- Avoid getting toner on your clothes or skin when removing a paper jam or replacing toner. If your skin comes into contact with toner, wash the affected area thoroughly with soap and water.
- If toner gets on your clothing, wash with cold water. Hot water will set the toner into the fabric and may make removing the stain impossible.

## **CAUTION**

- Do not open toner containers forcefully. Toner can spill, dirtying your clothes or hands, and possibly resulting in accidental ingestion.

## **Important**

- Fault may occur if you use toner other than the recommended type.
- When adding toner, do not turn off the operation switch. If you do, settings will be lost.
- Always add toner when the machine instructs you.
- Do not repeatedly install and remove toner cartridges. This will result in toner leakage.

- Do not shake the removed toner cartridge. Remaining toner might scatter.

#### ↓ Note

- You can still make about fifty copies after the messages "🖨️Toner Cartridge is almost empty." and "🖨️Replace Toner Cartridge." appear cyclically, but replace toner soon to prevent poor copy quality.
- You can check name of the required toner name and the replacement procedure using the "🖨️Add Toner" screen.
- Press [System Status] to check contact number where you can order supplies. See "Checking Machine Status and Settings".

#### 📖 Reference

- p.9 "Checking Machine Status and Settings"


## Removing Toner

This section describes how to remove toner.


6



- Open the front cover of the machine.
- Raise the toner holder lever.

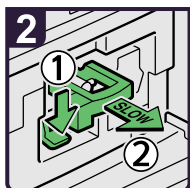

- Push the lever, and then gently pull out the holder.

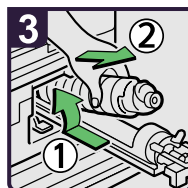


- Push the toner cartridge back to raise its top, and then gently pull out the cartridge.

BBT021S

## Inserting Toner

This section describes how to insert toner.

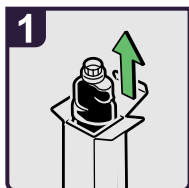

- Take out the new cartridge from the box.



- Hold the new cartridge horizontally and shake it from side to side five or six times.

**Note**


Do not remove the outer cap before shaking.




- Remove the outer cap.

**Note**

Do not remove the inner cap.

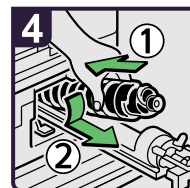

- Put the toner cartridge on the holder, and then pull its top forward.

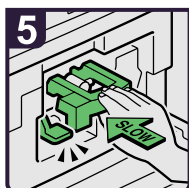

- Push in the toner holder until the lever clicks.

**Note**

Before lowering the toner holder lever, be sure to push the toner holder fully in.



- Lower the toner holder lever back into its original position.
- Close the machine's front cover.

BBT022S

## Sending Faxes or Scanned Documents When Toner Has Run Out

When the machine has run out of toner, the indicator on the display lights. Note that even if there is no toner left, you can still send faxes or scanned documents.

### ★ Important

- If number of communications executed after the toner has run out and not listed in the automatically output Journal exceeds 200, communication is not possible.

1. Make sure the machine is in facsimile or scanner mode.
2. Press [Exit], and then perform transmission operation.

The error message disappears.

### ↓ Note

- Any reports are not printed.
- If the fax or scanner screen does not appear in step 1, press the [Facsimile] key or the [Scanner] key.

---

## Used Toner

---

Toner cannot be re-used.

To prevent toner spilling from used toner containers, store used toner containers inside a bag.

Bring the stored used container to your sales representative or service representative for recycling through our recycling system. If you discard it on your own, treat it as general plastic waste material.

# Adding Staples

This section describes what to do when staples need replacing.

## ⚠ CAUTION

- Keep your hands clear of the booklet finisher tray when pulling out or pushing in the finisher's staple unit. You can trap your fingers if you do not.

## ★ Important

- Stapling failures or jams may occur if you use a staple cartridge other than that recommended.

## ↓ Note

- If you cannot pull out the upper unit, there are staples remaining inside the cartridge. Use all the staples, and do not add more.
- Refill the stapler according to the finisher type. Check the type if you are unsure. For details about type of finisher, see "Appendix", About This Machine.


## 6

### 500-sheet Finisher


This section describes how to add staples to the 500-sheet finisher.




- Open the finisher front cover.
- Hold the lever, and then gently pull out the cartridge.

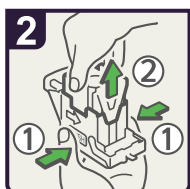

- Holding both side of the cartridge, pull up the upper unit.

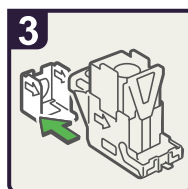

- Remove the empty refill in the direction of the arrow.

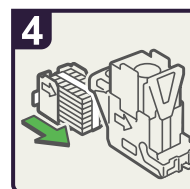

- Push the new refill into the cartridge until it clicks.



- Push the upper unit gently into the cartridge.



- Pull out the ribbon.



- Hold the lever, and then push in the cartridge until it clicks.
- Close the finisher front cover.

BBT023S

## 1000-sheet Finisher


This section describes how to add staples to the 1000-sheet finisher.




- Open the finisher front cover, and then pull out the staple unit.




- Hold the lever, and then gently pull out the cartridge.

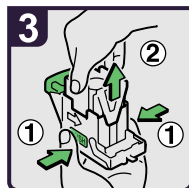

- Holding both side of the cartridge, pull up the upper unit.

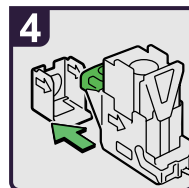


- Remove the empty refill in the direction of the arrow.

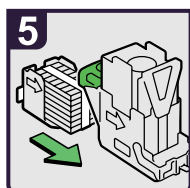

- Push the new refill into the cartridge until it clicks.



- Push the upper unit gently into the cartridge.

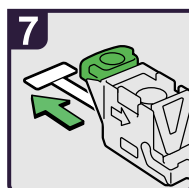

- Pull out the ribbon.




- Hold the green lever, and then push in the cartridge until it clicks.
- Return the staple unit to its original position, and then close the finisher front cover.

BBT024S

## Booklet Finisher


This section describes how to add staples to the booklet finisher.

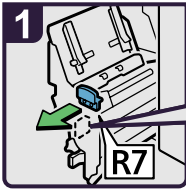


- Open the finisher front cover, and then pull out the staple unit.




- Hold the lever and pull it up.

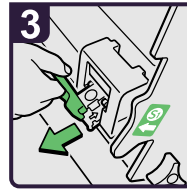


- Pull out the cartridge gently.

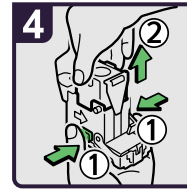


- Holding both side of the cartridge, pull up the upper unit.

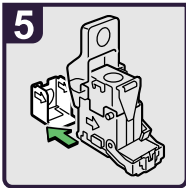


- Remove the empty refill in the direction of the arrow.

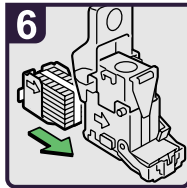


- Push the new refill into cartridge until it clicks.

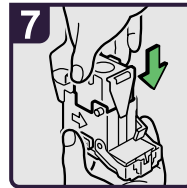


- Push the upper unit gently into the cartridge.

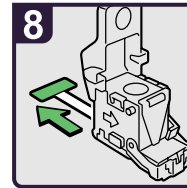

- Pull out the ribbon.

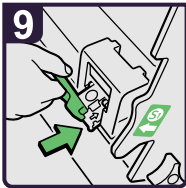

- Push in the cartridge gently.

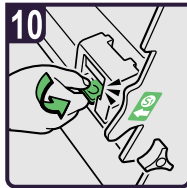

- Hold the lever and hold it down until it clicks.
- Return the staple unit to its original position, and close the finisher front cover.


## Replacing the Stamp Cartridge

If the transmission stamp becomes faint, replace the cartridge.


### ★ Important

- This stamp cartridge is used for facsimile and scanner functions.
- Do not add ink to the cartridge by yourself. Neglecting this can cause ink leakage.
- Be sure not to dirty your fingers with ink from the cartridge.
- Use the cartridge specified for this machine.

#### 1. Open the ADF cover.

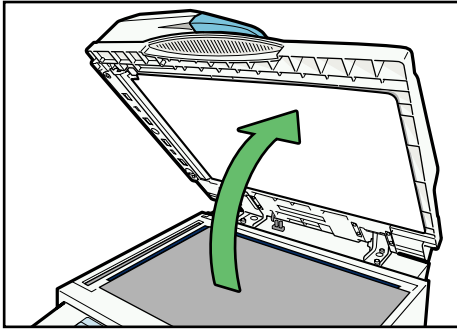


#### 2. Open the stamp cover.

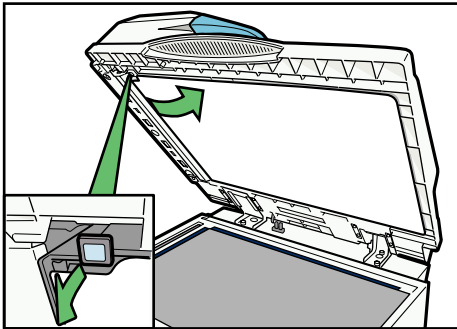

#### 3. Pull out the old stamp cartridge.

Tap the cartridge lock lever several times. The cartridge will eject. Then remove the cartridge, while pushing the lock lever.




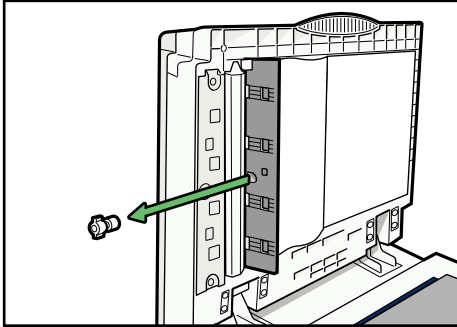

BBT009S


**4. Insert the new stamp cartridge.**

Insert the cartridge until the metal parts are no longer visible.

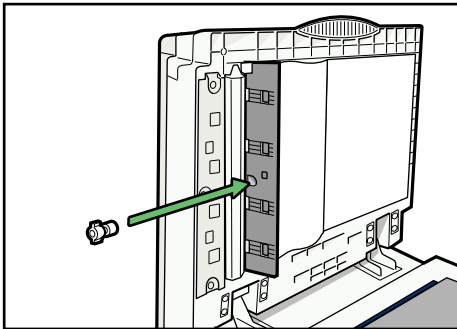

BBT010S

**5. Press the stamp cover back in until it clicks.**

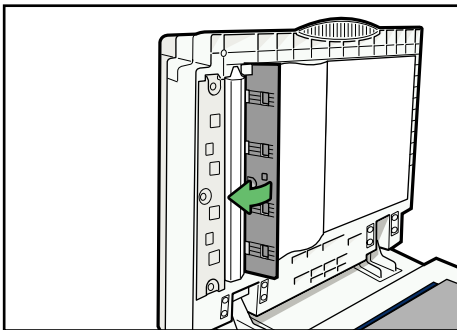

BBT011S

**6. Close the ADF cover.**



# 7. Clearing Misfeeds

This chapter describes what to do when paper or originals misfeed (become jammed inside the machine).

## Removing Jammed Paper

This section describes how to locate and remove jammed paper.

### CAUTION

- The inside of the machine could be very hot. Do not touch any parts other than specified in this document when removing misfed paper. Otherwise, it may cause burn injury.

### CAUTION

- The fusing section of this machine might be very hot. Caution should be taken when removing misfed paper.

### CAUTION

- Keep your hands clear of the booklet finisher tray when pulling out or pushing in the finisher's staple unit. You can trap your fingers if you do not.


### Important

- When clearing misfeeds, do not turn off the operation switch. If you do, your copy settings will be lost.
- To prevent misfeeds, do not leave any torn scraps of paper inside the machine.
- Contact your service representative if misfeeds occur frequently.

## Locating Jammed Paper


If a misfeed happens, remove the misfed paper or original following the procedures stated on the sticker inside the finisher or front cover.

A misfeed has occurred in the place corresponding to the letter displayed on the control panel.

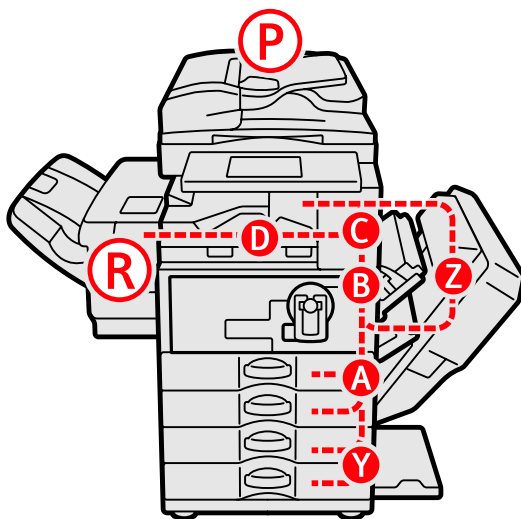


BBT026S

1. Press the key of the section from where you want to remove the jammed paper.

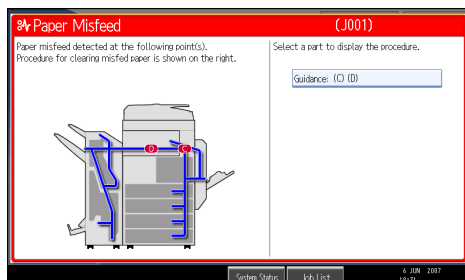

2. After each step is complete, press [Next]. To go back to the previous step, press [Previous].

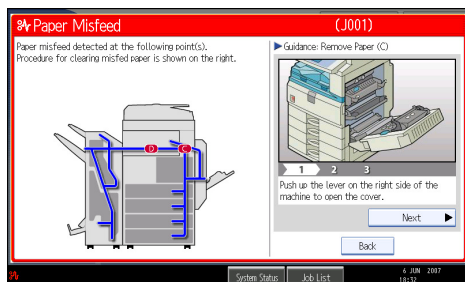

3. When all jammed paper is removed, restore the machine to the original state.

#### ↓ Note

- More than one misfeed may be indicated. When this happens, check all the areas indicated.

## Removing Jammed Paper

This section describes how to remove jammed paper.


### ★ Important

- The internal parts of the machine may be hot. Wait for the duplex unit to cool down before clearing a paper jam in the unit.
- When removing jammed sheets, take care to touch only those areas explicitly indicated in the manual.
- Do not remove the fusing unit. Doing so will result in loss of print quality.


### ↓ Note

- Inside the finisher, or inside the front cover, there is a sticker explaining how to remove misfed paper.
- If a detailed removal instruction appears on the right of the screen, follow it.
- You can also use the procedure indicated in [System Status] to remove jammed paper.


### When A is displayed

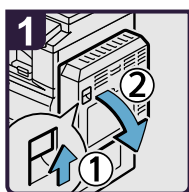

- Push up the lever and open the duplex unit.

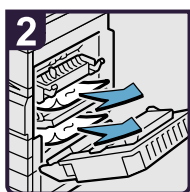


- Remove misfed paper.
- Close the duplex unit.

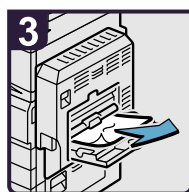


- Open the bypass tray, and then remove misfed paper.
- Close the bypass tray.

BBT027S

### When B is displayed

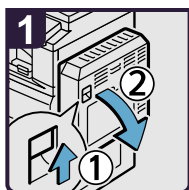


- Push up the lever and open the duplex unit.

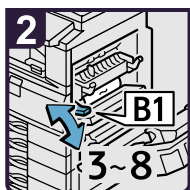

- Move lever B1 up and down three to eight times.




- Remove misfed paper.

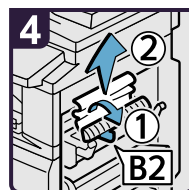

- Turn panel B2 and remove misfed paper.
- Close the duplex unit.

BBT028S


## When C is displayed

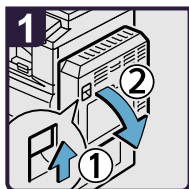

- Push up the lever and open the duplex unit.




- Remove misfed paper.

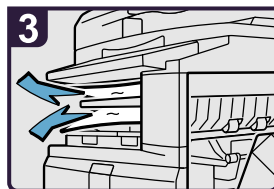


- If you cannot remove misfed paper, remove that from the internal tray.
- Close the duplex unit.

BBT029S

## When D is displayed

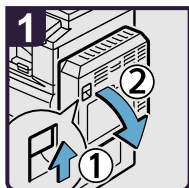


- Push up the lever and open the duplex unit.

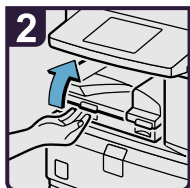


- Open the bottom cover of the bridge unit.



- Remove misfed paper.

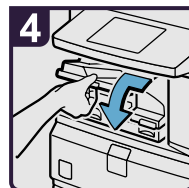

- Close the bridge unit cover.

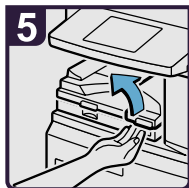

- If you cannot remove misfed paper, open the right cover of the bridge unit.



- Remove misfed paper.
- Close the bridge unit cover and duplex unit.

BBT030S

## When P is displayed



- Open the upper cover of the ADF.




- Remove the misfed original.




- Remove the misfed original.



- If you cannot remove any misfed original, open the external cover of the ADF and remove the misfed original.

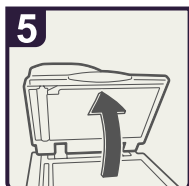

- Close the upper cover of the ADF.
- Lift the ADF.

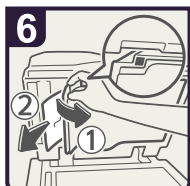

- Pull the lever in the upper left corner, and then remove the misfed original.

BBT031S

7

## When R is displayed in the case of 500-sheet finisher




- Open the finisher upper cover.
- Remove misfed paper.
- Close the finisher upper cover.

BBT032S


## When R1 - R5 is displayed in the case of 1000-sheet finisher




- Open the finisher upper cover.

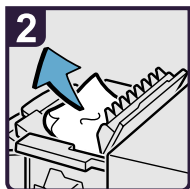


- Remove misfed paper, and then close the finisher upper cover.

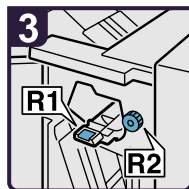


- Open the finisher front cover.

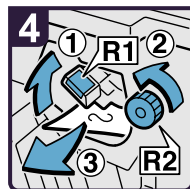


- Hold up lever R1 and turn knob R2 counterclockwise to remove misfed paper.

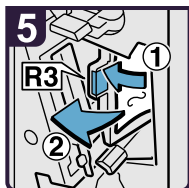

- If you cannot remove misfed paper, open lever R3 to the left, and then remove misfed paper.

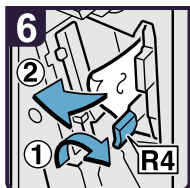


- Pull lever R4 to the right, and then remove misfed paper.

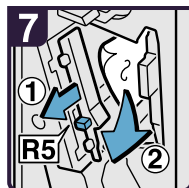


- Pull lever R5 and remove misfed paper.
- Close the finisher front cover.




## When R1 - R3 is displayed in the case of booklet finisher

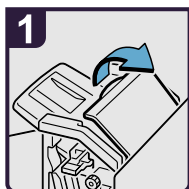


- Open the finisher front cover and upper cover.

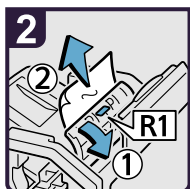


- Raise panel R1, and then remove misfed paper.
- Return panel R1 to its original position, and then close the finisher upper cover.

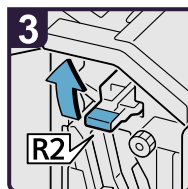

- Raise lever R2.

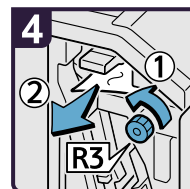


- Turn knob R3 counterclockwise to remove misfed paper.

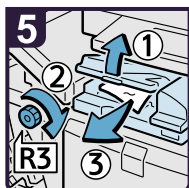


- Open the bridge unit cover, and then turn knob R3 clockwise to remove misfed paper.
- Return lever R2 to its original position.
- Close the bridge unit cover and the finisher front cover.


## When R4 - R6 is displayed in the case of booklet finisher

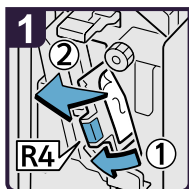

- Open the finisher front cover.
- Pull lever R4 to the left, and then remove misfed paper.

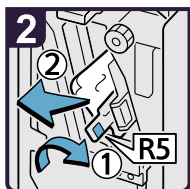


- Return lever R4 to its original position.
- Pull lever R5 to the right, and then remove misfed paper.

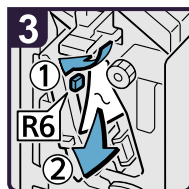


- Return lever R5 to its original position.
- Pull lever R6, and then remove misfed paper.
- Return lever R6 to its original position.
- Close the finisher front cover.

BBT046S


## When R7 - R11 is displayed in the case of booklet finisher

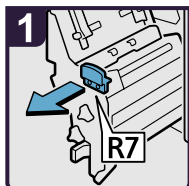


- Open the finisher front cover.
- Pull out the staple unit.

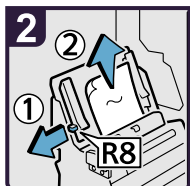

- Pull lever R8 and remove misfed paper.

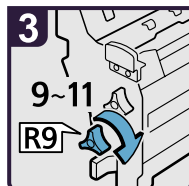

- Turn knob R9 clockwise nine to eleven times.

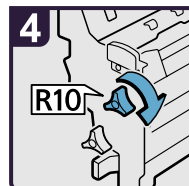

- Turn knob R10 clockwise.



- Pull lever R11 to the left, and then remove misfed paper.
- Return lever R11 to its original position.
- Return the staple unit to its original position.
- Close the finisher front cover.

BBT047S

## When Y is displayed




- Open the lower right cover.




- Remove misfed paper.
- Close the lower right cover.

BBT039S

## When Z is displayed

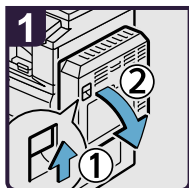

- Open the duplex unit.

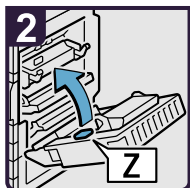

- Open panel Z.



- Remove misfed paper.
- Return panel Z to its original position.
- Close the duplex unit.

BBT040S

## Removing Jammed Staples

This section describes how to remove jammed staples.

### ⚠ CAUTION

- Keep your hands clear of the booklet finisher tray when pulling out or pushing in the finisher's staple unit. You can trap your fingers if you do not.

### ★ Important

- Curled paper may cause staples to jam. To avoid this, turn paper over in the tray.
- When the finisher is installed, after removing jammed staples, staples will not be ejected the first few times you try to use the stapler.

### ↓ Note

- Remove the jammed staples according to the finisher type. Check the type if you are unsure. For details about type of finisher, see "Appendix", About This Machine.


### 500-sheet Finisher

7

This section describes how to remove jammed staples from the 500-sheet finisher.




- Open the finisher front cover.
- Hold the lever, and then gently pull out the cartridge.

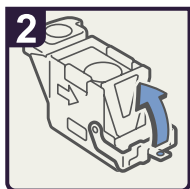

- Open the cartridge's face plate.



- Remove any jammed staples.

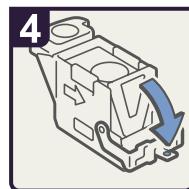

- Pull down the cartridge's face plate until it clicks.




- Hold the lever while pushing in the cartridge until it clicks.
- Close the finisher front cover.

BBT041S

## 1000-sheet Finisher


This section describes how to remove jammed staples from the 1000-sheet finisher.

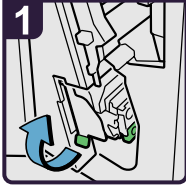


- Open the finisher front cover, and then pull out the staple unit.




- Hold the lever while gently pulling out the cartridge.

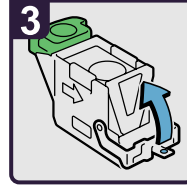

- Open the cartridge's face plate.

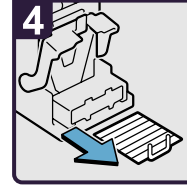

- Remove any jammed staples.

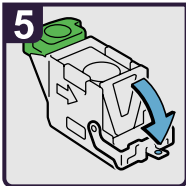


- Pull down the cartridge's face plate until it clicks.




- Hold the lever, and then push in the cartridge until it clicks.
- Return the staple unit to its original position, and then close the finisher front cover.

## Booklet Finisher

This section describes how to remove jammed staples from the booklet finisher.

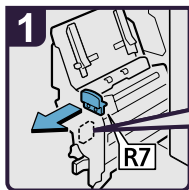


- Open the finisher front cover, and then pull out the staple unit.

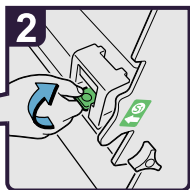


- Hold the lever and pull it up.




- Pull out the cartridge gently.

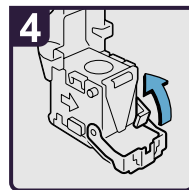


- Open the cartridge's face plate.

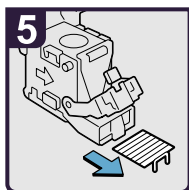

- Remove any jammed staples.

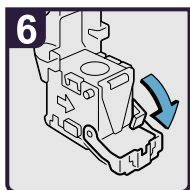

- Pull down the cartridge's face plate until it clicks.

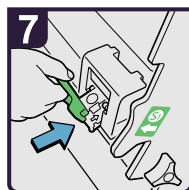

- Push in the cartridge gently.



- Hold the lever and hold it down until it clicks.
- Return the staple unit to its original position, and close the finisher front cover.

BBT043S

# Removing Punch Waste

This section describes how to remove punch waste.


## Note

- While "Hole Punch Receptacle is full." is displayed, you cannot use the Punch function.
- "Hole Punch Receptacle is full." is displayed until the punch waste box is reinstalled.
- If the message is still displayed, reinstall the punch waste box.

## Booklet Finisher


This section describes how to remove punch wastes from the booklet finisher.

1. Open the finisher front cover.

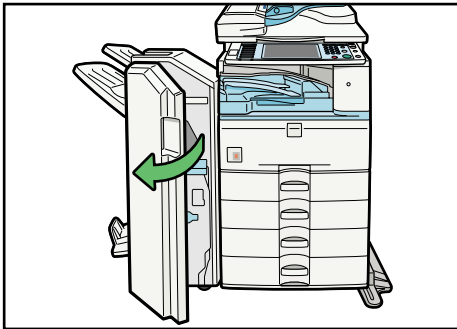


BBT015S

2. Pull out the punch waste box carefully, and then remove punch waste.

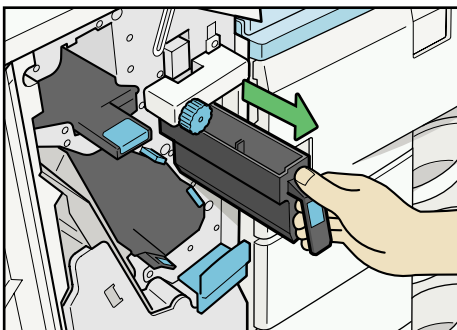

BBT016S

### 3. Reinstall the punch waste box.

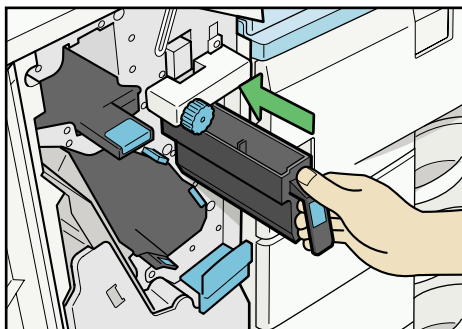


BBT017S

### 4. Close the finisher front cover.

"Hole Punch Receptacle is full." disappears.

#### ↓ Note

- The message "Hole Punch Receptacle is full." may appear even when the punch waste box is not yet full. If this happens, the position of the punch waste box (indicated by the arrow as shown) may be blocked by punch waste. Remove the punch waste.

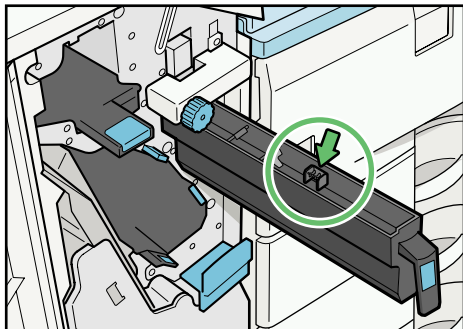

BBT018S



## 8. Remarks

This chapter describes how to maintain and operate the machine.

### Where to Put Your Machine

This section describes precautions for installation and movement.

#### Machine Environment

Choose your machine's location carefully.

Environmental conditions greatly affect its performance.

#### Moving

This section describes precautions when moving the machine.

##### CAUTION

- Contact your service representative if you need to lift the machine (such as when relocating it to another floor). Do not attempt to lift the machine without the assistance of your service representative. The machine will be damaged if it topples or is dropped, resulting in malfunction and risk of injury to users. The machine's various handling areas are for service engineer use only. Do not touch these areas.

##### CAUTION

- Before moving the machine, be sure to disconnect all external connections, especially the power cord from the wall outlet. Damaged power cords are a fire and electric shock hazard.

##### CAUTION

- Unplug the power cord from the wall outlet before you move the machine. While moving the machine, you should take care that the power cord will not be damaged under the machine.

##### Important

- Be careful when moving the machine. Take the following precautions:
  - Turn off the main power.
  - Unplug the power cord from the wall outlet. When you pull out the plug from the socket, grip the plug to avoid damaging the cord, thereby reducing the risk of fire or electric shock.
  - Close all covers and trays, including the front cover and bypass tray.

- Do not carry the machine, by holding the scanner assembly. Keep the machine level and carry it carefully, taking care not to jolt or tip it. Rough handling may cause a malfunction or damage the hard disk or memory, resulting in loss of stored files.
- Do not take off the holding stand.
- Protect the machine from strong shocks. Impact can damage the hard disk and cause stored files to be lost. As a precautionary measure, files should be copied to another computer.

#### Note

- For details about how to turn the main power off, see "Turning On/Off the Power", About This Machine.

### Optimum environmental conditions

This section describes precautions when locating the machine.

#### CAUTION

- Keep the machine away from humidity and dust. Otherwise a fire or an electric shock might occur.
- Do not place the machine on an unstable or tilted surface. If it topples over, an injury might occur.

#### CAUTION

- After you move the machine, use the caster fixture to fix it in place. Otherwise the machine might move or come down to cause an injury.

#### CAUTION

- Make sure the room where you are using the machine is well ventilated and spacious. Good ventilation is especially important when the machine is used heavily.

- Temperature: 10-32 °C (50-89.6 °F) (humidity to be 54% at 32 °C, 89.6 °F)
- Humidity: 15-80% (temperature to be 27 °C, 80.6 °F at 80%)
- A strong and level base.
- The machine must be level within 5 mm, 0.2 inch: both front to rear and left to right.
- To avoid possible buildup of ozone, make sure to locate this machine in a large well ventilated room that has an air turnover of more than 30 m<sup>3</sup>/hr/person.


### Environments to avoid

- Locations exposed to direct sunlight or other sources of strong light (more than 1,500 lux).
- Locations directly exposed to cool air from an air conditioner or heated air from a heater. (Sudden temperature changes can cause condensation to form inside the machine.)

- Locations close to machines generating ammonia, such as a diazo copy machine.
- Places where the machine will be subject to frequent strong vibration.
- Dusty areas.
- Areas with corrosive gases.

## Access to the machine

Place the machine near the power source, providing the clearance areas shown.

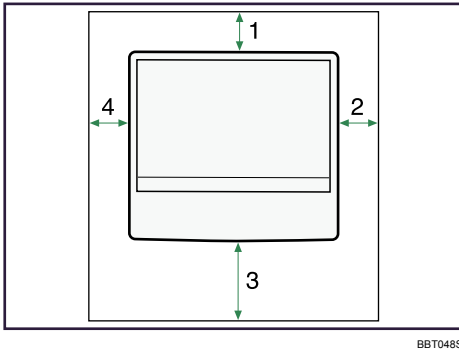

BBT048S

1. Rear: 1 cm (0.4 inch) or more
2. Right: 1 cm (0.4 inch) or more
3. Front: 75 cm (30 inches) or more
4. Left: 1 cm (0.4 inch) or more

### ⬇ Note

- For the required space when options are installed, contact your service representative.

## Power Connection

This section describes power supply.

### ⚠ WARNING

- Connect this machine only to a power source that matches the specifications shown on the inside front cover of this manual and do not use an extension cord.
- Use of this machine with extension cords and power sources other than those that match the specifications shown constitutes an electric shock and fire hazard.

### **WARNING**

- Do not use power cords that are damaged, broken, or modified. Also, do not use power cords that have been trapped under heavy objects, pulled hard, or bent severely. Doing so could result in fire or electric shock.

### **WARNING**

- If the power cord is damaged and its inner wires are exposed or broken, contact your service representative for a replacement. Use of damaged power cords could result in fire or electric shock.

### **WARNING**

- Be sure to locate the machine as close as possible to a wall outlet. This will allow easy disconnection of the power cord in the event of an emergency.

### **CAUTION**

- When you disconnect the power plug from the wall outlet, always pull the plug (not the cable).

### **CAUTION**

- To disconnect the power cord, pull it out by plug. Do not drag the cord itself. Doing so may result in damage to the cord, leading to fire or electric shock.
- When the main power switch is in the stand-by position, the optional anti-condensation heaters are on. In an emergency, unplug the machine's power cord.
- When you unplug the power cord, the anti-condensation heaters turn off.
- Make sure the plug is inserted firmly in the wall outlet.
- Voltage must not fluctuate by more than 10%.

# Maintaining Your Machine

If the exposure glass, exposure glass cover, or ADF belt is dirty, copy clarity may be reduced. Clean these parts if they are dirty.

## ★ Important


- Do not use chemical cleaners or organic solvents, such as thinner or benzene. If such substances get inside the machine or melt plastic parts, a failure might occur.
- Do not clean parts other than those explicitly specified in this manual. Other parts should only be cleaned by your service representative.

### How to maintain

Wipe the machine with a soft, damp cloth, and then wipe it with a dry cloth to remove the water.

## Cleaning the Exposure Glass


This section describes how to clean the exposure glass and the scanning glass.

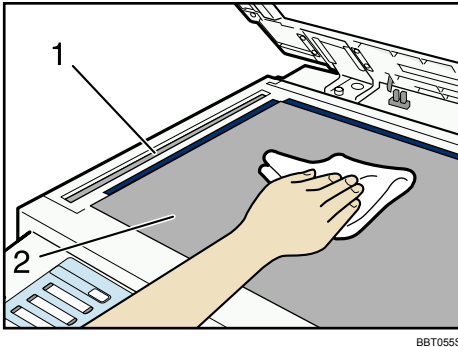

Clean 1 and 2.

## Cleaning the Exposure Glass Cover

This section describes how to clean the exposure glass cover.

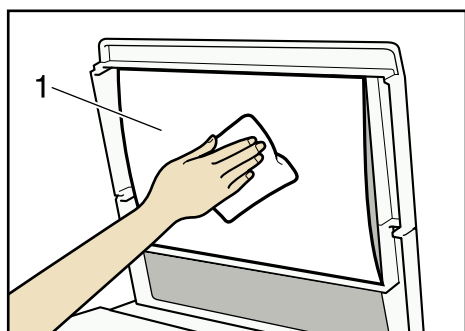

BBR021S


Clean 1.

---

## Cleaning the Auto Document Feeder

---

This section describes how to clean the ADF.

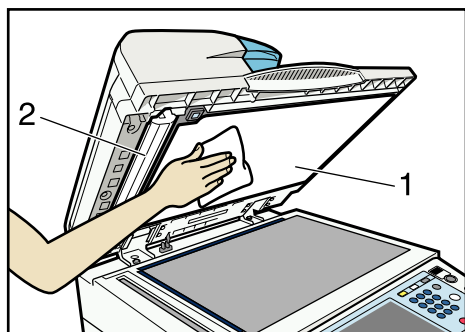

BBT014S

Clean 1 and 2.

---

## Cleaning the Power Cable Plug

---

This section describes precautions for cleaning the power cable plug.

### CAUTION

- Be sure to disconnect the plug from the wall outlet and clean the prongs and the area around the prongs at least once a year. Allowing dust to build up on the plug constitutes a fire hazard.

# INDEX

1000-sheet finisher.....	116, 131
500-sheet finisher.....	115, 130

## A

Access to the machine.....	137
Adding staples.....	115
Adding toner.....	111
Adjusting the volume.....	35

## B

Booklet finisher.....	116, 131
Booklet Finisher.....	133

## C

Cannot browse the network to send a scan file.....	85
Cannot make clear copies.....	24
Cannot make copies as wanted.....	27
Cannot print.....	71
Cannot send or receive fax messages as wanted.....	47
Cannot send scanned files.....	85
Changing the paper size.....	106
Changing the paper size in the paper trays.....	106
Changing to a size that is not automatically detected.....	108
Checking machine status and settings.....	9
Checking the error log.....	69
Cleaning the Auto Document Feeder.....	140
Cleaning the exposure glass.....	139
Cleaning the exposure glass cover.....	139
Cleaning the Power Cable Plug.....	140
Clearing misfeeds.....	121
Combine.....	27
Control panel.....	62
Copy/Document Server function.....	21

## D

Data storage.....	9
Document Server.....	27
Duplex.....	27

## E

Edit.....	27
-----------	----

Environments to avoid.....	136
Error log.....	69
Error Mail Notification.....	56
Error occurs using Internet Fax.....	56
Error Report (E-mail).....	56

## F

Facsimile function.....	37
-------------------------	----

## H

How to read this manual.....	6
------------------------------	---

## I

If an error report is printed.....	54
If USB connection fails.....	60
Indicators.....	7
Inquiry.....	9
Inserting toner.....	112

## J

Job is not performed.....	18
---------------------------	----

## L

Large capacity tray.....	103
Loading paper.....	101
Loading paper into the large capacity tray.....	103
Loading paper into the paper trays.....	101
Locating jammed paper.....	121

## M

Machine address info.....	9
Machine environment.....	135
Maintaining your machine.....	139
Maintenance info.....	9
Manuals for this machine.....	1
Memory is full.....	33
Messages displayed.....	21, 37, 61, 88
Messages Displayed on the Client Computer.....	95
Messages displayed on the control panel when using the printer function.....	62
Messages Displayed on the Control Panel When Using the Scanner Function.....	88
Messages displayed when installing the printer driver.....	57
Messages printed on the error logs.....	64

Moving.....	135
Multi-accessing.....	18

## N

Names of major options.....	6
Network connection.....	73
Network delivery function cannot be used.....	86

## O

Operations are not possible when messages are displayed.....	87
Optimum environmental conditions.....	136
Orientation-fixed paper or two-sided paper.....	104
Other printing problems.....	75

## P

Panel tone.....	8
Paper.....	101
Power connection.....	137
Printer function.....	61
Printing.....	47
Problems operating the machine.....	14

## R

Reception.....	47
Removing jammed paper.....	121, 123
Removing jammed staples.....	130
Removing punch waste.....	133
Removing toner.....	112
Replacing the stamp cartridge.....	118

## S

Scanner function.....	88
Scanning is not done as expected.....	83
Sending faxes or scanned documents when toner has run out.....	113
Server-Generated error e-mail.....	56
Setting special paper in paper tray 2.....	102
Stamp.....	27
Stamp cartridge.....	118
Staples.....	115
Status messages.....	61
Stored files cannot be accessed.....	85
Stored files cannot be edited.....	86

Symbols.....	6
--------------	---

## T

The data in indicator does not light up or flash.....	73
The machine is connected to the computer using the interface cable.....	73
Toner.....	111
Transmission.....	47
Transmission/Reception.....	47
Turning off the main power / In the event of power failure.....	55
TWAIN.....	95
TWAIN driver cannot be started.....	85

## U

Used toner.....	114
-----------------	-----

## W

When A is displayed.....	123
When an indicator to the right of a function key is lit.....	12
When B is displayed.....	123
When C is displayed.....	124
When D is displayed.....	124
When memory is full.....	53
When P is displayed.....	125
When paper is not fed properly.....	75
When R is displayed in the case of 500-sheet finisher.....	125
When R1 - R3 is displayed in the case of booklet finisher.....	127
When R1 - R5 is displayed in the case of 1000-sheet finisher.....	126
When R4 - R6 is displayed in the case of booklet finisher.....	128
When R7 - R11 is displayed in the case of booklet finisher.....	128
When S/MIME cannot be used.....	86
When Y is displayed.....	129
When you cannot print clearly.....	75
When Z is displayed.....	129
Where to put your machine.....	135
Windows 2000.....	57
Windows Server 2003/2003 R2.....	57
Windows Server 2008.....	58






---

Windows Vista.....	58
Windows XP Home Edition.....	58
Windows XP Professional.....	57

---

MEMO

The meanings of the symbols for the switches on this machine are as follows:

-  : POWER ON.
-  : POWER OFF.
-  : STANDBY.

## Trademarks

Adobe, Acrobat, Acrobat Reader, PostScript, and Reader are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Ricoh Company, Ltd. is under license.

Microsoft®, Windows®, Windows Server®, and Windows Vista® are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

Monotype is a registered trademark of Monotype Imaging, Inc.

PCL® is a registered trademark of Hewlett-Packard Company.

UNIX is a registered trademark in the United States and other countries, licensed exclusively through X/Open Company Limited.

Other product names used herein are for identification purposes only and might be trademarks of their respective companies. We disclaim any and all rights to those marks.

The proper names of the Windows operating systems are as follows:

\* The product names of Windows 2000 are as follows:

- Microsoft® Windows® 2000 Professional
- Microsoft® Windows® 2000 Server
- Microsoft® Windows® 2000 Advanced Server

\* The product names of Windows XP are as follows:

- Microsoft® Windows® XP Professional
- Microsoft® Windows® XP Home Edition
- Microsoft® Windows® XP Media Center Edition
- Microsoft® Windows® XP Tablet PC Edition

\* The product names of Windows Vista are as follows:

- Microsoft® Windows Vista® Ultimate
- Microsoft® Windows Vista® Business
- Microsoft® Windows Vista® Home Premium
- Microsoft® Windows Vista® Home Basic
- Microsoft® Windows Vista® Enterprise

\* The product names of Windows Server 2003 are as follows:


- Microsoft® Windows Server® 2003 Standard Edition
- Microsoft® Windows Server® 2003 Enterprise Edition
- Microsoft® Windows Server® 2003 Web Edition
- Microsoft® Windows Server® 2003 Datacenter Edition

\* The product names of Windows Server 2003 R2 are as follows:

- Microsoft® Windows Server® 2003 R2 Standard Edition
- Microsoft® Windows Server® 2003 R2 Enterprise Edition
- Microsoft® Windows Server® 2003 R2 Datacenter Edition

\* The product names of Windows Server 2008 are as follows:

- Microsoft® Windows Server® 2008 Standard
- Microsoft® Windows Server® 2008 Enterprise
- Microsoft® Windows Server® 2008 Datacenter

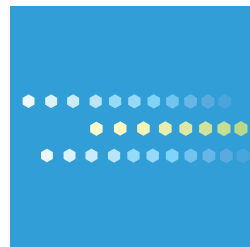

Type for 9228/MP 2851/LD528/Aficio MP 2851  
Type for 9233/MP 3351/LD533/Aficio MP 3351