How to send a fax

- 1. Press [Home] at the bottom of the screen in the Center.
- 2. Press the [Fax] icon on the Home screen.







- 4. Specify a destination.
- 5. Press [Settings].
- 6. Flick the screen up and down, and make the scan settings you require.
- 7. Press [Start].

How to use the Control Panel



- 1. Display panel
- 2. [Login]/[Logout]
- 3. Main power indicator
- 4. [Energy Saver]
- 5. Application list icon

Press to display the application list that contains shortcuts to the applications on the [Home] screen.

- 6. Icons to switch between screens
- 7. [Stop]

Press to stop a job such as copying if it is in progress.

O IMan

Displays the menu screen of the application you are using. Depending on the application, this key may be disabled.

9. [Home]

Press to display the [Home] screen.

10. [Return]

11. Status indicator

Indicates the status of the system. It stays lit when an error occurs or the toner runs out.

12. [Check Status]

13. Data In indicator (facsimile and printer mode)

Flashes when the machine is receiving print jobs or LAN-Fax documents from a computer. See Fax and Print.

14. Fax indicator

Indicates the status of the fax functions. Flashes during data transmission and reception. Stays lit when receiving a fax via Confidential or Substitute Reception.

- 15. Icon/Widget display area
- 16. Name of the Log-in User

How to make settings



Press the radio button of the item you want to use.



Select the image density you want to use to flick the screen.

How to use the [Fax] screen

Top Menu





