

# Notes for Users

This manual describes the corrections and additions to the HTML manual supplied with this machine.

## ❖ Maintenance and Specifications


Topic *Consumables > Toner Cartridge*

| Error  | Corrections  |
|--|--|
| • Average number of printable pages<br>10,000 pages, 5,000 pages, 3,000 pages                                | • Average number of printable pages<br>12,000 pages, 6,000 pages, 3,000 pages                                |
| The number of pages that can be printed<br>using the toner cartridge supplied with this<br>machine is 5,000. | The number of pages that can be printed<br>using the toner cartridge supplied with this<br>machine is 6,000. |

## ❖ Paper Specifications and Adding Paper

Topic *Loading Paper > Loading Paper into Paper Trays*

Topic *Loading Paper > Loading Envelopes*

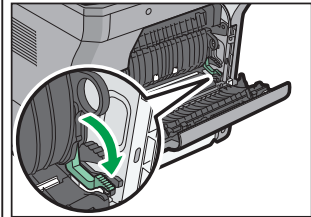

CXC633

**⚠ CAUTION:**

- *When using the envelope lever, take care not to trap or injure your fingers.*

© 2013

Printed in France

EN **GB**

M160-7564



M1607564