

Notes On Energy Saving Functions

We have changed the default delay time the machine waits before it enters one of the following energy saving function modes for type 4.

- Off Mode (on machine with only copier function)
- Sleep Mode (on machine with facsimile, printer, or scanner functions)

Refer to the following in place of the information on pages 36 to 38 in *About This Machine*.

◆ Energy Saving Function

- Off Mode (on machine with only copier function)
The default delay time the machine waits before entering Off Mode for type 4 is 15 minute.
- Sleep Mode (on machine with facsimile, printer, or scanner functions)
The default delay time the machine waits before entering Sleep Mode for type 4 is 15 minute.

- Specifications

On machine with only copier function

	Type 4
Time of switch into Off Mode	15 minute

On machine with facsimile, printer, or scanner functions

	Type 4
Reduced Electrical Consumption by Sleep Mode	7.4W
Time of Switch into Sleep Mode	15 minute

