


# Operating Instructions Copy Reference

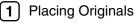





3 Appendix

Read this manual carefully before you use this machine and keep it handy for future reference. For safe and correct use, be sure to read the Safety Information in "About This Machine" before using the machine.

#### Introduction

This manual contains detailed instructions and notes on the operation and use of this machine. For your safety and benefit, read this manual carefully before using the machine. Keep this manual in a handy place for quick reference.

#### Important

Contents of this manual are subject to change without prior notice. In no event will the company be liable for direct, indirect, special, incidental, or consequential damages as a result of handling or operating the machine.

#### Notes:

Some illustrations in this manual might be slightly different from the machine.

Certain options might not be available in some countries. For details, please contact your local dealer.

#### Notes:

Two kinds of size notation are employed in this manual. With this machine refer to the metric version.

For good copy quality, the supplier recommends that you use genuine ink from the supplier.

The supplier shall not be responsible for any damage or expense that might result from the use of parts other than genuine parts from the supplier with your office products.

# **Manuals for This Machine**

Refer to the manuals that are relevant to what you want to do with the machine.

#### About This Machine

Be sure to read the Safety Information in this manual before using the machine.

This manual provides an introduction to the functions of the machine. It also explains the control panel, preparation procedures for using the machine, how to enter text, and how to install the CD-ROMs provided.

#### General Settings Guide

Explains User Tools settings, and Address Book procedures such as registering fax numbers, e-mail addresses, and user codes. Also refer to this manual for explanations on how to connect the machine.

#### Troubleshooting

Provides a guide to solving common problems, and explains how to replace paper, print cartridges, and other consumables.

#### Security Reference

This manual is for administrators of the machine. It explains security functions that the administrators can use to protect data from being tampered, or prevent the machine from unauthorized use. Also refer to this manual for the procedures for registering administrators, as well as setting user and administrator authentication.

#### Copy Reference

Explains Copier functions and operations. Also refer to this manual for explanations on how to place originals.

#### Facsimile Reference

Explains Facsimile functions and operations.

#### Printer Reference

Explains Printer functions and operations.

#### Scanner Reference

Explains Scanner functions and operations.

#### Network Guide

Explains how to configure and operate the machine in a network environment, and use the software provided.

This manual covers all models, and includes descriptions of functions and settings that might not be available on this machine. Images, illustrations, and information about operating systems that are supported might also differ slightly from those of this machine.

#### Other manuals

- Manuals for This Machine
- Safety Information
- Quick Reference Copy Guide
- Quick Reference Fax Guide
- Quick Reference Printer Guide
- Quick Reference Scanner Guide
- PostScript3 Supplement
- UNIX Supplement
- Manuals for DeskTopBinder Lite
- DeskTopBinder Lite Setup Guide
- DeskTopBinder Introduction Guide
- Auto Document Link Guide

### Note

- □ Manuals provided are specific to machine types.
- □ Adobe Acrobat Reader/Adobe Reader must be installed in order to view the manuals as PDF files.

# What You Can Do with This Machine <Colour Functions/Colour Adjustments>

# **Colour Copying**

You can switch the colour copy mode depending on the type of originals used and the desired finish.

See p.36 "Selecting a Colour Mode".


#### Full Colour Copy

Copies using four colours: yellow, magenta, cyan and black.



#### Black/White Copy


Copies in black and white even if the original is coloured.

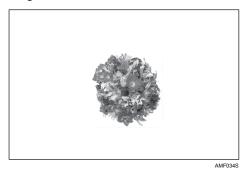

# **Adjusting Colour**

See p.41 "Colour Adjustment".


#### Primary Colours

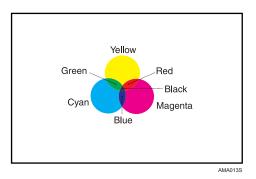

Colours can be created by combining the 3 primary colours: yellow, magenta and cyan. Black can be made by combining yellow, magenta and cyan, however, as there might be some slight differences, "black" will be expressed using a black ink.


#### \* Adjust Colour

Adjusts the specific colours (yellow, red, magenta, blue, cyan and green) by mixing them with adjacent colours in the colour circle. See p.41 "Colour Adjustment".

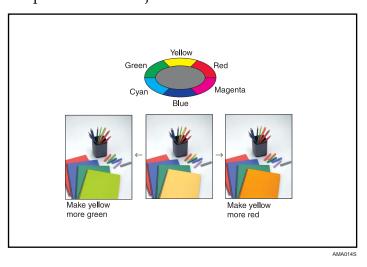

#### Colour Balance

Adjusts the overall colour tone when the overall copy is reddish or bluish. See p.37 "Colour Balance".

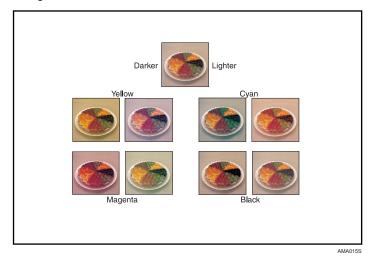


# **Adjusting Images**

See p.42 "Image Adjustment".


#### ✤ Sharp/Soft

Adjusts the outline of an image. See p.43 "Adjusting the sharpness/softness".

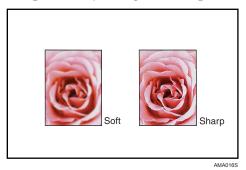

#### Contrast


Adjusts the shades of an image. See p.43 "Adjusting the Contrast".

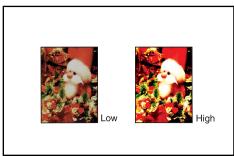

AMA017S

### Background Density

Adjusts the background density of an image. See p.43 "Adjusting the background density".

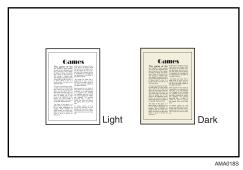

#### ✤ Adjust U.C.R.

Adjusts the amount of black ink to express vividly the black areas in an image.

See p.44 "Adjusting the U.C.R".

# What You Can Do with This Machine


Available functions differ depending on the model and options.

### 


See p.3 "Functions Requiring Optional Configurations".

# **Types of Duplex Copies**


★ 1 Sided 2 Pages  $\rightarrow$  2 Sided 1 Page See p.55 "Duplex".

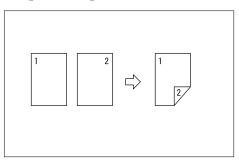


♦ 2 Sided 1 Page  $\rightarrow$  2 Sided 1 Page See p.55 "Duplex".

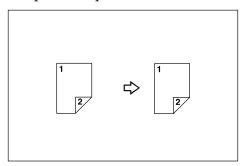

★ 1 Sided 4 Pages → Combine 2 Sided 1 Page See p.62 "Two-Sided Combine".

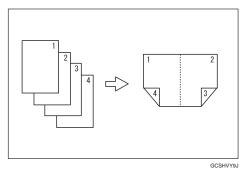


#### ◆ 1 Sided 8 Pages → Combine 2 Sided 1 Page See p.62 "Two-Sided Combine".

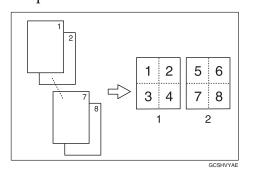


- 1 Front
- 2 Back

# \* 2 Sided 2 Pages $\rightarrow$ Combine 2 Sided 1 Page

See p.62 "Two-Sided Combine".

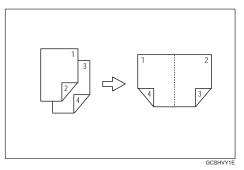

◆ 2 Sided 4 Pages → Combine 2 Sided 1 Page See p.62 "Two-Sided Combine".

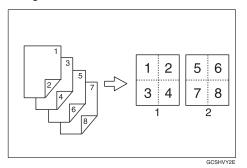


1 Front 2 Back


#### Combining Multiple Pages onto a Single Page

See p.58 "One-Sided Combine".


\* 1 Sided 2 Pages  $\rightarrow$  Combine 1 Sided 1 Page

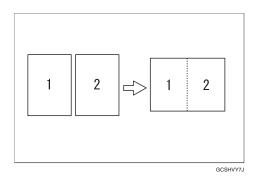


\* 1 Sided 4 Pages  $\rightarrow$  Combine 1 Sided 1 Page

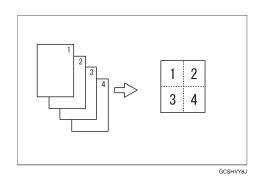

\* 2 Sided 1 Page  $\rightarrow$  Combine 1 Sided 1 Page

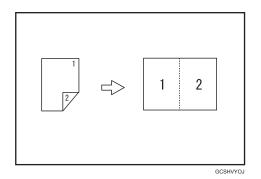


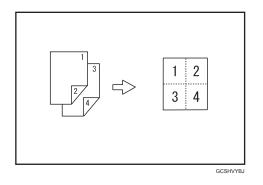


#### **Copying Originals Such as Books**

See p.64 "Series Copies".

#### Bound Originals $\rightarrow$ 1 Sided 2 Pages

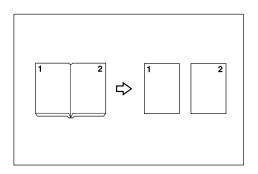

\* 2 Sided 1 Page  $\rightarrow$  1 Sided 2 Pages

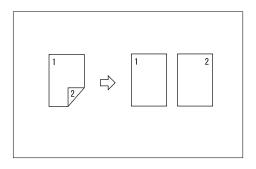

#### Copying onto an Envelope

#### ✤ Envelope

See p.31 "When copying onto envelopes".

# TABLE OF CONTENTS

Manuals for This Machine	.i
What You Can Do with This Machine <colour adjustments="" colour="" functions=""> i</colour>	ii
Colour Copying	iii
Adjusting Colour	V
Adjusting Images	۷
What You Can Do with This Machinev	ii
Types of Duplex Copies	ίi
Notice	1
How to Read This Manual	2
Symbols	
Names of Major Options	2
Functions Requiring Optional Configurations	
Display	
Reading the Display and Using Keys	
User Tools Menu (Copier Features)	5

# 1. Placing Originals

Originals	7
Sizes and Weights of Recommended Originals	
Sizes Detectable by the Auto Paper Select	9
Missing Image Area	
Placing Originals	12
Original Orientation	
Placing Originals on the Exposure Glass	
Placing Originals in the ADF or ARDF	
When Selecting a Paper Tray	
When Selecting the Bypass Tray or One-Sheet Bypass Tray	17

# 2. Copying

Basic Procedure	21
Copying from the Bypass Tray	23
Using the Bypass Tray	23
Using the One-Sheet Bypass Tray	
Copying onto Regular Size Paper	27
Copying onto Custom Size Paper	28
When copying onto OHP transparencies	29
When copying onto thick paper	30
When copying onto envelopes	31
Colour Functions	36
Selecting a Colour Mode	36
Colour Balance	
Colour Balance Program	38
-	41
Image Adjustment	42

Copy Functions	45
Adjusting Image Density	
Selecting Original Type Setting	
Selecting Copy Paper	
Preset Reduce/Enlarge	
Zoom	50
Auto Reduce/Enlarge	52
Sort	53
Duplex	55
One-Sided Combine	
Two-Sided Combine	62
Series Copies	64

# 3. Appendix

Combination Chart	67
Supplementary Information	68
INDEX	71
	/ 1

# Notice

Do not copy or print any item for which reproduction is prohibited by law.

Copying or printing the following items is generally prohibited by local law:

bank notes, revenue stamps, bonds, stock certificates, bank drafts, checks, passports, driver's licenses.

The preceding list is meant as a guide only and is not inclusive. We assume no responsibility for its completeness or accuracy. If you have any questions concerning the legality of copying or printing certain items, consult with your legal advisor.

The colour samples in this manual may differ slightly from the colours of actual copies.

Colours on colour keys or the colour circle may differ slightly from the colours of actual copies.

This machine is equipped with a function that prevents making counterfeit bank bills. Due to this function the original images similar to bank bills may not be copied properly.

# How to Read This Manual

# 🖉 Note

- □ For proper use of this product, be sure to read About This Machine first.
- Supplementary information about the copier mode is described in "Supplementary Information".

### Reference

See p.68 "Supplementary Information".

# Symbols

This manual uses the following symbols:

### A WARNING:

Indicates important safety notes.

Ignoring these notes could result in serious injury or death. Be sure to read these notes. They can be found in the "Safety Information" section of About This Machine.

# A CAUTION:

Indicates important safety notes.

Ignoring these notes could result in moderate or minor injury, or damage to the machine or to property. Be sure to read these notes. They can be found in the "Safety Information" section of About This Machine.

# Important

Indicates points to pay attention to when using the machine, and explanations of likely causes of paper misfeeds, damage to originals, or loss of data. Be sure to read these explanations.

# 🖉 Note

Indicates supplementary explanations of the machine's functions, and instructions on resolving user errors.

# 

This symbol is located at the end of sections. It indicates where you can find further relevant information.

# []

Indicates the names of keys that appear on the machine's display panel.

# 

Indicates the names of keys on the machine's control panel.

# Names of Major Options

Major options of this machine are referred to as follows in this manual:

- Auto Document Feeder $\rightarrow$ ADF
- Auto Document Feeder capable of scanning both sides of a sheet  $\rightarrow$  ARDF

# Functions Requiring Optional Configurations

Certain functions require special machine configuration and extra options. See the table below.

Function Option	Duplex Unit	Function Up- grade Option	Lower Paper Tray or Lower Paper Trays	ARDF
Duplex (B&W)	Required	-	-	-
Duplex (Colour)	Required	Required	-	-
2 Sided $\rightarrow$ Duplex	Required	-	-	Required
1 Sided→2 Sided Combine/Series (B&W)	Required	-	-	-
1 Sided→2 Sided Combine/Series (Colour)	Required	Required	-	-
2 Sided→1 Sided Combine/Series (B&W)	-	-	-	Required
2 Sided→1 Sided Combine/Series (Colour)	-	Required	-	Required
2 Sided→2 Sided Combine/Series (B&W)	Required	-	-	Required
2 Sided→2 Sided Combine/Series (Colour)	Required	Required	-	Required
Sort (B&W)	-	-	-	-
Sort (Colour)	-	Required	-	-
Rotate sort	-	-	Required	-

# Display

#### Initial copy screen


1	<b>O</b> Ready:B	&W			
2	Auto Pape	r Select	÷	1	3
	[100%]				
	100%	R/E	∐Auto P	R/E]	
				AMA022S	

**1.** Operational status or messages.

#### 3. Number of copies set.

2. Messages and the selected tray appear here. Currently selected items appear in brackets.

# **Reading the Display and Using Keys**

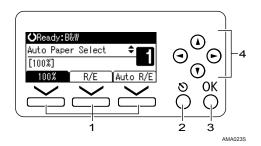

#### **1.** Selection keys

Correspond to items at the bottom line on the display.

Example: initial copy display

- When the instruction "press **[100%]**" appears in this manual, press the left selection key.
- When the instruction "press **[R/E]**" appears in this manual, press the centre selection key.
- When the instruction "press **[Auto R/E]**" appears in this manual, press the right selection key.

#### 2. [Escape] key

Press to cancel an operation or return to the previous display.

# 3. [OK] key

Press to set a selected item or entered numeric value.

#### 4. Scroll keys

Press to move the cursor to each direction one by one.

When  $[ \land ] [ \lor ] [ \lor ]$ , or  $[ \land ]$  key appears in this manual, press the scroll key of the same direction.

# User Tools Menu (Copier Features)

This section describes items you can set in the copier feature.Copier feature screen can be displayed by pressing the **[User Tools/Counter]** key. For details about how to set up these items, see General Settings Guide.

#### Copier Features 1

Item	Description
APS/ Auto R/E Priority	You can select <b>[Auto Paper Select Priority]</b> (APS Priority) or <b>[Auto R/E Priority]</b> (Auto Reduce/Enlarge Priority).
Auto Tray Switching	If you load same size paper in two or more trays, the machine automatically shifts to the other tray using image rotation when the first tray runs out of paper (if <b>[On]</b> is selected.) This function is called "Auto Tray Switching". This setting specifies whether to use Auto Tray Switching or not.
Original Type Setting	You can adjust copy finish quality level according to original type. You can choose these functions after selecting original type (Text/Photo) and colour mode (Full Colour/B&W).

#### Copier Features 2

Item	Description
Duplex Mode Priority	You can select the type of Duplex function effective when the machine is turned on, reset, or modes are cleared.
Orientation	You can select the original orientation when making Duplex, Combine, and Series copies.
Max. Number of Sets	The maximum copy quantity can be set between 1 and 99 using number keys.

#### Copier Features 3

Item	Description
Original Count Display	You can set to display the count of originals and copying pages on the display when <b>[On]</b> is selected.
Colour Mode Priority	You can select to prioritize "Full Colour", or "Black & White" when the machine is turned on, reset, or modes are cleared.
Reproduction Ratio	Specify 9 ratios for "Reduce or Enlarge" to be indicated upon pressing <b>[R/E]</b> .

#### Copier Features 4

Item	Description
Preset R/E Priority	You can set the ratio with priority when <b>[R/E]</b> is selected.
Duplex Margin	You can specify left margin on the back side of copies, and top margin on the back side.
Rotate Sort	Specify whether or not to select rotating sort when <b>[Sort]</b> key is pressed.

### Copier Features 5

Item	Description
Rotate Sort:Auto Contin- ue	You can continue copying when paper of the required orienta- tion has run out during rotate-sorting.
Letterhead Setting	If you select <b>[On]</b> for this function, the machine rotates images correctly.
ADS Background	You can adjust density of the Auto Image Density. It is set up so that the background is skipped copying. Select <b>[Full Colour</b> 1(Text)][Black&White 1(Text)] on <b>[Original Type Setting]</b> to enable the Auto Image Density.

# Copier Features 6

Item	Description
Menu Protect	You can prevent unauthenticated users from changing the user tools settings.

# 1. Placing Originals

This chapter describes the types of originals you can set and how to place originals.

# Originals

This section describes the types of originals that can be placed, paper sizes that are automatically detected, and missing image area.

### 🖉 Note

□ As the colour of markers or highlighters is difficult to reproduce, the copy might not come out depending on the colour or a different colour might be copied.

# Sizes and Weights of Recommended Originals

The following describes recommended paper sizes and non-recommended originals for the ADF or ARDF.

#### ✤ Metric version

Where original is placed	Original size	Original weight
Exposure glass	Up to A3	
ADF or ARDF	One-sided originals: A3 $\Box$ – A5 $\Box$ $\Box$	ADF: 52-105g/m <sup>2</sup> ARDF: 40-128g/m <sup>2</sup>
	Two-sided originals: <sup>*1</sup> A3D – A5 D D	64–105 g/m <sup>2 *1</sup>

#### Inch version

Where original is placed	Original size	Original weight
Exposure glass	Up to 11" × 17"	
ADF or ARDF	One-sided originals:	ADF: 14-28 lb. ARDF: 10-34 lb.
	$11" \times 17" \square - 5^1/_2" \times 8^1/_2" \square \square$	AKDF: 10-34 lb.
	Two-sided originals *1:	17–28 lb. *1
	$11" \times 17" \square - 5^1/_2" \times 8^1/_2" \square \square$	

<sup>\*1</sup> The optional ARDF is required.

# 🖉 Note

- □ About 30 originals can be placed in the ADF.
- □ About 50 originals can be placed in the ARDF.

#### Non-compatible originals for the ADF or ARDF

Placing the following types of originals in the ADF or ARDF can cause paper misfeeds or light & black lines or result in damage to the originals. Place these originals on the exposure glass instead.

- Originals other than those specified in "Sizes and Weights of Recommended Originals".
- Stapled or clipped originals
- Perforated or torn originals
- Curled, folded, or creased originals
- Pasted originals
- Originals with any kind of coating, such as thermal fax paper, art paper, aluminum foil, carbon paper, or conductive paper
- Originals with perforated lines
- Originals with indexes, tags, or other projecting parts
- Sticky originals such as translucent paper
- Thin, highly flexible originals
- Thick originals such as postcards
- Bound originals such as books
- Transparent originals such as OHP transparencies or translucent paper
- Originals that are still wet with ink or white-out.

### 🖉 Note

□ The original might become dirty if it is written with a pencil or a similar tool.

# Sizes Detectable by the Auto Paper Select

Sizes detectable by the exposure glass , ADF and ARDF are:

#### ✤ Metric version

Size Location of the original	A3D	B4 JIS <sup>*1</sup> □	A4 🕽 🗗	B5 JIS <sup>*1</sup> ₽	B5 JIS *1 D	A5 🖓 🖓	8 <sup>1</sup> /2"× 13" <b>□</b>
Exposure glass	О	О	0	×	О	× *2	О
ADF or ARDF	О	О	0	О	О	0	О


<sup>\*1</sup> JIS: Japanese Industrial Standard

<sup>\*2</sup> If you want to make A5 paper detectable, contact your service representative.


#### Inch version

Size Location of the original	11"× 17" <b>□</b>	11"× 15" <b>□</b>	10"× 14" <b>□</b>	10"× 8" <b>□</b>	8 <sup>1</sup> / <sub>2</sub> "× 14" <b>□</b>	8" × 13" <b>□</b>	8 <sup>1</sup> / <sub>2</sub> "× 11" <b>□□</b>	$5^{1}/_{2}$ " × $8^{1}/_{2}$ " $\square$
Exposure glass	О	×	0	О	0	×	0	×
ADF or ARDF	О	О	0	О	О	О	О	О

#### ✤ Exposur glass

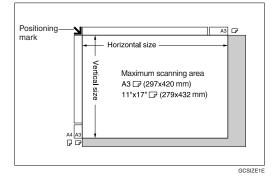

#### \* ADF or ARDF

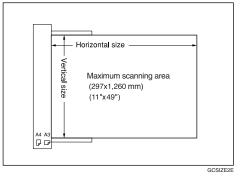

### 🖉 Note

□ When you copy custom size originals, make sure you specify the size of the originals. If not, the image may not be copied properly.

#### 

See p.17 "When Selecting the Bypass Tray or One-Sheet Bypass Tray".

#### Sizes difficult to detect


It is difficult for the machine to detect the sizes of the following originals. Even if Auto Paper Select is set, the correct papers size may not be selected, so select the paper size manually.

- Originals with indexes, tags, or other projecting parts
- Transparent originals such as OHP transparencies or translucent paper
- Dark originals with a lot of text and drawings
- Originals which partially contain a solid image
- Originals which have solid images at their edges

# **Missing Image Area**

Even if you correctly place originals in the ADF or ARDF, or on the exposure glass, margins of a few millimeters on all four sides of the original might not be copied.

#### \* missing original area

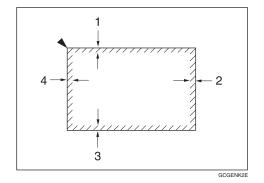

- ① 0.5 to 4 mm (0.1 to 0.2 inch)  $^{*1}$
- ② 0.5 to 6 mm (0.1 to 0.3 inch)
- 3 0.5 to 4 mm (0.1 to 0.2 inch)<sup>\*1</sup>
- ④ 1.5 to 5 mm (0.1 to 0.2 inch)

 $^{*1}$  The margins will be 3 to 7 mm (0.2 to 0.3 inch) when using one-sheet bypass tray.

# **Placing Originals**

This section describes the procedure for placing originals on the exposure glass and in the ADF or ARDF.

Take care to place originals after any correction fluid and ink has completely dried. Not taking this precaution could cause marks on the exposure glass that will be copied onto paper.

#### 🖉 Note

□ For original sizes you can set, see "Originals".

#### 

See p.7 "Originals".

# **Original Orientation**

You can set the original orientation in the following ways. When placing the original on the exposure glass, set it facing downwards.

# **Placing Originals on the Exposure Glass**

Place originals on the exposure glass.

#### ∰Important


□ Do not lift the exposure glass cover, ADF or ARDF forcefully. Otherwise, the cover of the ADF or ARDF might open or be damaged.

#### Lift the exposure glass cover, ADF or ARDF

Be sure to lift the exposure glass cover, ADF or ARDF by more than 30 degrees. Otherwise, the size of the original might not be detected correctly.

# **2** Place the original face down on the exposure glass. The original should be aligned to the rear left corner.

Start with the first page to be copied.

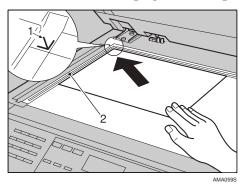

- ① Positioning mark
- Left scale


**1** Lower the exposure glass cover, ADF or ARDF

# Placing Originals in the ADF or ARDF


Place originals in the ADF or ARDF.

Setting should be made when placing custom size originals.

- When placing custom size originals: See p.16 "Custom sizes".
- ✤ ARDF

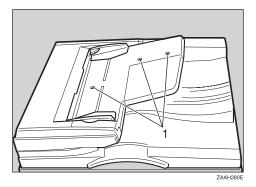

#### ✤ ADF

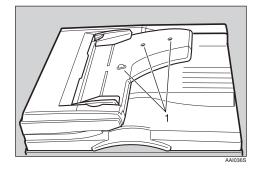

1) Sensors


**1** Adjust the guide to the original size.

# **2** Set the aligned originals face up into the ADF or ARDF.

Do not stack originals beyond the limit mark.

The last page should be on the bottom.

Be sure not to block the sensor or load the original untidily. Doing so may cause the machine to detect the size of the scanned image incorrectly or display a paper misfeed message. Also, be sure not to place originals or other objects on the top cover. Doing so may cause a malfunction.

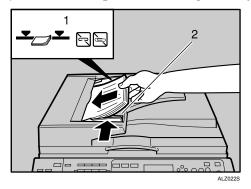

- Limit mark
- Document guide
- 🔗 Note
- □ Straighten curls in the originals before placing them on the ADF or ARDF.
- To prevent multiple sheets from being fed at once, fan the original before placing it on the ADF or ARDF.
- □ Set the original squarely.

# When Selecting a Paper Tray

You can select either Regular or Custom for the size of the original.

#### **Regular sizes**



**1** Select the paper tray using **[▲]** or **[▼]** keys.

OReady:B	&W		
1 🗏 A 4 🖵		÷	2
[100%]			
100%	R/E	Auto F	\∕E`

**2** Press the **[#]** key.

Select [Original Size] using [▲] or [▼], and then press the [OK] key.

⊟Other Settings 1/1 **≑**OK Original Size Colour/Quality

Select [Regular Size] using [▲] or [▼], and then press the [OK] key.

Original Size:	- 1/1	\$OK
Auto Detect		
Regular Size		
Custom Size		

**5** Select the original size using the scroll keys, and then press the **[OK]** key.

Regular Size:	1/3 💠 OKI
A3@	A4 🗂
A4🗁	A5 🗂
A5∉⊐	B4Jis≝

**6** Place the originals, and then press the **[Start]** key.

<∄¥⊁Ready		
1 🗏 A 4 🗔		÷ <b>E</b> 1
[100%]		
100%	R/E	Auto R/E

#### Note 🖉

□ This function is not available in Auto Paper Select mode.

□ To cancel the size you have set, press the **[Clear Modes]** key.

#### **Custom sizes**

#### ∰Important

□ Paper that has a vertical length of 105–297 mm (4.2"-11.6") and a horizontal length of 128-1,260 mm (5.1"-49.6") can be placed with this function.

**1** Select the paper tray using **[▲]** or **[▼]** keys.

**2** Press the **[#]** key.


**E** Select [Original Size] using [▲] or [▼], and then press the the [OK] key.

Select [Custom Size] using [▲] or [▼], and then press the [OK] key.

Original Size:	- 1/1	\$ОК)
Auto Detect		
Regular Size		
Custom Size		


Enter the horizontal size of the original (Horiz.) with the number keys, and then press the [OK] key.



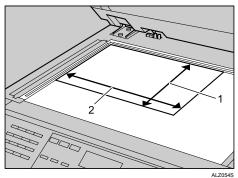

- Vertical size
- Horizontal size

**6** Enter the vertical size of the original (Vert.) with the number keys, and then press the **[OK]** key.

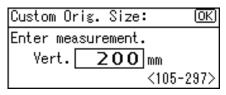

Place the originals, and then press the [Start] key.

< <b>≝</b> ⊀Ready			
1 🗏 A 4 🕞		÷ 🔳	1
[100%]			J
100%	R/E	Auto R/B	

#### 🖉 Note

- **T** This function is not available in Auto Paper Select mode.
- □ If you make a mistake, press the **[Clear/Stop]** key, and then enter the value again.
- □ To cancel the size you have set, press the **[Clear Modes]** key.

# When Selecting the Bypass Tray or One-Sheet Bypass Tray

You can select either Regular or Custom for the size of the original.

#### **Regular sizes**

Select the size of the originals from the regular sizes.

**1** Select the bypass tray or the one-sheet bypass tray using **[▲]** or **[▼]** keys.

OReady: B	&W	
1 🗏 A 4 💭		÷ 67
[100%]		
100%	R/E	Auto R/E

**2** Press the **[#]** key.

Select [Original Size] using [▲] or [▼], and then press the [OK] key.

⊟Bypass Settings 1/2	\$ОК
Paper Size	
Paper Type	
Original Size	

Select [Regular Size] using [▲] or [▼], and then press the [OK] key.

Original Size:	1/1	\$ОК)
Auto Detect		
Regular Size		
Custom Size		

**5** Select the original size using the scroll keys, and then press the **[OK]** key.

Regular Size:	1/3 <b>&lt;⊅</b> OK
A3@	A4 🗂
A4@	A5 🗂
A5⊡	B4JIS≝⊐

# **6** Place the originals, and then press the **[Start]** key.

#### 🖉 Note

- **D** This function is not available in Auto Paper Select mode.
- □ To cancel the size you have set, press the **[Clear Modes]** key.

#### **Custom sizes**

When placing custom size originals in the ADF or ARDF, specify the size of the originals.

#### ∰Important

□ Paper that has a vertical length of 105–297 mm (4.2"-11.6") and a horizontal length of 128-1,260 mm (5.1"-49.6") can be placed with this function.

**1** Select the bypass tray or the one-sheet bypass tray using **[▲]** or **[▼]** keys.

<b>O</b> Ready:B	&W	
1 🗏 A 4 🖵		÷ <b>E</b> 1
[100%]		
100%	R/E	Auto R/E

**2** Press the **[#]** key.

Select [Original Size] using [▲] or [▼], and then press the [OK] key.

⊟Bypass Settings	1/2	¢0K
Paper Size		
Paper Type		
Original Size		

Select [Custom Size] using [▲] or [▼], and then press the [OK] key.

Original Size:	- 1/1	\$ОК)
Auto Detect		
Regular Size		
Custom Size		

Enter the horizontal size of the original (Horiz.) with the number keys, and then press the [OK] key.



**6** Enter the vertical size of the original (Vert.) with the number keys, and then press the **[OK]** key.



**2** Place the originals, and then press the [Start] key.

#### 🖉 Note

- **D** This function is not available in Auto Paper Select mode.
- □ If you make a mistake, press the [Clear/Stop] key, and then enter the value again.
- □ To cancel the size you have set, press the **[Clear Modes]** key.

# 2. Copying

This chapter describes the procedure for making copies in various modes.

# **Basic Procedure**


### #Important

- □ When User Code Authentication is set, enter your user code (up to eight digits) with the number keys so that the machine accepts copy jobs. See "Authentication Information", General Settings Guide.
- When Basic Authentication, Windows Authentication, LDAP Authentication, or Integration Server Authentication is set, enter your login user name and user password so that the machine accepts copy jobs. Ask the user administrator for the login user name and login password. For details, see "When the Authentication Screen is Displayed", About This Machine.

# **1** Make sure "Ready" appears on the screen.

If any other function is displayed, press the **[Copy]** key in the centre of the control panel.

#### Initial copy screen

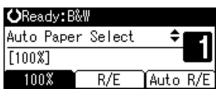

# **2** Make sure no previous settings remain.

When there are previous settings remaining, press the [Clear Modes] key and enter the setting again.


# B Place your originals.

### **4** Make desired settings.

# **5** Enter the number of copies using the number keys.

The maximum copy quantity that can be set is 99.

## **6** Press the **[Start]** key.

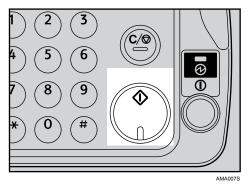

The machine starts copying.

When placing originals on the exposure glass, press the **[#]** key after all originals are scanned.

Copies are delivered face down.

#### 🖉 Note

- □ Always log off when you have finished using the machine to prevent unauthorized users from using the machine.
- □ To stop the machine during a multicopy run, press the **[Clear/Stop]** key.
- □ To return the machine to the initial condition after copying, press the [Clear Modes] key.
- □ When clearing entered values, press the **[Clear/Stop]** key.

#### Reference

See "When the Authentication Screen is Displayed", About This Machine.

# Copying from the Bypass Tray

Use the bypass tray to copy onto OHP transparencies, adhesive labels, translucent paper, postcards and copy paper that cannot be loaded in the paper trays.

## ∰Important

- Paper has a vertical length of 90-305 mm (3.6-12 inch) and a horizontal length of 148-457.2 mm (5.9-18 inch) can be copied from the bypass tray.
- □ The machine can detect the following sizes as regular size copy paper:
  - Metric version A3, A4, A5, A5, 8" × 13", CP
  - Inch version 11" × 17", 8<sup>1</sup>/<sub>2</sub>" × 11", 5<sup>1</sup>/<sub>2</sub>" × 8<sup>1</sup>/<sub>2</sub>"
     If you want to use the size of paper other than the above, be sure to specify the size.
- □ When paper larger than 433 mm (17.1 inch) in size is used, the paper may become wrinkled, may not be fed into the machine, or may cause paper jams.

## ₽ Reference

See "Copy Paper", About This Machine.


# Using the Bypass Tray

Use the bypass tray to copy onto OHP transparencies, thick paper, envelopes and copy paper that cannot be loaded in the paper trays.


## ∰Important

- □ When copying on OHP transparencies or paper heavier than 104.7 g/m<sup>2</sup> (about 28 lb.) you need to specify the type and size of paper.
- □ The maximum number of sheets you can load into the bypass tray depend on paper type. The number should not exceed the upper limit.

# Open the bypass tray.

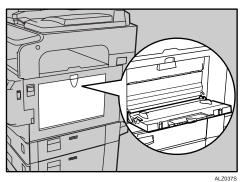

## **2** Lift the release lever.

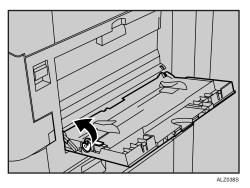


# Insert the paper face-up, and then align the paper guide to the paper size.


If the guide is not flush against the copy paper, images might be skewed or paper misfeeds might occur.

Do not stack paper over the upper limit mark, otherwise, images might be skewed or paper misfeeds might occur.

Swing out the extender to support paper sizes larger than A4 $\square$  or  $8^1/_2$ " × 11" $\square$ . Fan paper to get air between the sheets and avoid a multi-sheet feed.

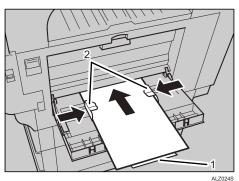

- 1) Extender
- ② Paper guide
- **4** Lower the release lever.

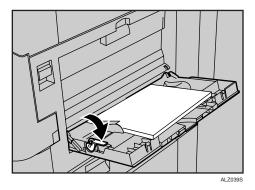

**5** Select the size and type of the paper.

**6** Place the originals, and then press the **[Start]** key.

When the copy job is finished, press the [Clear Modes] key to clear the settings.


## Using the One-Sheet Bypass Tray

You can use the one-sheet bypass tray to load OHP transparencies as well as paper that can be loaded in the paper trays.

#### ∰Important


- When copying from the one-sheet bypass tray, remove copied sheets one by one.
- □ When copying on OHP transparencies or paper heavier than 104.7 g/m<sup>2</sup> (about 28 lb.), you need to specify the type and size of paper.

# Open the bypass tray.

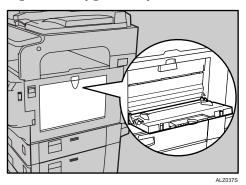

## **2** Open the one-sheet bypass tray.


Do not open one-sheet bypass tray while the machine is in operation.

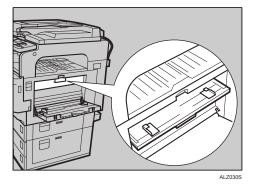

#### **E** Open the one-sheet output tray.



Do not open the one-sheet output tray while the machine is in operation.

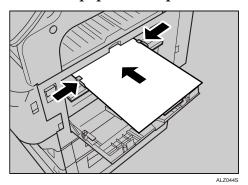

Insert the paper face-up, and then align the paper guide to the paper size.

- **5** Select the size and type of the paper.
- **6** Place the originals, and then press the **[Start]** key.

**2** Remove the paper from the one-sheet output tray.

Remove paper from the 1-Sheet Output Tray

When your copy job is finished, close the one-sheet bypass tray and the one-sheet output tray.

When the trays are closed, the settings are cleared.

```
To continue, set paper in
1-Sheet Bypass. Close
1-Sheet Bypass/Output
to end job.
```

# **Copying onto Regular Size Paper**

Makes copies onto regular size paper from the bypass tray or one-sheet bypass tray.

**1** Select the bypass tray or the one-sheet bypass tray using **[▲]** or **[▼]** keys.

**2** Open the bypass tray or one-sheet bypass tray.

When using the bypass tray, lift the release lever.

When using the one-sheet bypass tray, open the one-sheet output tray.

**B** Place your originals.

**4** Press the **[#]** key.

Select [Paper Size] using [▲] or [▼], and then press the [OK] key.

≡Bypass Settings 1/2	¢0K)
Paper Size	
Paper Type	
Original Size	

**ⓑ** Select [**Regular Size**] using **[▲]** or **[▼]**, and then press the **[OK]** key.

Paper Size:	- 1/1	¢0K)
Auto Detect		
Regular Size		
Custom Size		

Regular Size:	1/5 💠 OK)
A3 🕞	A4 🖵
A4C2	A5 🕞
A5 🕞	B4JIS <b>⊡</b>

**2** Select the paper size using the scroll keys, and then press the [OK] key.


## **Copying onto Custom Size Paper** Makes copies onto custom size paper from the bypass tray or one-sheet bypass tray. Select the bypass tray or the one-sheet bypass tray using [▲] or [▼] keys. **2** Open the bypass tray or one-sheet bypass tray. When using the bypass tray, lift the release lever. When using the one-sheet bypass tray, open the one-sheet output tray. E Place your originals. Press the [#] key. Select [Paper Size] using [▲] or [▼], and then press the [OK] key. ⊟Bypass Settings 1/2 \$OK) Paper Size Paper Type Original Size **ⓑ** Select [**Custom Size**] using [▲] or [▼], and then press the [**OK**] key. Paper Size: 1/1 \$OKI Auto Detect Regular Size Custom Size **2** Enter the horizontal size of the original (Horiz.) with the number keys, and then press the [OK] key. Custom Paper Size: (OK) Enter measurement. 14<u>8</u>mm Horiz. <148.0-457.2> Enter the vertical size of the original (Vert.) with the number keys, and then press the [OK] key. Custom Paper Size: (OK) Enter measurement. Vert.| 90.0 mm <90.0-305.0>

# When copying onto OHP transparencies

When copying onto OHP transparencies, use the one-sheet tray and select the type and size of paper.

#### ∰Important

- **OHP** transparencies are available only in Colour modes.
- □ OHP transparencies must be loaded face up in the tray with the notched corner of the sheet in the appropriate corner of the tray.
- □ Remove copied sheets one by one.
- □ When OHP (Transparency) is selected for the paper type, the paper size you can copy is restricted to A4  $\square$  or  $8^1/_2$ " × 11"  $\square$ .

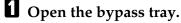


**2** Open the one-sheet bypass tray.

**E** Open the one-sheet output tray.


Insert an OHP transparency face-up, and then align the paper guide to the paper size.

Be sure to load OHP transparencies in the orientation D.

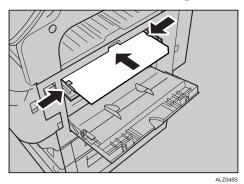


**5** Press the **[#]** key.

Select [Paper Type] using [▲] or [▼], and then press the [OK] key.

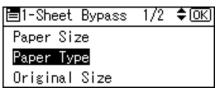

Select [OHP (Transparency)] using [▲] or [▼], and then press the [OK] key.

1-Sheet Ppr.Type: 4/6	\$ОК)
Bond Paper	
Cardstock	
OHP (Transparency)	

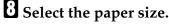

Place the originals, and then press the [Start] key.

When the copy job is finished, press the [Clear Modes] key to clear the settings.

🖉 Note

□ For OHP transparencies, print speed is slower when compared to printing on plain paper.

# When copying onto thick paper

When copying onto thick paper, select the paper type.

To prevent multiple sheets from being fed at once, fan paper before placing it on the tray.

**1** Select the bypass tray or the one-sheet bypass tray using **[▲]** or **[▼]** keys.

#### **2** Open the bypass tray or one-sheet bypass tray.

When using the bypass tray, lift the release lever.

When using the one-sheet bypass tray, open the one-sheet output tray.

# **U Insert the paper face-up, and then align the paper guide to the paper size.** When using the bypass tray, lower the release lever.

When using the one-sheet bypass tray, select the paper size.

# 4 Press the [#] key.

# • Select [Paper Type] using [▲] or [▼], and then press the [OK] key.

🖿 1-Sheet Bypass	1/2	<b>\$</b> 0К)
Paper Size		
Paper Type		
Original Size		

**6** Select [Thick Paper] using [▲] or [▼], and then press the [OK] key.

1-Sheet Ppr.Type: 3/6 \$(<u>OK)</u> Thick Paper Preprinted Paper Prepunched Paper

**2** Place the originals, and then press the [Start] key.

When the copy job is finished, press the [Clear Modes] key to clear the settings.


### 🖉 Note


# When copying onto envelopes

When copying onto envelopes, select the paper type.

#### ∰Important

□ Before loading envelopes, use a pen or similar to flatten their edges.

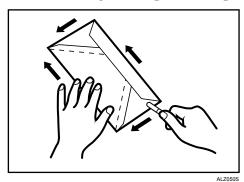


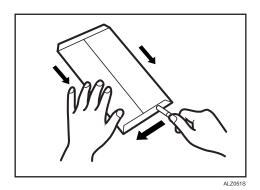

<sup>□</sup> For thick paper, print speed is slower when compared to printing on plain paper.

#### Printable area


The following areas of envelopes can be printed on:

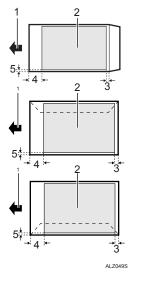

- ① Feeding direction
- Printable area
- 3 8 mm (0.4 inch)
- ④ 38 mm (1.5 inch)
- (5) 5 mm (0.2 inch)

#### Orientation of Originals and Envelopes

Originals and envelopes must be placed in the following orientation. To minimize waste and time, check that originals and envelopes are loaded in the correct orientation.

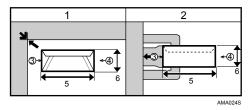

The illustration shows the correct orientation of originals and envelopes.

- 1) Original
- Envelope
- 3 Тор
- ④ Bottom
- ⑤ Horizontal size
- Wertical size


**1** Select the bypass tray or the one-sheet bypass tray using **[▲]** or **[▼]** keys.

# **2** Open the bypass tray or one-sheet bypass tray.

When using the bypass tray, lift the release lever.

When using the one-sheet bypass tray, open the one-sheet output tray.


# Insert the envelope face-up, and then align the paper guide to the paper size.

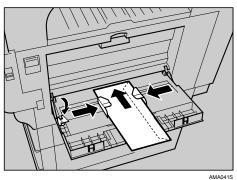

When using the bypass tray, lower the release lever.


When using the one-sheet bypass tray, select the paper size.

When copying on an envelope that has the flap on the short edge, be sure to unfold the flaps and position them opposite to the paper feed direction.

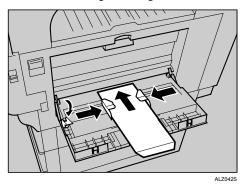

Press the [#] key.

• Select [Paper Size] using [▲] or [▼], and then press the [OK] key.

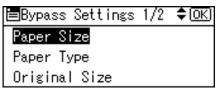

**6** Select [**Regular Size**] using [▲] or [▼], and then press the [OK] key.

Paper Size:	1/1	\$ОК)
Auto Detect		
Regular Size		
Custom Size		

2

Select the envelope size ([C6 Env.□], [C5 Env.□], or [DL Env.□]) using [▲] or [▼], and then press the [OK] key.

Regular Size:	2/5 <b>&lt;\$</b> ►OK
B5 JIS 💭	B5JIS⊡
B6us⊡a	C6Env⊡∂
C5Env⊡∂	DLEnv🖙

Press the [#] key.

Select [Paper Type] using [▲] or [▼], and then press the [OK] key.

⊟Bypass Settings 1/2 ‡OK

Paper Size

Paper Type


Original Size

Select [Envelope] using [▲] or [▼], and then press the [OK] key.

Paper Type:	4/5	\$(ОК)
Bond Paper		
Cardstock		
Envelope		

## Lower the envelope lever, and then press [Exit].

Do not lower the envelope lever while the machine is in operation.

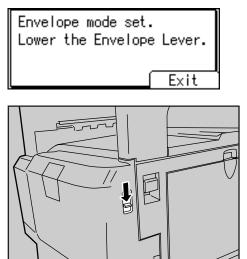

Place the original, and then press the [Start] key.

**(E** When the copy job is finished, press the **[Clear Modes]** key to clear the settings.

AI 7041S

Lift the envelope lever.

## 🖉 Note

□ When copying on an envelope that has the flap on the short edge, select **[Custom Size]** in step **[]**, enter the horizontal size (Horiz.) and the vertical size (Vert.) of the original. Do not add the length of the flap.

# **Colour Functions**

# Selecting a Colour Mode

Select a colour (or colours) that suits your originals and copying requirements.

For colour images, see "What You Can Do with This Machine <Colour Functions/Colour Adjustments>".

The following two colour modes are available.


#### Full Colour Copy

Copies by overlaying yellow, magenta, cyan and black.

Black/White Copy

Copies in black regardless of the colour of the original.

Press the [Full Colour/B&W] key to select the desired colour mode.

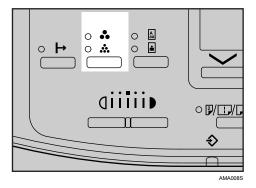

## 

See p.iii "What You Can Do with This Machine <Colour Functions/Colour Adjustments>".

## **Colour Balance**

Adjusts the overall colour tone when the overall copy is reddish or bluish.

Press the [**#**] key.


**2** Select [Colour Balance] using [▲] or [▼], and then press the [OK] key.

≡Colour/Quality 1/1 \$OK) Colour Balance Adjust Colour Copy Quality

Select the colour you want to adjust using [▲] or [▼], and then press the [OK] key.

≡Colour Balance	1/2	\$ОК)
Yellow		<b>(</b> ]:::::
Magenta		£[]::::::
Cyan		€]:::::

Adjust the colour balance by pressing [Lighter] or [Darker], and then press the [OK] key.

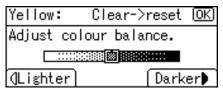

## **5** Press the **[Escape]** key.

#### 🖉 Note

- □ When you press the **[Clear/Stop]** key in step **④**, the entire colour settings are canceled and the initial settings are restored.
- □ The adjusted settings will be deleted and the initial values will be restored, when Auto Clear has been performed, when the **[Clear Modes]** key has been pressed or when the power has been turned off.
- □ For types and examples of the image adjustment functions, see "What You Can Do with This Machine <Colour Functions/Colour Adjustments>".

#### Reference

See p.iii "What You Can Do with This Machine <Colour Functions/Colour Adjustments>".

## **Colour Balance Program**

You can also store the colour balance setting as a colour balance program and recall it when you want to use it.

You can store up to three programs.

#### 🖉 Note

□ If you want to change the registered settings, register them one more time. In this case, the previously registered contents will be changed.

#### Storing the adjusted colour balance

Register adjusted colour balance settings so that you can use them later.

### Change the colour balance.

For details about how to adjust the colour balance, see "Colour Balance".

# Select [Program Colour Balance] using [▲] or [▼], and then press the [OK] key.


⊟Colour	Balance	e 2/2	2 \$ОК)
Black		:::	
Program	Colour	Balar	nce

# Select [Program] using [▲] or [▼], and then press the [OK] key.

⊟Prg.Clr.Balance 1/1 ¢OK) Recall <mark>Program</mark> Gelete

# Select a program number ([1]-[3]) for this setting, and then press the [OK] key.

The colour balance setting will be registered in the selected number.

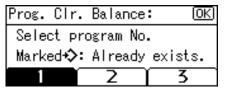

Press the [OK] key.

#### 🖉 Note

□ If you select the program number key where the � is displayed in ④ and select **[Yes]**, the previously registered settings will change (will be overwritten).

## PReference

See p.iii "What You Can Do with This Machine <Colour Functions/Colour Adjustments>".

See p.37 "Colour Balance".

#### Copying with the registered settings

Recalls and copies contents stored in colour balance programs.

Press the [**#**] key.

# **2** Select [Colour Balance] using [▲] or [▼], and then press the [OK] key.

⊟Colour/Quality 1/1 ≑OK) Colour Balance Adjust Colour Copy Quality

E Select [Program Colour Balance] using [▲] or [▼], and then press the [OK] key.


⊟Colour Balance 2/2 \$OK) Black ⊑∷आ∭®आ Program Colour Balance

Ŀ

Select [Recall] using [▲] or [▼], and then press the [OK] key.

<mark>≡</mark>Prg.Clr.Balance 1/1 ¢OK <mark>Recall</mark> Program Delete

**5** Select the program number you want to recall, and then press the [OK] key.

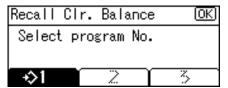

#### Delace the original, and then press the [Start] key.

#### 🖉 Note

□ After copying has been completed, pressing the **[Clear Modes]** key deletes the recalled contents.

#### Deleting the registered settings

Deletes contents stored in colour balance programs.

- Press the [**#**] key.
- Select [Colour Balance] using [▲] or [▼], and then press the [OK] key.

■Colour/Quality 1/1 \$OK Colour Balance Adjust Colour Copy Quality

Select [Program Colour Balance] using [▲] or [▼], and then press the [OK] key.


⊟Colour	Balance	2/2	\$0K)
Black			0
Program	Colour	Balanc	e

Select [Delete] using [▲] or [▼], and then press the [OK] key.


⊟Prg.Clr.Balance 1/1	\$ОК)
Recall	
Program	
Delete	

C

• Select the program number you want to delete, and then press the [OK] key.

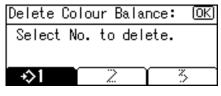

Deress [Yes], and then press the [OK] key.

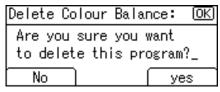

# **Colour Adjustment**

Adjusts the specific colours (yellow, red, magenta, blue, cyan and green) by mixing them with adjacent colours in the colour circle.

For types and examples of the image adjustment functions, see "What You Can Do with This Machine <Colour Functions/Colour Adjustments>".

You can adjust up to three colours from yellow, red, magenta, blue, cyan, or green.

This function is not available if Black/White Copy is selected.

Press the [#] key.

## **2** Select [Adjust Colour] using [▲] or [▼], and then press the [OK] key.

⊟Colour/Quality	1/1	\$ОК
Colour Balance		
Adjust Colour		
Copy Quality		

Select the colour you want to adjust using [▲] or [▼], and then press the [OK] key.

⊟Adjust Colour	1/2 <b>\$</b> 0K
Yellow	···· <b>T</b> ····
Red	<b>لىيى آ</b> نىيا
Magenta	<b>T</b>

## **4** Adjust the colour using **[** ◀] or **[** ▶], and then press the **[OK]** key.

Yellow:	Clear-≻	reset	(OK)
Adjust colo	our.		
To Green		To F	led )

## **5** Press the **[Escape]** key.

## 🖉 Note

- □ When you press the **[Clear/Stop]** key in step **]**, the entire colour settings are canceled and the initial settings are restored.
- □ The adjusted settings will be deleted and the initial values will be restored, when Auto Clear has been performed, when the **[Clear Modes]** key has been pressed or when the power has been turned off.
- □ For types and examples of the image adjustment functions, see "What You Can Do with This Machine <Colour Functions/Colour Adjustments>".

#### 

See p.iii "What You Can Do with This Machine <Colour Functions/Colour Adjustments>".

## Image Adjustment

The following four types of image adjustments are available.

#### Sharp/Soft

Adjusts the outline of an image.

#### Contrast

Adjusts the shades of an image.

#### Background Density

Adjusts the background density of an image.

#### ✤ Adjust U.C.R

Adjusts the amount of black ink to express vividly the black areas in an image.

## Press the [#] key.

Select [Copy Quality] using [▲] or [▼], and then press the [OK] key.

≡Colour/Quality 1/1 ¢OK Colour Balance Adjust Colour <mark>Copy Quality</mark>

Select the item you want to adjust using [▲] or [▼], and then press the [OK] key.

⊟Copy Quality	1/2 <b>≑</b> OK
Sharp/Soft	<b>T</b>
Contrast	<b>T</b>
Background Dens.	

## **4** Adjusts the settings.

#### 🖉 Note

- □ Sharp/Soft, Contrast, and Background Density can each be adjusted, however, their adjustments can affect the level of other adjustment functions.
- □ The adjusted settings will be deleted and the initial values will be reset, when Auto Clear has been performed, when the **[Clear Modes]** key has been pressed or when the power has been turned off.
- □ For types and examples of the image adjustment functions, see "What You Can Do with This Machine <Colour Functions/Colour Adjustments>".


#### ✓ Reference

See p.iii "What You Can Do with This Machine <Colour Functions/Colour Adjustments>".

#### Adjusting the sharpness/softness

Adjusts the outline of an image.

#### Adjust by pressing [Soft] or [Sharp].

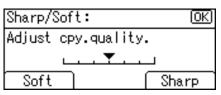


# Press the [OK] key.

#### Adjusting the Contrast

Adjusts the shades of an image.

## Adjust by pressing [Low] or [High].

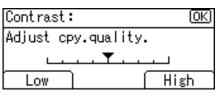


## **2** Press the **[OK]** key.

#### Adjusting the background density

Adjusts the background density of an image.

#### Adjust by pressing [Lighter] or [Darker].

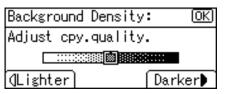

#### **2** Press the **[OK]** key.

#### 🖉 Note

- Adjustments should be made lightly when copying dark textured originals, such as newspaper or recycled paper.
- Adjustments should be made darker when darkening the colour of markers or highlighters. However, as the colour of highlighters is difficult to reproduce, the copy might not come out depending on the colour or a different colour might be copied.

## Adjusting the U.C.R

Adjusts the amount of black ink to express vividly the black areas in an image.

# Adjust by pressing [Lighter] or [Darker].

Adjust U.C.R.	: (0K)
Adjust cpy.qu	ality.
(Lighter)	Darker

**2** Press the **[OK]** key.


# **Copy Functions**

# **Adjusting Image Density**

You can adjust the image density in five steps.

# Press the [Lighter] or [Darker] key to adjust the image density.

The density indicator "[]" moves.

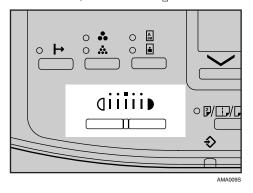

# **Selecting Original Type Setting**

Select one of the following 2 types to match your originals:

#### Text

Select this mode when your originals contain only text (no pictures).


Photo

Delicate tones of photographs and pictures can be reproduced with this mode.

- When copying developed photographs
- When copying photographs or pictures that are printed on paper (e.g. magazines)
- When copying copies or originals generated by printers

## Press the [Original Type] key to select the original type.

The indicator of the selected original type goes on.

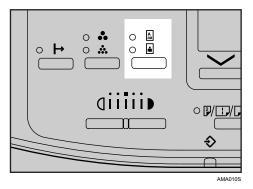

#### 🔗 Note

□ See "Original Type Setting", General Settings Guide.

## **Selecting Copy Paper**

There are two ways to select copy paper:

#### Auto Paper Select

The machine selects a suitable size of copy paper automatically based on original size and reproduction ratio.

#### Manual Paper Select

Choose the tray containing the paper you wish to copy onto: the paper tray, bypass tray or one-sheet bypass tray.

See the following table for copy paper sizes and orientations that can be used with Auto Paper Select (when copying at a ratio of 100%).

#### Metric version

Original location	Original size and orientation	
Exposure glass	A3, B4 JIS, A4, C, B5 JIS, C, 8 <sup>1</sup> / <sub>2</sub> " × 13"	
ADF or ARDF	A3, B4 JIS, A4, C, B5 JIS, C, A5, C, 8 <sup>1</sup> / <sub>2</sub> " × 13"	

#### Inch version

Original location	Original size and orientation
Exposure glass	$\begin{array}{c} 11"\times 17" \square, 10"\times 14" \square, 10"\times 8" \square, 8^{1}/_{2}"\times 14" \square, 8^{1}/_{2}"\times \\ 11" \square \square, 5^{1}/_{2}"\times 8^{1}/_{2}" \square \square\end{array}$
ADF or ARDF	$\begin{array}{c} 11"\times 17" \square, 11"\times 15" \square, 10"\times 14" \square, 10"\times 8" \square, 8^{1}/_{2}"\times 14" \square, 8" \\ \times 13" \square, 8^{1}/_{2}"\times 11" \square \square, 5^{1}/_{2}"\times 8^{1}/_{2}" \square \square \end{array}$

#### 

See p.10 "Sizes difficult to detect".

#### **Auto Paper Select**

The machine selects a suitable size of copy paper automatically based on the original size and the reproduction ratio.

## **1** Make sure that Auto Paper Select is selected.



#### 🖉 Note

- □ If Auto Paper Select is not selected, select [Auto Paper Select] by using [▲] or [▼].
- □ Paper placed in the bypass tray or one-sheet bypass tray will not be selected with Auto Paper Select. Be sure to select the bypass tray or one-sheet bypass tray by using [▲] or [▼].

#### **Manual Paper Select**

Choose the tray containing the paper you wish to copy onto: the paper tray, the bypass tray or one-sheet bypass tray.


## Select the desired tray using [▲] or [▼].

The selected tray is displayed.

OReady: B	&₩	
1 🗉 A 4 🖵		÷ 🖭
[100%]		
100%	R/E	Auto R/E

## 🖉 Note

□ If the orientation in which your original is placed (□□) is different from that of the paper you are copying onto, this function rotates the original image by 90° and fits it on the copy paper (rotated copy).

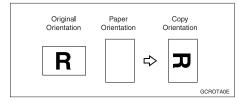

- □ This function works when Auto Paper Select or Auto Reduce/Enlarge is selected. See "Auto Paper Select" and "Auto Reduce/Enlarge".
- The default setting for Auto Tray Switching is On. You cannot use the Rotated Copy function if this setting is changed to Off. See "Auto Tray Switching", General Settings Guide.

□ You cannot use the Rotated Copy function when enlarging onto A3, B4 JIS or 11" × 17", 8<sup>1</sup>/<sub>2</sub>" × 14" size paper. In this case, place your original in the □ orientation.


	Original size and orientatior	L	Copy p entatio	aper size and ori- n
You cannot rotate:	A4, B5JIS, or A5D	When enlarg- ing to $\rightarrow$	B4 JIS or A3	GCROTAZE
However, you can use:	A4, B5JIS, or A5 C	When enlarg- ing to $\rightarrow$	B4 JIS or A3	GCROTA4E

## ₽ Reference

See p.23 "Copying from the Bypass Tray". See p.52 "Auto Reduce/Enlarge".

## **Preset Reduce/Enlarge**


You can select a preset ratio for copying.

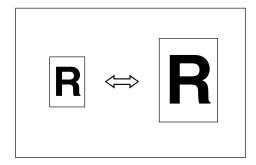


#### Base Point


The base point of Reduce/Enlarge differs depending on how the original is scanned. When the original is set on the exposure glass, the upper left corner will be the base point. When it is set to ADF or ARDF, the bottom left corner of the original will be the base point.

Shown below are the resulting copy images that differ depending on how the original is scanned.

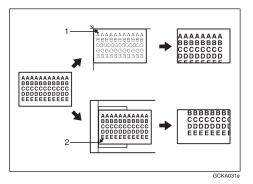

- ① Base point when placing on the exposure glass.
- ② Base point when placing in the ADF or ARDF.

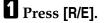

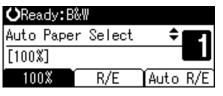

Press [Enlarge] or [Reduce].

Reduce/Enlarge:	2/3 🗘 ОК
71% (A3→A4 A4→A	¥5)
50% (A3→A5 8×13-	→A5)
Reduce Enlarge	Zoom

Select a ratio using [▲] or [▼], and then press the [OK] key.


Place your originals, and then press the [Start] key.

#### 🖉 Note

□ See "Reproduction Ratio" and "Preset R/E Priority", General Settings Guide.

## Zoom

You can change the reproduction ratio in increments of 1%.

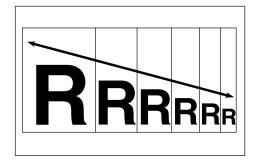

Press [R/E].

OReady:B	&W		
Auto Pape	r Select	\$	
[100%]			
100%	R/E	Auto	R/E


**2** Select the ratio.

**1** Place the original, and then press the **[Start]** key.


To select the ratio using scroll keys

Select a ratio using [▲] or [▼].

Select a preset ratio which is close to the desired ratio with [Enlarge] or [Reduce].

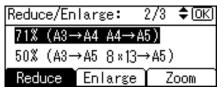

**2** Press [Zoom].

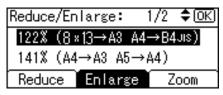

**3** Select a ratio using [▲] or [▼], and then press the [OK] key.

Reduce/En	large:	<b>≑</b> (ОК)
Enter rep		
	130 %	<25~400>
Reduce	Enlarge	Zoom

Pressing [ $\blacktriangle$ ] or [ $\checkmark$ ] changes the ratio in increments of 1%. Pressing and holding down the relevant key changes the ratio in increments of 10%.

### 🖉 Note

□ If you have incorrectly entered the ratio in step 3, readjust it using (▲) or (▼).

#### To enter the ratio with the number keys

Select a ratio using the number keys.

## Press [Zoom].


Reduce/Enlarge: 2/3 **\$**OK) 71% (A3→A4 A4→A5) 50% (A3→A5 8×13→A5) Reduce Enlarge Zoom

**2** Enter the desired ratio with the number keys, and then press the **[OK]** key.

Reduce/Enlarge:		\$ОК)	
Enter reproduction ratio.			
	8 <u>0</u> %	<25~400>	
Reduce	Enlarge	Zoom	

## Auto Reduce/Enlarge

The machine can choose an appropriate reproduction ratio based on the paper and original sizes you select.

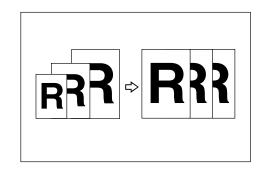

#### ∰Important

- □ You cannot use the bypass tray with this function.
- □ When using Auto Reduce/Enlarge, see the following table for original sizes and orientations you can use:

#### ✤ Metric version

Where original is placed	Original size and orientation
Exposure glass	A3, B4 JIS, A4, C, B5 JIS, C, 8 <sup>1</sup> / <sub>2</sub> " × 13"
ADF or ARDF	A3, B4 JIS, A4, C, B5 JIS, C, A5, C, 8 <sup>1</sup> / <sub>2</sub> " × 13"

#### Inch version

Where original is placed	Original size and orienttation
Exposure glass	$\begin{array}{c} 11"\times 17"\Box, 10"\times 14"\Box, 10"\times 8"\Box, 8^{1}/_{2}"\times 14"\Box, 8^{1}/_{2}"\times 11"\Box, \\ 5^{1}/_{2}"\times 8^{1}/_{2}"\Box\Box, \end{array}$
ADF or ARDF	$\begin{array}{c} 11"\times 17" \square, 11"\times 15" \square, 10"\times 14" \square, 10"\times 8" \square, 8^{1}/_{2}"\times 14" \square, \\ 8"\times 13" \square, 8^{1}/_{2}"\times 11" \square \square, 5^{1}/_{2}"\times 8^{1}/_{2}" \square \square \end{array}$

# Press [Auto R/E].

<b>O</b> Ready:B	&W		
Auto Pape	r Select	\$	
[100%]			
100%	R/E	Auto	R/E

2

**2** Select the paper size using [▲] or [▼].

OReady: B	&W		
1 🗏 A 4 🕞		÷	2
[Auto Red	uce/Enla	rge]	
100%	R/E	Auto	R/E

# B Place the originals, and then press the [Start] key.

### 

See p.10 "Sizes difficult to detect".

# Sort


Copies are assembled as sets in sequential order.

## Important

- □ To use the Rotate Sort function, two paper trays loaded with same size and type paper, but in different orientation (□□), are required. See "Paper Type: Tray 2-3", General Settings Guide.
- □ You cannot use the bypass tray with Rotate Sort.


#### Sort

Copies are assembled as sets in sequential order.

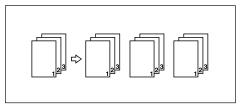


#### Rotate Sort

Every other copy set is rotated by 90 degrees ( $\Box \Box$ ) and delivered to the copy tray.

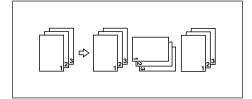

# Press the [Sort] key.

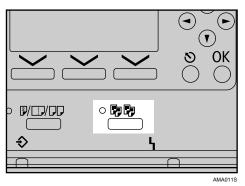

**2** Select [Sort] or [Rotate Sort] using [▲] or [▼], and then press the [OK] key.

Sort:	1/1	\$ОК)
Sort		
Rotate Sort		

# Enter the number of copy sets using the number keys.

# **4** Place your originals.

When placing an original on the exposure glass, start with the first page to be copied. When placing an original in the ADF or ARDF, set so that the last page is on the bottom.

When placing originals on the exposure glass, press the **[#]** key after all originals are scanned.

## **5** Press the **[Start]** key.

#### 🔗 Note

- □ To display the screen in step 2, select [On] for [Rotate Sort] with User Tools (Copier futures).
- See "Rotate Sort", "Rotate Sort:Auto Continue", "Auto Tray Switching", General Settings Guide.

#### Changing the Number of Sets

You can change the number of copy sets during copying.

#### ∰Important

□ This function can only be used when the Sort function is turned on.

# While "Copying..." is displayed, press the [Clear/Stop] key.

**2** Press [Sets].

Are you sure you want to stop copying? You can change the No. of sets. Sets Resume Stop

Enter the number of copy sets with the number keys, and then press [Resume].

Copying starts again.

#### Note 🖉


□ The number of sets you can enter in step ☑ differs depending on when the [Clear/Stop] key is pressed.

## **Duplex**

The type of duplex available is:


#### \* 1 Sided $\rightarrow$ 2 Sides

Copies 2 one-sided pages on 1 two-sided page.

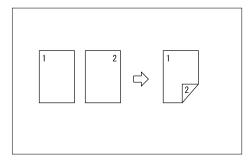

#### \* 2 Sided $\rightarrow$ 2 Sided


Copeis 1 two-sided page onto 1 two-sided page.

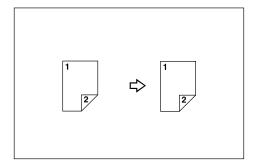


#### Original orientation and completed copies

The resulting copy image will differ according to the orientation in which you place your originals (vertical  $\square$  or horizontal  $\square$ ).


The table shows the orientation of images on the front and back of copies, not the orientation of delivery.

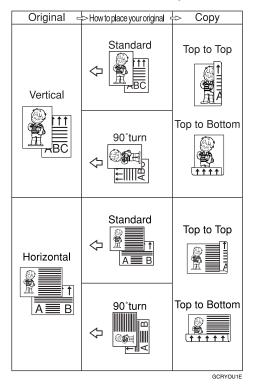


Press the [Dup/Comb/Series] key.

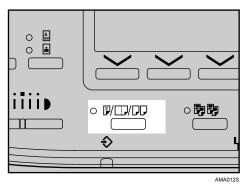


2 Select the setting of original and copy type using [▲] or [▼], and then press the [OK] key.

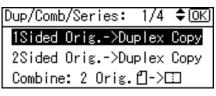

Select the original orientation using [▲] or [▼], and then press the [OK] key.

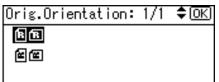

Select the duplex orientation using [▲] or [▼], and then press the [OK] key.

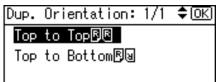

# • Place the originals, and then press the [Start] key.

#### 🖉 Note

- □ You cannot use the bypass tray with this function.
- □ The maximum paper weight that can be used with duplex copying is 60-90  $g/m^2$  (52-77 kg).
- When placing an original on the exposure glass, start with the first page to be copied. When placing an original in the ADF or ARDF, set so that the last page is on the bottom.
- □ See "Duplex Margin", General Settings Guide.
- □ To display the screens in step **I** and **I**, select **[Always Specify]** for **[Orientation]** with User Tools (Copier futures). If **[Do not Specify]** is selected, proceed to step **J**. See "Orientation", General Settings Guide.

# **One-Sided Combine**

Combine several pages onto one side of a sheet.


There are four types of One-Sided Combine.

#### ∰Important

□ You cannot use the bypass tray with this function.


#### \* 1 Sided 2 Pages $\rightarrow$ Combine 1 Side

Copies 2 one-sided originals to one side of a sheet.

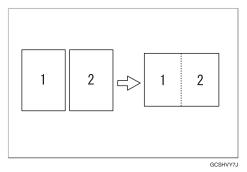

#### \* 1 Sided 4 Pages $\rightarrow$ Combine 1 Side


Copies 4 one-sided originals to one side of a sheet.

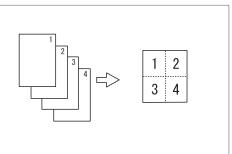

GCSHVY8J


# \* 2 Sided 1 Page $\rightarrow$ Combine 1 Side

Copies 1 two-sided original onto one side of a sheet.

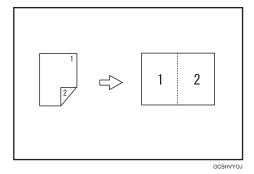


# \* 2 Sided 2 Pages $\rightarrow$ Combine 1 Side


Copies 2 two-sided originals onto one side of a sheet.

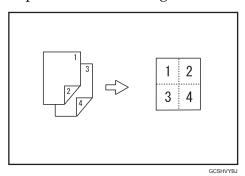

# ◆ Orientation of original □ □ and image position of combine Open to left (□) originals

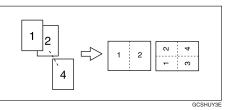


Open to top ( $\square$ ) originals

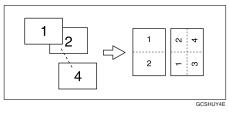


Placing originals (originals placed in the ADF or ARDF)


Combine6

• Originals read from left to right

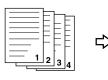


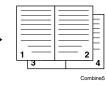

• Originals read from top to bottom

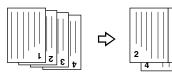



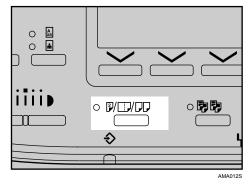

2 Select the number of originals to combine using [▲] or [▼], and then press the [OK] key.

Dup/Comb/:	Serie	s:	2/4	\$ОК)
Combine:	4 Or	ig.(	<u>"-&gt;</u> E	
Combine:	4 Or	is.(	<u>]-&gt;</u> c	<b>P</b> 2
Combine:	8 Or	is.(	3->6	2

E Select the original orientation using [▲] or [▼], and then press the [OK] key.

Orig.Orientation:	1/1	\$ОК)
RR		
é		

Select the paper size using [▲] or [▼], and then press the [OK] key.

<b>O</b> Ready:B	&W	
1 🗏 A 4 🗋		÷ EI
[Auto Red	uce/Enlar	ge]
100%	R/E	Auto R/E

**5** Place the originals, and then press the **[Start]** key.

# 🖉 Note

□ To display the screen in step 3, select [Always Specify] for [Orientation] with User Tools (Copier futures). If [Do not Specify] is selected, proceed to step 3. See "Orientation", General Settings Guide.

# PReference

See "Orientation", General Settings Guide.

# **Two-Sided Combine**


Combines various pages of originals into one sheet with two sides. There are four types of Two-Sided Combine.

# ∰Important

□ You cannot use the bypass tray with this function.


### \* 1 Sided 4 Pages $\rightarrow$ Combine 2 Side

Copies 4 one-sided originals to one sheet with two pages per side.

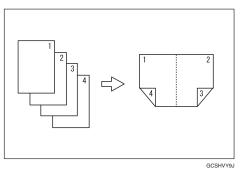

# ✤ 1 Sided 8 Pages → Combine 2 Side


Copies 8 one-sided originals to one sheet with four pages per side.

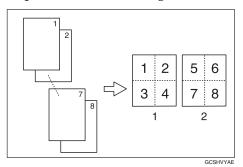

- 1) Front
- Back


# \* 2 Sided 2 Pages $\rightarrow$ Combine 2 Side

Copies 2 two-sided originals onto one sheet with two pages per side.

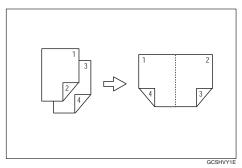


#### \* 2 Sided 4 Pages $\rightarrow$ Combine 2 Side

Copies 4 two-sided originals onto one sheet with four pages per side.

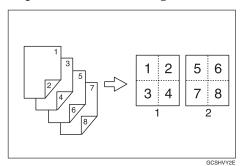


- 1) Front
- Back

Press the [Dup/Comb/Series] key.

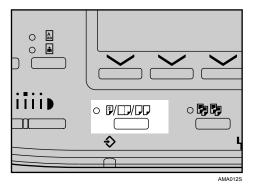


2 Select the number of originals to combine using [▲] or [▼], and then press the [OK] key.

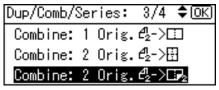

Select the original orientation using [▲] or [▼], and then press the [OK] key.

Orig.Orientation:	1/1	\$ <u>ОК</u>
R R		
e e		

Select the duplex orientation using [▲] or [▼], and then press the [OK] key.

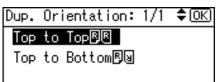

2

• Select the paper size using [▲] or [▼], and then press the [OK] key.

<b>O</b> Ready:B	&W		
1 🗏 A 4 🗋		\$	
[Auto Red	uce/Enlar	ge]	
100%	R/E	Auto	R/E

Delace the originals, and then press the [Start] key.

# 🖉 Note

□ To display the screens in step **3** and **4**, select **[Always Specify]** for **[Orientation]** with User Tools (Copier futures). If **[Do not Specify]** is selected, proceed to step **5**. See "Orientation", General Settings Guide.

# PReference

See "Orientation", General Settings Guide.

# **Series Copies**

You can separately copy the front and back of a two-sided original or two facing pages of a bound original onto two sheets.

# ∰Important

- $\Box$  You cannot use the Book $\rightarrow$ 1 Sided function from the ADF or ARDF.
- □ See the following table for original and copy paper sizes when using a 100% ratio with Book→1 Sided function.
  - Metric version

Original	Paper for 1-sided copy
A3 🗗	A4 🖵 × 2 sheets
B4 JIS <b>⊡</b>	B5 JIS     × 2 sheets
A4 🕞	A5 🖵 × 2 sheets
	41440206


Inch version

Original	Paper for 1-sided copy
11" × 17" 🕞	8 <sup>1</sup> / <sub>2</sub> ×11" <b>□</b> ×2 sheets
8 <sup>1</sup> / <sub>2</sub> × 11" <b>□</b>	$5^{1/2} \times 8^{1/2} \mathbf{\Box} \times 2$ sheets
	AMA027S

 $\Box$  You cannot use the bypass tray with the Book $\rightarrow$ 1 Sided function.


#### $\clubsuit \text{ Book} \rightarrow 1 \text{ Sided}$

You can make one-sided copies from two facing pages of a bound original (book).

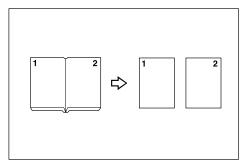


### ✤ 2 Sided→1 Sided


Copies each side of a two-sided original onto two separate pages.

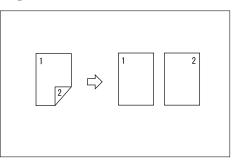

Press the [Dup/Comb/Series] key.

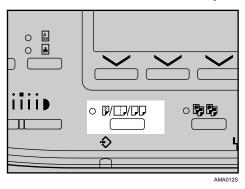

Select [Series: Book Orig.] or [Series: 2Sided Orig.] using [▲] or [▼], and then press the [OK] key.

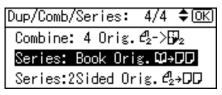

When selecting [Series: Book Orig.], proceed to step [].

Select the original orientation using [▲] or [▼], and then press the [OK] key.

Orig.Orientation: 1/1	\$ОК)
R (R	

Select the paper size using [▲] or [▼], and then press the [OK] key.

OReady:B	&W		
1 🗏 A 4 🗋		\$	
[Auto Red	uce/Enlar	ge]	
100%	R/E	Auto	R/E

**5** Place the originals, and then press the **[Start]** key.

# 🖉 Note

□ To display the screen in step ③, select [Always Specify] for [Orientation] with User Tools (Copier futures). If [Do not Specify] is selected, proceed to step ④. See "Orientation", General Settings Guide.

# ₽ Reference

See "Orientation", General Settings Guide.

# 3. Appendix

# Combination Chart

A given combination of the copy features may or may not be available depending on the order of its setup.

Blank: : These modes can be used together.

 $\times$  : These modes cannot be used together. The first mode selected will be the mode you are working in.

• : These modes cannot be used together. The second mode selected will be the mode you are working in.

Following lists the combinations of functions.

$\square$						Fu	ncti	ons	sele	ecte	d afl	er								
	Functions	Auto Paper Select	Custom Size Originals	Regular Size Originals	Bypass Tray	1-sheet Bypass Tray	Image Density	Text Mode	Photo Mode	Auto Reduce/Enlarge	Zoom	Combine	Book→1 Sided	2 Sided→1 Sided	1 Sided→2 Sided	2 Sided→2 Sided	Sort	Black & White	-ull Colour (without Function Upgrade Option)	Full Colour (with Function Upgrade Option)
	Auto Paper Select	$\leftarrow$	×	×	•	•				•									_	
	Custom Size Originals	┢	Ŕ	Ô			-		-			-	⊢	*1		*1		-		
	Regular Size Originals	X		◄										· 1		<u> </u>		-		
st	Bypass Tray	ê	-							*4		*4	*4		*4	*4	*2			
selected first	1-sheet Bypass Tray	ŏ								*4		*4	*4		*4	*4	*4	*3		
eq	Image Density	<u> </u>			-					· ·		<u> </u>	<u> </u>			<u> </u>	<u> </u>	<u> </u>		
ğ	Text Mode																			
<del>e</del>	Photo Mode								ド											
	Auto Reduce/Enlarge				*4	*4		ľ	$\vdash$	$\sim$		*5								
L L L	Zoom				L .	<u> </u>					Ń	•	<u> </u>							
Functions	Combine	X			*4	*4						$\overline{}$	•		•					
l ⊑ l	Book→1 Sided	X			*4	*4				×	1	Ī	$\overline{\}$	•	۲	•				
Ш	2 Sided→1 Sided	L,	*1		*4	*4						•		$\overline{}$	Ŏ	Ŏ				
	1 Sided→2 Sided				*4	*4						Ĭ	Ŏ		$\overline{}$	•			*4	
	2 Sided→2 Sided		*]									•	•	•					*4	
	Sort	i –		İ	*2	*4											$\sim$		*4	
	Black & White	i –		İ		*3												$\sim$	•	•
	Full Colour (without Function Upgrade Option)		1								1				*4	*4	*4			
	Full Colour (with Function Upgrade Option)		1								1									

AMA021S

- \*1 A function incompatibility message appears if the original you have set is 2-sided or exceeds 433 mm (17 inch). Copy is not possible until one of the functions is disabled.
- <sup>\*2</sup> A function incompatibility message appears if you load a sheet that exceeds 432 mm (17 inch). Copying is not possible until one of the functions is disabled.
   <sup>\*3</sup> A function incompatibility message appears if you load OHP transparencies. Copy is not possible until one of the functions is disabled.
   <sup>\*4</sup> is for the function of the functions is disabled.
- <sup>\*4</sup> A function incompatibility message appears if you select two conflicting functions.
   Copy is not possible until one of the functions is disabled.
- <sup>\*5</sup> Enabled by the second mode selected.

# **Supplementary Information**

Following describes the detailed specifications of the respective functions.

# ✤ Bypass Tray Copy

 The following paper sizes can be selected. Metric version A3□, A4□□, A5□□, B4 JIS□, B5 JIS□□, B6 JIS□, 11"×17"□, 8<sup>1</sup>/<sub>2</sub>"×14"□, 8<sup>1</sup>/<sub>2"</sub>×11"□□, 7<sup>1</sup>/<sub>4</sub>"×10<sup>1</sup>/<sub>2</sub>"□□, 5<sup>1</sup>/<sub>2</sub>"×8<sup>1</sup>/<sub>2</sub>"□, 8K□, 16K□□, C6 Envelope□, C5 Envelope□, DL Envelope□, 4<sup>1</sup>/<sub>2</sub>"×9<sup>1</sup>/<sub>2</sub>"□, 3<sup>7</sup>/<sub>8</sub>"×7<sup>1</sup>/<sub>2</sub>"□

Inch version

 $\begin{array}{c} 11"\times17"\square, 8^{1}/_{2}"\times14"\square, 8^{1}/_{2}"\times13"\square, 8^{1}/_{2}"\times11"\square\square, 8^{1}/_{4}"\times13"\square, 8"\times13"\square, 8"\times13"\square, 8"\times10^{1}/_{4}"\times10^{1}/_{2}"\square\square, 5^{1}/_{2}"\times8^{1}/_{2}"\square, 4^{1}/_{8}"\times9^{1}/_{2}"\square, 3^{7}/_{8}"\times7^{1}/_{2}"\square, A3\square, A4\square\square, A5\square\square, B4 JIS\square, B5 JIS\square\square, B6 JIS\square, C6 Envelope□, C5 Envelope□, DL Envelope□, 8K□, 16K\square\square$ 

### Preset Reduce/Enlarge

- You can select one of nine preset ratios (4 enlargement ratios, 5 reduction ratios).
- Copies can be reduced or enlarged as follows:

#### ✤ Metric version

Ratio (%)	<b>Original</b> $\rightarrow$ <b>Copy paper size</b>
400	
200 (enlarge area by 4)	A5→A3
141 (enlarge area by 2)	$A4 \rightarrow A3, A5 \rightarrow A4$
122	$F \rightarrow A3, A4 \rightarrow B4 JIS$
93	
82	$F \rightarrow A4, B4 JIS \rightarrow A4$
71 (reduce area by $1/2$ )	$A3 \rightarrow A4, A4 \rightarrow A5$
50 (reduce area by $1/4$ )	$A3 \rightarrow A5, F \rightarrow A5$
25	

# Inch version

Ratio (%)	$Original \rightarrow Copy \ paper \ size$
400	
155 (enlarge area by 2)	$5^{1}/_{2}$ " × $8^{1}/_{2}$ " → $8^{1}/_{2}$ " × 14"
129	$8^1/_2$ " × 11" → 11" × 17"
121	$8^1/_2$ " × 14"→11" × 17"
93	
78	$8^{1}/_{2}$ " × 14" $\rightarrow 8^{1}/_{2}$ " × 11"
65	$11" \times 17" \rightarrow 8^1/_2" \times 11"$
50 (reduce area by $1/4$ )	$11" \times 17" \rightarrow 5^{1}/_{2}" \times 8^{1}/_{2}"$
25	

• You can select a ratio regardless of the size of an original or copy paper. With some ratios, parts of the image might not be copied or margins will appear on copies.

# Zoom

- The reproduction ratios you can specify are 25–400 %.
- You can select a ratio regardless of the size of an original or copy paper. With some ratios, parts of the image might not be copied or margins will appear on copies.

# Sort


- Paper sizes and orientations that can be used in the Rotate Sort function are A4 □ □ and B5 JIS □ □, 8<sup>1</sup>/<sub>2</sub>" × 11" □ □.
- The number of copies that can be placed on the tray is as follows. When the number of copies exceeds capacity, remove copies from the tray.
  - Internal tray 250 sheets
    - Selecting Rotate Sort may reduce the number of paper that can be housed by the tray.

# Duplex

- Following paper sizes and orientations can be duplexed.
   A3D, B4 JISD, A4 DD, B5 JIS DD, A5 DD, 11" × 17"D, 8<sup>1</sup>/<sub>2</sub>" × 11" DD
- You cannot use the following copy paper with this function:
  - Paper smaller than A5 (A5 can be selected for Duplex)
  - Translucent paper
  - Label paper (adhesive labels)
  - OHP transparencies
  - Thick paper
  - Postcards
- When an odd number of originals are placed in the ADF or ARDF, the back of the last page of copied paper is blank.
- During copying, the image is shifted to allow for the binding margin.

# Combine

- In this mode, the machine selects the reproduction ratio automatically. This reproduction ratio depends on copy paper sizes and the number of originals.
- The reproduction ratios you can specify are 25–400 %.
- If the calculated ratio is under the minimum ratio, it is automatically adjusted to within available range. However, with some ratios, parts of the image might not be copied.
- You cannot use custom size paper.
- If the orientation of originals is different from that of the copy paper, the machine will automatically rotate the image by 90° to make copies properly.
- If the number of originals placed is less than the number specified for combining, the last page segment is left blank as shown.

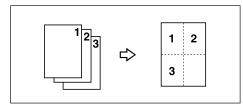

# INDEX

1 Sided 2 Pages  $\rightarrow$  Combine 1 Side, 58 1 Sided 4 Pages  $\rightarrow$  Combine 2 Side, 62 1 Sided 4 Pages  $\rightarrow$  Combine 2 Side, 62 1 Sided  $\rightarrow$  2 Sides, 55 2 Sided 1 Page  $\rightarrow$  Combine 1 side, 58 2 Sided 2 Pages  $\rightarrow$  Combine 1 Side, 58 2 Sided 4 Pages  $\rightarrow$  Combine 2 Side, 62 2 Sided 4 Pages  $\rightarrow$  Combine 2 Side, 62 2 Sided  $\rightarrow$  1 Sided, 65 2 Sided  $\rightarrow$  1 Sided, 64 2 Sided  $\rightarrow$  2 Sided, 55

### A

ADF or ARDF, 8 Adjust Colour, iv Adjusting Colour, iv Adjusting Image Density, 45 Adjusting Images, v Adjusting the background density, 43 Adjusting the background density, 43 Adjusting the Contrast, 43 Adjusting the Sharpness/softness, 43 Adjusting the U.C.R, 43 Adjusting the U.C.R, 44 Adjust U.C.R., v, 42 ADS Background, 5 APS/ Auto R/E Priority, 5 Auto Paper Select, 46, 47 Auto Reduce/Enlarge, 52 Auto Tray Switching, 5

# В

Background Density, v, 42 Base Point, 48 Basic Procedure, 21 Black/White Copy, iii, 36 Book  $\rightarrow$  1 Sided, 64 Bypass Tray, 17, 23 Bypass Tray Copy, 68

# С

Changing the Number of Sets, 55 Colour Adjustment, 41 Colour Balance, iv, 37 Colour Balance Program, 38 Colour Copying, iii Colour Functions, 36 Colour Mode Priority, 5 Combination Chart, 67 Combine, 68 **Combining Multiple Pages** onto a Single Page, ix Contrast, v, 42 Copier Features, 5 Copy Functions, 45 Copying, 21 Copying from the Bypass Tray, 23 Copying onto an Envelope, x Copying Originals Such as Books, x Copying with the registered settings, 39 Custom Size Paper, 28 Custom sizes, 16, 18

# D

Deleting the registered settings, 40 detectable, 9 Display, 4 Duplex, 55, 68 Duplex Margin, 5 Duplex Mode Priority, 5

# Ε

envelopes, 31 Exposure glass, 8

# F

Full Colour Copy, iii, 36

# Η

How to Read This Manual, 2

# I

Image Adjustment, 42 image position of combine, 58 Initial copy screen, 4, 21 L

Letterhead Setting, 5

#### Μ

Manual Paper Select, 46, 47 Max. Number of Sets, 5 Menu Protect, 5 Missing Image Area, 11

#### Ν

Non-compatible originals for the ADF or ARDF, 8 number keys, 51

#### 0

OHP transparencies, 29 One-Sheet Bypass Tray, 17, 25 One-Sided Combine, 58 Options, 2, 3 Orientation, 5 Orientation of original, 58 Original, 7 Original Count Display, 5 Original Orientation, 12, 55 Original Size, 7, 9 Original size, 7, 9 Original Type Setting, 5 Original weight, 7

#### Ρ

Photo, 45 placing custom size originals, 13 Placing Originals, 7, 12 Placing Originals in the ADF or ARDF, 13 Placing Originals on the Exposure Glass, 12 Preset Reduce/Enlarge, 48, 68 Preset R/E Priority, 5 Primary Colours, iv

#### R

ratio, 50, 51 Reading the Display and Using Keys, 4 Regular Size Paper, 27 Regular sizes, 15, 17 Reproduction Ratio, 5 Rotate Sort, 5, 53

#### S

scroll keys, 50 Selecting a Colour Mode, 36 Selecting a Paper Tray, 15 Selecting Copy Paper, 46 Selecting Original Type Setting, 45 Series Copies, 64 Series copies, 65 Sharp/Soft, v, 42 size, 7 Sizes Detectable by the Auto Paper Select, 8 Sizes difficult to detect, 10 Sort, 53, 68 Storing the adjusted colour balance, 38 Supplementary Information, 68 Symbols, 2

### Т

Text, 45 thick paper, 30 Two-Sided Combine, 62 Types of Duplex Copies, vii

#### U

User Tools, 5

#### W

weight, 7 What You Can Do with This Machine, iii, vii When Selecting the Bypass Tray or One-Sheet Bypass Tray, 17

#### Ζ

Zoom, 50,68

# CE

#### Declaration of Conformity

"The Product complies with the requirements of the EMC Directive 89/336/EEC and its amending directives and the Low Voltage Directive 73/23/EEC and its amending directives."

In accordance with IEC 60417, this machine uses the following symbols for the main power switch:

#### means POWER ON.

#### O means POWER OFF.

Acrobat<sup>®</sup> is a registered trademark of Adobe Systems Incorporated.

Other product names used herein are for identification purposes only and might be trademarks of their respective companies. We disclaim any and all rights to those marks.





