

Operating Instructions Printer Reference



- 1 Preparing the Machine
- 2 Setting Up the Printer Driver
- 3 Other Print Operations
- 4 Direct Printing from a Digital Camera (PictBridge)
- 5 Appendix

Introduction

This manual contains detailed instructions and notes on the operation and use of this machine. For your safety and benefit, read this manual carefully before using the machine. Keep this manual in a handy place for quick reference.

Important

Contents of this manual are subject to change without prior notice. In no event will the company be liable for direct, indirect, special, incidental, or consequential damages as a result of handling or operating the machine.

Do not copy or print any item for which reproduction is prohibited by law.

Copying or printing the following items is generally prohibited by local law:

bank notes, revenue stamps, bonds, stock certificates, bank drafts, checks, passports, driver's licenses.

The preceding list is meant as a guide only and is not inclusive. We assume no responsibility for its completeness or accuracy. If you have any questions concerning the legality of copying or printing certain items, consult with your legal advisor.

Caution:

Use of controls or adjustments or performance of procedures other than those specified in this manual might result in hazardous radiation exposure.

Two kinds of size notation are employed in this manual. With this machine refer to the metric version.

Notes

Some illustrations in this manual might be slightly different from the machine.

Certain options might not be available in some countries. For details, please contact your local dealer.

Manuals for This Machine

Refer to the manuals that are relevant to what you want to do with the machine.

∰Important

	Media	differ	according	to	manual
--	-------	--------	-----------	----	--------

☐ The printed and electronic versions of a manual have the same contents.

☐ Adobe Acrobat Reader/Adobe Reader must be installed in order to view the manuals as PDF files.

☐ Depending on which country you are in, there may also be html manuals. To view these manuals, a Web browser must be installed.

About This Machine

Be sure to read the Safety Information in this manual before using the machine.

This manual provides an introduction to the functions of the machine. It also explains the control panel, preparation procedures for using the machine, how to enter text, and how to install the CD-ROMs provided.

Troubleshooting

Provides a guide to solving common problems, and explains how to replace paper, print cartridges, and other consumables.

Copy Reference

Explains Copier functions and operations. Also refer to this manual for explanations on how to place originals.

❖ Facsimile Reference

Explains Facsimile functions and operations.

Printer Reference

Explains Printer functions and operations.

Scanner Reference

Explains Scanner functions and operations.

Network Guide

Explains how to configure and operate the machine in a network environment, and use the software provided.

General Settings Guide

Explains User Tools settings, and Address Book procedures such as registering fax numbers, e-mail addresses, and user codes. Also refer to this manual for explanations on how to connect the machine.

❖ Security Reference

This manual is for administrators of the machine. It explains security functions that you can use to prevent unauthorized use of the machine, data tampering, or information leakage. For enhanced security, we recommend that you first make the following settings:

- Install the Device Certificate.
- Enable SSL (Secure Sockets Layer) Encryption.
- Change the user name and password of the administrator using Web Image Monitor.

For details, see "Setting Up the Machine", Security Reference.

Be sure to read this manual when setting the enhanced security functions, or user and administrator authentication.

❖ PostScript 3 Supplement

Explains how to set up and use PostScript 3.

❖ UNIX Supplement

For "UNIX Supplement", please visit our Web site or consult an authorized dealer.

The manual includes descriptions of functions and settings that might not be available on this machine.

Other manuals

- Quick Guide
- Manuals for DeskTopBinder Lite
 - DeskTopBinder Lite Setup Guide
 - DeskTopBinder Introduction Guide
 - Auto Document Link Guide

Note

☐ Manuals provided are specific to machine types.

TABLE OF CONTENTS

Manuals for This Machine	i
How to Read This Manual	
Symbols	
Display Panel	
Reading the Display and Using Keys	
Using the Bypass Tray	
Setting Paper on the Bypass Tray	
Setting the Paper Size and Paper Type of the Bypass Tray	
Using the One-Sheet Bypass Tray	
Inserting Paper into the One-Sheet Bypass Tray	
Setting the Paper Size and Paper Type of the One-Sheet Bypass Tray	10
1. Preparing the Machine	
Confirming the Connection Method	21
Network Connection	
Local Connection	
Installing the Printer Driver	2 4
Quick Install	
Installing the Printer Driver for the Selected Port	
Using as a Windows Network Printer	
Using as a NetWare Print Server / Remote Printer	
Form Feed	
Banner Page	
Printing after Resetting the Printer	
Installing the Printer Driver Using USB	
Windows 2000 - USB Windows XP, Windows Server 2003 / 2003 R2 - USB	
Windows XF, Windows Server 2003 / 2003 R2 - USB	
Printing with Parallel Connection	
Making Option Settings for the Printer	
Conditions for Bidirectional Communication	
If Bidirectional Communication Is Disabled	
Installing Font Manager	
Using Adobe PageMaker Version 6.0, 6.5, or 7.0	
	5 1
2. Setting Up the Printer Driver	
PCL - Accessing the Printer Properties	
Windows 2000 - Accessing the Printer Properties	
Windows XP, Windows Server 2003 / 2003 R2 - Accessing the Printer Properties	
Windows Vista - Accessing the Printer Properties	
RPCS - Accessing the Printer Properties	
Windows 2000 - Accessing the Printer Properties	
Windows XF, Windows Server 2003 / 2003 N2 - Accessing the Printer Properties Windows Vista - Accessing the Printer Properties	
Notes on Printing when [Black and White] is Selected	

3. Other Print Operations

Printing a PDF File Directly	67
Printing Method	
Using DeskTopBinder Lite	67
Using commands	70
Unauthorized Copy Control	71
Using [Data security for copying]	72
Using [Mask type:]	
Important Notice	
Using the Print Job Function	76
Printing from the Print Job Screen	
Sample Print	
Locked Print	
Hold Print	
Stored Print	
Printing from the User ID Screen	
Printing the Selected Print Job	
Printing All Print Jobs	
Form Feed	
Printing from a Selected Tray	
Canceling a Print Job	
Canceling a Print Job	
Canceling a Print Job Using the Control Panel	
Checking the Error Log	
Spool Printing	
Collate	103
4. Direct Printing from a Digital Camera (Pic	tBridge)
What is PictBridge?	105
PictBridge Printing	106
What Can Be Done on This Machine	108
Index Printing	
Trimming	
Date and File Name Printing	
Paper Size	
Image Print Size Multi-Image-Layout	
Printing Quality	
Colour Matching	
Paper type Specification	
Form Printing	
Camera Memo Printing	
Exiting PictBridge	116
Other Reference Information	

5. Appendix

Specifications	119
Printer Features Menu	
INDEX	12!

How to Read This Manual

Symbols

This manual uses the following symbols:

MARNING:

Indicates important safety notes.

Ignoring these notes could result in serious injury or death. Be sure to read these notes. They can be found in the "Safety Information" section of About This Machine.

CAUTION:

Indicates important safety notes.

Ignoring these notes could result in moderate or minor injury, or damage to the machine or to property. Be sure to read these notes. They can be found in the "Safety Information" section of About This Machine.

#Important

Indicates points to pay attention to when using the machine, and explanations of likely causes of paper misfeeds, damage to originals, or loss of data. Be sure to read these explanations.

Note

Indicates supplementary explanations of the machine's functions, and instructions on resolving user errors.

This symbol is located at the end of sections. It indicates where you can find further relevant information.


[]

Indicates the names of keys that appear on the machine's display panel.

Indicates the names of keys on the machine's control panel.

Display Panel

This section describes configuration using the display panel when the printer function is selected.

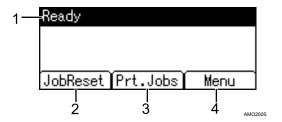

1. Operational status or messages

Displays current machine status, such as "Ready", "Offline", and "Printing...".

2. [JobReset]

Press to cancel the current print job. If you press it when the machine is offline and Hex Dump is selected, Hex Dump is canceled.

3. [Prt.Jobs]

Displayed when the hard disk is connected.

Press to display print jobs sent from a computer.

4. [Menu]

Press to display the menu to select the following options:

• [Form Feed]

Prints all the data left in the machine's input buffer.

• [Show Error Log]


Displays the error logs of print jobs that are sent from a computer.

Note

☐ When the power is turned on, the copier display is shown. This is a factory default. This initial setting can be changed. See "System Settings", General Settings Guide.

Reading the Display and Using Keys

This section explains how to read the display and using the selection key for the initial display.

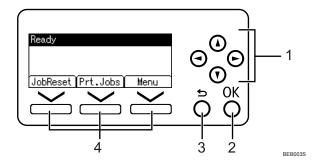

1. Scroll keys

Press to move the cursor in each direction, step by step.

When the $[\blacktriangle]$, $[\blacktriangledown]$, or $[\blacktriangleleft]$ key appears in this manual, press the scroll key of the same direction.

2. [OK] key

Press to set a selected item or entered numeric value.

3. [Escape] key

Press to cancel an operation or return to the previous display.

4. Selection keys

Correspond to the function items at the bottom line on the display. Example: Basic screen when the instruction "press [JobReset]" appears in this manual, press the left selection key.

Using the Bypass Tray

Setting Paper on the Bypass Tray


This section gives instructions for setting paper on the bypass tray.

For details about paper size and paper type, see "Recommended Paper Sizes and Types", About This Machine.

#Important

- ☐ The following functions are disabled when printing from the bypass tray:
 - Duplex Printing
 - Auto Tray Select
 - Auto Tray Switching
 - Rotating Collate
- ☐ When printing using the printer function, original images are always rotated by 180 degrees (the orientation of images to be printed is opposite to that of the copier function). When printing onto paper with specific orientation requirements, such as envelopes and letterheads, be sure to rotate the paper feed orientation to 180 degrees.
- ☐ OHP transparencies, glossy paper, and thick glossy paper cannot be printed from the bypass tray. Use the one-sheet bypass tray.
- \square Paper that is thicker than 162 g/m² (max.) cannot be printed from the bypass tray. Print from the one-sheet bypass tray when using paper of that thickness.


1 Open the bypass tray.

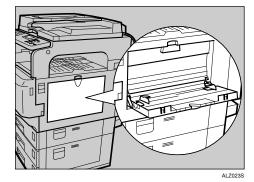

2 Lift up the paper guide release lever.



Adjust the paper guides to the paper size, and then gently insert paper face up into the bypass tray.

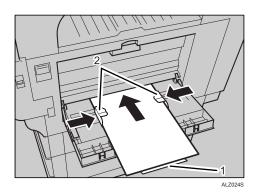


1. Extender

2. Paper guides

- Open out the extender to support paper sizes larger than A4 \square , $8^1/2 \times 11 \square$.
- If the paper guides are not flush against the paper, skewing and misfeeds might occur.
- Gently insert paper until it stops.
- The maximum number of sheets you can load into the bypass tray depends on the paper type. Load only as much paper as can be held between the paper guides on the bypass tray.
- Fan the paper to get air between the sheets to avoid a multi-sheet feed.

4 Push down the paper guide release lever.

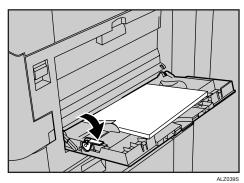

5 Set the paper size using the printer driver or the control panel.

Note

- ☐ Paper within the following dimensions can be set in the bypass tray:
 - Vertical: 90 305 mm (3.6 11.7 in.)
 - Horizontal: 148 600 mm (5.9 23.7 in.)
- ☐ Be sure to set the paper with the side you want to print facing up in the bypass tray.
- ☐ The number of sheets that can be loaded in the bypass tray depends on the paper type.

₽ Reference

For details about setting the paper size, see p.7 "Setting the Paper Size and Paper Type of the Bypass Tray".

For details about setting paper in the regular paper tray, see "Loading Paper into Paper Tray 1", Troubleshooting.

When loading custom size paper, see p.8 "Setting Custom Size Paper".

When loading thick paper (over 104.7 g/m^2) or envelopes, set paper size and paper type. For details, see p.10 "Setting Thick Paper or Envelopes".

When loading letterhead paper, pay attention to its orientation. For details about Letterhead Setting, see "System Settings" or "Printer Features", General Settings Guide.

Setting the Paper Size and Paper Type of the Bypass Tray

This describes how to set paper size of the bypass tray. By default, use the printer driver for setting paper size.


∰Important

☐ If you select [Machine Settings] from [Bypass Tray Priority] in [System] of [Printer Features], set the paper size using the control panel. For details, see General Settings Guide.

Setting the Paper Size Using the Control Panel

This procedure describes how to set paper size of the bypass tray using the control panel. If you select the printer driver to set paper size, this procedure is not necessary.


1 Press the [User Tools/Counter] key.

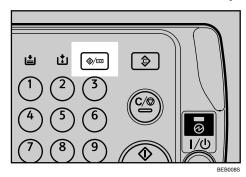


2 Select [System Settings] using [▼] or [▲], and then press the [OK] key.




3 Select [Tray Paper Settings] using [▼] or [▲], and then press the [OK] key.

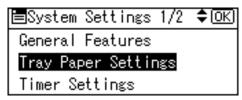

Select [Printer Bypass Paper Size] using [▼] or [▲], and then press the [OK] key.

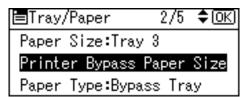

5 Select the paper size using the scroll keys, and then press the [OK] key.

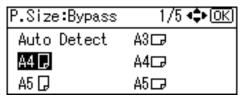

Press the [User Tools/Counter] key to return to the default screen.

₽ Reference

For details about the settings from the printer drivers, see the printer driver Help .

When loading thick paper or envelopes, set paper type. For details, see p.10 "Setting Thick Paper or Envelopes".

Setting Custom Size Paper


The following procedures are not required if you select the printer driver for the settings. In that case, set the paper size using the printer driver.

#Important


☐ If you select [Machine Settings] from [Bypass Tray Priority] in [System] of [Printer Features] (see "Printer Features", General Settings Guide), the settings made using the control panel have priority over the printer driver settings.

Setting the Custom Size Paper Using the Control Panel


1 Press the [User Tools/Counter] key.

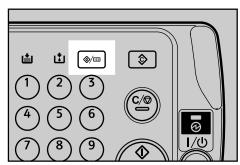


2 Select [System Settings] using [▼] or [▲], and then press the [OK] key.

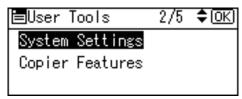


3 Select [Tray Paper Settings] using [▼] or [▲], and then press the [OK] key.

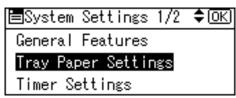

Select [Printer Bypass Paper Size] using [▼] or [▲], and then press the [OK] key.

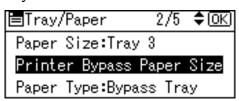


5 Select [Custom Size] using the scroll keys, and then press the [OK] key.

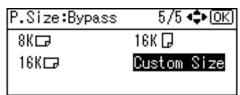


6 Enter the horizontal size of the paper using the number keys, and press [#].

Available size: 148 - 600 mm (5.9 - 23.7 in.)

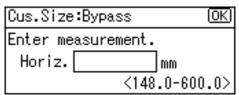

T Enter the vertical size of the paper using the number keys, and press [#]. Available size: 90 - 305 mm (3.6 - 11.7 in.)

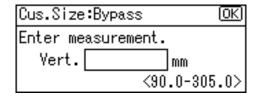

- **3** Press the [User Tools/Counter] key to return to the default screen.
 - Note
 - ☐ If the printer driver is not used, select [Machine Settings] from [Bypass Tray Priority] in [System] of [Printer Features] (see "Printer Features", General Settings Guide). Set paper size using the control panel.

For details about the settings from the printer drivers, see the printer driver Help.

Setting Thick Paper or Envelopes


The following procedures are not required if you select the printer driver for the settings. In that case, set the paper size using the printer driver.

∰Important

☐ If you select [Machine Settings] from [Bypass Tray Priority] in [System] of [Printer Features] (see "Printer Features", General Settings Guide), the settings made using the control panel have priority over the printer driver settings.

Setting Paper Type Using the Control Panel


1 Press the [User Tools/Counter] key.

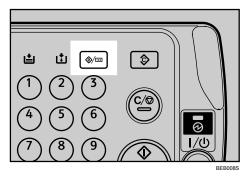


2 Select [System Settings] using [▼] or [▲], and then press the [OK] key.




3 Select [Tray Paper Settings] using [▼] or [▲], and then press the [OK] key.

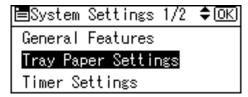

Select [Paper type: Bypass Tray] using [▼] or [▲], and then press the [OK] key.

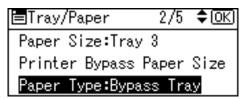


Select paper type from the menu using [▼] or [▲], and then press the [OK] key.

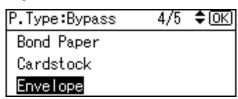

6 Press the [User Tools/Counter] key to return to the default screen.

Note

- ☐ The settings made will remain valid until they are reset again. After printing on thick paper or envelopes, be sure to clear settings for the next user.
- ☐ When printing onto envelopes, push down the envelope lever to the Envelope position. When printing is completed, push the envelope lever up to the normal position. Do not move the lever up or down during printing.

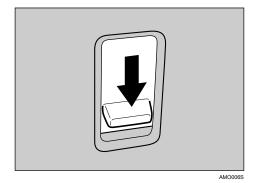

For details about the settings from the printer drivers, see the printer driver Help.

For details about printing onto envelopes, see "Copying onto Envelopes", Copy Reference.

For details about printing onto OHP transparencies, see p.12 "Using the One-Sheet Bypass Tray".

Using the One-Sheet Bypass Tray


Inserting Paper into the One-Sheet Bypass Tray

This section gives instructions for setting paper on the one-sheet bypass tray. For details about paper size and paper type, see "Recommended Paper Sizes and Types", About This Machine.


∰Important

- ☐ The following functions are disabled when printing from the one-sheet bypass tray:
 - Duplex Printing
 - Auto Tray Select
 - Auto Tray Switching
 - Rotating Collate
- ☐ Use the one-sheet bypass tray to print OHP transparencies, glossy paper, and thick glossy paper. Do not load onto other paper trays.
- ☐ To print on glossy paper or thick glossy paper using **[Quality]** mode, you must install Upgrade Option type C1800.
- ☐ Be sure to open the one-sheet output tray. A sheet loaded on the one-sheet by-pass tray is printed from the one-sheet output tray only.
- Use the one-sheet bypass tray to print on paper that is thicker than 162 g/m^2 (max. 264 g/m^2). Do not use other trays, as paper jams and other malfunctions will occur.
- ☐ You cannot print or insert paper into the one-sheet bypass tray during printing.
- ☐ Be sure not to leave any paper on the one-sheet bypass tray or on the one-sheet output tray, as this will cause a malfunction. After each print job, be sure to remove any printed sheets from the one-sheet output tray.
- ☐ Be sure to close the one-sheet bypass tray and the one-sheet output tray after using them. If you do not close these trays, other trays cannot be used.

1 Open the bypass tray.

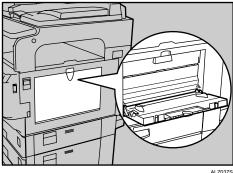


Open the one-sheet bypass tray.

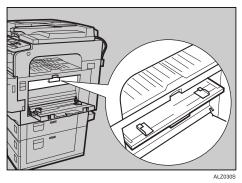


Open the one-sheet output tray.

The sheet inserted into the one-sheet bypass tray is printed out only from the one-sheet output tray.

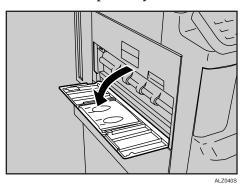

Adjust the paper guides to the paper size, and then gently insert a sheet face up into the one-sheet bypass tray.

If the paper guides are not flush against the paper, skewing and misfeeds might occur.

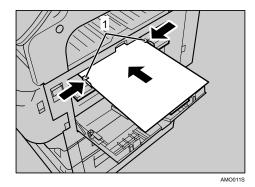

1. Paper Guide

- Gently insert a sheet until the machine pulls it into the tray automatically. If the sheet is not inserted straight, reinsert it.
- Do not insert multiple sheets. The one-sheet bypass tray is only available for one sheet.
- If paper is left on the one-sheet output tray, you cannot insert paper into the one-sheet bypass tray.

5 Set paper size using the printer driver and the control panel.

For details, see p.15 "Setting the Paper Size and Paper Type of the One-Sheet Bypass Tray".

Note

- ☐ Paper within the following dimensions can be set in the one-sheet bypass tray:
 - Vertical: 90 305 mm (3.6 11.7 in.)
 - Horizontal: 148 600 mm (5.9 23.7 in.)
- ☐ Be sure to set the paper with the side you want to print facing up in the one-sheet bypass tray.
- ☐ The number of sheets that can be loaded in the one-sheet bypass tray depends on the paper type.

For details about setting paper in the regular paper tray, see "Loading Paper into Paper Tray 1", Troubleshooting.

When loading custom size paper, see p.16 "Setting Custom Size Paper".

When loading thick paper (over 104.7 g/m^2), OHP transparencies, or envelopes, set paper size and paper type. For details, see p.18 "Setting Thick Paper, OHP Transparencies, or Envelopes".

When loading letterhead paper, pay attention to its orientation. For details about Letterhead Setting, see "System Settings" or "Printer Features", General Settings Guide.

Setting the Paper Size and Paper Type of the One-Sheet Bypass Tray


This describes how to set paper size and paper type of the one-sheet bypass tray. To print using the one-sheet bypass tray, set the paper size and paper type using the printer driver and the control panel.

#Important

☐ When setting the paper size and paper type for the one-sheet bypass tray, settings made using the printer driver and the control panel must be the same. If the settings for the printer driver and the machine do not correspond, printing is not possible.

Setting the Paper Size


- 1 Set the paper size using the printer driver.
- Press the [User Tools/Counter] key.

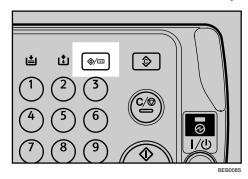


3 Select [System Settings] using [▼] or [▲], and then press the [OK] key.




Select [Tray Paper Settings] using [▼] or [▲], and then press the [OK] key.

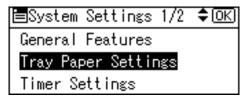

Select [Paper Size: 1-Sheet Bypass] using [▼] or [▲], and then press the [OK] key.

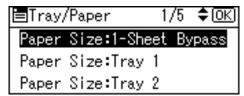

6 Select the paper size using the scroll keys, and then press the [OK] key.

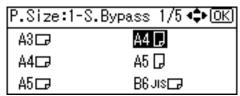

7 Press the [User Tools/Counter] key to return to the default screen.

₽ Reference


See the printer driver Help about the settings from the printer drivers.

When loading thick paper, envelopes, or OHP transparencies, set paper type. For details, see p.18 "Setting Thick Paper, OHP Transparencies, or Envelopes".


Setting Custom Size Paper

∰Important


- ☐ When setting the paper size for the one-sheet bypass tray, the settings using the printer driver and the control panel must be the same. If the settings for the printer driver and the machine do not correspond, printing cannot be done.
- **1** Set the paper size using the printer driver.
- **2** Press the [User Tools/Counter] key.

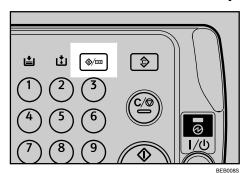


3 Select [System Settings] using [▼] or [▲], and then press the [OK] key.

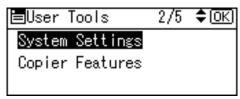


4 Select [Tray Paper Settings] using [▼] or [▲], and then press the [OK] key.

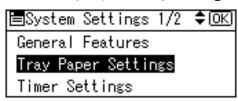

E Select [Paper Size: 1-Sheet Bypass] using [▼] or [▲], and then press the [OK] key.

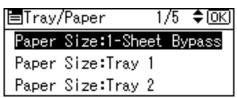


6 Select [Custom Size] using the scroll keys, and then press the [OK] key.

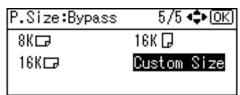

2 Enter the horizontal size of the paper using the number keys, and press [#].

Enter the same size as you set in the printer driver.


Available size: 148 - 600 mm (5.9 - 23.7 in.)

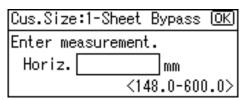

Enter the vertical size of the paper using the number keys, and press [#].

Enter the same size as you set in the printer driver.

Available size: 90 - 305 mm (3.6 - 11.7 in.)

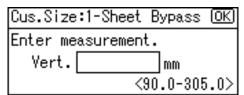

Press the [User Tools/Counter] key to return to the default screen.

₽ Reference


For printer driver settings, see the printer driver Help.

Setting Thick Paper, OHP Transparencies, or Envelopes

To print using the one-sheet bypass tray, set the paper type using the printer driver and the control panel.

∰Important


- ☐ To set the paper type for the one-sheet bypass tray, the settings using the printer driver and the control panel must be the same. If the settings for the printer driver and the machine do not correspond, printing cannot be done.
- \square When loading an OHP transparency onto the one-sheet bypass tray, set the sheet in the \square direction. Do not try to set the sheet in the \square direction.
- \square OHP Transparencies can only be printed in A4 \square or $8^1/_2 \times 11$ \square sizes. Do not print on any other size.
- ☐ When printing OHP Transparencies, use the printer driver and control panel to set the output colour. OHP Transparencies cannot be printed in B&W.
- **1** Set paper type using the printer driver.
- Press the [User Tools/Counter] key.

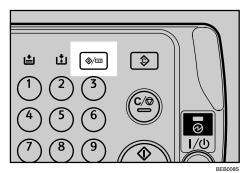


3 Select [System Settings] using [▼] or [▲], and then press the [OK] key.




Select [Tray Paper Settings] using [▼] or [▲], and then press the [OK] key.

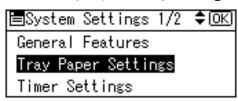

Select [Paper Size: 1-Sheet Bypass] using [▼] or [▲], and then press the [OK] key.

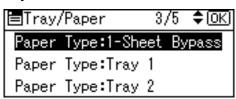


Select a paper type from the menu using [▼] or [▲], and then press the [OK] key.

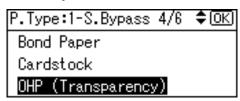

Press the [User Tools/Counter] key to return to the default screen.

Note

- ☐ The settings made will remain valid until they are reset again. After printing on OHP transparencies, thick paper, or envelopes, be sure to clear settings for the next user.
- ☐ When printing onto envelopes, push down the envelope lever to the Envelope position. When printing is completed, push the envelope lever up to the normal position. Do not move the lever up or down during printing.

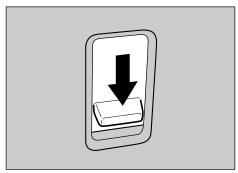

AMO006S

For details about printer driver settings, see the printer driver Help. For details about printing onto envelopes, see "Copying onto Envelopes", Copy Reference.

1. Preparing the Machine

Confirming the Connection Method

This machine supports network and local connection.


Before installing the printer driver, check how the machine is connected. Follow the driver installation procedure that is appropriate to the connection method.

Network Connection

This machine can be used as a Windows printing port or network printer.

Using This Machine as the Windows Printing port

Network connections can be established through Ethernet, and IEEE 802.11b. Available ports are determined based on the combination of Windows operating system version and connection method used.

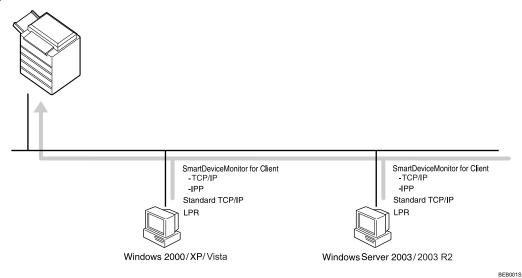

❖ Windows 2000 / XP / Vista

Connection Method	Available Ports	
Ethernet / IEEE 802.11b	SmartDeviceMonitor for Client port	
	Standard TCP/IP	
	LPR port	

Windows Server 2003 / 2003 R2

Connection Method	Available Ports
Ethernet / IEEE 802.11b	SmartDeviceMonitor for Client port
	Standard TCP/IP
	LPR port


₽ Reference

See the explanation about how to install the printer driver for each type of port. For the SmartDeviceMonitor for Client port, see p.26 "Using the SmartDeviceMonitor for Client Port".

For the Standard TCP/IP port, see p.32 "Using the Standard TCP/IP Port". For the LPR port, see p.34 "Using the LPR Port".

Using as a network printer

This machine can be used as the Windows network printer, the NetWare print server, or the NetWare remote printer.

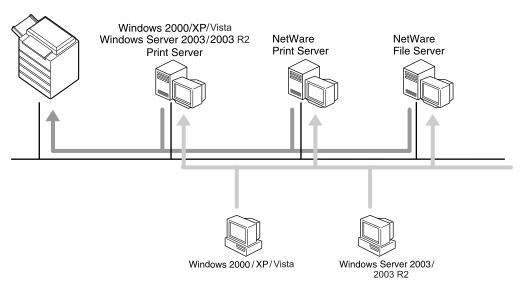

BEB002S

Note

☐ In an IPv6 environment, NetWare servers cannot be used.

See the explanation about how to install the printer driver for each type of network printer.

For the Windows network printer, see p.36 "Using as a Windows Network Printer".

For the NetWare print server and remote printer, see p.38 "Using as a Net-Ware Print Server / Remote Printer".

П

Local Connection

Local connections can be established via parallel, USB, and Bluetooth connections.

Windows operating system version determines the available connection methods.

 Windows 2000 / XP / Vista / Server 2003 / 2003 R2 : USB, Parallel, and Bluetooth connections

See the explanation about how to install the printer driver for each method of connection.

For the USB connection, see p.41 "Installing the Printer Driver Using USB". For the parallel connection, see p.45 "Printing with Parallel Connection".

Installing the Printer Driver

This section explains how to install the printer driver. There are two ways to install the printer driver: using Quick Install, which installs the settings at once, or installing the appropriate driver according to the port you want to use.

∰Important

- ☐ You can use the printer driver included on the CD-ROM provided with this machine, or can download it from the following supplier's web site.
- □ When you use the printer under Windows XP x64 Edition, Windows Server 2003 / 2003 R2 x64 Editions, you have to download the printer driver from the supplier's web site. Select this printer and the operating system you are using, and then download it.

Quick Install

Windows 2000 / XP / Vista, and Windows Server 2003 / 2003 R2 users can easily install this software using the supplied CD-ROM.

Using Quick Install, the PCL printer driver and/or RPCS printer driver, Desk-TopBinder Lite and SmartDeviceMonitor for Client are installed under network environment, and the TCP/IP port will be set.

∰Important

- ☐ To install printer driver under Windows 2000 / XP / Vista, and Windows Server 2003 / 2003 R2, you must have an account that has Manage Printers permission. Log on as an Administrator.
- ☐ If you connect using USB, refer to p.41 "Installing the Printer Driver Using USB" and install the printer driver.
- 1 Quit all applications currently running.
- **2** Insert the CD-ROM into the CD-ROM drive.

The installer starts.

Auto Run may not work with certain operating system settings. If this happens, launch "Setup.exe" on the CD-ROM root directory.

3 Select an interface language, and then click [OK].

The default interface language is English.

4 Click [Quick Install].

The software license agreement appears in the [License Agreement] dialog box.

After reading the agreement, click [I accept the agreement.], and then click [Next >].

1

Ш

6 Select the machine model you want to use in the [Select Printer] dialog box.

For network connection via TCP/IP, select the machine whose IP address is displayed in **[Connect To]**.

For parallel connection, select the machine whose printer port is displayed in **[Connect To]**.

7 Click [Install].

The printer driver installation starts.

8 Click [Finish].

A message about restarting the computer appears. Restart the computer to complete installation.

Click [Exit] in the first dialog box of the installer, and then take out the CD-ROM.

- ☐ To stop installation of the selected software, click **[Cancel]** before installation is complete.
- ☐ Auto Run may not work with certain operating system settings. If this happens, launch "Setup.exe" on the CD-ROM root directory.
- ☐ Select a machine to whose IP address is displayed in **[Connect To]** to install SmartDeviceMonitor for Client when using TCP/IP.

Quick Install is not available unless bidirectional communication between the machine and computer is enabled via parallel connection. See p.48 "If Bidirectional Communication Is Disabled" for details about bidirectional communication between the machine and computer.

Installing the Printer Driver for the Selected Port

Using the SmartDeviceMonitor for Client Port

∰Important

- ☐ To install SmartDeviceMonitor for Client under Windows 2000 / XP / Vista, and Windows Server 2003 / 2003 R2, you must have an account that has Manage Printers permission. Log on as an Administrator.
- ☐ Install SmartDeviceMonitor for Client before installing the printer driver when using the SmartDeviceMonitor for Client port.

Installing SmartDeviceMonitor for Client

- 1 Quit all applications currently running.
- **2** Insert the CD-ROM into the CD-ROM drive.

The installer starts.

3 Select an interface language, and then click [OK].

The default interface language is English.

- Click [DeskTopBinder SmartDeviceMonitor for Client].
- **5** Select an interface language, and then click [Next >].

The default interface language is English.

- The message to quit all other applications appears. Quit all applications, and then click [Next >].
- The software license agreement appears in the [License Agreement] dialog box. After reading through its contents, click [Yes].
- 8 Click [Full install] or [Custom Install].

[Full install] installs all required applications: DeskTopBinder Lite and Smart-DeviceMonitor for Client.

[Custom Install] installs selected applications.

- Follow the instructions on the display and click [Next >] to proceed next step.
- After the installation is completed, select one of the options to restart the computer either now or later, and click [Complete].

Restart the computer to complete installation.

Note

- ☐ To stop installation of the selected software, click **[Cancel]** before installation is complete.
- ☐ Auto Run may not work with certain operating system settings. If this happens, launch "Setup.exe" on the CD-ROM root directory.

Changing the Port Settings for SmartDeviceMonitor for Client

Follow the procedure below to change the SmartDeviceMonitor for Client settings, such as TCP/IP timeout, recovery/parallel printing, and printer groups.

Windows 2000

- 1 Open [Printers] window from [Start] menu.
- In the [Printers] window, click the icon of the printer you want to use. On the [File] menu, click [Properties].
- On the [Ports] tab, click [Configure Port].

The [Configuration] dialog box appears.

Windows XP, Windows Server 2003 / 2003 R2:

1 Open the [Printers and Faxes] window from the [Start] menu.

The [Printers and Faxes] window appears.

- Click the icon of the machine you want to use. On the [File] menu, click [Properties]. The printer properties appear.
- Click the [Ports] tab, and then click [Configure Port].

The [Port Configuration] dialog box appears.

Windows Vista:

- Open the [Printers] window from the [Control Panel].
- Right-click the icon of the printer you want to use, and then click the [Properties].
- Click the [Ports] tab, and then click [Configure Port].

The [Port Configuration:] dialog box appears.

Note

- ☐ For TCP/IP, timeout setting can be configured.
- ☐ User, proxy, and timeout settings can be configured for IPP.
- ☐ If no settings on the **[Recovery/Parallel Printing]** tab are available, follow the procedure below.
 - ① Click [Cancel] to close the [Port Configuration:] dialog box.
 - ② Start SmartDeviceMonitor for Client, and then right-click the SmartDeviceMonitor for Client icon on the tasktray.
 - 3 Point to [Properties], and then click [Extended Features Settings].
 - 4 Select the [Set Recovery/Parallel Printing for each port] check box.
 - ⑤ Click [OK] to close the [Extended Features Settings] dialog box.

For details about these settings, see "Using SmartDeviceMonitor for Client", Network Guide, or SmartDeviceMonitor for Client Help.

Installing the PCL or RPCS Printer Driver (TCP/IP)

∰Important

- ☐ To install this printer driver under Windows 2000 / XP / Vista, and Windows Server 2003 / 2003 R2, you must have an account that has Manage Printers permission. Log on as an Administrators or Power Users group member.
- 1 Quit all applications currently running.
- 2 Insert the CD-ROM into the CD-ROM drive.

The installer starts.

3 Select an interface language, and then click [OK].

The default interface language is English.

- 4 Click [PCL/RPCS Printer Drivers].
- The software license agreement appears in the [License Agreement] dialog box.

After reading the agreement, click [laccept the agreement.], and then click [Next >].

- **6** Select the printer driver you want to use in the [Select Program] dialog box. You can select several printer drivers.
- Click [Next >].
- **8** Select the machine model you want to use.

The printer name can be changed in the [Change settings for 'Printer Name'] box.

1

Double-click the printer name to display the printer settings.

The details shown in [Comment], [Driver], and [Port] vary depending on the operating system, printer model, and port.

- Click [Port], and then click [Add].
- Click [SmartDeviceMonitor], and then click [OK].
- Click [TCP/IP], and then click [Search].

A list of printers using TCP/IP appears.

E Select the printer you want to use, and then click [OK].

Only printers that respond to a broadcast from the computer appear. To use a machine not listed here, click **[Specify Address]**, and then enter the IP address or host name of the machine.

- Check that the port of the selected printer is displayed in [Port].
- **E** Set a user code, if necessary.

Up to 8 numeric characters can be entered. No alphabetic character or symbol can be entered.

- Select the [Default Printer] check box to configure the printer as default.
- Click [Continue].

Installation starts.

After the installation is completed, select one of the options to restart the computer either now or later, and then click [Finish].

Restart the computer to complete installation.

Note

- ☐ Setting a user code allows a SmartDeviceMonitor for Admin user to display and check statistics about the number of sheets which each user prints. For details, see SmartDeviceMonitor for Admin Help.
- ☐ Auto Run may not work with certain operating system settings. If this happens, launch "Setup.exe" on the CD-ROM root directory.
- ☐ When using a host name under Windows Server 2003 / 2003 R2 or Windows Vista with IPv6 protocol, perform host name resolution using an external DNS server. The host file cannot be used.

A message appears if there is a newer version of the printer driver already installed. If there is, you cannot install the printer driver using Auto Run. If you still want to install the printer driver, use **[Add Printer]**. See "Messages Displayed When Installing the Printer Driver", Troubleshooting.

Installing the PCL or RPCS Printer Driver (IPP)

∰Important

- ☐ To install this printer driver under Windows 2000 / XP / Vista, and Windows Server 2003 / 2003 R2, you must have an account that has Manage Printers permission. Log on as an Administrators or Power Users group member.
- 1 Quit all applications currently running.
- **2** Insert the CD-ROM into the CD-ROM drive.

The installer starts.

3 Select an interface language, and then click [OK].

The default interface language is English.

- 4 Click [PCL/RPCS Printer Drivers].
- The software license agreement appears in the [License Agreement] dialog box.

After reading the agreement, click [laccept the agreement.], and then click [Next >].

- **6** Select a printer driver you want to use in the [Select Program] dialog box. You can select several printer drivers.
- **7** Select the machine model you want to use.

The printer name can be changed in the [Change settings for; 'Printer Name'] box.

8 Double-click the printer name to display the printer settings.

The details shown in [Comment], [Driver], and [Port] vary depending on the operating system, printer model, and port.

- 2 Click [Port], and then click [Add].
- Click [SmartDeviceMonitor], and then click [OK].
- Click [IPP].
- In the [Printer URL] box, enter "http://machine's IP address or host name/printer" as the printer's address.

If the server authentication is issued, to enable SSL (a protocol for encrypted communication), enter "https://machine's IP address or host name/printer" (Internet Explorer 5.01, or a higher version must be installed).

(example IP address: 192.168.15.16)

http://192.168.15.16/printer

https://192.168.15.16/printer

You can enter "http://machine's IP address or host name/ipp" as the printer's address.

Ш

Enter a name for identifying the printer in [IPP Port Name]. Use a name different from the one of any existing port.

If a name is not specified here, the address entered in the **[Printer URL]** box becomes the IPP port name.

Click [Detailed Settings] to make necessary settings.

For information about the settings, see SmartDeviceMonitor for Client Help.

- Click [OK].
- Check that the port of the selected printer is displayed in [Port].
- Set a user code, if necessary.

Up to 8 numeric characters can be entered. No alphabetic characters or symbols can be entered.

- E Select the [Default Printer] check box to configure the printer as default.
- Click [Continue].

Installation starts.

After the installation is completed, select one of the options to restart the computer either now or later, and then click [Finish].

Restart the computer to complete installation.

Note

- ☐ To stop installation of the selected software, click **[Cancel]** before installation is complete.
- ☐ Auto Run may not work with certain operating system settings. In that case, launch "Setup.exe" on the CD-ROM root directory.
- ☐ Setting a user code allows a SmartDeviceMonitor for Admin user to display and check the number of sheets each user prints. For details, see SmartDeviceMonitor for Admin Help.

₽ Reference

A message appears if there is a newer version of the printer driver already installed. If there is, you cannot install the printer driver using Auto Run. If you still want to install the printer driver, use **[Add Printer]**. See "Messages Displayed When Installing the Printer Driver", Troubleshooting.

Using the Standard TCP/IP Port

This describes how to install the PCL or RPCS printer driver using the TCP/IP port.

∰Important

☐ To install this printer driver under Windows 2000 / XP / Vista, and Windows Server 2003 / 2003 R2, you must have an account that has Manage Printers permission. Log on as an Administrators or Power Users group member.

Installing the PCL or RPCS Printer Driver

- 1 Quit all applications currently running.
- **2** Insert the CD-ROM into the CD-ROM drive.

The installer starts.

3 Select an interface language, and then click [OK].

The default interface language is English.

- 4 Click [PCL/RPCS Printer Drivers].
- The software license agreement appears in the [License Agreement] dialog box.

After reading the agreement, click [laccept the agreement.], and then click [Next >].

- **6** Select a printer driver you want to use in the [Select Program] dialog box. You can select several printer drivers.
- Click [Next >].
- **3** Select the machine model you want to use.

The printer name can be changed in the [Change settings for 'Printer Name'] box.

Double-click the printer name to display the printer settings.

The details shown in [Comment], [Driver], and [Port] vary depending on the operating system, printer model, and port.

- Click [Port], and then click [Add].
- Click [Standard TCP/IP Port], and then click [OK].

Configure the Standard TCP/IP port settings, and then see Windows Help if **[Standard TCP/IP Port]** does not appear.

Click [Next >] in the [Add Standard TCP/IP Printer Port Wizard] dialog box.

1

Enter the printer name or IP address in the [Printer Name or IP Address] box.

The **[Port Name]** text box automatically obtains a port name. Change this name if necessary.

When the device selection appears, select "RICOH NetworkPrinter Driver C Model".

- Click [Next >].
- Click [Finish] in the [Add Standard TCP/IP Printer Port Wizard] dialog box. The installation start dialog box reappears.
- Check that the port of the selected printer is displayed in [Port].
- Tonfigure the default printer as necessary.
- 18 Click [Continue].

The printer driver installation starts.

After the installation is completed, select one of the options to restart the computer either now or later, and then click [Finish].

Restart the computer to complete installation.

- Note
- ☐ To stop installation of the selected software, click **[Cancel]** before installation is complete.
- ☐ Auto Run may not work with certain operating system settings. In that case, launch "Setup.exe" on the CD-ROM root directory.

₽ Reference

A message appears if there is a newer version of the printer driver already installed. If there is, you cannot install the printer driver using Auto Run. If you still want to install the printer driver, use **[Add Printer]**. See "Messages Displayed When Installing the Printer Driver", Troubleshooting.

Using the LPR Port

This describes how to install the PCL or RPCS printer driver using the LPR port.

∰Important

☐ To install this printer driver under Windows 2000 / XP / Vista, and Windows Server 2003 / 2003 R2, you must have an account that has Manage Printers permission. Log on as an Administrators or Power Users group member.

Installing the PCL or RPCS Printer Driver

- 1 Quit all applications currently running.
- **2** Insert the CD-ROM into the CD-ROM drive.

The installer starts.

3 Select an interface language, and then click [OK].

The default interface language is English.

- 4 Click [PCL/RPCS Printer Drivers].
- The software license agreement appears in the [License Agreement] dialog box.

After reading the agreement, click [laccept the agreement.], and then click [Next >].

- Select a printer driver you want to use in the [Select Program] dialog box.
 - You can select several printer drivers.

Select the machine model you want to use.

The printer name can be changed in the [Change settings for 'Printer Name'] box.

- Click [Next >].
- Double-click the printer name to display the printer settings.

The details shown in **[Comment]**, **[Driver]**, and **[Port]** vary depending on the operating system, printer model, and port.

- Click [Port], and then click [Add].
- Click [LPR Port], and then click [OK].

If [LPR Port] does not appear, see Windows Help and install it.

- Enter the printer's IP address in the [Name or address of server providing lpd] box.
- Enter "lp" in the [Name of printer or print queue on that server] box, and then click [OK].

The port is added.

1

- Check that the port of the selected printer is displayed in [Port].
- **E** Configure the default printer as necessary.
- Click [Continue].

The printer driver installation starts.

After the installation is completed, select one of the options to restart the computer either now or later, and then click [Finish].

Restart the computer to complete installation.

Note

- ☐ To stop installation of the selected software, click **[Cancel]** before installation is complete.
- ☐ Auto Run may not work with certain operating system settings. In that case, launch "Setup.exe" on the CD-ROM root directory.

₽ Reference

A message appears if there is a newer version of the printer driver already installed. If there is, you cannot install the printer driver using Auto Run. If you still want to install the printer driver, use [Add Printer]. See "Messages Displayed When Installing the Printer Driver", Troubleshooting.

Using as a Windows Network Printer

This describes how to install the PCL or RPCS printer driver when using the printer as a Windows network printer.

To use the print server, install the printer driver by selecting "Network printer server", and then select the Windows 2000 / XP / Vista, and Windows Server 2003 / 2003 R2.

This section assumes that the client has already been configured to communicate with a Windows 2000 / XP / Vista, and Windows Server 2003 / 2003 R2. Do not begin the following procedure before the client is set up and configured correctly.

∰Important

- ☐ To install the printer driver under Windows 2000 / XP / Vista, and Windows Server 2003 / 2003 R2, you must have an account that has Manage Printers permission. Log on as an Administrators or Power Users group member.
- ☐ If you print with a print server connected to the printer using the SmartDeviceMonitor port, Recovery Printing and Parallel Printing cannot be used from the client.
- ☐ If you print with a Windows XP / Vista or Windows Server 2003 / 2003 R2 print server, notification functions of SmartDeviceMonitor may not be used with the client.

Installing the PCL or RPCS Printer Driver

- 1 Quit all applications currently running.
- 2 Insert the CD-ROM into the CD-ROM drive.

The installer starts.

- **3** Select an interface language, and then click [OK].
 - The default interface language is English.
- 4 Click [PCL/RPCS Printer Drivers].
- The software license agreement appears in the [License Agreement] dialog box.

After reading the agreement, click [I accept the agreement.], and then click [Next >].

- Select the printer driver you want to use in the [Select Program] dialog box. You can select several printer drivers.
- Click [Next >].
- Select the [Printer Name] check box to select the printer models you want to use.

The printer name can be changed in the [Change settings for 'Printer Name'] box.

Ш

Double-click the printer name to display the printer settings.

The details shown in **[Comment]**, **[Driver]**, and **[Port]** vary depending on the operating system, printer model, and port.

- Click [Port], and then click [Add].
- Click [Network Printer], and then click [OK].
- Double-click the computer name you want to use as a print server in the [Browse for Printer] window.
- E Select the printer you want to use, and then click [OK].
- Check that the port of the selected printer is displayed in [Port].
- **E** Configure the user code as necessary.

For an RPCS printer driver, a user code can be set after the printer driver installation. For information about user code, see the printer driver Help.

- Select the [Default Printer] check box to configure the printer as default.
- Click [Continue].

The printer driver installation starts.

After the installation is completed, select one of the options to restart the computer either now or later, and then click [Finish].

Restart the computer to complete installation.

- Note
- $\ \square$ To stop installation of the selected software, click **[Cancel]** before installation is complete.
- ☐ Auto Run may not work with certain operating system settings. In that case, launch "Setup.exe" on the CD-ROM root directory.

A message appears if there is a newer version of the printer driver already installed. If there is, you cannot install the printer driver using Auto Run. If you still want to install the printer driver, use **[Add Printer]**. See "Messages Displayed When Installing the Printer Driver", Troubleshooting.

Using as a NetWare Print Server / Remote Printer

This describes how to set up the Windows computer used as the NetWare client.

#Important

- ☐ To install this printer driver under Windows 2000 / XP / Vista, and Windows Server 2003 / 2003 R2, you must have an account that has Manage Printers permission. Log on as an Administrators or Power Users group member.
- ☐ In an IPv6 environment, NetWare servers cannot be used.

The following explanation assumes NetWare Client is installed on the client computer and the NetWare server environment is correctly set up. Install all necessary client applications before following this procedure.

Set up the printer driver while logging on to the NetWare file server.

The following values are used in the example:

- Operating system: Windows 2000
- NetWare version: 4.1
- File server name: CAREE
- Queue name: R-QUEUE
- **1** Insert the CD-ROM into the CD-ROM drive.

The installer starts.

Auto Run may not work with certain operating system settings. In that case, launch "Setup.exe" on the CD-ROM root directory.

2 Select an interface language, and then click [OK].

The default interface language is English.

- Click [PCL/RPCS Printer Drivers].
- The software license agreement appears in the [License Agreement] dialog box.

After reading the agreement, click [laccept the agreement.], and then click [Next >].

- Select the printer driver you want to use in the [Select Program] dialog box. You can select several printer drivers.
- 6 Click [Next >].
- Select the [Printer Name] check box to select the printer model you want to use.

The printer name can be changed in the [Change settings for 'Printer Name'] box.

8 Double-click the printer name to display the printer settings.

The details shown in [Comment], [Driver], and [Port] vary depending on the operating system, printer model, and port.

- 2 Click [Port], and then click [Add].
- Click [Network Printer], and then click [OK].
- Double-click the name of the NetWare file server on the network tree.

 The created queue is displayed.
- Select the print queue, and then click [OK].
- E Check that the port of the selected printer is displayed in [Port].
- Click [Continue].

The printer driver installation starts.

- Click [Finish] in the [Select Program] dialog box.
- After the installation is completed, select one of the options to restart the computer either now or later, and then click [Finish].

Restart the computer to complete installation.

After restarting the computer, launch the [Printers] window, and then open the printer properties.

Under Windows XP or Windows Server 2003 / 2003 R2, open the printer properties from the **[Printers and Faxes]** window.

On the [Printer Settings] tab, clear the [Form Feed] and [Enable Banner] check boxes.

Under Windows XP or Windows Server 2003 / 2003 R2, click the [NetWare setting] tab.

Do not select these check boxes since they are automatically selected by the printer driver. If you select the check boxes, the printer may not print correctly.

Click [OK] to close the printer properties dialog box.

𝚱 Note

- ☐ To stop installation of the selected software, click **[Cancel]** before installation is complete.
- ☐ The protocol is set to inactive as default. Enable it using Web Image Monitor or Telnet.

Form Feed

Do not use NetWare to configure form feed. Form feed is controlled by the printer driver on Windows. If NetWare form feed is configured, the printer may not print properly.

Follow the procedure below to disable form feed according to the operating system used:

 Under Windows 2000 / XP / Vista, or Windows Server 2003 / 2003 R2, clear the [Form feed] check box on the [NetWare Settings] tab in the printer properties dialog box.

Banner Page

Do not use NetWare to configure a banner page.

Follow the procedure below to disable banner pages according to the operating system used:

 Under Windows 2000 / XP / Vista, or Windows Server 2003 / 2003 R2, clear the [Enable banner] check box on the [NetWare Settings] tab in the printer properties dialog box.

Printing after Resetting the Printer

Printer to print server connection requires 30 - 40 seconds to resume after the printer is reset. During this period, jobs may be accepted (depending on Net-Ware specifications) but not printed.

To print after resetting the printer as the remote printer, check on the print server that the remote printer is disconnected, or wait for two minutes before trying to print.

Ш

Installing the Printer Driver Using USB

This section explains how to install printer drivers using USB.

Before installing, check that only the operating system is running on the computer and no print jobs are in progress.

The printer drivers can be installed from the supplied CD-ROM provided with this machine.

Windows 2000 - USB

∰Important

☐ Installing a printer driver requires Administrator permission. Log on using an account that has Administrator permission.

When USB is first used, Found New Hardware Wizard starts, and USB Printing Support is installed automatically.

If the printer driver has already been installed, plug and play is enabled, and the icon of the printer connected to the "USB" port is added to the [Printers] window.

If the printer driver is not installed, follow the plug-and-play instructions of the printer to install it from the supplied CD-ROM.

- 1 Connect the machine to the computer using the USB cable.
 - Connect the USB cable firmly.
- In the Found New Hardware Wizard display, click [Search for a suitable driver for my device [recommended]], and then click [Next >].
- Select the [Specify location] check box, and then click [Next >].
- Insert the CD-ROM into the CD-ROM drive.

When Auto Run starts, click [Exit].

To disable Auto Run, press the left [Shift] key when inserting the CD-ROM into the drive and keep it pressed until the computer finishes reading from the CD-ROM.

5 Specify the location where the source files of the printer driver is stored.

If the CD-ROM drive is D, the source files of the printer driver are stored in the following location:

- RPCS
 D:\DRIVERS\RPCS\XP_VISTA\(Language)\DISK1
- PCL 5c (for colour printing)
 D:\DRIVERS\PCL5C\XP_VISTA\(Language)\DISK1
- PCL 6
 D:\DRIVERS\PCL6\XP_VISTA\(Language)\DISK1
- PostScript 3 ("Scanner Driver and Utilities" CD-ROM)
 D:\DRIVERS\PS\XP_VISTA\(Language)\DISK1
- 6 Check the printer driver location, and then click [OK].
- Click [Next >].
- 8 Click [Finish].

If the printer driver has already been installed, plug and play is enabled, and the icon of the printer connected to the "USB001" port is added to the [Printers] window.



☐ The number after "USB" varies depending on the number of printers connected.

Windows XP, Windows Server 2003 / 2003 R2 - USB

∰Important

☐ Installing a printer driver requires Administrators permission. Log on using an account that has Administrators permission.

When USB is first used, Found New Hardware Wizard starts, and USB Printing Support is installed automatically.

If the printer driver has already been installed, plug and play is enabled, and the icon of the printer connected to the "USB" port is added to the [Printers] window.

The printer drivers can be installed from the supplied CD-ROM provided with this machine.

If the printer driver is not installed, follow the plug-and-play instructions of the printer to install it from the supplied CD-ROM.

1 Connect the machine to the computer using the USB cable.

Connect the USB cable firmly.

In the Found New Hardware Wizard display, click [Search for a suitable driver for my device [recommended]], and then click [Next >].

Insert the CD-ROM into the CD-ROM drive.

If Auto Run starts, click [Cancel], and then [Exit].

To disable Auto Run, press the left [Shift] key when inserting the CD-ROM into the drive and keep it pressed until the computer finishes reading from the CD-ROM.

Select the [Include this location in the search] check box under [Search for the best driver in these location], and then click [Browse] to select the printer driver location.

If the CD-ROM drive is D, the source files of the printer driver are stored in the following location:

- RPCS D:\DRIVERS\RPCS\XP_VISTA\(Language)\DISK1
- PCL 5c (for colour printing)
 D:\DRIVERS\PCL5C\XP_VISTA\(Language)\DISK1
- PCL 6
 D:\DRIVERS\PCL6\XP_VISTA\(Language)\DISK1
- PostScript 3 ("Scanner Driver and Utilities" CD-ROM)
 D:\DRIVERS\PS\XP_VISTA\(Language)\DISK1
- **5** Check the printer driver location, and then click [Next >].
- 6 Click [Continue].
- Click [Finish].

If installation is successful, the icon of the printer connected to the "USB001" port is added to the **[Printers and Faxes]** window.

- Note
- ☐ The number after "USB" varies depending on the number of printers connected.

Windows Vista - USB

#Important

☐ Installing a printer driver requires Administrators permission. Log on using an account that has Administrators permission.

If the printer driver has already been installed, and plug and play is enabled, the icon of the printer connected to the "USB" port is added to the [Printers] window.

The printer drivers can be installed from the supplied CD - ROM provided with this machine.

If the printer driver is not installed, follow the plug-and-play instructions of the printer to install it from the supplied CD - ROM.

1 Connect the machine to the computer using the USB cable.

Connect the USB cable firmly.

2 In the Found New Hardware display, select [Locate and install driver software (Recommended)].

Click [Continue], if the [User Account Control] window appears.

When a message prompting insertion of the CD - ROM, insert the CD - ROM into the CD - ROM drive.

The printer installation starts.

If [Windows can't verify the publisher of this driver software] dialog box appears in the installation, select the [Install this driver software anyway].

4 Click [Finish].

If installation is successful, the icon of the printer connected to the "USB001" port is added to the **[Printers]** window.

Note

- ☐ When a printer driver meeting this printer is found on a network, a message prompting insertion of the CD ROM is not displayed.
- ☐ The number after "USB" varies depending on the number of printers connected.

1

Printing with Parallel Connection

This describes how to install the PCL or RPCS printer driver when using the parallel port.

To use a machine connected using a parallel interface, click **[LPT1]** when installing the printer driver.

#Important

☐ To install this printer driver under Windows 2000 / XP / Vista, and Windows Server 2003 / 2003 R2, you must have an account that has Manage Printers permission. Log on as an Administrators or Power Users group member.

Installing the PCL or RPCS Printer Driver

- 1 Quit all applications currently running.
- **2** Insert the CD-ROM into the CD-ROM drive.

The installer starts.

3 Select an interface language, and then click [OK].

The default interface language is English.

- 4 Click [PCL/RPCS Printer Drivers].
- The software license agreement appears in the [License Agreement] dialog box.

After reading the agreement, click [laccept the agreement.], and then click [Next>].

- **Select the printer driver you want to use in the [Select Program] dialog box.** You can select several printer drivers.
- Click [Next >].
- Select the [Printer Name] check box to select the printer model you want to use.

The printer name can be changed in the [Change settings for 'Printer Name'] box.

Double-click the printer name to display the printer settings.

The details shown in [Comment], [Driver], and [Port] vary depending on the operating system, printer model, and port.

- Check that [LPT1:] is shown in [Port].
- Select the [Default Printer] check box to configure the printer as default.
- Click [Finish].

The printer driver installation starts.

After the installation is completed, select one of the options to restart the computer either now or later, and then click [Finish].

Restart the computer to complete installation.

Note

- ☐ To stop installation of the selected software, click **[Cancel]** before installation is complete.
- ☐ Auto Run may not work with certain operating system settings. In that case, launch "Setup.exe" on the CD-ROM root directory.

A message appears if there is a newer version of the printer driver already installed. If there is, you cannot install the printer driver using Auto Run. If you still want to install the printer driver, use **[Add Printer]**. See "Messages Displayed When Installing the Printer Driver", Troubleshooting.

1

Making Option Settings for the Printer

Make option settings for the machine using the printer driver when bidirectional communication is disabled.

For details about making option settings for the printer, see p.48 "If Bidirectional Communication Is Disabled".

Conditions for Bidirectional Communication

Bidirectional communication allows information about paper size and feed direction settings to be automatically sent to the printer. You can check machine status from your computer.

- Bidirectional communication is supported by Windows 2000 / XP / Vista, and Windows Server 2003 / 2003 R2.
- If you use the RPCS printer driver and bidirectional communication is enabled, the [Change Accessories] tab is unavailable.

Note

- ☐ The RPCS printer driver supports bidirectional communications and updates the machine status automatically.
- ☐ The PCL printer driver supports bidirectional communications. You can update the machine status manually.

To support bidirectional communication, the following conditions must be met:

When connected with parallel cables

- The computer must support bidirectional communication.
- The machine must support bidirectional communication.
- The interface cable must support bidirectional communication.
- The machine must be connected to the computer using the standard parallel cables and parallel connectors.
- Under Windows 2000, [Enable bidirectional support] must be selected, and [Enable printer pooling] must not be selected on the [Ports] tab with the RPCS printer driver.

When connected with the network

- The machine must support bidirectional communication.
- SmartDeviceMonitor for Client included must be installed, or the standard TCP/IP port must be used without changing the default port name (for Windows 2000 / XP, Windows Server 2003 / 2003 R2 and Windows Vista).
- Under Windows 2000 / XP / Vista, Server 2003 / 2003 R2, [Enable bidirectional support] must be selected, and [Enable printer pooling] must not be selected on the [Ports] tab with the RPCS printer driver.
- If the Standard TCP/IP port is not being used, one of the following conditions must be met in addition to the two above:
 - The SmartDeviceMonitor for Client port and the TCP/IP protocol must be used.
 - IPP port name must include the IP address when using the IPP protocol.

When connected with USB

The machine must be connected to the computer's USB port using the USB interface cable.

The computer must support bidirectional communication.



☐ Install SmartDeviceMonitor for Client from the supplied CD-ROM.

If Bidirectional Communication Is Disabled

Set up option settings when bidirectional communications are disabled.

#Important

- □ Under Windows 2000 / XP / Vista, and Windows Server 2003 / 2003 R2, Manage Printers permission is required to change the printer properties in the [Printers] folder. Log on as an Administrators or Power Users group member.
- 1 On the [Start] menu, point to [Settings], and then click [Printers].

The [Printers] window appears.

When using Windows XP or Windows Server 2003 / 2003 R2, point to [Settings] on the [Start] menu, and then click [Printers and Faxes]. The [Printers and Faxes] window appears.

When using Windows Vista, click [Control Panel] on the [Start] menu, click [Hardware and Sound], and then click [Printer]. The [Printers] window opens.

- **2** Click the icon of the printer you want to use.
- 3 On the [File] menu, click [Properties].

When using Windows Vista, on the [Organize] menu.

Click the [Change Accessories] tab.

If options in the **[Change Accessories]** tab are disabled, bidirectional connection is enabled. In this case, no change is necessary for option settings.

If you are using the RPCS printer driver, click the [Change Accessories] tab.

- **5** Select options installed from the options area, and then make the necessary settings.
- **6** Select the size of the memory in [Total memory:].

 Be sure to select the total memory, including the initial memory and all memory added later.
- Under [Paper source tray settings:], click and highlight the tray to be used, and then select the appropriate size, position, and type for the tray. Select the [Do not use Auto Tray Select] check box to exclude the tray from the targets of automatic tray selection.
- Click [OK] to close the printer properties dialog box.

Installing Font Manager

∰Important

- □ Under Windows 2000 / XP / Vista, or Windows Server 2003 / 2003 R2, installing applications by Auto Run requires administrator permission. To install a printer driver by Auto Run, log on using an account that has administrator permission.
- 1 Quit all applications currently running.
- **2** Insert the CD-ROM into the CD-ROM drive.

The installer starts.

- Click [Font Manager].
- **4** Follow the instructions on the screen.

Ш

Using Adobe PageMaker Version 6.0, 6.5, or 7.0

Under Windows 2000 / XP, or Windows Server 2003 / 2003 R2, with Adobe PageMaker, you need to copy PPD files to the PageMaker folder.

PPD files have the .ppd extension in the folder "DRIVERS\PS\XP_VISTA\(Language)\DISK1" on the CD-ROM.

The "XP_VISTA" folder inside the "PS" folder is for Windows 2000 / XP / Vista or 2003 / 2003 R2. Use the folder at this level that is appropriate for the operating system you are currently using.

The third folder "(Language)" may be substituted by an appropriate language name.

Copy the .ppd file to the PageMaker folder.

- For PageMaker 6.0 default installation The directory is "C:\PM6\RSRC\PPD4".
- For PageMaker 6.5 default installation
 The directory is "C:\PM65\RSRC\USENGLISH\PPD4".
 The "USENGLISH" may vary depending on your language selection.
- For PageMaker 7.0 default installation
 The directory is "C:\PM7\RSRC\USENGLISH\PPD4".
 The "USENGLISH" may vary depending on your language selection.

Note

- ☐ If the driver is not set correctly after copying the ".ppd" file, printing may not be performed properly.
- ☐ When using PageMaker, the optional features that can be selected by the printer driver will not be active. The following procedure describes how to activate the optional printer features.
 - ① On the [File] menu, click [Print]. The [Print Document] dialog box appears.
 - ② Make the necessary settings in the [Features] box.

ď

2. Setting Up the Printer Driver

PCL - Accessing the Printer Properties

Windows 2000 - Accessing the Printer Properties

Making Printer Default Settings - The Printer Properties

∰Important

- ☐ To change the printer default settings including option configuration settings, log on using an account that has Manage Printers permission. Members of the Administrator and Power Users groups have Manage Printers permission by default.
- ☐ You cannot change the printer default settings for each user. Settings made in the printer properties dialog box are applied to all users.
- 1 On the [Start] menu, point to [Settings], and then click [Printers]. The [Printers] window appears.
- **2** Click the icon of the printer you want to use.
- On the [File] menu, click [Properties].

The printer properties dialog box appears.

4 Make the necessary settings, and then click [OK].

Note

☐ Settings you make here are used as the default settings for all applications.

For details about the settings from the printer drivers, see the printer driver Help.

Making Printer Default Settings - Printing Preferences

#Important

- ☐ You cannot change the printer default settings for each user. Settings made in the printer properties dialog box are applied to all users.
- 1 On the [Start] menu, point to [Settings], and then click [Printers]. The [Printers] window appears.
- **2** Click the icon of the printer you want to use.

On the [File] menu, click [Printing Preferences...].

The [Printing Preferences] dialog box appears.

4 Make the necessary settings, and then click [OK].



☐ Settings you make here are used as the default settings for all applications.

For details about the settings from the printer drivers, see the printer driver Help.

Making Printer Settings from an Application

You can make printer settings for a specific application.

To make printer settings for a specific application, open the **[Printing Preferences]** dialog box from that application. The following explains how to make settings for the WordPad application provided with Windows 2000.

1 On the [File] menu, click [Print...].

The [Print] dialog box appears.

- 2 Select the printer you want to use in the [Select Printer] list.
- Make the necessary settings, and then click [Apply] to start printing.

∅ Note

- ☐ The procedure to open the **[Printing Preferences]** dialog box may vary depending on the application. For details, see the manuals provided with the application you use.
- ☐ Any settings you make in the following procedure are valid for the current application only.
- ☐ General users can change the properties displayed in the **[Print]** dialog box of an application. Settings made here are used as defaults when printing from this application.

For details about the settings from the printer drivers, see the printer driver Help.

Windows XP, Windows Server 2003 / 2003 R2 - Accessing the Printer Properties

Making Printer Default Settings - The Printer Properties

∰Important

- ☐ To change the printer default settings including option configuration settings, log on using an account that has Manage Printers permission. Members of the Administrators and Power Users groups have Manage Printers permission by default.
- ☐ You cannot change the printer default settings for each user. Settings made in the printer properties dialog box are applied to all users.
- 1 On the [Start] menu, click [Printers and Faxes].

The [Printers and Faxes] window appears.

- **2** Click the icon of the printer you want to use.
- On the [File] menu, click [Properties].

The printer properties dialog box appears.

- 4 Make the necessary settings, and then click [OK].
 - **𝚱** Note
 - ☐ Settings you make here are used as the default settings for all applications.
 - **₽** Reference

For details about the settings from the printer drivers, see the printer driver Help.

Making Printer Default Settings - Printing Preferences

∰Important

- ☐ You cannot change the printer default settings for each user. Settings made in the printer properties dialog box are applied to all users.
- 1 On the [Start] menu, click [Printers and Faxes].

The [Printers and Faxes] window appears.

- **2** Click the icon of the printer you want to use.
- On the [File] menu, click [Printing Preferences...].
 The [Printing Preferences] dialog box appears.
- 4 Make the necessary settings, and then click [OK].

Note

☐ Settings you make here are used as the default settings for all applications.

For details about the settings from the printer drivers, see the printer driver Help.

Making Printer Settings from an Application

You can make printer settings for a specific application.

To make printer settings for a specific application, open the **[Printing Preferences]** dialog box from that application. The following explains how to make settings for the WordPad application provided with Windows XP.

1 On the [File] menu, click [Print...].

The [Print] dialog box appears.

- 2 Select the printer you want to use in the [Select Printer] list, and then click [Preferences].
- Make the necessary settings, and then click [OK] to start printing.

Note

- ☐ The procedure to open the **[Printing Preferences]** dialog box may vary depending on the application. For details, see the manuals provided with the application you use.
- ☐ Any settings you make in the following procedure are valid for the current application only.
- ☐ General users can change the properties displayed in the [Print] dialog box of an application. Settings made here are used as defaults when printing from this application.

For details about the settings from the printer drivers, see the printer driver Help.

Windows Vista - Accessing the Printer Properties

Making Printer Default Settings - The Printer Properties

∰Important

- ☐ To change the printer default settings including option configuration settings, log on using an account that has Manage Printers permission. Members of the Administrators group have Manage Printers permission by default.
- ☐ You cannot change the printer default settings for each user. Settings made in the printer properties dialog box are applied to all users.
- 1 On the [Start] menu, click [Control Panel].

The [Control Panel] window appears.

- 2 Click [Printer] in [Hardware and Sound].
- **3** Right-click the icon of the printer you want to use, and then click [Properties]. The printer properties dialog box appears.
- Make the necessary settings, and then click [OK].

Note

- ☐ Settings you make here are used as the default settings for all applications.
- ☐ For details about the settings from the printer drivers, see the printer driver Help.

Making Printer Default Settings - Printing Preferences

∰Important

- ☐ You cannot change the printer default settings for each user. Settings made in the [Printing Preferences] dialog box are applied to all users.
- 1 On the [Start] menu, click [Control Panel].

The [Control Panel] window appears.

- 2 Click [Printer] in [Hardware and Sound].
- Right-click the icon of the printer you want to use, and then click [Printing Preferences...].

The [Printing Preferences] dialog box appears.

4 Make the necessary settings, and then click [OK].

Note

- ☐ Settings you make here are used as the default settings for all applications.
- ☐ For details about the settings from the printer drivers, see the printer driver Help.

Making Printer Settings from an Application

You can make printer settings for a specific application.

To make printer settings for a specific application, open the **[Printing Preferences]** dialog box from that application. The following explains how to make settings for the Notepad application provided with Windows XP.

- 1 On the [File] menu, click [Print...].
 - The [Print] dialog box appears.
- 2 Select the printer you want to use in the [Select Printer] list, and then click [Preferences].
- **3** Make the necessary settings, and then click [OK] to start printing.

𝚱 Note

- ☐ The procedure to open the **[Printing Preferences]** dialog box may vary depending on the application. For details, see the manuals provided with the application you use.
- ☐ Any settings you make here are valid for the current application only.
- ☐ General users can change the properties displayed in the [Print] dialog box of an application. Settings made here are used as defaults when printing from the application.
- ☐ For details about the settings from the printer drivers, see the printer driver Help.

RPCS - Accessing the Printer Properties

Windows 2000 - Accessing the Printer Properties

This describes how to launch printer driver's properties.

Making Printer Default Settings - The Printer Properties

#Important

- ☐ To change the printer default settings including option configuration settings, log on using an account that has Manage Printers permission. Members of the Administrators and Power Users groups have Manage Printers permission by default.
- ☐ You cannot change the printer default settings for each user. Settings made in the printer properties dialog box are applied to all users.
- 1 On the [Start] menu, point to [Settings], and then click [Printers]. The [Printers] window appears.
- 2 Click the icon of the printer you want to use.
- 3 On the [File] menu, click [Properties].

The printer properties dialog box appears.

When you open the printer properties dialog box initially after installing the RPCS printer driver, a confirmation message appears. After clicking **[OK]**, the printer properties dialog box appears.

4 Make the necessary settings, and then click [OK].

Note

☐ Settings you make here are used as the default settings for all applications.

For details about the settings from the printer drivers, see the printer driver Help.

Making Printer Default Settings - Printing Preferences

∰Important

- ☐ You cannot change the printer default settings for each user. Settings made in the printer properties dialog box are applied to all users.
- 1 On the [Start] menu, point to [Settings], and then click [Printers]. The [Printers] window appears.
- **2** Click the icon of the printer you want to use.

On the [File] menu, click [Printing Preferences...].

The [Printing Preferences] dialog box appears.

4 Make the necessary settings, and then click [OK].



☐ Settings you make here are used as the default settings for all applications.

For details about the settings from the printer drivers, see the printer driver Help.

Making Printer Settings from an Application

You can make printer settings for a specific application.

To make printer settings for a specific application, open the **[Printing Preferences]** dialog box from that application. The following explains how to make settings for the WordPad application provided with Windows 2000.

1 On the [File] menu, click [Print...].

The [Print] dialog box appears.

- 2 Select the printer you want to use in the [Select Printer] list.
- Make the necessary settings, and then click [Apply] to start printing.

𝚱 Note

- ☐ The procedure to open the **[Printing Preferences]** dialog box may vary depending on the application. For details, see the manuals provided with the application you use.
- ☐ Any settings you make in the following procedure are valid for the current application only.
- ☐ General users can change the properties displayed in the [Print] dialog box of an application. Settings made here are used as defaults when printing from this application.

For details about the settings from the printer drivers, see the printer driver Help.

Windows XP, Windows Server 2003 / 2003 R2 - Accessing the Printer Properties

Making Printer Default Settings - The Printer Properties

∰Important

- ☐ To change the printer default settings including option configuration settings, log on using an account that has Manage Printers permission. Members of the Administrators and Power Users groups have Manage Printers permission by default.
- ☐ You cannot change the printer default settings for each user. Settings made in the printer properties dialog box are applied to all users.
- 1 On the [Start] menu, click [Printers and Faxes].

The [Printers and Faxes] window appears.

- **2** Click the icon of the printer you want to use.
- 3 On the [File] menu, click [Properties].

The printer properties dialog box appears.

When you open the printer properties dialog box initially after installing the RPCS printer driver, a confirmation message appears. After clicking **[OK]**, the printer properties dialog box appears.

4 Make the necessary settings, and then click [OK].

Ø Note

☐ Settings you make here are used as the default settings for all applications.

For details about the settings from the printer drivers, see the printer driver Help.

Making Printer Default Settings - Printing Preferences

∰Important

- ☐ You cannot change the printer default settings for each user. Settings made in the printer properties dialog box are applied to all users.
- 1 On the [Start] menu, click [Printers and Faxes].

The [Printers and Faxes] window appears.

- 2 Click the icon of the printer you want to use.
- 3 On the [File] menu, click [Printing Preferences...].

The [Printing Preferences] dialog box appears.

4 Make the necessary settings, and then click [OK].

Note

☐ Settings you make here are used as the default settings for all applications.

Reference

For details about the settings from the printer drivers, see the printer driver Help.

Making Printer Settings from an Application

You can make printer settings for a specific application.

To make printer settings for a specific application, open the **[Printing Preferences]** dialog box from that application. The following explains how to make settings for the WordPad application provided with Windows XP.

1 On the [File] menu, click [Print...].

The [Print] dialog box appears.

- 2 Select the printer you want to use in the [Select Printer] list.
- Make the necessary settings, and then click [Apply] to start printing.

Note

- ☐ The procedure to open the **[Printing Preferences]** dialog box may vary depending on the application. For details, see the manuals provided with the application you use.
- ☐ Any settings you make in the following procedure are valid for the current application only.
- ☐ General users can change the properties displayed in the [Print] dialog box of an application. Settings made here are used as defaults when printing from this application.

For details about the settings from the printer drivers, see the printer driver Help.

Windows Vista - Accessing the Printer Properties

Making Printer Default Settings - The Printer Properties

#Important

- ☐ To change the printer default settings including option configuration settings, log on using an account that has Manage Printers permission. Members of the Administrators group have Manage Printers permission by default.
- ☐ You cannot change the printer default settings for each user. Settings made in the printer properties dialog box are applied to all users.
- 1 On the [Start] menu, click [Control Panel].

The [Control Panel] window appears.

- 2 Click [Printer] in [Hardware and Sound].
- Right-click the icon of the printer you want to use, and then click the [Properties].

The printer properties dialog box appears.

When you open the printer properties dialog box initially after installing the RPCS printer driver, a confirmation message appears. After clicking **[OK]**, the printer properties dialog box appears.

Make the necessary settings, and then click [OK].

Note

- $\hfill \square$ Settings you make here are used as the default settings for all applications.
- \Box For details, see the printer driver Help.

Making Printer Default Settings - Printing Preferences

#Important

- ☐ You cannot change the printer default settings for each user. Settings made in the [Pinter Preferences] dialog box are applied to all users.
- 1 On the [Start] menu, click [Control Panel].

The [Control Panel] window appears.

- 2 Click [Printer] in [Hardware and Sound].
- Right-click the icon of the printer you want to use, and then click [Printing Preferences...].

The [Printing Preferences] dialog box appears.

4 Make the necessary settings, and then click [OK].

A)	N	∩t4	
L/F	IV	OTE	4

- ☐ Settings you make here are used as the default settings for all applications.
- ☐ For details, see the printer driver Help.

Making Printer Settings from an Application

You can make printer settings for a specific application.

To make printer settings for a specific application, open the **[Printing Preferences]** dialog box from that application. The following explains how to make settings for the Notepad application provided with Windows Vista.

1 On the [File] menu, click [Print...].

The [Print] dialog box appears.

- 2 Select the printer you want to use in the [Select Printer] list.
- Make the necessary settings, and then click [Apply] to start printing.

Note

- ☐ The procedure to open the [Printing Preferences] dialog box may vary depending on the application. For details, see the manuals provided with the application you use.
- ☐ Any settings you make here are valid for the current application only.
- ☐ General users can change the properties displayed in the **[Print]** dialog box of an application. Settings made here are used as defaults when printing from the application.
- ☐ For details, see the printer driver Help.

Notes on Printing when [Black and White] is Selected

If you select [Black and White] in the [Print Settings] of the [Printing Preferences] dialog box, black areas of text and line art might be detected as colour images, depending on the application you are using. If this happens, the document might be printed and counted as a CMYK image. To print and count the document as a black and white image, use the following procedure to set the colour to black and white in the printer driver.

- In the printer driver's [Printing Preferences] dialog box, click the [Print Quality] tab.
- 2 Select the [User settings] check box.
- In the list box, select a user setting.
- 4 Click [Change User Settings].
- On the [Image Adjustments] tab, specify [Whole document] or [Single component] for the document type.

If you specify [Single component], select [Text], [Graphics], or [Photograph].

In the [Gray reproduction (Text/Line Art):] list, select [K (Black)].

The gray reproduction is set to pure black.

If you select the **[Print as bitmap]** check box on the **[Misc.]** tab, the gray reproduction setting is ignored, and black areas of text and line art are printed and counted as CMYK images.

Click [OK].

- Note
- ☐ Black areas of text and line art that were produced using colours other than black and gray are printed out and counted as CMYK images even if they appear as black or gray on the screen.
- ☐ For details about the settings of [Image Adjustments], see the printer driver Help.

3. Other Print Operations

Printing a PDF File Directly

You can send PDF files directly to the machine for printing, without having to open a PDF application.

#Important
☐ This function is possible only when the optional PostScript 3 unit is installed.
☐ This function is possible for genuine Adobe PDF files only.
☐ Version 1.3, 1.4, and 1.5 PDF files are compatible.
☐ Transparency and JBIG2 (functions of PDF version 1.4) are not compatible.
☐ PDF version 1.5 exclusive functions are not compatible.
☐ Some types of High Compression PDF files are not supported. Consult your sales representative about the supported file types.
Ø Note
☐ Paper size errors may occur when printing on custom size paper.
Printing Method
The following procedures explain the two methods of direct PDF printing - us-

Using DeskTopBinder Lite

Installing DeskTopBinder Lite

Follow the procedure below to install DeskTopBinder Lite.

- 1 Quit all applications currently running.
- 2 Insert the CD-ROM into the CD-ROM drive.

ing DeskTopBinder Lite or by entering commands.

The installer starts.

Auto Run may not work under certain operating system settings. In this case, launch "Setup.exe" located on the CD-ROM root directory.

- Select an interface language, and then click [OK].
- 4 Click [DeskTopBinder-SmartDeviceMonitor for Client], and then click [Next >].
- **5** Follow the instructions on the display to install DeskTopBinder Lite.

If you are required to restart the computer after installing DeskTopBinder Lite, restart the computer and continue the configuration.

DeskTopBinder Lite Enhancements

Follow the DeskTopBinder Lite enhancement procedure to print PDF files directly.

- On the [Start] menu, click [Programs], [DeskTopBinder], and [Extended Features Wizard].
- When [Extended Features Wizard] appears, select [Start], and then click [Next] repeatedly until the [Printing Function3] screen appears.
- On the [Printing Function3] screen, click [Add...] to display [PDF Direct Print Properties].
- Select Driver for This Machine, click [OK], and then click [Next] repeatedly until [Finish] is displayed.

 Click [Finish].

Function Palette

The Function palette contains buttons for functions that are already configured through DeskTopBinder Lite enhancement. Using these buttons, you can print Windows files, preview printouts, convert images, and register scanners for documents without having to open DeskTopBinder Lite. You can also use these functions simply by dragging a target file to the button corresponding to the required function and dropping it there.

- On the [Start] menu, click [Programs], [DeskTopBinder], and [Function Palette].

 An icon for the Function palette is added to the task bar displayed at the bottom right of the screen.
- 2 Right-click the icon that is added to the task bar, and then click [Properties] to display the Properties screen.
- Click the [Contents] tab, select the [PDF Direct Print] check box at the centre, and then click [OK].

The [Properties] screen closes and the [PDF Direct Print] icon is added to the palette.

PDF Direct Printing

Use the method below to print PDF files directly.

- 1 Drag the PDF file you want to print to the PDF Direct Printing icon in the palette and drop it there.
- 2 [Output File List-PDF Direct Print] is displayed.

Highlight the PDF you want to print, and then click **[OK]**. The PDF file is printed.

Printing PDF Password-Protected Documents

Follow the procedure below to print password-protected PDF files.

- In the Windows [Start] menu, click [Programs], [DeskTopBinder], and [Extended Features Wizard].
- When [Extended Features Wizard] appears, select [Start], and then click [Next] repeatedly until the [Printing Function3] screen appears.
- On the [Printing Function3] screen, click [Properties...] to display [PDF Direct Print Properties].
- Select the [Use PDF Password] check box at the bottom right of the screen, and then click [OK].

Click [Next] repeatedly until [Finish] appears.

Click [Finish] to close the [Extended Features Wizard] screen.

- Move the PDF file you want to print to the PDF Direct Printing icon on the palette using a drag-and-drop operation.
- [Output File List-PDF Direct Print] is displayed.

Select the PDF file you want to output to make it reverse video, and then click **[OK]**.

The [PDF Direct Print Properties] screen opens.


Enter the password for the PDF file you want to print in the **[PDF password:]** field at the bottom right of the screen, and then click **[OK]**.

The password-protected PDF file is printed.

Note

- ☐ Before printing a password-protected PDF file, perform one of the following:
 - Enter the PDF password in the PDF Direct Printing Properties screen.
 - Specify a PDF password by selecting [Change PDF Password] in the [PDF Menu] on the control panel of this machine
- ☐ If a **[PDF Group Password]** for the **[PDF Menu]** menu is assigned to either DeskTopBinder Lite or the control panel of this machine, a same group password needs to be assigned to the other.

PDF Direct Print Properties

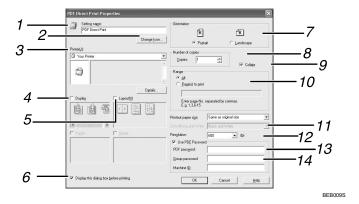

1. Setting name:

Displays the plug-in configuration name (up to 63 single byte characters)

2. Change Icon...

Changes the icon displayed on the tool bar.

3. Printer:

Displays a list of RPCS drivers that support PDF direct printing.

4. Duplex

Prints on both sides of sheets.

5. Layout

Prints multiple pages on a single sheet.

6. Display this dialog box before printing

Appears in PDF direct printing mode if this check box is selected.

7. Orientation:

Specifies the original's orientation.

8. Number of copies

Specifies the number of copies to print.

9. Collate

Sorts printed sheets.

10. Range

Specifies the print area on each page.

11. Color/Black and White:

Specifies colour or black-and-white printing.

12. Resolution:

Specifies a print resolution.

13. PDF password:

If the PDF file is password-protected, enter the password in this field. Otherwise, the file cannot be printed.

14. Group password:

If a group password is assigned to Desk-TopBinder Lite and this machine, enter the group password in this field. Otherwise, printing cannot start.

Using commands

You can print PDF files directly, using commands such as "ftp", "sftp", and "lpr".

For details about UNIX commands, see Network Guide or UNIX Supplement.

Unauthorized Copy Control

You can embed patterns and text under printed text to prevent unauthorized copying of the document. Unauthorized Copy Control consists of two functions: [Data security for copying] and [Mask type:].

∰Important

- ☐ This function is designed to discourage copying of confidential documents; it does not prevent unauthorized use of information.
- ☐ To use the Unauthorized Copy Control function, configure the RPCS printer driver settings as shown below. This function cannot be selected if other settings are applied.
 - In the [Paper type:] list, select [Plain] or [Inkjet Plain Paper].
 - If you selected [Plain], select [Quality] on the [Print Quality] tab.
 - If you selected [Inkjet Plain Paper], select [Normal] on the [Print Quality] tab.

Opening the Unauthorized Copy Control Window

- 1 In the RPCS printer driver, open the [Printing Preference] window.
- 2 Click [Add/Change Custom Settings...].
- **3** Select the [Unauthorized copy...] check box.
- 4 Click [Control Settings...].


The Unauthorized Copy Control window appears.



☐ For details about the settings from the printer drivers, see the printer driver Help.

Using [Data security for copying]


You can embed a pattern by setting it in the printer driver.

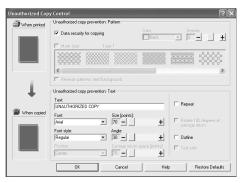

Setting [Data security for copying] in the printer driver

- Select the [Data security for copying] checkbox. You can also enter the text in the [Text:] box.
- You cannot select the [Mask type:] checkbox at the same time.
- To print a document protected by gray overprint, the machine must be set up correctly. Consult an administrator.

Printing a document using [Data security for copying]

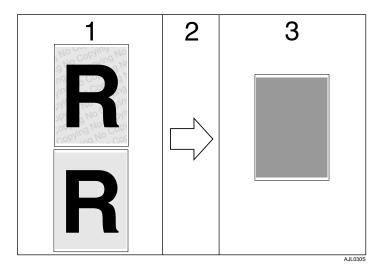

- 1. The pattern and text you have set is printed.
- 2. The document is copied or stored in copiers / multifunction machines which the optional Copy Data Security unit is installed.
- 3. The document is blanked by gray overprint.


Note

- □ When printing a document that is set with [Data security for copying], the machine does not require the optional Copy Data Security unit to be installed. The Copy Data Security unit is required when copying or storing a document protected by gray overprint.
- □ Only the RPCS printer driver is supported.
- ☐ You cannot partially embed a pattern and text in a document.
- \square Use 182×257 mm ($7^1/_4 \times 10^1/_2$ in.) or larger paper.
- ☐ Use ordinary or recycled paper of at least 70% whiteness.
- ☐ Duplex printing may interfere with this function as a result of text and patterns being visible through the paper.

For details about setting [Data security for copying], see the printer driver Help.

Using [Mask type:]

You can embed patterns and text in a document by setting in the printer driver to prevent unauthorized copying.

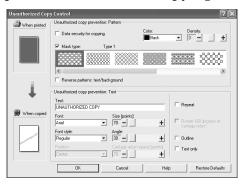


Setting [Mask type:] in the printer driver

- Select a pattern from [Mask type:], and then enter text in the [Text:] box.
- You can select overprint colour from [Black], [Cyan], or [Magenta] in the [Color:] list.

Note

- ☐ You can set only [Text:], but [Mask type:] and [Text:] must be set together.
- Printing a document using [Mask type:]

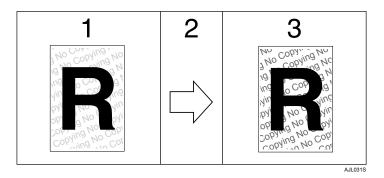

- 1. The pattern and text you have set is printed palely.
- 2. The document is copied, scanned, or stored in copiers / multifunction machines.
- 3. The pattern and text you have set appear clearly.

Note □ Only the RPCS printer driver is supported. □ You cannot partially embed patterns and text strings in a document. □ To make the embedded pattern clear, set the character size at least 50 pt (preferably 70 to 80 pt) and character angle to between 30 and 40 degrees. □ Due to the effects of the settings, the results of copying, scanning, and saving documents in the document server may vary depending on the machine model and setting conditions. □ Printing with background patterns and text may be slower than normal print-

ing.

For details about setting [Mask type:], see the printer driver Help.

Important Notice

- The supplier does not provide warranty regarding the appearance of print patterns and other copy protection features. The appearance of the print patterns and the performance of Unauthorized Copy Control may vary depending on the quality of paper used and the machine model and settings.
- The supplier takes no responsibility for any damages sustained in connection with use of or inability to make use of Unauthorized Copy Control print patterns.

Using the Print Job Function

This describes how to print files stored in the machine.

Print files stored in the machine can be printed. You can select the print files from the Job List or User ID screen.

You can print or delete the print jobs saved in the machine which is sent from computers.

The following types of printing can be selected using the printer driver: Sample Print, Locked Print, Hold Print, and Stored Print.




If you press **[Prt.Jobs]** on the Printer screen, a screen prompting to select the type of print job appears. After selecting a type, you can select print files in the list by pressing:

- [Job List]
 Displays the Job List screen.
- [User ID]
 Displays the User ID screen.

If you select Sample Print, Locked Print, and Hold Print, the print files saved in the machine are deleted after printing is completed. If you select Stored Print, the files remain in the machine even after printing is finished.

❖ Job List

If you press [Job List] when selecting the type of print jobs after [Prt.Jobs] is pressed in the printer screen, the following screen appears:

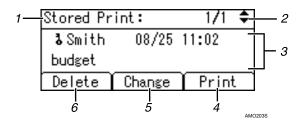

1. The type of print jobs

Displays the type of the print job you select.

2. Page number

Displays the current page number. Each time pressing [▼] or [▲], the screen switches.

3. User ID, Date / Time, and File Name display

Displays the time when the instruction to print the stored files was entered, User ID, and the file names.

4. [Print]

Prints a selected file.

5. [Change]

Changes or deletes the password of a file if a password is set. To change the password, press [Change], enter the current password, and then enter the new password on the confirmation screen. To delete the password, press [Change], leave the entering/confirming a new password box blank, and then press the [OK] key.

You can also set passwords to the Stored Print files that do not currently have passwords.

6. [Delete]


Deletes a selected file.

Note

- ☐ When you press **[Change]** to change or delete a password, you must first enter the existing password. If the password you entered is incorrect, you cannot change or delete any current passwords.
- ☐ You can use **[Change]** to set or delete passwords only Stored Print files are saved in the machine.

User ID

If you press **[User ID]** when selecting the type of print jobs after **[Prt.Jobs]** is pressed in the printer screen, the following screen appears:

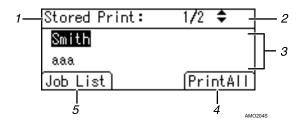

1. The type of print jobs

Displays the type of the print job you select.

2. Page number

Displays the current page number. Each time pressing the [▼] or [▲] key, the screen switches.

3. User ID

Displays the User IDs who sent files to the machine.

4. [PrintAll]

Prints all selected type of files sent by the user ID.

5. [Job List]

Switches the screen to the **[Job List]** screen.

Note

- ☐ To cancel selecting a file, press the **[Escape]** key.
- ☐ The display is not updated if a new file is stored while the list of stored files is displayed. To update the display, press the **[Escape]** key to return to the Printer screen, and then press **[Prt.Jobs]** again.
- ☐ If a large number of print jobs are stored in the machine, processing may slow temporarily, depending on which functions are used.

For details about printing each type of print job, see the followings:

p.79 "Sample Print"

p.82 "Locked Print"

p.86 "Hold Print"

p.89 "Stored Print"

Printing from the Print Job Screen

This section gives instruction about Sample Print, Locked Print, Hold Print, and Stored Print.

Sample Print

Use this function to print only the first set of a multiple-set print job. After you have checked the result, remaining sets can be printed or canceled using the machine's control panel. This can reduce misprints due to mistakes in content or settings.

∰Important

- ☐ A Sample Print file cannot be stored if:
 - the total number of Sample Print, Locked Print, Hold Print, and Stored Print files in the machine is over 100. (The maximum number varies depending on the volume of data in files.)
 - the file contains over 1,000 pages.
 - sent or stored files in the machine contain over 9,000 pages in total.
 - using the machine with no Function Upgrade Option type C1800 installed.

Note

- ☐ If a Sample Print file has not been stored properly, check the error log on the control panel (see p.100 "Checking the Error Log").
- ☐ Even after you turn off the machine, stored documents in the machine remain. However, the [Auto Delete Temporary Jobs] or [Auto Delete Stored Jobs] settings are applied first (see "Printer Features", General Settings Guide).
- ☐ If the application has a collate option, make sure it is not selected before sending a print job. By default, Sample Print jobs are automatically collated by the printer driver. If a collate option is selected from the application's [Print] dialog box, more prints than intended may be produced.
- ☐ If the first set of the Sample Print files is not as you expected and you do not want to print remaining sets, delete the Sample Print file using the display panel. If you print the remaining sets of the Sample Print file, the job in the machine is deleted automatically.
- ☐ The files sent to the machine is not saved if you use the machine with no Function Upgrade Option type C1800 installed.

Printing a Sample Print File

The following procedure describes how to print a Sample Print file with the PCL 6 / 5c and the RPCS printer driver. For information about how to print a Sample Print file with the PostScript 3 printer driver, see PostScript 3 Supplement.

∰Important

- ☐ Applications with their own drivers, such as PageMaker, do not support this function.
- ☐ If you are using Mac OS X, you need Mac OS X v10.2 or higher to use this function.
- **1** Configure Sample Print in the printer driver's properties.


For details about configuring the printer drivers, see the relevant Help files.

2 Start printing from the application's [Print] dialog box.


Make sure to set more than two copies.

The Sample Print job is sent to the machine, and the first set is printed.

- On the machine's control panel, press the [Printer] key to display the Printer screen.
- Press [Prt.Jobs].

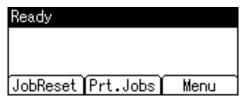

5 Select [Sample Print Jobs] using [▼] or [▲], and then press [Job List].

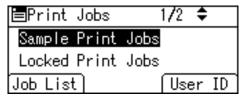


A list of Sample Print files stored in the machine appears.

Depending on the security settings, certain print jobs may not be displayed.

You can print files also by pressing **[User ID]**. For details, see p.93 "Printing from the User ID Screen".

6 Select the file you want to print using [▼] or [▲], and then press [Print].

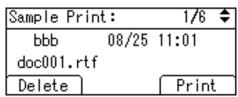

Enter the new number of sets using the number keys. You can enter up to 999 sets.

Press [Clear/Stop] to correct any entry mistakes.

7 Press [Print].

The remaining sets are printed.

Press [Cancel] to cancel printing.

Note

- ☐ When printing is completed, the stored file will be deleted.
- ☐ To stop printing after printing has started, press the **[Escape]** key until the Printer screen appears, and then press **[JobReset]**. The file will be deleted.


Deleting Sample Print Files

If you are not satisfied with the sample printout, you can delete the Sample Print file, revise it and print it again until the settings are suitable.

- 1 Press the [Printer] key to display the Printer screen.
- Press [Prt.Jobs].




3 Select [Sample Print Jobs] using [▼] or [▲], and then press [Job List].

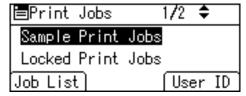

A list of Sample Print files stored in the machine appears.

Depending on the security settings, certain print jobs may not be displayed.

Select the file you want to delete using (▼) or (▲), and then press [Delete].

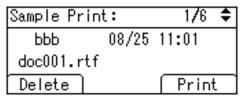

The delete confirmation screen will appear.

5 Press [Delete] to delete the file.

The selected file is deleted.



☐ If you do not want to delete the file, press [Cancel].

Locked Print

Use this function to maintain privacy when printing confidential documents on the machine over a shared network. Usually, it is possible to print data using the display panel once it is stored in this machine. When using Locked Print, it is not possible to print unless a password is entered on the machine's display panel. Your confidential documents will be safe from being viewed by other people.

∰Important

- ☐ A Locked Print file cannot be stored if:
 - the total number of Sample Print, Locked Print, Hold Print, and Stored Print files in the machine is over 100. (The maximum number varies depending on the volume of data in files.)
 - the file contains over 1,000 pages.
 - sent or stored files in the machine contain over 9,000 pages in total.
 - using the machine with no Function Upgrade Option type C1800 installed.

Note

- ☐ If a Locked Print file has not been stored properly, check the error log on the control panel (see p.100 "Checking the Error Log").
- ☐ Even after you turn off the machine, stored documents remain. However, the [Auto Delete Temporary Jobs] or [Auto Delete Stored Jobs] settings are applied first (see "Printer Features", General Settings Guide).
- ☐ If the application has a collate option, make sure it is not selected before sending a print job. Locked Print jobs are automatically collated by the printer driver as default. If a collate option is selected in the application print dialog box, more sets than intended may be printed.
- ☐ After the Locked Print file is printed, the job is automatically deleted.
- ☐ The files sent to the machine is not saved if you use the machine with no Function Upgrade Option type C1800 installed.

Printing a Locked Print File

The following procedure describes how to print a Locked Print file with the PCL 6 / 5c and the RPCS printer driver. For information about how to print a Locked Print file with the PostScript 3 printer driver, see PostScript 3 Supplement.

∰Important

- ☐ Applications with their own drivers, such as PageMaker, do not support this function.
- ☐ If you are using Mac OS X, you need Mac OS X v10.2 or higher to use this function.
- **1** Configure the Locked Print in the printer driver's properties.

For details about configuring the printer drivers, see the corresponding Help files.

2 Start printing from the application's [Print] dialog box.


The Locked Print job is sent to the machine.

- On the machine's control panel, press the [Printer] key to display the Printer screen.
- Press [Prt.Jobs].



A list of print files stored in the machine appears.

Select [Locked Print Jobs] using [▼] or [▲], and then press [Job List].

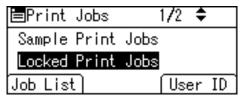


A list of Locked Print files stored in the machine appears.

Depending on the security settings, certain print jobs may not be displayed.


You can print files also by pressing **[User ID]**. For details, see p.93 "Printing from the User ID Screen".

6 Select the file you want to print using [▼] or [▲], and then press [Print].

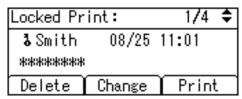

The password screen appears.

2 Enter the password using the number keys, and then press the [OK] key.

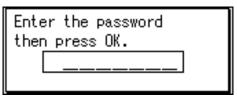

The print confirmation screen appears.

A confirmation screen will appear if the password is not entered correctly. Press **[Exit]** to enter the password again.

If you forget your password, ask your network administrator for help.

8 Press [Print].


The locked file is printed.

Press [Cancel] to cancel printing.


- Note
- ☐ When printing is completed, the stored file will be deleted.
- ☐ To stop printing after printing has started, press the **[Escape]** key until the Printer screen appears, and then press **[JobReset]**. The file will be deleted.

Deleting Locked Print Files

- 1 Press the [Printer] key to display the Printer screen.
- Press [Prt.Jobs].

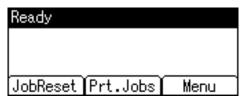


3 Select [Locked Print Jobs] using [▼] or [▲], and then press [Job List].

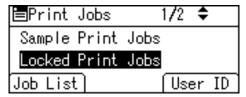

A list of Locked Print files stored appears.


Depending on the security settings, certain print jobs may not be displayed.

Select the file you want to delete using (▼) or (▲), and then press [Delete].

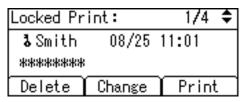

The password screen is displayed.

Enter the password using the number keys, and then press the [OK] key.

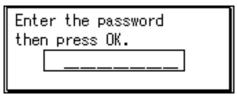

The delete confirmation screen appears.

A confirmation screen will appear if the password is not entered correctly. Press **[Exit]** to enter the password again.

6 Press [Delete].

The selected file is deleted.

If you do not want to delete the file, press [Cancel].

Hold Print

Use this function to temporarily hold a file in the machine, and print it from the computer or the machine's control panel later.

∰Important

- ☐ A Hold Print file cannot be stored if:
 - the total number of Sample Print, Locked Print, Hold Print, and Stored Print files in the machine is over 100. (The maximum number varies depending on the volume of data in files.)
 - the file contains over 1,000 pages.
 - sent or stored files in the machine contain over 9,000 pages in total.
 - using the machine with no Function Upgrade Option type C1800 installed.

Note

- ☐ If a Hold Print file has not been stored properly, check the error log on the control panel (see p.100 "Checking the Error Log").
- ☐ Even after you turn off the machine, stored documents in the machine remain. However, the [Auto Delete Temporary Jobs] or [Auto Delete Stored Jobs] settings are applied first (see "Printer Features", General Settings Guide).
- ☐ If the application has a collate option, make sure it is not selected before sending a print job. By default, Hold Print jobs are automatically collated by the printer driver. If a collate option is selected from the application's Print dialog box, more prints than intended may be produced.
- ☐ The files sent to the machine is not saved if you use the machine with no Function Upgrade Option type C1800 installed.

Printing a Hold Print File

The following procedure describes how to print a Hold Print file with the PCL 6 / 5c and the RPCS printer driver. For information about how to print a Hold Print file with the PostScript 3 printer driver, see Postscript 3 Supplement.

∰Important

- ☐ Applications with their own drivers, such as PageMaker, do not support this function.
- ☐ If you are using Mac OS X, you need Mac OS X v10.2 or higher to use this function.
- **1** Configure Hold Print in the printer driver's properties.

For details about configuring the printer drivers, see the relevant Help files.

2 Click [Details...], and then enter a User ID in the [User ID:] box.

You can also set a file name. The file name you set will be displayed on the machine's Job List screen.


3 Start printing from the application's [Print] dialog box.

The Hold Print job is sent to the machine and stored.

- On the machine's control panel, press the [Printer] key to display the printer screen.
- Press [Prt.Jobs].



6 Select [Hold Print Jobs] using [▼] or [▲], and then press [Job List].

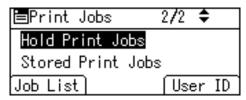


A list of a print files stored in the machine appears.

Depending on the security settings, certain print jobs may not be displayed.

You can print files also by pressing **[User ID]**. For details, see p.93 "Printing from the User ID Screen".

7 Select the file you want to print using [▼] or [▲], and then press [Print].

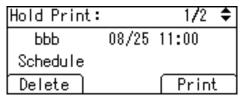

The confirmation screen appears.

Press [Print].

The Hold Print file is printed.

Press [Cancel] to cancel printing.

- Note
- ☐ When printing is completed, the stored file is deleted.
- ☐ To stop printing after printing has started, press the **[Escape]** key until the Printer screen appears, and then press **[JobReset]**. The file is deleted.

₽ Reference


For details about setting printer drivers, see the printer driver Help. You can also print or delete a Hold Print file from Web Image Monitor. For details, see Web Image Monitor Help.

Deleting Hold Print Files

- 1 Press the [Printer] key to display the Printer screen.
- Press [Prt.Jobs].




3 Select [Hold Print Jobs] using [▼] or [▲], and then press [Job List].

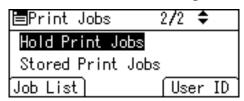

A list of a Hold Print files stored in the machine appears.

Depending on the security settings, certain print jobs may not be displayed.

4 Select the file you want to delete using [▼] or [▲], and then press [Delete].

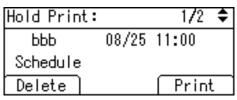

The delete confirmation screen will appear.

Press [Delete] to delete the file.

The selected file is deleted.

If you do not want to delete the file, press [Cancel].

Stored Print

Use this function to store a file in the machine, and then print it from the computer or the machine's control panel later.

Jobs are not deleted after they are printed, so the same job need not be resent in order to print multiple copies.

#Important

- ☐ A Stored Print file cannot be stored if:
 - the total number of Sample Print, Locked Print, Hold Print, and Stored Print files in the machine is over 100. (The maximum number varies depending on the volume of data in files.)
 - the file contains over 1,000 pages.
 - sent or stored files in the machine contain over 9,000 pages in total.
 - using the machine with no Function Upgrade Option type C1800 installed.

Note

- ☐ If a Stored Print file has not been stored properly, check the error log on the control panel (see p.100 "Checking the Error Log").
- ☐ Even after you turn off the machine, stored documents remain. However, the [Auto Delete Temporary Jobs] or [Auto Delete Stored Jobs] settings are applied first (see "Printer Features", General Settings Guide).
- ☐ If the application has a collate option, make sure it is not selected before sending a print job. By default, Stored Print jobs are automatically collated by the printer driver. If a collate option is selected from the application's Print dialog box, more prints than intended may be produced.
- ☐ The files sent to the machine is not saved if you use the machine with no Function Upgrade Option type C1800 installed.

Printing a Stored Print File

The following procedure describes how to print a Stored Print file with the PCL 6 / 5c and the RPCS printer driver. For information about how to print a Stored Print file with the PostScript 3 printer driver, see Postscript 3 Supplement included.

#Important

- ☐ Applications with their own drivers, such as PageMaker, do not support this function.
- ☐ If you are using Mac OS X, you need Mac OS X v10.2 or higher to use this function.
- **1** Configure Stored Print in the printer driver's properties.

You can select two ways for Stored Print:

- [Stored Print]
 - Stores the file in the printer and print it later using the control panel.
- [Store and Normal Print]
 Prints the file at once and also stores the file in the printer.

For details about configuring the printer drivers, see the relevant Help files.

2 Click [Details...], and then enter a User ID in the [User ID:] box.

You can also set a password. The same password must be entered when printing or deleting.

You can set a file name. The file name you set will be displayed on the machine's Job List screen.


3 Start printing from the application's [Print] dialog box.

The Stored Print job is sent to the machine and stored.

- On the machine's control panel, press the [Printer] key to display the printer screen.
- Press [Prt.Jobs].




6 Select [Stored Print Jobs] using [▼] or [▲], and then press [Job List].

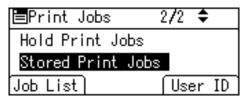

A list of Stored Print files stored in the machine appears.

You can print files also by pressing **[User ID]**. For details, see p.93 "Printing from the User ID Screen".

2 Select the file you want to print using [▼] or [▲], and then press [Print].

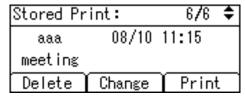

The confirmation screen appears.

If you set a password in the printer driver, a password confirmation screen appears. Enter the password.

Enter the number of sets using the number keys.

Press [Print].

The Stored Print file is printed.

Press [Cancel] to cancel printing.

Note

- ☐ To stop printing after printing has started, press the **[Escape]** key until the Printer screen appears, and then press **[JobReset]**. A Stored Print file is not deleted even if **[JobReset]** is pressed.
- ☐ The Stored Print file that sent to the machine is not deleted unless you delete a file or select [Auto Delete Stored Jobs] (see "Printer Features", General Settings Guide). For details, see p.92 "Deleting Stored Print Files".
- ☐ You can set or delete a password after sending files to the machine. Select the file and press **[Change]** in the Print Job List screen. To set a password, enter the new password. To delete the password, leave the password box blank on entering or confirming the new password, and press the **[OK]** key.


For details about the settings from the printer drivers, see the printer driver Help. You can also print or delete a Stored Print file from Web Image Monitor. For details, see Web Image Monitor Help.

Deleting Stored Print Files

- 1 Press the [Printer] key to display the Printer screen.
- Press [Prt.Jobs].




3 Select [Stored Print Jobs] using [▼] or [▲], and then press [Job List].

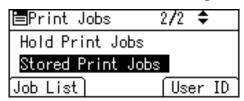

A list of Stored Print files stored in the machine appears.

Depending on the security settings, certain print jobs may not be displayed.

4 Select the file you want to delete using [▼] or [▲], and then press [Delete].

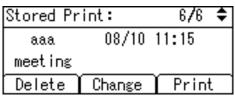

The delete confirmation screen will appear.

If you set the password in the printer driver, enter the password to delete.

Press [Delete] to delete the file.

The selected file is deleted..

If you do not want to delete the file, press [Cancel].

Printing from the User ID Screen


This describes how to print the files saved in the machine from the User ID screen.

Printing the Selected Print Job

1 On the Printer screen, press [Prt.Jobs].




2 Select a type of print jobs you want to print using [▼] or [▲], and then press [User ID].

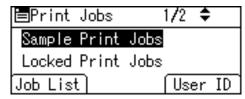


A list of user IDs whose files are stored in the machine appears.

Select the user ID whose file you want to print using [▼] or [▲], and then press [Job List].

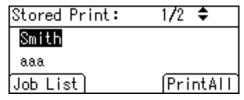

The print job list of the selected user ID appears.

4 Select the file you want to print using [▼] or [▲], and then press [Print].

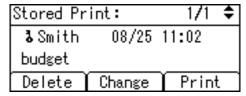

The confirmation screen appears.

Press [Print].

The selected file is printed.

To cancel printing, press [Cancel].

For details about printing each type of print job, see the followings:

p.79 "Sample Print"

p.82 "Locked Print"

p.86 "Hold Print"


p.89 "Stored Print"

Printing All Print Jobs

1 On the Printer screen, press [Prt.Jobs].




Select a type of print jobs you want to print using [▼] or [▲], and then press [User ID].

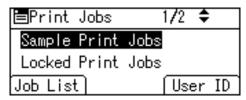

A list of user IDs whose files are stored in the machine appears.

Select the user ID whose file you want to print using [▼] or [▲], and then press [PrintAll].

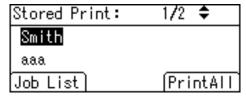

The confirmation screen appears.

Press [Print].

The selected files are printed.

To cancel printing, press [Cancel].

Note

- ☐ After printing is completed, Sample Print, Locked Print, and Hold Print files are deleted.
- ☐ You cannot select a print job that is not stored under the selected user ID.
- ☐ If you select Sample Print including multiple files, the number you set on the confirmation screen is applied to all files.
- ☐ If you select Stored Print, the number you set on the confirmation screen is applied to all files.
- ☐ If you select Locked Print, enter the correct password. If there are multiple passwords, the machine prints only files that correspond to the entered password.
- ☐ If you select Stored Print files, and some of these require a password, the machine prints files that correspond to the entered password and files that do not require a password.

₽ Reference

For details about printing each type of print job, see the followings:

p.79 "Sample Print"

p.82 "Locked Print"

p.86 "Hold Print"

p.89 "Stored Print"

Form Feed

This section gives instructions for operating the machine when there is no tray for the selected paper size or type, or when paper loaded in the machine has run out.

∰Important

- ☐ The tray cannot be changed if the following functions are set:
 - Duplex Print to a tray that does not support duplex printing
 - Selecting the one-sheet bypass tray

Note

- ☐ If form feed is selected for a tray with the following settings, you can change the tray by canceling the settings:
 - Duplex Print
- ☐ If Auto Continue is selected, form fed paper is printed after a set interval. See "Printer Features", General Settings Guide.

Printing from a Selected Tray


If the machine does not have a tray for the selected paper size or paper type, or if the selected paper loaded in the machine has run out, a caution message appears. If this message appears, do the following procedure.

1 When the caution message appears, press [FormFeed].

```
Change Tray 1 to the
following settings:
5½×8½□⊋(IJ Plain)
JobReset FormFeed
```

2 Select the tray for form feed using [▼] or [▲] from those that appear on the display panel, and then press the [OK] key.

If you want to print after adding paper to the tray, select the tray after loading the correct paper.

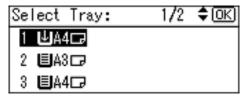

The machine prints using the selected tray.

Note

☐ If a tray with a smaller paper size is selected, the print job may be cut short, or other problems may occur.

Canceling a Print Job

Follow this procedure for canceling the print job if the message prompting form feed appears.

Press [JobReset].

```
Change Tray 1 to the
following settings:
5½×8½□∂(IJ Plain)
JobReset FormFeed
```


Press [Current].



The confirmation message appears.

To resume printing jobs, press [Resume].

Press [Yes] to cancel the print job.

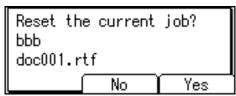

Press **[No]** to return to the previous display.

Note

- ☐ If the machine is shared by multiple computers, be careful not to accidentally cancel someone else's print job.
- □ Under Windows, If the machine is connected to the computer using a parallel cable, sent print jobs may be canceled if [JobReset] is pressed while "Waiting..." is displayed on the control panel. After the interval set in [I/O Timeout] in Printer Features has passed, the next print job can be sent. A print job sent from a different client computer will not be canceled in this case.
- ☐ You cannot stop printing data that has already been processed. For this reason, printing may continue for a few pages after you press [JobReset].
- ☐ A print job containing a large volume of data may take considerable time to stop.

For details, see p.98 "Canceling a Print Job".

Canceling a Print Job

This section gives instruction to stop printing from the computer or the control panel.

Canceling a Print Job Using the Control Panel

1 Press [JobReset] on the display panel.

A confirmation message appears.

2 Press [Current].

```
Reset the following job:
bbb
doc001.rtf
Current Resume
```

To resume printing jobs, press [Resume].

3 Press [Yes] to cancel the print job.

```
Reset the current job?
bbb
doc001.rtf
No Yes
```

Press [No] to return to the previous display.

Windows - Canceling a Print Job from the computer

You can cancel a print job from the computer if transferring print jobs is not completed.

1 Double-click the printer icon on the Windows task tray.

A window appears, showing all print jobs currently queued for printing. Check the current status of the job you want to cancel.

- **2** Select the name of the job you want to cancel.
- 3 On the [Document] menu, click [Cancel Printing].
- 4 Press the [Printer] key on the machine's control panel.

▶ Note If the machine is shared by multiple computers, be careful not to accidentally cancel someone else's print job. If the machine is connected to the computer using a parallel cable, sent print jobs may be canceled if [JobReset] is pressed while "Waiting..." is displayed on the control panel. After the interval set in [I/O Timeout] in Printer Features has passed, the next print job can be sent. A print job sent from a different client computer will not be canceled in this case. In Windows XP / Vista, and Windows Server 2003 / 2003 R2, click [Cancel] on the [Document] menu. In Windows 2000, you can also open the print job queue window by double-clicking the machine's icon in the [Printers] window (in Windows XP and Windows Server 2003 / 2003 R2: the [Printers and Faxes] window; in Windows Vista: the [Hardware and Sound] window).

You cannot stop printing data that has already been processed. For this reason, printing may continue for a few pages after you press [JobReset].
 A print job containing a large volume of data may take considerable time


to stop.

Checking the Error Log


If files could not be stored due to printing errors, identify the cause of the errors by checking the error log on the control panel.

#Important


- ☐ The most recent 30 errors are stored in the error log. If a new error is added when there are 30 errors already stored, the oldest error is deleted. However, if the oldest error belongs to one of the following print jobs, it is not deleted. The error is stored separately until the number of those errors reaches 30. You can check any of these print jobs for error log information.
 - Sample Print
 - Locked Print
 - Hold Print
 - Stored Print
- ☐ If the main power switch is turned off, the log is deleted.
- 1 Press the [Printer] key to display the Printer screen.
- Press [Menu].

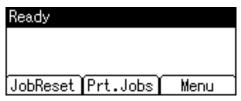

- Select [Show Error Log] using [▼] or [▲], and then press the [OK] key.
- Select a type of print jobs using [▼] or [▲], and then press the [OK] key.
 If you select [All], all error logs appears.

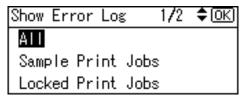

5 Select the error log you want to check using [▼] or [▲].

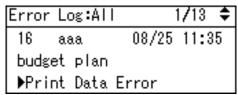

A detailed error log appears.

Note

- ☐ Press the **[Escape]** key until the Printer screen appears after checking the log.
- ☐ To print files that appear in the error log, resend them after stored files have been printed or deleted.

Spool Printing

Spool Printing allows print jobs transferred from a computer to be temporarily stored, and then prints them after they are transferred. This shortens printing time as it maximizes printer efficiency.

∰Important

- ☐ During Spool Printing, the hard disk is accessed and the Data In indicator blinks. Turning off the computer or machine during Spool Printing can damage the hard disk. Also, if the computer or machine is turned off during Spool Printing, spooled jobs will be deleted. Therefore, do not turn the power to the computer or machine off during Spool Printing.
- ☐ If data is sent to the machine using other protocols besides diprint, lpr, ipp, smb (TCP/IP (IPv6)), and sftp, Spool Printing cannot be performed.
- ☐ Up to a maximum of 150 jobs at once can be spool printed.
- ☐ This function is available only on machines that have Function Upgrade Option type C1800 installed.

Setting Spool Printing

Spool Printing can be set using telnet or Web Image Monitor.

- Using Web Image Monitor
 See Network Guide or Help for more information.
- Using telnet
 Type in "spoolsw spool on" to set Spool Printing.

 See Network Guide for more information about telnet.

❖ Viewing/Deleting spool jobs in Web Image Monitor

Start Web Image Monitor and enter the machine's IP address in the address bar. This displays the top page.

For more information, see Network Guide.

Note

- ☐ Printing the first page with Spool Printing will be slow.
- ☐ The computer requires less print processing time when large amounts of data are spooled.
- ☐ Stored spool jobs can be viewed or deleted using Web Image Monitor.
- ☐ The list of spool jobs cannot be viewed from the machine's control panel.

Collate


When printing multiple documents such as handouts for meetings, you can separate sets into order. This function is known as "Collate". Collate stores data transmitted from a computer to the printer memory or hard disk drive. The following are the two types of collate:

∰Important

- ☐ Rotating Collate is not possible when feeding paper from the bypass tray and the one-sheet bypass tray.
- ☐ If jobs containing pages of various sizes are set, Rotating Collate will not work.
- ☐ If Function Upgrade Option type C1800 is not installed, this function cannot be used.


Collate

Printed output is assembled as sets in sequential order.

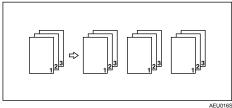

Rotating collate

Every other print set is rotated by 90 degrees \bigcup .

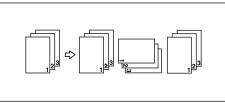

AEU017S

Note

- ☐ You can set Collate in the RPCS printer driver.
- ☐ If Auto Continue occurs on the first set, Collate will be canceled.
- ☐ If forced printing occurs on the first set, Collate will be canceled.
- ☐ If a document with mixed paper sizes or sizes larger than A4, $8^1/_2 \times 11$ is set, it can only be collated, even if Rotating Collate has been selected.
- ☐ When Rotating Collate has been selected, printing speed will be slower than with other collate functions.
- □ When setting Collate in the printer driver settings, make sure that a collate option is not selected in the application's print settings. If a collate option is selected, printing will not be as intended.
- ☐ The Rotating Collate function requires two paper trays containing same size paper but in different orientations.


For information about paper sizes and the number of sets you can use Collate or Rotating Collate with in every option, see "Sort", Copy Reference.

For details about the settings from the printer drivers, see the printer driver Help.

4. Direct Printing from a Digital Camera (PictBridge)

What is PictBridge?

You can connect a PictBridge-compatible digital camera to this machine using a USB cable. This allows you to print photographs taken using the digital camera directly by operating the digital camera.

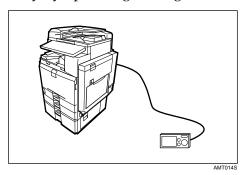

Before you can use this function, the machine requires the following options:

- USB host interface board
- Camera direct print card

Note

- ☐ Check your digital camera is PictBridge-compatible.
- ☐ Up to 999 images can be sent from the digital camera to the machine during one print transaction. If an attempt is made to send more images, an error message is sent to the camera and printing fails.
- ☐ Since printing conditions are specified on the digital camera, specifiable parameters depend on the particular digital camera. For details, see your digital camera's manual.
- \Box This function is compatible with USB 1.1.
- ☐ If Function Upgrade Option type C1800 is not installed, this function cannot be used.


PictBridge Printing

Follow the procedure below to start PictBridge printing on this machine.


∰Important

- ☐ Do not disconnect the USB cable while data is being sent. If you do, printing will fail.
- ☐ The USB host interface board is supplied with a USB cable and a hook onto which you can roll up and hang the cable.
- 1 Attach the hook on the back of the machine near the USB connection slot. Attach the hook where it will not interfere with machine operation and access.
- **2** Check the machine and the digital camera are both switched on.
- Connect a USB cable between the optional USB host interface board installed on the machine and the digital camera.

The Data In indicator on the machine blinks for several seconds and "Pct-Brdg" is displayed on the machine. This indicates the machine recognizes the digital camera as a PictBridge device.

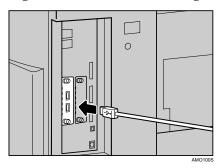

4 Secure the USB cable using the hook.

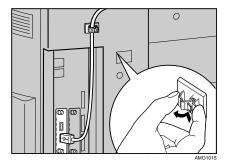

- On your digital camera, select the images you want to print, and specify the printing conditions.
- **6** The machine receives settings from the digital camera and starts printing.

Note

- ☐ Since printing conditions are specified on the digital camera, specifiable parameters depend on the particular digital camera. For details, see the digital camera's manual.
- ☐ Some digital cameras require settings for manual PictBridge operation. For details, see your digital camera's manual.

₽ Reference

To stop data printing, see p.98 "Canceling a Print Job".

What Can Be Done on This Machine

This machine can perform the following functions using its PictBridge feature. The settings available for these functions are as follows:

- Single image printing
- Selected image printing
- All image printing
- Index printing
- Trimming
- Date and file name printing
- Paper size
- Image print size
- Multi-Image-Layout
- Printing quality
- Colour matching
- Paper type specification
- Form printing
- Camera memo printing

- ☐ This machine does not support the following settings:
 - DPOF printing
 - Margin-less printing
- ☐ The setting parameters and their names may vary depending on the digital camera. For details, see your digital camera's manual.

Index Printing

❖ A3 (297 × 420)

Horizontal images × vertical images (in)	Paper orientation
12 × 16	D
16 × 12	D

❖ A4 (210 × 497)

Horizontal images × vertical images (in)	Paper orientation
8 × 12	D
12 × 8	D .

❖ A5 (148 × 210)

Horizontal images × vertical images (in)	Paper orientation
5 × 8	D
8 × 5	D .

! Letter $(8^1/_2 \times 11)$

Horizontal images × vertical images (in)	Paper orientation
8 × 10	D
10 × 8	D

❖ B4 (257 × 367)


Horizontal images \times vertical images (in)	Paper orientation
10 × 14	D
14 × 10	D

Note

- ☐ Index printouts vary depending on the orientation of the paper placed on the specified size tray.
- ☐ Depending on the digital camera, a form feed may be inserted after one set of images belonging to one type ends.
- \square The number of images in each size of paper is fixed.

Trimming


Use this function to print only the inside of the trimming area specified on the digital camera.

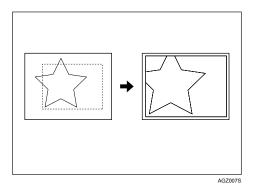

*1 -- Trimming area

Date and File Name Printing

Use this function to print the date and/or file name under the image.

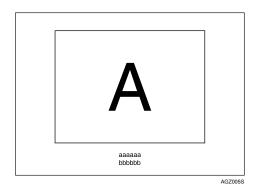

In the above figure, "aaaaa" indicates the file name and "bbbbb" indicates the date.

Paper Size

Use this function to print on paper with the size specified on the digital camera.


Paper size name	Actual size
2L (5" × 7")	178 mm × 127 mm (5 in. × 7 in.)
Postcard	148 mm × 100 mm
100 mm × 150 mm	150 mm × 100 mm
4" × 6"	152.4 mm × 101.6 mm (4 in. × 6 in.)
8" × 10"	254 mm × 203.2 mm (8 in. × 10 in.)
Letter (8 ¹ / ₂ " × 11")	$279.4 \text{ mm} \times 216 \text{ mm} (8^{1}/_{2} \times 11)$
11" × 17"	431.8 mm × 279.4 mm (11in. × 17 in.)
A3	420 mm × 297 mm
A4	297 mm × 210 mm
A5	210 mm × 148 mm
A6	148 mm × 105 mm
B4	364 mm × 257 mm
B5	257 mm × 182 mm
B6	182 mm × 128 mm

𝒜 Note

- \Box Specify Undefined Size for the 2L (5" \times 7"), 100 mm \times 150 mm, 4" \times 6", 8" \times 10", A6, B5, and B6 sizes.
- $\hfill\Box$ For details about specifying undefined sizes, see p.8 "Setting Custom Size Paper".

Image Print Size

Use this function to print images with the size specified on the digital camera.

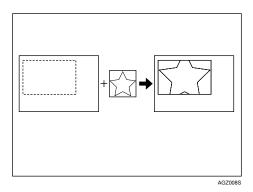

-- indicates the image size specified on the camera.

You can specify the following image print sizes:

❖ Fixed size


- 3.25" × 2.5"
- 5" × 2.5"
- 6" × 4"
- 7" × 5"
- 10" × 8"
- 254 mm × 178 mm
- 110 mm × 74 mm
- 89 mm × 55 mm
- 148 mm × 100 mm
- $8 \text{ cm} \times 6 \text{ cm}$
- $10 \text{ cm} \times 7 \text{ cm}$
- $13 \text{ cm} \times 9 \text{ cm}$
- 15 cm × 10 cm
- 18 cm × 13 cm
- 21 cm × 15 cm
- 24 cm × 18 cm

Note

☐ An error occurs if the specified size is larger than the actual paper size.

Multi-Image-Layout

Use this function to print multiple images on the specified paper.

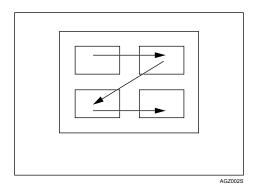

The number of images that can be printed on one page is as follows:

Paper size	Number of images that can be specified
2L (5" × 7")	2, 4, 8, 9
Postcard	2, 4
100 mm × 150 mm	2, 4
4" × 6"	2, 4, 8, 9
8" × 10"	2, 4, 8, 9, 16, 25, 32
Letter $(8^1/_2'' \times 11'')$	2, 4, 8, 9, 16, 25, 32
11" × 17"	2, 4, 8, 9, 16, 25, 32, 49, 64
A3	2, 4, 8, 9, 16, 25, 32, 49, 64
A4	2, 4, 8, 9, 16, 25, 32
A5	2, 4, 8, 9, 16
A6	2, 4, 8
B4	2, 4, 8, 9, 16, 25, 32, 49
B5	2, 4, 8, 9, 16, 25
B6	2, 4, 8, 9

The number and arrangement of images that can be specified are as follows:

Number of images	Vertical images × horizontal images	Paper orientation
2	2 × 1	D
4	2 × 2	D
8	4×2	D
9	3 × 3	D
16	4×4	D
25	5 × 5	D
32	8 × 4	D
36	6 × 6	D
49	7 × 7	D
64	8 × 8	D

Note

- ☐ A form feed may be inserted between images depending on the digital camera in use.
- ☐ Printing in the specified way may not be possible depending on the specification for the number of images to be printed.

Printing Quality

Use this function to print images at the selected printing quality.

If you select **[Default]** or **[Normal]**, the machine prints in normal quality; if you select **[Fine]**, the machine prints in the best quality.

Colour Matching

Use this function to optimize colours when printing images.

If you select **[Default]** or **[OFF]**, the machine prioritizes gradation for colour matching, if you select **[ON]**, the machine prioritizes saturation.

Paper type Specification


This function sends the machine's paper type information to the digital camera. The names of paper types displayed on the digital camera's screen are different to the names displayed on the machine. Use the table below to match the paper types.

To display a paper type name on the digital camera's screen, use the machine's control panel to set the paper type of the machine correctly.

The paper type detected by the digital camera	The paper type of the machine
Default	All type of paper
Plain Paper	Plain or recycled paper
Photo Paper	Inkjet plain paper, Inkjet postcards

Form Printing

Use this function to print images in a predetermined layout format.

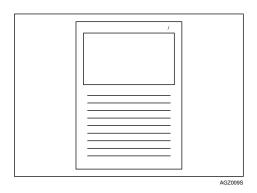

Camera Memo Printing

Use this function to print text data together with an image if it is attached to the image.

Exiting PictBridge

Follow the procedure below to quit the PictBridge mode.

∰Important

- ☐ Do not disconnect the USB cable while data is being sent to the machine. If you do, printing will fail.
- 1 Check the control panel of this machine is displaying the "Ready" state.
- **2** Disconnect the USB cable from the machine.

Other Reference Information

For further details about printing on this machine, see the following:

For details about paper size, paper type, or tray paper settings, see About This Machine or General Settings Guide.

5. Appendix

Specifications

This section contains the machine's electrical and hardware specifications, including information about its options.

Component	Specifications
Resolution	1200 × 1200 dpi (glossy paper, thick glossy paper)
	600 × 600 dpi
	300 × 300 dpi
Printing speed	• Colour:
	8 ppm
	B & W: 18 ppm
	$(A4 \mathbb{D}, 8^{1}/_{2} \times 11 \mathbb{D} \text{ plain paper})$
Interface	Standard:
Interface	Ethernet interface (100BASE-TX / 10BASE-T)
	USB 2.0 interface
	Option:
	IEEE 1284 parallel interface
	Use a standard 36-pin printer cable not longer than 3 meters (10 feet).
	IEEE 802.11b wireless LAN interface
	Bluetooth interface
Network protocol	IPv4, IPv6, LPR, RSH, RCP, DIPRINT, FTP, IPP, IPX/SPX(NetWare), SMB, IPP-SSL, AppleTalk
Printer language	Standard: PCL 6/5c, RPCS
	Option: PostScript 3, PDF, PictBridge
Fonts	PCL 6/5c:
	Monotype Imaging 45 Scalable fonts, 13 International fonts, and 1 Bitmap font.
	PostScript 3:
	136 fonts (Type 2:24, Type 14:112)
Memory	384 MB (supports up to 640 MB)
Hard disk	Storage capacity: 40 GB
USB Interface (Standard)	Supported Operating System: Windows 2000 / XP / Vista, Windows Server 2003 / 2003 R2, Mac OS 9.2.2, Mac OS 10.3.3 or later
	Transmission spec. USB 2.0 Standard
	Connectable Device: Devices corresponding to USB 2.0 Standard

Note

- ☐ Under Mac OS X, printing over an IPv6 network is not supported.
- ☐ When using Mac OS, use only the standard USB interface. The optional USB interface board is not supported.
- ☐ When using the USB Interface (Standard) with Mac OS 9.2.2, only USB 1.1 is supported.

For details about options, see "Options", About This Machine.

Printer Features Menu

The following explains settings and meanings of functions on Printer Feature. Printer Feature screen appears when you press the **[User Tools/Counter]** key.

❖ List/Test Print

Menu	Description
Multiple Lists	You can print the configuration page and error log.
Config. Page	You can print the machine's current configuration values.
Error Log	You can print error logs listing all errors that occurred during printing.
Menu List	You can print a Menu List showing the machine's function menus.
PCL Config./Font Page	You can print the current configuration and installed PCL font list.
PS Config./Font Page	You can print the current configuration and installed PostScript font list.
PDF Config./Font Page	You can print the current configuration and installed PDF font list.
	This menu can be selected only when the optional PostScript 3 unit is installed.
Hex Dump	You can print in the Hex Dump mode.

❖ Maintenance

Menu	Description
Menu Protect	This function lets you protect menu settings from accidental change. It makes it impossible to change menu settings with normal procedures unless you perform the required key operations.
	In a network environment, only administrators can make changes to menu settings.
List/Test Print Lock	You can lock the [List/Test Print] menu.
Delete All Temporary Jobs	You can delete all print jobs temporarily stored in the machine.
Delete All Stored Jobs	You can delete to delete all print jobs stored in the machine.
Image Density Adjustment	You can adjust the image density.

❖ System

Menu	Description
Print Error Report	You can print an error report when a printer or memory error occurs.
Auto Continue	You can select this to enable Auto Continue. When it is On, printing continues after a system error occurs.
Memory Overflow	Select this to have a memory overflow error report printed.
Auto Delete Temporary Jobs	You can select to automatically delete print jobs temporarily stored in the machine.
Auto Delete Stored Jobs	You can select to automatically delete print jobs stored in the machine.
Memory Usage	You can select the amount of memory used in Font Priority or Frame Priority, according to paper size or resolution.
Duplex	You can select to have print on both sides of each page.
Copies	You can specify the number of print sets. This setting is disabled if the number of pages to print has been specified with the printer driver or another command.
Blank Page Print	You can select whether or not to print blank pages.
Printer Language	You can specify the printer language.
Sub Paper Size	You can enable the Auto Substitute Paper Size (A4, LT) feature.
Page Size	You can select the default paper size.
Letterhead Setting	You can rotate original images when printing. When printing, original images are always rotated by 180 degrees. Therefore, output might not be as expected when printing onto letterhead or preprinted paper requiring orientation. Using this function, you can specify image rotation.
Bypass Tray Priority	You can specify which of the two options, (Printer) Driver / Command or Machine Settings, has priority for determining the paper size for the bypass tray.
Edge to Edge Print	You can select whether or not to print on the entire sheet.
Default Printer Lang.	You can set the default printer language if the machine cannot find the printer language automatically.
Tray Switching	You can set to switch the paper tray.
RAM Disk	You can change the settings of the RAM disk.

❖ Host Interface

Menu	Description
I/O Buffer	You can set the size of the I/O Buffer. Normally it is not necessary to change this setting.
I/O Timeout	You can set how many seconds the machine should wait before ending a print job. If data from another port usually arrives in the middle of a print job, you should increase this timeout period.

❖ PCL Menu

Menu	Description
Orientation	You can set the page orientation.
Form Lines	You can set the number of lines per page.
Font Source	You can set the storage location of the default font.
Font Number	You can set the ID of the default font you want to use.
Point Size	You can set the point size you want to use for the selected font.
Font Pitch	You can set the number of characters per inch for the selected font.
Symbol Set	You can specify the set of print characters for the selected font.
Courier Font	You can select a courier font type.
Ext. A4 Width	You can extend the printing area width when printing on A4 sheet with PCL.
Append CR to LF	When set to On, a carriage return will follow each line feed: CR=CR, LF=CR-LF, FF=CR-FF.
Resolution	You can set the print resolution in dots per inch.

❖ PS Menu (optional)

Menu	Description
Data Format	You can select a data format.
Resolution	You can set the print resolution in dots per inch.
Colour Setting	You can make an RGB setting.
Colour Profile	You can set the colour profile.

❖ PDF Menu (optional)

Menu	Description
Change PDF Password	You can set the password for the PDF file executing PDF Direct Print.
PDF Group Password	You can set the group password already specified with DeskTopBinder Lite.
Resolution	You can set the print resolution in dots per inch.
Colour Setting	You can make an RGB setting.
Colour Profile	You can set the colour profile.

Note

- ☐ Depending on which optional units you have installed or the printer language you have selected, some options are not displayed.
- ☐ Depending on the security settings, you might not be able to set certain options.
- ☐ If you are using the machine that does not have Function Upgrade Option type C1800 installed, some options are not displayed.

₽ Reference

For details about the Printer Features Menu, see "Printer Features", General Settings Guide.

For more information about copier features and system settings, see Copy Reference and General Settings Guide.

INDEX

В	l
Black and White Printing, 65 Bypass tray, 4 setting the paper size, 7	IEEE 1284 parallel interface, 119 IEEE 802.11b wireless LAN interface, 119 Installing the printer driver Quick Install, 24
<u>C</u>	Installing the Printer Driver Using USB, 41 Interface, 119
Canceling a job Windows, 98 Collate, 103 Control keys, 3 Control panel hold print, 86 locked print, 82 printer features, 121	L List Per User ID printing all print jobs, 94 printing the selected print job, 93 Locked print deleting, 85
sample print, 79	printing, 83
stored print, 89 Custom size paper, 8, 16	М
printing, bypass tray, 4 D	Manuals for This Machine, i Memory, 119
Direct Printing from a Digital Camera, 105	N
Display panel, 2	Network cable, 119
<u>E</u> _	Network protocol, 119
Envelope 10	0
printing, bypass tray, 10 Error log, 100	OHP transparencies, 12
F	printing, bypass tray, 18 One-Sheet bypass tray
Font Manager 2000, 50 Fonts, 119	setting, 12 setting the paper size, 15 Operating system, 119
G	
Glossy Paper, 12	
Н	
Hard disk, 119 Hold print deleting, 88 printing, 86 How to Read This Manual, 1	

PageMaker, 51
PDF Direct Print, 67
PictBridge, 105
Camera Memo Printing, 115
Colour Matching, 114
Date and File Name Printing, 110
Exiting PictBridge, 116
Form Printing, 115
Image Print Size, 112
Index Printing, 109
Other Reference Information, 117
Paper Size, 111
Paper type specification, 115
PictBridge Printing,106
Printing Quality, 114
Print Number of Pages, 113
Trimming, 110
What Can Be Done on This Machine, 108
What is PictBridge?, 105
Printer Features Menu, 121
Printer language, 119
Printing a PDF file directly
PDF direct print,67
Printing Method
PDF direct print, 67
Printing speed, 119
Printing with Parallel Connection
Windows 2000, 45
Print Job List, 76
R
Resolution, 119
s
Sample print
deleting, 81
printing, 80
Specifications, 119
Spool printing, 102
Stored print Stored print
deleting, 92
printing, 90
<i>[</i>
<u>T</u>
Thick Glossy Paper, 12
Thick Paper
printing, bypass tray, 10, 18

```
Unauthorized copy control, 71

data security for copying, 72

mask type, 74

Using commands, 70
```

W

Windows
canceling a job, 98
Windows 2000
printer properties, PCL, 53
printer properties, RPCS, 59
Windows Server 2003 / 2003 R2
printer properties, PCL, 55
printer properties, RPCS, 61
Windows Vista
printer properties, PCL, 63
printer properties, RPCS, 57
Windows Vista - USB, 44
Windows XP
printer properties, PCL, 55
printer properties, RPCS, 61

(GB)

Trademarks

Adobe, Acrobat, Acrobat Reader, PostScript, and Reader are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.

AppleTalk and Mac OS are registered trademarks of Apple Inc., registered in the U.S. and other countries.

Microsoft®, Windows®, Windows Server®, and Windows VistaTM are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

Monotype is a registered trademark of Monotype Imaging, Inc.

NetWare is a registered trademark of Novell, Inc.

PCL® is a registered trademark of Hewlett-Packard Company.

PictBridge is a trademark.

The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Ricoh Company, Ltd. is under license.

UNIX is a registered trademark in the United States and other countries, licensed exclusively through X/Open Company Limited.

Other product names used herein are for identification purposes only and might be trademarks of their respective companies. We disclaim any and all rights to those marks.

The proper names of the Windows operating systems are as follows:

• The product name of Windows 2000 are as follows:

Microsoft® Windows® 2000 Professional

Microsoft® Windows® 2000 Server

Microsoft® Windows® 2000 Advanced Server

• The product name of Windows XP are as follows:

Microsoft® Windows® XP Home Edition

Microsoft® Windows® XP Professional

Microsoft® Windows® XP Media Center Edition

Microsoft® Windows® XP Tablet PC Edition

• The product names of Windows Vista are as follows:

Microsoft® Windows VistaTM Ultimate

Microsoft® Windows VistaTM Enterprise

Microsoft® Windows VistaTM Business

Microsoft® Windows VistaTM Home Premium

Microsoft® Windows Vista™ Home Basic

• The product names of Windows Server 2003 are as follows:

Microsoft® Windows Server® 2003 Standard Edition

Microsoft® Windows Server® 2003 Enterprise Edition

Microsoft® Windows Server® 2003 Web Edition

Microsoft® Windows Server® 2003 Datacenter Edition

The product names of Windows Server 2003 R2 are as follows:

Microsoft® Windows Server® 2003 R2 Standard Edition

Microsoft® Windows Server® 2003 R2 Enterprise Edition

Microsoft® Windows Server® 2003 R2 Datacenter Edition



