

Operating Instructions Scanner Reference



- 1 Sending Scan Files by E-mail
- 2 Sending Scan Files by Scan to Folder
- 3 Delivering Scan Files
- 4 Using the Network TWAIN Scanner Function
- 5 Various Scan Settings
- 6 Appendix

Introduction

This manual contains detailed instructions and notes on the operation and use of this machine. For your safety and benefit, read this manual carefully before using the machine. Keep this manual in a handy place for quick reference.

Important

Contents of this manual are subject to change without prior notice. In no event will the company be liable for direct, indirect, special, incidental, or consequential damages as a result of handling or operating the machine.

Notes:

Some illustrations in this manual might be slightly different from the machine.

Certain options might not be available in some countries. For details, please contact your local dealer.

Caution:

Use of controls or adjustments or performance of procedures other than those specified in this manual might result in hazardous radiation exposure.

Two kinds of size notation are employed in this manual. With this machine refer to the metric version.

Manuals for This Machine

Refer to the manuals that are relevant to what you want to do with the machine.

∰Important

Media differ according to man	ual
-------------------------------	-----

☐ The printed and electronic versions of a manual have the same contents.

☐ Adobe Acrobat Reader/Adobe Reader must be installed in order to view the manuals as PDF files.

☐ Depending on which country you are in, there may also be html manuals. To view these manuals, a Web browser must be installed.

About This Machine

Be sure to read the Safety Information in this manual before using the machine.

This manual provides an introduction to the functions of the machine. It also explains the control panel, preparation procedures for using the machine, how to enter text, and how to install the CD-ROMs provided.

Troubleshooting

Provides a guide to solving common problems, and explains how to replace paper, print cartridges, and other consumables.

Copy Reference

Explains Copier functions and operations. Also refer to this manual for explanations on how to place originals.

Facsimile Reference

Explains Facsimile functions and operations.

Printer Reference

Explains Printer functions and operations.

Scanner Reference

Explains Scanner functions and operations.

Network Guide

Explains how to configure and operate the machine in a network environment, and use the software provided.

General Settings Guide

Explains User Tools settings, and Address Book procedures such as registering fax numbers, e-mail addresses, and user codes. Also refer to this manual for explanations on how to connect the machine.

❖ Security Reference

This manual is for administrators of the machine. It explains security functions that you can use to prevent unauthorized use of the machine, data tampering, or information leakage. For enhanced security, we recommend that you first make the following settings:

- Install the Device Certificate.
- Enable SSL(Secure Sockets Layer) Encryption.
- Change the user name and password of the administrator using Web Image Monitor.

For details, see "Setting Up the Machine", Security Reference.

Be sure to read this manual when setting the enhanced security functions, or user and administrator authentication.

❖ PostScript 3 Supplement

Explains how to set up and use PostScript 3.

❖ UNIX Supplement

For "UNIX Supplement", please visit our Web site or consult an authorized dealer.

This manual includes descriptions of functions and settings that might not be available on this machine.

❖ Information

Contains general notes on the machine, and information about the trademarks of product names used in the manuals.

Other manuals

- Quick Guide
- Manuals for DeskTopBinder Lite
 - DeskTopBinder Lite Setup Guide
 - DeskTopBinder Introduction Guide
 - Auto Document Link Guide

Note

- ☐ Manuals provided are specific to machine types.
- ☐ The following software products are referred to use general names:

Product name	General name
DeskTopBinder Lite and DeskTopBinder Professional *1	DeskTopBinder
ScanRouter EX Professional *1 and ScanRouter EX Enterprise *1	the ScanRouter delivery software

^{*1}Optional

TABLE OF CONTENTS

Manuals for This Machine	i
How to Read This Manual	1
Symbols	1
Names of Major Options	1
About the Scanner Functions	2
Display	
Reading the Display and Using Keys	
Confirmation Displays	
1. Sending Scan Files by E-mail	
Before Sending Scan Files by E-mail	7
Outline of Sending Scan Files by E-mail	
Preparation for Sending by E-mail	8
Registering E-mail Addresses in the Address Book	
E-mail Screen	10
Basic Procedure for Sending E-mail	12
Specifying E-mail Destinations	14
Selecting a Destination Registered to a Quick Dial Key	
Selecting a Destination Registered in the Machine's Address Book	
Manual Entry of an E-mail Address	
Searching for a Destination in the LDAP Server	
Registering a Manually-Entered E-mail Address in the Address Book	
Specifying the Sender	
Selecting a Sender Registered to a Quick Dial KeySelecting a Sender from the List	
Using a Registration Number to Specify a Sender Name	
Searching for a Sender by Name	
Searching for a Sender by E-mail Address	
Setting the Return Receipt Function	
Specifying the Subject	
2. Sending Scan Files by Scan to Folder	
Before Sending Scan Files by Scan to Folder	
Outline of Sending Scan Files by Scan to Folder	
Preparation for Sending by Scan to Folder	
Registering Destination Folders in the Address BookScan to Folder Screen	
Basic Procedure for Sending by Scan to Folder	
Specifying Scan to Folder Destinations	
Selecting a Destination Registered to a Quick Dial Key	
Selecting a Destination Registered in the Machine's Address Book	
Sending Scan Files to a Shared Folder on the Network	
Sending Scan Files to NetWare Server	
Registering the Path to the Selected Destination in the Address Book	

3. Delivering Scan Files

Before Delivering Scan Files	
Delivering Scan Files	
Preparation for Delivering	
Installing DeskTopBinder Lite from Provided CD-ROM	
Network Delivery Scanner Screen	
Basic Delivery Procedure	
Specifying Delivery Destinations	
Selecting a Destination Using a Quick Dial Key	
Selecting a Destination Registered in the Destination List of the Delivery Se	rver81
4. Using the Network TWAIN Scanner Function	
When Using as a TWAIN Scanner	
Outline of the TWAIN Scanner Function	
Preparation for Using the Network TWAIN Scanner	
Installing TWAIN Driver from Provided CD-ROM	
Basic Procedure for Scanning Files Using TWAIN Scanner	92
5. Various Scan Settings	
Specifying Send Options	
Resolution	
Original Orientation	
Original Setting	
Scan Size	
Stamp	
File Type	
Notes About and Limitations of File Types	
PDF Security Encryption	
PDF Security Permissions	
Selecting Original Type	114
Adjusting Image Density	
Scan Settings When Using Twain Scanner	
Setting Original Orientation on the TWAIN Scanner	
When Scanning Originals of Mixed Sizes Using TWAIN Scanner	
	120
6. Appendix	
Relationship between Resolution and Scan Size	
When Using the E-mail, Folder Sending, or Network Delivery Functions	
When Using as a Network TWAIN Scanner	
Software Supplied on CD-ROM	
Auto-Run Program	
TWAIN Driver	
DeskTopBinder Lite	
Values of Various Set Items for Transmission/Delivery Function	
Transmission	
The Network Delivery Function	
Scanner Features	
Specifications	133
INDEX	125

How to Read This Manual

This section describes how to read this manual through symbols used.

Symbols

This manual uses the following symbols:

MARNING:

Indicates important safety notes.

Ignoring these notes could result in serious injury or death. Be sure to read these notes. They can be found in the "Safety Information" section of About This Machine.

CAUTION:

Indicates important safety notes.

Ignoring these notes could result in moderate or minor injury, or damage to the machine or to property. Be sure to read these notes. They can be found in the "Safety Information" section of About This Machine.

#Important

Indicates points to pay attention to when using the machine, and explanations of likely causes of paper misfeeds, damage to originals, or loss of data. Be sure to read these explanations.

Note

Indicates supplementary explanations of the machine's functions, and instructions on resolving user errors.

This symbol is located at the end of sections. It indicates where you can find further relevant information.

[]

Indicates the names of keys that appear on the machine's display panel.

Indicates the names of keys on the machine's control panel.

Names of Major Options

Major options of this machine are referred to as follows in this manual:

- Auto Document Feeder → ADF
- Auto Document Feeder capable of scanning both sides of a sheet → ARDF

About the Scanner Functions

This section describes functions you can use in the scanner mode.

You can use the scanner functions to send scan files to computers or scan originals from a computer using the TWAIN driver.

For details about each function, see respective chapters.

Sending scanned files (Network Scanner)

Scan files can be sent to a computer, and you can specify the format of a scan file according to how the file will be used.

The following functions are available only when Function Upgrade Option is installed:

• Sending by e-mail

You can send scan files to a specified e-mail addresses. For details, see chapter 1 "Sending Scan Files by E-mail".

• Sending to folders

Scan files can be stored in shared network folders, or on FTP or Netware servers.

For details, see chapter 2 "Sending Scan Files by Scan to Folder".

Delivering

You can deliver scan files using a delivery server.

For details, see chapter 3 "Delivering Scan Files".

Scanning originals from a client computer (TWAIN Scanner)

You can use the TWAIN driver to scan files from a network or directly connected computer.

For details, see chapter 4 "Using the Network TWAIN Scanner Function".

p.7 "Sending Scan Files by E-mail"

p.41 "Sending Scan Files by Scan to Folder"

p.71 "Delivering Scan Files"

p.87 "Using the Network TWAIN Scanner Function"

Display

This section explains the display, keys, and the two confirmation displays - Check Destination and File Status.

You can find explanations about the E-mail screen, Scan to Folder screen, or Network Delivery Scanner screen in this manual. For details, see "E-mail Screen", "Scan to Folder Screen", and "Network Delivery Scanner Screen".


p.10 "E-mail Screen"

p.46 "Scan to Folder Screen"

p.76 "Network Delivery Scanner Screen"

Reading the Display and Using Keys

This section explains how to read the display and use the selection keys.

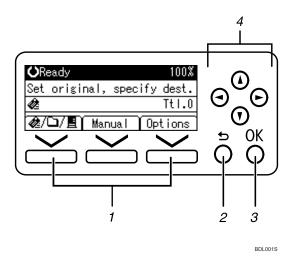

1. Selection keys

Press to select an item displayed at the bottom of the screen.

Example: the standby screen

- When the instruction "press [ዺ/□/ቜ] to switch to the E-mail screen" is given in this manual, press the left selection key.
- When the instruction "press [Manual]" is given in this manual, press the center selection key.
- When the instruction "press [Options]" is given in this manual, press the right selection key.

2. [Escape] key

Press to cancel operation or return to the preceding display.

3. [OK] key

Press to specify a function on the display or determine a selected function.

4. Scroll key

Press to move the cursor in each direction, step by step. When the [♠], [♥], [▶], or [♠] key appears in this manual, press the scroll key of the same direction.

Confirmation Displays

This section explains the two confirmation displays - Check Dest. and File Status.


Check destination

This section explains about displayed items and how to display the Check Dest. screen.

Use the Check Dest. screen to check the details of e-mail, Scan to folder, or delivery destinations.

Pressing the [Check Destination] key switches the screen from the initial scanner screen to the Check Dest. screen.

Check Dest.

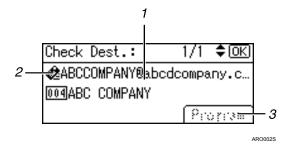

1. Destination

Displays the transmission or delivery destinations.

When multiple destinations are specified, you can change the display by pressing the $[\blacktriangle]$ or $[\blacktriangledown]$ key.

2. Transmission function icon

Displays the icon of the transmission function (e-mail, Scan to Folder, or delivery function) in use.

3. [Program]


For e-mail or Scan to Folder, if you press **[Program]**, the destination that is entered directly or specified by browsing the server can be registered in the machine's address book.

File status

This section explains the items that appear on the screen and how to display File Status.

Use the File Status screen to check e-mail, Scan to Folder, and delivery results. Press the **[Job Information]** key to display File Status.

File Status

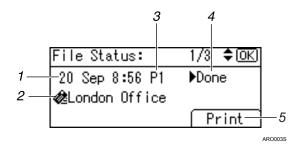

1. Date / Time

Displays the date and time the machine sent a transmission request, or the date and time "Done", "Error", or "Canceled" was confirmed.

2. Destination

The destination is displayed with the icon of the transmission function (e-mail, Scan to Folder, or delivery function).

If you have selected multiple destinations, the first selected destination is displayed. Other destinations appear as "+X" (X indicates the number of destinations.) when sending files by e-mail or delivering them.

3. Number of scanned pages

Displays the number of scanned pages.

4. Status

One of the following transmission status is displayed: "▶Done", "▶Sending", "▶Waiting", "▶Error" or "▶Canceled".

5. [Print]

Press to print transmission results.

∅ Note

☐ Depending on the security settings, some transmission results might not appear in File Status.

1. Sending Scan Files by E-mail

You can attach scan files to e-mails and send them via connections such as LAN and the Internet.

Before Sending Scan Files by E-mail


This section explains the necessary preparations and the procedure for sending scan files by e-mail.

∰Important

☐ This function is available only when Function Upgrade Option is installed.

Outline of Sending Scan Files by E-mail

This section outlines the function for sending scan files by e-mail.

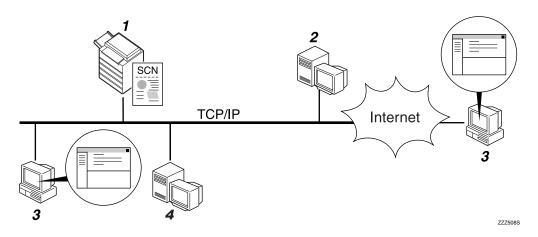

1. This machine

A scan file can be attached to an e-mail and sent to a mail server.

2. SMTP server

You need to have an access to an e-mail server that supports SMTP (Simple Mail Transfer Protocol), to send scan files by e-mail. However, it is not essential to have an e-mail server inside the LAN where this machine belongs. It transfers a received e-mail to a specified destination through a LAN or the Internet.

3. Client computer

Use e-mail client software to receive email messages and scan file attachments that are generated by this machine.

4. LDAP server

Use this server for administering e-mail accounts, searching the network, and authenticating the computers that access the machine. Using the LDAP server, you can search for destinations from the machine.

Preparation for Sending by E-mail

This section explains the preparation and settings for sending scan files by email and where you can find more information about them.

To send scanned files by e-mail, you must first perform the following:

- Check the machine is properly connected to the network
- Configure the network settings in [System Settings]
- Configure the necessary settings in [Scanner Features]

Check the machine is properly connected to the network

Check this machine is properly connected to the network.

For details about how to connect this machine to a network, see "Connecting to the Interfaces", General Settings Guide.

Configure the network settings in [System Settings]

Configure the network settings in **[System Settings]** according to your environment and how you will be using the machine.

The following procedure explains connecting this machine to an IPv4 network using the Ethernet cable.

Note that the settings you must configure will vary depending on your operating environment. For details about network settings and configuration procedures, see "Settings Required to Use E-mail Function", General Settings Guide.

- ① Press the [User Tools/Counter] key, select [System Settings], and then press the [OK] key.
- ② Select [Interface Settings], and then press the [OK] key.
- ③ Select [Network], and then press the [OK] key.
- 4 Select [Machine IPv4 Address] to specify the machine's IPv4 address, and press the [OK] key.

To specify a static IPv4 address for this machine, select **[Specify]**, and then press the left selection key to select **[IP Add.]**.

To obtain an IPv4 address from a DHCP server automatically for this machine, select [Auto-Obtain (DHCP)], and then press the [OK] key.

- Select [IPv4 Gateway Address] to make necessary settings, and then press the [OK] key.
- Select [Effective Protocol], select [IPv4], and then select [Effective]. Then press the [OK] key.
- ② Select [LAN Type] and [Ethernet], and then press the [OK] key.
- Select [File Transfer], select [SMTP Server], and then press the [OK] key.
- Select [Server Name], enter the SMTP server host name or IPv4 address, and then press the [OK] key.

1

Configure the necessary settings in [Scanner Features]

Using **[Scanner Features]**, you can make or change various settings related to the scanner function, such as compressing scan data or viewing the scanner journal. Configure the scanner settings according to your environment and how you will be using the machine.

This section explains how to display the Scanner Features screen. For details about the settings screen, see "Scanner Features", General Settings Guide.

- ① Press the [User Tools/Counter] key.
- ② Select [Scanner Features], and then press the [OK] key. The Scanner Features screen appears. Select [Scan Settings], [Destination List Settings], [Send Settings], or [Administrator Tools], and then configure the relevant settings.

∅ Note

☐ The settings you must configure in **[System Settings]** vary depending on your network environment. For details about network settings, see "Connecting the Machine", General Settings Guide.

Registering E-mail Addresses in the Address Book

You can register frequently used e-mail addresses to the address book.


You can register frequently used e-mail addresses in the address book. Register e-mail addresses in **[Address Book Management]** under **[Administrator Tools]** from **[System Settings]**. Addresses can also be registered as groups.

Note


- ☐ For details about registering e-mail addresses in the address book, see "Registering Addresses and Users for Facsimile/Scanner Functions", General Settings Guide.
- ☐ You can also register e-mail addresses in the address book using Web Image Monitor or SmartDeviceMonitor for Admin. For details about how to install these applications, see "Monitoring and Configuring the Printer", Network Guide. For details about registering addresses in the address book, see Help of respective applications.
- ☐ Depending on the machine type, you may not be able to use the machine when it is updating the address book using CSV files (retrieved using Smart-DeviceMonitor for Admin) that contain user codes.

This section explains the screen layout when sending scan files by e-mail.


❖ Main screen

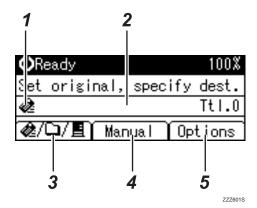

When a destination is entered manually

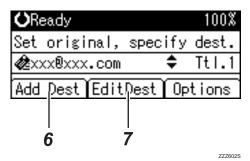

When a group is selected for destination

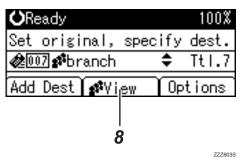

1

1

1. E-mail icon

Indicates that the E-mail screen is displayed.

2. Destination field

Displays a selected destination. If multiple destinations are selected, press the [▲] or [▼] key to display the destinations in the order they were selected. To check the selected destination, press the [Check Destination] key.

3. E-mail **②**/ Scan to Folder□ / Network Delivery Scanner ■

Press to switch between screens. You can also use this key to switch between the Email and Scan to Folder functions when sending the same file to both e-mail and Scan to Folder destinations at the same time.

4. [Manual]

When specifying a destination that is not registered, press [Manual], and then enter the e-mail address of the destination using the Quick Dial keys.

5. [Options]

Press to make the scan settings and specify formats of files you want to send.

6. [Add Dest]

When selecting multiple destinations after a manual entry of an e-mail address, press [Add Dest], and then enter the e-mail address of the destination.

7. [EditDest]

When changing an e-mail address that has been entered, press [EditDest], and then enter the new e-mail address.

8. [View]

Press to check the addresses registered in a group.


Basic Procedure for Sending E-mail

This section describes the basic operation for sending scan files by e-mail.

1 Make sure that no previous settings remain.


If a previous setting remains, press the [Clear Modes] key.

If the Network Delivery Scanner or Scan to Folder screen is displayed, press [❷/□/≛] to switch to the E-mail screen.

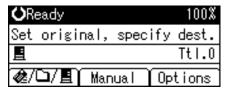


- Place originals.
- If necessary, select the original type.
 For details, see "Selecting Original Type".
- **5** If necessary, specify the scanning density. For details, see "Adjusting Image Density".
- **6** Select the destination.

You can specify multiple destinations. For details, see "Specifying E-mail Destinations".

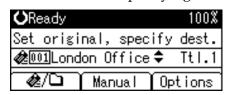

Press [Options], select [Sender's Name], and then specify the e-mail sender. For details, see "Specifying the Sender".

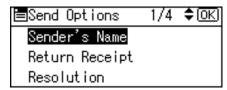

If necessary, select [Return Receipt] under [Options] to make settings for the Return Receipt function.

For details, see "Setting the Return Receipt Function".

If necessary, select [Attach Subject] under [Options] to specify the e-mail subject. For details, see "Specifying the Subject".

If necessary, specify the resolution and orientation of the original under [Options].

For details, see "Specifying Send Options".

Press the [Start] key.

Scanning starts.

You must press the [#] key to send scan files that are scanned from the exposure glass.

Scan files that are scanned from the ADF/ARDF are sent immediately.

If you still have originals to send, place them on the machine, and then press the [Start] key.

Repeat this step until all originals are scanned.

After all originals are scanned, press the [#] key.

Transmission starts.

Note

- ☐ If you have selected two or more destinations, the destinations can be made to appear one by one by pressing the [▲] or [▼] key.
- ☐ To cancel a selected destination, display the destination in the destination field, and then press the [Clear/Stop] key.
- ☐ In **[System Settings]**, you can specify the administrator's e-mail address as the default sender name. This lets you send e-mail without entering anything for **[Sender's Name]**. For details, see "File Transfer", General Settings Guide.
- ☐ Depending on the security setting, the logged-on user may be specified as **[Sender's Name]**.
- ☐ If you press the [Check Destination] key, the initial scanner screen switches to the Check Dest. screen. You can use the Check Dest. screen to check the details of the selected destinations. For details, see "Check destination".
- ☐ To cancel scanning, press the [Clear/Stop] key.

- p.114 "Selecting Original Type"
- p.116 "Adjusting Image Density"
- p.14 "Specifying E-mail Destinations"
- p.28 "Specifying the Sender"
- p.38 "Setting the Return Receipt Function"
- p.39 "Specifying the Subject"
- p.95 "Specifying Send Options"
- p.4 "Check destination"

Specifying E-mail Destinations

This section explains how to specify e-mail destinations.

You can specify e-mail destinations by any of the following methods:

- Select a destination registered to a Quick Dial key
- · Select a destination from the machine's address book
- Enter an e-mail address manually
- Search the LDAP server for a destination and select it


Selecting a Destination Registered to a Quick Dial Key

This section explains how to select a destination registered to a Quick Dial key.

For details about how to register an e-mail destination to a Quick Dial key, see "Registering Addresses and Users for Facsimile/Scanner Functions", General Settings Guide.

1 Press the Quick Dial key to which the destination is registered.

Repeat this step to add more destinations.

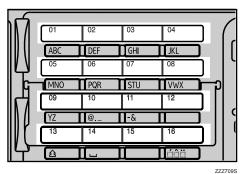

The illustration is an example. The actual appearance may be different.

1

1

Selecting a Destination Registered in the Machine's Address Book

This section explains how to select a destination from the machine's address book.

∰Important

☐ To use this function, you must register destinations in [System Settings] in advance. For details, see "Registering Addresses and Users for Facsimile/Scanner Functions", General Settings Guide.


There are four methods of selecting a destination that is registered in the machine's address book:

- Select a destination from the list
- Enter the destination's registration number
- Search for a destination by name
- Search for a destination by e-mail address

Selecting a destination from a list

Use the following procedure to select a destination from the list.


Press the [Search Destination] key.

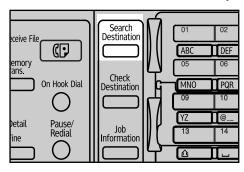

ZZZ711

The illustration is an example. The actual appearance may be different.

Press the [▲] or [▼] key to select [Display Destination List], and then press the [OK] key.

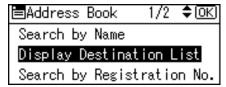


Press the [A] or [V] key to select the destination from the list, and then press the [V] key.



The check box on the left side of the selected destination is selected. Repeat this step to add more destinations.

Press the [OK] key.

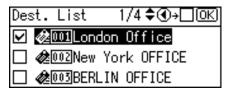


Note

- ☐ If under [System Settings], [LDAP Search] is set to [On], a screen to select a search object appears when you press the [Search Destination] key. On the screen, select [Search Address Book], and then press the [OK] key.
- ☐ To cancel a selected destination, press the [♠] or [▼] key to select the target destination, and then press the [♠] key.
- ☐ Depending on the security settings, some destinations may not appear in the destination list.

Using a registration number to select a destination

Select the destination from the machine's address book using its registration number.

Press the [Search Destination] key.

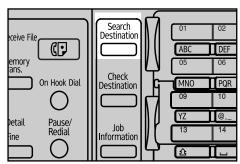


ZZZ711S

The illustration is an example. The actual appearance may be different.

1


Press the [▲] or [▼] key to select [Search by Registration No.], and then press the [OK] key.

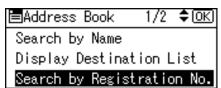


Use the number keys to enter the three-digit number assigned to the destination, and then press the [OK] key.

Example: To enter 003

Press the [3] key, and then press the [0K] key.

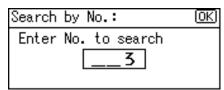


4 Press the [▶] key.

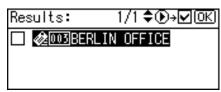

The check box on the left side of the selected destination is selected.

Press the [OK] key.

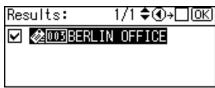


Note

☐ If under [System Settings], [LDAP Search] is set to [On], a screen to select a search object appears when you press the [Search Destination] key. On the screen, select [Search Address Book], and then press the [OK] key.

Searching for a destination by name

Use the following procedure to search by name for a destination in the machine's address book.


1 Press the [Search Destination] key.

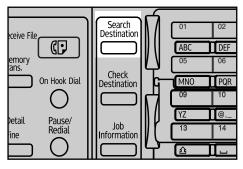


ZZZ711S

The illustration is an example. The actual appearance may be different.

2 Select [Search by Name], and then press the [OK] key.

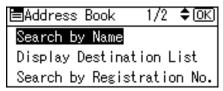


Enter the beginning of the destination name, and then press the [OK] key twice.

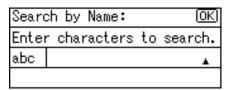

Destinations that match the search conditions are displayed.

Press the [▲] or [▼] key to select the destination, and then press the [▶] key.

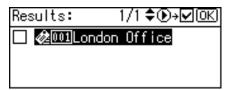


The check box on the left side of the selected destination is selected.

L

1

Press the [OK] key.

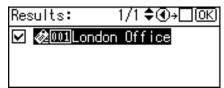


Note

- ☐ Up to 100 destinations can be displayed as search results.
- ☐ If under [System Settings], [LDAP Search] is set to [On], a screen to select a search object appears when you press the [Search Destination] key. On the screen, select [Search Address Book], and then press the [OK] key.
- □ To cancel a selected destination, press the [♠] or [▼] key to select the target destination, and then press the [♠] key.

Searching for a destination by e-mail address

Use the following procedure to search by e-mail address for a destination in the machine's address book.


Press the [Search Destination] key.

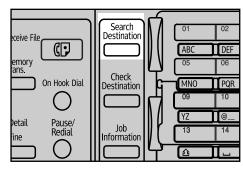


ZZZ711

The illustration is an example. The actual appearance may be different.

Press the [▲] or [▼] key to select [Search by E-mail Address], and then press the [OK] key.

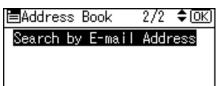


Enter the beginning of the e-mail address, and then press the [OK] key twice.

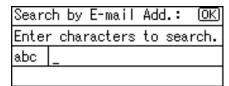


Destinations that match the search conditions are displayed.

Press the [▲] or [▼] key to select the destination, and then press the [▶] key.

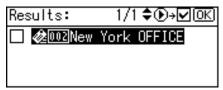

The check box on the left side of the selected destination is selected.

Press the [OK] key.

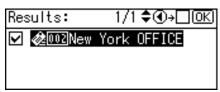


Note

- ☐ If under [System Settings], [LDAP Search] is set to [On], a screen to select a search object appears when you press the [Search Destination] key. On the screen, select [Search Address Book], and then press the [OK] key.
- ☐ Up to 100 destinations can be displayed as search results.
- □ To cancel a selected destination, press the [♠] or [▼] key to select the target destination, and then press the [♠] key.


Manual Entry of an E-mail Address

This section explains how to enter an e-mail address manually.

1 Press [Manual].

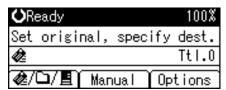

2 Enter the e-mail address.

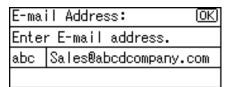

Press the [OK] key.



∅ Note


- ☐ Depending on the security settings, **[Manual]** may not be displayed. For details, consult the administrator.
- ☐ To modify or change an entered e-mail address, press [EditDest].
- ☐ To add another destination, press [Add Dest], and then enter an e-mail address.
- ☐ You can register manually-entered e-mail addresses in the machine's address book. For details, see "Registering Manually-Entered E-mail Address in the Address Book".

p.26 "Registering a Manually-Entered E-mail Address in the Address Book"

You can search the LDAP server for an address and then specify that address as an e-mail destination.


∰Important

- ☐ To use this function, you must connect an LDAP server to the network.
- □ It is necessary to register the LDAP server under **[System Settings]**. Also, set **[LDAP Search]** to **[On]** under **[System Settings]**. For details, see "System Settings", General Settings Guide.
- 1 Press the [Search Destination] key.

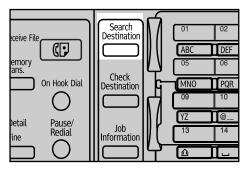


The illustration is an example. The actual appearance may be different.


2 Select [Search LDAP], and then press the [OK] key.

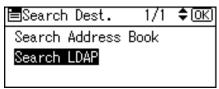

3 Select [Select Server], and then press the [OK] key.

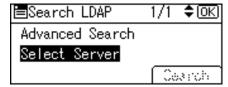


1 Select the server, and then press the [OK] key.

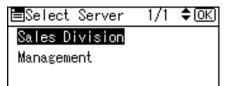

If authentication is required to access the server, the authentication screen appears. Enter the user name and password correctly.


The Search LDAP screen reappears.

5 Select [Advanced Search], and then press the [OK] key.

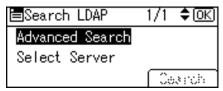


6 Specify the search conditions.

The following example uses fuzzy search by destination name. Select **[Name]**, and then press the **[OK]** key.

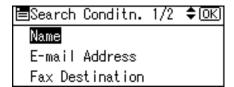


7 Enter a part of the destination name.

Search can be by surname or first name, depending on the LDAP server's settings. Consult your administrator.

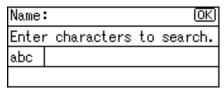

Press the [OK] key.


Press the [▲] or [▼] key to select [Fuzzy Search], and then press the [OK] key.

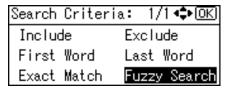


appears on the left side of the specified condition.

You can also refine the search by setting multiple search conditions.

Press the [Escape] key.

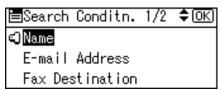


Press [Search].

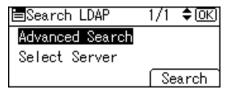

Destinations that match the search conditions are displayed.

Press the [▲] or [▼] key to select the destination, and then press the [▶] key.

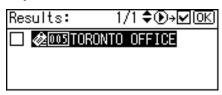

The check box on the left side of the selected destination is selected.

Press the [OK] key.



Note

- ☐ Up to 100 destinations can be displayed as search results.
- ☐ If an e-mail address returned by the LDAP server is too long, it will be impossible to specify it as the destination. For details about the number of characters that can be specified, see "E-mail".
- ☐ You can register multiple e-mail addresses in individual LDAP server accounts. However, only one e-mail address will be displayed as the search result. Usually, the address that was registered first on the LDAP server is the address that is displayed.
- ☐ You can select criteria from the following list:
- [Include]: The names which contain an entered character or characters are targeted.

Example) To find "ABC", enter "A", "B" or "C".

• **[Exclude]**: The names which do not contain an entered character or characters are targeted.

Example) To find "ABC", enter "D".

• **[First Word]**: The names which start with the entered character or characters are targeted.

Example) To find "ABC", enter "A".

• **[Last Word]**: The names which end with the entered character or characters are targeted.

Example) To find "ABC", enter "C".

• **[Exact Match]**: The names which correspond to an entered character or characters are targeted.

Example) To find "ABC", enter "ABC".


• **[Fuzzy Search]**: a vague search (The function of this vague search depends on the system supported by the LDAP server.)

p.128 "E-mail"

Registering a Manually-Entered E-mail Address in the Address Book


This section explains how to register a manually entered destination in the machine's address book. You can also register a destination selected from the LDAP server to the address book.

Press the [Check Destination] key.

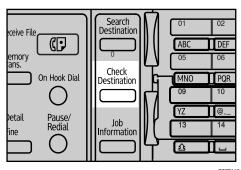


The illustration is an example. The actual appearance may be different.


Press the [▲] or [▼] key to display the destination you want to register, and then press [Program].

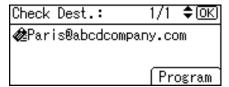

Enter the name, and then press the [OK] key.

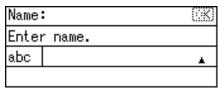


Press [Dest.] and [Reg. No.] to specify registration information. After you have made all settings, press the [OK] key.

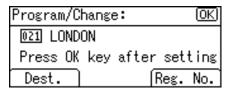

For details about specifying registration information, see "Registering Addresses and Users for Facsimile/Scanner Functions", General Settings Guide.

П

Press the [Escape] key.

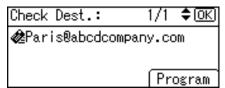

Note

☐ Depending on the security settings, **[Program]** may not appear. In such case, you cannot complete the registration. For detail, consult you administrator.

1

Specifying the Sender

This section explains how to specify the e-mail sender.

To send e-mails, you must specify the name of the sender.

You can specify the e-mail sender by any of the following methods:

- Select a sender registered to a Quick Dial key
- Select a sender from the machine's address book list
- Enter the registration number of a sender who is registered in the machine's address book
- Search by name for a sender in the machine's address book
- Search by e-mail address for a sender in the machine's address book

Note Sender


- ☐ Senders must be registered in advance under [System Settings]. For details, see "Registering Addresses and Users for Facsimile/Scanner Functions", General Settings Guide.
- ☐ In [System Settings], you can specify the administrator's e-mail address as the default sender name. This lets you send e-mails without entering anything for [Sender's Name].
- ☐ Depending on the security setting, the logged-on user may be specified as **[Sender's Name]**.
- ☐ When a protection code has been set, a screen for entering the protection code appears after selecting the sender. Enter the protection code, and then press the [OK] key. If the protection code you entered is correct, the sender name is displayed.

Selecting a Sender Registered to a Quick Dial Key


This section explains how to select a sender registered to a Quick Dial key.

For details about how to register e-mail senders to Quick Dial keys, see "Registering Addresses and Users for Facsimile/Scanner Functions", General Settings Guide.


1 Press [Options].

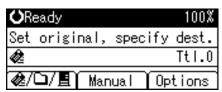

2 Select [Sender's Name], and then press the [OK] key.

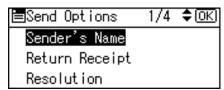


3 Press the Quick Dial key to which the sender is registered.

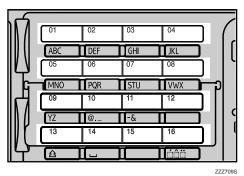

The illustration is an example. The actual appearance may be different.


Press the [OK] key.

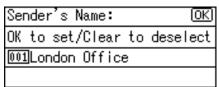


"Programmed" appears, and then the Send Options screen reappears.

This section explains how to select a sender from the machine's address book list.


Press [Options].

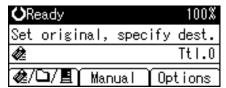

2 Select [Sender's Name], and then press the [OK] key.

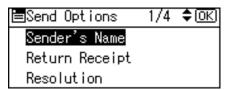


Press the [Search Destination] key.

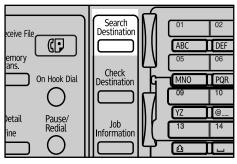

ZZZ7115

The illustration is an example. The actual appearance may be different.

Press the [▲] or [▼] key to select [Display Destination List], and then press the [OK] key.

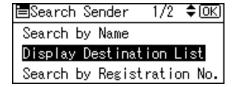

П


5 Press the [▲] or [▼] key to select the sender, and then press the [▶] key.




The check box on the left side of the selected sender is selected.

To cancel a selected sender, press the $[\blacktriangle]$ or $[\blacktriangledown]$ key to select the target sender, and then press the $[\blacktriangleleft]$ key.

Press the [OK] key.

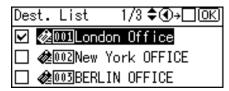


7 Press the [OK] key.

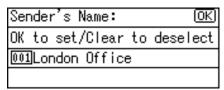


"Programmed" appears, and then the Send Options screen reappears.

Select the sender using the registration numbers specified by senders in the machine's address book.


1 Press [Options].

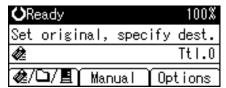

2 Select [Sender's Name], and then press the [OK] key.

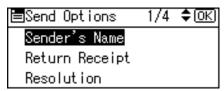


Press the [Search Destination] key.

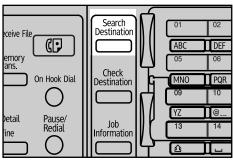

ZZZ7115

The illustration is an example. The actual appearance may be different.

Press the [▲] or [▼] key to select [Search by Registration No.], and then press the [OK] key.

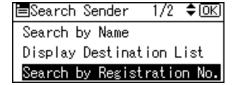


1


Use the number keys to enter the three-digit number assigned to the sender, and then press the [OK] key.

Example: To enter 001

Press the [1] key, and then press the [0K] key.

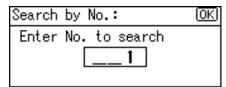


6 Press the [►] key.

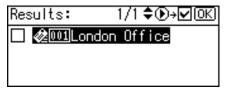


The check box on the left side of the selected sender is selected.

7 Press the [OK] key.

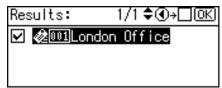


Press the [OK] key.

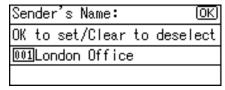


"Programmed" appears, and then the Send Options screen reappears.

This section explains how to search by name for a sender in the machine's address book.


Press [Options].

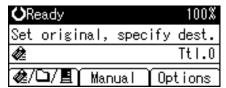

2 Select [Sender's Name], and then press the [OK] key.

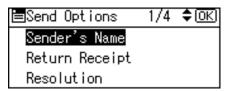


Press the [Search Destination] key.

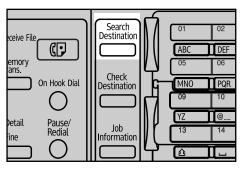

The illustration is an example. The actual appearance may be different.


4 Select [Search by Name], and then press the [OK] key.

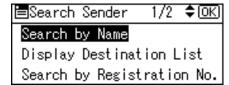

1


f

5 Enter the beginning of the sender name, and then press the [OK] key twice.

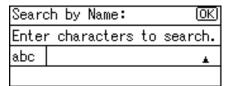


Senders that match the search conditions are displayed.

6 Press the [▲] or [▼] key to select the sender, and then press the [▶] key.

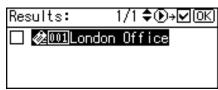


The check box on the left side of the selected sender is selected.

7 Press the [OK] key.

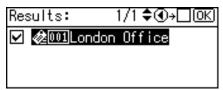

Press the [OK] key.

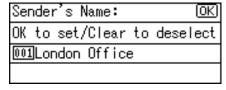

"Programmed" appears, and then the Send Options screen reappears.


Note

☐ Up to 100 destinations can be displayed as search results.


Searching for a Sender by E-mail Address

This section explains how to search by e-mail address for a sender in the machine's address book.


Press [Options].

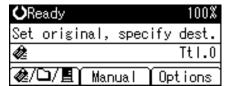

2 Select [Sender's Name], and then press the [OK] key.

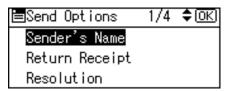


Press the [Search Destination] key.

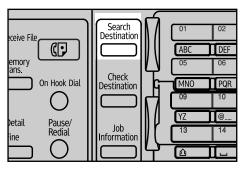


ZZZ7115

The illustration is an example. The actual appearance may be different.

4 Select [Search by E-mail Address], and then press the [OK] key.

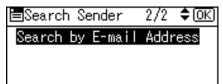


E Enter the beginning of the sender's e-mail address, and then press the [OK] key twice.

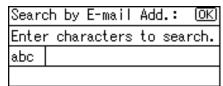


Destinations that match the search conditions are displayed.


Press the [▲] or [▼] key to select the destination, and then press the [▶] key.

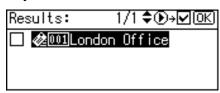

7 Press the [OK] key.

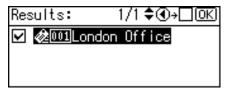

Press the [OK] key.

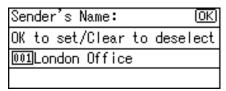

"Programmed" appears, and then the Send Options screen reappears.

Note


☐ Up to 100 destinations can be displayed as search results.

Setting the Return Receipt Function


This section explains how to set the Return Receipt function.

If you set [Return Receipt], the selected sender will receive e-mail notification when the e-mail recipient opens his/her e-mail.

1 Press [Options].

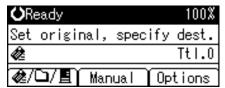


Press the [▲] or [▼] key to select [Return Receipt], and then press the [OK] key.

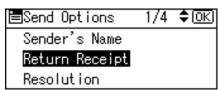

Select [On], and then press the [OK] key.

"Programmed" appears, and then the Send Options screen reappears.

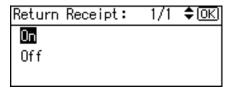

Note


- ☐ To use the Return Receipt function, you must specify the sender. Note, however, that the [Return Receipt] notification e-mail may not be transmitted if the e-mail software of the recipient does not support Message Disposition Notification.
- □ When the administrator's e-mail address is automatically specified as a sender, notification e-mail will not be sent even if [Return Receipt] is selected. For details about [Admin. E-mail Address] and [Auto Specify Sender Name], see "System Settings", General Settings Guide.

1


Specifying the Subject

This section explains how to specify the e-mail subject.


1 Press [Options].

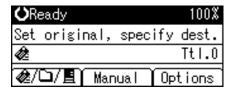

Press the [▲] or [▼] key to select [Attach Subject], and then press the [OK] key.

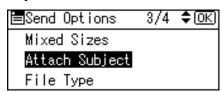

B Enter the subject, and then press the [OK] key.

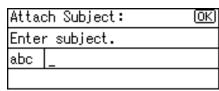

"Programmed" appears, and then the Send Options screen reappears.

2. Sending Scan Files by Scan to Folder

Using the Scan to Folder function, you can send scan files over the network to shared folders, FTP server folders, or NetWare folders.

Before Sending Scan Files by Scan to Folder

This section explains the necessary preparations and the procedure for sending scan files by Scan to Folder.


∰Important

☐ This function is available only when Function Upgrade Option is installed.

Outline of Sending Scan Files by Scan to Folder

This section outlines the function for sending scan files by Scan to Folder.

Sending scan files to shared folders

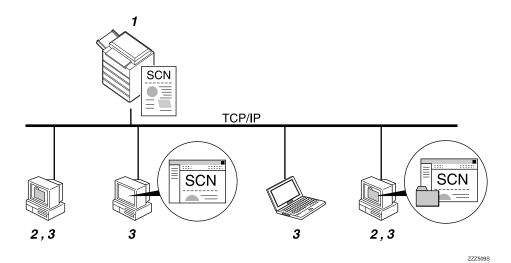

1. This machine

You can send scan files to shared network folders. To send scan files to shared network folders, use the SMB protocol.


2. Computer with a shared folder

To use this function, it is necessary to create a shared folder in advance. You can specify a shared folder to save scan files.

3. Client computer

You can also browse scanned files saved to a shared folder from a client computer.

Sending scan files to an FTP server

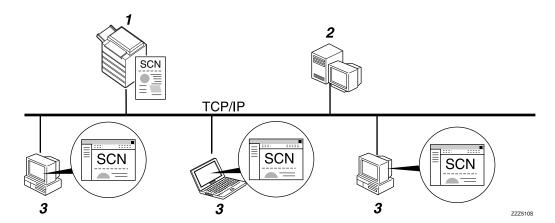

1. This machine

You can send scan files to FTP server folders.

To send scan files to FTP server folders, use the FTP protocol.


2. FTP server

The FTP server is a server that provides file transfer services among computers on the same network. Transferred files are stored on this server. It is essential to have the FTP server inside the LAN/WAN where this machine belongs. It is not possible to access an FTP server via a proxy server.

3. Client computer

You can browse scanned files saved to an FTP server from a client computer. You need to have an FTP client program on the computer to connect to an FTP server.

Sending scan files to NetWare server

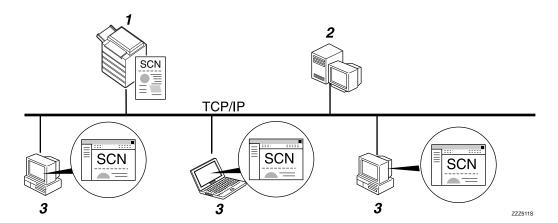

1. This machine

You can send scan files to NetWare folders. To send scan files to NetWare folders, use the NCP protocol.

2. NetWare server

You can use this server to share files over the network via NetWare. By sending image data to the server, images can be stored on the server.

3. Client computer

To download images, a computer must be running the NetWare client and be logged onto the server.

Preparation for Sending by Scan to Folder

This section explains the preparation and settings for sending scan files by Scan to Folder and where you can find more information about them.

- Check the machine is properly connected to the network
- Configure the network settings in [System Settings]
- Configure the necessary settings in [Scanner Features]

Check the machine is properly connected to the network

Check that this machine is properly connected to the network. For details about how to connect this machine to a network, see "Connecting to the Interfaces", General Settings Guide.

Configure the network settings in [System Settings]

Configure the network settings in [System Settings] according to your environment and how you will be using the machine.

The following procedure explains connecting this machine to an IPv4 network using Ethernet cable.

Note that the settings you must configure will vary depending on your operating environment. For details about network settings and configuration procedures, see "Settings Required to Use Scan to Folder Function", General Settings Guide.

- ① Press the [User Tools/Counter] key, select [System Settings], and then press the [OK] key.
- ② Select [Interface Settings], and then press the [OK] key.
- ③ Select [Network], and then press the [OK] key.
- Select [Machine IPv4 Address] to specify the machine's IPv4 address, and then press the [OK] key.
 - To specify a static IPv4 address for this machine, select **[Specify]**, and then press the left selection key to select **[IP Add.]**.
 - To obtain an IPv4 address from a DHCP server automatically for this machine, select [Auto-Obtain (DHCP)], and then press the [OK] key.
- ⑤ Select [IPv4 Gateway Address], and then press the [OK] key.
- Select [Effective Protocol], select [IPv4], and then select [Effective]. Then press the [OK] key.
 - To send files to shared folders, select **[SMB]**, and then select **[Effective]**. To send files to Netware folders, select **[NetWare]**, and then select **[Effective]**.
- Select [LAN Type] and [Ethernet], and then press the [OK] key.

Configure the necessary settings in [Scanner Features]

Using **[Scanner Features]**, you can make or change various settings related to the scanner function, such as compressing scan data or viewing the scanner journal. Configure the scanner settings according to your environment and how you will be using the machine.

This section explains how to display the Scanner Features screen. For details about the settings screen, see "Scanner Features", General Settings Guide.

- ① Press the [User Tools/Counter] key.
- ② Select [Scanner Features], and then press the [OK] key. The Scanner Features screen appears. Select [Scan Settings], [Destination List Settings], [Send Settings], or [Administrator Tools], and then configure the relevant settings.

- ☐ If necessary, configure the shared folders, FTP server, and Netware server on the network in advance.
- ☐ Files can be sent by SMB in NetBIOS over TCP/IP environments only. Files cannot be sent by SMB in NetBEUI environments.
- ☐ File sending is still possible even if sending by SMB or FTP is unavailable from the control panel, Web Image Monitor, or Telnet etc.
- ☐ The settings you must configure in **[System Settings]** vary depending on your network environment. For details about network settings, see "Connecting the Machine", General Settings Guide.

Registering Destination Folders in the Address Book

You can register the addresses of frequently-used destination folders in the address book.

Register the folder addresses in [Address Book Management] under [Administrator Tools] from [System Settings]. These addresses can also be registered as groups.


Note

- ☐ For details about registering the address of a destination folder in the address book, see "Registering Addresses and Users for Facsimile/Scanner Functions", General Settings Guide.
- ☐ You can register entries in the address book using Web Image Monitor or SmartDeviceMonitor for Admin. For details about installing these applications, see "Monitoring and Configuring the Printer", Network Guide. For details about registering addresses, see Help of respective applications.
- ☐ Depending on the machine type, you may not be able to use the machine when it is updating the address book using CSV files (retrieved using Smart-DeviceMonitor for Admin) that contain user codes.


Scan to Folder Screen

This section describes the screen layout when sending scan files by Scan to Folder.


❖ Main screen

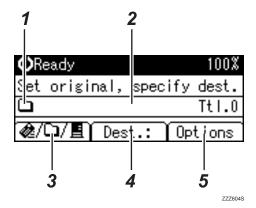

When a destination is entered manually

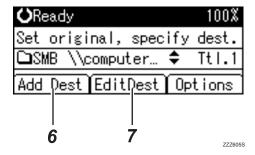

When a group is selected for destination

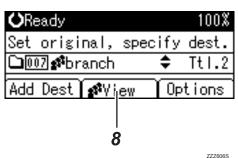

1. Scan to Folder icon

Indicates that the Scan to Folder screen is displayed.

2. Destination field

Displays a selected destination. If multiple destinations are selected, press the [▲] or [▼] key to display the destinations in the order they were selected. To check the selected destination, press the [Check Destination] key.

3. E-mail **a**/Scan to Folder □/Network Delivery Scanner ■

Press to switch between screens. You can also use this key to switch between the Email and Scan to Folder functions when sending a file to both e-mail and Scan to Folder destinations at the same time.

4. [Dest.:]

When specifying a destination that is not registered, press [Dest.:], and then enter the path to the destination using the Quick Dial keys.

5. [Options]

Press to make the scan settings and specify formats of files you want to send.

6. [Add Dest]

Press to add a manually entered folder path as a destination.

7. [EditDest]

Press to modify or change a manually entered folder path.

8. [View]

Press to check the destinations registered in a group.


Basic Procedure for Sending by Scan to Folder

This section describes the basic operation for sending scan files by Scan to Folder.

1 Make sure that no previous settings remain.

If a previous setting remains, press the [Clear Modes] key.


If the Network Delivery Scanner or E-mail screen is displayed, press [@/□/■] key to switch to the Scan to Folder screen.

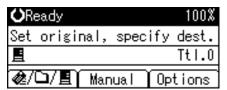

- **3** Place originals.
- If necessary, select the original type.
 For details, see "Selecting Original Type".
- If necessary, specify the scanning density. For details, see "Adjusting Image Density".
- **6** Select a destination.

You can specify multiple destinations.

For details, see "Specifying Scan to Folder Destinations".

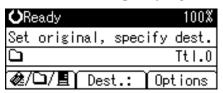

If necessary, press [Options] to specify the resolution and orientation of the originals.



For details, see "Specifying Send Options".

8 Press the [Start] key.

Scanning starts.

You must press the [#] key to send scan files that are scanned from the exposure glass.

Scan files that are scanned from the ADF/ARDF are sent immediately.

If you still have originals to send, place them on the machine, and then press the [Start] key.

Repeat this step until all originals are scanned.

After all originals are scanned, press the [#] key.

Transmission starts.

Note

- ☐ If you have selected two or more destinations, the destinations can be made to appear one by one by pressing the [♠] or [▼] key.
- ☐ To cancel a selected destination, display the destination in the destination field, and then press the [Clear/Stop] key. To cancel a destination selected from the address book, press the selected destination again.
- ☐ To cancel scanning, press the [Clear/Stop] key.

₽ Reference

p.114 "Selecting Original Type"

p.116 "Adjusting Image Density"

p.50 "Specifying Scan to Folder Destinations"

p.95 "Specifying Send Options"

Specifying Scan to Folder Destinations

This section explains how to specify Scan to Folder destinations.

You can send a file by Scan to Folder by any of the following methods:


- Select a destination registered to a Quick Dial key
- Select a destination registered in the machine's address book
- Send a file to a shared network folder
- Send a file to an FTP server
- Send a file to NetWare server

Selecting a Destination Registered to a Quick Dial Key

This section explains how to select a destination registered to a Quick Dial key. For details about how to register a Scan to Folder destination to a Quick Dial key, see "Registering Addresses and Users for Facsimile/Scanner Functions", General Settings Guide.

1 Press the Quick Dial key to which the destination is registered.

Repeat this step to add more destinations.

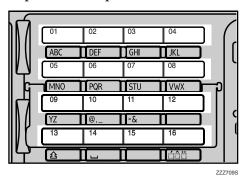

The illustration is an example. The actual appearance may be different.

Selecting a Destination Registered in the Machine's Address Book

This section explains how to select a destination from the machine's address book.

∰Important

☐ To use this function, you must register destinations in [System Settings] in advance.

There are four methods of selecting a destination that is registered in the machine's address book:


- Select a destination from the list
- Enter the destination's registration number
- Search for a destination by name
- Search for a destination by folder path

- ☐ If you have specified the protection code for accessing the address book, the screen for entering the protection code appears.
- ☐ Depending on the security settings, some destinations may not appear in the destination list.

Selecting a destination folder from the list

Use the following procedure to select a destination from the list.


Press the [Search Destination] key.

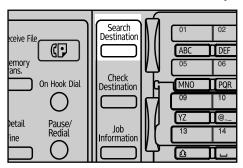

7777119

The illustration is an example. The actual appearance may be different.

Press the [▲] or [▼] key to select [Display Destination List], and then press the [OK] key.

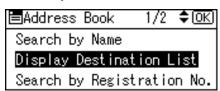


Press the [▲] or [▼] key to select the destination, and then press the [▶] key.



The check box on the left side of the selected destination is selected. Repeat this step to add more destinations.

Press the [OK] key.

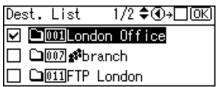


Note

- □ To cancel a selected destination, press the [♠] or [▼] key to select the target destination, and then press the [♠] key.
- ☐ Depending on the security settings, some destinations may not appear in the destination list.

Using a registration number to select a destination folder

Select the destination from the machine's address book using its registration number.


1 Press the [Search Destination] key.

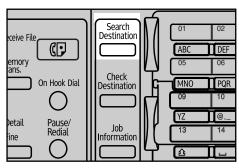

ZZZ711S

The illustration is an example. The actual appearance may be different.


Press the [▲] or [▼] key to select [Search by Registration No.], and then press the [OK] key.

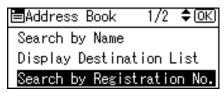


Using the number keys, enter the three-digit registration number assigned to the destination, and then press the [OK] key.

Example: To enter 002

Press the [2] key, and then press the [0K] key.

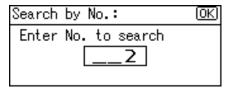


4 Press the [▶] key.

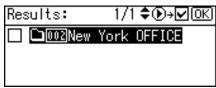

The check box on the left side of the selected destination is selected.


Press the [OK] key.

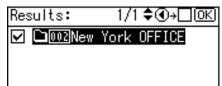

Searching for a destination by name

Use the following procedure to search by name for a destination in the machine's address book.


1 Press the [Search Destination] key.

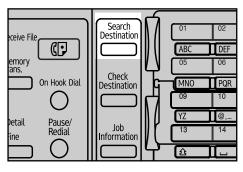


ZZZ711S

The illustration is an example. The actual appearance may be different.

2 Select [Search by Name], and then press the [OK] key.

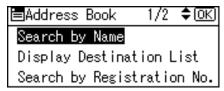

Enter the beginning of the destination name, and then press the [OK] key twice.

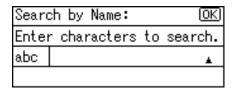


Destinations that match the search conditions are displayed.

Press the [▲] or [▼] key to select the destination, and then press the [▶] key.



The check box on the left side of the selected destination is selected.

Press the [OK] key.

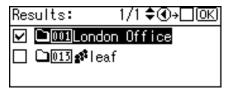


∅ Note

☐ Up to 100 destinations can be displayed as search results.

Search for a destination by folder path

Use the following procedure to search by folder path for a destination in the machine's address book.


Press the [Search Destination] key.

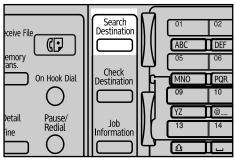

ZZZ711S


The illustration is an example. The actual appearance may be different.

2 Select [Search by Folder Name], and then press the [OK] key.

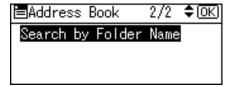


Enter the beginning of the folder path, and then press the [OK] key twice.

Enter the folder path in the following format: \\computer name\folder name.

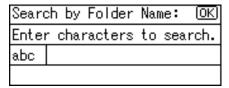


Destinations that match the search conditions are displayed.

Press the [▲] or [▼] key to select the destination, and then press the [▶] key.

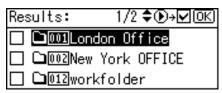

The check box on the left side of the selected destination is selected.

Press the [OK] key.

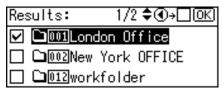

Note

☐ Up to 100 destinations can be displayed as search results.

Sending Scan Files to a Shared Folder on the Network

This section explains how to specify the destination when sending files to a shared network folder.

#Important

- ☐ You must create a shared folder on the client computer in advance. You can create the shared folder under Windows98/Me/2000/XP/Vista, WindowsNT4.0, Windows Server 2003/R2, and Mac OS X 10.2 or later.
- ☐ Depending on the operating system of the client computer, access to the shared folder may require authentication.
- ☐ The machine does not support DFS (Distributed File System).


You can send a file to a shared folder over the network by any of the following methods:

- Enter the destination path manually
- Specify the destination folder path by browsing


Entering the path to a destination folder

Use the following procedure to enter the destination path manually.


Press [Dest.:].

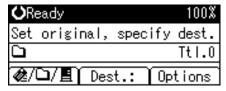

2 Select [SMB], and then press the [OK] key.

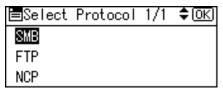


3 Select [Manual Entry], and then press the [OK] key.

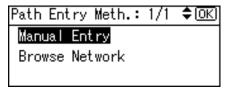


1 Enter the path to the destination folder, and then press the [OK] key.

The following is an example of a path where the folder name is "user" and the computer name is "desk01": \\desk01\user.

Instead of specifying the destination using its computer name, you can also use its IPv4 address.

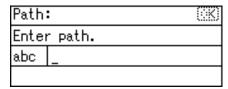

Enter a user name used to log on to the client computer, and then press the [OK] key.

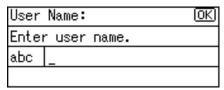


6 Enter the password used to log on to the client computer, and then press the **[OK]** key.

Password:		<u>(0K)</u>
Ente	r password.	
abc	_	


The Confirm Destination screen appears.

Press [Com.Test].

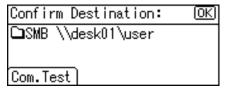

A connection test starts.

The test result appears. Press [Exit].

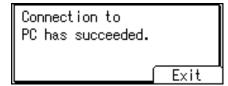

Press the [OK] key.



𝒜 Note


- ☐ If authentication is required to access the folder, the login screen appears. Enter the user name and password.
- ☐ If you change the protocol after entering the path name, user name, or password, a confirmation message appears.
- ☐ To modify or change an entered folder path, press [EditDest].
- ☐ To add another destination, press [Add Dest], and then enter its folder path.
- ☐ The connection test may take time.
- ☐ Even if the connection test was successful, the machine may fail to transfer the file if you do not have write privileges for the shared folder or there is not enough free hard disk space.
- ☐ You can register the destination path in the machine's address book. For details, see "Registering the Path to the Selected Destination in the Address Book".

p.70 "Registering the Path to the Selected Destination in the Address Book"


Specify the path by browsing to a destination folder

Use the following procedure to specify a destination folder path by browsing computers on the network.


1 Press [Dest.:].

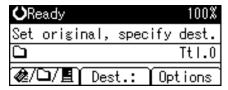

2 Select [SMB], and then press the [OK] key.

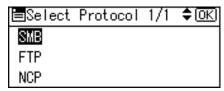


Press [Browse Network], and then press the [OK] key.

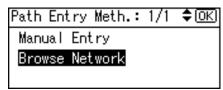


A list of domains or work groups on the network appears.

Select the domain or workgroup that includes the destination folder you want to specify, and then press the [OK] key.

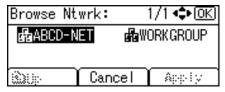


5 Select the destination computer.

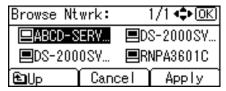


If you cannot find the destination computer, press the $[\land]$ or $[\lor]$ key. Select the computer, and then press the $[\lor]$ key. The computer folder opens. Press $[\lor]$ or the $[\lor]$ key to go up one level.

6 A login screen appears if authentication is required. Enter a user name and password used to log on to the client computer, and then press the [OK] key.

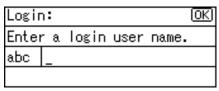

Select the destination folder, and then press [Apply].

If you cannot find the destination folder, press the $[\land]$ or $[\lor]$ key. Select the folder, and then press the $[\lor]$ key. The folder opens. Press $[\lor]$ or the $[\lor]$ key to go up one level.

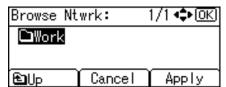


Press the [OK] key.

Applied Path:	(<u>0K</u>)
ABCD-SERVER	
files	
∖Work	


Press [Com.Test].



The test result appears. Press [Exit].

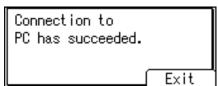

Press the [OK] key.

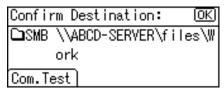

Note

- ☐ If authentication is required to access the folder, the login screen appears. Enter the user name and password.
- ☐ If you change the protocol after entering the path name, user name, or password, a confirmation message appears.
- ☐ If you press **[Cancel]** while browsing the network, the Path Entry Method screen reappears.
- ☐ Computer and shared folder names containing more than 12 characters cannot be displayed.
- ☐ Up to 100 computers and shared folders can be displayed on the "Browse Ntwrk" screen.
- ☐ The machine may fail to transfer the file if you do not have write privileges for the shared folder or there is not enough free hard disk space.
- ☐ You can register the destination path in the machine's address book. For details, see "Registering the Path to the Selected Destination in the Address Book".

₽ Reference

p.70 "Registering the Path to the Selected Destination in the Address Book"


Sending Scan Files to an FTP Server

This section explains how to specify destinations when sending files to an FTP server.


Directly enter the path for the folder on the FTP Server

You can enter the path to an FTP server manually.

Press [Dest.:].

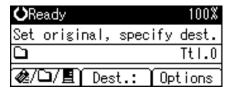


2 Select [FTP], and then press the [OK] key.

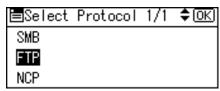


3 Enter the FTP server name, and then press the [OK] key.


Instead of specifying the destination using its server name, you can also use its IPv4 address.

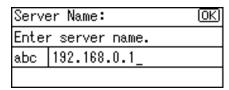

If you change the port number specified under [System Settings], enter a new number using the number keys, and then press the [OK] key.

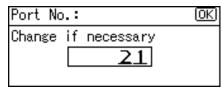

5 Enter the user name, and then press the [OK] key.

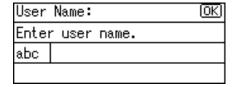


6 Enter the password, and then press the [OK] key.

Password:		(OK)
Enter	password.	
abc		


1 Enter the path to the destination folder, and then press the [OK] key.

The following is an example of a path where the sub folder name is "lib" and the folder name is "user": user\lib.

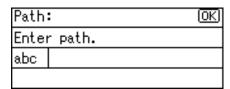

A destination confirmation screen appears.

Press [Com.Test].

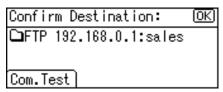


A connection test starts.

9 The test result appears. Press [Exit].

```
Connection to
PC has succeeded.

Exit
```

Press the [OK] key.

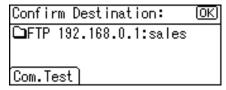

- 🔗 Note
- ☐ If you change the protocol after entering the path name, user name, or password, a confirmation message appears.
- ☐ The connection test may take time.
- ☐ You can register the destination path in the machine's address book. For details, see "Registering the Path to the Selected Destination in the Address Book".

p.70 "Registering the Path to the Selected Destination in the Address Book"

Sending Scan Files to NetWare Server

This section explains how to specify destinations when sending files to NetWare server.

The NetWare folder of the destination can be specified in an NDS tree or on a NetWare Bindery server, depending on the NetWare environment. Consult your administrator.


You can send a file to NetWare server by any of the following methods:

- Enter the destination path manually
- Specify the destination folder path by browsing


Entering the path to a destination folder

Enter the destination folder path of the NetWare server directly.

Press [Dest.:].

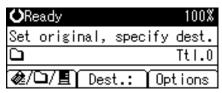


2 Select [NCP], and then press the [OK] key.

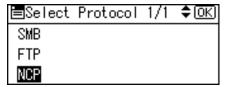


3 Select the connection type, and then press the [OK] key.

Select **[NDS]** to specify a folder in the NDS tree. Select **[Bindery]** to specify a folder on the NetWare Bindery server.

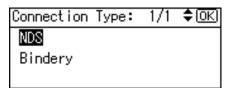


A Select [Manual Entry], and then press the [OK] key.

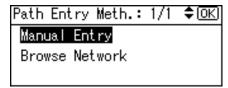


5 Enter the destination folder path, and then press the [OK] key.

If you set the connection type to **[NDS]**, the NDS tree name is "tree", the name of the context including the volume is "context", the volume name is "volume", and the folder name is "folder", the path will be \\tree\\volume.context\\folder". If you set the connection type to **[Bindery]**, the NetWare server name is "server", the volume name is "volume", and the folder name is "folder", the path will be "\\server\\volume\\folder".

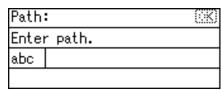

6 Enter a user name to log on to the NDS tree or Netware Bindery server, and then press the [OK] key.

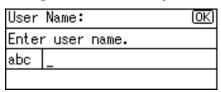


If you select **[NDS]** for connection type, enter the user name, and then enter the name of the context containing the user object. If the user name is "user" and the name of the Context is "context", the user name will be "user.context".

If a password is specified for the log on user, enter it, and then press the [OK] key.

Password:		<u>(0K)</u>
Enter	r password.	
abc		


The Confirm Destination screen appears.

Press [Com.Test].

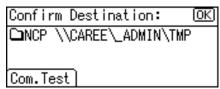


A connection test starts.

Check the test result, and then press [Exit].

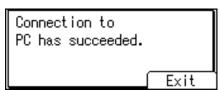

Press the [OK] key.

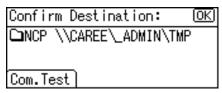

Note


- ☐ If you change the protocol after entering the path name, user name, or password, a confirmation message appears.
- ☐ You can connect only to folders that you have the read privileges for.
- ☐ The connection test may take time.
- ☐ Even if the connection test was successful, the machine may fail to transfer the file if you do not have write privileges for the file or there is not enough free hard disk space.
- ☐ You can register the destination path in the machine's address book. For details, see "Registering the Path to the Selected Destination in the Address Book".

p.70 "Registering the Path to the Selected Destination in the Address Book"


Specify the path by browsing to a destination folder

Specify the path by browsing to the destination folder in an NDS tree or on a NetWare Bindery server.

Press [Dest.:].

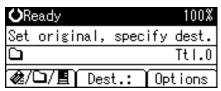


2 Select [NCP], and then press the [OK] key.

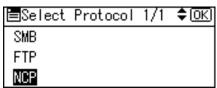


3 Select the connection type, and then press the [OK] key.

Select **[NDS]** to specify a folder in the NDS tree. Select **[Bindery]** to specify a folder on the NetWare Bindery server.

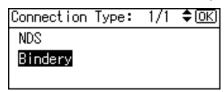


Press [Browse Network], and then press the [OK] key.

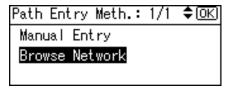


A list of NetWare Bindery servers or NDS trees on the network appears.

Select the NDS tree or NetWare Bindery server that contains the required destination folder, and then press the [OK] key.

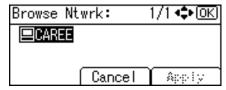


A list of NDS contexts or NetWare Bindery server volumes appears.

6 A login screen appears if authentication is required. Enter a user name and password, and then press the [OK] key.

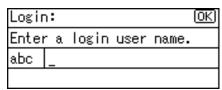


Select a context or volume that contains the required destination folder, and then press the [OK] key.

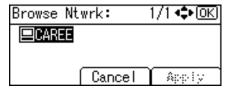


A list of destination folders appears.


Select the destination folder, and then press [Apply].

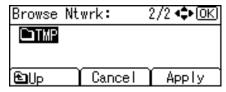

The path to the selected folder is displayed. Check the path is correct, and then press the [OK] key.

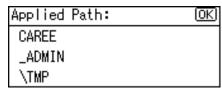

The destination is displayed. Check the destination is correct, and then press the [OK] key.

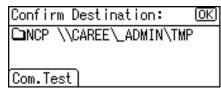

Note


- ☐ If you change the protocol after entering the path name, user name, or password, a confirmation message appears.
- ☐ Only folders that you have the read privileges for are displayed.
- ☐ If the language used for the NDS tree or by the NetWare Bindery server differs from that used by the machine, file names in the NDS tree or on the NetWare Bindery server might appear garbled.
- ☐ If the selected NDS tree or NetWare Bindery server requires authentication, a login screen appears. Enter a user name and password for logging on to the NDS tree or NetWare Bindery server. If you log on to the NDS tree, enter a user name, and then enter the name of the context containing the user object. If the user name is "user" and the name of the Context is "context", the user name will be "user.context".
- ☐ The machine may fail to transfer the file if you do not have write privileges for the folder or there is not enough free hard disk space.
- ☐ You can register the destination path in the machine's address book. For details, see "Registering the Path to the Selected Destination in the Address Book".

p.70 "Registering the Path to the Selected Destination in the Address Book"

Registering the Path to the Selected Destination in the Address Book

This section explains how to register folder paths you have entered manually or specified by browsing the network to the machine's address book.

Press the [Check Destination] key.

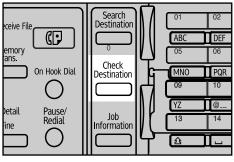

ZZZ711

The illustration is an example. The actual appearance may be different.


Press the [▲] or [▼] key to display the destination you want to register, and the press [Program].



Enter the name, and then press the [OK] key.

Name	:	(EK)
Ente	r name.	
abc	_	

Press [Dest.] and [Reg. No.] to specify registration information. After you have made all settings, press the [OK] key.

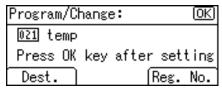

Note

☐ Depending on the security settings, **[Program]** may not appear. In such case, you cannot complete registration. For detail, consult you administrator.

3. Delivering Scan Files

The ScanRouter delivery software enables you to deliver scan files by various methods.

Before Delivering Scan Files


This section describes the necessary preparations and the procedure for using the network delivery scanner.

∰Important

- ☐ This function is available only when Function Upgrade Option is installed.
- ☐ To use the network delivery scanner function, you need a delivery server on which the optional ScanRouter delivery software is installed. You must also register destination and sender information on the delivery server.

Delivering Scan Files

This section outlines the function for delivering files using the network delivery scanner.

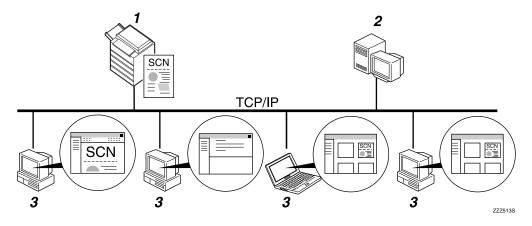

1. This machine

You can send scan files to the delivery server.

2. Delivery server

Install the ScanRouter delivery software on this computer to use it as the delivery server.

After receiving a scan file, the delivery server delivers the file according to the setting specified for the destination. The delivery settings are as follows:

- Storing the file in an in-tray
- Delivering the file by e-mail
- Storing the file in a selected folder For details about delivery types and the setting method, see ScanRouter delivery software manuals.

3. Client computer

The delivery method determines how you can check files from a client computer. For example, you can use the following methods to check files:

- Use DeskTopBinder to view a file that was delivered to an in-tray
- Use an e-mail application to receive an e-mail that has an attachment
- Browse a folder for a stored file

Preparation for Delivering

This section explains the preparation and settings for delivering files and where you can find more information about them.

- Check the machine is properly connected to the network
- Configure the network settings in [System Settings]
- Configure the necessary settings in [Scanner Features]
- Configure the settings in ScanRouter delivery software

Check the machine is properly connected to the network

Check that this machine is properly connected to the network.

For details about how to connect this machine to a network, see "Connecting to the Interfaces", General Settings Guide.

Configure the network settings in [System Settings]

Configure the network settings in **[System Settings]** according to your environment and how you will be using the machine.

The following procedure explains connecting this machine to an IPv4 network using Ethernet cable.

Note that the settings you must configure will vary depending on your operating environment. For details about network settings and configuration procedures, see "Settings Required to Use Scan to the Network Delivery Scanner", General Settings Guide.

- ① Press the [User Tools/Counter] key, select [System Settings], and then press the [OK] key.
- ② Select [Interface Settings], and then press the [OK] key.
- ③ Select [Network], and then press the [OK] key.
- 4 Select [Machine IPv4 Address] to specify the machine's IPv4 address, and press the [OK] key.

To specify a static IPv4 address for this machine, select **[Specify]**, and then press the left selection key to select **[IP Add.]**.

To obtain an IPv4 address from a DHCP server automatically for this machine, select [Auto-Obtain (DHCP)], and then press the [OK] key.

- ⑤ Select [IPv4 Gateway Address], and then press the [OK] key.
- Select [Effective Protocol], select [IPv4], and then select [Effective]. Then press the [OK] key.
- ② Select [LAN Type] and [Ethernet], and then press the [OK] key.
- Select [File Transfer], and then press the [OK] key.
- Select [Delivery Option], and then select [On].

Configure the necessary settings in [Scanner Features]

Using **[Scanner Features]**, you can make or change various settings related to the scanner function, such as compressing scan data or viewing the scanner journal. Configure the scanner settings according to your environment and how you will be using the machine.

This section explains how to display the Scanner Features screen. For details about the settings screen, see "Scanner Features", General Settings Guide.

- ① Press the [User Tools/Counter] key.
- ② Select [Scanner Features], and then press the [OK] key. The Scanner Features screen appears. Select [Scan Settings], [Destination List Settings], [Send Settings], or [Administrator Tools], and then configure the relevant settings.

Configure the settings in ScanRouter delivery software

Using the ScanRouter delivery software, register this machine as an I/O device. In addition, register destinations and specify such settings as the delivery type and sender.

For details about settings, see the manuals supplied with the ScanRouter delivery software.

Note

- ☐ To view files delivered to an in-tray, DeskTopBinder Lite must be installed details about installing DeskTopBinder Lite, see "Installing DeskTopBinder Lite from Provided CD-ROM".
- ☐ The settings you must configure in **[System Settings]** vary depending on For details about network settings, see "Connecting the Machine", General Settings Guide.

p.75 "Installing DeskTopBinder Lite from Provided CD-ROM"

Installing DeskTopBinder Lite from Provided CD-ROM

This section explains how to use the supplied "Scanner Driver and Utilities" CD-ROM to install DeskTopBinder Lite on a client computer.

To view or receive files delivered to in-trays, you must first install DeskTop-Binder Lite on the client computer.

Make sure Windows is running on the client computer, and then insert the "Scanner Driver and Utilities" CD-ROM into the CD-ROM drive.

The installer is automatically started and the **[Scanner Driver and Utilities]** dialog box appears.

2 Click [DeskTopBinder Lite].

The **[DeskTopBinder Lite Setup]** dialog box appears. For the subsequent installation steps, see Setup Guide that can be displayed from the **[DeskTopBinder Lite Setup]** dialog box.

Note

- ☐ Before you start the installation, check the system requirements for Desk-TopBinder Lite. For details, see "Software Supplied on CD-ROM".
- ☐ You can install the software using the auto-run program. If the installer does not start automatically, see "Auto-Run Program".


₽ Reference

p.125 "Software Supplied on CD-ROM" p.125 "Auto-Run Program"


Network Delivery Scanner Screen

This section describes the screen layout when using the network delivery scanner.

Main screen

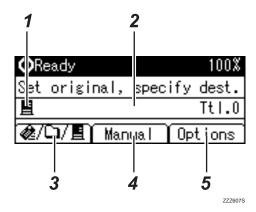

When a destination is entered manually

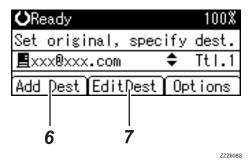

1. Network Delivery Scanner icon

Indicates that the Network Delivery Scanner screen is displayed.

2. Destination field

Displays a selected destination. If multiple destinations are selected, press the [▲] or [▼] key to display the destinations in the order they were selected. To check the selected destination, press the [Check Destination] key.

3. E-mail@/Scan to Folder□/Network Delivery Scanner ■

Press to switch between screens.

4. [Manual]

To send a file by e-mail via the delivery server to a destination not registered in the delivery server's Destination List, press this key to display the soft keyboard. Then use the soft keyboard to enter the e-mail address. For details about how to send a file by e-mail via the delivery server, see the ScanRouter delivery software manuals.

5. [Options]

Press to make the scan settings.

6. [Add Dest]

When selecting multiple destinations after a manual entry of an e-mail address, press [Add Dest], and then enter the e-mail address of the destination.

7. [EditDest]

When changing an e-mail address that has been entered, press [EditDest], and then enter the new e-mail address.


Basic Delivery Procedure

This section describes the basic operation for delivering scan files using the network delivery scanner.


#Important

- ☐ You must register destinations and senders in advance using the ScanRouter delivery software installed on the delivery server.
- Make sure that no previous settings remain.

 If a previous setting remains, press the [Clear Modes] key.
- **2** If the E-mail or Scan to Folder screen is displayed, press [♠/□/■] to switch to the Network Delivery Scanner screen.

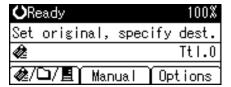

- Place originals.
- If necessary, select the original type.
 For details, see "Selecting Original Type".
- **5** If necessary, specify the scanning density. For details, see "Adjusting Image Density".
- **6** Select the destination.

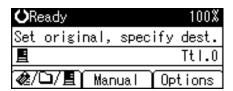


You can specify multiple destinations.

For details, see "Specifying Delivery Destinations".


If necessary, press [Options] to specify the resolution and the orientation of the originals.

For details, see "Specifying Send Options".

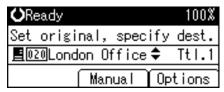

If necessary, select [Sender's Name] under [Options], and then specify the sender.

The sender you specify appears in the subject line of e-mail that is sent via the delivery server. Select the sender from the destinations registered on the delivery server. For details, see "Specifying the Sender".

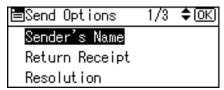

If necessary, select [Attach Subject] under [Options], and then specify the subject.

The subject entered here is set for e-mail that is sent via the delivery server. For details, see "Specifying the Subject".

Press the [Start] key.

Scanning starts.

You must press the [#] key to send scan files that are scanned from the exposure glass.

Scan files that are scanned from the ADF/ARDF are sent immediately.

If you still have originals to send, place them on the machine, and then press the [Start] key.

Repeat this step until all originals are scanned.

After all originals are scanned, press the [#] key.

Transmission starts.

Note

- ☐ To send e-mail via delivery server, press [Manual] on the delivery screen, and then enter a destination e-mail address. For details about the procedure for manually entering e-mail addresses, see "Manual Entry of an E-mail Address".
- ☐ If you have selected two or more destinations, the destinations can be made to appear one by one by pressing the [♠] or [▼] key.
- ☐ To cancel a selected destination, display the destination in the destination field, and then press the [Clear/ Stop] key.
- ☐ You can use the Return Receipt function when sending e-mail via delivery server. An e-mail is sent to the sender selected in step 8, notifying him/her that the recipient has read his/her e-mail. For details about the procedure for setting the Return Receipt function, see "Setting the Return Receipt Function".
- ☐ To enable the Return Receipt function, it is necessary to make the settings to send e-mail by SMTP with ScanRouter delivery software. For details about how to specify this setting, see the manuals supplied with the Scan-Router delivery software. Note, however, that if the receiving party's e-mail application does not support Message Disposition Notification (MDN), notification e-mail might not be returned.
- ☐ Register the sender's e-mail address using the ScanRouter delivery software in advance.
- ☐ If you press the **[Check Destination]** key, the initial scanner screen switches to the Check Dest. screen. You can use the Check Dest. screen to check the details of the selected destinations. For details, see "Check Destination".
- ☐ To cancel scanning, press the [Clear/ Stop] key.

₽ Reference

- p.114 "Selecting Original Type"
- p.116 "Adjusting Image Density"
- p.80 "Specifying Delivery Destinations"
- p.21 "Manual Entry of an E-mail Address"
- p.95 "Specifying Send Options"
- p.28 "Specifying the Sender"
- p.38 "Setting the Return Receipt Function"
- p.39 "Specifying the Subject"
- p.4 "Check destination"

3

Specifying Delivery Destinations

This section explains how to specify delivery destinations.

You can select delivery destinations registered in the "Destination List" of the delivery server by any of the following methods:

- · Select a destination using the Quick Dial keys
- Select a destination registered in the "Destination List" of the delivery server


Selecting a Destination Using a Quick Dial Key

This section explains how to select a destination using a Quick Dial key.

For details about how to register a delivery destination to a Quick Dial key, see "Registering Addresses and Users for Facsimile/Scanner Functions", General Settings Guide.

Press a Quick Dial key of the same number as the [Short ID] of the destination registered in the delivery server.

Repeat this step to add more destinations.

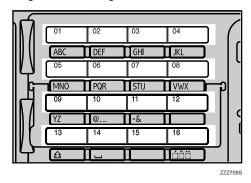

The illustration is an example. The actual appearance may be different.



☐ For details about how to set Short IDs, see the manuals supplied with the ScanRouter delivery software.

Selecting a Destination Registered in the Destination List of the Delivery Server

This section explains how to select a destination registered in the delivery server's Destination List.


There are four methods of selecting a destination that is registered in the delivery server's Destination List:

- Select a destination from the list
- Enter the destination's registration number
- Search for a destination by name
- Search for a destination by comment

Selecting a destination from the list

Use the following procedure to select a destination from the list.


Press the [Search Destination] key.

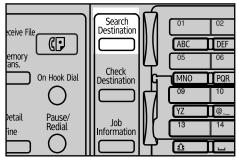

ZZZ711

The illustration is an example. The actual appearance may be different.

Press the [▲] or [▼] key to select [Display Destination List], and then press the [OK] key.

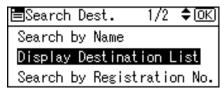

Press the [▲] or [▼] key to select the destination, and then press the [▶] key.



The check box on the left side of the selected destination is selected.

Repeat this step to add more destinations.

Press the [OK] key.




Note

- ☐ To cancel a selected destination, press the key to select the target destination, and then press the [◀] key.
- ☐ Depending on the security settings, some destinations may not appear in the destination list.

Using a registration number to select a destination

Select a destination by entering its Short ID number (registered using the Scan-Router delivery software). For details about how to set Short IDs, see the manuals supplied with the ScanRouter delivery software.


1 Press the [Search Destination] key.

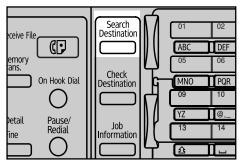

777711

The illustration is an example. The actual appearance may be different.


Press the [▲] or [▼] key to select [Search by Registration No.], and then press the [OK] key.

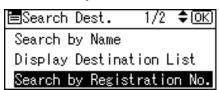


Using the number keys, enter the three-digit registration number assigned to the destination, and then press the [OK] key.

Example: To enter 003

Press the [3] key, and then press the [OK] key.

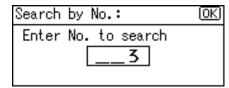


4 Press the [▶] key.

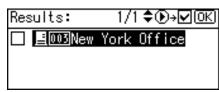

The check box on the left side of the selected destination is selected.


Press the [OK] key.

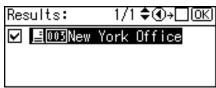

Searching for a destination by name

Use the following procedure to search by name for a destination in the delivery server's Destination List.


1 Press the [Search Destination] key.

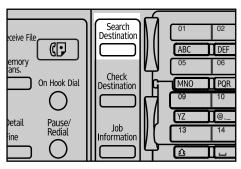


ZZZ711S

The illustration is an example. The actual appearance may be different.


2 Select [Search by Name], and then press the [OK] key.

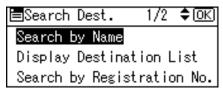

Enter the beginning of the destination name, and then press the [OK] key twice.

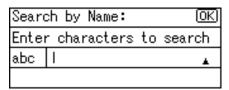


Press the [▲] or [▼] key to select the destination, and then press the [▶] key.

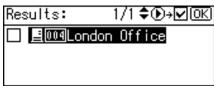

The check box on the left side of the selected destination is selected.

Press the [OK] key.

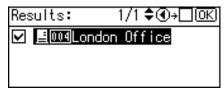


Note

☐ Up to 100 destinations can be displayed as search results.

Searching for a destination by comment

Use the following procedure to search by comment for a destination in the delivery server's Destination List. The Search by Comment function searches for a destination using the comment (one of the registration items required by the ScanRouter delivery software) as a keyword.

Press the [Search Destination] key.

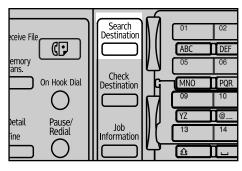


ZZZ7115

The illustration is an example. The actual appearance may be different.


2 Select [Search by Comment], and then press the [OK] key.



B Enter the beginning of the comment, and then press the [OK] key twice.

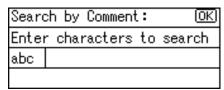

Press the [▲] or [▼] key to select the destination, and then press the [▶] key.

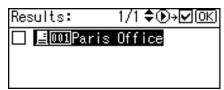

The check box on the left side of the selected destination is selected.

5 Press the [OK] key.



4. Using the Network TWAIN Scanner Function

You can use this machine to scan originals into a client computer over the network.

When Using as a TWAIN Scanner

This section explains the necessary preparations and the procedure for using the network TWAIN scanner.

∰Important


- ☐ To use the network TWAIN scanner, you must install the TWAIN driver, which is on the supplied CD-ROM. For details about installing the TWAIN driver, see "Installing TWAIN Driver from Provided CD-ROM".
- ☐ To use the network TWAIN scanner, a TWAIN-compliant application, such as DeskTopBinder, must be installed on the client computer. DeskTopBinder Lite is on the supplied CD-ROM. For details about installing DeskTopBinder Lite, see "Installing DeskTopBinder Lite from Provided CD-ROM".

p.91 "Installing TWAIN Driver from Provided CD-ROM" p.75 "Installing DeskTopBinder Lite from Provided CD-ROM"

Outline of the TWAIN Scanner Function

This section outlines the network TWAIN scanner function.

In the TWAIN scanner mode, you can share this machine among multiple computers. Therefore, you don't have to prepare a special computer for scanner or reconnect the scanner and each computer every time you need to use it.

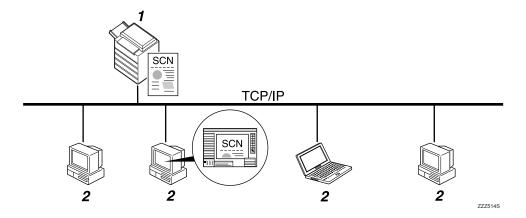

1. This machine

Scans an original after receiving a scan instruction from a client computer, and then sends the scan file over the network to the client computer.

2. Client computer

Specifies the scanner settings and controls the scanner using an application, such as DeskTopBinder Lite, that supports the network TWAIN scanner. Receives the files scanned by the machine and displays them using an application that supports the network TWAIN scanner.

Note

□ When using the machine as a network TWAIN scanner, you do not need to press the **[Scanner]** key on the machine's control panel. The screen switches automatically when you scan an original from a client computer using the TWAIN driver. To use functions other than the network TWAIN scanner, press **[Exit]**.

Connecting with PC. Set originals and select the settings from PC. Exit

Preparation for Using the Network TWAIN Scanner

This section explains the preparation and settings to use this machine as a network TWAIN scanner and where you can find more information about them.

To use this machine as a network TWAIN scanner, you must first perform the following:

- Check the machine is properly connected to the network
- Configure the network settings in [System Settings]
- Install the TWAIN driver on a client computer
- Install a TWAIN-compliant application on the same client computer

Check the connected to the network

Check this machine is properly connected to the network.

For details about how to connect this machine to a network, see "Connecting the Machine", General Settings Guide.

Configure the network settings in [System Settings]

Configure the network settings in **[System Settings]** according to your environment and how you will be using the machine.

The following procedure explains connecting this machine to an IPv4 network using Ethernet cable.

Note that the settings you must configure will vary depending on your operating environment. For details about network settings and configuration procedures, see "Settings Required to Use Network TWAIN Scanner", General Settings Guide.

- ① Press the [User Tools/Counter] key, select [System Settings], and then press the [OK] key.
- ② Select [Interface Settings], and then press the [OK] key.
- ③ Select [Network], and then press the [OK] key.
- 4 Select [Machine IPv4 Address] to specify the machine's IPv4 address, and press the [OK] key.
 - To specify a static IPv4 address for this machine, select [Specify], and then press the left selection key to select [IP Add.].
 - To obtain an IPv4 address from a DHCP server automatically for this machine, select [Auto-Obtain (DHCP)], and then press the [OK] key.
- ⑤ Select [IPv4 Gateway Address], and then press the [OK] key.
- Select [Effective Protocol], select [IPv4], and then select [Effective]. Then press the [OK] key.
- Select [LAN Type] and [Ethernet], and then press the [OK] key.

Install the TWAIN driver on a client computer

Install the TWAIN driver on your computer.

For details about installing the TWAIN driver, see "Installing the TWAIN Driver from Provided CD-ROM".

Install a TWAIN-compliant application on the same client computer

To use this machine as a network TWAIN scanner, a TWAIN-compliant application, such as DeskTopBinder, must be installed on the client computer. DeskTopBinder Lite is included on the supplied CD-ROM.

For details about installing DeskTopBinder Lite, see "Installing DeskTopBinder Lite from Provided CD-ROM".

☐ The settings you must configure in **[System Settings]** vary depending on your network environment. For details about network settings, see "Network Settings", General Settings Guide.

₽ Reference

p.91 "Installing TWAIN Driver from Provided CD-ROM" p.75 "Installing DeskTopBinder Lite from Provided CD-ROM"

Installing TWAIN Driver from Provided CD-ROM

This section explains how to install the TWAIN driver on a client computer from the supplied "Scanner Driver and Utilities" CD-ROM.

To use the network TWAIN scanner, you must install the TWAIN driver on a client computer.

To use the TWAIN scanner function, you need to install the TWAIN driver on the client computer.

1 Start Windows, and then insert the CD-ROM labeled "Scanner Driver and Utilities" into the CD-ROM drive of the client computer.

The installer is automatically started and the **[Scanner Driver and Utilities]** dialog box appears.

- 2 Click [TWAIN Driver].
- **3** The installer of the TWAIN Driver starts. Follow the instructions.

Note

- ☐ Before you start the installation, check the system requirements for the TWAIN driver. For details about the system requirements, see "Software Supplied on CD-ROM".
- ☐ You can install the software using the auto-run program. If the installer does not start automatically, see "Auto-Run Program".
- ☐ When the installation is complete, a message about restarting the client computer may appear. In this case, restart the client computer.
- ☐ After the installation is complete, a folder with the name of the machine in use is created in **[Programs]** or **[All Programs]** on the **[Start]** menu. You can display Help from here.
- ☐ Notes on using the network TWAIN scanner are provided in Readme.txt. Be sure to read them before use.

p.125 "Software Supplied on CD-ROM" p.125 "Auto-Run Program"

Basic Procedure for Scanning Files Using TWAIN Scanner

This section describes the basic operation for scanning with the network TWAIN scanner.

#Important

- ☐ To use the network TWAIN scanner, a TWAIN-compliant application, such as DeskTopBinder, and the TWAIN driver must be installed on the client computer.
- □ Under the Windows XP SP2/Vista or Windows Server 2003/R2 operating system, when the Windows firewall is enabled, "Cannot find the scanner." or "No response from the scanner." may appear and scanning with the TWAIN scanner may fail. In this case, change the settings of the Windows firewall. For details, see Windows Help.

The following procedure uses Windows XP and DeskTopBinder Lite by way of example.

- On the [Start] menu, point to [All Programs], point to [DeskTopBinder], and then click [DeskTopBinder].
- 2 On the [Tools] menu, click [Scanner Settings...].
- Click [Select Scanner Driver...].
- Select the name of the machine you want to use in the list, and then click [Select].
- Click [OK].
- 6 Place originals.
- On the [File] menu, point to [Add Document], and then click [Scan...]. The Scanner Control dialog box appears.

A dialog box that is used to control a scanner using the TWAIN driver is referred to as the Scanner Control dialog box.

Make settings according to such factors as the type of original, type of scanning, and orientation of the original.

For details, see the TWAIN driver Help.

In the Scanner Control dialog box, click [Scan].

Depending on the security setting, if you press [Scan], a dialog box for entering the user name and password may appear.

If there are more originals to be scanned, place the next original, and then click [Continue].

If there are no more originals to be scanned, click [Complete].

- $f \Omega$ On the [File] menu of the DeskTopBinder viewer, click [Exit].
- 11 Enter the document name, and then click [OK].

The DeskTopBinder viewer closes and the image is stored in DeskTopBinder Lite.

∅ Note

- ☐ If you have already selected a scanner, you do not need to select the scanner unless you want to change it.
- ☐ Using DeskTopBinder, you can edit and print scan files. For more information about DeskTopBinder, see DeskTopBinder manuals.
- □ The model name of the connected scanner appears in the title bar of the Scanner Control dialog box. If there is more than one scanner of the same model on the network, make sure you have selected the correct scanner. If you have not, click [Select Scanner Driver...], and then select the scanner again. If the correct scanner does not appear in the list, check that the scanner is correctly connected to the network and that its IPv4 address has been specified. If the correct scanner still does not appear, consult the network administrator.

5. Various Scan Settings

This section describes various scan settings.

Specifying Send Options

This section describes procedure for specifying send options.



☐ For details about setting [Sender's Name], [Attach Subject], and [Return Receipt], see chapter 1 "Sending Scan Files by E-mail".

p.7 "Sending Scan Files by E-mail"

p.28 "Specifying the Sender"

p.39 "Specifying the Subject"


p.38 "Setting the Return Receipt Function"

Resolution


Select resolution for scanning originals.

Select [100dpi], [200dpi], [300dpi], [400dpi], or [600dpi] as the scanning resolution.


1 Press [Options].

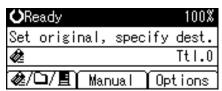

Press the [▲] or [▼] key to select [Resolution], and then press the [OK] key.

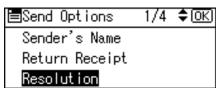

3 Select a resolution, and then press the [OK] key.

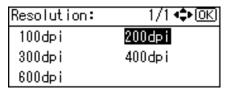

"Programmed" appears, and then the Send Options screen reappears.

4 Press the [Escape] key.




☐ Image compression level can limit Maximum image size.


Original Orientation

This section explains how to correctly display the top/bottom orientation of scanned originals on a client computer screen.


Press [Options].

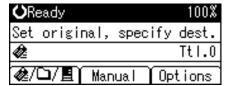

Press the [▲] or [▼] key to select [Original Orientation], and then press the [OK] key.

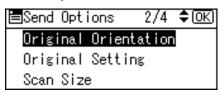

Select R or R for the same orientation as the original, and then press the [OK] key.

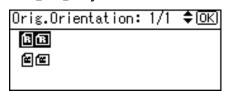

"Programmed" appears, and then the Send Options screen reappears.

Press the [Escape] key.

Placing originals

To correctly display the top/bottom orientation of the scanned original on a client computer, the placement of the original and the settings made on the control panel must match.

Place originals correctly by referring to the following table:

Exposure glass

Original orientation	Control panel key
top edge touches top left corner of exposure glass	ക്ക
top edge touches rear of exposure glass	
	R R

❖ ADF/ARDF

Original orientation	Control panel key
top edge placed first	
top edge touches rear of ADF/ARDF	
R	RR

Note


☐ Originals are normally rectangular (他) or horizontally long (他). However, the table above uses squares to make original orientation easier to understand. Even if the actual shape of the original is different, the combination of original orientation and the orientation specified on the scanner driver does not change.

Original Setting


This section explains the settings for scanning one-sided or two-sided originals.

∰Important


- ☐ This function is not available unless ARDF is installed.
- 1 Press [Options].

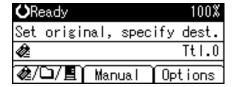

Press the [▲] or [▼] key to select [Original Setting], and then press the [OK] key.

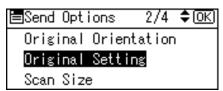

Select [1 Sided Original] to scan one-sided originals, and then press the [OK] key. Select [2 Sided Orig.(T to TER)] or [2 Sided Orig.(T to BRW)] to scan two-sided originals, and then press the [OK] key.

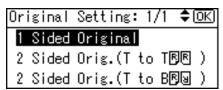

The following table explains the relationship between the page opening orientation and control panel selection key.

Page opening orientation

Page opening orientation	Control panel key
RSRS	2 Sided Orig.(T to T RR)
RRS	2 Sided Orig.(T to BPa)

"Programmed" appears, and then the Send Options screen reappears.

Press the [Escape] key.

Scan Size

Select the size of the original to be scanned.

The following items and sizes can be selected:

❖ [Auto Detect]

Scans original sizes using the automatic size detect function.

❖ Template size


A3
$$\stackrel{\frown}{\Box}$$
, A4 $\stackrel{\frown}{\Box}$, A5 $\stackrel{\frown}{\Box}$, A5 $\stackrel{\frown}{\Box}$, B4 JIS $\stackrel{\frown}{\Box}$, B5 JIS $\stackrel{\frown}{\Box}$, B5 JIS $\stackrel{\frown}{\Box}$, 11 × 17 $\stackrel{\frown}{\Box}$, 8¹/₂ × 14 $\stackrel{\frown}{\Box}$, 8¹/₂ × 11 $\stackrel{\frown}{\Box}$, 8¹/₂ × 11 $\stackrel{\frown}{\Box}$, 8¹/₂ × 11 $\stackrel{\frown}{\Box}$, 5¹/₂ × 8¹/₂ $\stackrel{\frown}{\Box}$

❖ [Custom Size]


Scans in a specified size.

Original sizes that can be scanned:


- Horizontal width: 128 432 mm (5.1 17.0 inches)
- Vertical length: 105 297 mm (4.2 11.6 inches)
- 1 Press [Options].

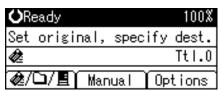

Press the [▲] or [▼] key to select [Scan Size], and then press the [OK] key.

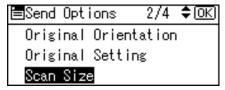

Press the scroll keys to select the scan size in the list, and then press the [OK] key.

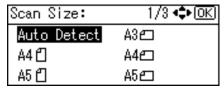

"Programmed" appears, and then the Send Options screen reappears.

4 Press the [Escape] key.



☐ If **[Custom Size]** is selected, the dimensions of the scan area (width and length) can be specified.

Relationship of original of mixed sizes and scan size

This section explains differences you need to be aware of when scanning originals of different length using the original position setting and size.

- If you set [Mixed Sizes] to [On], the machine detects the length of originals and scans them. For details, see "Mixed Sizes".
- If a template size is selected, the machine scans originals at the selected size regardless of the actual size of originals. If an original is smaller than the selected size, the machine applies margins to the scan area.
- If [Auto Detect] is selected for scanning originals from the exposure glass, the machine detects the size of individual originals and scans accordingly.
- If only [Auto Detect] is selected for scanning originals from the ADF/ARDF, the machine detects the size of the largest original and scans all the other originals based on that size.

p.104 "Mixed Sizes"


Specifying custom size

This section explains how to specify a custom size.

To scan a custom size original, measure its width and length, and enter these figures as the [Horiz.] and [Vert.] settings.

The following figure shows the [Horiz.] and [Vert.] of an original.


❖ Placing an original in the ADF/ARDF

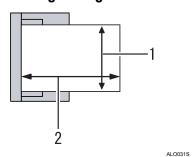

1. Vertical

2. Horizontal


Placing an original on the exposure glass

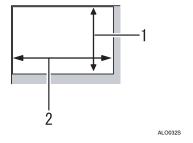


1. Vertical

2. Horizontal


Press [Options].

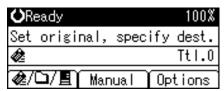


Press the [▲] or [▼] key to select [Scan Size], and then press the [OK] key.

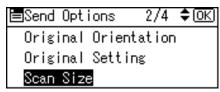


Press the scroll keys to select [Custom Size], and then press the [OK] key.

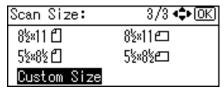

Using the number keys, enter the horizontal width, and then press the [OK] key or [#] key.

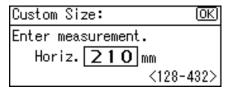

Using the number keys, enter the vertical length, and then press the [OK] or [#] key.

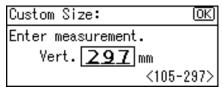

"Programmed" appears, and then the Send Options screen reappears.

Press the [Escape] key.

How to set originals to scan them by custom size

This section explains how to place originals you want to scan at Custom Size.

Original orientation setting

Placing an original

Place originals face up in the ADF/ARDF; face down on the exposure glass.

❖ Original orientation is [♠ ♠]

Place	Orientation
ADF/ARDF	R R
Exposure glass Align the original, turn it rightward or leftward, and then place it face down on the exposure glass.	R ALOO28S


Place	Orientation
ADF/ARDF	ALO029S
Exposure glass Align the original vertically and then place it face down.	ALOO30S

p.97 "Original Orientation"


Mixed Sizes

This section explains how to set the machine to detect the length of individual originals when scanning a batch of originals that are different length.


1 Press [Options].

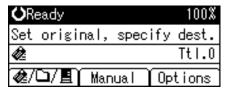

Press the [▲] or [▼] key to select [Mixed Sizes], and then press the [OK] key.

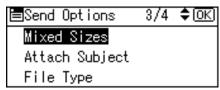


3 Select [On], and then press the [OK] key.

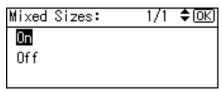


"Programmed" appears, and then the Send Options screen reappears.

Press the [Escape] key.

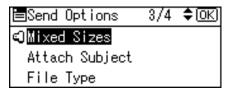

Note

☐ To set originals of different length at the same time, set them according to the chart below. The paper guides cannot be adjusted to small size originals, which may cause slightly tilted scanning.

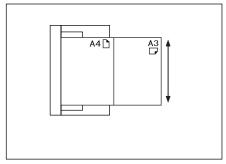


Stamp

This section explains the procedure for stamping on originals scanned using the ADF/ARDF.

If you select **[Stamp]**, a circle mark is stamped on originals that are scanned using the ADF/ARDF. If you scan a two-sided original using the ADF/ARDF, circle marks are stamped on both sides of the original.


This function is useful when you want to identify scanned originals.

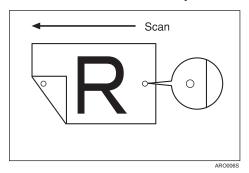


This illustration is an example when scanning a two-sided original.

#Important


- ☐ To enable stamping, you must install the stamp cartridge.
- 1 Press [Options].

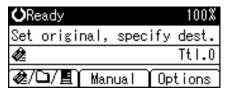

Press the [▲] or [▼] key to select [Stamp], and then press the [OK] key.

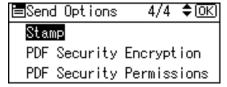


3 Select [On], and then press the [OK] key.

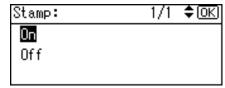

"Programmed" appears, and then the Send Options screen reappears.

Press the [Escape] key.

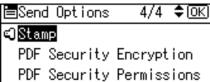

Note

- □ **[Stamp]** appears only if the ADF/ARDF is installed.
- ☐ Stamping may continue even if scanning is interrupted, depending on the cause of interruption.
- ☐ Replace the stamp cartridge when Stamp begins to fade. For details, see "Adding Paper and Replacing Print Cartridges", Troubleshooting.

File Type

This section explains the procedure for selecting a file type.

#Important

☐ To deliver files, set the file type using the delivery server computer. For details, see the manuals supplied with the ScanRouter delivery software.

You can select one of the following file types:

• [Single Page:TIFF/JPEG], [Single Page:PDF]


If you select a single-page file type when scanning multiple originals, one file is created for single page and the number of files sent is the same as the number of pages scanned.

• [Multi-page:TIFF], [Multi-page:PDF]

If you select a multi-page file type when scan multiple originals, scanned pages are combined and sent as a single file.


Selectable file types differ depending on the scan settings and other conditions. For details about file types, see "Notes About and Limitations of File Types".

1 Press [Options].

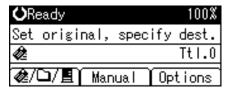

5

2 Press the [▲] or [▼] key to select [File Type], and then press the [OK] key.

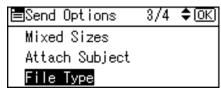

3 Press the [▲] or [▼] key to select the file type, and then press the [OK] key.



"Programmed" appears, and then the Send Options screen appears.

Press the [Escape] key.

p.107 "Notes About and Limitations of File Types"

Notes About and Limitations of File Types

Depending on the file format you select, the following limitations will apply:

- ❖ [Single Page:TIFF/JPEG]
 - Originals scanned in black and white are sent as TIFF files.
 - According to the settings specified for [Compress. (Gray/Full Clr)] under [Scanner Features], originals scanned in full color or gray scale are sent in one of the following file types:

[**On]** ... JPEG [**Off]** ... TIFF

❖ [Multi-page:TIFF]

When full color or gray scale is specified for [Original Type] and [Compress. (Gray/Full Clr)] is set to [On] under [Scanner Features], you cannot select [Multipage:TIFF].

PDF Security Encryption

This section explains security settings for PDF files.

Use security settings to prevent unauthorized access to PDF files.

#Important


☐ Security settings can be made for PDF files only.

Encrypting PDF file


Set a password to protect a PDF file. Only users who have the password can open the PDF file.

∰Important


- ☐ Encryption is possible only for scan files sent by e-mail or Scan to Folder.
- ☐ You cannot open an encrypted file without a password. Make sure you do not forget a file's password.
- 1 Press [Options].

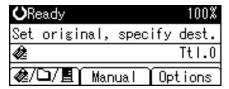


Press the [▲] or [▼] key to select [PDF Security Encryption], and then press the [OK] key.

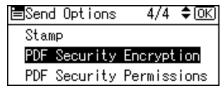


3 Select [Encrypt Document], and then press the [OK] key.

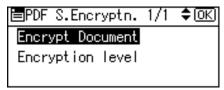

4 Select [On], and then press the [OK] key.

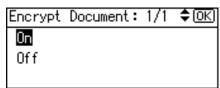


5 Enter a password, and then press the [OK] key.

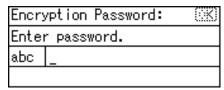

The password entered here will be required to open the PDF file.

6 Enter the password again, and then press the [OK] key.

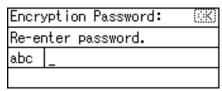

"Programmed" appears, and then the PDF Security Encryption screen reappears.

Press the [Escape] key twice.




- ☐ The Encryption Password must be different from the Master Password (which is used for changing PDF Security Permissions).
- ☐ You can enter up to 32 alphanumeric characters for a document password.


Selecting an encryption level for a PDF file

This section explains how to select an encryption level for a PDF file.


1 Press [Options].

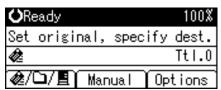


Press the [▲] or [▼] key to select [PDF Security Encryption], and then press the [OK] key.

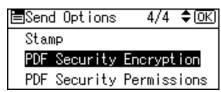

3 Select [Encryption level], and then press the [OK] key.

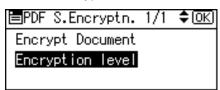

4 Select [40 bit] or [128 bit], and then press the [OK] key.

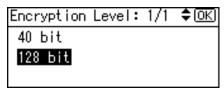

"Programmed" appears, and then the PDF Security Encryption screen reappears.

Press the [Escape] key twice.



- ☐ PDF file created under the **[128 bit]** Encryption Level cannot be viewed using Adobe Acrobat Reader 3.0 and 4.0.
- ☐ If [Permit Low Resolution Only] is specified as the print permission in [PDF Security Permissions], you cannot select [40 bit].


PDF Security Permissions

Set a Master Password to restrict unauthorized printing, changing, copying, or extracting of a PDF file's content.


Only users who have the Master Password can reset or change these restrictions.

#Important


- ☐ Encryption is possible only for scan files sent by e-mail or Scan to Folder.
- ☐ You cannot reset or change a file's restriction setting without the Master Password. Make sure you do not forget the Master Password.
- Press [Options].

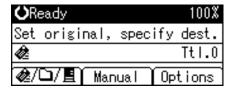


Press the [▲] or [▼] key to select [PDF Security Permissions], and then press the [OK] key.

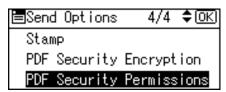

3 Select [Master Password], and then press the [OK] key.

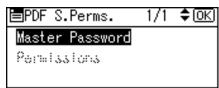


4 Select [On], and then press the [OK] key.

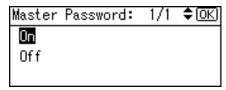


The password entry screen appears.

5 Enter a password, and then press the [OK] key.

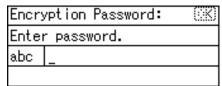


The password entered here will be required to change the security settings of the PDF file.

6 Enter the password again, and then press the [OK] key.

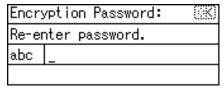

"Programmed" appears, and then the PDF Security Permissions screen reappears.

Select [Permissions], and then press the [OK] key.

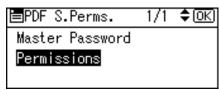


1 Change the PDF security settings.

You can specify the following security settings:


- Print permission: [Prohibit], [Permit All] and [Permit Low Resolution Only].
- Editing permission: [Prohibit] or [Permit].
- Copying or extracting content permission: [Prohibit] or [Permit].

The following is a procedure to prohibit printing of scanned PDF files.

2 Select [Print], and then press the [OK] key.

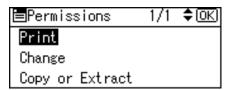

Select [Prohibit], and then press the [OK] key.

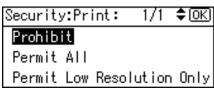

"Programmed" appears, and then the Permissions screen reappears.

You can apply multiple security settings to a PDF file.

Press the [Escape] key three times.

- Note
- ☐ The Master Password must be different from the Encryption Password.
- ☐ You can enter up to 32 alphanumeric characters for a Master Password.
- ☐ If **[40 bit]** is selected as the PDF encryption level, you cannot select **[Permit Low Resolution Only]** as the print permission.

5

Selecting Original Type

This section explains how to select an original type.

Select an original type using the **[Full Colour/ B&W]** key in combination with the **[Original]** key.

Specify the details of the selected original type using [Original Type] under [Scanner Features]. For details about [Original Type] settings, see "Scanner Features", General Settings Guide.


The following table explains the [Full Colour/ B&W] and [Original] keys combinations and their relationship with [Original Type].

Default settings are shown in bold type.

How to select an original type

[Full Colour/ B&W]key	[Original] key	[Original Type]
Full Colour	Text	[Type 1(Colour: Text)]Full Colour: Text / PhotoFull Colour: Glossy Photo
Full Colour	Photo	[Type 2(Colour: Photo)]Full Colour: Text / PhotoFull Colour: Glossy Photo
Black and white	Text	 [Type 3(B&W: Text)] Text/Line Art Text Text/Photo Photo Gray Scale
Black and white	Photo	 [Type 4(B&W: Photo)] Text/Line Art Text Text/Photo Photo Gray Scale

- 1 Press the [Full Colour/ B&W] key to select full colour or black and white. The indicator of the selected colour type lights up.
- **2** Press the [Original] key to select text or photo as the original type.

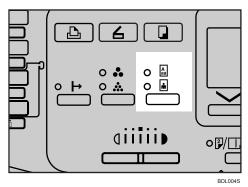


The indicator of the selected original type lights up.

- ☐ To scan originals in gray scale, you must first select [Scanner Features], [Original Type], and then [Type 3(B&W: Text)] or [Type 4(B&W: Photo)], select [Gray Scale]. Then, to scan your originals in gray scale, select the original type that you set to [Gray Scale]. For details about [Original Type], see "Scanner Features", General Settings Guide.
- ☐ If images scanned in gray scale are not clear enough, you can rescan them by selecting [Type 1(Colour: Text)] or [Type 2(Colour: Photo)].

Adjusting Image Density

This section explains how to specify the scanning density. There are five levels of scanning density.

1 Press the [Lighter] or [Darker] key to adjust the density.

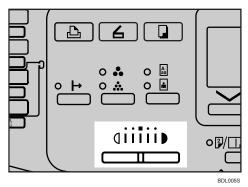

The density indicator $\mbox{"I"}$ moves one place per button push.

5

Scan Settings When Using Twain Scanner

This section explains how to specify original orientation and scan setting for a bundle of mixed size originals when using the TWAIN scanner.

Setting Original Orientation on the TWAIN Scanner

This section explains how to correctly display the top/bottom orientation of scanned originals on a client computer screen.

To correctly display the top/bottom orientation of the scanned original on a client computer, the placement of the original and the settings made in the Scanner Control dialog box must match.

1 Open the Scanner Control dialog box.

For details about how to open the Scanner Control dialog box, see "Basic Procedure for Scanning Files Using TWAIN Scanner".

- 2 In the [Original Scan Method:] list, select the place where the original is placed.
- In the [Orig.Orientn.:] list, select [+ 🗀 Long Edge] or [+ 🗀 Short Edge].
- In the [Orientation:] list, select [\sim Right 90 deg / \sim \mathbb{Z} Right 90 deg], [\sim \text{Left 90 deg } / \sim \mathbb{Z} Left 90 deg], [\sim \mathbb{Z} \text{Left 90 deg } / \sim \mathbb{Z} \text{Z} Left 90 deg],

p.92 "Basic Procedure for Scanning Files Using TWAIN Scanner"

Placing originals

The following table shows the relationship between the original orientation and the Scanner Control dialog box settings:

❖ Exposure glass

Original orientation	TWAIN Scanner Control dialog box key
top edge touches top left of exposure glass	
This orientation is the TWAIN driver's standard setting. Place originals in this orientation normally.	⇐ ts Left 90 deg.
top edge touches rear of exposure glass	
	⇐ ∏ Standard 0 deg.
bottom edge touches left side of exposure	
glass	♠ Em Right 90 deg.
bottom edge touches top of exposure glass	
	(⊫ I80 deg.

❖ ADF/ARDF

Original orientation	TWAIN Scanner Control dialog box key
top edge of original placed first	← ∠ Left 90 deg.
top edge touches rear of ADF/ARDF	ॣ R Standard 0 deg.
bottom edge touches left side of ADF/ARDF	Right 90 deg.
bottom edge touches top of ADF/ARDF	₩ 180 deg.

Note

- ☐ Originals are normally rectangular (♠) or horizontally long (♠). However, the table above uses squares to make original orientation easier to understand. Even if the actual shape of the original is different, the combination of original orientation and the orientation specified on the scanner driver does not change.
- ☐ For details about the Scanner Control dialog box, see the TWAIN driver Help.
- ☐ Depending on the settings, originals of different sizes are scanned differently.

5

When Scanning Originals of Mixed Sizes Using TWAIN Scanner

This section describes differences you need to be aware of when using the TWAIN scanner to scan originals of different length.

- If [Auto detect(Mixed-size)] is selected in the [Original Size:] list, the machine detects the length of each same-width original and then scans them.
- If [Auto detect(Uni-size)] is selected in the [Original Size:] list, the machine detects the size of the first original of the batch and scans all subsequent originals at that size.

Note

☐ The paper guides cannot be adjusted to small size originals, which may cause slightly tilted scanning.

6. Appendix

This appendix details specifications of the scanner function and explains supplementary settings.

Relationship between Resolution and Scan Size

This section explains the relationship between resolution and scan size.

Resolution and scan size are inversely related. The higher the resolution(dpi) is set, the smaller the area that can be scanned. Conversely, the larger the scan area, the lower the resolution that can be set.

The relationship between the scanning resolution and scan size is shown below. If the combination is unreadable, the message "Exceeded max. data capacity. Check resolution and Start." appears on the control panel display.



☐ Image compression level can limit Maximum image size.

When Using the E-mail, Folder Sending, or Network Delivery Functions

This section explains the relationship between resolution and scan size when using the e-mail, Scan to Folder, or Network Delivery Scanner functions.

- ❖ If [Type 3(B&W: Text)] or [Type 4(B&W: Photo)] is selected as the original type All combinations up to A3 and 600 dpi can be scanned.
- ❖ If [Type 1(Colour: Text)] or [Type 2(Colour: Photo)] is selected as the original type Refer to the table below for the maximum resolution available for each scan size.

Scan size and maximum resolution

Scan size	Maximum resolution (dpi)
A3, B4, 11 x 17, Legal (8 ¹ / ₂ x 14), 8 ¹ / ₂ x 13	400
A4, A5, A6, A7, B5, B6, Letter (8 ¹ / ₂ x 11), 5 ¹ / ₂ x 8 ¹ / ₂	600

Note

- ☐ Enter B6, A6, and A7 sizes directly.
 - B6 (128 mm/5.0 inches x 182 mm/7.0 inches)
 - A6 (105 mm/4.0 inches x 148 mm/5.8 inches)
 - A7 (74 mm/2.9 inches x 105 mm/4.1 inches)

When Using as a Network TWAIN Scanner

This section explains the relationship between resolution and scan size when using the machine as a TWAIN scanner.

To specify the scan area or resolution on the machine you are using as a network TWAIN scanner directly, see the TWAIN driver Help.

Note

☐ Certain original types and resolution settings can reduce scanning quality.

If Function Upgrade Option is installed on the machine

❖ If [Binary(Text)], [Binary(Photo)], [Gray Scale], [8 Colors], or [8 Colors(Photo)] is selected in [Col./ Grad.:]

The scan size determines the maximum possible resolution.

Refer to the table below for the maximum resolution available for each scan size.

Scan size and maximum resolution

Scan size	Maximum resolution (dpi)
A3, B4, 11 x 17	600
Legal (8 ¹ / ₂ x 14), 8 ¹ / ₂ x 13	700
A4, Letter $(8^1/_2 \times 11)$	800
B5	900
A5, A6, A7, B6, , 5 ¹ / ₂ x 8 ¹ / ₂	1,200

If [16770K colors] is selected in [Col./ Grad.:]

The scan size determines the maximum possible resolution.

Refer to the table below for the maximum resolution available for each scan size.

❖ Scan size and maximum resolution

Scan size	Maximum resolution (dpi)
A3, B4, 11 x 17	400
Legal $(8^1/_2 \times 14)$, $8^1/_2 \times 13$	500
A4, A5, A6, A7, B5, B6, Letter $(8^{1}/_{2} \times 11)$, $5^{1}/_{2} \times 8^{1}/_{2}$	600

Note

- \square A7 scan size must be entered directly.
 - A7 (74 mm/2.9 inches x 105 mm/4.1 inches)

If Function Upgrade Option is not installed on the machine

The following table shows the relationship between resolution and scan size when Function Upgrade Option is not installed in the machine.

❖ If [Binary(Text)] or [Binary(Photo)] is selected in [Col./ Grad.:]

The scan size determines the maximum possible resolution. Refer to the table below for the maximum resolution available for each scan size.

❖ Scan size and maximum resolution

Scan size	Maximum resolution (dpi)
A3, B4, 11 x 17	600
Legal $(8^{1}/_{2} \times 14)$, $8^{1}/_{2} \times 13$	700
A4, Letter $(8^1/_2 \times 11)$	800
B5	900
A5, A6, A7, B6, 5 ¹ / ₂ x 8 ¹ / ₂	1,200

❖ If [8 Colors] or [8 Colors(Photo)] is selected in [Col./ Grad.:]

The scan size determines the maximum possible resolution. Refer to the table below for the maximum resolution available for each scan size.

Scan size and maximum resolution

Scan size	Maximum resolution (dpi)
A3, 11 x 17	300
A4, B4, Legal $(8^1/_2 \times 14)$, $8^1/_2 \times 13$, Letter $(8^1/_2 \times 11)$	400
B5	500
A5	600
$5^{1}/_{2} \times 8^{1}/_{2}$	700
B6	800
A6	900
A7	1,200

If [Gray Scale] is selected in [Col./ Grad.:]

The scan size determines the maximum possible resolution. Refer to the table below for the maximum resolution available for each scan size.

Scan size and maximum resolution

Scan size	Maximum resolution (dpi)
A3, B4, 11 x 17	200
A4, Legal $(8^{1}/_{2} \times 14)$, $8^{1}/_{2} \times 13$, Letter $(8^{1}/_{2} \times 11)$	300
A5, B5, $5^1/_2 \times 8^1/_2$	400
B6	500
A6	600
A7	900

❖ If [16770K colors] is selected in [Col./ Grad.:]

The scan size determines the maximum possible resolution. Refer to the table below for the maximum resolution available for each scan size.

❖ Scan size and maximum resolution

Scan size	Maximum resolution (dpi)
A3, B4, 11 x 17, Legal (8 ¹ / ₂ x 14), 8 ¹ / ₂ x 13	100
A4, A5, B5, Letter $(8^1/_2 \times 11)$, $5^1/_2 \times 8^1/_2$	200
B6	300
A6	400
A7	500

𝚱 Note

- ☐ A7 scan size must be entered directly.
 - A7 (74 mm/2.9 inches x 105 mm/4.1 inches)

Software Supplied on CD-ROM

This section explains the applications on the supplied "Scanner Driver and Utilities" CD-ROM.

Auto-Run Program

This section explains the auto-run program.

When the CD-ROM is inserted into a client computer running Windows 2000/XP/Vista or Windows Server 2003/R2, the installer starts up automatically (auto-run) to install various software.

Note

- ☐ For installation, log on as an Administrators group member.
- ☐ Auto-run program may not automatically work with certain operating system settings. If this happens, start "Setup.exe" on the CD-ROM root directory.
- ☐ To disable auto-run, set CD-ROM while pressing **Shift** key. Keep the **Shift** key pressed until the computer finishes reading from the CD-ROM.
- ☐ If **[Cancel]** is pressed during installation, the installation of all the software thereafter will be stopped. If cancelled, reinstall the remaining software after restarting the client computer.

TWAIN Driver

This section tells you the file path to the TWAIN driver and the TWAIN driver's system requirements.

You must install this driver if you want to scan originals or use the machine as a network TWAIN scanner.

File path

The TWAIN driver is stored in the following folder on the CD-ROM:

\DRIVERS\TWAIN

System requirements

Hardware

PC/AT-compatible machines that support the operating system properly This driver cannot be used in RISC-based processor (MIPS R series, Alpha AXP, or PowerPC) Windows NT environments.

- Operating system Microsoft Windows 2000/XP/Vista Microsoft Windows Server 2003/R2
- Display resolution 800 × 600 pixels, 256 colours or higher

DeskTopBinder Lite

This section tells you the file path to DeskTopBinder Lite, the DeskTopBinder Lite system requirements, and the applications that are installed with DeskTopBinder Lite.

DeskTopBinder is installed on the client computers to integrate and manage various kinds of files such as scan files, files created with applications, and existing scan files. This software allows you to use various functions for stored scan files such as viewing stored files. Also, with the ScanRouter delivery software, you can view the files stored in in-trays of the delivery server or use other functions for stored files. For details about DeskTopBinder Lite, see DeskTopBinder Lite manuals or DeskTopBinder Lite Help.

File path

The DeskTopBinder Lite is stored in the following folder on the CD-ROM provided with this machine:

\UTILITY\DESKV2

System requirements

 Hardware PC/AT-compatible machines that support the operating system properly

Operating system

Microsoft Windows 2000 Professional SP1 or later

Microsoft Windows 2000 Server SP1 or later

Microsoft Windows 2000 Advanced Server SP1 or later

Microsoft Windows XP Professional/Home Edition

Microsoft Windows Vista Ultimate/Enterprise/Business/Home Premium/Home Basic

Microsoft Windows Server 2003 Standard Edition/Enterprise Edition Microsoft Windows Server 2003 R2 Standard Edition/Enterprise Edition

• Display resolution 800 × 600 pixels, 64K colours or higher

Software installed with DeskTopBinder Lite

- Auto Document Link
 Auto Document Link on the client computer monitors in-trays of the delivery server periodically, retrieves files delivered to in-trays, and notifies the user of delivery.
- Function Palette
 Function Palette allows you to use functions such as Scan using TWAIN
 scanner or Print without starting DeskTopBinder. To use these functions
 from Function Palette, you must first configure them using DeskTopBinder Extended Features. For details about Function Palette, see DeskTop Binder manuals.
- Extended Features Wizard
 The Extended Features Wizard allows you to make settings as in the [Extended Features...] of the [Tools] menu. For details, see DeskTopBinder Help.

Values of Various Set Items for **Transmission/Delivery Function**

This section explains the values of various transmission/delivery function settings.

Note

Depending on the type or settings of the file or original, you may not be able to specify the destination or enter the maximum number of characters stated below.

Transmission

This section explains the values of transmission function settings.

E-mail

The following table tells you the maximum values of the e-mail sending function settings.

Values of Set Items for Sending by E-mail

Item	Maximum value	Comments
Number of subject line characters	128 alphanumeric characters	-
Number of e-mail address characters	128 alphanumeric characters	E-mail addresses found via LDAP server search cannot be selected if they contain more than 128 characters.
Number of addresses you can specify at the same time	100	You can specify 50 destinations by direct entry, including LDAP search. Select the remaining 50 destinations from registered addresses.
Sendable file size	725.3 MB per file	-
Sendable number of pages	1,000 pages per file	-

Scan to Folder

The following table tells you the maximum values of the Scan to Folder function settings.

❖ Values of Set Items for Scan to Folder

Item	Maximum value	Comments
Number of path name characters on SMB	128 alphanumeric characters	-
Number of user name characters on SMB	64 alphanumeric characters	-
Number of password characters on SMB	64 alphanumeric characters	-
Number of server name characters on FTP	64 alphanumeric characters	-
Number of path name characters on FTP	128 alphanumeric characters	-
Number of user name characters on FTP	64 alphanumeric characters	-
Number of password characters on FTP	64 alphanumeric characters	-
Number of path name characters on NCP	128 alphanumeric characters	-
Number of user name characters on NCP	64 alphanumeric characters	-
Number of password characters on NCP	64 alphanumeric characters	-
Number of addresses that can be specified simultaneously	32	You can specify a maximum of 32 directly entered destinations.
Sendable file size	2,000 MB per file	-

Simultaneous transmission

The following table tells you the maximum values of settings for using the Email and Scan to Folder functions simultaneously.

❖ Values of Set Items for Simultaneous Transmission

Item	Maximum value	Comments
Number of destinations you can select for E-mail and Scan to Folder	132	-
Number of destinations you can select for sending by e-mail	100	You can specify a maximum of 50 directly entered destinations, including LDAP search-retrieved destinations.
Number of destinations you can set for sending by Scan to Folder	32	-

The Network Delivery Function

The following table tells you the values of setting items for the network delivery scanner function.

❖ Values of Set Items for Network Delivery

Item	Maximum value	Comments
Number of subject line characters	128 alphanumeric characters	-
Number of e-mail address characters	128 alphanumeric characters	-
Number of addresses you can specify at the same time	100	You can specify 50 destinations by direct entry, including LDAP search. Select the remaining 50 destinations from registered addresses. The maximum number of destinations you can specify differs depending on which ScanRouter delivery software you are using. For details, see the manuals supplied with the ScanRouter delivery software.
Sendable file size	2,000 MB per file	-

Scanner Features

This section explains Scanner Features settings.

To display the Scanner Features screen, press the [User Tools/Counter] key. For details about setting methods, see "Scanner Features", General Settings Guide.

∰Important

☐ The Scanner Features screen is displayed only when Function Upgrade Option is installed.

Scan Settings

Items	Description
Default Scan Settings	Allows you to specify the default resolution and scan size.
Original Setting	Allows you to specify whether originals are one-sided or two-sided as the default.
	This setting is available only when you have installed the optional ADF/ARDF.
Mixed Orig. Sizes Priority	Allows you to set the machine to automatically detect the size of mixed-size originals placed in the ADF/ARDF.
Orig. Orientation Priority	Allows you to select the default original orientation (helpful if you usually place originals in the same orientation).
Original Type Setting	Allows you to select a suitable original type setting.
Colour Mode Priority	Allows you to specify whether to scan originals in full colour or black and white.
Dropout Colour Settings	Allows you to select which colours not to scan (specified colours in the predefined range are not scanned).

Destination List Settings

Items	Description
Dest. List Priority 1	Allows you to specify whether the address book that is managed by this machine or the "Destination List" that is managed by the delivery server is displayed as the default.
	This setting is available only when the Network Delivery Scanner function is enabled by the ScanRouter delivery software.
Update Server Dest. List	Allows you to update the delivery server's destination list by pressing [Update Server Dest. List]. To use this function, under [System Settings], set [Delivery Option] to [On].
	This setting is available only when the Network Delivery Scanner function is enabled by the ScanRouter delivery software.
Dest. List Priority 2	Allows you to select whether to prioritize the e-mail destination list or the folder destination list.

Send Settings

Items	Description
TWAIN Standby Time	Allows you to select the machine's response if a client computer tries to use the TWAIN scanner while scanning is in progress.
File Type Priority	Allows you to specify the default file format of scan files.
Compression (B&W)	Allows you to specify a compression method for files scanned in black and white.
Compress. (Gray/Full Clr)	Allows you to specify a compression method for files scanned in gray scale or full colour.
Print&Del. Scanner Journal	Allows you to specify the machine's response if the maximum number of scanner journals is exceeded.
Print Scanner Journal	Allows you to print the scanner journal. The scanner journal is then deleted.
Delete Scanner Journal	Allows you to delete the scanner journal without printing it.
Max. E-mail Size	Allows you to select whether or not to limit the size of e-mail that has attachments.
Divide & Send E-mail	Allows you to select whether or not to divide files that exceed the size specified in [Max. E-mail Size] and send them as multiple e-mails.
E-mail Informatn. Language	Allows you to select the language of the messages that appear when you send scanned files by e-mail.

❖ Administrator Tools

Items	Description
Menu Protect	Allows you to set the default access level for functions whose settings can be changed by users other than the administrator.

Specifications

The following table tells you the specifications of the scanner.

❖ Specifications

Items	Description
Scan method	Flatbed scanning
Scan speed	When using the E-mail/ Scan to Folder/ Network Delivery Scanner function:
	Black&White: 42 page/min
	(Original size: A4 d, Original type: Text/Line Art, Resolution: 200dpi, Compression (MH): On, ITU-T No.1 chart, 1-side scanning)
	When using the E-mail/ Scan to Folder/ Network Delivery Scanner function:
	Full Colour: 13 page/min
	(Original size: A4 , Original type: Text/Photo, Resolution: 200dpi, Compression: Compression level default, Original Chart, 1-side scanning)
	Scanning speed differs depending on the fol- lowing: operating environment of the machine and computer, scan settings, and the content of originals (denser images require more time).
Image sensor type	CCD Image Sensor
Scan type	Sheet, book
Interface	Ethernet interface (10BASE - T or 100BASE - TX), IEEE 802.11 b (Wireless LAN) (optional)
Original sizes that can be scanned	Length: 128 - 432 mm(5.1 - 17.0 inches)
	Width: 105 - 297 mm(4.2 - 11.6 inches)
Scan sizes automatically detectable from the exposure glass	A34, B44, A44, B54, 81/2 × 134
Scan sizes automatically detectable from the ADF/ARDF	A3年, B4年, A4日, A4日, B5日, B5日, A5日, A5日, A5日, 8 ¹ / ₂ × 13日
Basic scanning resolution	600 dpi
Selectable scanning resolutions when using the E-mail/Scan to Folder/Network delivery scanner function	100 dpi, 200 dpi, 300 dpi, 400 dpi, 600 dpi
Selectable scanning resolution when using TWAIN scanner	100 dpi to 1200 dpi
Sendable file formats	TIFF, JPEG, PDF

Items	Description
Image compression type for black ans white (two values)	TIFF (MH, MR, MMR)
Image compression type for gray scale/full colour	JPEG
Network protocol	IPv4, IPX
Protocol for sending e-mail	SMTP, POP3
Protocol for Scan to Folder	SMB, FTP, NCP

INDEX

A	F
About This Machine, i Address book, 9, 45 registering e-mail address, 26 registering folder path, 70 ADF, 1 ARDF, 1 Attach Subject, 39 Auto Document Feeder, 1 Auto-run program, 125	File Status, 5 File Type, 106 Folder path, 55 FTP, 41, 62 Functions, 2 G General Settings Guide, i
В	<u>I</u>
Bindery, 64, 67 Browse Network, 59, 67	Image Density, 116 Install, 75,91 I/O device, 73
<u>C</u>	_ <u>J</u>
CD-ROM, 125 DeskTopBinder Lite, 126 TWAIN driver, 125 Check destination, 4 Confirmation displays, 4 Copy Reference, i CSV file, 9, 45	Job Information, 5 L LDAP server, 7 M
Custom size, 101	Manual Entry E-mail address, 21
Delivering scan files, 72, 77 Delivery server, 72 Density, 116 DeskTopBinder Lite, 71, 75, 126 Destination, 14, 80 Destination folder, 50 Destination List, 81 Display, 3 confirmation displays, 4 Display and using keys, 3	path to a destination folder, 57, 64 Manuals for this machine, i Mixed Sizes, 104, 120 N NCP, 67 NDS, 64, 67 NetWare, 41, 64, 67 Network Delivery function, 130 Network Guide, i Number of destinations for simultaneous
E	transmission, 129
E-mail address, 9 Encrypt Document, 108 Encryption level, 110 Ethernet, 8, 44, 89	Options, 95 Original Orientation, 97, 103 Original Setting, 99 Original type, 114

P	Searching for a sender
PDF, 108 changing security permissions, 111 encrypting, 108 encryption level, 110 PDF Security Encryption, 108 PDF Security Permissions, 111 Preparation	by e-mail address, 36 by name, 34 destination list, 30 registration number, 32 Security Reference, i Selecting a destination, 50, 80, 81 address book, 15, 51 Quick Dial key, 14
delivering scan files, 73 sending by e-mail, 8 sending by scan to folder, 44 using the Network TWAIN scanner, 89 Printer Reference, i	registration number, 53 Sender, 28 Sending e-mail, 12 Sending scan files by e-mail, 7 Sending Scan Files by Scan to Folder, 41 Send Options, 95
Q	Shared folder, 41
Quick Dial key, 14, 29, 50, 80	SmartDeviceMonitor for Admin, 9, 45 SMB, 57, 59
<u>R</u>	SMTP server, 7 Specifications, 133
Registration number, 16, 32, 82 Resolution, 96 Resolution and original Size, 122 Resolution and scan size, 121 Return Receipt, 38	Specifying the sender, 28 destination list, 30 Quick Dial key, 29 Specifying the subject, 39 Stamp, 105 Subject, 39 Symbol, 1
	Symbol, 1
Scanner driver, 92 Scanner Features, 131 Administrator Tools, 131 Destination List settings, 131 Scan Settings, 131 Send Settings, 131 Scanner Mode, 2 Scanner Reference, i ScanRouter delivery software, 71 Scan Size, 100	Transmission, 128 Troubleshooting, i TWAIN driver, 91, 125 TWAIN scanner, 87, 92, 117, 122 V Value of set item for sending e-mail, 128
Scan Size, 100 Scan to Folder, 48 Screen E-mail, 10 Network delivery scanner, 76 Scan to Folder, 46 Search by Name, 84	Values for set items of Scan to Folder function, 129 Values of various set items Delivery, 128 Transmission, 128
Search Destination by comment, 85 by folder path, 55 by name, 18, 54, 84 destination list, 15, 52, 81 e-mail address, 19 LDAP, 22 registration number, 16, 82	Web Image Monitor, 9,45

Trademarks

Adobe®, Acrobat®, Reader®, and PostScript® are either registered trademarks of Adobe Systems Incorporated in the United States and/or other countries.

Pentium® is a registered trademark of Intel Corporation.

NetWare® is a registered trademark of Novell, inc.

Microsoft®, Windows®, Windows NT®, Windows Server®, and Windows Vista® are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

Mac OS is a trademark of Apple Inc., registered in the U.S. and other countries.

Other product names used herein are for identification purposes only and might be trademarks of their respective companies. We disclaim any and all rights to those marks.

The proper names of the Windows operating systems are as follows:

The product name of Windows 98 is Microsoft® Windows® 98.

The product name of Windows Me is Microsoft® Windows® Millennium Edition (Windows Me).

The product names of Windows 2000 are as follows:

Microsoft® Windows® 2000 Professional

Microsoft® Windows® 2000 Server

Microsoft® Windows® 2000 Advanced Server

The product names of Windows XP are as follows:

Microsoft® Windows® XP Home Edition

Microsoft® Windows® XP Professional

The product names of Windows Vista are as follows:

Microsoft® Windows Vista® Ultimate

Microsoft® Windows Vista® Enterprise

Microsoft® Windows Vista® Business

Microsoft® Windows Vista® Home Premium

Microsoft® Windows Vista® Home Basic

The product names of Windows Server 2003 are as follows:

Microsoft® Windows Server® 2003 Standard Edition

Microsoft® Windows Server® 2003 Enterprise Edition

Microsoft® Windows Server® 2003 Web Edition

The product names of Windows Server 2003 R2 are as follows:

Microsoft® Windows Server® 2003 R2 Standard Edition

Microsoft® Windows Server® 2003 R2 Enterprise Edition

The product names of Windows NT 4.0 are as follows:

Microsoft® Windows NT® Workstation 4.0

Microsoft® Windows NT® Server 4.0



