1. [User Tools/Counter] key

Press to clear the current settings.

2. Display panel

4. [Program] key

person for this option.

3. [Clear Modes] key

⇒Please put this guide above your machine <>


12. [Start] kev


13. [#] key (Enter key)

14. [Clear/Stop] key


or sending.


Press to start copying, printing, scanning,

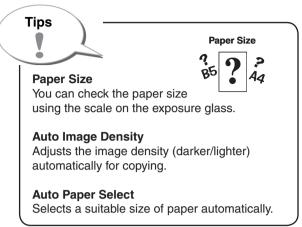

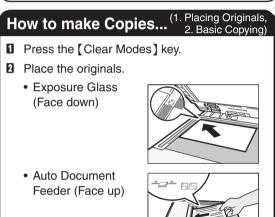


 Make desired settings. 4 Enter the number of copies. Press the [Start] key.



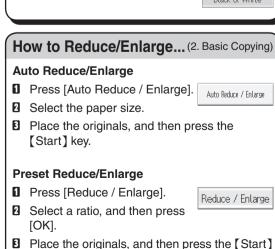

key. (Paper size is selected automatically.)

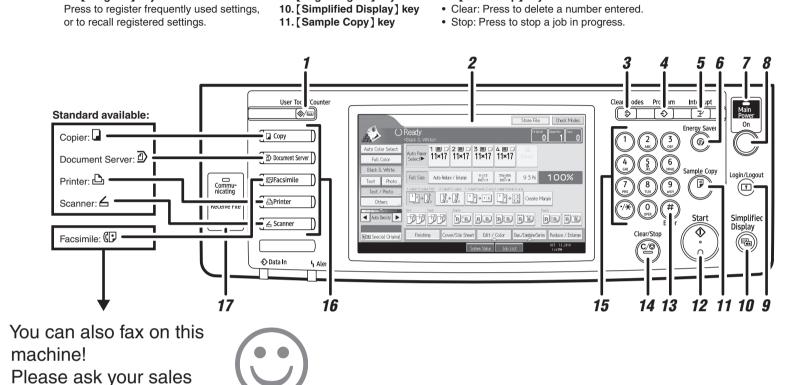


5. [Interrupt] key


6. [Energy Saver] key

9. [Login/Logout] key

8. Operation switch

7. Main power indicator

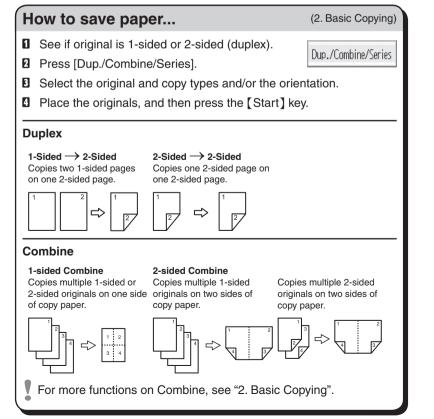


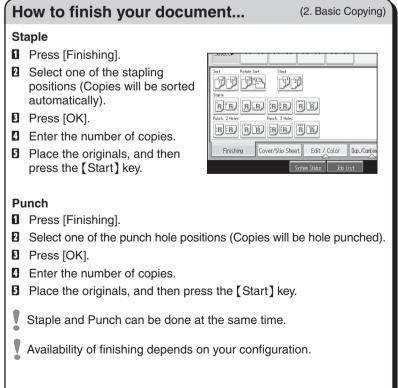

15. Number kevs

16. Function keys

17. Indicators

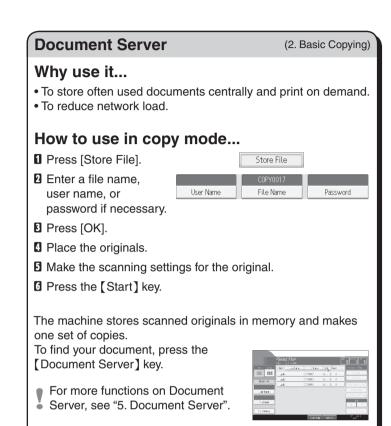

Simplified Display

When you press the [Simplified Display] key, the screen changes to the simplified display. Letters and keys are displayed at a larger size, making operations easier. Certain keys do not appear on the simplified display.

Advanced features

Reduce/Enlarge

- Zoom: You can specify the reproduction ratio in increments of 1%.
- Magnification: You can specify the horizontal and vertical reproduction ratios, individually.

Series Copies

Separately copies the front and back of a 2-sided original onto two sheets.

Booklet/Magazine

 Copies two or more originals in page order.

Edit/Stamp

- Image Repeat/Double Copies: The original image is copied repeatedly.
- Centering: Moves image to
- Erase: Erases the center and/or all four sides of the original image.
- · Stamps: Copies with the date, page numbers, etc.

Cover/Slip Sheet

- Front Cover / Front/Back Cover: Create cover sheets.
- Designate: Copies certain pages of the original onto designation sheets.