






# ⇒Please put this guide above your machine

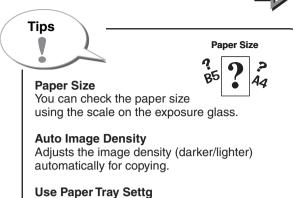


The machine scans the originals based on the size and orientation of the paper loaded in the selected tray. You do not have to specify the size and orientation of the originals.

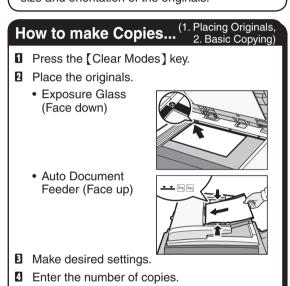


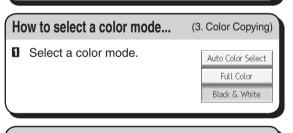



**5** Select the paper trav.


6 Press the [Start] key.

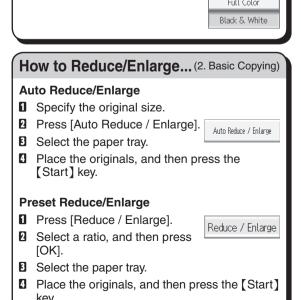

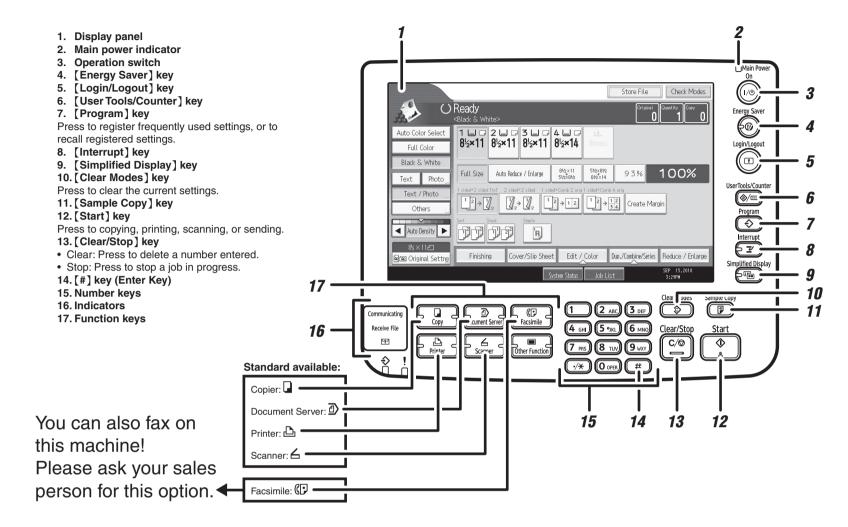

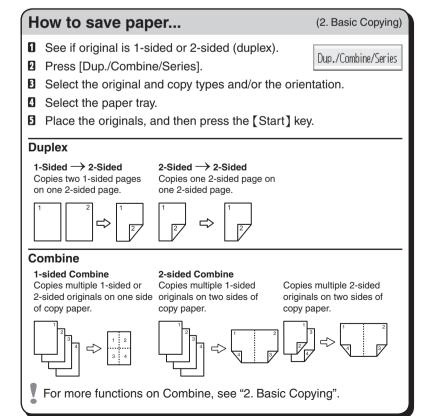

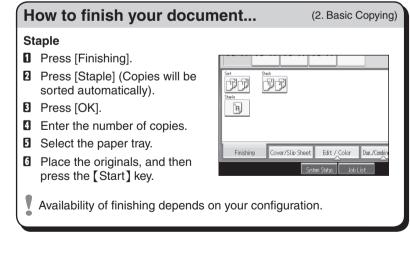

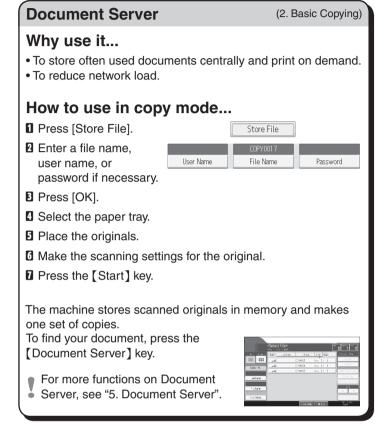

# Simplified Display

When you press the [Simplified Display] key, the screen changes to the simplified display. Letters and keys are displayed at a larger size, making operations easier. Certain keys do not appear on the simplified display.

## Advanced features

### Reduce/Enlarge

- Zoom: You can specify the reproduction ratio in increments of 1%.
- Magnification: You can specify the horizontal and vertical reproduction ratios, individually.

#### Series Copies

 Separately copies the front and back of a 2-sided original onto two sheets.

#### Booklet/Magazine

 Copies two or more originals in page order.

#### Edit/Stamp

- Image Repeat: The original image is copied repeatedly.
- Centering: Moves image to center.
- Erase: Erases the center and/or all four sides of the original image.
- Stamps: Copies with the date, page numbers, etc.

#### Cover/Slip Sheet

- Front Cover / Front/Back
  Cover: Create cover sheets.
- Designate: Copies certain pages of the original onto designation sheets.