Quick Reference Printer Guide

⇒Please use this guide from behind your PC ←

How to install a printer driver...


- Insert the CD-ROM 'Printer Drivers and Utilities' into the CD-ROM drive.
- 2 Select a language and click [OK].
- B Select [Quick Install]. (PCL and RPCS printer driver plus DeskTopBinder-SmartDeviceMonitor for Client are installed)
- 4 Click [I accept the agreement], and then click [Next >].
- **5** Select the required model.
- Click [Install].
- Click [Finish], click [Exit]


How to prepare printing...

- 1 Select [Start], [Settings], [Printers].
- 2 Select the required printer and RPCS driver by right-click.
- B Select [Set as Default Printer].
- Select [Printing Preferences...].
- 5 You get a message 'Configure...', press [OK].
- **5** Select the options in [Change Accessories] that have been installed on the machine and press [OK].
- The next screen opens. Set original paper size.
- Press [Add/Change Custom Settings...]. Make your settings under [Setup], [Edit], [Finishing], [Cover/Slip Sheet] and
- Press [Save as], give custom setting a name and press

How to print...

- 1 Open your document.
- 2 Press directly the 'Print' icon, or
- Press [File], [Print], [Properties].
- B Choose one of the pre-settings or make a new setting.
- Press [OK].
- D Press [Number of copies].
- G Press [OK].

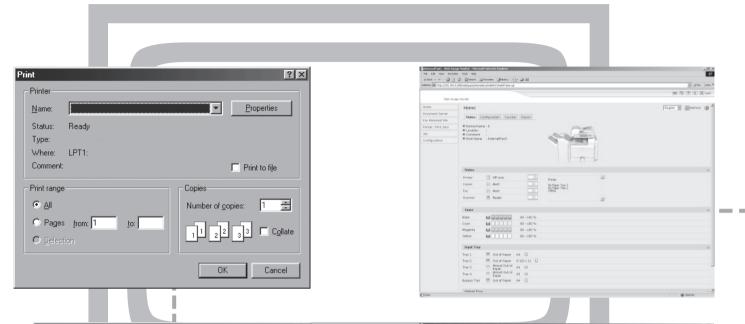

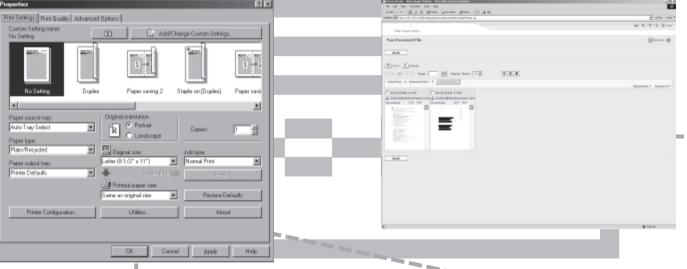

- 1 Press [File], [Print] and [Properties].
- 2 In [Job Type], choose [Locked Print].
- Press [Details].
- 4 Specify [User ID] and [Password].
- **6** Make steps as described in 'How to print...' from step 3
- Go to the machine and select the [Printer] key.
- Press [Print Jobs].
- Press [Locked Print Job List].
- Enter your password and press [OK]. Reconfirm by pressing [Yes].

How to use Web Image Monitor...

- Start a Web browser.
- 2 Enter the IPv4 address of your machine as a URL.
- El Choose from one of the following functions:
- Home
- Document Server
- Fax Received File
- Printer: Print Jobs
- Configuration

Why use it?

- To have access to the machine anywhere via the web.
- To manage certain functions from your pc, which is easier

How to receive a fax to download

- Settings must be made before you can receive fax documents. See the bundled CD: Facsimile Reference <Fax via Computer> chapter 6.
- 1 Start a Web browser.
- 2 Enter the IPv4 address of your machine as an URL.
- Click [Fax Received File].
- Click Property Icon of a fax document.
- 5 View contents of fax documents.
- **1** To download a fax document, click [PDF] or [Multipage TIFF].
- Press [Download], press [OK].

How to print a confidential document...

- **5** Press [OK] and reconfirm password.

- Select your document and press [Print].
- File is being printed and also deleted.

How to print documents later (Hold Print) How to print stored documents on the hard disk (Stored Print)

- 1 Press [File], [Print] and [Properties].
- In [Job Type], choose [Hold Print] or [Stored Print].
- Press [Details].
- Specify [User ID] and [Password] if necessary (for password protected Stored Print documents).
- **5** Press [OK] and reconfirm password.
- **6** Make steps as described in 'How to print...' from step 3
- Go to the machine and select the [Printer] key.
- Press [Print Jobs].
- Press [Hold Print Job List] or [Stored Print Job List].
- Press ID and enter password if necessary (for password protected Stored Print documents).
- Select your document and press [Print].
- Hold Print file is being printed and also deleted. Stored Print file is being printed.

How to monitor your machine in the network...

- Use SmartDeviceMonitor, which is automatically installed with your printer drivers.
- 1 Right-click the green PC icon at the bottom of your screen.
- 2 Select [Properties], [Option...], [Network Devices] and press
- B Select your machine and press [OK].
- Select a machine in [Printers Folder] and select [To be monitored]. Select [Displayed on Task Bar].
- If you select this machine from the SmartDeviceMonitor icon, you can see the [Status], [Configuration] and [Job History]. Next time you print, you get a message on your pc in case of any failure.

