How to send a fax

- 1. Press [Home] at the bottom of the screen in the Center.
- 2. Press the [Fax] icon on the Home screen.







- 4. Specify a destination.
- 5. Press [Settings].
- 6. Flick the screen up and down, and make the scan settings you require.
- 7. Press [Start].

How to use the Control Panel



- 1. Display panel
- 2. [Login]/[Logout]
- 3. Main power indicator
- 4. [Energy Saver]
- 5. Application list icon

Press to display the application list that contains shortcuts to the applications on the [Home] screen.

- 6. Icons to switch between screens
- 7. [Stop]

Press to stop a job such as copying if it is in progress.

8. [Men

Displays the menu screen of the application you are using. Depending on the application, this key may be disabled.

9. [Home]

Press to display the [Home] screen.

- 10. [Return]
- 11. Status indicator

Indicates the status of the system. It stays lit when an error occurs or the toner runs out.

- 12. [Check Status]
- 13. Data In indicator (facsimile and printer mode)
 Flashes when the machine is receiving print jobs or LAN-Fax documents from a computer. See
 Fax and Print.
- 14. Fax indicator

Indicates the status of the fax functions. Flashes during data transmission and reception. Stays lit when receiving a fax via Confidential or Substitute Reception.

- 15. Icon/Widget display area
- 16. Name of the Log-in User

How to make settings



Press the radio button of the item you want to use.



Select the image density by flicking the screen.

Top Menu

How to use the [Fax] screen





