

Operating Instructions Security Reference



Getting Started
 Authentication and its Application
 Preventing Information Leaks
 Managing Access to the Machine
 Enhanced Network Security
 Specifying the Extended Security Functions
 Troubleshooting
 Appendix

Read this manual carefully before you use this machine and keep it handy for future reference. For safe and correct use, be sure to read the Safety Information in "About This Machine" before using the machine.

Introduction

This manual contains detailed instructions and notes on the operation and use of this machine. For your safety and benefit, read this manual carefully before using the machine. Keep this manual in a handy place for quick reference.

Do not copy or print any item for which reproduction is prohibited by law.

Copying or printing the following items is generally prohibited by local law:

bank notes, revenue stamps, bonds, stock certificates, bank drafts, checks, passports, driver's licenses.

The preceding list is meant as a guide only and is not inclusive. We assume no responsibility for its completeness or accuracy. If you have any questions concerning the legality of copying or printing certain items, consult with your legal advisor.

Important

Contents of this manual are subject to change without prior notice. In no event will the company be liable for direct, indirect, special, incidental, or consequential damages as a result of handling or operating the machine.

Trademarks

Microsoft[®], Windows[®] and Windows NT[®] are registered trademarks of Microsoft Corporation in the United States and/or other countries.

AppleTalk, EtherTalk, are registered trademarks of Apple Computer, Inc.

Bonjour is a trademark of Apple Computer Inc.

PostScript® and Acrobat® are registered trademarks of Adobe Systems, Incorporated.

PCL is a registered trademark of Hewlett-Packard Company.

NetWare is a registered trademarks of Novell, Inc.

Bluetooth is a Trademark of the Bluetooth SIG, Inc. (Special Interest Group) and licensed to Ricoh Company Limited.

PictBridge is a trademark.

Other product names used herein are for identification purposes only and might be trademarks of their respective companies. We disclaim any and all rights to those marks.

The proper names of the Windows operating systems are as follows:

- The product name of Windows[®] 95 is Microsoft[®] Windows 95.
- The product name of Windows[®] 98 is Microsoft[®] Windows 98.
- The product name of Windows® Me is Microsoft® Windows Millennium Edition (Windows Me).
- The product names of Windows[®] 2000 are as follows: Microsoft[®] Windows[®] 2000 Advanced Server Microsoft[®] Windows[®] 2000 Server Microsoft[®] Windows[®] 2000 Professional
- The product names of Windows[®] XP are as follows: Microsoft[®] Windows[®] XP Professional Microsoft[®] Windows[®] XP Home Edition
- The product names of Windows Server[™] 2003 are as follows: Microsoft[®] Windows Server[™] 2003 Standard Edition Microsoft[®] Windows Server[™] 2003 Enterprise Edition Microsoft[®] Windows Server[™] 2003 Web Edition
- The product names of Windows NT[®] 4.0 are as follows: Microsoft[®] Windows NT[®] Server 4.0 Microsoft[®] Windows NT[®] Workstation 4.0

Notes

Some illustrations in this manual might be slightly different from the machine.

Certain options might not be available in some countries. For details, please contact your local dealer.

Two kinds of size notation are employed in this manual. With this machine refer to the metric version.

Manuals for This Machine

Refer to the manuals that are relevant to what you want to do with the machine.

* About This Machine

Be sure to read the Safety Information in this manual before using the machine.

This manual provides an introduction to the functions of the machine. It also explains the control panel, preparation procedures for using the machine, how to enter text, and how to install the CD-ROMs provided.

General Settings Guide

Explains User Tools settings, and Address Book procedures such as registering fax numbers, e-mail addresses, and user codes. Also refer to this manual for explanations on how to connect the machine.

Troubleshooting

Provides a guide to solving common problems, and explains how to replace paper, toner, staples, and other consumables.

Security Reference(This manual)

This manual is for administrators of the machine. It explains security functions that the administrators can use to protect data from being tampered, or prevent the machine from unauthorized use.

Also refer to this manual for the procedures for registering administrators, as well as setting user and administrator authentication.

Copy/ Document Server Reference

Explains Copier and Document Server functions and operations. Also refer to this manual for explanations on how to place originals.

Facsimile Reference

Explains Facsimile functions and operations.

Printer Reference

Explains Printer functions and operations.

Scanner Reference

Explains Scanner functions and operations.

Network Guide

Explains how to configure and operate the machine in a network environment, and use the software provided.

This manual covers all models, and includes descriptions of functions and settings that might not be available on this machine. Images, illustrations, and information about operating systems that are supported might also differ slightly from those of this machine.

Other manuals

- Manuals for This Machine
- Safety Information
- Quick Reference Copy Guide
- Quick Reference Fax Guide
- Quick Reference Printer Guide
- Quick Reference Scanner Guide
- PostScript3 Supplement
- UNIX Supplement
- Manuals for DeskTopBinder Lite
- DeskTopBinder Lite Setup Guide
- DeskTopBinder Introduction Guide
- Auto Document Link Guide

🖉 Note

- □ Manuals provided are specific to machine types.
- □ Adobe Acrobat Reader/Adobe Reader must be installed in order to view the manuals as PDF files.

Product name	General name
DeskTopBinder Lite ^{*1} and DeskTopBinder Professional	DeskTopBinder
ScanRouter EX Professional $\ensuremath{^{*1}}$ and ScanRouter EX Enterprise $\ensuremath{^{*1}}$	The ScanRouter delivery software

*1 Optional

TABLE OF CONTENTS

Manuals for This Machine	i.
How to Read This Manual	1
Symbols	1

1. Getting Started

Enhanced Security	3
Glossary	
Setting Up the Machine	
Security Measures Provided by this Machine	
Using Authentication and Managing Users	
Preventing Information Leaks	
Limiting and Controlling Access	
Enhanced Network Security	

2. Authentication and its Application

Administrators and Users	11
Administrators	11
User	12
The Management Function	13
About Administrator Authentication	14
About User Authentication	15
Enabling Authentication	16
Authentication Setting Procedure	
Administrator Authentication	
Specifying Administrator Privileges	17
Registering the Administrator	
Logging on Using Administrator Authentication	23
Logging off Using Administrator Authentication	26
Changing the Administrator	27
User Authentication	29
User Code Authentication	29
Basic Authentication	33
Windows Authentication	42
LDAP Authentication	50
Integration Server Authentication	57
If User Authentication is Specified	66
User Code Authentication (Using the Control Panel)	66
User Code Authentication (Using a Printer Driver)	66
Login (Using the Control Panel)	
Log Off (Using the Control Panel)	
Login (Using a Printer Driver)	
Login (Using Web Image Monitor)	
Log Off (Using Web Image Monitor)	
Auto Logout	
Authentication using an external device	71

3. Preventing Information Leaks

Guarding Against Unauthorized Copying	.73
Unauthorized Copy Prevention	
Data Security for Copying	.75
Printing Limitations	.76
Notice	
Printing with Unauthorized Copy Prevention and Data Security for Copying	.77
Printing a Confidential Document	.80
Choosing a Locked Print file	.80
Printing a Locked Print File	
Deleting Locked Print Files	. 82
Changing Passwords of Locked Print Files	
Unlocking Locked Print Files	.86
Specifying Access Permission for Stored Files	.87
Assigning Users and Access Permission for Stored Files	.88
Specifying Access Privileges for Files Stored using the Scanner and Fax Functions	
Assigning the User and the Access Permission for the User's Stored Files	
Specifying Passwords for the Stored Files	
Unlocking Files	.99
Preventing Data Leaks Due to Unauthorized Transmission1	01
Restrictions on Destinations1	101
Protecting the Address Book1	04
Address Book Access Permission1	
Encrypting the Data in the Address Book1	
Deleting Data on the Hard Disk1	10
Overwriting the Data on the Hard Disk1	

4. Managing Access to the Machine

Preventing Modification of Machine Settings	119	
Menu Protect	120	
Menu Protect	120	
Limiting Available Functions	124	
Specifying Which Functions are Available	124	
Managing Log Files	126	
Specifying Delete All Logs	126	
Transfer Log Setting		

5. Enhanced Network Security

Preventing Unauthorized Access	129
Enabling/Disabling Protocols	
Access Control	130
Specifying Network Security Level	131
Encrypting Transmitted Passwords	
Driver Encryption Key	
Group Password for PDF files	
IPP Authentication Password	
Protection Using Encryption	
SSL (Secure Sockets Layer) Encryption	
User Settings for SSL (Secure Sockets Layer)	
Setting the SSL / TLS Encryption Mode	
SNMPv3 Encryption	

6. Specifying the Extended Security Functions

Changing the Extended Security Functions	
Changing the Extended Security Functions	
Settings	
Other Security Functions	
Fax Function	
Scanner Function	159
Limiting Machine Operation to Customers Only	
Settings	

7. Troubleshooting

Authentication Does Not Work Properly	
A Message Appears	
Machine Cannot Be Operated	

8. Appendix

Operations by the Supervisor	169
Logging on as the Supervisor	169
Logging off as the Supervisor	
Changing the Supervisor	
Resetting an Administrator's Password	
Machine Administrator Settings	174
System Settings	174
Maintenance	
Copier / Document Server Features	176
Facsimile Features	177
Printer Features	178
Scanner Features	179
Settings via Web Image Monitor	180
Settings via SmartDeviceMonitor for Admin	

Network Administrator Settings	183
System Settings	
Facsimile Features	184
Scanner Features	184
Settings via Web Image Monitor	184
Settings via SmartDeviceMonitor for Admin	186
File Administrator Settings	
System Settings	
Facsimile Features	
Printer Features	187
Settings via Web Image Monitor	188
User Administrator Settings	
System Settings	189
Settings via Web Image Monitor	
Settings via SmartDeviceMonitor for Admin	190
Document Server File Permissions	191
The Privilege for User Account Settings in the Address Book	
User Settings	
Copier / Document Server Features	
Printer Functions	
Scanner Features	
Facsimile Features	202
System Settings	204
Web Image Monitor Setting	
Functions That Require Options	
	007
INDEX	

How to Read This Manual

Symbols

This manual uses the following symbols:

A WARNING:

Indicates important safety notes.

Ignoring these notes could result in serious injury or death. Be sure to read these notes. They can be found in the "Safety Information" section of About This Machine.

A CAUTION:

Indicates important safety notes.

Ignoring these notes could result in moderate or minor injury, or damage to the machine or to property. Be sure to read these notes. They can be found in the "Safety Information" section of About This Machine.

Important

Indicates points to pay attention to when using the machine, and explanations of likely causes of paper misfeeds, damage to originals, or loss of data. Be sure to read these explanations.

🖉 Note

Indicates supplementary explanations of the machine's functions, and instructions on resolving user errors.

₽ Reference

This symbol is located at the end of sections. It indicates where you can find further relevant information.

[]

Indicates the names of keys that appear on the machine's display panel.

[]

Indicates the names of keys on the machine's control panel.

1. Getting Started

Enhanced Security

This machine's security function can be enhanced through the management of the machine and its users using the improved authentication functions.

By specifying access limits on the machine's functions and the documents and data stored in the machine, you can prevent information leaks and unauthorized access.

Data encryption can prevent unauthorized data access and tampering via the network.

Authentication and Access Limits

Using authentication, administrators manage the machine and its users. To enable authentication, information about both administrators and users must be registered in order to authenticate users via their login user names and passwords.

Four types of administrator manage specific areas of machine usage, such as settings and user registration.

Access limits for each user are specified by the administrator responsible for user access to machine functions and documents and data stored in the machine.

PReference

For details, see p.11 "Administrators".

Encryption Technology

This machine can establish secure communication paths by encrypting transmitted data and passwords.

Glossary

Administrator

There are four types of administrator according to the administered function: machine administrator, network administrator, file administrator, and user administrator. We recommend only one person take each administrator role. You can spread the workload and limit unauthorized operation by a single administrator.

Basically, administrators make machine settings and manage the machine; they cannot perform normal operations, such as copying and printing.

User

A user performs normal operations on the machine, such as copying and printing.

File Creator (Owner)

This is a user who can store files in the machine and authorize other users to view, edit, or delete those files.

Registered User

This is a user whose personal information is registered in the address book. The registered user is the user who knows the login user name and password.

Administrator Authentication

Administrators are authenticated by means of the login user name and login password supplied by the administrator when specifying the machine's settings or accessing the machine over the network.

User Authentication

Users are authenticated by means of the login user name and login password supplied by the user when specifying the machine's settings or accessing the machine over the network.

The user's login user name and password, as well such personal information items as telephone number and e-mail address, are stored in the machine's address book. The personal information can be obtained from the Windows domain controller (Windows authentication), LDAP Server (LDAP authentication), or Integration Server (Integration Server Authentication) connected to the machine via the network.

Login

This action is required for administrator authentication and user authentication. Enter your login user name and login password on the machine's control panel. A login user name and login password may also be supplied when accessing the machine over the network or using such utilities as Web Image Monitor and SmartDeviceMonitor for Admin.

Logout

This action is required with administrator and user authentication. This action is required when you have finished using the machine or changing the settings.

Setting Up the Machine

If you want higher security, make the following setting before using the machine:

- **1** Turn the machine on.
- **2** Press the [User Tools/Counter] key.
- Press [System Settings].



4 Press [Interface Settings].

Settings					
y Paper ttings	Timer Settings	Interfa Settin		File Transfer	Administ
hange / Delete	User Text			Output:	Copier
ound	Off		Output: Document Serve		ment Server
eeper	On		Output: Facsimile		
Display	Up		Output: Printer		
ority	Copier		System Status/Job List Display		

5 Specify IP Address.

For details, see the General Settings Guide.

6 Connect the machine to the network.

2 Start the Web Image Monitor, and then log on to the machine as the administrator.

For details, see p.69 "Login (Using Web Image Monitor)".

8 Install the server certificate.

For details, see p.140 "Protection Using Encryption".

9 Enable secure sockets layer (SSL).

${\rm I}\!{\rm D}$ Enter the administrator's user name and password.

During steps () to (), the administrator's default account (user name: admin, password: blank) in unencrypted form will be vulnerable to network interception, and this account may be used for breaking into the machine over the network.

If you consider this risky, we recommend that you specify a temporary administrator password between steps **1** and **5**.

PReference

p.20 "Registering the Administrator"

Security Measures Provided by this Machine

Using Authentication and Managing Users

Enabling Authentication

To control administrators' and users' access to the machine, perform administrator authentication and user authentication using login user names and login passwords. To perform authentication, the authentication function must be enabled.

PReference

For details, see p.16 "Enabling Authentication".

Specifying Authentication Information to Log on

Users are managed using the personal information managed in the machine's address book.

By enabling user authentication, you can allow only people registered in the address book to use the machine. Users can be managed in the address book by the user administrator.

PReference

For details, see p.39 "Specifying Authentication Information to Log on".

Specifying Which Functions are Available

This can be specified by the user administrator. Specify the functions available to registered users. By making this setting, you can limit the functions available to users.

PReference

For details, see p.124 "Specifying Which Functions are Available".

Preventing Information Leaks

Guarding Against Unauthorized Copying (Unauthorized Copy Prevention)

Using the printer driver, you can embed mask and pattern in the printed document.

PReference

For details, see p.73 "Guarding Against Unauthorized Copying".

Guarding Against Unauthorized Copying (Data Security for Copying)

Using the printer driver to enable data security for the copying function, you can print a document with an embedded pattern of hidden text.

To gray out the copy or stored file of a copy-guarded document when the document is copied or stored , the optional security module is required.

PReference

For details, see p.73 "Guarding Against Unauthorized Copying".

Printing confidential files

Using the printer's Locked Print, you can store files in the machine as confidential files and then print them. You can print a file using the machine's control panel and collect it on the spot to prevent others from seeing it.

PReference

For details, see p.80 "Printing a Confidential Document".

Protecting Stored Files from Unauthorized Access

You can specify who is allowed to use and access scanned files and the files in Document Server. You can prevent activities such as the printing of stored files by unauthorized users.

PReference

For details, see p.87 "Specifying Access Permission for Stored Files".

Protecting Stored Files from Theft

You can specify who is allowed to use and access scanned files and the files in Document Server. You can prevent such activities as the sending and downloading of stored files by unauthorized users.

PReference

For details, see p.87 "Specifying Access Permission for Stored Files".

Preventing Data Leaks Due to Unauthorized Transmission

You can specify in the address book which users are allowed to send files using the scanner or fax function.

You can also limit the direct entry of destinations to prevent files from being sent to destinations not registered in the address book.

PReference

For details, see p.101 "Preventing Data Leaks Due to Unauthorized Transmission".

Protecting Registered Information in the Address Book

You can specify who is allowed to access the data in the address book. You can prevent the data in the address book being used by unregistered users. To protect the data from unauthorized reading, you can also encrypt the data in the address book.

To protect the data from unauthorized reading, you can also encrypt the data in the address book.

PReference

For details, see p.104 "Protecting the Address Book".

Managing Log Files

You can improve data security by deleting log files stored in the machine. By transferring the log files, you can check the history data and identify unauthorized access.

To transfer the log data, the log collection server is required.

PReference

For details, see p.126 "Managing Log Files".

Overwriting the Data on the Hard Disk

Before disposing of the machine, make sure all data on the hard disk is deleted. Prevent data leakage by automatically deleting transmitted printer jobs from memory.

To overwrite the hard disk data, the optional DataOverwriteSecurity unit is required.

\mathcal{P} Reference

For details, see p.110 "Overwriting the Data on the Hard Disk".

Limiting and Controlling Access

Preventing Modification or Deletion of Stored Data

You can specify who is allowed to access stored scan files and files stored in Document Server.

You can permit selected users who are allowed to access stored files to modify or delete the files.

PReference

For details, see p.87 "Specifying Access Permission for Stored Files".

Preventing Modification of Machine Settings

The machine settings that can be modified depend on the type of administrator account.

Register the administrators so that users cannot change the administrator settings.

PReference

For details, see p.119 "Preventing Modification of Machine Settings".

Limiting Available Functions

To prevent unauthorized operation, you can specify who is allowed to access each of the machine's functions.

PReference

For details, see p.124 "Limiting Available Functions".

Enhanced Network Security

Preventing Unauthorized Access

You can limit IP addresses or disable ports to prevent unauthorized access over the network and protect the address book, stored files, and default settings.

PReference

For details, see p.129 "Preventing Unauthorized Access".

Encrypting Transmitted Passwords

Prevent login passwords, group passwords for PDF files, and IPP authentication passwords being revealed by encrypting them for transmission.

Also, encrypt the login password for administrator authentication and user authentication.

PReference

For details, see p.135 "Encrypting Transmitted Passwords".

Safer Communication Using SSL

When you access the machine using a Web Image Monitor or IPP, you can establish encrypted communication using SSL. When you access the machine using an application such as SmartDeviceMonitor for Admin, you can establish encrypted communication using SNMPv3 or SSL.

To protect data from interception, analysis, and tampering, you can install a server certificate in the machine, negotiate a secure connection, and encrypt transmitted data.

🖉 Note

□ To establish encrypted communication using SSL, the machine must have the printer and scanner functions.

PReference

For details, see p.140 "Protection Using Encryption".

2. Authentication and its Application

Administrators and Users

When controlling access using the authentication specified by an administrator, select the machine's administrator, enable the authentication function, and then use the machine.

The administrators manage access to the allocated functions, and users can use only the functions they are permitted to access. To enable the authentication function, the login user name and login password are required in order to use the machine.

Specify administrator authentication, and then specifying user authentication.

∰Important

□ If user authentication is not possible because of a problem with the hard disk or network, you can use the machine by accessing it using administrator authentication and disabling user authentication. Do this if, for instance, you need to use the machine urgently.

PReference

For details, see p.37 "Specifying Login User Name and Login Password".

Administrators

There are four types of administrator according to the administered function: machine administrator, network administrator, file administrator, and user administrator.

By sharing the administrative work among different administrators, you can spread the workload and limit unauthorized operation by a single administrator. You can also specify a supervisor who can change each administrator's password. Administrators are limited to managing the machine's settings and controlling user access. so they cannot use functions such as copying and printing. To use such functions, you need to register a user in the address book and then be authenticated as the user.

PReference

For details, see p.20 "Registering the Administrator". For details, See p.169 "Operations by the Supervisor".

User Administrator

This is the administrator who manages personal information in the address book. A user administrator can register/delete users in the address book or change users' personal information.

Users registered in the address book can also change and delete their own information. If any of the users forget their password, the user administrator can delete it and create a new one, allowing the user to access the machine again.

Machine Administrator

This is the administrator who mainly manages the machine's default settings. You can set the machine so that the default for each function can only be specified by the machine administrator. By making this setting, you can prevent unauthorized people from changing the settings and allow the machine to be used securely by its many users.

Network Administrator

This is the administrator who manages the network settings. You can set the machine so that network settings such as the IP address and settings for sending and receiving e-mail can only be specified by the network administrator. By making this setting, you can prevent unauthorized users from changing the settings and disabling the machine, and thus ensure correct network operation.

File Administrator

This is the administrator who manages permission to access stored files. You can specify passwords to allow only registered and permitted users to view and edit files stored in Document Server. By making this setting, you can prevent data leaks and tampering due to unauthorized users viewing and using the registered data.

Supervisor

The supervisor can delete an administrator's password and specify a new one. The supervisor cannot specify defaults or use normal functions. However, if any of the administrators forget their password and cannot access the machine, the supervisor can provide support.

User

Users are managed using the personal information managed in the machine's address book.

By enabling user authentication, you can allow only people registered in the address book to use the machine. Users can be managed in the address book by the user administrator.

Reference

For details about registering users in the address book, see General Settings Guide, the SmartDeviceMonitor for Admin Help, or the Web Image Monitor Help.

The Management Function

The machine has an authentication function requiring a login user name and login password. By using the authentication function, you can specify access limits for individual users and groups of users. Using access limits, you can not only limit the machine's available functions but also protect the machine settings and files and data stored in the machine.

∰Important


- □ If you have enabled **[Administrator Authentication Management]**, make sure not to forget the administrator login user name and login password. If an administrator login user name or login password is forgotten, a new password must be specified using the supervisor's authority.
- □ Be sure not to forget the supervisor login user name and login password. If you do forget them, a service representative will to have to return the machine to its default state. This will result in all data in the machine being lost and the service call may not be free of charge.

PReference

For details, see p.169 "Operations by the Supervisor".

About Administrator Authentication

There are four types of administrator according to the administered function: user administrator, machine administrator, network administrator, and file administrator.

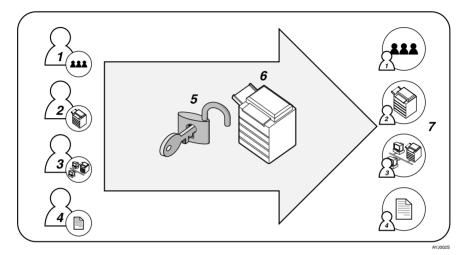

1. User Administrator

This administrator manages personal information in the address book. You can register/delete users in the address book or change users' personal information.

2. Machine Administrator

This administrator manages the machine's default settings. You can set the machine so that the default such as data security for copying function and delete all logs can only be specified by the machine administrator.

3. Network Administrator

This administrator manages the network settings. You can set the machine so that network settings such as the IP address and settings for sending and receiving email can only be specified by the network administrator only.

4. File Administrator

This administrator manages permission to access stored files. You can specify passwords for the files stored in the Document Server so only authorized users can view and change them.

5. Authentication

Administrators must enter their login user name and password to be authenticated.


6. This machine

7. Administrators manage the machine's settings and access limits. For details about each administrator, see p.11 "Administrators".

About User Authentication

This machine has an authentication function to prevent unauthorized access.

By using login user name and login password, you can specify access limits for individual users and groups of users.

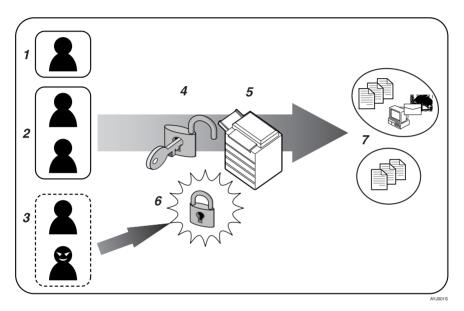

1. User

A user performs normal operations on the machine, such as copying and printing.

2. Group

A group performs normal operations on the machine, such as copying and printing.

3. Unauthorized User

4. Authentication

Using a login user name and password, user authentication is performed.

5. This Machine

6. Access Limit

Using authentication, unauthorized users are prevented from accessing the machine.

7. Authorized users and groups can use only those functions permitted by the administrator.

Enabling Authentication

To control administrators' and users' access to the machine, perform administrator or user authentication using login user names and passwords. To perform authentication, the authentication function must be enabled. To specify authentication, you need to register administrators.

PReference

For details, see p.20 "Registering the Administrator".

Authentication Setting Procedure

Specify administrator authentication and user authentication according to the following chart:

🖉 Note

- To specify Basic Authentication, Windows Authentication, LDAP Authentication, or Integration Server Authentication, you must first specify administrator authentication.
- □ You can specify User Code Authentication without specifying administrator authentication.

Administrator Authentication See p.17 "Specifying Administra- tor Privileges".	Specifying Administrator Privileges See p.17 "Specifying Administrator Privileges". Registering the Administrator See p.20 "Registering the Administrator".
User Authentication See p.16 "Enabling Authentica- tion".	 Specifying User Authentication Authentication that requires only the machine: User Code Authentication See p.29 "User Code Authentication". Basic Authentication See p.33 "Basic Authentication". Authentication that requires external devices: Windows Authentication See p.42 "Windows Authentication". LDAP Authentication See p.50 "LDAP Authentication". Integration Server Authentication See p.57 "Integration Server Authentication".

Administrator Authentication

Administrators are handled differently from the users registered in the address book. When registering an administrator, you cannot use a login user name already registered in the address book. Windows Authentication, LDAP Authentication and Integration Server Authentication are not performed for an administrator, so an administrator can log on even if the server is unreachable because of a network problem.

Each administrator is identified by a login user name. One person can act as more than one type of administrator if multiple administrator authority is granted to a single login user name.

You can specify the login user name, login password, and encryption password for each administrator.

The encryption password is a password for performing encryption when specifying settings using Web Image Monitor or SmartDeviceMonitor for Admin.

The password registered in the machine must be entered when using applications such as SmartDeviceMonitor for Admin.

Administrators are limited to managing the machine's settings and controlling user access. so they cannot use functions such as copying and printing. To use such functions, you need to register a user in the address book and then be authenticated as the user.

🖉 Note

□ Administrator authentication can also be specified via Web Image Monitor. For details see the Web Image Monitor Help.

Specifying Administrator Privileges

To specify administrator authentication, set Administrator Authentication Management to **[On]**. You can also specify whether or not to manage the items in System Settings as an administrator.

To log on as an administrator, use the default login user name and login password.

The defaults are "admin" for the login name and blank for the password.

∰Important

□ If you have enabled **[Administrator Authentication Management]**, make sure not to forget the administrator login user name and login password. If an administrator login user name or login password is forgotten, a new password must be specified using the supervisor's authority.

Reference

For details, see p.169 "Operations by the Supervisor".

Note

□ For details about logging on and logging off with administrator authentication, see p.23 "Logging on Using Administrator Authentication", p.26 "Logging off Using Administrator Authentication".

Press the [User Tools/Counter] key.

2 Press [System Settings].

🚸 User Tools / Counter / Enquiry		
A CARACTER AND A CARACTER ANTE ANO CARACTER ANTE ANO CARACTER ANTE ANO CARACTER ANTE ANTE ANTE ANTE ANTE ANTE ANTE ANTE	Copier / Document Features	
System Settings	Facsimile Feat	
	Printer Featur	
Maintenance	Scanner Featu	


B Press [Administrator Tools].

		Exit
Interface Settings	File Administrator Transfer Tools	
	Output: Copier	Internal Tray 1
Output: Document Server		Internal Tray 1
Output: Facsimile		Internal Tray 1
	Output: Printer	Internal Tray 1
SI SI	ystem Status/Job List Display Time	60 second(s)

Press [Administrator Authentication Management].



Dress the [User Management], [Machine Management], [Network Management], or [File Management] key to select which settings to manage.

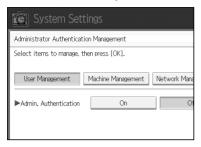


6 Set "Admin. Authentication" to [On].

System Set	tings	
Administrator Authentication Management		
Select items to manage, 1	then press [OK].	
User Management	Machine Management	Network Mana
►Admin. Authentication	On	01

[Available Settings] appears.



2 Select the settings to manage from "Available Settings".

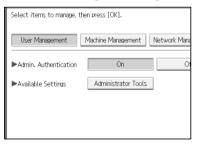

The selected settings will be unavailable to users.

[Available Settings] varies depending on the administrator.

For details about Available Settings, see p.119 "Managing Access to the Machine"

Note

To specify administrator authentication for more than one category, repeat steps 5 to 7.

Press [OK].

Press the [User Tools/Counter] key.

Registering the Administrator

If administrator authentication has been specified, it is recommended to assign each administrator role to a different person.

By sharing the administrative work among different administrators, you can spread the workload and limit unauthorized operation by a single administrator. You can register up to four login user names (Administrators 1 to 4) to which you can grant administrator privileges.

Administrator authentication can also be specified via Web Image Monitor. For details see the Web Image Monitor Help.

Preparation

Log on using a registered administrator name and password. The administrator defaults are "admin" for the login name and blank for the password. For details about logging on and logging off with administrator authentication, see p.23 "Logging on Using Administrator Authentication", p.26 "Logging off Using Administrator Authentication".

🖉 Note

- □ You can use up to 32 alphanumeric characters and symbols when registering login user names and login passwords. Keep in mind that passwords are case-sensitive.
- You cannot include spaces, semicolons (;), or quotes (") in the user name nor can you leave the user name blank.
- Do not use Japanese, Traditional Chinese, Simplified Chinese, or Hangul double-byte characters when entering the login user name or password. If you use multi-byte characters when entering the login user name or password, you cannot authenticate using Web Image Monitor.

Press the [User Tools/Counter] key.

Press [System Settings].



B Press [Administrator Tools].

		Exit
Interface Settings	File Administrator Transfer Tools	r
	Output: Copier	Internal Tray 1
Output: Document Server		Internal Tray 1
Output: Facsimile		Internal Tray 1
Output: Printer		Internal Tray 1
System Status/Job List Display Time		60 second(s)

Press [Program / Change Administrator].



5 In the line for the administrator whose authority you want to specify, press [Administrator 1], [Administrator 2], [Administrator 3] or [Administrator 4], and then press [Change].



If you allocate each administrator's authority to a different person, the screen appears as follows:



6 Press [Change] for the login user name.

System Settings		
Administrator 1		
►Login User Name	admin	
►Login Password	Change	
►Encryption Password	Change	

2 Enter the login user name, and then press [OK].

B Press [Change] for the login password.

System Settings		
Administrator 1		
►Login User Name	admin	
►Login Password	Change	
►Encryption Password	Change	

Enter the login password, and then press [OK].

Follow the password policy to make the login password more secure.

For details about the password policy, see p.157 "Password Policy".

If a password reentry screen appears, enter the login password, and then press [OK].

Press [Change] for the encryption password.

System Settings		
Administrator 1		
►Login User Name	admin	
►Login Password	Change	
►Encryption Password	Change	

Enter the encryption password, and then press [OK].



B If a password reentry screen appears, enter the encryption password, and then press [OK].

Press [OK] twice.

You will be automatically logged off.

E Press the [User Tools/Counter] key.


Logging on Using Administrator Authentication

If administrator authentication has been specified, log on using an administrator's user name and password. This section describes how to log on.

🖉 Note

- □ To log on as an administrator, enter the administrator's login user name and login password.
- □ If you log on that a user name that has the privileges of multiple administrators, only one of those administrators' names is displayed.
- □ If you try to log on from an operating screen, "Selected function cannot be used." appears. Press the [User Tools/Counter] key to change the default.

Press the [Login/Logout] key.

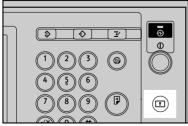

2 Press [Enter] next to "Login User Name".



Enter the login user name, and then press [OK].

Login User Name
Enter the login user name, then press [OK].
- 0/128
<u>1 2 3 4 5 6 7</u>
q w e r t y u
asdf ghj
z x c v b n m

🖉 Note

□ When you log on to the machine for the first time as the administrator, enter "admin".

Press [Enter] next to "Login Password".

ais iry

🖉 Note

□ If assigning the administrator for the first time, proceed to step **[**] without pressing **[Enter]**.

5 Enter the login password, and then press [OK].



6 Enter [Login].

er name and login password, gin].	ais iry
Enter	
Enter	
Login	

"Authenticating... Please wait." appears, followed by the screen for specifying the default.

Logging off Using Administrator Authentication

0

0

 \bigcirc

AQ1007S

If administrator authentication has been specified, be sure to log off after completing settings. This section explains how to log off after completing settings.

Press the [Login/Logout]key.



Press [Yes].

y has been pressed.	ais
You want to log out?	iry
Yes	

Changing the Administrator

Change the administrator's login user name and login password. You can also assign each administrator's authority to the login user names "Administrator 1" to "Administrator 4" To combine the authorities of multiple administrators, assign multiple administrators to a single administrator.

For example, to assign machine administrator authority and user administrator authority to **[Administrator 1]**, press **[Administrator 1]** in the lines for the machine administrator and the user administrator.


System Settings		
Program / Change Administrator		
Supervisor Change	Administrator 1 Change	Administrator 2 Change
►User Administrator	Administrator 1	Administrator
►Machine Administrator	Administrator 1	Administrator
NOT 1 1 1 1 1 1 1	t destated as the 4	A destated sectors and

Preparation


For details about logging on and logging off with administrator authentication, see p.23 "Logging on Using Administrator Authentication", p.26 "Logging off Using Administrator Authentication".

Press the [User Tools/Counter] key.

2 Press [System Settings].

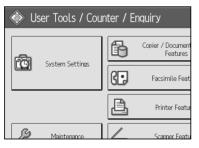


B Press [Administrator Tools].

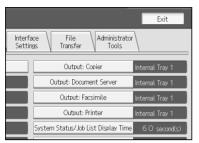

Press [Program / Change Administrator].



5 In the line for the administrator you want to change, press [Administrator 1], [Administrator 2], [Administrator 3] or [Administrator 4], and then press [Change].

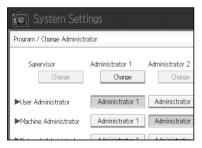

- **O** Press [Change] for the setting you want to change, and re-enter the setting.
- Press [OK].
- Press [OK] twice.

You are logged off automatically.

Press the [User Tools/Counter] key.

User Authentication

There are five types of user authentication method: user code authentication, basic authentication, Windows authentication, Integration Server Authentication, and LDAP authentication. To use user authentication, select an authentication method on the control panel, and then make the required settings for the authentication. The settings depend on the authentication method.

🖉 Note

- Under user code authentication, authentication is based on the user code. In contrast, under basic authentication, Windows authentication, and LDAP authentication, authentication is carried out for individual users.
- User authentication can also be specified via Web Image Monitor. For details see the Web Image Monitor Help.

User Code Authentication

This is an authentication method for limiting access to functions according to the user code. The same user code can be used by more than one user. For details about specifying user codes, see General Settings Guide.

Limitation

To control the use of DeskTopBinder for the delivery of files stored in the machine, select Basic Authentication, Windows Authentication, LDAP Authentication, or Integration Server Authentication.

PReference

For details about specifying the user code for the printer driver, see Printer Reference or the printer driver Help.

For details about specifying the TWAIN driver user code, see the TWAIN driver Help.

Specifying User Code Authentication

This can be specified by the machine administrator.

Press the [User Tools/Counter] key.


2 Press [System Settings].



B Press [Administrator Tools].

		Exit
Interfa Settir		
	Output: Copier	Internal Tray 1
	Output: Document Server	Internal Tray 1
	Output: Facsimile	Internal Tray 1
	Output: Printer	Internal Tray 1
	System Status/Job List Display Time	60 second(s)

Press [User Authentication Management].

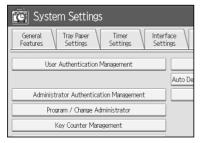


5 Select [User Code Auth.].

💼 System Settings				
User Authentication Management				
Select an authentication method, then	press [OK].			
User Code Auth. Basic Auth. Windows Auth. LDAP				

🖉 Note

□ If you do not want to use user authentication management, select [Off].

5 Select which of the machine's functions you want to limit.

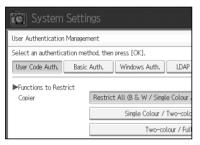

The selected settings will be unavailable to users.

For details about Limiting Available Functions see p.124 "Limiting Available Functions".

2 Select the "Printer Job Authentication" level.

🖉 Note

- □ If you select **[Entire]**, you cannot print using a printer driver or a device that does not support authentication. To print under an environment that does not support authentication, select **[Simple (All)]**.
- □ If you select **[Simple (Limitation)]**, you can specify clients for which printer job authentication is not required. Specify **[Parallel Interface: Simple]**, **[USB: Simple]** and the clients' IPv4 address range in which printer job authentication is not required. Specify this setting if you want to print using unauthenticated printer drivers or without any printer driver. Authentication is required for printing with non-specified devices.
- □ If you select **[Simple (All)]** or **[Simple (Limitation)]**, you can print even with unauthenticated printer drivers or devices. Specify this setting if you want to print with a printer driver or device that cannot be identified by the machine or if you do not require authentication for printing. However, note that, because the machine does not require authentication in this case, it may be used by unauthorized users.


If you select **[Entire]**, proceed to step **[**2.

If you select [Simple (All)] or [Simple (Limitation)], proceed to step 3.

Reference

For details, see p.64 "Printer Job Authentication Levels and Printer Job Types".

8 Press [Simple (Limitation)]

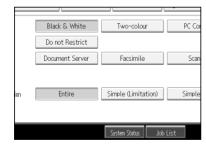

Press [Change].



D Specify the range in which [Simple (Limitation)] is applied to Printer Job Authentication.



You can specify the IPv4 address range to which this setting is applied, and whether or not to apply the setting to the parallel and USB interfaces.

Press [Exit].

Press [OK].

B Press [Exit].

Press the [User Tools/Counter] key.

Basic Authentication

Specify this authentication when using the machine's address book to authenticate for each user. Using basic authentication, you can not only manage the machine's available functions but also limit access to stored files and to the personal data in the address book. Under basic authentication, the administrator must specify the functions available to each user registered in the address book.

Specifying Basic Authentication


This can be specified by the machine administrator.

Press the [User Tools/Counter] key.


2 Press [System Settings].



B Press [Administrator Tools].

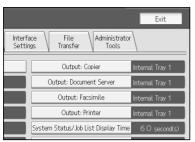

Press [User Authentication Management].

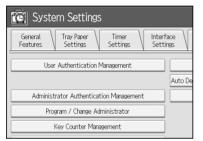

5 Select [Basic Auth.].

😰 System Settings						
User Authentication Ma	User Authentication Management					
Select an authentication method, then press [OK].						
User Code Auth.	User Code Auth. Basic Auth. Windows Auth. LDAP					
Functions to Restrict Copier Restrict All (B & W / Single Colour Single Colour / Two-colo						
		Two-co	lour / Full			

🖉 Note

□ If you do not want to use user authentication management, select [Off].

6 Select which of the machine's functions you want to permit.

System Settings					
User Authentication Management					
Select an authentication method, then press [OK].					
User Code Auth. Basic Auth. Windows Auth. LDAP					
► Available Functions					
Copier	Full	Colour / Two-colou	r / Single		
Two-colour / Single Colou					
	Single Colour / Blac				

The selected settings will be available to users.

For details about Limiting Available Functions see p.124 "Limiting Available Functions".

2 Select the "Printer Job Authentication" level.

🖉 Note

- □ If you select **[Entire]**, you cannot print using a printer driver or a device that does not support authentication. To print under an environment that does not support authentication, select **[Simple (All)]**.
- □ If you select **[Simple (Limitation)]**, you can specify clients for which printer job authentication is not required. Specify **[Parallel Interface: Simple]**, **[USB: Simple]** and the clients' IPv4 address range in which printer job authentication is not required. Specify this setting if you want to print using unauthenticated printer drivers or without any printer driver. Authentication is required for printing with non-specified devices.
- □ If you select **[Simple (All)]** or **[Simple (Limitation)]**, you can print even with unauthenticated printer drivers or devices. Specify this setting if you want to print with a printer driver or device that cannot be identified by the machine or if you do not require authentication for printing. However, note that, because the machine does not require authentication in this case, it may be used by unauthorized users.

If you select [Entire], proceed to step D.

If you select [Simple (All)] or [Simple (Limitation)], proceed to step 3.

PReference

For details, see p.64 "Printer Job Authentication Levels and Printer Job Types".

B Press [Simple (Limitation)]



Press [Change].

Printer	Full Colour	Single Co
Other Functions	Document Server	Facsim
▶Printer Job Authentication	Entire	Simple (Lin
Limitation Range	Change	System Statu

D Specify the range in which [Simple (Limitation)] is applied to Printer Job Authentication.



You can specify the IPv4 address range to which this setting is applied, and whether or not to apply the setting to the parallel and USB interfaces.

Press [Exit].

Press [OK].

B Press [Exit].

Press the [User Tools/Counter] key.

Authentication Information Stored in the Address Book

This can be specified by the user administrator.

If you have specified **[User Authentication]**, you can specify access limits for individual users and groups of users. Specify the setting in the address book for each user.

User authentication can also be specified via SmartDeviceMonitor for Admin or Web Image Monitor.

Preparation

For details about logging on and logging off with administrator authentication, see p.23 "Logging on Using Administrator Authentication", p.26 "Logging off Using Administrator Authentication".

You need to register a user in the address book. For details about the address book, see General Settings Guide.

See p.124 "Limiting Available Functions".

Specifying Login User Name and Login Password


In [User Authentication Management], specify the login user name and password.

Press the [User Tools/Counter] key.

2 Press [System Settings].

Press [Administrator Tools].

Press [Address Book Management].

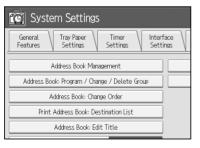

5 Select the user or group.

	Press [New Program] to add a new group or select a group to change. Groups can b			
Program / (Change	Delete		
All Users	User C	iode \	Fax	E-mail
Frequent	AB CD	EF GH	IJK LMN	OPQ RS
[00001] London Off ice	[00002] NewYork Of fice	[00003] Berlin Off ice	[00004] Project	【00005】 Tokyo Off ce
[00007] Chicago Of fice	[00008] Rome Offic e	[00009] Moscow Off ice	[00010] Beijing Of fice	【00011】 Osaka Off ce

6 Press [Auth. Info].

💽 System Settings				
Program / Change Address Book				
Names	Auth. Info Protection Fax Dest.			
►Name	London Office			
	Change			
►Key Display	London Office			
►Select Title	Change			

2 Press [Change] for [Login User Name].



B Enter a login user name, and then press [OK].

Press [Change] for [Login Password].



D Enter a login password, and then press [OK].

If a password reentry screen appears, enter the login password, and then press [OK].

Press [OK].

Press [Exit] twice.

Press the [User Tools/Counter] key.

Specifying Authentication Information to Log on

The login user name and password specified in **[User Authentication Management]** can be used as the login information for "SMTP Authentication", "Folder Authentication", and "LDAP Authentication".

For details about specifying login user name and login password, see p.37 "Specifying Login User Name and Login Password".


If you do not want to use the login user name and password specified in **[User Authentication Management]** for "SMTP Authentication", "Folder Authentication", or "LDAP Authentication", see General Settings Guide.

Press the [User Tools/Counter] key.


2 Press [System Settings].



B Press [Administrator Tools].

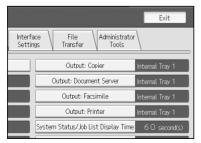

Press [Address Book Management].

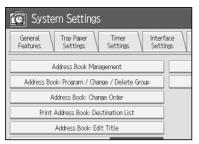

If the setting to be specified does not appear, press **[VNext]** to scroll down to other settings.

5 Select the user or group.

Press (New Progra	m] to add a new	group or select a	a group to change	e. Groups can b
Program /	Program / Change Delete			
All Users	All Users User Code Fax E-mail			
Frequent	AB CD	EF GH	IJK LMN	OPQ RS
[00001] London Off ice	[00002] NewYork Of fice	【00003】 Berlin Off ice	【00004】 Project	[00005] Tokyo Off ce
[00007] Chicago Of fice	【00008】 Rome Offic e	[00009] Moscow Off ice	[00010] Beijing Of fice	【00011】 Osaka Off ce

Press [Auth. Info].



2 Specify the login user name and password.

Select [Use Auth. Info at Login] in "SMTP Authentication".



If the setting to be specified does not appear, press **[vNext]** to scroll down to other settings.

Limitation

- □ When using [Use Auth. Info at Login] for "SMTP Authentication", "Folder Authentication", or "LDAP Authentication", a user name other than "other", "admin", "supervisor" or "HIDE***" must be specified. The symbol "***" represents any character.
- □ To use **[Use Auth. Info at Login]** for SMTP authentication, a login password up to 128 characters in length must be specified.

🖉 Note

- □ For folder authentication, select **[Use Auth. Info at Login]** in "Folder Authentication".
- □ For LDAP authentication, select **[Use Auth. Info at Login]** in "LDAP Authentication".

Press [OK].

D Press [Exit].

Press the [User Tools/Counter] key.

Windows Authentication

Specify this authentication when using the Windows domain controller to authenticate users who have their accounts on the directory server. Users cannot be authenticated if they do not have their accounts in the directory server. Under Windows authentication, you can specify the access limit for each group registered in the directory server. The address book stored in the directory server can be registered to the machine, enabling user authentication without first using the machine to register individual settings in the address book. If you can obtain user information, the sender's address (From:) is fixed to prevent unauthorized access when sending e-mails under the scanner function.

∰Important

During Windows Authentication, data registered in the directory server, such as the user's e-mail address, is automatically registered in the machine. If user information on the server is changed, information registered in the machine may be overwritten when authentication is performed.

Operational Requirements for Windows Authentication

- To specify Windows authentication, the following requirements must be met:
- The Printer/Scanner unit must be installed.
- A domain controller has been set up in a designated domain.
- This function is supported by the operating systems listed below. NTLM authentication is used for Windows authentication. To obtain user information when running Active Directory, use LDAP. If SSL is being used, this requires a version of Windows that supports TLS v1, SSL v2, or SSL v3.
 - Windows NT 4.0 Server
 - Windows 2000 Server
 - Windows Server 2003

Limitation

- □ Users managed in other domains are subject to user authentication, but they cannot obtain items such as e-mail addresses.
- If you have created a new user in the domain controller and selected [User must change password at next logon], log on to the machine from the computer to change the password before logging on from the machine's control panel.

🖉 Note

- □ The first time you access the machine, you can use the functions available to your group. If you are not registered in a group, you can use the functions available under **[Default Group]**. To limit which functions are available to which users, first make settings in advance in the address book.
- □ When accessing the machine subsequently, you can use all the functions available to your group and to you as an individual user.
- □ Enter the login password correctly, keeping in mind that it is case-sensitive.

- □ Users who are registered in multiple groups can use all the functions available to those groups.
- □ If you specify in the address book which functions are available to global group members, those settings have priority.
- □ A user registered in two or more global groups can use all the functions available to members of those groups.
- □ If the "Guest" account on the Windows server is enabled, even users not registered in the domain controller can be authenticated. When this account is enabled, users are registered in the address book and can use the functions available under [*Default Group].

Specifying Windows Authentication


This can be specified by the machine administrator.

🖉 Note


- Under Windows Authentication, you can select whether or not to use secure sockets layer (SSL) authentication.
- □ To automatically register user information such as fax numbers and e-mail addresses under Windows authentication, it is recommended that communication between the machine and domain controller be encrypted using SSL.
- Under Windows Authentication, you do not have to create a server certificate unless you want to automatically register user information such as fax numbers and e-mail addresses using SSL.

Press the [User Tools/Counter] key.

2 Press [System Settings].

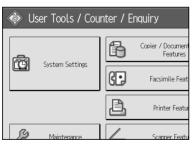


B Press [Administrator Tools].

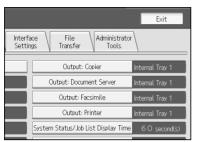

Press [User Authentication Management].

😰 System Settings					
General Features	Tray Paper Settings	Timer Settings	Interfa Settin		
User	User Authentication Management				
	Auto De				
Administrator Authentication Management					
Program / Change Administrator					
Key Counter Management					


5 Select [Windows Auth.].

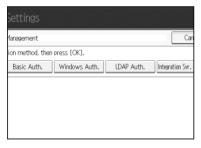

🖉 Note

□ If you do not want to use user authentication management, select [Off].

Press [Change] for "Domain Name", enter the name of the domain controller to be authenticated, and then press [OK].

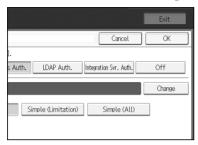

2 Select the "Printer Job Authentication" level.

Select an authentication method, then press [OK].				
User Code Auth. Basic	User Code Auth. Basic Auth. Windows Auth. LDAP			
►Domain Name				
▶Printer Job Authentication		Entire	Si	mple (Lin
►Use Secure Connection (SSL)		On		Off

🖉 Note

- □ If you select **[Entire]**, you cannot print using a printer driver or a device that does not support authentication. To print under an environment that does not support authentication, select **[Simple (All)]**.
- □ If you select **[Simple (Limitation)]**, you can specify clients for which printer job authentication is not required. Specify **[Parallel Interface: Simple]**, **[USB: Simple]** and the clients' IPv4 address range in which printer job authentication is not required. Specify this setting if you want to print using unauthenticated printer drivers or without any printer driver. Authentication is required for printing with non-specified devices.
- □ If you select [Simple (All)] or [Simple (Limitation)], you can print even with unauthenticated printer drivers or devices. Specify this setting if you want to print with a printer driver or device that cannot be identified by the machine or if you do not require authentication for printing. However, note that, because the machine does not require authentication in this case, it may be used by unauthorized users.


If you select [Entire], proceed to step 2.

If you select [Simple (All)] or [Simple (Limitation)], proceed to step 3.

✓ Reference

For details, see p.64 "Printer Job Authentication Levels and Printer Job Types".

B Press [Simple (Limitation)]

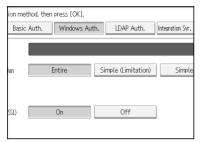

Press [Change].

Select an authentication method, then press [OK].			
User Code Auth. Basic	Basic Auth. Windows Auth.		
►Domain Name			
►Printer Job Authentication	Entire	Simple (Lim	
Limitation Range	Change		
►Use Secure Connection (SSL)	On	Off	


D Specify the range in which [Simple (Limitation)] is applied to Printer Job Authentication.



You can specify the IPv4 address range to which this setting is applied, and whether or not to apply the setting to the parallel and USB interfaces.

Press [Exit].

Press [On] for "SSL".

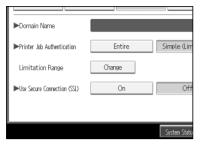

If you do not use secure sockets layer (SSL) for authentication, press [Off].

If global groups have been registered under Windows server, you can limit the use of functions for each global group.


You need to create global groups in the Windows server in advance and register in each group the users to be authenticated.

You also need to register in the machine the functions available to the global group members.

Create global groups in the machine by entering the names of the global groups registered in the Windows Server. (Keep in mind that group names are case sensitive.) Then specify the machine functions available to each group.

If global groups are not specified, users can use the available functions specified in **[*Default Group]**. If global groups are specified, users not registered in global groups can use the available functions specified in **[*Default Group]**. By default, all functions are available to **[*Default Group]** members. Specify the limitation on available functions according to user needs.

Under "Group", press [Program / Change], and then press [* Not Programmed].

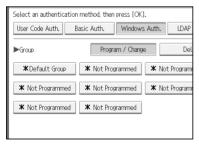

If the setting to be specified does not appear, press **[vNext]** to scroll down to other settings.

Under "Group Name", press [Change], and then enter the group name.



Press [OK].

${f I}$ Select which of the machine's functions you want to permit.

The selected settings will be available to users.

For details about limiting available functions, see p.124 "Limiting Available Functions".

Press [OK] twice.

Press the [User Tools/Counter] key.

\widehat{V} Installing Internet Information Services (IIS) and Certificate services

Specify this setting if you want the machine to automatically obtain e-mail addresses registered in Active Directory.

We recommended you install Internet Information Services (IIS) and Certificate services as the Windows components.

Install the components, and then create the server certificate.

If they are not installed, install them as follows:

- ① Select [Add/Remove Programs] on the [Control Panel].
- ② Select [Add/Remove Windows Components].
- ③ Select the [Internet Information Services (IIS)] check box.
- ④ Select the [Certificate Services] check box, and then click [Next].
- ⑤ Installation of the selected Windows components starts, and a warning message appears.
- 6 Click [Yes].
- ⑦ Click [Next].
- ③ Select the Certificate Authority, and then click [Next]. On the displayed screen, [Enterprise root CA] is selected.
- Enter the Certificate Authority name (optional) in [CA Identifying Information], and then click [Next].
- [®] Leave **[Data Storage Location]** at its default, and then click **[Next]**.

Creating the Server Certificate

After installing Internet Information Services (IIS) and Certificate services Windows components, create the Server Certificate as follows:

- ① Start [Internet Services Manager].
- ② Right-click [Default Web Site], and then click [Properties].
- ③ On the [Directory Security] tab, click [Server Certificate]. Web Server Certificate Wizard starts.
- ④ Click [Next].
- (5) Select [Create a new certificate], and then click [Next].
- (6) Select [Prepare the request now, but send it later], and then click [Next].
- ⑦ Enter the required information according to the instructions given by Web Server Certificate Wizard.
- Check the specified data, which appears as Request File Summary, and then click [Next].

The server certificate is created.

$\widehat{\mathbb{Q}}$ If the fax number cannot be obtained

If the fax number cannot be obtained during authentication, specify the setting as follows:

- Start [C:\WINNT\SYSTEM32\adminpak]. Start Setup Wizard.
- ② Select [Install all of the Administrator Tools], and then click [Next].
- 3 On the [Start] menu, select [Run].
- ④ Enter [mmc], and then click [OK].
- (5) On the [Console], select [Add/Remove Snap-in].
- 6 Click [Add].
- ⑦ Select [ActiveDirectory Schema], and then click [Add].
- (a) Select [facsimile Telephone Number].
- Right-click, and then click [Properties].
- 1 Select [Replicate this attribute], and then click [Apply].

LDAP Authentication

Specify this authentication when using the LDAP server to authenticate users who have their accounts on the LDAP server. Users cannot be authenticated if they do not have their accounts on the LDAP server. The address book stored in the LDAP server can be registered to the machine, enabling user authentication without first using the machine to register individual settings in the address book. When using LDAP Authentication, to prevent the password information being sent over the network unencrypted, it is recommended that communication between the machine and LDAP server be encrypted using SSL. You can specify on the LDAP server whether or not to enable SSL. To enable this, you must create a server certificate for the LDAP server.

Using Web Image Monitor, you can specify whether or not to check the reliability of the SSL server being connected to.

For details see the Web Image Monitor Help.

∰Important

During LDAP Authentication, the data registered in the LDAP server, such as the user's e-mail address, is automatically registered in the machine. If user information on the server is changed, information registered in the machine may be overwritten when authentication is performed.

Operational Requirements for LDAP Authentication

To specify LDAP authentication, the following requirements must be met:

- The Printer/Scanner unit must be installed.
- The network configuration must allow the machine to detect the presence of the LDAP server.
- When SSL is being used, TLSv1, SSLv2, or SSLv3 can function on the LDAP server.
- The LDAP server must be registered in the machine. For details about registration, see Network Guide.

Limitation

- Under LDAP authentication, you cannot specify access limits for groups registered in the LDAP Server.
- □ When using LDAP Authentication, you cannot use reference functions in LDAP Search for servers using SSL.
- Enter the user's login user name using up to 32 characters and login password using up to 128 characters.
- Do not use double-byte Japanese, Traditional Chinese, Simplified Chinese, or Hangul characters when entering the login user name or password. If you use double-byte characters, you cannot authenticate using Web Image Monitor.

🖉 Note

- Under LDAP Authentication, if "Anonymous Authentication" in the LDAP server's settings is not set to "Prohibit", users who do not have an LDAP server account might still be able to gain access.
- If the LDAP server is configured using Windows Active Directory, Anonymous Authentication might be available. If Windows Authentication is available, we recommend you use it.
- □ The first time an unregistered user accesses the machine after LDAP authentication has been specified, the user is registered in the machine and can use the functions available under **[Available Functions]** during LDAP Authentication.
- To limit the available functions for each user, register each user and corresponding [Available Functions] setting in the address book, or specify [Available Functions] for each registered user. The [Available Functions] setting becomes effective when the user accesses the machine subsequently.

Specifying LDAP Authentication

This can be specified by the machine administrator.

Press the [User Tools/Counter] key.

2 Press [System Settings].




B Press [Administrator Tools].

	_	Exit
Interfa Settir		
	Output: Copier	Internal Tray 1
	Output: Document Server	Internal Tray 1
	Output: Facsimile	Internal Tray 1
	Output: Printer	Internal Tray 1
	System Status/Job List Display Time	60 second(s)

Press [User Authentication Management].

🔞 Syste	m Settings	5			
General Features	Tray Paper Settings	Timer Settings	Interf: Settir		
User Authentication Management					
Administ	Auto De				
Administrator Authentication Management Program / Change Administrator					
	Key Counter Man	agement			


5 Select [LDAP Auth.].

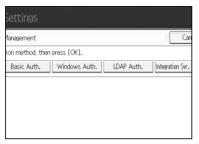

🖉 Note

□ If you do not want to use user authentication management, select [Off].

5 Select the LDAP server to be used for LDAP authentication.

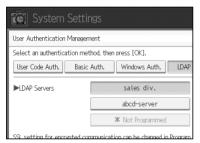

2 Select the "Printer Job Authentication" level.

You can specify the IPv4 address range to which this setting is applied, and whether or not to apply the setting to the parallel and USB interfaces.

🖉 Note

- □ If you select **[Entire]**, you cannot print using a printer driver or a device that does not support authentication. To print under an environment that does not support authentication, select **[Simple (All)]**.
- □ If you select **[Simple (Limitation)]**, you can specify clients for which printer job authentication is not required. Specify **[Parallel Interface: Simple]**, **[USB: Simple]** and the clients' IPv4 address range in which printer job authentication is not required. Specify this setting if you want to print using unauthenticated printer drivers or without any printer driver. Authentication is required for printing with non-specified devices.
- □ If you select **[Simple (All)]** or **[Simple (Limitation)]**, you can print even with unauthenticated printer drivers or devices. Specify this setting if you want to print with a printer driver or device that cannot be identified by the machine or if you do not require authentication for printing. However, note that, because the machine does not require authentication in this case, it may be used by unauthorized users.


If you select [Entire], proceed to step 2.

If you select [Simple (All)] or [Simple (Limitation)], proceed to step 3.

Reference

For details, see p.64 "Printer Job Authentication Levels and Printer Job Types".

Press [Simple (Limitation)]

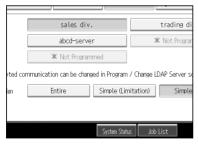

9 Press [Change].




D Specify the range in which [Simple (Limitation)] is applied to Printer Job Authentication.

🔞 System Setti	ngs		Edt
Printer Job Authentication: L	imitation Range		Exit
Simple will take effect for	printer jobs within the following ranges.		
►IPv4 Address 1	000.000.000.000 ~ 000.000.000.000	Change	
▶IPv4 Address 2	000.000.000.000 - 000.000.000.000	Change	
►Fv4 Address 3	000.000.000.000 - 000.000.000.000	Change	
►IPv4 Address 4	000.000.000.000 ~ 000.000.000.000	Change	
▶IPv4 Address 5	000.000.000.000 - 000.000.000.000	Change	
Parallel Interface: Simple	Exclusion		
►USB: Simple	Exclusion		
Laged In: [Machine Administrator]	System Status	Job List	1 MAR 2006 15556

You can specify the IPv4 address range to which this setting is applied, and whether or not to apply the setting to the parallel and USB interfaces.

Dress [Exit].

 ${f D}$ Select which of the machine's functions you want to permit.

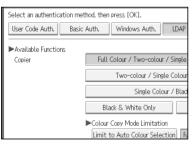

The selected settings will be available to users.

For details about limiting available functions, see p.124 "Limiting Available Functions".


E Press [Change] for "Login Name Attribute".



Enter the login name attribute , and then press [OK].

🖉 Note

You can use the Login Name Attribute as a search criterion to obtain information about an authenticated user. You can create a search filter based on the Login Name Attribute, select a user, and then retrieve the user information from the LDAP server so it is transferred to the machine's address book. The method for selecting the user name depends on the server environment. Check the server environment and enter the user name accordingly.

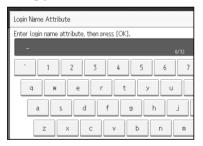

E Press [Change] for "Unique attribute".

Single Colour	Colour]
Facsimile	Scanner	
	Change	3/3 A Previous
	Change	▼ Next
System Status Jo		1 MAR 2006 4:17

(Enter the unique attribute and then press [OK].



🖉 Note

□ Specify Unique Attribute on the machine to match the user information in the LDAP server with that in the machine. By doing this, if the Unique Attribute of a user registered in the LDAP server matches that of a user registered in the machine, the two instances are treated as referring to the same user.You can enter an attribute such as "serialNumber" or "uid". Additionally, you can enter "cn" or "employeeNumber", provided it is unique. If you do not specify the Unique Attribute, an account with the same user information but with a different login user name will be created in the machine.

Press [OK].

Press the [User Tools/Counter] key.

Integration Server Authentication

To use Integration Server Authentication, you need a server on which ScanRouter software that supports authentication is installed.

For external authentication, the Integration Server Authentication collectively authenticates users accessing the server over the network, providing a server-independent centralized user authentication system that is safe and convenient.

For example, if the delivery server and the machine share the same Integration Server Authentication, single sign-on is possible using DeskTopBinder.

To use **[Integration Svr. Auth.]**, the machine must have access to a server on which ScanRouter System or Web SmartDeviceMonitor software and **[Authentication Manager]** are installed.

For details about the software, contact your local dealer.

Using Web Image Monitor, you can specify whether or not to check the reliability of the SSL server being connected to.

For details see the Web Image Monitor Help.

∰Important

During Integration Server Authentication, the data registered in the server, such as the user's e-mail address, is automatically registered in the machine. If user information on the server is changed, information registered in the machine may be overwritten when authentication is performed.

🖉 Note

□ The built-in default administrator name is "Admin" on the Server and "admin" on the machine.

Specifying Integration Server Authentication


This can be specified by the machine administrator.

This section explains how to specify the machine settings.

For details, see the Authentication Manager manual.

Press the [User Tools/Counter] key.

2 Press [System Settings].

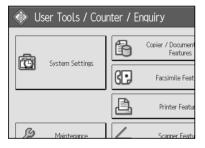

Press [Administrator Tools].



Press [User Authentication Management].

🔞 Syste	em Settings	i		
General Features	Tray Paper Settings	Timer Settings	Interface Settings	
Use	r Authentication N	Management	Auto De	
Administrator Authentication Management				
	gram / Change Adi Key Counter Mana			


5 Select [Integration Svr. Auth.].



🖉 Note

□ If you do not wish to use User Authentication Management, select [Off].

Deress [Change] for "Server Name".

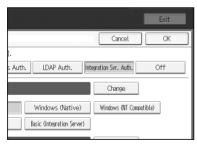

Specify the name of the server for external authentication.

2 Enter the server name, and then press [OK].



Enter the IPv4 address or host name.

In "Authentication Type", select the authentication system for external authentication.

Select an authentication method, then press [OK]. User Code Auth. Basic Auth. UbAP					
►Server Name					
► Authentication Type	Default Notes	Windows Basic (Integr			
►Domain Name	- Notes	busic (integr			
▶URL	Obtain URL	Not Obtaine			

Select an available authentication system.

Press [Change] for "Domain Name".



The Enter the domain name, and then press [OK].

🖉 Note

You cannot specify a domain name under an authentication system that does not support domain login.

Press [Obtain URL].

►Server Name		
► Authentication Type	Default	Windows
	Notes	Basic (Integr
►Domain Name		
►URL	Obtain URL	Not Obtaine
Logged in: [Machine Administrator]		System Statu

The machine obtains the URL of the server specified in [Server Name].


If the setting to be specified does not appear, press **[Vext]** to scroll down to other settings.

If **[Server Name]** or the setting for enabling SSL is changed after obtaining the URL, the "URL" is "Not Obtained".

Press [OK]

If you set "Authentication Type" to "Windows", you can use the global group. If you set "Authentication Type" to "Notes", you can use the Notes group. If you set "Authentication Type" to "Basic (Integration Server)", you can use the groups created using the Authentication Manager.

E Select the "Printer Job Authentication" level.

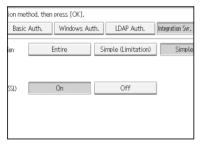

🖉 Note


- □ If you select **[Entire]**, you cannot print using a printer driver or a device that does not support authentication. To print under an environment that does not support authentication, select **[Simple (All)]**.
- □ If you select **[Simple (Limitation)]**, you can specify clients for which printer job authentication is not required. Specify **[Parallel Interface: Simple]**, **[USB: Simple]** and the clients' IPv4 address range in which printer job authentication is not required. Specify this setting if you want to print using unauthenticated printer drivers or without any printer driver. Authentication is required for printing with non-specified devices.
- □ If you select **[Simple (All)]** or **[Simple (Limitation)]**, you can print even with unauthenticated printer drivers or devices. Specify this setting if you want to print with a printer driver or device that cannot be identified by the machine or if you do not require authentication for printing. However, note that, because the machine does not require authentication in this case, it may be used by unauthorized users.

If you select [Entire], proceed to step 1.


If you select [Simple (All)] or [Simple (Limitation)], proceed to step [].

For details, see p.64 "Printer Job Authentication Levels and Printer Job Types".

Press [Simple (Limitation)]

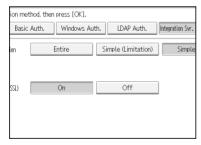

Press [Change].

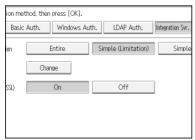


D Specify the range in which [Simple (Limitation)] is applied to Printer Job Authentication.



You can specify the IPv4 address range to which this setting is applied, and whether or not to apply the setting to the parallel and USB interfaces.

Press [Exit].

E Press [On] for "SSL" and then press [OK].

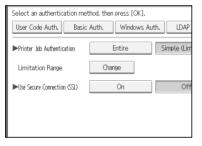

To not use secure sockets layer (SSL) for authentication, press [Off].

Press the [User Tools/Counter] key.

Printer Job Authentication Levels and Printer Job Types

This section explains the relationship between printer job authentication levels and printer job types.

Depending on the combination of printer job authentication level and printer job type, the machine may not print properly. Set an appropriate combination according to the operating environment.

User authentication is supported by the RPCS and PCL printer drivers.

Machine Settings (displayed on the control panel)		Printer Job Types							
[User Authentication Management]	[Printer Job Au- thentication]	[Restrict Use of Simple Encryption]	1	2	3	4	5	6	0
[Off]	—	—	☆	☆	☆	☆	☆	☆	☆
[User Code Auth.], [Basic Auth.], [Windows Auth.], [LDAP Auth.], [Integration Svr. Auth.]	[Simple (All)]	[Off]	•	0	×	☆	☆	☆	0
		[On]		×					
	[Entire]	[Off]	•	0	×	0	×	×	0
		[On]		×					

 \Rightarrow : Printing is possible regardless of user authentication.

O. Printing is possible if user authentication is successful. If user authentication fails, the print job is reset.

•: Printing is possible if user authentication is successful and [Driver Encryption Key] for the printer driver and machine match.

×: Printing is not possible regardless of user authentication, and the print job is reset.

PReference

For details about **[Restrict Use of Simple Encryption]**, see p.151 "Changing the Extended Security Functions".

[Printer Job Authentication]

• [Entire]

The machine authenticates all printer jobs and remote settings, and cancels jobs and settings that fail authentication. Printer Jobs: Job Reset

Settings: Disabled

• [Simple (All)]

The machine authenticates printer jobs and remote settings that have authentication information, and cancels the jobs and settings that fail authentication.

Printer jobs and settings without authentication information are performed without being authenticated.

• [Simple (Limitation)].

You can specify the range to apply [Simple (Limitation)] to by specifying [Parallel Interface: Simple], [USB: Simple], and the client's IPv4 address.

Printer Job Types

 In the RPCS printer driver dialog box, the [Confirm authentication information when printing] and [Encrypt] check boxes are selected. In the PCL printer driver dialog box, the [User Authentication] and [Encrypt] check boxes are selected. Personal authentication information is added to the printer job. The printer driver applies advanced encryption to the login passwords. The printer driver encryption key, enables the driver encryption to prevent the login password being stolen.
 In the RPCS printer driver dialog box, the [Confirm authentication information when printing] check box is selected.

In the PCL printer driver dialog box, the **[User Authentication]** and **[Encrypt]** check boxes are selected.

Personal authentication information is added to the printer job.

The printer driver applies simple encryption to login passwords.

③ In the RPCS printer driver dialog box, the **[Confirm authentication information** when printing] check box is not selected.

In the PCL printer driver dialog box, the **[User Authentication]** check box is not selected.

Personal authentication information is added to the printer job and is disabled.

④ When using the PostScript 3 printer driver, the printer job contains user code information.

Personal authentication information is not added to the printer job but the user code information is.

🖉 Note

- This type also applies to recovery/parallel printing using an RPCS/PCL printer driver that does not support authentication.
- ③ When using the PostScript 3 printer driver, the printer job does not contain user code information.

Neither personal authentication information nor user code information is added to the printer job.

🖉 Note

- □ Type 5 also applies to recovery/parallel printing using an RPCS/PCL printer driver that does not support authentication.
- A printer job or PDF file is sent from a host computer without a printer driver and is printed via LPR.

Personal authentication information is not added to the printer job.

⑦ A PDF file is printed via ftp.

Personal authentication is performed using the user ID and password used for logging on via ftp. However, the user ID and password are not encrypted.

If User Authentication is Specified

When user authentication (User Code Authentication, Basic Authentication, Windows Authentication, LDAP Authentication, or Integration Server Authentication) is set, the authentication screen is displayed. Unless a valid user name and password are entered, operations are not possible with the machine. Log on to operate the machine, and log off when you are finished operations. Be sure to log off to prevent unauthorized users from using the machine. When auto logout timer is specified, the machine automatically logs you off if you do not use the control panel within a given time. Additionally, you can authenticate using an external device. For details, see p.71 "Authentication using an external device".

🖉 Note

- □ Consult the User Administrator about your login user name, password, and user code.
- □ For user code authentication, enter a number registered in the address book as **[User Code]**.

User Code Authentication (Using the Control Panel)

When user authentication is set, the following screen appears.

To use the code with	e following the Numbe	function(s r keys, th), enter us en press [
Scanner			Clear
			ОК
Taut	Culture		Canadam N

Enter a user code (up to eight digits), and then press the **[OK]** key.

🖉 Note

□ To log off, do one of the following:

- Press the Operation switch.
- Press the [User Tools/Counter] key, press [System Settings], and then press the [User Tools/Counter] key again.
- Press the [Energy Saver] key after jobs are completed.

User Code Authentication (Using a Printer Driver)

When user authentication is set, specify the user code in the printer properties of a printer driver. For details, see the printer driver Help.

Login (Using the Control Panel)

Follow the procedure below to log on when Basic Authentication, Windows Authentication, LDAP Authentication, or Integration Server Authentication is set.

Press [Enter] for [Login User Name].



2 Enter a login user name, and then press [OK].

Login User Name
Enter the login user name, then press [OK].
- 0/128
<u>` 1 2 3 4 5 6 7</u>
q w e r t y u
as df ghj
z x c v b n m

B Press [Enter] for [Login Password].

Enter login user name and log then press [Login].	in password
Login User Name admin Login Password	Enter
	Enter
Cancel	Login

Enter a login password, and then press [OK].




5 Press [Login].

When the user is authenticated, the screen for the function you are using appears.


Log Off (Using the Control Panel)

Follow the procedure below to log off when Basic Authentication, Windows Authentication, or LDAP Authentication is set.

Press the [Login/Logout] key.

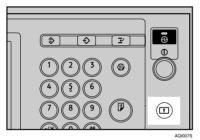

Press [Yes].

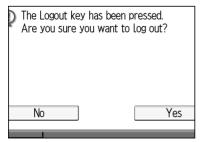

Login (Using a Printer Driver)

When Basic Authentication, Windows Authentication, or LDAP Authentication is set, make encryption settings in the printer properties of a printer driver, and then specify a login user name and password. For details, see the printer driver Help.

🖉 Note

 \square When logged on using a printer driver, logging off is not required.

Login (Using Web Image Monitor)

This section explains how to log onto the machine via Web Image Monitor.

Click [Login].

2 Enter a login user name and password, and then click [Login].

🖉 Note

- □ For user code authentication, enter a user code in **[User Name]**, and then click **[OK]**.
- □ The procedure may differ depending on the Web Image Monitor used.

Log Off (Using Web Image Monitor)

Click [Logout] to log off.

🖉 Note

 $\hfill\square$ Delete the cache memory in the Web Image Monitor after logging off.

Auto Logout

This can be specified by the machine administrator.

When using user authentication management, the machine automatically logs you off if you do not use the control panel within a given time. This feature is called "Auto Logout". Specify how long the machine is to wait before performing Auto Logout.

Press the [User Tools/Counter] key.

2 Press [System Settings].



B Press [Timer Settings].

😰 System Settings				
General Tray Paper Timer Features Settings Settings	Interface Settings			
Program / Change / Delete User Text				
Panel Key Sound Off	0.			
Warm-up Beeper On				
Copy Count Display Up				
Function Priority Copier	System			

Press [Auto Logout Timer].

Detting		
	Scanner Auto Reset Timer	60 second(s)
	Set Date	01/03/2006
	Set Time	14:35:54
ond(s)	Auto Logout Timer	180 second(s)
ond(s)		
ond(s)		
ond(s)		

If the setting to be specified does not appear, press **[v**Next] to scroll down to other settings.

Select [On].

iccinas y	Select item, then press [0	ж].
imer	On	Off
Timer imer		
set Timer		
Auto Reset Timer		
eset Timer		
set Timer		

🖉 Note

□ If you do not want to specify [Auto Logout Timer], select [Off].

Enter "60" to "999" (seconds) using the number keys, and then press [#].

me with the Number keys, then press [OK].	
)second(s)	Clear

2 Press the [User Tools/Counter] key.

Authentication using an external device

If you authenticate using an external device, see the Kit manual. For details, contact your local dealer.

3. Preventing Information Leaks

Guarding Against Unauthorized Copying

Using the printer driver, you can embed a pattern in the printed copy to discourage or prevent unauthorized copying.

If you enable data security for copying on the machine, printed copies of a document with data security for copying are grayed out to prevent unauthorized copying.

Make the setting as follows:

Unauthorized Copy Prevention

① Using the printer driver, specify the printer settings for unauthorized copy prevention.

See p.77 "Specifying Printer Settings for Unauthorized Copy Prevention (Printer Driver Setting)".

Data Security for Copying

 Using the printer driver, specify the printer settings for data security for copying.


See p.78 "Specifying Printer Settings for Data security for copying (Printer Driver Setting)".

② Specifying data security for copying on the machine. Printed copies of a document with data security for copying are grayed out. See p.78 "Specifying Data Security for Copying (Machine Setting)".

Unauthorized Copy Prevention

Using the printer driver, you can embed mask and pattern (for instance, a warning such as "No Copying") in the printed document.

If the document is copied, scanned, or stored in a Document Server by a copier or multifunction printer, the embedded pattern appears clearly on the copy, discouraging unauthorized copying.

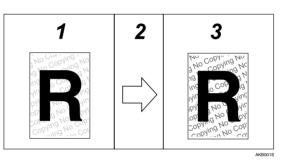

1. Printed Documents

Using the printer driver, you can embed background images and pattern in a printed document for Unauthorized Copy Prevention.

2. The document is copied, scanned, or stored in the Document Server.

3. Printed Copies

Embedded pattern (for instance, a warning such as "No Copying") in a printed document appears conspicuously in printed copies.

∰Important

- Unauthorized copy prevention discourages unauthorized copying, and will not necessarily stop information leaks.
- □ The embedded pattern is not assured to be copied, scanned, or stored properly in the Document Server.

Limitation

Depending on the machine and scanner settings, the embedded pattern may not be copied ,scanned, or stored in the Document Server.

🖉 Note

□ To make the embedded pattern clear, set the character size to at least 50 pt (preferably 70 to 80 pt) and character angle to between 30 and 40 degrees.

Reference


To use the printer function under the User Authentication, you must enter the login user name and password for the printer driver.

For details see the printer driver Help.

Data Security for Copying

Using the printer driver to enable data security for the copying function, you can print a document with an embedded pattern of hidden text. Such a document is called a data security for copying document.

If a data security for copying document is copied or stored in the Document Server using a copier or multi-function printer with the Copy Data Security Unit, protected pages are grayed out in the copy, preventing confidential information being copied. Also if a document with embedded pattern is detected, the machine beeps. The unauthorized copy log is also stored. To gray out copies of data security for copying documents when they are copied or stored in the Document Server, the optional Copy Data Security Unit must be installed in the machine.

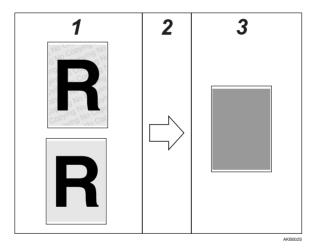

1. Documents with data security for copying

2. The document is copied or stored in the Document Server.

3. Printed Copies

Text and images in the document are grayed out in printed copies.

Limitation

- □ If the Copy Data Security Unit is installed in the machine, you cannot use the scanner and fax functions.
- If the Copy Data Security Unit is installed, you cannot specify a scaling factor less than 50% using the Control Panel under the Copier and Document Server functions.
- If a document with embedded pattern for data security for copying is copied, or stored in the Document Server by a copier or multi-function printer without Copy Data Security Unit, the embedded pattern appears conspicuously in the copy. However, how conspicuously the text appears depends on the model of the copier or multi-function printer being used and its scanning setting.

🖉 Note

- You can also embed pattern in a document protected by data security for copying. However, if such a document is copied or stored in the Document Server using a copier or multi-function printer with the Copy Data Security Unit, the copy is grayed out, so the embedded pattern does not appear on the copy.
- □ If misdetection occurs, contact your service representative.
- □ If a document with embedded pattern for data security for copying is copied, scanned, or stored in the Document Server using a copier or multi-function printer without the Copy Data Security Unit, the embedded pattern appears clearly on the copy.
- □ If the scanned data security for copying document is registered as a user stamp, the machine does not beep, the file registered as a user stamp is grayed out, and no entry is added to the unauthorized copying log.

Printing Limitations

The following is a list of limitations on printing with unauthorized copy prevention and data security for copying.

Unauthorized copy prevention / Data security for copying

Limitation

- □ You can print using the only RPCS printer driver.
- □ You cannot print at 200 dpi resolution.
- □ You cannot partially embed pattern in the printed document.
- □ You can only embed pattern that is entered in the **[Text]** box of the printer driver.
- □ Printing with embedding takes longer than normal printing.

Data security for copying Only

Limitation

- \square Select 182 × 257 mm / 7.2 × 10.1 inches or larger as the paper size.
- □ Select Plain or Recycled with a brightness of 70% or more as the paper type.
- If you select Duplex, the data security for copying function may not work properly due to printing on the back of sheets.

Notice

1.The supplier does not guarantee that unauthorized copy prevention and data security for copying will always work. Depending on the paper, the model of copier or multi-function printer, and the copier or printer settings, unauthorized copy prevention and data security for copying may not work properly.

2. The supplier is not liable for any damage caused by using or not being able to use unauthorized copy prevention and data security for copying.

Printing with Unauthorized Copy Prevention and Data Security for Copying

Specifying Printer Settings for Unauthorized Copy Prevention (Printer Driver Setting)

Using the printer driver, specify the printer settings for unauthorized copy prevention.

To use the printer function under the User Authentication, you must enter the login user name and password for the printer driver.

For details see the printer driver Help.

For details about specifying data security for copying using the printer driver, see the printer driver Help.

1 Open the printer driver dialog box.

2 On the [Edit] tab, select the [Unauthorized copy...] check box.

- Click [Control Settings...].
- **4** In the [Text] box in the [Unauthorized copy prevention: Pattern] group, enter the text to be embedded in the printed document.

Also, specify [Font], [Font style:], and [Size].

Click [OK].

For details, see the printer driver Help.

Specifying Printer Settings for Data security for copying (Printer Driver Setting)

If a document printed using this function is copied or stored in the Document Server by a copier or multi-function printer, the copy is grayed out.

Using the printer driver, specify the printer settings for data security for copying.

For details about data security for copying, see p.75 "Data Security for Copying".

To use the printer function under the User Authentication, you must enter the login user name and password for the printer driver.

For details see the printer driver Help.

For details about specifying data security for copying using the printer driver, see the printer driver Help.

Open the printer driver dialog box.

2 On the [Edit] tab, select the [Unauthorized copy...] check box.

Click [Control Settings...].

In the [Unauthorized copy prevention: Pattern] group, check the [Data security for copying].

Click [OK].

PReference

For details, see the printer driver Help.

Specifying Data Security for Copying (Machine Setting)

This can be specified by the machine administrator.

To use this function, the Copy Data Security Unit must be installed.

If a document printed is copied or stored in the Document Server, the copy is grayed out.

For details about data security for copying, see p.75 "Data Security for Copying".

Preparation

For details about logging on and logging off with administrator authentication, see p.23 "Logging on Using Administrator Authentication", p.26 "Logging off Using Administrator Authentication".

Limitation


□ If a document that is not copy-guarded is copied or stored, the copy or stored file is not grayed out.

Press the [User Tools/Counter]key.

2 Press [System Settings].

🚸 User Tools / Counter / Enquiry				
	ß	Copier / Document Features		
System Settings	6.	Facsimile Feat		
	<u>B</u>	Printer Featu		
Maintenance		Scanner Featu		

B Press [Administrator Tools].

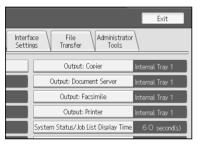

Press [Data security for copying].

If the setting you want to specify does not appear, press **[VNext]** to scroll down to other settings.

D Press[On].

If you do not want to specify [Data security for copying], select [Off].

6 Press[OK].

Press [Exit].

B Press the [User Tools/Counter] key.

Printing a Confidential Document

To use this function, Printer/Scanner unit must be installed.

Depending on the location of the machine, it is difficult to prevent unauthorized persons from viewing prints lying in the machine's output trays. When printing confidential documents, use the Locked Print function.

Locked Print

Using the printer's Locked Print function, store files in the machine as Locked Print files and then print them from the control panel and retrieve them immediately, preventing others from viewing them.

🖉 Note

□ To store files temporarily, select [Stored Print] under the printer driver. If you select [Share stored print files], also, you can share these files.

Choosing a Locked Print file

Using the printer driver, specify a Locked Print file.

If user authentication has been enabled, you must enter the login user name and login password using the printer driver. For details see the printer driver Help.

You can perform Locked Print even if user authentication is not enabled. For details see Printer Reference.

Open the printer driver dialog box.

- 2 Set [Job type] to [Locked Print].
- Click [Details...].

4 Enter the user ID and password.

🖉 Note

- □ The password entered here let you use the Locked Print function.
- □ To print a Locked Print file, enter the same password on the control panel.

Limitation

- □ Enter the user ID using up to 8 alphanumeric characters.
- □ Enter the password using 4 to 8 numbers.

Click [OK].

A confirmation message appears.

6 Confirm the password by re-entering it.

- **7** Click [**0**K].
- 8 Perform Locked Print.

PReference

For details, see the printer driver Help.

Printing a Locked Print File

Print Locked Print files using the control panel.

Consult your administrator if you have forgotten your password.

This can also be specified via Web Image Monitor.


For details see the Web Image Monitor Help.

Preparation

For details about logging on and logging off with user authentication, see p.67 "Login (Using the Control Panel)", p.68 "Log Off (Using the Control Panel)".

Press the [Printer] key.

2 Press [Print Jobs].

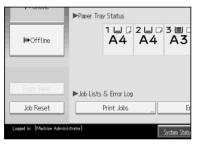


Press [Locked Print Job List].




Only Locked Print files belonging to the user who has logged on appear.

Select the Locked Print file to print.

5 Press [Print].

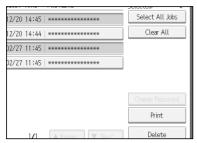

6 Enter the password for the stored file, and then press [OK].

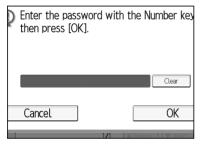

🖉 Note

□ Enter the password specified in step ④ on p.80 "Choosing a Locked Print file".

7 Press [Yes].

Deleting Locked Print Files

This can be specified by the file creator (owner).

To delete Locked Print files, you must enter the password for the files. If the password has been forgotten, ask the file administrator to change the password.

This can also be specified via Web Image Monitor.


For details see the Web Image Monitor Help.

🖉 Note

 $\hfill\square$ Locked Print files can also be deleted by the file administrator.

Press the [Printer] key.

2 Press [Print Jobs].

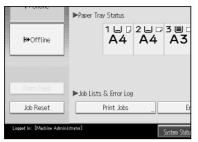

B Press [Locked Print Job List].

All Jobs	-	501 15	
	19	3333	12/20 14:46 doc
Jobs Per User ID	9	2222	12/20 14:46 doc
Convelate list	9	1111	12/20 14:46 doc
Complete List	•	2222	12/20 14:45 doc
🖻 Locked Print Job List	•	1111	12/20 14:45 doc
Sample Print Job List	10	2222	12/20 14:45 ***
🕒 Hold Print Job List	10	1111	12/20 14:44 ***
Stored Print Job List	3	2222	12/20 14:44 doc
Details			1/3

4 Select the file.

5 Press [Delete].



6 Enter the password of the Locked Print file, and then press [OK].

7 Press [Yes].

Changing Passwords of Locked Print Files


This can be specified by the file creator (owner) or file administrator.

If the password has been forgotten, the file administrator change the password. This can also be specified via Web Image Monitor.

For details see the Web Image Monitor Help.

Press the [Printer]key.


2 Press [Print Jobs].

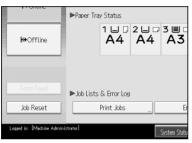


B Press [Locked Print Job List].

4 Select the file.


5 Press [Change Password].

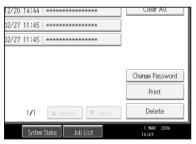

5 Enter the password for the stored file, and then press [OK].

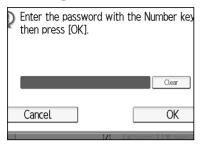

The machine administrator does not need to enter the password.

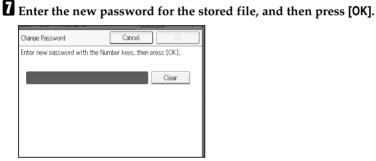

If a password reentry screen appears, enter the login password, and then press [OK].

Unlocking Locked Print Files

If you specify "Enhance File Protection", the file will be locked and become inaccessible if an invalid password is entered ten times. This section explains how to unlock files.

Only the file administrator can unlock files.

This can also be specified via Web Image Monitor.

For details see the Web Image Monitor Help.

For details about "Enhance File Protection", see p.151 "Changing the Extended Security Functions".

🖉 Note

□ You can use the same procedure to unlock stored print files also.

Press the [Printer] key.

2 Press [Print Jobs].

B Press [Locked Print Job List].

All Jobs			50001 mmo me
	19	3333	12/20 14:46 doc
Jobs Per User ID	9	2222	12/20 14:46 doc
Complete List	9	1111	12/20 14:46 doc
Complete List	R	7777	12/20 14:45 doc
✿ Locked Print Job List			
	B	1111	12/20 14:45 doc
Sample Print Job List	1 🖻	2222	12/20 14:45 ***
🕒 Hold Print Job List	10	1111	12/20 14:44 ***
<section-header> Stored Print Job List</section-header>	3	2222	12/20 14:44 doc
Details			1/3

4 Select the file.

5 Press [Unlock File].



6 Press [Yes].

Specifying Access Permission for Stored Files

You can specify who is allowed to access stored scan files and files stored in the Document Server.

This can prevent activities such as printing or sending of stored files by unauthorized users.

You can also specify which users can change or delete stored files.

Access Permission

To limit the use of stored files, you can specify four types of access permission.

Read-only	In addition to checking the content of and in- formation about stored files, you can also print and send the files.
Edit	You can change the print settings for stored files. This includes permission to view files.
Edit / Delete	You can delete stored files. This includes permission to view and edit files.
Full Control	You can specify the user and access permis- sion.This includes permission to view, edit, and edit / delete files.

🖉 Note

- □ Files can be stored by any user who is allowed to use the Document Server, copy function, scanner function, or fax function.
- Using Web Image Monitor, you can check the content of stored files. For details, see the Web Image Monitor Help.
- □ The default access permission for the file creator (owner) is "Read-only". You can also specify the access permission.

Password for Stored Files

Passwords for stored files can be specified by the file creator (owner) or file administrator.

You can obtain greater protection against the unauthorized use of files.

Assigning Users and Access Permission for Stored Files

This can be specified by the file creator (owner) or file administrator.

Specify the users and their access permissions for each stored file.

By making this setting, only users granted access permission can access stored files.

Preparation

For details about logging on and logging off with administrator authentication, see p.23 "Logging on Using Administrator Authentication", p.26 "Logging off Using Administrator Authentication".

∰Important

□ If files become inaccessible, reset their access permission as the file creator (owner). This can also be done by the file administrator. If you want to access a file but do not have access permission, ask the file creator (owner).

Press the [Document Server] key.

2 Select the file.

Select File> Select file(s) to print.				
List	Thumbnails	Type	User Name	File Name
		3 & D		COPY0007
Display All		3 & D		COPY0006
Dispe	a) nec	â()		FAX0001
User	Name			

Press [File Management].



Press [Change Access Priv.].

File Name	Date Page Order	File Information
COPY0007	01/Mar. 1	OK
COPY0006	01/Mar. 1 1	
FAX0001	26/Feb. 1	Change Access Priv.
		Uhlock Files Change Password

D Press [Program/Change/Delete].

elete: File Acce	iss Privileges	Can
	(NONAME)	Cha
ers/Groups	Program/Change/Delete	


6 Press [New Program].



2 Select the users or groups you want to assign permission to.

You can select more than one users.

By pressing [All Users], you can select all the users.

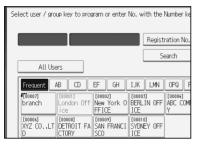

8 Press [Exit].

Select the user who you want to assign an access permission to, and then select the permission.



Select the access permission from [Read-only], [Edit], [Edit / Delete], or [Full Control].



Specifying Access Privileges for Files Stored using the Scanner and Fax Functions

If user authentication is set for the scanner and fax functions, you can specify access privileges for made using these functions when storing them in the Document Server. You can also change the access privileges for the file.

Specifying Access Privileges When Storing Files

This section explains how to specify the access privileges and then store a file in the Document Server under the scanner or fax function.

The scanner screen is used to illustrate the procedure.

Press [Store File].

	Store	e File	Sca	nned Fil	es Sta
Ready	Search Des	st.			Previe
Set original and specify destinations E-mail Folder	ation.				
<u></u> ;				E	-mail A
Reg. No. Manual Entry				[To
Frequent AB CD EF	= GH	IJK	LMN	OPQ	RST
London Off NewYork Of B	oooos) erlin Off ce	【00004 Proje		(00005) Tokyo	

2 Press [Access Privileges].



B Press [New Program].



4 Select the users or groups you want to assign permission to. You can select more than one users.

By pressing [All Users], you can select all the users.

5 Press [Exit].

Select the user who you want to assign an access permission to, and then select the permission.

Select the access permission from [Read-only], [Edit], [Edit / Delete], or [Full Control].

6 Press [Exit].

7 Press [OK].

8 Store files in the Document Server.

Changing Access Privileges for Previously Stored Files

This section explains the authentication process for accessing a file stored in the Document Server under the scanner or fax function.


The scanner screen is used to illustrate the procedure.

Press [Select Stored File].




2 Select the file.

B Press[Manage / Delete File].

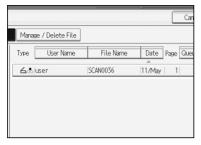

Press [Change Access Priv.].

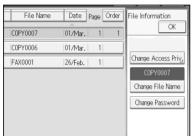

5 Press [Program/Change/Delete].

6 Press [New Program].

2 Select the users or groups you want to assign permission to.

You can select more than one users.

By pressing [All Users], you can select all the users.

B Press [Exit].

Select the user who you want to assign an access permission to, and then select the permission.

Select the access permission from [Read-only], [Edit], [Edit / Delete], or [Full Control].

9 Press [Exit].

Press [OK].

Assigning the User and the Access Permission for the User's Stored Files

This can be specified by the file creator (owner) or user administrator.

Specify the users and their access permission to files stored by a particular user.

Only those users granted access permission can access stored files.

This makes the management of access permission easier than it is when permission is specified for each stored file.

Preparation


For details about logging on and logging off with administrator authentication, see p.23 "Logging on Using Administrator Authentication", p.26 "Logging off Using Administrator Authentication".

∰Important


□ If files become inaccessible, be sure to enable the user administrator, and then reset the access permission for the files in question.

Press the [User Tools/Counter] key.

2 Press [System Settings].

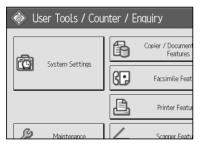

Press [Administrator Tools].

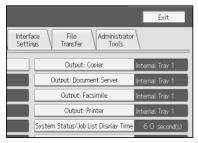

Press [Address Book Management].

General Tray Paper Timer Interface Features Settings Settings Settings				
Address Book Management				
Address Book: Program / Change / Delete Group				
Address Book: Change Order				
Print Address Book: Destination List				
Address Book: Edit Title				


5 Select the user or group.

Press [New Program] to add a new group or select a group to change. Groups can b					
Program / Change		Delete			
All Users	User C	iode 🔪	Fax	E-mail	
Frequent	AB CD	EF GH	IJK LMN	OPQ RS	
[00001] London Off ice	[00002] NewYork Of fice	【00003】 Berlin Off ice	[00004] Project	【00005】 Tokyo Off ce	
[00007] Chicago Of fice	[00008] Rome Offic e	[00009] Moscow Off ice	[00010] Beijing Of fice	【00011】 Osaka Off ce	

6 Press [Protection].



2 Under "Protect File(s)", press [Program/Change/Delete] for "Permissions for Users/Groups".

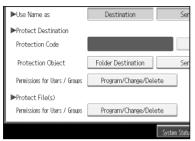

If the setting to be specified does not appear, press $[\bullet Next]$ to scroll down to other settings.

Press [New Program].



Select the users or groups to register.

				Regist	ration N	lo.
				S	earch	
All Use	ers					
Frequent	VB CD	EF GH	IJĸ	LMN	OPQ	F
London Off	[00002] NewYork Of fice	[00003] Berlin Off ice	【0000 Proj		[00005] Tokyo ce	0
[00007] Chicago Of fice	【00008】 Rome Offic e	【00009】 Moscow Off ice	Coon Beij fice	ing Of	[00011] Osaka ce	0
Logged in: [London 0	fficel					
Logged nit (Condon o	initia)				System St	atu

You can select more than one users.

By pressing [All Users], you can select all the users.

DPress [Exit].

Select the user who you want to assign an access permission to, and then select the permission.



Select the access permission from [Read-only], [Edit], [Edit / Delete], or [Full Control].

Press [Exit].

Press [OK].

Press [Exit].

Press the [User Tools/Counter] key.

Specifying Passwords for the Stored Files

This can be specified by the file creator (owner) or file administrator.

Specify passwords for the stored files.


Provides increased protection against unauthorized use of files.

Preparation

For details about logging on and logging off with administrator authentication, see p.23 "Logging on Using Administrator Authentication", p.26 "Logging off Using Administrator Authentication".

Press the [Document Server] key.


2 Select the file.

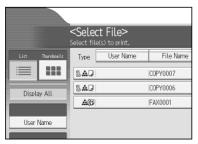

B Press [File Management].

File Name	Date Page Order	Memory: 98%
C0PY0007	01/Mar. 1 1	Details
COPY0006	01/Mar. 1	Preview
FAX0001	26/Feb. 1	File Management
		Delete File
		Print Specified Page
		To Printing Scroon

4 Press [Change Password].

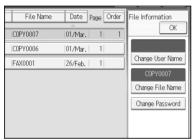

Enter the password using the number keys.



You can use 4 to 8 numbers as the password for the stored file.

Press [OK].

2 Confirm the password by re-entering it using the number keys.

- 8 Press [OK].
- Press [OK].

Unlocking Files

If you specify "Enhance File Protection", the file will be locked and become inaccessible if an invalid password is entered ten times. This section explains how to unlock files.

Only the file administrator can unlock files.

For details about "Enhance File Protection", see p.151 "Changing the Extended Security Functions".

Preparation


For details about logging on and logging off with administrator authentication, see p.23 "Logging on Using Administrator Authentication", p.26 "Logging off Using Administrator Authentication".

Press the [Document Server] key.

2 Select the file.

			t File>	
List	Thumbnails	Туре	User Name	File Name
		3.40		COPY0007
Display All		3*0		COPY0006
C DIDA		Å@		FAX0001
User	Name			

B Press [File Management].

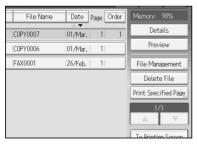



File Name	Date Page Order	File Information
COPY0007	01/Mar. 1	OK
COPY0006	01/Mar. 1	
FAX0001	26/Feb. 1 1	Change Access Priv.
		Unlock Files Change Password

D Press [Yes].Press [OK].

Preventing Data Leaks Due to Unauthorized Transmission

If user authentication is specified, the user who has logged on will be designated as the sender to prevent data from being sent by an unauthorized person masquerading as the user.

You can also limit the direct entry of destinations to prevent files from being sent to destinations not registered in the address book.

Restrictions on Destinations

This can be specified by the user administrator.

Make the setting to disable the direct entry of e-mail addresses and phone numbers under the scanner and fax functions.

By making this setting, the destinations can be restricted to addresses registered in the address book.

If you set **[Restrict Use of Destinations]** to **[On]**, you can prohibit users from directly entering telephone numbers, e-mail addresses, or Folder Path in order to send files. If you set **[Restrict Use of Destinations]** to **[Off]**, **[Restrict Adding of User Destinations]** appears. In **[Restrict Adding of User Destinations]**, you can restrict users from registering data in the address book.

If you set **[Restrict Adding of User Destinations]** to **[Off]**, users can directly enter destination telephone numbers, e-mail addresses, and Folder Path in **[Program Dest.]** on the fax and scanner screens. If you set **[Restrict Adding of User Destinations]** to **[On]**, users can specify destinations directly, but cannot use **[Program Dest.]** to register data in the address book. When this setting is made, only the user administrator can change the address book.

For details, see p.151 "Changing the Extended Security Functions".

Preparation


For details about logging on and logging off with administrator authentication, see p.23 "Logging on Using Administrator Authentication", p.26 "Logging off Using Administrator Authentication".

Press the [User Tools/Counter] key.


Press [System Settings].

🚸 User Tools / Counter / Enquiry			
æ		ß	Copier / Document Features
	System Settings	C.	Facsimile Feat
		<u>B</u>	Printer Featur
B	Maintenance		Scanner Featu

B Press [Administrator Tools].

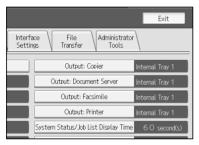

4 Press [Extended Security].

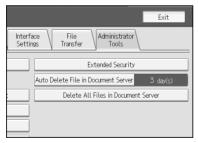

5 Press [On] for "Restrict Use of Destinations".



Press [OK].

2 Press the [User Tools/Counter] key.

\mathcal{P} Reference

This can also be specified using Web Image Monitor or SmartDeviceMonitor for Admin. For details, see the Help for each application.

Protecting the Address Book

If user authentication is specified, the user who has logged on will be designated as the sender to prevent data from being sent by an unauthorized person masquerading as the user.

To protect the data from unauthorized reading, you can also encrypt the data in the address book.

Address Book Access Permission

This can be specified by the registered user. The access permission can also be specified by a user granted full control or the user administrator.

You can specify who is allowed to access the data in the address book.

By making this setting, you can prevent the data in the address book being used by unregistered users.

Preparation

For details about logging on and logging off with administrator authentication, see p.23 "Logging on Using Administrator Authentication", p.26 "Logging off Using Administrator Authentication".

Press the [User Tools/Counter] key.

2 Press [System Settings].



Press [Administrator Tools].

		Exit
Interface Settings	File Administ Transfer Tool:	
	Output: Copier	Internal Tray 1
	Output: Document Server	Internal Tray 1
	Output: Facsimile	Internal Tray 1
	Output: Printer	Internal Tray 1
System	m Status/Job List Display "	Time 6 0 second(s)


Press [Address Book Management].

🔞 System Settings				
General Features	Tray Paper Settings	Timer Settings	Interface Settings	
Address Book Management				
Address Book: Program / Change / Delete Group				
Address Book: Change Order				
Print Address Book: Destination List				
Address Book: Edit Title				
		_		

5 Select the user or group.

Press (New Program) to add a new group or select a group to change. Groups can b				
Program /	Change	Delete		
All Users	User C	iode 🔪	Fax	E-mail
Frequent	AB CD	EF GH	IJK LMN	OPQ RS
[00001] London Off ice	[00002] NewYork Of fice	【00003】 Berlin Off ice	[00004] Project	[00005] Tokyo Off ce
[00007] Chicago Of fice	[00008] Rome Offic e	[00009] Moscow Off ice	[00010] Beijing Of fice	【00011】 Osaka Off ce

6 Press [Protection].

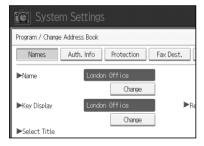

2 Under "Protect Destination", press [Program/Change/Delete] for "Permissions for Users/Groups".

Press [New Program].



9 Select the users or groups to register.



You can select more than one users.

By pressing [All Users], you can select all the users.

DPress [Exit].

Select the user who you want to assign an access permission to, and then select the permission.

Program / Change / Delete: File Access Privileges				
Permissions for Users / Gr	Permissions for Users / Groups: Program / Change			
Press [New Program] to ac	dd or select key to change privileges.			
Program / Change Delete				
[00001]	ad-only			

Select the permission, from [Read-only], [Edit], [Edit / Delete], or [Full Control].

Press [Exit].
Press [OK].
Press [Exit].
Press the [User Tools/Counter] key.

106

Encrypting the Data in the Address Book

This can be specified by the user administrator.

Encrypt the data in the address book.

See p.151 "Changing the Extended Security Functions".

Preparation


For details about logging on and logging off with administrator authentication, see p.23 "Logging on Using Administrator Authentication", p.26 "Logging off Using Administrator Authentication".

🖉 Note


□ If you register additional users after encrypting the data in the address book, those users are also encrypted.

Press the [User Tools/Counter] key.

2 Press [System Settings].

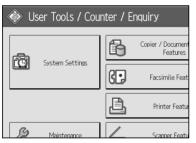

B Press [Administrator Tools].

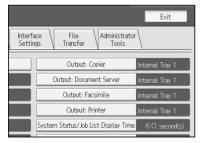

3

Press [Extended Security].



5 Press [On] for "Encrypt Address Book".

Select item.	
▶Encrypt Address Book	Restrict Use of On Restrict Adding On
	►Enhance File Pro On

6 Press [Change] for [Encryption Key].

Select item.		
►Encrypt Address Book		►Restrict Use of On ►Restrict Adding On
On	Off	01
Encryption Key	Change	
	Encrypt / Decrypt	Enhance File Pro

2 Enter the encryption key, and then press [OK].

Enter the encryption key using up to 32 alphanumeric characters.

Press [Encrypt / Decrypt].

9 Press [Yes].

Do not switch the main power off during encryption, as doing so may corrupt the data.

Encrypting the data in the address book may take a long time.

The time it takes to encrypt the data in the address book depends on the number of registered users.

The machine cannot be used during encryption.

Normally, once encryption is complete, **[Exit]** appears.

If you press [Stop] during encryption, the data is not encrypted.

If you press [Stop] during decryption, the data stays encrypted.

DPress [Exit].

Press [OK].

Press the [User Tools/Counter] key.

Deleting Data on the Hard Disk

1) Hard Disk

The machine's hard disk lets you store data under the copy, printer, fax, scanner, and document server functions, as well as the address book and counters stored under each user code.

② Data Not Overwritten in the Hard Disk The machine's memory lets you store fax numbers and data transmitted using the fax function, and network TWAIN scanner. Even if you delete the data on the hard disk, this data remains intact.

Overwriting the Data on the Hard Disk

To use this function, the optional DataOverwriteSecurity unit must be installed.

To prevent data on the hard disk being leaked before disposing of the machine, you can overwrite all data stored on the hard disk. You can also automatically overwrite temporarily-stored data.

🖉 Note

Depending on the hard disk capacity and the method of erasing the data, this action may take a few hours. Once you start the Erase All Memory function, no other machine operation is possible until the function completes or you quit the function.

Auto Erase Memory Setting

To erase selected data on the hard disk, specify [Auto Erase Memory Setting].

Erase All Memory

To erase all the data on the hard disk, using [Erase All Memory].

Methods of Erasing the Data

You can select the method of erasing the data from the following: The default is "NSA".

NSA *1	Overwrites the data on the hard disk twice with random numbers and once with zeros.
DoD *2	Overwrites the data with a number, its complement, and random numbers, and then checks the result.
Random Numbers	Overwrites the data with random numbers the specified number of times.
	You can specify between 1 and 9 as the number of times the data is overwritten with random numbers. The default is 3 times.

^{*1} National Security Agency

*2 Department of Defense

Reference

For details, see the manual supplied with the DataOverwriteSecurity unit.

"Auto Erase Memory Setting"

This can be specified by the machine administrator.

A document scanned in Copier, Fax, or Scanner mode, or print data sent from a printer driver is temporarily stored on the machine's hard disk.

Even after the job is completed, it remains in the hard disk as temporary data. Auto Erase Memory erases the temporary data on the hard disk by writing over it.

Overwriting starts automatically once the job is completed.


The Copier, Fax, and Printer functions take priority over the Auto Erase Memory function. If a copy, fax or print job is in progress, overwriting will only be done after the job is completed.

Preparation

For details about logging on and logging off with administrator authentication, see p.23 "Logging on Using Administrator Authentication", p.26 "Logging off Using Administrator Authentication".

Press the [User Tools/Counter] key.


Press [System Settings].

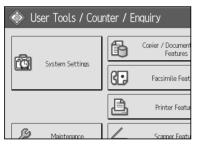

Press [Administrator Tools].

		Exit
Interfa Settir		
	Output: Copier	Internal Tray 1
	Output: Document Server	Internal Tray 1
	Output: Facsimile	Internal Tray 1
	Output: Printer	Internal Tray 1
	System Status/Job List Display Time	60 second(s)

Press [Auto Erase Memory Setting].

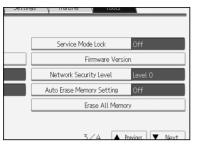

If the setting to be specified does not appear, press **[VNext]** to scroll down to other settings.



5 Press [On], and then select the method of erasing the data.

System Settings
Auto Erase Memory Setting
Select item, then press [OK].
On Off

Select the method of erasing the data from [NSA], [DoD], or [Random Numbers].


If you select [Random Numbers], proceed to step [].

If you select [NSA] or [DoD], proceed to step $\textcircled{\baselined{3}}$.

6 Press [Change].

ss [OK].	Off		
	NSA	DoD	Ranc
	3 time(s) <1~9>	Change	

2 Enter the number of times that you want to overwrite using the number keys, and then press [#].

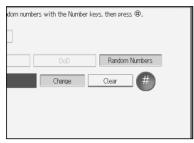

Press [OK].

Auto Erase Memory is set.

∰Important

When Auto Erase Memory is set to "On", temporary data that remained on the hard disk when Auto Erase Memory was "Off" might not be overwritten.

🖉 Note

- □ Should the main power switch of the machine be turned off before overwriting is completed, the temporary data will remain on the hard disk until the main power switch is next turned on and overwriting is resumed.
- If the overwriting method is changed while overwriting is in progress, the remainder of the temporary data will be overwritten using the method set originally.

Canceling Auto Erase Memory

Follow steps 1 to 2 in "Auto Erase Memory Setting".

Press [Off].

Press [OK].

Auto Erase Memory is disabled.

🖉 Note

□ To set Auto Erase Memory to "On" again, repeat the procedure in "Auto Erase Memory Setting".

Types of Data that Can or Cannot Be Overwritten

The following table shows the types of data that can or cannot be overwritten by Auto Erase Memory.

Data overwritten by Auto	Copier	Copy jobs	
Erase Memory	Printer	 Print Jobs Sample Print/Locked Print/Stored Print Jobs *1 Spool Printing jobs PDF Direct Print data 	
	Fax *2	LAN fax print jobsInternet fax transmitted data	
	Scanner *3	 Scanned files sent by e-mail Files sent by Scan to Folder Documents sent using DeskTopBinder, the Scan- Router delivery software or a Web Image Monitor 	
Data not overwritten by Auto Erase Memory	Documents stored by the user in the Document Server using the Copier, Printer or Scanner functions *4		
	Information registered in the Address Book *5		
	Counters stored under each user code		
	Image overlay data *6		

*1 A Sample Print, Locked Print, or Stored Print job can only be overwritten after it has been executed.Stored print jobs can be overwritten by Auto Erase Memory only if they have been deleted in advance.

*2 The data for fax transmission and the registered fax numbers are stored in the memory. This data is not stored on the hard disk, so it will not be overwritten by Auto Erase Memory.

*3 Data scanned with network TWAIN scanner will not be overwritten by Auto Erase Memory.

^{*4} A stored document can only be overwritten after it has been printed or deleted from the Document Server.

*5 Data stored in the Address Book can be encrypted for security. For details, see p.107 "Encrypting the Data in the Address Book".

*6 Image overlay data can be overwritten by Auto Erase Memory only if it is deleted in advance.

"Erase All Memory"

This can be specified by the machine administrator.

You can erase all the data on the hard disk by writing over it. This is useful if you relocate or dispose of your machine.

Preparation

For details about logging on and logging off with administrator authentication, see p.23 "Logging on Using Administrator Authentication", p.26 "Logging off Using Administrator Authentication".

∰Important

If you select Erase All Memory, the following are also deleted: user codes, counters under each user code, user stamps, data stored in the Address Book, printer fonts downloaded by users, applications using Embedded Software Architecture, SSL server certificates, and the machine's network settings.


🖉 Note

Before erasing the hard disk, you can back up user codes, counters for each user code, and Address Book data using SmartDeviceMonitor for Admin. For details, see SmartDeviceMonitor for Admin Help.

1 Disconnect communication cables connected to the machine.

2 Press the [User Tools/Counter] key.


Press [System Settings].

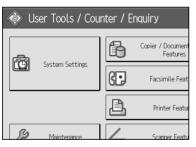

4 Press [Administrator Tools].

		Exit	
Interface Settings	File Administ Transfer Tool		
	Output: Copier	Internal Tray 1	
	Output: Document Server		
	Output: Facsimile	Internal Tray 1	
	Output: Printer		
Syste	m Status/Job List Display	Time 6 0 second(s)	

5 Press [Erase All Memory].

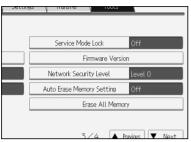

If the setting to be specified does not appear, press **[VNext]** to scroll down to other settings.

3 Select the method of erasing the data.

ss [OK] to start erasing.		
NSA	DoD	Ranc
	[

Select the method of erasing the data from [NSA], [DoD], or [Random Numbers].

If you select [Random Numbers], proceed to step 2.

If you select **[NSA]** or **[DoD]**, proceed to step **[**.

Press [Change].

ss [OK] to start erasing.		
NSA	DoD	Rand
3 time(s) <1~9>	Change	
	ſ	

Enter the number of times that you want to overwrite using the number keys, and then press [#].

dom numbers ·	dom numbers with the Number keys, then press $\oplus.$				
	DoD	Rando	om Numbers]	
	Change	Clear	#		
			-		

Press [OK].

Press [Yes].

1 When overwriting is completed, press [Exit], and then turn off the power.

PReference

Before turning the power off, see "Turning On the Power", About This Machine..

∰Important

- □ Should the main power switch of the machine be turned off before Erase All Memory is completed, overwriting is canceled.
- □ Make sure the main power switch is not turned off during overwriting.

🖉 Note

- □ If the main power is turned off when Erase All Memory is in progress, overwriting will start again when you next turn on the main power.
- □ If an error occurs before overwriting is completed, turn off the main power. Turn it on again, and then repeat from step **2**.

Canceling Erase All Memory

1 Press [Cancel] while Erase All Memory is in progress.

Press [Yes].

Erase All Memory is canceled.

Note

□ If you stop this before completion, the data is not fully erased. Execute [Erase All Memory] again to erase the data.



3 Turn off the main power.

Note Note

□ To resume overwriting after power off, turn on the main power of the machine, and then repeat the procedure in "Erase All Memory".

4. Managing Access to the Machine

Preventing Modification of Machine Settings

Administrator type determines which machine settings can be modified. Users cannot change the administrator settings. In **[Admin. Authentication]**, **[Available Settings]**, the administrator can select which settings users cannot specify.

Register the administrators before using the machine.

* Type of Administrator

Register the administrator on the machine, and then authenticate the administrator using the administrator's login user name and password. The administrator can also specify **[Available Settings]** in **[Admin. Authentication]** to prevent users from specifying certain settings. Administrator type determines which machine settings can be modified. The following types of administrator are available:

- User Administrator
- Network Administrator
- Machine Administrator
- File Administrator

\mathcal{P} Reference

For details, see p.11 "Administrators".

For details, see p.17 "Administrator Authentication".

For details, see p.174 "Machine Administrator Settings".

For details, see p.183 "Network Administrator Settings".

For details, see p.187 "File Administrator Settings".

For details, see p.11 "User Administrator".

Menu Protect

Use this function to specify the permission level for users to change those settings accessible by non-administrators.

You can specify Menu Protect for the following settings:

- Copier / Document Server Features
- Facsimile Features
- Printer Features
- Scanner Features

PReference

For details, see p.195 "User Settings".

Menu Protect

The administrator can also limit users' access permission to the machine's settings. The machine's System Settings menu and the printer's regular menus can be locked so they cannot be changed. This function is also effective when management is not based on user authentication.

To change the menu protect setting, you must first enable administrator authentication.

PReference

For details about the menu protect level for each function, see p.195 "User Settings".

Menu Protect


You can set menu protect to **[Off]**, **[Level 1]**, or **[Level 2]**. If you set it to **[Off]**, no menu protect limitation is applied. To limit access to the fullest extent, select **[Level 2]**. For details about the menu protect level for each function, see p.195 "User Settings".

Copying Functions

To specify [Menu Protect] in [Copier / Document Server Features], set [Machine Management] to [On] in [Administrator Authentication Management] in [Administrator Tools] in [System Settings].

Press the [User Tools/Counter] key.

2 Press [Copier / Document Server Features].

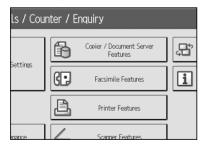

Press [Administrator Tools].

4 Press [Menu Protect].

5 Select the menu protect level, and then press [OK].

Features			Exit	
ct		Cancel	OK OK	
h, then press [OK].				
evel 1	Level 2		Off	


O Press the [User Tools/Counter] key.

Fax Functions

To specify [Menu Protect] in [Facsimile Features]: Under [System Settings], [Administrator Tools], [Administrator Authentication Management], set [Machine Management], to [On].

Press the [User Tools/Counter] key.

2 Press [Facsimile Features].

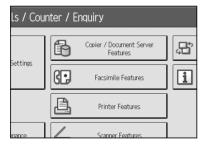


Press [Initial Settings].

4 Press [Menu Protect].

If the setting to be specified does not appear, press **[vNext]** to scroll down to other settings.

5 Select the menu protect level, and then press [OK].

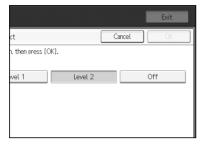




6 Press the [User Tools/Counter] key.

Printer Functions

To specify [Menu Protect] in [Printer Features], set [Machine Management] to [On] in [Administrator Authentication Management] in [Administrator Tools] in [System Settings].

Press the [User Tools/Counter] key.


2 Press [Printer Features].

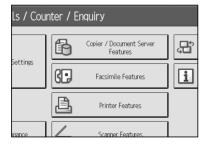

B Press [Maintenance].

Press [Menu Protect].

5 Select the menu protect level, and then press [OK].

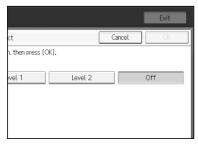


6 Press the [User Tools/Counter] key.

Scanner Functions

To specify [Menu Protect] in [Scanner Features], set [Machine Management] to [On] in [Administrator Authentication Management] in [Administrator Tools] in [System Settings].


Press the [User Tools/Counter] key.

2 Press [Scanner Features].

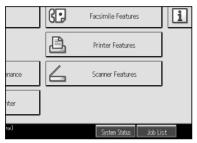

- Press [Initial Settings].
- Press [Menu Protect].

5 Select the menu protect level, and then press [OK].

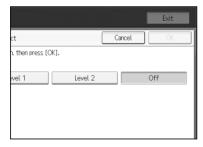

Deress the [User Tools/Counter] key.

Limiting Available Functions

To prevent unauthorized operation, you can specify who is allowed to access each of the machine's functions.

Available Functions

Specify the available functions from the copier, Document Server, fax, scanner, and printer functions.

Copier	"Full Colour/Two Colour/Single Colour/Black & White", "Two Col- our/Single Colour/Black & White, Single Colour/Black & White", "Black & White Only", "Colour"
Printer	"Full Colour", "Single Colour", "Colour"
Other Functions	"Document Server", "Facsimile", "Scanner"

🖉 Note

- To copy in both color and black/white select "Full Colour/Two Colour/Black & White". To print in both color and black/white select "Full Colour".
- □ Unless you select all items in the "Copier" or "Printer" setting, the **[Auto Colour Selection]** key cannot be used.

Specifying Which Functions are Available


This can be specified by the user administrator. Specify the functions available to registered users. By making this setting, you can limit the functions available to users.

Preparation


For details about logging on and logging off with administrator authentication, see p.23 "Logging on Using Administrator Authentication", p.26 "Logging off Using Administrator Authentication".

Press the [User Tools/Counter] key.

Press [System Settings].

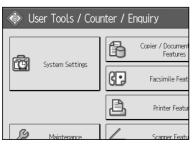


B Press [Administrator Tools].

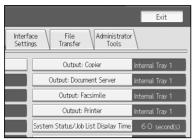


Press [Address Book Management].

5 Select the user.

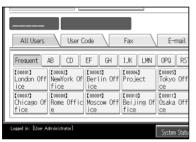

Press [Auth. Info].

2 In [Available Functions], select the functions you want to specify.

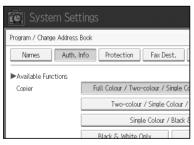

If the setting to be specified does not appear, press **[v**Next] to scroll down to other settings.



9 Press [Exit].

Press the [User Tools/Counter] key.

Managing Log Files

① Log information

To view the log, the log collection server is required.

The following log information is stored in the machine's memory and on its hard disk:

• Job log

Stores information about workflow related to user files, such as copying, printing, fax deliverly, and scan file delivery

• Access log

Stores information about access, such as logging on and off, creating and deleting files, scanning data security for copying documents, administrator procedures ^{*1}, and customer engineer procedures. ^{*2}

- *1 Deleting all log information
- *2 Formatting the hard disk
- Deleting log information

To delete the log, the log collection server is required.

By deleting the log stored in the machine, you can free up space on the hard disk.

③ Transferring log information

To transfer the log, the log collection server is required.

You can transfer the log information, which indicates who tried to gain access and at what time.

By transferring the log files, you can check the history data and identify unauthorized access.


Specifying Delete All Logs

This can be specified by the machine administrator.

By deleting the log stored in the machine, you can free up space on the hard disk.

Press the [User Tools/Counter] key.

2 Press [System Settings].

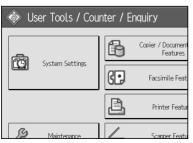

B Press [Administrator Tools].

		Exit
Interface Settings	File Administrato Transfer Tools	r
	Output: Copier	Internal Tray 1
	Dutput: Document Server	Internal Tray 1
	Output: Facsimile	Internal Tray 1
	Output: Printer	Internal Tray 1
System	n Status/Job List Display Time	60 second(s)

Press [Delete All Logs].

If the setting to be specified does not appear, press [\vee Next] to scroll down to other settings.

A confirmation message appears.

D Press [Yes].

6 Press [Exit].

2 Press the [User Tools/Counter]key.

Transfer Log Setting

The machine administrator can select **[On]** from the log server only.

When using the machine's control panel, you can change the setting to **[Off]** only if it is set to **[On]**.

You can check and change the transfer log setting. This setting lets you transfer log files to the log server to check the history data and identify unauthorized access.

For details about log collection server, contact your local dealer.

For details about the transfer log setting, see log collection server help.

Press the [User Tools/Counter]key.

2 Press [System Settings].



B Press [Administrator Tools].



Press [Transfer Log Setting].



If the setting to be specified does not appear, press **[VNext]** to scroll down to other settings.

5 Press [Off].

Press [OK].

Press the [User Tools/Counter]key.

5. Enhanced Network Security

Preventing Unauthorized Access

You can limit IP addresses, disable ports and protocols, or use Web Image Monitor to specify the network security level to prevent unauthorized access over the network and protect the address book, stored files, and default settings.

Enabling/Disabling Protocols

This can be specified by the network administrator.

Specify whether to enable or disable the function for each protocol.


By making this setting, you can specify which protocols are available and so prevent unauthorized access over the network.

Preparation

For details about logging on and logging off with administrator authentication, see p.23 "Logging on Using Administrator Authentication", p.26 "Logging off Using Administrator Authentication".

Press the [User Tools/Counter] key.


2 Press [System Settings].

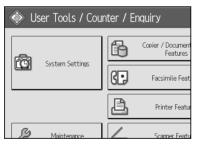

Press [Interface Settings].

Settings					
y Paper ttings	Timer Settings	Interfa Settin		File Transfer	Administ
hange / Delete User Text			Output: Copier		
ound	ound Off		Output: Document Server		
eeper	On		Output: Facsimile		
Display Up Output: Printer		rinter			
ority Copier			System Status/Job List Display		

4 Press [Effective Protocol].

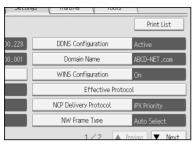

5 Press [Inactive] for the protocol you want to disable.

Select effective protocol, then press [OK].			
▶IPv4	Active		
▶IPv6	Active		
▶NetWare	Active		
►NetBEUI	Active		
►AppleTalk	Active		

6 Press [OK].

П	Press the	User Tools/Counter	kev
L	r ress me		Kev.

PReference

Advanced network settings can be specified using Web Image Monitor. For details, see the Web Image Monitor Help.

Access Control

This can be specified by the network administrator.

The machine can control TCP/IP access.

Limit the IP addresses from which access is possible by specifying the access control range.

For example, if you specify the access control range as **[192.168.15.16]**-**[192.168.15.20]**, the client PC addresses from which access is possible will be from 192.168.15.16 to 192.168.15.20.

Limitation

- Using access control, you can limit access involving LPR, RCP/RSH, FTP, IPP, DIPRINT, Web Image Monitor, SmartDeviceMonitor for Client or DeskTop-Binder. You cannot limit the Monitoring of SmartDeviceMonitor for Client.
- □ You cannot limit access involving telnet, or SmartDeviceMonitor for Admin.

Open a Web Image Monitor.

2 Enter "http://(machine's-address)/" in the address bar to access the machine.

1 Log onto the machine.

The network administrator can log on using the appropriate login user name and login password.

Click [Configuration], under [Security], click [Access Control].

The [Access Control] page appears.

b To specify the IPv4 Address, in [Access Control Range], enter an IP address that has access to the machine. To specify the IPv6 Address, in [Access Control Range] - [Range], enter an IP address that has access to the machine, or in [Mask], enter an IP address that has access to the machine and specify the [Mask Length].

Click [OK].

Access control is set.

2 Log off from the machine.

PReference

For details, see the Web Image Monitor Help.

Specifying Network Security Level

This can be specified by the network administrator.

This setting lets you change the security level to limit unauthorized access.

Set the security level to [Level 0], [Level 1], or [Level 2].

Select [Level 2] for maximum security to protect confidential information.

Select **[Level 1]** for moderate security. Use this setting if the machine is connected to the office local area network (LAN).

Select [Level 0] to use this setting if no information needs to be protected.

You can specify the entire network security level setting the machine's control panel.

PReference

For details about logging on and logging off with user authentication, see p.23 "Logging on Using Administrator Authentication", p.26 "Logging off Using Administrator Authentication".

Press the [User Tools/Counter]key.


2 Press [System Settings].

🚸 User Tools / Counter / Enquiry				
(Res)	System Settings	ß	Copier / Document Features	
		6.	Facsimile Feat	
		ß	Printer Featu	
ß	Maintenance		Scanner Featu	

B Press [Administrator Tools].



Press [Network Security Level].

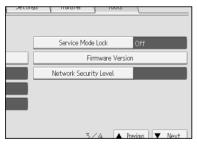

If the setting you want to specify does not appear, press **[VNext]** to scroll down to other settings.

5 Select the network security level.

		Exit	
curity Level	Cancel	ОК	
n, then press [OK].			
vel 0 Level 1		Level 2	

Select [Level 0], [Level 1], or [Level 2].

- Press [OK].
- **7** Press [Exit].

B Press the [User Tools/Counter]key.

 $\overline{\mathbb{Q}}$ Status of Functions under each Network Security Level

- O= Available
- = Unavailable
- \blacktriangle = Port is open.
- \triangle = Port is closed.
- $rac{l}{l}$ = Automatic
- \star = Ciphertext Only
- × = Ciphertext Priority

	Function		Network Security Level		
			Level 0	Level 1	Level 2
Interface	IEEE1394 SBP-2		0	О	—
	Bluetooth		О	О	—
	IPv4 over 1394		О	0	0

.

	Function		Network Security Level		
			Level 0	Level 1	Level 2
TCP/IP	TCP/IP		0	0	0
	HTTP	Port 80		•	•
		Port 443		•	•
		Port 631		•	Δ
		Port 7443/7444		•	•
	IPP	Port 80	•	•	•
		Port 631		•	Δ
		Port 443		•	
	DIPRINT		О	0	_
	LPR		О	0	_
	FTP	Port 21		•	•
	ssh	Port 22		•	•
	sftp			•	•
	RFU	Port 10021		•	
	RSH/RCP		О	0	_
	SNMP		О	0	0
	SNMP v1v2	Setting	0	_	_
		Browse	0	0	
	SNMP v3		О	0	0
		SNMP Encryption	☆	\$	*
	TELNET		О	—	—
	SSDP	Port 1900		•	Δ
	NBT	Port 137/138		•	Δ
	SSL		О	0	О
		SSL / TLS En- cryption Mode	×	×	*
	DNS		О	О	—
	SMB		О	0	—
NetWare	NetWare		О	0	—
AppleTalk	AppleTalk		О	0	_

.

. .

Encrypting Transmitted Passwords

Prevent login passwords, group passwords for PDF files, and IPP authentication passwords being revealed by encrypting them for transmission.

Also, encrypt the login password for administrator authentication and user authentication.

Driver Encryption Key

Encrypt the password transmitted when specifying user authentication. To encrypt the login password, specify the driver encryption key on the machine and on the printer driver installed in the user's computer.

PReference

See p.151 "Changing the Extended Security Functions".

Group Passwords for PDF Files

DeskTopBinder Lite's PDF Direct Print function allows a PDF group password to be specified to enhance security.

🖉 Note

- □ You cannot perform PDF Direct Print for compressed PDF files.
- □ To use PDF direct print, the optional PostScript3 unit must be installed.

Password for IPP Authentication

To encrypt the IPP Authentication password on the Web Image Monitor, set **[Authentication]** to **[DIGEST]**, and then specify the IPPAuthentication password set on the machine.

🖉 Note

You can use Telnet or FTP to manage passwords for IPP authentication, although it is not recommended.

Driver Encryption Key

This can be specified by the network administrator.

Specify the driver encryption key on the machine.

By making this setting, you can encrypt login passwords for transmission to prevent them from being analyzed.

PReference

See p.151 "Changing the Extended Security Functions".

Preparation


For details about logging on and logging off with administrator authentication, see p.23 "Logging on Using Administrator Authentication", p.26 "Logging off Using Administrator Authentication".

Press the [User Tools/Counter] key.


Press [System Settings].

🚸 User Tools / Counter / Enquiry				
		ß	Copier / Document Features	
	System Settings	6.	Facsimile Feat	
		ß	Printer Featu	
ß	Maintenance		Scanner Featu	

B Press [Administrator Tools].

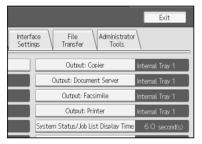

Press [Extended Security].

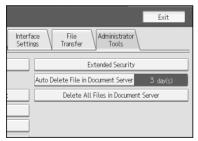

• For [Driver Encryption Key], press [Change].

System Settings				
Extended Security				
Select item.				
►Driver Encryption Key	Change	►Restrict Use of On		
►Encrypt Address Book		►Restrict Adding		
On	Off	On		
	011	►Restrict Display		

6 Enter the driver encryption key, and then press [OK].

Enter the driver encryption key using up to 32 alphanumeric characters.

🖉 Note

□ The network administrator must give users the driver encryption key specified on the machine so they can register it on their computers. Make sure to enter the same driver encryption key as that specified on the machine.

Press [OK].

Bress the [User Tools/Counter] key.

PReference

See the printer driver Help. See the TWAIN driver Help.

Group Password for PDF files

This can be specified by the network administrator.

On the machine, specify the group password for PDF files.

By using a PDF group password, you can enhance security and so protect passwords from being analyzed.

Preparation


For details about logging on and logging off with administrator authentication, see p.23 "Logging on Using Administrator Authentication", p.26 "Logging off Using Administrator Authentication".

🖉 Note

- □ The network administrator must give users the group password for PDF files that is already registered on the machine. The users can then register it in DeskTopBinder on their computers.For details, see the DeskTopBinder Help
- Make sure to enter the same character string as that specified on the machine for the group password for PDF files.
- □ The group password for PDF files can also be specified using Web Image Monitor. For details, see the Web Image Monitor Help.

Press the [User Tools/Counter] key.

2 Press [Printer Features].

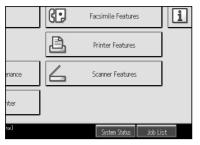

B Press [PDF Menu], and then press [PDF Group Password].

If the setting to be specified does not appear, press [**VNext**].

For [Current Password], press [Enter].

5 Enter the password, and then press [OK].

Enter the group password for PDF files using up to 32 alphanumeric characters.

- **6** Press [OK].
- **7** For [New Password], press [Enter].
- **8** Enter the password, and then press [OK].
- 9 For [Confirm New Password], press [Enter].
- Enter the password and press [OK].
- Press [OK].
- Press the [User Tools/Counter] key.

IPP Authentication Password

This can be specified by the network administrator.

Specify the IPP authentication passwords for the machine using Web Image Monitor.

By making this setting, you can encrypt IPP authentication passwords for transmission to prevent them from being analyzed.

🖉 Note

□ When using the IPP port under Windows XP or Windows Server 2003, you can use the operating system's standard IPP port.

Open a Web Image Monitor.

2 Enter "http://(machine's-address)/" in the address bar to access the machine.

1 Log onto the machine.

The network administrator can log on. Enter the login user name and login password.

4 Click [Configuration], click [Security], and then click [IPP Authentication].

The [IPP Authentication] page appears.

5 Select [DIGEST] from the [Authentication] list.

6 Enter the user name in the [User Name] box.

2 Enter the password in the [Password] box.

Click [Apply].

IPP authentication is specified.


9 Log off from the machine.

Protection Using Encryption

When you access the machine using a Web Image Monitor or IPP, you can establish encrypted communication using SSL. When you access the machine using an application such as SmartDeviceMonitor for Admin, you can establish encrypted communication using SNMPv3 or SSL.

To protect data from interception, analysis, and tampering, you can install a server certificate in the machine, negotiate a secure connection, and encrypt transmitted data.

SSL (Secure Sockets Layer)

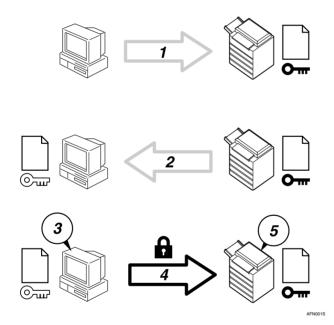

- To access the machine from a user's computer, request for the SSL server certificate and public key.
- ② The server certificate and public key are sent from the machine to the user's computer.
- ③ Using the public key, encrypt the data for transmission.
- ④ The encrypted data is sent to the machine.
- ⑤ The encrypted data is decrypted using the private key.

🖉 Note

□ To establish encrypted communication using SSL, the machine must have the printer and scanner functions.

SSL (Secure Sockets Layer) Encryption

This can be specified by the network administrator.

To protect the communication path and establish encrypted communication, create and install the server certificate.

There are two ways of installing a server certificate: create and install a self-certificate using the machine, or request a certificate from a certificate authority and install it.

Configuration flow (self-signed certificate)

- Creating and installing the server certificate Install the server certificate using Web Image Monitor.
- ② Enabling SSL Enable the [SSL/TLS] setting using Web Image Monitor.

Configuration flow (certificate issued by a certificate authority)

Creating the server certificate

Create the server certificate using Web Image Monitor. The application procedure after creating the certificate depends on the certificate authority. Follow the procedure specified by the certificate authority.

- Installing the server certificate Install the server certificate using Web Image Monitor.
- ③ Enabling SSL

Enable the **[SSL/TLS]** setting using Web Image Monitor. Creating and Installing the Server Certificate (Self-Signed Certificate) Create and install the server certificate using Web Image Monitor.

🖉 Note

To confirm whether SSL configuration is enabled, enter https://(machine's-address) in your Web Image Monitor's address bar to access this machine. If the "The page cannot be displayed" message appears, check the configuration as the SSL configuration is invalid.

Creating and Installing the Self-Signed Certificate

Create and install the server certificate using Web Image Monitor.

This section explains the use of a self-certificate as the server certificate.

1 Open a Web Image Monitor.

2 Enter "http://(machine's-address)/" in the address bar to access the printer.

B Log onto the machine.

The network administrator can log on.

Enter the login user name and login password.

Click [Configuration], under [Security], click [Device Certificate].

5 Click [Create].

6 Make the necessary settings.

PReference

For details about the displayed items and selectable items, see Web Image Monitor Help.

Click [OK].

The setting is changed.

Click [OK].

A security warning dialog box appears.

Check the details, and then click [OK].

[Installed] appears under **[Certificate Status]** to show that a server certificate for the printer has been installed.

Log off from the machine.

🖉 Note

□ Click **[Delete]** to delete the server certificate from the machine.

Creating the Server Certificate (Certificate Issued by a Certificate Authority)

Create the server certificate using Web Image Monitor.

This section explains the use of a certificate issued by a certificate authority as the server certificate.

Open a Web Image Monitor.

2 Enter "http://(machine's-address)/" in the address bar to access the printer.

1 Log onto the machine.

The network administrator can log on.

Enter the login user name and login password.

Click [Configuration], under [Security], click [Device Certificate].

The [Device Certificate] page appears.

5 Click [Request].

6 Make the necessary settings.

PReference

For details about the displayed items and selectable items, see Web Image Monitor Help.

Click [OK].

[Requesting] appears for [Certificate Status] in the Certificates area.

ULog off from the machine.

Apply to the certificate authority for the server certificate.

The application procedure depends on the certificate authority. For details, contact the certificate authority.

For the application, click the Web Image Monitor Details icon and use the information that appears in Certificate Details.

🖉 Note

- Using Web Image Monitor, you can create the contents of the server certificate but you cannot send the application.
- □ Click [Cancel Request] to cancel the request for the server certificate.

Installing the Server Certificate (Certificate Issued by a Certificate Authority)

Install the server certificate using Web Image Monitor.

This section explains the use of a certificate issued by a certificate authority as the server certificate.

Enter the server certificate contents issued by the certificate authority.

Open a Web Image Monitor.

2 Enter "http://(machine's-address)/" in the address bar to access the printer.

1 Log onto the machine.

The network administrator can log on.

Enter the login user name and login password.

Click [Configuration], under [Security], click [Device Certificate].

The [Device Certificate] page appears.

5 Click [Install].

6 Enter the contents of the server certificate.

In the **[Certificate Request]** box, enter the contents of the server certificate received from the certificate authority.

Reference

For details about the displayed items and selectable items, see Web Image Monitor Help.

Click [OK].

[Installed] appears under **[Certificate Status]** to show that a server certificate for the machine has been installed.

ULog off from the machine.

Enabling SSL

After installing the server certificate in the machine, enable the SSL setting.

This procedure is used for a self-signed certificate or a certificate issued by a certificate authority.

Open a Web Image Monitor.

2 Enter "http://(machine's-address)/" in the address bar to access the printer.

B Log onto the machine.

The network administrator can log on.

Enter the login user name and login password.

Click [Configuration], under [Security], click [SSL/TLS].

The **[SSL/TLS]** page appears.

5 Click [Enable] for [SSL/TLS].

Click [OK].

The SSL setting is enabled.

1 Log off from the machine.

🖉 Note

□ If you set [Permit SSL/TLS Communication] to [Ciphertext Only], enter "ht-tps://(machine's address)/" to access the machine.

User Settings for SSL (Secure Sockets Layer)

If you have installed a server certificate and enabled SSL (Secure Sockets Layer), you need to install the certificate on the user's computer.

The network administrator must explain the procedure for installing the certificate to users.

If a warning dialog box appears while accessing the machine using the Web Image Monitor or IPP, start the Certificate Import Wizard and install a certificate.

When the [Security Alert] dialog box appears, click [View Certificate].

The [Certificate] dialog box appears.

To be able to respond to inquiries from users about such problems as expiry of the certificate, check the contents of the certificate.

On the [General] tab, click [Install Certificate...].

Certificate Import Wizard starts.

U Install the certificate by following the Certificate Import Wizard instructions.

🖉 Note

- For details about how to install the certificate, see the Web Image Monitor Help.
- □ If a certificate issued by a certificate authority is installed in the printer, confirm the certificate store location with the certificate authority.

PReference

For details about where to store the certificate when accessing the machine using IPP, see the SmartDeviceMonitor for Client Help.

Setting the SSL / TLS Encryption Mode

By specifying the SSL/TLS encrypted communication mode, you can change the security level.

Encrypted Communication Mode

Using the encrypted communication mode, you can specify encrypted communication.

Ciphertext Only	Allows encrypted communication only. If encryption is not possible, the machine does not communicate.
Ciphertext Priority	Performs encrypted communication if en- cryption is possible. If encryption is not possible, the machine communicates without it.
Ciphertext / Clear Text	Communicates with or without encryption, according to the setting.

Setting the SSL / TLS Encryption Mode

This can be specified by the network administrator.

After installing the server certificate, specify the SSL/TLS encrypted communication mode. By making this setting, you can change the security level.

Preparation

For details about logging on and logging off with administrator authentication, see p.23 "Logging on Using Administrator Authentication", p.26 "Logging off Using Administrator Authentication".

Press the [User Tools/Counter] key.


2 Press [System Settings].



B Press [Interface Settings].

Settings					
y Paper ettings	Timer Settings	Interfa Settir		File Transfer	Administ
hange / Delete User Text			Output: Copier		
ound	Off		Output: Document Server		
eeper	On		Output: Facsimile		csimile
Display	play Up		Output: Printer		
ority	Copier		System Status/Job List Display		ist Display.

Press [Permit SSL/TLS Communication]

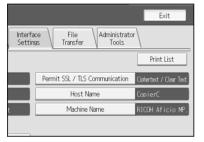

If the setting to be specified does not appear, press **[v**Next] to scroll down to other settings.



5 Select the encrypted communication mode.



Select [Ciphertext Only], [Ciphertext Priority], or [Ciphertext/Clear Text] as the encrypted communication mode.

6 Press [OK].

Press the [User Tools/Counter] key.

🖉 Note

□ The SSL/TLS encrypted communication mode can also be specified using Web Image Monitor. For details, see the Web Image Monitor Help.

SNMPv3 Encryption

This can be specified by the network administrator.

When using SmartDeviceMonitor for Admin or another application to make various settings, you can encrypt the data transmitted.

By making this setting, you can protect data from being tampered with.

Preparation

For details about logging on and logging off with administrator authentication, see p.23 "Logging on Using Administrator Authentication", p.26 "Logging off Using Administrator Authentication".

Press the [User Tools/Counter] key.


2 Press [System Settings].




Press [Interface Settings].

Settings					
y Paper ttings	Timer Settings	Interfa Settir		File Transfer	Administ Tool
hange / Delete User Text			Output: Copier		
ound	Off		Output: Document Server		ent Server
eeper	On	Output: Facsimile		simile	
Display	Up		Output: Printer		
ority	Copier		System Status/Job List Display		

Press [Permit SNMPv3 Communication].

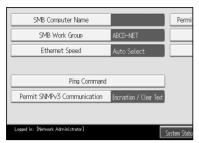

If the setting to be specified does not appear, press **[VNext]** to scroll down to other settings.

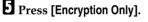

Settings		
v Paper ttings	Permit SNMPv3 Communication	Can
	Select item, then press [OK].	
r Name	Encryption Only Encryption / Clear	Text
iroup		
eed		

6 Press [OK].

2 Press the [User Tools/Counter] key.

🖉 Note

- To use SmartDeviceMonitor for Admin for encrypting the data for specifying settings, you need to specify the network administrator's [Encryption Password] setting and [Encryption Key] in [SNMP Authentication Information] in SmartDeviceMonitor for Admin, in addition to specifying [Permit SNMPv3 Communication] on the machine.
- □ If network administrator's **[Encryption Password]** setting is not specified, the data for transmission may not be encrypted or sent.

Reference

For details about specifying the network administrator's **[Encryption Pass-word]** setting, see p.20 "Registering the Administrator".

6. Specifying the Extended **Security Functions**

Changing the Extended Security **Functions**

As well as providing basic security through user authentication and the machine access limits specified by the administrators, you can increase security by, for instance, encrypting transmitted data and data in the address book. If you need extended security, specify the machine's extended security functions before using the machine.

This section outlines the extended security functions and how to specify them. For details about when to use each function, see the corresponding chapters.

Changing the Extended Security Functions

To change the extended security functions, display the extended security screen as follows:




Preparation

For details about logging on and logging off with administrator authentication, see p.23 "Logging on Using Administrator Authentication", p.26 "Logging off Using Administrator Authentication".


Procedure for Changing the Extended Security Functions

Press the [User Tools/Counter] key.


2 Press [System Settings].

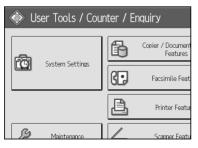


B Press [Administrator Tools].

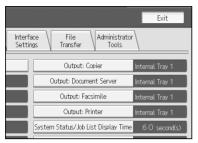

4 Press [Extended Security].

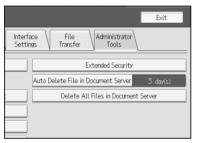

5 Press the setting you want to change, and change the setting.

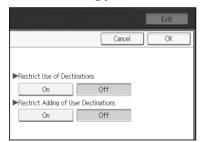

C Press [OK].

2 Press the [User Tools/Counter] key.

Settings

Driver Encryption Key

This can be specified by the network administrator. Encrypt the password transmitted when specifying user authentication. The Driver Encryption Key must match the encryption key set on the machine.

PReference

See the printer driver Help.

See the LAN Fax driver Help.

See the TWAIN driver Help.

Encrypt Address Book

This can be specified by the user administrator. Encrypt the data in the machine's address book.

Reference

See p.107 "Encrypting the Data in the Address Book".

- On
- Off

🖉 Note

Default: Off

Restrict Use of Destinations

This can be specified by the user administrator. The available fax and scanner destinations are limited to the destinations registered in the address book.

PReference

See p.101 "Restrictions on Destinations". A user cannot directly enter the destinations for transmission.

Limitation

□ If you specify the setting to receive e-mails via SMTP, you cannot use [Restrict Use of Destinations].

🖉 Note

□ The destinations searched by "Search LDAP" can be used.

- On
- Off

🖉 Note

□ Default: Off

Restrict Adding of User Destinations

This can be specified by the user administrator.

When "Restrict Use of Destinations" is set to **[Off]**. After entering a fax or scanner destination directly, you can register it in the address book by pressing **[Program Dest.]**. If **[On]** is selected for this setting, **[Program Dest.]** does not appear. If you set **[Restrict Adding of User Destinations]** to **[On]**, users can specify destinations directly, but cannot use **[Program Dest.]** to register data in the address book. When this setting is made, only the user administrator can change the address book.

- On
- Off

🖉 Note

Default: Off

* Restrict Display of User Information

This can be specified if user authentication is specified. When the job history is checked using a network connection for which authentication is not available, all personal information can be displayed as "*******". For example, when someone not authenticated as an administrator checks the job history using SNMP in SmartDeviceMonitor for Admin, personal information can be displayed as "*******" so users cannot be identified. Because no information identifying registered users can be viewed, unauthorized users can be prevented from obtaining information about the registered files.

- On
- Off

🖉 Note

□ Default: Off

Enhance File Protection

This can be specified by the file administrator. By specifying a password, you can limit operations such as printing, deleting, and sending files, and can prevent unauthorized people from accessing the files. However, it is still possible for the password to be cracked.

By specifying "Enhance File Protection", files are locked and so become inaccessible if an invalid password is entered ten times. This can protect the files from unauthorized access attempts in which a password is repeatedly guessed.

The locked files can only be unlocked by the file administrator. When "Enhance File Protection" is specified, (

🖉 Note

□ If files are locked, you cannot select them even if the correct password is entered.

- On
- Off

🖉 Note

□ Default: Off

Settings by SNMP v1 and v2

This can be specified by the network administrator. When the machine is accessed using the SNMPv1, v2 protocol, authentication cannot be performed, allowing machine administrator settings such as the paper setting to be changed. If you select **[Prohibit]**, the setting can be viewed but not specified with SNMPv1, v2.

- Prohibit
- Do not Prohibit

🖉 Note

Default: Do not Prohibit

* Restrict Use of Simple Encryption

This can be specified by the network administrator.

For example, this setting is set to **[On]** and you want to edit the address book in User Management Tool or Address Management Tool in SmartDevice-Monitor for Admin, or you want to access the machine using DeskTopBinder or the ScanRouter delivery software, enable SSL/TLS for encrypted communication. For details about specifying SSL/TLS, see p.147 "Setting the SSL / TLS Encryption Mode".

If you select [On], specify the encryption setting using the printer driver.

- On
- Off

🖉 Note

□ Default: Off

Transfer to Fax Receiver

This can be specified by the machine administrator.

If you use **[Forwarding]** or **[Transfer Request]** under the fax function, files stored in the machine can be transferred or delivered.

If you select **[Prohibit]** for this setting, stored files cannot be transferred by **[Forwarding]** and **[Transfer Request]**.

Use this setting, to prevent the stored files being transferred by mistake.

- Prohibit
- Do not Prohibit

🖉 Note

- □ Default: Do not Prohibit
- □ If you select **[Prohibit]** for this setting, the following functions are disabled:
 - Polling Transmission
 - Transfer Request
 - Forwarding
 - Transfer Box
 - Delivery from Personal Box
 - Information Box
 - Delivery of Mail Received via SMTP

\mathcal{P} Reference

For details, see Facsimile Reference.

Authenticate Current Job

This can be specified by the machine administrator.

This setting lets you specify whether or not authentication is required for operations such as canceling jobs under the copier and printer functions.

If you select **[Login Privilege]**, authorized users and the machine administrator can operate the machine. When this is selected, authentication is not required for users who logged on to the machine before **[Login Privilege]** was selected. If you select **[Access Privilege]**, users who canceled a copy or print job in progress and the machine administrator can operate the machine.

Limitation

- □ Even if you select **[Login Privilege]** and log onto the machine, you cannot cancel a copy or print job in progress if you are not authorized to use the copy and printer functions.
- You can specify [Authenticate Current Job] only if [User Authentication Management] was specified.
- Login Privilege
- Access Privilege
- Off

🖉 Note

Password Policy

This can be specified by the user administrator.

The password policy setting is effective only if **[Basic Auth.]** is specified. This setting lets you specify **[Complexity Setting]** and **[Minimum Character No.]** for the password. By making this setting, you can limit the available passwords to only those that meet the conditions specified in **[Complexity Setting]** and **[Minimum Character No.]**.

If you select **[Level 1]**, specify the password using a combination of two types of characters selected from upper-case letters, lower-case letters, decimal numbers, and symbols such as #.

If you select **[Level 2]**, specify the password using a combination of three types of characters selected from upper-case letters, lower-case letters, decimal numbers, and symbols such as #.

@Remote Service

Communication via HTTPS for @Remote Service is disabled if you select [On].

- Prohibit
- Do not Prohibit

🖉 Note

Default: Do not Prohibit

Other Security Functions

This section explains settings for preventing information leaks, and functions that you can restrict to further increase security.

Fax Function

Not Displaying Destinations and Senders in Reports and Lists

You can specify whether or not to display destinations and senders by clicking **[Facsimile Features]**, **[Administrator Tools]**, **[Parameter Setting]** and specifying "Bit No. 04" and "Bit No. 05" under "Switch 04". Not displaying destinations and senders helps prevent information leaks.

Reference

For details, see "User Parameters", Facsimile Reference.

Stored RX File User Setting

Specify which users can manage fax files stored on the hard disk by setting **[Facsimile Features]**, **[Administrator Tools]**, **[Stored Reception File User Setting]** to **[On]**.

To access the machine over a network, specified users must enter their user codes or login user names and passwords.

Allowing only authorized users to manage files can prevent others seeing faxes you have sent.

PReference

For details, see "Stored RX File User Setting", Facsimile Reference.

Printing the Journal

When making authentication settings for users, to prevent personal information in transmission history being printed, set the Journal to not be printed. Also, if more than 200 transmissions are made, transmissions shown in the Journal are overwritten each time a further transmission is made.

To prevent the Transmission History being overwritten, perform the following procedures:

- In the default settings for Fax, under "Administrator Settings", "Parameter Settings" (Switch 03, Bit 7), change the setting for automatically printing the Journal.
- In the default settings for Fax, under "Administrator Settings", "Parameter Settings" (Switch 21, Bit 4), set "Transmit Journal by E-mail" to "ON".

Scanner Function

Print & Delete Scanner Journal

To prevent personal information in the transmission/delivery history being printed automatically, set user authentication and the journal will not print automatically. Instead, items in the Print&Delete Scanner Journal are overwritten one by one when the number of transmissions/deliveries exceeds 250. To prevent the transmission/delivery history from overwritten, change the setting so that the Scanner Journal is printed automatically.

Limiting Machine Operation to Customers Only

The machine can be set so that operation is impossible without administrator authentication.

The machine can be set to prohibit operation without administrator authentication and also prohibit remote registration in the address book by a service representative.

We maintain strict security when handling customers' data. Also, by being authenticated by an administrator to use the machine, we operate the machine under the customer's control.

Use the following settings.

Service Mode Lock

Settings

Service Mode Lock

This can be specified by the machine administrator. Service mode is used by a customer engineer for inspection or repair. If you set the service mode lock to **[On]**, service mode cannot be used unless the machine administrator logs onto the machine and cancels the service mode lock to allow the customer engineer to operate the machine for inspection and repair. This ensures that the inspection and repair are done under the supervision of the machine administrator.


Specifying Service Mode Lock

Preparation

For details about logging on and logging off with administrator authentication, see p.23 "Logging on Using Administrator Authentication", p.26 "Logging off Using Administrator Authentication".

Press the [User Tools/Counter] key.


Press [System Settings].

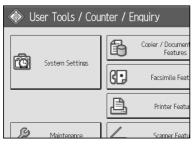


B Press [Administrator Tools].

		Exit	
Interfa Settir			
	Output: Copier	Internal Tray 1	
	Output: Document Server Internal Tray 1		
	Output: Facsimile	Internal Tray 1	
	Output: Printer	Internal Tray 1	
	System Status/Job List Display Time	60 second(s)	

Press [Service Mode Lock].

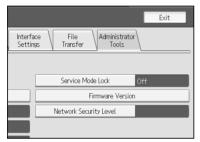

5 Press [On] and then [OK].

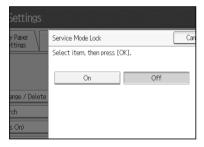

A confirmation message appears.

O Press [Yes].

Press the [User Tools/Counter] key.

Canceling Service Mode Lock

For a customer engineer to carry out inspection or repair in service mode, the machine administrator must log onto the machine and cancel the service mode lock.

Preparation

For details about logging on and logging off with administrator authentication, see p.23 "Logging on Using Administrator Authentication", p.26 "Logging off Using Administrator Authentication".

Press the [User Tools/Counter] key.


2 Press [System Settings].





		Exit
Interfa Settir		-
	Output: Copier	Internal Tray 1
	Output: Document Server Internal Tray 1	
	Output: Facsimile Internal Tray 1	
	Output: Printer	Internal Tray 1
	System Status/Job List Display Time	60 second(s)

Press [Service Mode Lock].

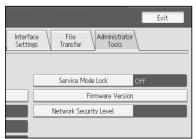

5 Press [Off] and then press [OK].



Deress the [User Tools/Counter] key.

The customer engineer can switch to service mode.

7. Troubleshooting

Authentication Does Not Work Properly

This section explains what to do if a user cannot operate the machine because of a problem related to user authentication. Refer to this section if a user comes to you with such a problem.

A Message Appears

This section explains how to deal with problems if a message appears on the screen during user authentication.

The most common messages are explained. If some other message appears, deal with the problem according to the information contained in the message.

Messages	Causes	Solutions
You do not have the privileges to use this function.	The authority to use the func- tion is not specified.	 If this appears when trying to use a function: The function is not specified in the address book management setting as being available. The user administrator must decide whether to authorize use of the function and then assign the authority. If this appears when trying to specify a default setting: The administrator differs depending on the default
		settings you wish to speci- fy. Using the list of set- tings, the administrator responsible must decide whether to authorize use of the function.

Messages	Causes	Solutions
Failed to obtain URL.	The machine cannot connect to the server or cannot estab- lish communication.	Make sure the server's set- tings, such as the IP Address and host name, are specified correctly on the machine.
		Make sure the host name of the UA Server is specified correctly.
	The machine is connected to the server, but the UA service is not responding properly.	Make sure the UA service is specified correctly.
	SSL is not specified correctly on the server.	Specify SSL using Authentica- tion Manager.
	Server authentication failed.	Make sure server authentica- tion is specified correctly on the machine.
Authentication has failed.	The entered login user name or login password is not cor- rect	Inquire the user administrator for the correct login user name and login password.
	The number of users regis- tered in the address book has reached the maximum limit allowed by Windows Authen- tication or , LDAP Authentica- tion, or Integration Server Authentication, so you cannot register additional users.	Delete unnecessary user ad- dresses.
	Cannot access the authentica- tion server when using Win- dows authentication , LDAP Authentication, or Integration Server Authentication.	A network or server error may have occurred. Contact to the network administrator.
The selected file(s) contained file(s) without access priv- ileges. Only file(s) with access privi- leges will be delet- ed.	You have tried to delete files without the authority to do so.	Files can be deleted by the file creator (owner) or file admin- istrator. To delete a file which you are not authorized to de- lete, contact the file creator (owner).

Machine Cannot Be Operated

If the following conditions arise while users are operating the machine, provide instructions on how to deal with them.

Condition	Cause	Solution
Cannot print using the printer driver or connect using the TWAIN driver.	User authentication has been rejected.	Enter the login user name and login password in the printer driver.
		If using Windows authentica- tion or , LDAP Authentica- tion, or Integration Server Authentication, inquire the network administrator for the user name and login name.
		If using basic authentication, inquire the user administra- tor.
	The encryption key specified in the driver does not match the machine's driver encryp- tion key.	Specify the driver encryption key registered in the machine. See p.135 "Driver Encryption Key".
Cannot authenticate using the TWAIN driver.	Another user is logging on to the machine.	Wait for the user to log off.
	Authentication is taking time because of operating condi- tions.	Make sure the LDAP server setting is correct. Make sure the network set- tings are correct.
	Authentication is not possible while the machine is editing the address book data.	Wait until editing of the ad- dress book data is complete.
After starting [User Manage- ment Tool] or [Address Manage- ment Tool] in SmartDeviceMonitor for Ad- min and entering the correct login user name and pass- word, a message appears to notify that an incorrect pass- word has been entered.	"Restrict Simple Encryption" is not set correctly. Alterna- tively, [SSL/TLS] has been ena- bled although the required certificate is not installed in the computer.	Set "Restrict Simple Encryp- tion" to [On] . Alternatively, enable [SSL/TLS] , install the server certificate in the ma- chine, and then install the cer- tificate in the computer. Reference See p.155 "Restrict Use of
Cannot log on to the machine using [Document Server: Authen- tication/Encryption] in Desk- TopBinder.		Simple Encryption". See p.147 "Setting the SSL / TLS Encryption Mode".
Cannot access the machine us- ing ScanRouter EX Profes- sional V3 / ScanRouter EX Enterprise V2.		

Condition	Cause	Solution
Cannot connect to the Scan- Router delivery software.	The ScanRouter delivery soft- ware may not be supported by the machine.	Update to the latest version of the ScanRouter delivery software.
Cannot access the machine us- ing ScanRouter EX Profes- sional V2.	ScanRouter EX Professional V2 tication.	does not support user authen-
Cannot log off when using the copying or scanner functions.	The original has not been scanned completely.	When the original has been scanned completely, press [#] , remove the original, and then log off.
[Program Dest.] does not appear on the fax or scanner screen for specifying destinations.	[Restrict Adding of User Destina- tions] is set to [Off] in [Restrict Use of Destinations] in [Extended Security], so only the user ad- ministrator can register desti- nations in the address book.	Registration must be done by the user administrator.
Stored files do not appear.	User authentication may have been disabled while [All Users] is not specified.	Re-enable user authentication, and then enable [All Users] for the files that did not appear. For details about enabling [All Users] , see p.87 "Specifying Access Permission for Stored Files".
Destinations specified using the machine do not appear.	User authentication may have been disabled while [All Users] is not specified.	Re-enable user authentication, and then enable [All Users] for the destinations that did not appear. For details about enabling [All Users] , see p.104 "Protecting the Address Book".
Cannot print when user au- thentication has been speci- fied.	User authentication may not be specified in the printer driver.	Specify user authentication in the printer driver. For details, see the printer driver Help.
If you try to interrupt a job while copying or scanning, an authentication screen ap- pears.	With this machine, you can log off while copying or scan- ning. If you try to interrupt copying or scanning after log- ging off, an authentication screen appears.	Only the user who executed a copying or scanning job can interrupt it.Wait until the job has completed or consult an administrator or the user who executed the job.
After you execute [Encrypt Address Book] the [Exit] message does not appear.	The hard disk may be faulty. The file may be corrupt.	Contact your service repre- sentative.

8. Appendix

Operations by the Supervisor

The supervisor can delete an administrator's password and specify a new one. If any of the administrators forget their passwords or if any of the administrators change, the supervisor can assign a new password. If logged on using the supervisor's user name and password, you cannot use normal functions or specify defaults. Log on as the supervisor only to change an administrator's password.

∰Important

- The default login user name is "supervisor" and the login password is blank. We recommend changing the login user name and login password.
- When registering login user names and login passwords, you can specify up to 32 alphanumeric characters and symbols. Keep in mind that user names and passwords are case-sensitive.
- □ Be sure not to forget the supervisor login user name and login password. If you do forget them, a service representative will to have to return the machine to its default state. This will result in all data in the machine being lost and the service call may not be free of charge.


🖉 Note

- You cannot specify the same login user name for the supervisor and the administrators.
- Using Web Image Monitor, you can log on as the supervisor and delete an administrator's password.

Logging on as the Supervisor

If administrator authentication has been specified, log on using the supervisor login user name and login password. This section describes how to log on.

Press the [Login/Logout] key.

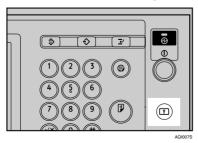

Press [Enter] for [Login User Name].

B Enter a login user name, and then press [OK].

🖉 Note

□ When you assign the administrator for the first time, enter "supervisor".

Press [Enter] for [Login Password].

Enter a login password, and then press [OK].

🖉 Note


□ When you assign the administrator for the first time, proceed to step **[**] without pressing **[Enter]**.

O Press [Login].

Logging off as the Supervisor

If administrator authentication has been specified, be sure to log off after completing settings. This section explains how to log off after completing settings.

Press the [Login/Logout] key.

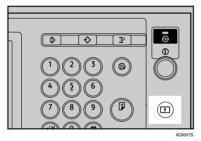


2 Press [Yes].


Changing the Supervisor

Press the [User Tools/Counter] key.

Press [System Settings].

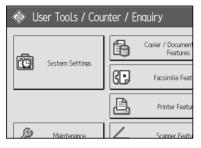

B Press [Administrator Tools].

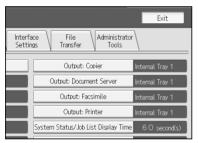

Press [Program / Change Administrator].

Under "Supervisor", click [Change].

System Settings				
Program / Change Administrator				
Supervisor Change	Administrator 1 Change	Administrator 2 Change		
►User Administrator	Administrator 1	Administrator		
►Machine Administrator	Administrator 1	Administrator		
	A dasiainkashan 1			

8


6 Press [Change] for the login user name.



- **2** Enter the login user name, and then press [OK].
- **B** Press [Change] for the login password.
- Enter the login password, and then press [OK].
- If a password reentry screen appears, enter the login password, and then press [OK].
- Press [OK] twice.
- Press the [User Tools/Counter] key.


Resetting an Administrator's Password

Press the [Login/Logout] key.

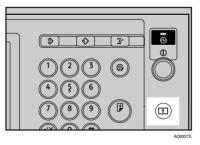

- **2** Log on as the supervisor.
 - You can log on in the same way as an administrator.
- Press [System Settings].
- Press [Administrator Tools].
- **5** Press [Program / Change Administrator].

O Press [Change] for the administrator you wish to reset.

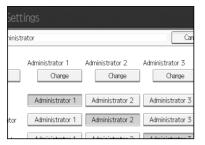

2 Press [Change] for the login password.

Enter the login password, and then press [OK].

If a password reentry screen appears, enter the login password, and then press [OK].

Press [OK].

Press [OK].

Press the [User Tools/Counter] key.

Machine Administrator Settings

The machine administrator settings that can be specified are as follows:

System Settings

The following settings can be specified.

- General Features
 All the settings can be specified.
- Tray Paper Settings All the settings can be specified.

Timer Settings

All the settings can be specified.

File Transfer

The following settings can be specified.

- Delivery Option
- SMTP Authentication SMTP Authentication User Name E-mail Address Password Encryption
- POP before SMTP Wait Time after Authent. User Name E-mail Address
- Reception Protocol
- POP3 / IMAP4 Settings Server Name Encryption
- Administrator's E-mail Address
- Default User Name / Password (Send) SMB User Name / SMB Password FTP User Name / FTP Password NCP User Name / NCP Password
- Program / Change / Delete E-mail Message
- Fax E-mail Account

Administrator Tools

- User Authentication Management You can specify which authentication to use. You can also edit the settings for each function.
- Administrator Authentication Management Machine Management
- Program / Change Administrator Machine Administrator You can change the user name and the full-control user's authority.
- Key Counter Management
- Extended Security Transfer to Fax Receiver @Remote Service
- Display / Print Counter Print Counter List
- Display / Clear / Print Counter per User All the settings can be specified.
- Capture Priority *1 Capture: Ownership Capture: Public Priority Capture: Owner Defaults
- Extended Features
- AOF (Always On)
- Program / Change / Delete LDAP Server Identification Name Server Name Search Base Port No. Use Secure Connection (SSL) Authentication Search Conditions Search Options
- LDAP Search
- Service Mode Lock
- Auto Erase Memory Setting *2
- Erase All Memory *2
- Transfer Log Setting
- Data Security for Copying
- ^{*1} File Format Converter option must be installed.
- ^{*2} The DataOverwriteSecurity unit option must be installed.

8

Maintenance

The following settings can be specified.

- Auto Colour Calibration
- Colour Registration

Copier / Document Server Features

The following settings can be specified.

- General Features
 All the settings can be specified.
- Reproduction Ratio
 All the settings can be specified.
- ✤ Edit All the settings can be specified.
- Stamp All the settings can be specified.
- Input / Output All the settings can be specified.
- Adjust Colour Image All the settings can be specified.
- Administrator Tools
 All the settings can be specified.

Facsimile Features

The following settings can be specified.

General Settings

All the settings can be specified

Scan Settings

All the settings can be specified

Send Settings

The following settings can be specified

- Program / Change / Delete Standard Message
- Backup File TX Setting

Reception Settings

The following settings can be specified.

- Switch Reception Mode
- Program Special Sender
- SMTP RX File Delivery Settings
- 2 Sided Print
- Checkered Mark
- Centre Mark
- Print Reception Time
- Reception File Print Quantity

Initial Settings

The following settings can be specified.

- · Parameter Setting
- Parameter Setting: Print List
- Program Closed Network Code
- Program Memory Lock ID
- Internet Fax Settings
- Program Fax Information
- Menu Protect

8

Printer Features

The following settings can be specified.

List / Test Print

All the settings can be specified.

Maintenance

- Menu Protect
- List / Test Print Lock
- 4Colour Graphic Mode

✤ System

- Print Error Report
- Auto Continue
- Memory Overflow
- Job Separation
- Initial Print Job List
- Memory Usage
- Duplex
- Copies
- Blank Page Print
- Reserved Job Waiting Time
- Printer Language
- Sub Paper Size
- Paper Size
- Letterhead Setting
- Bypass Tray Setting Priority
- Edge to Edge Print
- Default Printer Language
- Tray Switching

Host Interface

All the settings can be specified.

PCL Menu

All the settings can be specified.

PS Menu ^{*1} All the settings can be specified.

PDF Menu *1

All the settings can be specified.

^{*1} The PostScript 3 unit option must be installed.

Scanner Features

The following settings can be specified.

General Settings

All the settings can be specified.

Scan Settings

All the settings can be specified.

Send Settings

The following settings can be specified.

- Compression (Black & White)
- Compression (Gray Scale/Full Colour)
- High Compression PDF Level
- Print & Delete Scanner Journal
- E-mail Information Language
- Stored File E-mail Method

Initial Settings

All the settings can be specified.

Settings via Web Image Monitor

The following settings can be specified.

Top Page

- Reset Printer Job
- Reset Device

Device Settings

- System Spool Printing Protect Printer Display Panel Output Tray Paper Tray Priority Cover Sheet Tray Slip Sheet Tray
- Paper All the settings can be specified.
- Timer All the settings can be specified.
- Date/Time All the settings can be specified.
- E-mail All the settings can be specified.
- Auto E-mail Notification All the settings can be specified.
- On demand E-mail Notification All the settings can be specified.
- File Transfer All the settings can be specified.
- User Authentication Management All the settings can be specified.
- Administrator Authentication Management Machine Administrator Authentication Available Settings for Machine Administrator
- Program/Change Administrator You can specify the following administrator settings as the machine administrator.
 Login User Name
 Login Password
 Change Encryption Password
- LDAP Server All the settings can be specified.

Printer

- System All the settings can be specified.
- Host Interface All the settings can be specified.
- PCL Settings All the settings can be specified.
- PS Settings ^{*1} All the settings can be specified.
- PDF Settings ^{*1} The following settings can be specified. Duplex Blank Page Print PDF Group Password Resolution
- Tray Parameters (PCL)
- Tray Parameters (PS)
- PDF Group Password
- PDF Fixed Password
- ^{*1} The PostScript 3 unit option must be installed.

✤ Fax

- Environment Settings All the settings can be specified.
- Send/Reception Settings All the settings can be specified.
- Parameter Settings All the settings can be specified.

Interface Settings

- Parallel Interface
- USB
- Pict Bridge

Network

• SNMPv3

RC Gate

All the settings can be specified.

✤ Webpage

All the settings can be specified.

8

Settings via SmartDeviceMonitor for Admin

The following settings can be specified.

Device Information

- Reset Device
- Reset Current Job
- Reset All Jobs

✤ User Management Tool

The following settings can be specified.

- User Page Count
- Access Control List
- Reset User Counters

Network Administrator Settings

The network administrator settings that can be specified are as follows:

System Settings

The following settings can be specified.

Interface Settings

- Network All the settings can be specified.
- IEEE 1394 ^{*1} All the settings can be specified.
- IEEE 802.11b ^{*2} All the settings can be specified.

🖉 Note

- □ If DHCP is set to **[On]**, the settings that are automatically obtained via DHCP cannot be specified.
- ^{*1} The IEEE1394 interface board option must be installed.
- ^{*2} The IEEE802.11b interface unit option must be installed.

File Transfer

- SMTP Server Server Name Port No.
- E-mail Communication Port
- E-mail Reception Interval
- Scanner Resend Interval Time
- Number of Scanner Resends
- Auto Specify Sender Name
- Max. Reception E-mail size
- E-mail Storage in Server

Administrator Tools

- Administrator Authentication Management
 Network Management
- Program / Change Administrator Network Administrator You can specify the user name and change the full-control user's authority.
- Extended Security Driver Encryption Key Settings by SNMP V1 and V2 Restrict Use of Simple Encryption

Facsimile Features

The following settings can be specified.

Send Settings

• Max. E-mail Size

Initial Settings

- Enable H.323
- Enable SIP
- H.323 Settings
- SIP Settings
- Program/Change/Delete Gateway

Scanner Features

The following settings can be specified.

Send Settings

- Max. E-mail Size
- Divide & Send E-mail

Settings via Web Image Monitor

The following settings can be specified.

Device Settings

- System Device Name Comment Location
- E-mail Reception SMTP E-mail Communication Port
- Auto E-mail Notification
- Program/Change Administrator You can specify the following administrator settings for the machine administrator.
 Login User Name
 Login Password
 Change Encryption Password

 Administrator Authentication Management Network Administrator Authentication Available Settings for Network Administrator

Fax

- Send/Reception Settings Maximum E-mail Size
- IP-Fax Settings All the settings can be specified.
- IP-Fax Gateway Settings All the settings can be specified.

✤ Interface

- Change Interface
- IEEE 802.11b *1
 Communication Mode SSID
 Channel
 WEP Setting
 Authentication Type
 WEP Key Status
 Key
 Confirm Key
- IEEE 1394 ^{*2} IP over 1394 SCSI print (SBP-2) Bidirectional SCSI print
- Bluetooth *3 Operation Mode
- ^{*1} The IEEE802.11b interface unit option must be installed.
- ^{*2} The IEEE1394 interface board option must be installed.
- ^{*3} The Bluetooth interface unit option must be installed.

Network

- IPv4
 - All the settings can be specified.
- IPv6 All the settings can be specified.
- NetWare All the settings can be specified.
- AppleTalk All the settings can be specified.
- SMB All the settings can be specified.
- SNMP All the settings can be specified.

- SNMPv3 All the settings can be specified.
- SSDP All the settings can be specified.
- Bonjour All the settings can be specified.

✤ Webpage

All the settings can be specified.

Security

- Network Security All the settings can be specified.
- Access Control All the settings can be specified.
- IPP Authentication All the settings can be specified.
- SSL/TLS All the settings can be specified.
- ssh All the settings can be specified.
- Site Certificates All the settings can be specified.
- Device Certificates All the settings can be specified.

Settings via SmartDeviceMonitor for Admin

The following settings can be specified.

NIB Setup Tool

All the settings can be specified.

File Administrator Settings

The file administrator settings that can be specified are as follows:

System Settings

The following settings can be specified.

Administrator Tools

- Administrator Authentication Management File Management
- Program / Change Administrator File Administrator
- Extended Security Enhance File Protection
- Auto Delete File in Document Server
- Delete All Files in Document Server

Facsimile Features

The following settings can be specified.

Reception Settings

• Stored Reception File User Setting

Printer Features

The following settings can be specified.

Maintenance

- Delete All Temporary Print Jobs
- Delete All Stored Print Jobs

System

- Auto Delete Temporary Print Jobs
- Initial Print Job List

Settings via Web Image Monitor

The following settings can be specified.

Top Page

Reset Printer Job

Document Server

All the settings can be specified.

Job

- Printer
 - Print Jobs *1
 - ^{*1} The file administrator can select **[Delete]**, **[Delete Password]**, and **[Unlock Job]**. The file administrator cannot print files.

Device Settings

- Auto E-mail Notification All the settings can be specified.
- Administrator Authentication Management File Administrator Authentication Available Settings for File Administrator
- Program/Change Administrator You can specify the following administrator settings for the file administrator.
 Login User Name
 - Login Password Change Encryption Password
- Administrator Authentication Management File Administrator Authentication Available Settings for File Administrator

Printer

- Auto Delete Temporary Print Jobs
- Auto Delete Stored Print Jobs

Webpage

• Download Help File

User Administrator Settings

The user administrator settings that can be specified are as follows:

System Settings

The following settings can be specified.

Administrator Tools

- Administrator Authentication Management
 User Management
- Program / Change Administrator User Administrator
- Extended Security Restrict Use of Destinations Restrict Adding of User Destinations Encrypt Address Book Password Policy
- Print Address Book: Destination List
- Address Book Management
- Address Book: Program / Change / Delete Group
- Address Book: Program / Change / Delete Transfer Request
- Address Book: Change Order
- Address Book: Edit Title
- Address Book: Switch Title

8

Settings via Web Image Monitor

The following settings can be specified.

Address Book

All the settings can be specified.

Device Settings

- Auto E-mail Notification All the settings can be specified.
- Administrator Authentication Management File Administrator Authentication Available Settings for File Administrator
- Program/Change Administrator The user administrator settings that can be specified are as follows: Login User Name Login Password Change Encryption Password

Webpage

• Download Help File

Settings via SmartDeviceMonitor for Admin

The following settings can be specified.

Address Management Tool

All the settings can be specified.

User Management Tool

- Restrict Access To Device
- Add New User
- Delete User
- User Properties

Document Server File Permissions

The authorities for using the files stored in Document Server are as follows: The authority designations in the list indicate users with the following authorities.

- Read-only This is a user assigned "Read-only" authority.
- Edit This is a user assigned "Edit" authority.
- Edit / Delete This is a user assigned "Edit / Delete" authority.
- Full Control This is a user granted full control.
- Owner

This is a user who can store files in the machine and authorize other users to view, edit, or delete those files.

• File Administrator This is the file administrator.

O=Granted authority to operate.

- =Not granted authority to operate.

User	Viewing Details about Stored Files	Viewing Thumb- nails	Print/Tr ansmis- sion	Chang- ing In- formati on about Stored Files	Deleting Files	Specify- ing File Pass- word	Specify- ing Per- mission s for Us- ers/Gro ups	Unlock- ing Files
Read- only	0	0	0	-	-	-	-	-
Edit	0	0	0	0	-	-	-	-
Edit / Delete	О	О	0	О	О	-	-	-
Full Control	0	0	0	0	0	-	0	-
Owner	O*1	O*1	O*1	O*1	O*1	0	0	-
File Ad- minis- trator	0	0	-	-	о	0	0	о

^{*1} This setting can be specified by the owner.

The Privilege for User Account Settings in the Address Book

The authorities for using the address book are as follows:

The authority designations in the list indicate users with the following authorities.

- Read-only This is a user assigned "Read-only" authority.
- Edit This is a user assigned "Edit" authority.
- Edit / Delete This is a user assigned "Edit / Delete" authority.
- Full Control This is a user granted full control.
- Registered User This is a user whose personal information is registered in the address book. The registered user is the user who knows the login user name and password.
- User Administrator This is the user administrator.

O=You can view and change the setting.

- ▲ =You can view the setting.
- =You cannot view or specify the setting.

Settings	User	er			Registered	Full	
	Read-only	Edit	Edit / De- lete	ministra- tor	User	Control	
Registration No.	A	О	О	О	О	О	
Key Display	A	О	О	О	О	О	
Name	A	О	0	0	О	О	
Select Title		О	О	О	О	О	

Settings		User			User Ad-	Registered	Full
			Edit	Edit / De- lete	ministra- tor	User	Control
Auth. Info	User Code	-	-	-	О	-	-
	Login User Name	-	-	-	0	О	-
	Login Password	-	-	-	O*1	O*1	-
	SMTP Authenti- cation	-	-	-	O*1	O*1	-
	Folder Authenti- cation	•	0	0	0	0	-
	LDAP Authenti- cation	-	-	-	O*1	O*1	-
	Available Functions	-	-	-	0	•	-
Protection	Use Name as	•	•	•	О	0	•
	Protection Code	-	-	-	O*1	O*1	-
	Protection Object	•	•	•	О	О	•
	Protect Dest.: Per- missions for Us- ers/Groups	-	-	-	0	0	о
	Protect File(s): Per- missions for Us- ers/Groups	-	-	-	0	0	0
FaxDest.	Transmis- sion For- mat	•	0	0	0	0	•
	Facsimile Number	•	0	0	0	0	0
	Interna- tional TX Mode	•	0	0	0	0	о
	Fax Header	A	0	О	О	О	О
	Label In- sertion	•	0	0	О	О	0

Settings		User			User Ad-	Registered	Full
			Edit	Edit / De- lete	ministra- tor	User	Control
E-mail Address	E-mail Address	•	0	0	0	0	О
Folder Destina-	SMB/FTP /NCP	•	0	0	0	0	О
tion	SMB:Path	A	0	0	0	О	О
	FTP: Port No.	•	0	0	0	0	О
	FTP: Server Name	•	О	0	О	0	О
	FTP: Path		О	О	О	О	О
	NCP: Path		О	0	О	0	О
	NCP: Connec- tion type	•	0	0	0	0	О

^{*1} You can only enter the password.

User Settings

If you have specified administrator authentication, the available functions and settings depend on the menu protect setting.

The following settings can be specified by someone who is not an administrator.

O=You can view and change the setting.

- \blacktriangle =You can view the setting.
- =You cannot view or specify the setting.

🖉 Note

Settings that are not in the list can only be viewed, regardless of the menu protect level setting.

Copier / Document Server Features

Tab Names	Settings	Menu P	rotect	
		Off	Level 1	Level 2
General Features	Auto Image Density Priority	0	О	
	Oriental Type Priority	0	О	
	Original Photo Type Priority	0	О	
	Original Type Display	О	О	
	Paper Display	О	О	
	Original Orientation in Duplex Mode	О	О	
	Copy Orientation in Duplex Mode	О	О	
	Max. Copy Quantity	О	О	
	Auto Tray Switching	О	О	
	Tone: Original Remains	О	О	
	Job End Call	О	О	
	Customize Function: Copier	О	О	
	Customize Function: Document Server Stor- age	О	О	•
Reproduction	Shortcut R/E	О	О	
Ratio	R/E Ratio	0	О	
	R/E Ratio Priority	О	О	
	Ratio for Create Margin	О	О	

The default for [Menu Protect] is [Level 2].

8

Tab Names	Settings	Menu P	rotect	
		Off	Level 1	Level 2
Edit	Front Margin: Left/Right	0	0	
	Back Margin: Left/Right	О	0	
	Front Margin: Top/Bottom	0	0	
	Back Margin: Top/Bottom	0	0	•
	1 Sided \rightarrow 2 Sided Auto Margin: T to T	0	0	•
	1 Sided \rightarrow 2 Sided Auto Margin: T to B	0	0	
	Erase Border Width	О	О	
	Erase Original Shadow in Combine	О	О	
	Erase Centre Width	О	О	
	Front Cover Copy in Combine	О	0	
	Copy Order in Combine	О	О	
	Copy on Designating Page in Combine	О	О	
	Image Repeat Separation Line	О	О	
	Double Copies Separation Line	О	О	
	Separation Line in Combine	О	О	

Tab Na	mes	Settings	Menu F	rotect	
			Off	Level 1	Level 2
Stamp	Back-	Size	О	О	
	ground Num-	Density	0	О	
	bering	Stamp Colour	0	О	
	Preset	Stamp Language	0	О	
	Stamp	Stamp Priority: COPY *1	0	0	
		Stamp Priority: URGENT *1	0	О	
		Stamp Priority: PRIORITY *1	О	О	A
		Stamp Priority: For Your Info. *1	О	О	A
		Stamp Priority: PRELIMINARY *1	0	0	
		Stamp Priority: For Internal Use Only *1	0	О	•
		Stamp Priority: CONFIDENTIAL *1	0	О	
		Stamp Priority: DRAFT *1	0	О	A
		Stamp Colour: COPY *1	0	О	
		Stamp Colour: URGENT *1	0	О	
		Stamp Colour: PRIORITY *1	0	О	•
		Stamp Colour: For Your Info. *1	0	О	
		Stamp Colour: PRELIMINARY *1	0	О	
		Stamp Colour: For Internal Use Only *1	0	О	
		Stamp Colour: CONFIDENTIAL *1	0	О	A
		Stamp Colour: DRAFT *1	0	0	
	User	Program / Delete Stamp	0	О	
	Stamp	Stamp Format: 1	0	О	
		Stamp Format: 2	0	0	
		Stamp Format: 3	О	О	
		Stamp Format: 4	0	О	A
		Stamp Colour: 1	О	0	A
		Stamp Colour: 2	0	О	A
		Stamp Colour: 3	0	0	A
		Stamp Colour: 4	0	О	

Tab Nai	mes	Settings	Menu P	rotect	
			Off	Level 1	Level 2
Stamp	Date	Format	О	0	
	Stamp	Font	О	0	
		Size	О	0	
		Superimpose	О	0	
		Stamp Colour	О	О	
		Stamp Setting	О	О	A
	Page	Stamp Format	О	О	
	Num- bering	Font	О	О	
	0	Size	О	О	
		Duplex Back Page Stamping Position	О	О	
		Page Numbering in Combine	О	О	
		Stamp on Designating Slip Sheet	О	О	
		Stamp Position: P1, P2 *1	О	О	
		Stamp Position: 1/5, 2/5 *1	0	0	•
		Stamp Position: -1-, -2 *1	О	О	A
		Stamp Position: P.1,P.2 *1	0	0	A
		Stamp Position: 1, 2 *1	0	0	A
		Stamp Position: 1-1, 1-2 *1	0	0	A
		Superimpose	О	О	
		Stamp Colour	О	О	
		Page Numbering Initial Letter	О	О	
Input /	Output	Switch to Batch	О	О	
		SADF Auto Reset	О	О	
		Rotate Sort: Auto Paper Continue	О	О	
		Memory Full Auto Scan Restart	О	О	
		Letterhead Setting	0	0	A
Adjust (Image	Adjust Colour Image	Background Density of ADS (Full Colour / Two-colour)	0	О	•
		Colour Sensitivity	О	0	•
		A.C.S Sensitivity	О	0	•
		A.C.S Priority	0	0	

^{*1} You can adjust the print position but not specify it.

Printer Functions

The default for [Menu Protect] is [Level 2].

* Normal Printer Screen

Functions	Menu P	Menu Protect	
	Off Level 1 Leve		Level 2
Print Jobs	0	0	0

Printer Features

Tab Names	Settings	Menu I	Protect	
		Off	Level 1	Level 2
Maintenance	Delete All Temporary Print Jobs	0	•	•
	Delete All Stored Print Jobs	0	•	•
	4Colour Graphic Mode	0	•	•
System	Print Error Report	0		•
	Auto Continue	0	•	•
	Memory Overflow	0		
	Job Separation	0		
	Auto Delete Temporary Print Jobs	0		
	Auto Delete Stored Print Jobs	0		•
	Initial Print Job List	0	•	•
	Memory Usage	0	•	•
	Duplex	0	•	•
	Copies	0		
	Blank Page Print	0		
	Reserved Job Waiting Time	0	•	•
	Printer Language	0	•	•
	Sub Paper Size	0		
	Page Size	0	0	
	Letterhead Setting	0		
	Bypass Tray Setting Priority	0		•
	Edge to Edge Print	0		
	Default Printer Language	0		
	Tray Switching	0		•
Host Interface	I/O Buffer	0		•
	I/O Timeout	0	A	

Tab Names	Settings	Menu F	rotect	
		Off	Level 1	Level 2
PCL Menu	Orientation	О	•	•
	Form Lines	О	•	•
	Font Source	0	•	•
	Font Number	О	•	•
	Point Size	0	•	•
	Font Pitch	0	•	•
	Symbol Set	О	•	•
	Courier Font	О	•	•
	Extend A4 Width	О	•	•
	Append CR to LF	О	•	•
	Resolution	0		•
PS Menu *1	Data Format	0		•
	Resolution	О		
	Colour Setting	О	•	•
	Colour Profile	О	•	•
PDF Menu *1	Change PDF Password	О	•	•
	PDF Group Password	0		•
	Resolution	О	•	•
	Colour Setting	0	•	•
	Colour Profile	О	•	•

^{*1} The PostScript 3 unit option must be installed.

Scanner Features

Tab Names	Settings		Menu Protect			
		Off	Level 1	Level 2		
General Settings	Switch Title	0	0			
	Update Delivery Server Destination List	0	0			
	Search Destination	0	0			
	TWAIN Standby Time	0	0	•		
	Destination List Display Priority 1	0	0			
	Destination List Display Priority 2	0	0			
	Print & Delete Scanner Journal	О	0			
	Print Scanner Journal	О	0			
	Delete Scanner Journal	О	О			
Scan Settings	A.C.S Sensitivity Level	О	О			
	Wait Time for Next Orig.: Exposure Glass	О	О			
	Background Density ADS (Full Colour)	О	О			
Send Settings	Compression (Black & White)	0	О			
	Compression (Gray Scale/Full Colour)	О	О			
	High Compression PDF Level	0	О			
	Max. E-mail Size	О	О			
	Divide & Send E-mail	0	0	•		
	E-mail Information Language	О	0	A		
	No. of Digits for Single Page Files	0	0	•		
	Stored File E-mail Method	0	0			

The default for [Menu Protect] is [Level 2].

Facsimile Features

The default for [Menu Protect] is [Off].

Tab	Names Settings	Menu Protect		
		Off	Level 1	Level 2
General Settings	Quick Operation Key 1-3	0	0	
	Switch Title of Quick Dial Table	0	0	
	Switch Title	О	0	•
	Search Destination	0	0	
	Communication Page Count	0	0	
	Adjust Sound Volume	0	0	
	Box Setting	0	•	
	Box Setting: Print List	0	•	
	On Hook Mode Release Time	0	0	
Scan Settings	Program/Change/Delete Scan Size	0	0	
Send Settings	Max E-mail Size	0	•	
	Program/Change/Delete Standard Message	0	•	
	Backup File TX Setting	0	•	
Reception Settings	Switch Reception Mode	0	•	
	Program Special Sender	0	•	
	Program Special Sender: Print List	0	•	
	Forwarding	0	•	
	Reception File Setting	0	•	
	Stored Reception File User Setting	0	•	
	SMTP RX File Delivery Setting	0	•	
	2 Sided Print	0	•	
	Checkered Mark	0	•	
	Centre Mark	0	•	
	Print Reception Time	О	•	•
	Reception File Print Quantity	0	•	•
	Paper Tray	0	•	•
	Specify Tray for Lines	О	•	•
	Folder Transfer Result Report	0	•	•
	Memory Lock Reception	0	•	•

Tab	Names Settings	Menu I	Menu Protect		
		Off	Level 1	Level 2	
Initial Settings	Parameter Setting	0	•	•	
	Parameter Setting:Print List	0	0	-	
	Program Closed Network Code	0	•	-	
	Program Memory Lock ID	0	•	-	
	Internet Fax Settings	0	•	•	
	Program Fax Information	0		•	
	Enable H.323	0			
	Enable SIP	0			
	H.323 Setting	0	•	•	
	SIP Setting	0	•	•	
	Program/Change/Delete Gateway	0			

System Settings

The settings available to the user depend on whether or not administrator authentication has been specified.

If administrator authentication has been specified, the settings available to the user depend on whether or not "Available Settings" has been specified.

Tab Names	Settings	Admin- istrator authen- tication has not been speci- fied.	Administ thenticati been spec "Availa- ble Set- tings" has	on has
		fied.	been speci- fied.	been speci- fied.
General Features	Program / Change / Delete User Text	0	0	
	Panel Key Sound	0	0	A
	Warm-up Beeper	0	0	A
	Copy Count Display	0	0	A
	Function Priority	0	0	•
	Print Priority	0	0	
	Function Reset Timer	0	0	
	Output: Copier	0	0	A
	Output: Document Server	0	0	A
	Output: Facsimile	0	0	A
	Output: Printer	0	0	
	System Status / Job List Display Time	0	0	
	Key Repeat	0	0	A
Tray Paper Settings	Paper Tray Priority: Copier	0	0	A
	Paper Tray Priority: Facsimile	0	0	A
	Paper Tray Priority: Printer	0	0	A
	Tray Paper Size: Tray 1-4	О	О	A
	Printer Bypass Paper Size	О	О	A
	Paper Type: Bypass Tray	0	О	A
	Paper Type: Tray 1-4	0	О	A
	Cover Sheet Tray	0	0	A
	Slip Sheet Tray	0	О	A

Tab Names	Settings	Admin- istrator authen- tication has not been speci- fied.	Administ thenticati been spec "Availa- ble Set- tings" has been speci- fied.	ion has
Timer Settings	Auto Off Timer	0		iicu. ▲
0	Energy Saver Timer	0	0	
	Panel Off Timer	0	О	•
	System Auto Reset Timer	0	О	
	Copier/ Document Server Auto Reset Timer	0	О	A
	Facsimile Auto Reset Timer	0	О	•
	Printer Auto Reset Timer	0	О	
	Scanner Auto Reset Timer	0	О	A
	Set Date	0	О	A
	Set Time	0	О	A
	Auto Logout Timer	0	0	A

Tab Names		Settings	Admin- istrator authen-	Administrator au- thentication has been specified.	
			tication has not been speci- fied.	"Availa- ble Set- tings" has been speci- fied.	"Availa- ble Set- tings" has not been speci- fied.
Inter-	Network	Machine IPv4 Address *1	О	О	
face Settings		IPv4 Gateway Address	0	О	
Ū		Machine IPv6 Address *1	0	О	
		IPv6 Gateway Address	0	О	
		IPv6 Stateless Address Autoconfiguration	0	0	
		DNS Configuration *1	0	О	
		DDNS Configuration	0	О	
		Domain Name *1	0	О	
		WINS Configuration *1	0	0	
		Effective Protocol	0	0	
		NCP Delivery Protocol	0	О	
		NW Frame Type	0	О	
		SMB Computer Name	0	О	
		SMB Work Group	0	О	
		Ethernet Speed	0	0	
		Ping Command	0	0	
		Permit SNMP v3 Communication	0	0	
		Permit SSL / TLS Communication	0	0	A
		Host Name	0	0	A
		Machine Name	0	0	
	Parallel Inter- face ^{*8}	Parallel Timing	0	О	
		Parallel Communication Speed	0	0	•
		Selection Signal Status	0	0	•
		Input Prime	0	О	
		Bidirectional Communication	0	О	
		Signal Control	0	О	

Tab Names		Settings	Admin- istrator authen-	Administrator au- thentication has been specified.	
			tication has not been speci- fied.	"Availa- ble Set- tings" has been speci- fied.	"Availa- ble Set- tings" has not been speci- fied.
Inter- face	IEEE	IP Address *1	О	О	•
Settings	1394 *5	DDNS Configuration	0	0	A
_		Host Name	0	0	A
		Domain Name ^{*1}	О	О	A
		WINS Configuration *1	О	О	•
		IP over 1394	О	О	
		SCSI print (SBP-2)	О	О	
		Bidirectional SCSI print	О	О	A
	IEEE 802.11b *6	Communication Mode	О	О	A
		Transmission Speed	О	О	A
		SSID Setting	0	О	•
		Channel	0	О	•
	WEP (Encryp- tion) Set- ting	WEP (Encryption) Key *2	О	О	A
		Transmission Speed	О	О	•
		Restore Defaults	О	О	•
	Print List		0	0	•

Tab Names	Settings	Admin- istrator authen- tication has not been speci- fied.	Administ thenticati been spec- "Availa- ble Set- tings" has been speci- fied.	ion has
File Transfer	Delivery Option *3	0	О	•
	Fax RX File Transmission	0	0	
	SMTP Server	0	0	
	SMTP Authentication *4	0	0	
	POP before SMTP	О	О	
	Reception Protocol	0	0	
	POP3 / IMAP4 Settings	0	0	
	Administrator's E-mail Address	0	0	
	E-mail Communication Port	О	0	
	E-mail Reception Interval	О	0	
	Max. Reception E-mail Size	0	0	
	E-mail Storage in Server	0	0	
	Default User Name / Password (Send) *4	0	0	•
	Program / Change / Delete E-mail Message	О	•	
	Auto Specify Sender Name	0	О	
	Fax E-mail Account	0	О	
	Scanner Resend Interval Time	О	О	
	Number of Scanner Resends	0	О	

Tab Names	Settings	Admin- istrator authen- tication	Administ thenticati been spec	ion has
		has not been speci- fied.	"Availa- ble Set- tings" has been speci- fied.	"Availa- ble Set- tings" has not been speci- fied.
Administrator	Address Book Management	•		A
Tools	Address Book: Program / Change / Delete Group	•	•	•
	Address Book: Change Order	0	0	A
	Print Address Book: Destination List	•	•	
	Address Book: Edit Title	0	0	A
	Address Book: Switch Title	0	0	A
	Back Up / Restore Address Book	0	0	A
	Display / Print Counter	0	0	A
	Display / Clear / Print Counter per User	0	0	A
	User Authentication Management	0	0	•
	Administrator Authentication Management	0	0	•
	Key Counter Management	0	0	•
	External Charge Unit Management	0	0	A
	Enhanced External Charge Unit Management	0	0	A
	Extended Security	0	0	A
	Auto Delete File in Document Server	0	0	A
	Delete All Files in Document Server	0	0	A
	Capture Priority *7	0	0	A
	Capture: Delete All Unsent Files *7	О	О	A
	Program / Change / Delete LDAP Server *4	0	0	•
	LDAP Search	О	О	
	AOF (Always On)	0	О	A
	Firmware Version	0	О	A
	Auto Erase Memory Setting *9	0	О	A
	Erase All Memory *9	О	О	A

- ^{*1} If you select **[Auto-Obtain (DHCP)]**, you can only view the setting.
- ^{*2} You can only view the encryption setting.
- *3 You can only view Main Delivery Server IP Address and Sub Delivery Server IP Address.
- ^{*4} You can only specify the password.
- ^{*5} The IEEE1394 interface board option must be installed.
- *6 The IEEE802.11b interface unit option must be installed.
- ^{*7} File Format Converter option must be installed.
- ^{*8} The IEEE 1284 interface board option must be installed.
- ^{*9} The data overwrite security unit option must be installed.

Web Image Monitor Setting

Device Settings

The settings available to the user depend on whether or not administrator authentication has been specified.

If administrator authentication has been specified, the settings available to the user depend on whether or not "Available Settings" has been specified.

Category	Settings	Admin- istrator authen- tica- tion has not been speci- fied.	Adminis thenticat been spe "Avail- able Set- tings" has been speci- fied.	
System	Device Name	О	О	A
	Comment	О	О	A
	Location	О	О	A
	Spool Printing	О	О	
	Protect Printer Display Panel	О	О	
	Output Tray	О	О	
	Paper Tray Priority	О	О	•
	Cover Sheet Tray	О	О	•
	Slip Sheet Tray	О	О	A

Category	Settings	Admin- istrator authen-	Adminis thenticat been spe	
		tica- tion has not been speci- fied.	"Avail- able Set- tings" has been speci- fied.	"Avail- able Set- tings" has not been speci- fied.
Paper	Paper Size	0	0	•
	Paper Type	О	О	A
	Custom Paper Size	О	О	•
	Apply Auto Paper Select	О	О	A
	Copying Method in Duplex	0	0	•
	Large Capacity Tray - Paper Type	О	О	•
	Large Capacity Tray - Apply Auto Paper Select	0	0	•
	Large Capacity Tray - Copying Method in Duplex	0	0	•
	Bypass Tray - Paper Size	0	0	•
	Bypass Tray - Custom Paper Size	О	О	A
	Bypass Tray - Paper Type	О	О	
Date/Time	Set Date	О	О	•
	Set Time	О	О	•
	SNTP Server Address	О	О	•
	SNTP Polling Interval	О	О	
	Time Zone	О	О	•
Timer	Auto Off Timer	О	О	
	Energy Saver Timer	О	О	•
	Panel Off Timer	О	О	
	System Auto Reset Timer	0	0	•
	Copier/ Document Server Auto Reset Timer	О	О	•
	Facsimile Auto Reset Timer	О	О	•
	Scanner Auto Reset Timer	О	О	•
	Printer Auto Reset Timer	О	О	•
	Auto Logout Timer	О	О	•
Logs	Collect Job Logs	О	О	•
	Collect Access Logs	О	О	•

Category	Settings	Admin- istrator authen-	Adminis thenticat been spe	
		tica- tion has not been speci- fied.	"Avail- able Set- tings" has been speci- fied.	"Avail- able Set- tings" has not been speci- fied.
E-mail	Administrator E-mail Address	0	0	
	Reception Protocol	О	О	
	E-mail Reception Interval	0	0	
	Max. Reception E-mail Size	0	0	•
	E-mail Storage in Server	0	0	•
	SMTP Server Name	0	0	•
	SMTP Port No.	О	О	
	SMTP Authentication	О	О	
	SMTP Auth. E-mail Address	0	0	•
	SMTP Auth. User Name	0	0	-
	SMTP Auth. Password *1	0	О	-
	SMTP Auth. Encryption	0	0	
	POP before SMTP	0	О	
	POP E-mail Address	0	О	
	POP User Name	0	О	-
	POP Password *1	О	0	-
	Timeout setting after POP Auth.	0	0	
	POP3/IMAP4 Server Name	0	0	•
	POP3/IMAP4 Encryption	0	0	•
	POP3 Reception Port No.	0	0	
	IMAP4 Reception Port No.	0	0	•
	SMTP Reception Port No.	О	О	
	Fax E-mail Address	О	О	
	Receive FAX E-mail	О	О	-
	Fax E-mail User Name	0	0	-

Category	Settings	Admin- istrator authen- tica- tion has not been speci- fied.	Adminis thenticat been spee "Avail- able Set- tings" has been speci- fied.	
E-mail	Fax E-mail Password *1	0	О	-
	E-mail Notification E-mail Address	О	О	
	Receive E-mail Notification	О	О	-
	E-mail Notification User Name	О	О	-
	E-mail Notification Password	О	0	-
Auto E-mail	Notification Message	О	О	
Notification	Address List	О	О	
	Call Service	О	О	
	Out of Toner	О	О	
	Toner Almost Empty	О	О	
	Used Toner Bottle is Full	О	О	
	Used Toner Bottle is Almost Full	О	О	
	Add Staple	О	О	
	Paper Misfeed	О	О	
	Cover Open	0	0	
	Out of Paper	О	О	
	Almost Out of Paper	О	О	
	Hole Punch Receptacle is Full	О	О	
	Paper Tray Error	О	О	
	Output Tray Full	О	О	•
	Unit Connection Error	О	О	A
	Duplex Unit Error	О	О	A
	Document Server Memory Full	О	О	A
	Detailed Settings of Each Item	О	0	

Category	Settings	Admin- istrator authen-	Adminis thenticat been spe	
		tica- tion has not been speci- fied.	"Avail- able Set- tings" has been speci- fied.	"Avail- able Set- tings" has not been speci- fied.
On-demand	Notification Subject	0	0	
E-mail Notifica- tion	Notification Message	0	0	
	Restriction to System Config. Info.	0	0	
	Restriction to Network Config. Info.	0	0	
	Restriction to Printer Config. Info.	0	0	
	Restriction to Supply Info.	0	0	
	Restriction to Device Status Info.	0	0	
	Receivable E-mail Address/Domain Name	0	О	
	E-mail Language	0	О	
File Transfer	SMB User Name	0	О	-
	SMB Password *1	О	О	-
	FTP User Name	0	О	-
	FTP Password *1	О	О	-
	NCP User Name	0	О	-
	NCP Password *1	О	О	-

Category	Settings	Admin- istrator authen- tica- tion has not been speci- fied.	Adminis thenticat been spe "Avail- able Set- tings" has been speci- fied.	
User Authenti-	User Authentication Management	0	0	•
cation Manage- ment	User Code Authentication - Printer Job Au- thentication	0	0	•
	User Code - Available Function	0	0	•
	Basic Authentication - Printer Job Authentication	О	О	
	Windows Authentication - Printer Job Au- thentication	0	0	•
	Windows Authentication - Domain Name	0	0	A
	Windows Authentication - Group Settings for Windows Authentication	0	0	•
	LDAP Authentication - Printer Job Authentication	0	0	•
	LDAP Authentication - LDAP Authentication	О	О	
	LDAP Authentication - Login Name Attribute	О	О	
	LDAP Authentication - Unique Attribute	О	О	•
	Integration Server Authentication - Printer Job Authentication	0	О	•
	Integration Server Authentication - Integra- tion Server Name	0	0	•
	Integration Server Authentication - Authen- tication Type	0	О	•
	Integration Server Authentication - Obtain URL	О	О	•
	Integration Server Authentication - Domain Name	О	О	A
	Integration Server Authentication - Group Settings for Integration Server Authentication	0	О	•

^{*1} You can only specify the password.

Printer

The default for [Menu Protect] is [Level 2].

Category	Settings	Menu I	Protect	
		Off	Level 1	Level 2
System	Print Error Report	0		•
	Auto Continue	0		
	Memory Overflow	0		
	Memory Usage	0	•	
	Duplex	0	•	
	Copies	0	•	
	Blank Page Print	0	•	
	Reserved Job Waiting Time	0	•	
	Toner Saving	0	О	
	Sub Paper Size	0	•	•
	Page Size	0	О	
	Letterhead Setting	0		•
	Bypass Tray Setting Priority	0		
	Edge to Edge Print	0	0	•
	Tray Switching	0	0	
Host Interface	I/O Buffer	0		
	I/O Timeout	0		•
PCL Settings	Orientation	0		
	Form Lines	0		
	Font Source	0	•	•
	Font Number	0	•	•
	Point Size	0		
	Font Pitch	0		•
	Symbol Set	0	•	•
	Courier Font	О	•	•
	Extend A4 Width	0	•	
	Append CR to LF	0	•	•
	Resolution	0	•	

Category	Settings	Menu P	Menu Protect		
		Off	Level 1	Level 2	
PS Settings *1	Duplex	О			
	Blank Page Print	О		A	
	Data Format	О	A		
	Resolution	О	A		
PDF Settings *1	Resolution	О	-	-	
	PDF Temporary Password	О	-	-	
	PDF Fixed Password	0	-	-	
	PDF Group Password	0	-	-	

^{*1} The PostScript 3 unit option must be installed.

Fax

Functions that can be used and specified via Web Image Monitor depend on which administrators are set to **[On]** in **[Menu Protect]**, **[Facsimile Features]**.

Category	Settings	Menu	Protect	
		Off	Level 1	Level 2
Environmental	Closed Network Code	О	-	-
Setting	Internet Fax	О	-	-
	Fax Information	0	-	-
	Program Memory Lock ID	О	-	-
	Fax Information	О	-	-
	Select Dial/Push Phone	О	-	-
Send/Reception	Maximum E-mail Size	О	-	-
Settings	Switch Reception Mode	О	-	-
	Reception Mode Auto Switch Time	0	-	-
	SMTP RX File Delivery Settings	О	-	-
	Duplex Print	О	О	-
	Checkered Mark	О	О	-
	Center Mark	О	О	-
	Print Reception Time	О	О	-
	Reception File Print Quantity	О	О	-
	Paper Tray	О	О	-
	Memory Lock Reception	О	-	-

Category	Settings	Menu I	Protect	
		Off	Level 1	Level 2
IP-Fax Settings	Enable H.323	0	-	О
	Enable IP-Fax Gatekeeper	0	-	О
	Gatekeeper Address(Main)	0	-	О
	Gatekeeper Address(Sub)	0	-	О
	Own Fax No.	О	-	О
	Enable SIP	0	-	О
	Enable Server	О	-	О
	Server IP Address	О	-	О
	Proxy Server Addr. (Main)	О	-	О
	Proxy Server Address (Sub)	0	-	О
	Redirect Svr. Addr. (Main)	0	-	О
	Redirect Svr. Addr. (Sub)	0	-	О
	Registrar Address (Main)	О	-	О
	Registrar Address (Sub)	О	-	О
	Digest Authentication	0	-	О
IP-Fax Gateway	Prefix 1-5	0	-	О
Settings	Select Protocol 1-5	0	-	О
	Gateway Address 1-5	О	-	О
Parameter Settings	Just Size Printing	-	О	О
	Convert to PDF When Transferring to Folder	-	О	О
	Journal	-	О	О
	Immediate Transmission Result Report	-	О	О
	Communication Result Report	-	0	0
	Memory Storage Report	-	0	0
	SEP Code RX Result Report	-	0	0
	SEP Code RX Reserve Report	-	0	0
	Confidential File Report	-	0	О
	LAN-Fax Result Report	-	0	0
	Inclusion of Part of Image	-	0	0
	Error E-mail Notification	-	0	О
	Display Network Errors	-	О	О
	Journal Notification by E-mail	-	О	О
	Response to RX Notice Request	-	О	О
	Select Destination Type Priority	-	0	0

Interface

The settings available to the user depend on whether or not administrator authentication has been specified.

If administrator authentication has been specified, the settings available to the user depend on whether or not "Available Settings" has been specified.

Category	Settings	Admin- istrator authen- tication has not been speci- fied.	Adminis thenticat been spe "Availa- ble Set- tings" has been speci- fied.	
	Change Interface	0	0	A
IEEE 802.11b *1	Communication Mode	0	0	A
	Channel	О	О	•
	WEP Setting	0	0	A
	WEP Key Status	0	0	A
	Authentication Type	О	О	•
	Confirm	0	О	
IEEE 1394 *2	IPv4 over 1394	О	О	
	SCSI print (SBP-2)	О	О	
	Bidirectional SCSI print	О	О	A
Bluetooth *3	Operation Mode	0	О	A
Parallel Interface	Parallel Timing	0	0	•
*4	Parallel Communication Speed	0	0	A
	Selection Signal Status	0	0	A
	Input Prime	0	0	A
	Bidirectional Communication	0	О	A
USB	USB	О	О	

^{*1} The IEEE802.11b interface unit option must be installed.

^{*2} The IEEE1394 interface board option must be installed.

^{*3} The Bluetooth interface unit option must be installed.

^{*4} The IEEE 1284 interface board option must be installed.

Network

The settings available to the user depend on whether or not administrator authentication has been specified.

If administrator authentication has been specified, the settings available to the user depend on whether or not "Available Settings" has been specified.

Category	istrator authen- tication	Admin- istrator authen-	Administrator au- thentication has been specified.	
		has not been speci-	"Availa- ble Set- tings" has been speci- fied.	"Availa- ble Set- tings" has not been speci- fied.
Protocol	LPR	О	О	
	RSH/RCP	О	О	
	DIPRINT	О	О	
	FTP	О	О	
	IPP	О	О	
	Bonjour	О	О	
	NetWare	О	О	
	AppleTalk	О	О	A
	SMB	О	О	A
	SNMP	О	О	

Category	Settings	Admin- istrator authen- tication has not been speci- fied.	Adminis thenticat been spe "Availa- ble Set- tings" has been speci- fied.	
IPv4	Host Name	0	0	
	DHCP	0	0	•
	Domain Name	0	0	•
	IPv4 Address	0	0	
	Subnet Mask	0	0	
	DDNS	0	0	•
	WINS	0	0	•
	Primary WINS Server	0	0	•
	Secondary WINS Server	0	0	
	Scope ID	0	0	
	Default Gateway Address	0	0	
	DNS Server	0	0	
	LPR	0	0	
	RSH/RCP	0	0	
	DIPRINT	0	0	
	FTP	0	0	
	IPP	0	0	
	IPP Timeout	0	0	

Category	Settings	Admin- istrator authen- tication has not been speci- fied.	Adminis thenticat been spee "Availa- ble Set- tings" has been speci- fied.	
IPv6	IPv6 Address	О	0	
	Host Name	О	0	
	Domain Name	0	0	•
	Stateless Address	0	0	•
	Stateless Address Autoconfiguration	О	0	A
	Default Gateway Address	0	0	A
	DNS Server	О	0	A
	LPR	0	0	A
	RSH/RCP	О	О	A
	DIPRINT	0	0	A
	FTP	0	0	A
	sftp	0	0	•
	IPP	0	0	•
	IPP Timeout	0	0	•
NetWare	NetWare	0	0	A
	Print Server Name	0	0	•
	Logon Mode	0	0	•
	File Server Name	0	0	•
	NDS Tree	0	0	A
	NDS Context Name	0	0	A
	Operation Mode	0	0	A
	Remote Printer No.	0	0	•
	Job Timeout	0	0	A
	Frame Type	0	0	A
	Print Server Protocol	О	0	A
	NCP Delivery Protocol	0	0	

Category	Settings	Admin- istrator authen- tication has not been speci- fied.	Adminis thenticat been spe "Availa- ble Set- tings" has been speci- fied.	
AppleTalk	AppleTalk	0	0	A
	Printer Name	0	0	•
	Zone Name	О	О	•
SMB	SMB	О	0	A
	Workgroup Name	0	0	
	Computer Name	0	0	A
	Comment	0	0	•
	Notify Print Completion	0	0	•
Bonjour	Bonjour	0	0	•
	Computer Name	0	0	•
	Location	0	0	•
	DIPRINT	0	0	•
	LPR	0	0	A
	IPP	0	0	•

Functions That Require Options

The following functions require certain options and additional functions.

- Hard Disk overwrite erases function DataOverwriteSecurity unit
- Data security for copying function Copy Data Security Unit
- PDF Direct Print function PostScript unit

INDEX

A

Access Control, 130 Access Permission, 87 Address Book, 190 Address Management Tool, 190 Adjust Colour Image, 176 Administrator, 4 Administrator Authentication, 4 Administrator Tools, 175, 176, 183, 187, 189 AppleTalk, 185 Authenticate Current Job, 156 Authentication and Access Limits, 3 Auto Colour Calibration, 176 Auto Erase Memory Setting, 110 Available Functions, 124

В

Bonjour, 186

С

Colour Registration, 176 Configuration flow (certificate issued by a certificate authority), 141 Configuration flow (self-signed certificate), 141

D

Device Information, 182 Device Settings, 180, 184, 188, 190, 210 Document Server, 188 Driver Encryption Key, 135, 153

Ε

Edit, 176, 191, 192 Edit / Delete, 191, 192 Enable H.323, 184 Enable SIP, 184 Encrypt Address Book, 153 Encrypted Communication Mode, 147 Encryption Technology, 3 Enhance File Protection, 155 Environment Settings, 181 Erase All Memory, 110

F

Fax, 181, 185, 217 File Administrator, 12, 119, 191 File Creator (Owner), 4 File Transfer, 174, 183 Full Control, 191, 192

G

General Features, 174, 176 General Settings, 179 Gen. Settings, 177 Group Passwords for PDF Files, 135

Н

H.323 Settings, 184 Host Interface, 178

L

Initial Settings, 177, 179, 184 Input / Output, 176 Interface, 219 Interface Settings, 181, 183, 185 IPv4, 185 IPv6, 185

J

Job, 188

L

List / Test Print, 178 Locked Print, 80 Login, 4 Logout, 4

Μ

Machine Administrator, 12, 119 Maintenance, 178, 187 Max. E-mail Size, 184 Menu Protect, 119, 120 Methods of Erasing the Data, 110

Ν

NetWare, 185 Network, 181, 185, 220 Network Administrator, 12, 119 NIB Setup Tool, 186

0

Operational Requirements for Windows Authentication, 42 Owner, 191

Ρ

Parameter Settings, 181 Password for IPP Authentication, 135 Password for Stored Files, 87 Password Policy, 157 PCL Menu, 178 PDF Menu, 179 Print & Delete Scanner Journal, 159 Printer, 181, 188, 216 Printer Job Authentication, 64 Printing the Journal, 158 Program/Change/Delete Gateway, 184 PS Menu, 179

R

RC Gate, 181 Read-only, 191, 192 Reception Settings, 177, 187 Registered User, 4, 192 @Remote Service, 157 Reproduction Ratio, 176 Reset Device, 180 Reset Printer Job, 180 Restrict Adding of User Destinations, 154 Restrict Display of User Information, 154 Restrict Use of Destinations, 153 Restrict Use of Simple Encryption, 155

S

Scan Settings, 177, 179 Security, 186 Send/Reception Settings, 181 Send Settings, 177, 179, 184 Service Mode Lock, 160 Settings by SNMP v1 and v2, 155 SIP Settings, 184 SMB, 185 SNMP, 185 SNMPv3. 186 SSDP, 186 SSL (Secure Sockets Layer), 140 Stamp, 176 Stored RX File User Setting, 158 Supervisor, 12 System, 178, 187 System Settings, 183

Т

Timer Settings, 174 Top Page, 180, 188 Transfer to Fax Receiver, 156 Tray Paper Settings, 174 Type of Administrator, 119

U

User, 4 User Administrator, 11, 119, 192 User Authentication, 4 User Management Tool, 182

W

Webpage, 181, 186, 188, 190







