
Quick Reference Fax Guide

>Please put this guide above your machine

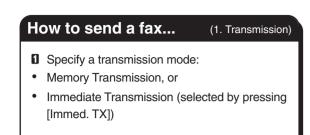

- 2 Place the original.
- Exposure glass (face down)
- Auto Document Feeder (face up)



- B Make the scan settings you require.
- Specify a destination.
- D Press the [Start] key.

If you choose Memory Transmission, you can send to more destinations at once. To do this, after

- [Add] and specify destinations - the [Start] key
- To send an Internet Fax, press [Internet Fax] to





- **B** Set the user name, file name, and password
- Specify a destination, and then press the

- press [OK].
- [Start] key.

- 1. Confidential File indicator
- 2. Communicating indicator
- 3. Receive File indicator

1 2 3

- 4. [User Tools/Counter] key 5. Display panel
- 6. [Clear Modes] key

 - Press to select the program mode.
- Press to clear the current settings.
- 7. [Program] key
- 8. Main power indicator
- 9. Operation switch
- 10. [Simplified Display] key
- 11. [Start] key
- 12. [#] key (enter key)

Registers entered numbers or settings.

13. [Clear/Stop] key 14. Number kevs

15. [Facsimile] key

Press to switch to the facsimile mode.

16. Alert indicator

17. Function keys

8 9

(2. Other

While the original is being transmitted:

Press the [Clear Modes] key.

Press the [Clear/Stop] kev.

Press the [Clear/Stop] key.

Memory + Immediate

2 Select the file you want to cancel.

Press [Stop Transmission], and then press [OK].

How to cancel a transmission... (1. Transmission)

Before the original is scanned = before pressing the [Start] key:

While the original is being scanned = after pressing the [Start] key:

4 Press [Exit].

Before the transmission is started:

1 Press [Change TX / Info].

Press [Check / Stop Transmission File].

B Select the file you want to cancel.

Press [Stop Transmission], and then press [OK].

Press [Exit] twice.

How to print the Journal...

(4. Changing/Confirming

The Journal is printed automatically after every 50 communications. You can also request a Journal at any time, by following below procedure.

1 Press [Change TX / Info].




- 2 Select [Print Journal].
- **B** Select the printing method:
- [Print per File No.]
- [Print per User]
- 4 Press the [Start] key.
- Press [Exit] twice.



Advanced Features Fax

Please see the <Facsimile Reference> Operating Instructions:

- SUB/SEP Codes (1. Transmission) Privacy can be protected when faxing with a SUB/SEP Code, since only people who know the SUB/SEP Code can receive or print the fax document.
- Printed reports (4. Changing/Confirming Communication Information) Inform you if a fax has been saved, sent, or failed to be transmitted.
- LAN-Fax features Sending a fax from a computer (6. Fax via Computer)

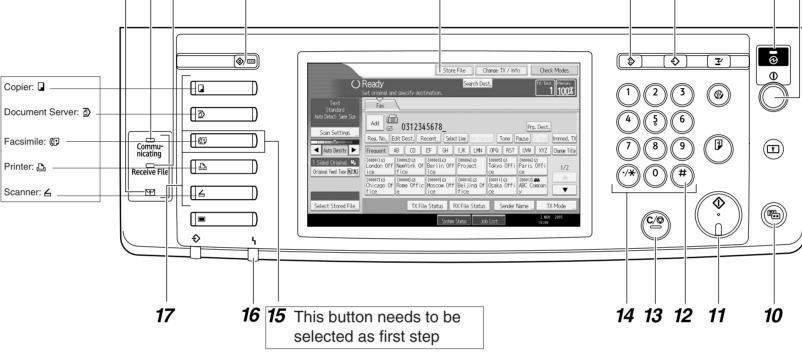

- 1 Press [Store File].
- 2 Select [Send & Store].
- as necessary, and then press [OK].
- [Start] key.

To send a fax from Document Server:

- Press [Select Stored File].
- 2 Select the documents to be sent, and then
- B Specify a destination, and then press the

How to program a Destination key...

Registering Addresses and Users for Facsimile/

(General Settings Guide

- Press the [User Tools/Counter] key.
- Press [System Settings]. Press [Administrator Tools].
- Press [Address Book Management].
- 5 Check that [Program / Change] is selected.
- d Press [New Program].
- Press [Change] and set user's information, press [OK].
- Press [Fax Dest.].
- Press [Change] and enter the fax number using the number keys, press [OK] under Fax Destination.
- Press [OK].
- Press [Exit].
- Press the [User Tools/Counter] key.
- 12 You will get a message 'Destination list / machine settings are updated...'. Press [Exit].

How to send at a specific time (Send Later) Using this function, you can instruct the machine to send the fax at a later time via Memory Transmission. Advantage: you can take advantage of off-peak telephone charges, without being at the machine. 1 Place the original, and then select the scan settings you require. Press [TX Mode]. B Press [Send Later]. 4 Enter the time (24 hour format) using the number keys, and then press [OK]. Press [OK]. **6** Specify a destination, and then press the [Start] key.

Printed in the Netherlands GB GB B7718650 Copyright © 2006