



# Operating Instructions

## Driver Installation Guide



# TABLE OF CONTENTS

---

## 1. Introduction

---

Start Installer.....	3
Software and Utilities Included on the CD-ROM.....	5
Printer Drivers.....	5
TWAIN Driver.....	7
LAN-Fax Driver.....	8
Font Manager.....	9
For Mac OS X Users.....	10

## 2. Installing the Printer Driver

---

Confirming the Connection Method.....	11
Network Connection.....	11
Local Connection.....	12
Quick Install.....	13
Installing the Printer Driver for a Network Connection.....	14
Installing the Printer Driver for the Selected Port.....	14
Using as a Network Printer.....	22
Installing the Printer Driver for a Local Connection.....	27
USB Connection.....	27
Parallel Connection.....	31
Bluetooth Connection.....	31
Configuring Option Settings for the Printer.....	35
Conditions for Bidirectional Communication.....	35
If Bidirectional Communication is Disabled.....	36
Installing Font Manager.....	37
Using Adobe PageMaker Version 6.0, 6.5, or 7.0.....	38

## 3. Installing the Scanner Driver

---

Installing the TWAIN Driver.....	39
Installing a TWAIN-Compliant Application on the Same Client Computer.....	39

## 4. Installing the Facsimile Driver

---

Installing the LAN-Fax Driver.....	41
Specifying the Same Port as the Printer Driver.....	41
Specifying the Port When Installing the LAN-FAX Driver.....	42
Enabling the Function to Prevent Transmission to the Wrong Destination.....	44

---

Editing the Configuration File.....	44
Installing the LAN-FAX driver in "Add Printer".....	45
Setting LAN-Fax Driver Properties.....	47
Setting Print Properties.....	47
Configuring Option Settings for the Facsimile.....	48

## 5. Troubleshooting

---

Messages Displayed When Installing the Printer Driver.....	49
If USB Connection Fails.....	51

## 6. Installing the Printer Driver Under Mac OS X

---

Installing the PPD Files.....	53
Registering the Printer.....	54
USB Connection.....	54
Network Connection.....	55
Configuring Option Settings for the Printer Under Mac OS X.....	57

## 7. Appendix

---

Updating or Deleting the Driver.....	59
Updating the Driver.....	59
Deleting the Driver.....	60
Trademarks.....	63
<b>INDEX</b> .....	65

# 1. Introduction

This chapter explains the software included on the supplied CD-ROM.

## Start Installer

To connect this machine to a client computer and use its printer, scanner, and fax functions, the software included on the provided CD-ROM must be installed on the client computer.

The installer starts automatically when you insert the provided CD-ROM into the CD-ROM drive of a client computer running under Windows or Windows Server. You can then install the various software included on the CD-ROM.

The contents (display item) of the installer are as follows:

### Quick Install

Install the PCL 6 printer driver, and configure the Standard TCP/IP port to establish a connection with a network printer. Quick Install is also available when the machine is connected with a client computer via parallel connection.

For details, see p.13 "Quick Install".

### PCL Printer Drivers

Installs the PCL 6 and/or PCL 5c printer drivers.

For details about installing the driver, see p.14 "Installing the Printer Driver for a Network Connection" or p.27 "Installing the Printer Driver for a Local Connection".

### PostScript 3 Printer Driver

Install the PostScript 3 printer driver.

For details about installing the driver, see p.14 "Installing the Printer Driver for a Network Connection" or p.27 "Installing the Printer Driver for a Local Connection".

### LAN-Fax Driver

This software enables you to fax documents directly from your computer. Address Book and LAN-Fax Cover Sheet Editor will also be installed.

For details about installing the driver, see p.41 "Installing the LAN-Fax Driver".

### TWAIN Driver

This software enables you to utilize image data from other TWAIN compliant applications.

For details about installing the driver, see p.39 "Installing the TWAIN Driver".

### Font Manager

This software enables you to use screen fonts.

For details about installing the software, see p.37 "Installing Font Manager".

### Select Language

Change the interface language.

### Browse This CD-ROM

Browse the contents of this CD-ROM.

### Exit

Quit Installer.

#### ↓ Note

- Manage Printers permission is required to install the driver. Log on as an Administrators group member.
- Auto Run might not work automatically with certain OS settings. If this is the case, double-click "SETUP.EXE", located on the CD-ROM root directory, or click [Run SETUP.EXE] in the [AutoPlay] dialog box.
- If you want to cancel Auto Run, hold down the left [Shift] key while inserting the CD-ROM. Keep the [Shift] key held down until the computer stops reading the CD-ROM.

# Software and Utilities Included on the CD-ROM

This section explains the software and utilities CD-ROM provided with this machine.

## ↓ Note

- For the latest information on the corresponding operating system, see "Readme.txt" file in the DRIVERS folder.
- For the latest information on Windows terminal service, Citrix Presentation Server, and Citrix Xen App, see the manufacturer's Web site.

## Printer Drivers

Printing requires installation of a printer driver for your operating system. The following drivers are included on the CD-ROM.

Operating System	Printer Language		
	PCL 5c	PCL 6	PostScript 3
Windows XP <sup>*1</sup> <sup>*6</sup>	OK	OK	OK
Windows Vista <sup>*2</sup> <sup>*6</sup>	OK	OK	OK
Windows 7 <sup>*3</sup> <sup>*6</sup>	OK	OK	OK
Windows Server 2003 <sup>*4</sup> <sup>*6</sup>	OK	OK	OK
Windows Server 2008 <sup>*5</sup> <sup>*6</sup>	OK	OK	OK
Mac OS X <sup>*7</sup>	—	—	OK

\*1 Microsoft Windows XP Professional Edition/Microsoft Windows XP Home Edition/Microsoft Windows XP Media Center Edition/Microsoft Windows XP Tablet PC Edition

\*2 Microsoft Windows Vista Ultimate/Microsoft Windows Vista Enterprise/Microsoft Windows Vista Business/Microsoft Windows Vista Home Premium/Microsoft Windows Vista Home Basic

\*3 Microsoft Windows 7 Home Premium/Microsoft Windows 7 Professional/Microsoft Windows 7 Ultimate/Microsoft Windows 7 Enterprise

\*4 Microsoft Windows Server 2003 Standard Edition/Microsoft Windows Server 2003 Enterprise Edition/Microsoft Windows Server 2003 R2 Standard Edition/Microsoft Windows Server 2003 R2 Enterprise Edition

\*5 Microsoft Windows Server 2008 Standard/Microsoft Windows Server 2008 Enterprise/Microsoft Windows Server 2008 R2 Standard/Microsoft Windows Server 2008 R2 Enterprise

\*6 Supports both versions (32/64 bit)

\*7 Mac OS X 10.2 or later (native mode). Any versions higher than Mac OS X 10.6 are not supported.

## PCL printer drivers

Two kinds of PCL printer driver (PCL 5c and PCL 6) are included. These drivers allow your computer to communicate with this machine via a printer language.

## Adobe® PostScript® printer driver and PPD files

Adobe PostScript printer driver allows the computer to communicate with the printer using a printer language. PPD files allow the printer driver to enable specific printer functions.

Depending on the machine you are using, PostScript 3 unit must be installed.

## PPD files

PPD files allow the printer driver to enable specific printer functions.

### Note

- Some applications may require installation of the PCL 5c printer driver. In this case, you can install PCL 5c without having to install PCL 6.
- For details about installing the driver, see p.14 "Installing the Printer Driver for a Network Connection" or p.27 "Installing the Printer Driver for a Local Connection".

## Supported languages

The languages supported in each printer driver are as follow:

Supported languages	Printer Language			
	PCL 5c *1	PCL 6 *2	PostScript 3 *2	PPD (Mac OS X)
English	○	○	○	○
German	○	○	○	○
French	○	○	○	○
Italian	○	○	○	○
Spanish	○	○	○	○
Dutch	○	○	○	○
Swedish	○	○	○	○
Norwegian	○	○	○	○
Danish	○	○	○	○
Finnish	○	○	△	△



Supported languages	Printer Language			
	PCL 5c <sup>*1</sup>	PCL 6 <sup>*2</sup>	PostScript 3 <sup>*2</sup>	PPD (Mac OS X)
Hungarian	○	○	△	△
Czech	○	○	△	△
Polish	○	○	△	△
Portuguese	○	○	△	△
Russian	○	○	△	△
Catalan	○	○	△	△
Turkish	○	○	△	△
Brazilian Portuguese	△	○	△	△
Greek	△	○	△	△

○: Supported

△: Supported, but the printer language is displayed in English

\*1 The PCL 5c printer driver does not support Brazilian Portuguese and Greek. Use the English version of the driver.

\*2 The PCL 6 and PostScript 3 printer drivers use the same interface language as the one specified by your operating system. However, the PostScript 3 printer will be displayed in English if your operating system uses one of the following languages: Finnish, Hungarian, Czech, Polish, Portuguese, Russian, Catalan, Turkish, Brazilian Portuguese, Greek.

## TWAIN Driver

This driver is required to scan an original using a scanner. To use the machine as a network TWAIN scanner, this driver must be installed.

### File path

The driver is included in the following folder on the CD-ROM:

`\X86\DRIVERS\TWAIN`

### System requirements

- Hardware  
PC/AT-compatible machines that support the following operating system properly
- Operating system <sup>\*1</sup>

Windows XP/Vista/7

Windows Server 2003/2003 R2/2008/2008 R2

\* 1 Operates in 32-bit compatibility mode on 64-bit operating systems

- Display resolution  
800 × 600 pixels, 256 colors or higher

### Supported languages

The TWAIN driver uses the same interface language as the one specified by your operating system.

#### ↓ Note

- For details about installing the driver, see p.39 "Installing the TWAIN Driver".

---

## LAN-Fax Driver

---

This driver is required to use LAN-Fax functions.

### File path

The driver is included in the following folder on the CD-ROM:

- 32-bit driver  
  \X86\DRIVERS\LAN-FAX\XP\_VISTA
- 64-bit driver  
  \X64\DRIVERS\LAN-FAX\X64

### System requirements

- Hardware  
  PC/AT-compatible machines that support the following operating system properly
- Operating systems  
  Windows XP/Vista/7  
  Windows Server 2003/2003 R2/2008/2008 R2
- Display  
  VGA 640 × 480 pixels or more

### Supported languages

The interface language is supported in the language specified when installing driver.

#### ↓ Note

- For details about installing the driver, see p.41 "Installing the LAN-Fax Driver".

---

## Font Manager

---

For installing new screen fonts, or organizing and managing fonts already in the system. For details about Font Manager, see the manual on the CD-ROM.

### File path

The software is included in the following folder on the CD-ROM:

`\FONTMAN\DISK1`

#### Note

- For details about installing the software, see p.37 "Installing Font Manager".

## For Mac OS X Users

1

If you are using Mac OS X, the following limitations apply to each function:

- When using the scanner function, the TWAIN driver cannot be used.
- When using the fax function, the LAN-Fax driver cannot be used.
- When using the printer function, use the printer driver for Mac OS X.  
For details, see p.53 "Installing the Printer Driver Under Mac OS X".

# 2. Installing the Printer Driver

This chapter explains how to install and configure the printer drivers for use on the Windows operating system.

## Confirming the Connection Method

This machine supports network and local connection.

Before installing the printer driver, check how the machine is connected. Follow the driver installation procedure that is appropriate to the connection method.

### Network Connection

This machine can be used as a Windows printing port or network printer.

#### Using the Windows printing port

Network connections can be established through Ethernet and Wireless LAN.

Available ports are determined based on the combination of Windows operating system version and connection method used.

#### Windows XP, Windows Server 2003/2003 R2

Connection Method	Available Ports
<ul style="list-style-type: none"><li>Ethernet</li><li>Wireless LAN</li></ul>	<ul style="list-style-type: none"><li>Standard TCP/IP port</li><li>IPP port</li><li>LPR port</li><li>SmartDeviceMonitor for Client port</li></ul>

#### Windows Vista/7, Windows Server 2008/2008 R2

Connection Method	Available Ports
<ul style="list-style-type: none"><li>Ethernet</li><li>Wireless LAN</li></ul>	<ul style="list-style-type: none"><li>Standard TCP/IP port</li><li>IPP port</li><li>LPR port</li><li>WSD port</li><li>SmartDeviceMonitor for Client port</li></ul>

**Note**

- For details about how to install the printer driver for each type of port, see p.14 "Installing the Printer Driver for the Selected Port".

**Using as a network printer**

2

This machine can be used as a remote printer using the Windows or NetWare print server function.

Client OS	Using Server
<ul style="list-style-type: none"> <li>• Windows XP</li> <li>• Windows Server 2003/2003 R2</li> </ul>	<ul style="list-style-type: none"> <li>• Windows XP print server</li> <li>• Windows Vista print server</li> <li>• Windows 7 print server</li> <li>• Windows Server 2003/2003 R2 print server</li> <li>• Windows Server 2008/2008 R2 print server</li> <li>• NetWare print server (using IPv4 only)</li> <li>• NetWare file server (using IPv4 only)</li> </ul>
<ul style="list-style-type: none"> <li>• Windows Vista</li> <li>• Windows 7</li> <li>• Windows Server 2008/2008 R2</li> </ul>	<ul style="list-style-type: none"> <li>• Windows 2000 print server</li> <li>• Windows XP print server</li> <li>• Windows Vista print server</li> <li>• Windows 7 print server</li> <li>• Windows Server 2003/2003 R2 print server</li> <li>• Windows Server 2008/2008 R2 print server</li> </ul>

**Note**

- For details about how to install the printer driver to print server, see p.22 "Using as a Network Printer".

**Local Connection**

Local connections can be established via USB, parallel and Bluetooth connections.

**Note**

- For details about how to install the printer driver for each method of connections, see p.27 "Installing the Printer Driver for a Local Connection".

# Quick Install

You can install the printer drivers easily from the CD-ROM provided with this machine.

Using Quick Install, the PCL 6 printer driver is installed under network environment, and the Standard TCP/IP port will be set.

When the machine is connected to a client computer via parallel connection, the printer port is set to [LPT1].

## ★ Important

- **Manage Printers permission is required to install the drivers. Log on as an Administrators group member.**

**1. Quit all applications. (Do not close this manual.)**

**2. Insert the provided CD-ROM into the computer's CD-ROM drive.**

If the [AutoPlay] dialog box appears, click [Run AUTORUN.EXE].

**3. Select an interface language, and then click [OK].**

For details about the languages supported in the printer drivers, see p.6 "Supported languages".

**4. Click [Quick Install].**

**5. The software license agreement appears in the [License Agreement] dialog box. After reading the agreement, click [I accept the agreement.], and then click [Next].**

**6. Select the machine model you want to use in the [Select Printer] dialog box.**

For network connection via TCP/IP, select the machine whose IP address is displayed in [Connect To].

For parallel connection, select the machine whose printer port is displayed in [Connect To].

**7. Click [Install].**

**8. Configure the user code, default printer, and shared printer as necessary.**

**9. Click [Continue].**

The installation starts.

If the [User Account Control] dialog box appears, and then click [Yes] or [Continue].

**10. Click [Finish].**

When you are prompted to restart your computer, restart it by following the instructions that appear.

**11. Click [Exit] in the first window of the installer, and then take out the CD-ROM.**

## ↓ Note

- Quick Install is not available unless bidirectional communication between the machine and computer is enabled via parallel connection. For details about meeting the bidirectional communication conditions, see p.35 "Configuring Option Settings for the Printer".

# Installing the Printer Driver for a Network Connection

This section describes the installation procedure of the printer drivers for network connection.

## ★ Important

- **Manage Printers permission is required to install the driver. Log on as an Administrators group member.**

## ↓ Note

- If the [User Account Control] dialog box appears during the driver installation procedure, click [Yes] or [Continue].
- If the [Windows Security] dialog box appears during the driver installation procedure, click [Install this driver software anyway].
- A message appears if there is a newer version of the printer driver already installed. If there is, you cannot install the printer driver using Auto Run. If you still want to install the printer driver, use [Add Printer]. See p.49 "Messages Displayed When Installing the Printer Driver".

## Installing the Printer Driver for the Selected Port

Describes the driver installation procedure for each printer port. See the installation procedure for the printer port you are using.

## ★ Important

- **To use the SmartDeviceMonitor for Client port, you must first download SmartDeviceMonitor for Client from the manufacturer's Web site and install it on your computer. Contact your local dealer for information on downloading SmartDeviceMonitor for Client. For details about SmartDeviceMonitor for Client, see "Software that You Can Download", Getting Started.**

Port Type	Printer Driver Type	Reference
Standard TCP/IP port	PCL PS3	p. 15 "Using the Standard TCP/IP port"
IPP port	PCL PS3	p. 15 "Using the IPP port"
LPR port	PCL PS3	p. 17 "Using the LPR port"
WSD port	PCL PS3	p. 18 "Using the WSD port"
SmartDeviceMonitor for Client port	PCL PS3	p.20 "Using the SmartDeviceMonitor for Client port"



## Using the Standard TCP/IP port

PCL  PS3

1. **Quit all applications. (Do not close this manual.)**
2. **Insert the provided CD-ROM into the computer's CD-ROM drive.**  
If the [AutoPlay] dialog box appears, click [Run AUTORUN.EXE].
3. **Select an interface language, and then click [OK].**  
For details about the languages supported in the printer drivers, see p.6 "Supported languages".
4. **Click [PCL Printer Drivers] or [PostScript 3 Printer Driver].**
5. **The software license agreement appears in the [License Agreement] dialog box. After reading the agreement, click [I accept the agreement.], and then click [Next].**  
If installing the PostScript 3 printer driver, proceed to step 7.
6. **Select a printer driver you want to use, and then click [Next].**
7. **Select the check box of the manufacturer and machine model you want to use.**
8. **Double-click the machine name to display the printer settings.**
9. **Click [Port :], and then click [Add] in the [Change settings for 'Port'] box.**
10. **Click [Standard TCP/IP Port], and then click [OK].**  
If [Standard TCP/IP Port] does not appear, see Windows Help, and then configure the settings.
11. **Click [Next].**
12. **Enter the machine name or IP address, and then click [Next].**  
When the device type selection appears, select "RICOH Network Printer C model".
13. **Click [Finish].**
14. **Check that the port of the selected printer is displayed in [Port :].**
15. **Configure the user code, default printer, and shared printer as necessary.**
16. **Click [Continue].**  
The installation starts.
17. **Click [Finish].**  
Select one of the options to restart the computer either now or later, and then click [Finish].

## Using the IPP port

PCL  PS3

### Important

- To print via IPP-SSL, use the SmartDeviceMonitor for Client port.

- Installation of the certificate is especially necessary for users who want to print via IPP-SSL from Windows Vista/7 or Windows Server 2008/2008 R2. For details, consult your administrator.
- If a certificate authority issues a certificate that must be authenticated by an intermediate certificate authority, and the certificate is installed on this machine, an intermediate certificate must be installed on the client computer. Otherwise, validation by the certificate authority will not be performed correctly.
- If validation cannot be performed properly, a warning message informing you that installation is not possible might appear when you try to add a printer using IPP-SSL under Windows Vista/7 or Windows Server 2008/2008 R2. To enable authentication from the client computer, install the intermediate certificate on the client computer, and then reestablish connection.
- Intermediate certificates cannot be installed on this machine.

1. Quit all applications. (Do not close this manual.)
2. On the [Start] menu, click [Devices and Printers].
3. Click [Add a printer].
4. Click [Add a network, wireless or Bluetooth printer].
5. Click [The printer that I want isn't listed].
6. In the [Select a shared printer by name] box, enter "http://(machine's IP address or host name)/printer (or ipp)" as the printer's address, and then click [Next].
7. Click [Have Disk...].
8. Insert the provided CD-ROM into the computer's CD-ROM drive.

If the [AutoPlay] dialog box appears, click [Close].

9. Click [Browse...], and then specify a location for the INF file.

If the CD-ROM drive is D, the source files of the printer driver are stored in the following locations:

- PCL 5c
  - 32-bit driver D:\X86\DRIVERS\PCL5C\XP\_VISTA\Language\DISK1
  - 64-bit driver D:\X64\DRIVERS\PCL5C\X64\Language\DISK1
- PCL 6
  - 32-bit driver D:\X86\DRIVERS\PCL6\XP\_VISTA\MUI\DISK1
  - 64-bit driver D:\X64\DRIVERS\PCL6\X64\MUI\DISK1
- PostScript 3
  - 32-bit driver D:\X86\DRIVERS\PS\XP\_VISTA\MUI\DISK1
  - 64-bit driver D:\X64\DRIVERS\PS\X64\MUI\DISK1

For details about the languages supported in the printer drivers, see p.6 "Supported languages".

10. Click [Open].
11. Click [OK] to close the [Install From Disk] window.

12. **Select the manufacturer and model name of the machine you want to use, and then click [Next].**

The installation starts.

13. **Follow the instructions that appear. Modify settings such as printer name and default printer configuration, as necessary. You can also print a test page.**

14. **Click [Finish].**

If a check box for setting the machine as a default printer appears, configure as necessary.

## Using the LPR port

PCL  PS3

1. **Quit all applications. (Do not close this manual.)**

2. **Insert the provided CD-ROM into the computer's CD-ROM drive.**

If the [AutoPlay] dialog box appears, click [Run AUTORUN.EXE].

3. **Select an interface language, and then click [OK].**

For details about the languages supported in the printer drivers, see p.6 "Supported languages".

4. **Click [PCL Printer Drivers] or [PostScript 3 Printer Driver].**

5. **The software license agreement appears in the [License Agreement] dialog box. After reading the agreement, click [I accept the agreement.], and then click [Next].**

If installing the PostScript 3 printer driver, proceed to step 7.

6. **Select a printer driver you want to use, and then click [Next].**

7. **Select the check box of the machine model you want to use.**

8. **Double-click the machine name to display the printer settings.**

9. **Click [Port :], and then click [Add] in the [Change settings for 'Port'] box.**

10. **Click [LPR Port], and then click [OK].**

If [LPR Port] does not appear, see Windows Help and install it.

11. **Enter the machine name or IP address in the [Name or address of server providing lpd:] box.**

12. **Enter "lp" in the [Name of printer or print queue on that server:] box, and then click [OK].**

13. **Check that the port of the selected printer is displayed in [Port :].**

14. **Configure the user code, default printer, and shared printer as necessary.**

15. **Click [Continue].**

The installation starts.

16. **Click [Finish].**

Select one of the options to restart the computer either now or later, and then click [Finish].

## Using the WSD port

---

PCL PS3

### ★ Important

- The WSD port can be used under Windows Vista/7, or Windows Server 2008/2008 R2.
- You can connect to the printer only if both the printer and computer are on the same network segment, or "Network discovery" is enabled. For details, see Windows Help.

2

### Windows Vista, Windows Server 2008

1. Quit all applications. (Do not close this manual.)
2. On the [Start] menu, click [Network].
3. Right-click the machine's icon, and then click [Install].
4. Click [Locate and install driver software (recommended)].
5. Click [Browse my computer for driver software (advanced)].
6. Insert the provided CD-ROM into the computer's CD-ROM drive.  
If the [AutoPlay] dialog box appears, click [Close].
7. Click [Browse...], and then specify the location of the INF file.

If the CD-ROM drive is D, the source files of the printer driver are stored in the following locations:

- PCL 5c  
32-bit driver D:\X86\DRIVERS\PCL5C\XP\_VISTA\Language\DISK1  
64-bit driver D:\X64\DRIVERS\PCL5C\X64\Language\DISK1
- PCL 6  
32-bit driver D:\X86\DRIVERS\PCL6\XP\_VISTA\MUI\DISK1  
64-bit driver D:\X64\DRIVERS\PCL6\X64\MUI\DISK1
- PostScript 3  
32-bit driver D:\X86\DRIVERS\PS\XP\_VISTA\MUI\DISK1  
64-bit driver D:\X64\DRIVERS\PS\X64\MUI\DISK1

For details about the languages supported in the printer drivers, see p.6 "Supported languages".

8. Click [Next].
9. Click [Close].

If installation is successful, the icon of the printer connected to the WSD port will appear in the window for configuring printers.

### ↓ Note

- The port name that follows "WSD" uses random character strings. It cannot be changed freely.

- To stop the installation, click [Cancel] before the installation is complete. When re-installing the WSD Port, right-click the printer's icon in the [Network] window, and then click [Uninstall].

## Windows 7, Windows Server 2008 R2

1. Quit all applications. (Do not close this manual.)
2. On the [Start] menu, click [Computer].
3. Click [Network].
4. Right-click the machine's icon, and then click [Install].
5. On the [Start] menu, click [Devices and Printers].
6. Click [Add a printer].
7. Click [Add a local printer].
8. Check the [Use an existing port:] check box, and select WSD port.
9. Click [Next].
10. Click [Have Disk...].
11. Insert the provided CD-ROM into the computer's CD-ROM drive.  
If the [AutoPlay] dialog box appears, click [Close].
12. Click [Browse...], and then specify the location of the INF file.  
If the CD-ROM drive is D, the source files of the printer driver are stored in the following locations:
  - PCL 5c  
32-bit driver D:\X86\DRIVERS\PCL5C\XP\_VISTA\Language\DISK1  
64-bit driver D:\X64\DRIVERS\PCL5C\X64\Language\DISK1
  - PCL 6  
32-bit driver D:\X86\DRIVERS\PCL6\XP\_VISTA\MUI\DISK1  
64-bit driver D:\X64\DRIVERS\PCL6\X64\MUI\DISK1
  - PostScript 3  
32-bit driver D:\X86\DRIVERS\PS\XP\_VISTA\MUI\DISK1  
64-bit driver D:\X64\DRIVERS\PS\X64\MUI\DISK1For details about the languages supported in the printer drivers, see p.6 "Supported languages".
13. Click [Open].
14. Click [OK] to close the [Install From Disk] window.
15. Select the manufacturer and model name of the machine you want to use, and then click [Next].
16. Follow the instructions that appear. Modify settings such as printer name, default printer, and printer sharing configuration, as necessary. You can also print a test page.

### 17. Click [Finish].

If installation is successful, the icon of the printer connected to the WSD port will appear in the window for configuring printers.

#### Note

- To stop installation of the selected driver, click [Cancel] before the installation is complete. When re-installing the WSD Port, right-click the machine's icon in the [Network] window, and then click [Uninstall].

## Using the SmartDeviceMonitor for Client port

---

PCL  PS3

To use this function, you must first download SmartDeviceMonitor for Client from the manufacturer's Web site and install it on your computer. Contact your local dealer for information on downloading SmartDeviceMonitor for Client.

1. **Quit all applications. (Do not close this manual.)**
2. **Insert the provided CD-ROM into the computer's CD-ROM drive.**  
If the [AutoPlay] dialog box appears, click [Run AUTORUN.EXE].
3. **Select an interface language, and then click [OK].**  
For details about the languages supported in the printer drivers, see p.6 "Supported languages".
4. **Click [PCL Printer Drivers] or [PostScript 3 Printer Driver].**
5. **The software license agreement appears in the [License Agreement] dialog box. After reading the agreement, click [I accept the agreement.], and then click [Next].**  
If installing the PostScript 3 printer driver, proceed to step 7.
6. **Select a printer driver you want to use, and then click [Next].**
7. **Select the check box of the machine model you want to use.**
8. **Double-click the machine name to display the printer settings.**
9. **Click [Port :], and then click [Add] in the [Change settings for 'Port'] box.**
10. **Click [SmartDeviceMonitor], and then click [OK].**
11. **To configure port settings using TCP/IP, click [TCP/IP], and then click [Search].**  
To configure port settings using IPP, proceed to step 13.
12. **Select the machine you want to use, and then click [OK].**  
Only machines that respond to a broadcast from the computer appear. To use a machine not listed here, click [Specify Address], and then enter the IP address or host name of the machine.  
Proceed to step 18.
13. **To configure port settings using IPP, click [IPP].**

- 14. In the [Printer URL] box, enter "http://machine's IP address/printer" as the machine's address.**

If the server authentication is issued, enter "https://machine's IP address/printer" to enable SSL (a protocol for encrypted communication). Example IP address: 192.168.15.16

http://192.168.15.16/printer

https://192.168.15.16/printer

You can enter "http://machine's IP address/ipp" as the machine's address.

- 15. Enter a name for identifying the machine in the [IPP Port Name] box. Use a name different from the one of any existing ports.**

If a name is not specified here, the address entered in the [Printer URL] box becomes the IPP port name.

- 16. Click [Detailed Settings] Settings to make necessary settings.**

For details about the settings, see SmartDeviceMonitor for Client Help.

- 17. Click [OK].**

- 18. Check that the port of the selected printer is displayed in [Port:].**

- 19. Configure the user code, default printer, and shared printer as necessary.**

- 20. Click [Continue].**

The installation starts.

- 21. Click [Finish].**

Select one of the options to restart the computer either now or later, and then click [Finish].

## Changing the port settings for SmartDeviceMonitor for Client

Follow the procedure below to change the SmartDeviceMonitor for Client settings, such as TCP/IP protocol.

### Windows XP, Windows Server 2003/2003 R2

- 1. On the [Start] menu, click [Printers and Faxes].**
- 2. Click the icon of the machine you want to use. On the [File] menu, click [Properties].**
- 3. Click the [Ports] tab, and then click [Configure Port].**

The [Port Configuration:] window appears.

### Windows Vista, Windows Server 2008:

- 1. On the [Start] menu, click [Control Panel].**
- 2. Click [Printer].**
- 3. Right-click the icon of the machine you want to use, and then click [Properties].**

**4. Click the [Ports] tab, and then click [Configure Port].**

The [Port Configuration:] window appears.

**Windows 7, Windows Server 2008 R2:**

**1. On the [Start] menu, click [Devices and Printers].**

**2. Right-click the icon of the machine you want to use, and then click [Printer Properties].**

**3. Click the [Ports] tab, and then click [Configure Port].**

The [Port Configuration:] window appears.

**Note**

- User, proxy, and timeout settings can be configured for IPP.
- For details about these settings, see SmartDeviceMonitor for Client Help.

**Using as a Network Printer**

Describes the driver installation procedure for each print server. See the installation procedure for the print server you are using.

**Important**

- When using NetWare, an optional NetWare unit is required.

Server OS	Client OS	Printer Driver Type	Reference
Windows Server	Windows	PCL PS3	p.22 "Using Windows print server"
NetWare	Windows	PCL PS3	p.23 "Using NetWare print server"

**Using Windows print server**

PCL PS3

**1. Quit all applications. (Do not close this manual.)**

**2. Insert the provided CD-ROM into the computer's CD-ROM drive.**

If the [AutoPlay] dialog box appears, click [Run AUTORUN.EXE].

**3. Select an interface language, and then click [OK].**

For details about the languages supported in the printer drivers, see p.6 "Supported languages".

**4. Click [PCL Printer Drivers] or [PostScript 3 Printer Driver].**



5. The software license agreement appears in the [License Agreement] dialog box. After reading the agreement, click [I accept the agreement.], and then click [Next].

If installing the PostScript 3 printer driver, proceed to step 7.

6. Select a printer driver you want to use, and then click [Next].
7. Select the check box of the machine model you want to use.
8. Double-click the machine name to display the machine settings.
9. Click [Port :], and then click [Add] in the [Change settings for 'Port'] box.
10. Click [Network Printer], and then click [OK].
11. Double-click the computer name you want to use as a print server in the [Browse for Printer] window.
12. Select the machine you want to use, and then click [OK].
13. Check that the port of the selected printer is displayed in [Port :].
14. Configure the user code, default printer, and shared printer as necessary.
15. Click [Continue].

The installation starts.

16. Click [Finish].

Select one of the options to restart the computer either now or later, and then click [Finish].

#### ↓ Note

- If you print with a print server connected to the machine using the SmartDeviceMonitor for Client port, Recovery Printing and Parallel Printing cannot be used from the client computer.
- If you print under Windows Vista/7 or Windows Server 2008 print server, notification functions of SmartDeviceMonitor may not be used with the client computer.

## Using NetWare print server

PCL PS3

1. Quit all applications. (Do not close this manual.)
2. Insert the provided CD-ROM into the computer's CD-ROM drive.  
If the [AutoPlay] dialog box appears, click [Run AUTORUN.EXE].
3. Select an interface language, and then click [OK].  
For details about the languages supported in the printer drivers, see p.6 "Supported languages".
4. Click [PCL Printer Drivers] or [PostScript 3 Printer Driver].
5. The software license agreement appears in the [License Agreement] dialog box. After reading the agreement, click [I accept the agreement.], and then click [Next].

If installing the PostScript 3 printer driver, proceed to step 7.

6. Select a printer driver you want to use, and then click [Next].
7. Select the check box of the machine model you want to use.
8. Double-click the machine name to display the printer settings.
9. Click [Port :], and then click [Add] in the [Change settings for 'Port'] box.
10. Click [Network Printer], and then click [OK].
11. Double-click the name of the NetWare file server on the network tree.  
The created queue is displayed.
12. Select the print queue, and then click [OK].
13. Check that the port of the selected printer is displayed in [Port :].
14. Click [Continue].  
The installation starts.
15. Click [Finish] in the [Select Program] dialog box.
16. After the installation is completed, select one of the options to restart the computer either now or later, and then click [Finish].  
Restart the computer to complete installation.
17. After restarting the computer, open the printer window.
  - Windows XP, Windows Server 2003/2003 R2:  
On the [Start] menu, select [Printers and Faxes].
  - Windows Vista, Windows Server 2008:  
On the [Start] menu, select [Control Panel], and then click [Printers] in [Hardware and Sound] category.
  - Windows 7, Windows Server 2008 R2:  
On the [Start] menu, select [Devices and Printers].
18. Open the printer properties dialog box.
  - Windows XP/Vista, Windows Server 2003/2008:  
Right-click the machine's icon, and then click [Properties].
  - Windows 7, Windows Server 2008 R2:  
Right-click the machine's icon, and then click [Printer properties].
19. Click the [NetWare Settings] tab.
20. Clear the [Form Feed] and [Enable Banner] check boxes.  
Do not select these check boxes since they are automatically selected by the printer driver. If you select the check boxes, the printer may not print correctly.
21. Click [OK].

**Note**

- The protocol is set to inactive as default. Enable the protocol on the control panel, using Web Image Monitor, SmartDeviceMonitor or telnet.

## Notes when using NetWare

### Form Feed

Do not use NetWare to configure form feed. Form feed is controlled by the printer driver on Windows. If NetWare form feed is configured, the printer may not print properly.

Follow the procedure below to disable form feed according to the operating system used:

- Clear the [Form feed] check box on the [NetWare Settings] tab in the printer properties dialog box.

### Banner Page

Do not use NetWare to configure banner page.

Follow the procedure below to disable banner page according to the operating system used:

- Clear the [Enable banner] check box on the [NetWare Settings] tab in the printer properties dialog box.

### When using the PostScript 3 Printer Driver

Follow the procedure below to set up the PostScript 3 printer driver.

1. Open the printer window.
  - Windows XP, Windows Server 2003/2003 R2:  
On the [Start] menu, select [Printers and Faxes].
  - Windows Vista, Windows Server 2008:  
On the [Start] menu, select [Control Panel], and then click [Printers] in [Hardware and Sound] category.
  - Windows 7, Windows Server 2008 R2:  
On the [Start] menu, select [Devices and Printers].
2. Open the printer properties dialog box.
  - Windows XP/Vista, Windows Server 2003/2008:  
Right-click the machine's icon, and then click [Properties].
  - Windows 7, Windows Server 2008 R2:  
Right-click the machine's icon, and then click [Printer properties].
3. Click the [Device Settings] tab.
4. Select [No] on the [Send CTRL-D Before Each Job:] and [Send CTRL-D After Each Job:], and then click [Apply].

5. Click [OK].

### **Printing after Resetting the Printer**

Printer to print server connection requires 30 - 40 seconds to resume after the printer is reset. During this period, jobs may be accepted (depending on NetWare specifications) but not printed.

To print after resetting the printer as the remote printer, check on the print server that the remote printer is disconnected, or wait for two minutes before trying to print.

# Installing the Printer Driver for a Local Connection

This section describes the installation procedure of the printer drivers for USB, parallel, or Bluetooth connection.

## ★ Important

- **Manage Printers permission is required to install the driver. Log on as an Administrators group member.**

## ↓ Note

- If the [User Account Control] dialog box appears in driver installation procedure, click [Yes] or [Continue].
- If the [Windows Security] dialog box appears in driver installation procedure, click [Install this driver software anyway].
- A message appears if there is a newer version of the printer driver already installed. If there is, you cannot install the printer driver using Auto Run. If you still want to install the printer driver, use [Add Printer]. See p.49 "Messages Displayed When Installing the Printer Driver".

## USB Connection

This section explains how to install the printer drivers using USB.

Before installing, check that only the operating system is running on the computer and no print jobs are in progress.

If the printer driver has already been installed, and plug and play is enabled, the icon of the printer connected to the "USB" port is added to the [Printers], [Printers and Faxes], or [Devices and Printers] window.

If the printer driver is not installed, follow the plug-and-play instructions of the machine to install it from the CD-ROM provided with this machine.

## ↓ Note

- To disable Auto Run, press the left Shift key when inserting the CD-ROM into the drive and keep it pressed until the computer finishes reading from the CD-ROM.

## Windows XP, Windows Server 2003/2003 R2

1. **Quit all applications. (Do not close this manual.)**
2. **Check that the power of the machine is off.**

**3. Connect the machine and computer using the USB cable.**

Connect the USB cable firmly.

**4. Turn on the power of the machine.**

Found New Hardware Wizard starts, and USB Printing Support is installed automatically.

**5. Select [No, not this time], and then click [Next].**

**6. Click [Install from a list or specific location [Advanced]], and then click [Next].**

**7. Insert the provided CD-ROM into the computer's CD-ROM drive.**

If Auto Run starts, click [Cancel] and then [Exit].

**8. Select the [Search removable media (floppy, CD-ROM...)] check box under [Search for the best driver in these locations.], and then click [Next].**

**9. Select the name of the machine whose driver you want to install.**

Check the location where the source files of the printer driver is stored.

If the CD-ROM drive is D, the source files are stored in the following locations:

- PCL 5c  
32-bit driver D:\X86\DRIVERS\PCL5C\XP\_VISTA\Language\DISK1  
64-bit driver D:\X64\DRIVERS\PCL5C\X64\Language\DISK1
- PCL 6  
32-bit driver D:\X86\DRIVERS\PCL6\XP\_VISTA\MUI\DISK1  
64-bit driver D:\X64\DRIVERS\PCL6\X64\MUI\DISK1
- PostScript 3  
32-bit driver D:\X86\DRIVERS\PS\XP\_VISTA\MUI\DISK1  
64-bit driver D:\X64\DRIVERS\PS\X64\MUI\DISK1

For details about the languages supported in the printer drivers, see p.6 "Supported languages".

**10. Click [Next].**

The installation starts.

**11. Click [Finish].**

If the printer driver has already been installed and plug and play is enabled, the icon of the printer connected to the "USB001" port is added to the [Printers], [Printers and Faxes], or [Devices and Printers] window.

The number after "USB" varies depending on the number of printers connected.

---

## Windows Vista, Windows Server 2008

---

**1. Quit all applications. (Do not close this manual.)**

**2. Check that the power of the machine is off.****3. Connect the machine and computer using a USB cable.**

Connect the USB cable firmly.

**4. Turn on the power of the machine.**

Found New Hardware Wizard starts, and USB Printing Support is installed automatically.

**5. In the [Found New Hardware] window, click [Locate and install driver software (recommended)].****6. Insert the provided CD-ROM into the computer's CD-ROM drive.**

If the [AutoPlay] dialog box appears, click [Close].

**7. Select the name of the machine whose driver you want to install.**

Check the location where the source files of the printer driver is stored.

If the CD-ROM drive is D, the source files are stored in the following locations:

- PCL 5c  
32-bit driver D:\X86\DRIVERS\PCL5C\XP\_VISTA\Language\DISK1  
64-bit driver D:\X64\DRIVERS\PCL5C\X64\Language\DISK1
- PCL 6  
32-bit driver D:\X86\DRIVERS\PCL6\XP\_VISTA\MUI\DISK1  
64-bit driver D:\X64\DRIVERS\PCL6\X64\MUI\DISK1
- PostScript 3  
32-bit driver D:\X86\DRIVERS\PS\XP\_VISTA\MUI\DISK1  
64-bit driver D:\X64\DRIVERS\PS\X64\MUI\DISK1

For details about the languages supported in the printer drivers, see p.6 "Supported languages".

**8. Click [Next].**

The installation starts.

**9. Click [Close].**

If the printer driver has already been installed and plug and play is enabled, the icon of the printer connected to the "USB001" port is added to the [Printers], [Printers and Faxes], or [Devices and Printers] window.

The number after "USB" varies depending on the number of printers connected.

---

**Windows 7, Windows Server 2008 R2**

---

**1. Quit all applications. (Do not close this manual.)****2. Check that the power of the machine is off.**

**3. Connect the machine and computer using a USB cable.**

Connect the USB cable firmly.

**4. Turn on the power of the machine.**

Found New Hardware Wizard starts, and USB Printing Support is installed automatically.

**5. Click [Devices and Printers] from the [Start] menu.**

**6. Double-Click the icon of machine you want to use in the [Unspecified] category.**

**7. Click the [Hardware] tab.**

**8. Click [Properties].**

**9. Click the [General] tab.**

**10. Click [Change settings].**

**11. Click [Driver] tab.**

**12. Click [Update Driver...].**

**13. Click [Browse my computer for driver software].**

**14. Insert the provided CD-ROM into the computer's CD-ROM drive.**

If the [AutoPlay] dialog box appears, click [Close].

**15. Click [Browse], and then select the printer driver location.**

If the CD-ROM drive is D, the source files of the printer driver are stored in the following locations:

- PCL 5c  
32-bit driver D:\X86\DRIVERS\PCL5C\XP\_VISTA\Language\DISK1  
64-bit driver D:\X64\DRIVERS\PCL5C\X64\Language\DISK1
- PCL 6  
32-bit driver D:\X86\DRIVERS\PCL6\XP\_VISTA\MUI\DISK1  
64-bit driver D:\X64\DRIVERS\PCL6\X64\MUI\DISK1
- PostScript 3  
32-bit driver D:\X86\DRIVERS\PS\XP\_VISTA\MUI\DISK1  
64-bit driver D:\X64\DRIVERS\PS\X64\MUI\DISK1

For details about the languages supported in the printer drivers, see p.6 "Supported languages".

**16. Click [Next].**

The installation starts.

**17. Click [Close].**

If the printer driver has already been installed and plug and play is enabled, the icon of the printer connected to the "USB001" port is added to the [Printers], [Printers and Faxes], or [Devices and Printers] window.

The number after "USB" varies depending on the number of printers connected.



---

## Parallel Connection

---

To use a printer connected using a parallel interface, click [LPT1] when installing the printer driver.

1. **Quit all applications. (Do not close this manual.)**
2. **Insert the provided CD-ROM into the computer's CD-ROM drive.**  
If the [AutoPlay] dialog box appears, click [Run AUTORUN.EXE].
3. **Select an interface language, and then click [OK].**  
For details about the languages supported in the printer drivers, see p.6 "Supported languages".
4. **Click [PCL Printer Drivers] or [PostScript 3 Printer Driver].**
5. **The software license agreement appears in the [License Agreement] dialog box. After reading the agreement, click [I accept the agreement.], and then click [Next].**  
If installing the PostScript 3 printer driver, proceed to step 7.
6. **Select a printer driver you want to use, and then click [Next].**
7. **Select the check box of the machine model you want to use.**
8. **Double-click the machine name to display the printer settings.**
9. **Click [Port:].**
10. **Select [LPT1:] in the [Change settings for 'Port'] drop-down list.**
11. **Configure the user code, default printer, and shared printer as necessary.**
12. **Click [Continue].**  
The installation starts.
13. **Click [Finish].**  
Select one of the options to restart the computer either now or later, and then click [Finish].

---

## Bluetooth Connection

---

### Important

- The Bluetooth unit and the optional wireless LAN unit cannot be used simultaneously.

---

## Supported profiles and restrictions

---

### Supported Profiles

- SPP (Serial Port Profile)
- HCRP (Hardcopy Cable Replacement Profile)
- BIP (Basic Imaging Profile)

### Restrictions on SPP, HCRP

- A maximum of two Bluetooth adaptor or Bluetooth-equipped computers can be connected at the same time using the Bluetooth interface: one by SPP, one by HCRP.
- When connecting more than one Bluetooth adaptor or Bluetooth-equipped computer at the same time, the first device that establishes connection is selected. When selecting the connection between the other devices, cancel the first established connection.
- SPP connection does not support bidirectional communications.
- HCRP connection supports bidirectional communications.
- Depending on the machine, additional printer option may be required to use SPP, HCRP. To see if your machine requires additional printer option, see the manual provided with the machine.

### Restrictions on BIP

- PostScript 3 must be installed on the printer to connect via BIP. For information about PostScript 3, see the manual provided with the printer.
- Only one Bluetooth adaptor or Bluetooth-equipped computer can be connected via BIP.
- Only JPEG images can be printed using BIP.
- User codes are disabled for BIP.
- You cannot print if print functions are restricted.
- Some printers do not support BIP.

Instructions in this manual relate to printing via HCRP. To print using SPP or BIP, see the Help supplied with the Bluetooth adapter you want to use, or the Microsoft Web site.

## Adding a Bluetooth printer

---

If your computer is running SP1 or an earlier version of Windows XP, there are additional applications that you must install. For details about these, see the Help supplied with your Bluetooth device.

### Important

- **To connect to a Bluetooth printer, your computer must have a Bluetooth device installed. Make sure a Bluetooth device is installed on your computer.**

### Windows XP, Windows Server 2003/2003 R2

1. Quit all applications. (Do not close this manual.)
2. On the [Start] menu, click [Printers and Faxes].
3. Click [Add a printer].
4. Click [Next].

**5. Click [Bluetooth Printer], and then click [Next].**

The computer begins searching for available Bluetooth printers.

If a new printer is discovered, the [Found New Hardware Wizard] window appears. To ignore a discovered device and continue searching, click [Cancel]. The computer resumes searching for other available Bluetooth printers.

**6. Click [No, I will not connect], and then click [Next].**

**7. Click [Install from a list or specific location (Advanced)], and then click [Next].**

**8. Insert the CD-ROM provided with this machine into your computer's CD-ROM drive, select the [Search removable media (floppy, CD-ROM...)] check box, and then click [Next].**

**9. If the [Hardware Installation] window appears, click [Continue].**

**10. If the installation was successful, click [Finish].**

**11. Select [Test Print], and then click [Next].**

**12. Click [Finish].**

**Note**

- Actual Bluetooth printer operations will vary according to your Bluetooth device and/or Bluetooth-installed computer. For details, see the Help supplied with your Bluetooth device and/or Bluetooth-equipped computer.
- After printing the test page, check it, and then click [Close] to close the window.
- If there is a problem with the test page, click [Troubleshooting] in the test print window.

### Windows Vista, Windows Server 2008

**1. Quit all applications. (Do not close this manual.)**

**2. On the [Start] menu, click [Control Panel].**

**3. In the "Hardware and Sound" area, click [Printers].**

**4. In the top part of the window, click [Add a printer].**

**5. In the [Add Printer] window, select [Add a network, wireless or Bluetooth printer], and then click [Next].**

The computer begins searching for available Bluetooth devices.

**6. From the list of discovered devices, select the machine you want to use, and then click [Next].**

All discovered wireless printers appear in the list of discovered printers, not only Bluetooth printers.

Make sure the machine you select is a Bluetooth printer.

**7. Insert the CD-ROM provided with this machine into your computer's CD-ROM drive, and then click [Browse my computer for driver software (advanced)] on the [Found New Hardware] display.**

8. In the [Found New Hardware] window, select the printer driver you want to use, and then click [Next].

The installation starts.

9. If the [Windows Security] window appears, click [Install this driver software anyway].
10. Click [Close].
11. If you want to change the printer name, enter the new name in the [Printer Name Settings] window.
12. If you want to print a test page, click [Printing Test Page] on the "Test Print" page.

Otherwise, click [Finish].

**Note**

- If you print the test page, after checking it, click [Close] to close the test print window.
- If there is a problem with the test page, click [Troubleshooting Printer Problems] in the test print window.

### Windows 7, Windows Server 2008 R2

1. Quit all applications. (Do not close this manual.)
2. On the [Start] menu, click [Devices and Printers].
3. Click [Add a printer].
4. Click [Add a network, wireless or Bluetooth printer].  
The computer begins searching for available Bluetooth devices.
5. From the list of discovered devices, select the machine you want to use, and then click [Next].
6. If you want to change the printer name, enter the new name in the [Printer Name:], and then click [Next].
7. To share the printer, configure the necessary settings, and then click [Next].
8. If you want to print a test page, click [Print a test page] on the "Test Print" page.

Otherwise, click [Finish].

**Note**

- If you print the test page, after checking it, click [Close] to close the test print window.
- If there is a problem with the test page, click [Get help with printing] in the test print window.

# Configuring Option Settings for the Printer

When bidirectional communication works correctly, your computer obtains information about option, paper size and paper feed direction settings from the machine automatically. Bidirectional communication also allows you to monitor machine status.

When bidirectional communication is disabled, you have to set up option, paper size and paper feed direction settings on your computer manually.

## Conditions for Bidirectional Communication

To support bidirectional communication, the following conditions must be met:

### When connected with parallel cables

- The computer must support bidirectional communication.
- The interface cable must support bidirectional communication.
- The machine must be connected to the computer using the standard parallel cables and parallel connectors.

### When connected with the network

- The Standard TCP/IP port must be used.
- In addition to the above, one of the following conditions must also be met:
  - The TCP/IP protocol or the IPP protocol is used. (When using the IPP protocol, the IPP port name must include the IP address.)

### When connected with USB

- The machine must be connected to the computer's USB port using the USB interface cable.
- The computer must support bidirectional communication.
- [Enable bidirectional support] must be selected, and [Enable printer pooling] must not be selected on the [Ports] tab with the printer driver.

### Note

- The PCL 6 and PostScript 3 printer drivers support bidirectional communication and automatic printer status updates.
- To obtain printer information automatically using the bidirectional communication function of the PCL 6 or PostScript 3 printer driver, you must select the [Automatically Update Printer Information] check box on the [Accessories] tab in the printer driver's properties window.
- The PCL 5c printer driver supports bidirectional communication. You can update the printer status manually.

## If Bidirectional Communication is Disabled

This section describes how to set up option, paper size and paper feed direction settings on your computer manually.

### ★ Important

- **Manage Printers permission is required to change the printer properties. Log on as an Administrators group member.**

#### 1. Open the printer window.

- Windows XP, Windows Server 2003:  
On the [Start] menu, select [Printers and Faxes].
- Windows Vista, Windows Server 2008:  
On the [Start] menu, select [Control Panel], and then click [Printers] in [Hardware and Sound] category.
- Windows 7, Windows Server 2008 R2:  
On the [Start] menu, select [Devices and Printers].

#### 2. Open the printer properties dialog box.

- Windows XP/Vista, Windows Server 2003/2008:  
Right-click the machine's icon, and then click [Properties].
- Windows 7, Windows Server 2008 R2:  
Right-click the machine's icon, and then click [Printer properties].

#### 3. Click the [Accessories] tab.

If options in the [Accessories] tab are disabled, bidirectional connection is enabled. In this case, no change is necessary for option settings.

#### 4. Select options installed from the [Options] area, and then make the necessary settings.

#### 5. Click [Change Input Tray Settings...].

#### 6. In [Input Tray:] select which trays to use, and then, in [Paper Size:] select the size of the paper that you want to load in each tray.

Click [Modify Input Tray/Paper Size] to apply the setting for each tray.

#### 7. Click [OK].

#### 8. Click [OK] to close the printer properties window.

### ↓ Note

- For details about making option settings for the machine using a Mac OS X, see p.57 "Configuring Option Settings for the Printer Under Mac OS X".

# Installing Font Manager

## ★ Important

- Manage Printers permission is required to install Font Manager. Log on as an Administrators group member.
- The operating systems compatible with Font Manager are Windows XP/Vista.

1. Quit all applications. (Do not close this manual.)
2. Insert the provided CD-ROM into the computer's CD-ROM drive.  
If the [AutoPlay] dialog box appears, click [Run AUTORUN.EXE].
3. Select an interface language, and then click [OK].
4. Click [Font Manager].
5. Follow the instructions on the display.

## Using Adobe PageMaker Version 6.0, 6.5, or 7.0

Under Windows XP with Adobe PageMaker®, you need to copy PPD files to the PageMaker folder.

PPD files have the .ppd extension in the folder "X86\DRIVERS\PS\PM6\ (Language)" on the CD-ROM.

The third folder "(Language)" may be substituted by an appropriate language name.

Copy the .ppd file to the PageMaker folder.

- **For PageMaker 6.0 default installation**

The directory is "C:\PM6\RSRC\PPD4".

- **For PageMaker 6.5 default installation**

The directory is "C:\PM65\RSRC\USENGLISH\PPD4".

The "USENGLISH" may vary depending on your language selection.

- **For PageMaker 7.0 default installation**

The directory is "C:\PM7\RSRC\USENGLISH\PPD4".

The "USENGLISH" may vary depending on your language selection.

### ↓ Note

- If the driver is not set correctly after copying the ".ppd" file, printing may not be performed properly.
- When using PageMaker, the optional features that can be selected by the printer driver will not be active. The following procedure describes how to activate the optional printer features.
  1. On the [File] menu, click [Print].

The [Print Document] dialog box appears.
  2. Make the necessary settings in the [Features] box.



# 3. Installing the Scanner Driver

This chapter explains how to install the TWAIN driver on a client computer.

## Installing the TWAIN Driver

To use the network TWAIN scanner, you must install the TWAIN driver on a client computer.

1. **Quit all applications. (Do not close this manual.)**
2. **Insert the provided CD-ROM into the computer's CD-ROM drive.**

If the [AutoPlay] dialog box appears, click [Run AUTORUN.EXE].

3. **Select an interface language, and then click [OK].**

For details about the languages supported in the TWAIN driver, see p.7 "TWAIN Driver".

4. **Click [TWAIN Driver].**

5. **The installer of the TWAIN driver starts. Follow the instructions.**

### ↓ Note

- Before you start the installation, check the system requirements for the TWAIN driver. For details about the system requirements, see p.5 "Software and Utilities Included on the CD-ROM".
- When the installation is complete, a message about restarting the client computer may appear. In this case, restart the client computer.
- After the installation is complete, a folder with the name of the machine in use is added in [Programs] or [All Programs] on the [Start] menu. Help can be displayed from here.
- Notes on using the network TWAIN scanner are provided in "Readme.txt". Be sure to read them before use.

## Installing a TWAIN-Compliant Application on the Same Client Computer

To use this machine as a network TWAIN scanner, a TWAIN-compliant application, such as DeskTopBinder, must be installed on the client computer.

You can download DeskTopBinder from the manufacturer's Web site and then install it on the client computer. For details about DeskTopBinder, see "Software that You Can Download", Getting Started.



# 4. Installing the Facsimile Driver

This chapter explains how to install and configure the LAN-Fax driver on a client computer.

## Installing the LAN-Fax Driver

Address Book and LAN-Fax Cover Sheet Editor are installed with the LAN-Fax Driver. Address Book helps you edit LAN-Fax transmission destinations. LAN-Fax Cover Sheet Editor helps you edit LAN-Fax cover sheets.

### ★ Important

- **Manage Printers permission is required to install the drivers. Log on as an Administrators group member.**
- **In an IPv6 environment, you cannot use the Standard TCP/IP port. Use the SmartDeviceMonitor for Client port.**

### Enabling the function to prevent transmission to the wrong destination

The following function is available to prevent a document from being transmitted to the wrong destination even if the incorrect destination was entered. To enable this function, edit the configuration file before you install the driver.

- Prompt user to reenter the destination number multiple times.
- Prompt user to confirm that the destination number is correct.
- Allow user to select the destination from the destination list only, and prohibit the destination from being manually entered.

For details, see p.44 "Enabling the Function to Prevent Transmission to the Wrong Destination".

### Specifying the same port as the printer driver

If a port name that is the same as one that is already in use by the existing driver is specified, the LAN-FAX driver installation may fail. If the printer driver is already installed, make sure that the port numbers of the LAN-FAX driver and the printer driver match.

For details, see p.41 "Specifying the Same Port as the Printer Driver".

---

## Specifying the Same Port as the Printer Driver

---

1. **Quit all applications. (Do not close this manual.)**
2. **Insert the provided CD-ROM into the computer's CD-ROM drive.**  
If the [AutoPlay] dialog box appears, click [Run AUTORUN.EXE].
3. **Select an interface language, and then click [OK].**

For details about the languages supported in the LAN-Fax driver, see p.8 "LAN-Fax Driver".

4. Click [LAN-Fax Driver].
5. The software license agreement appears in the [License Agreement] dialog box. After reading the agreement, click [I accept the agreement.], and then click [Next].
6. Click [Next].
7. Double-click [Printer Name : <LAN-Fax M(number)>].
8. Click [Port:].
9. Select the same port as the one selected in the printer driver from the ['Change settings for 'Port'] drop-down list.
10. Click [Continue].  
The installation starts.
11. Click [Finish].  
Select one of the options to restart the computer either now or later, and then click [Finish].

## Specifying the Port When Installing the LAN-FAX Driver

To specify a port that is different from the printer driver when installing the LAN-FAX driver, see the installation procedure of the printer driver.

If places where the procedure or description differs depending on the driver to be installed, replace the corresponding procedure or description accordingly, and install the driver.

Installation procedures	Corresponding items to replace
p.15 "Using the Standard TCP/IP port"	1, 2, 4
p.15 "Using the IPP port"	3
p.17 "Using the LPR port"	1, 2, 4
p.18 "Using the WSD port"	3
p.20 "Using the SmartDeviceMonitor for Client port"	1, 2, 4

### List of Items to Replace

No.	Items to be replaced	Procedure/description in the printer driver	Procedure/description in the LAN-Fax driver
1	The name of the button that starts the installation procedure	Click [PCL Printer Drivers] or [PostScript 3 Printer Driver].	Click [LAN-Fax Driver].

No.	Items to be replaced	Procedure/description in the printer driver	Procedure/description in the LAN-Fax driver
2	The procedures in the [Install Printer Driver] dialog box	<ul style="list-style-type: none"> <li>• Select the check box of the machine model you want to use.</li> <li>• Double-click the machine name to display the printer settings.</li> </ul>	Double-click [Printer Name : <LAN-Fax M(number)>].
3	The destination folder in which the driver files are stored	The destination folder is written in the description.	<p>The LAN-FAX driver is installed in the following folder:</p> <ul style="list-style-type: none"> <li>• 32-bit driver X86\DRIVERS\LAN-FAX\XP_VISTA\DISK1</li> <li>• 64-bit driver X64\DRIVERS\LAN-FAX\X64\DISK1</li> </ul>
4	Availability of the User Code setting	Can be specified.	Cannot be specified.

# Enabling the Function to Prevent Transmission to the Wrong Destination

To enable the function to prevent transmission to the wrong destination, edit the configuration file before you install the driver. This section explains how to edit the configuration file and install the LAN-Fax driver using the edited configuration file.

---

## Editing the Configuration File

---

4

**1. Quit all applications. (Do not close this manual.)**

**2. Insert the provided CD-ROM into the computer's CD-ROM drive.**

If the [AutoPlay] dialog box appears, click [Close].

**3. Copy the LAN-FAX driver in the provided CD-ROM to the hard disk of your computer.**

If the drive letter of the CD-ROM drive is "D:", copy one of the following folders. Select either 32-bit or 64-bit version according to the environment you are using. Do not copy the files to the desktop or a directory whose path name contains multi-byte characters.

- 32-bit driver D:\X86\DRIVERS\LAN-FAX
- 64-bit driver D:\X64\DRIVERS\LAN-FAX

**4. Open the file "lfxShLnk.ini" that has been copied to your computer using a text editor.**

**5. Edit the items that are related to the prevention function.**

Edit the following three items:

- ConfirmFAXNo

Syntax: ConfirmFAXNo=0/1/2/3/4/5/6/7/8/9/10

Description: Specify the number of times the confirmation dialog box for reentering the destination number appears. Enter the number of times to prompt the user to reenter the destination from 0 to 10.

Example: ConfirmFAXNo=1

- ConfirmAddress

Syntax: ConfirmAddress=ON/OFF

Description: When set to "ON", the destination confirmation dialog appears.

Example: ConfirmAddress=ON

- ProhibitDirectAddress

Syntax: ProhibitDirectAddress=ON/OFF

Description: When set to "ON", the destination cannot be entered manually.

Example: ProhibitDirectAddress=ON

## 6. Save the configuration file that has been edited.

---

## Installing the LAN-FAX driver in "Add Printer"

---

Install the LAN-FAX driver after the configuration file has been edited.

### 1. Open the printer window.

- Windows XP, Windows Server 2003:  
On the [Start] menu, select [Printers and Faxes].
- Windows Vista, Windows Server 2008:  
On the [Start] menu, select [Control Panel], and then click [Printers] in [Hardware and Sound] category.
- Windows 7, Windows Server 2008 R2:  
On the [Start] menu, select [Devices and Printers].

### 2. Click [Add Printer] or [Add a printer].

### 3. Click [Add a local printer].

### 4. Select the port.

- To use the same port as the printer drive:
  1. Click [Use an existing port:].
  2. Select the same port as the one selected in the printer driver from the [Use an existing port:] list.
  3. Click [Next].
- To use another Standard TCP/IP port:
  1. Click [Create a new port:].
  2. Select [Standard TCP/IP Port] in the [Type of port:] list.
  3. Click [Next].
  4. Enter the machine name or IP address in the [Hostname or IP address:] box.
  5. Click [Next].

### 5. Select the manufacturer and model name of the machine you want to use, and then click [Next].

### 6. Change the machine name if you want, and then click [Next].

The installation starts.

### 7. Follow the instructions that appear. Modify settings such as the default printer and printer sharing configuration, as necessary. You can also print a test page.

**8. Click [Finish].**

When you are prompted to restart your computer, restart it by following the instructions that appear.



# Setting LAN-Fax Driver Properties

## Note

- Manage Printers permission is required to set the properties for the LAN-Fax driver. Log on as an Administrators group member.
- The method for selecting the LAN-Fax driver will vary according to your operating system. For details, see Windows Help.

## Setting Print Properties

This section explains how to make settings such as paper size or resolution.

4

### 1. Open the printer window.

- Windows XP, Windows Server 2003/2003 R2:  
On the [Start] menu, select [Printers and Faxes].
- Windows Vista, Windows Server 2008:  
On the [Start] menu, select [Control Panel], and then click [Printers] in [Hardware and Sound] category.
- Windows 7, Windows Server 2008 R2:  
On the [Start] menu, select [Devices and Printers].

### 2. Open the printer properties dialog box.

- Windows XP/Vista, Windows Server 2003/2003 R2/2008:  
Right-click the [LAN-Fax M(number)] icon, and then click [Properties].
- Windows 7, Windows Server 2008 R2:  
Right-click the [LAN-Fax M(number)] icon, and then click [Printer properties].

### 3. To set the following properties.

- Paper Size
- Orientation
- Tray
- Resolution

### 4. Click [OK].

---

## Configuring Option Settings for the Facsimile

---

### 1. Open the printer windows.

- Windows XP, Windows Server 2003/2003 R2:  
On the [Start] menu, select [Printers and Faxes].
- Windows Vista, Windows Server 2008:  
On the [Start] menu, select [Control Panel], and then click [Printers] in [Hardware and Sound] category.
- Windows 7, Windows Server 2008 R2:  
On the [Start] menu, select [Devices and Printers].

### 2. Open the printer properties dialog box.

- Windows XP/Vista, Windows Server 2003/2003 R2/2008:  
Right-click the [LAN-Fax M(number)] icon, and then click [Properties].
- Windows 7, Windows Server 2008 R2:  
Right-click the [LAN-Fax M(number)] icon, and then click [Printer properties].

### 3. Click the [Accessories] tab, and then make the settings for the option configuration.

### 4. Select the check boxes for the installed optional units.

### 5. Click [Apply].

Option configuration settings are complete.

### 6. Click [OK].

## [Accessories] tab

The [Accessories] tab contains the following items besides option configuration items.

- Enable E-mail  
Check this when using Internet Fax with the LAN-Fax function.
- IP-Fax  
Check this option when using IP-Fax.

After checking this option, select a protocol by clicking an appropriate radio button.

### ↓ Note

- If the options on this machine are not configured as instructed, LAN-Fax functions may fail.
- If this machine is connected to a network and SmartDeviceMonitor for Client is installed on your computer, configuration of each option installed on the machine will be performed automatically. If the settings do not match the installed optional units, click [Load from Device].

# 5. Troubleshooting

This chapter provides solutions for driver installation and USB connection problems.

## Messages Displayed When Installing the Printer Driver

This section describes what to do if a message appears when installing the printer driver.

Message number 58 or 34 indicates that the printer driver cannot be installed using Auto Run. Install the printer driver using Add Printer Wizard.

Message number 58 appears if there is a newer version of the printer driver already installed.

### 1. Open the printer window.

- Windows XP, Windows Server 2003/2003 R2:  
On the [Start] menu, select [Printers and Faxes].
- Windows Vista, Windows Server 2008:  
On the [Start] menu, select [Control Panel], and then click [Printers] in [Hardware and Sound] category.
- Windows 7, Windows Server 2008 R2:  
On the [Start] menu, select [Devices and Printers].

### 2. Click [Add a printer].

### 3. Follow the instructions in Add Printer Wizard.

If the CD-ROM drive is D, the source files of the printer driver are stored in the following locations:

- PCL 5c  
32-bit driver D:\X86\DRIVERS\PCL5C\XP\_VISTA\Language\DISK1  
64-bit driver D:\X64\DRIVERS\PCL5C\X64\Language\DISK1
- PCL 6  
32-bit driver D:\X86\DRIVERS\PCL6\XP\_VISTA\MUI\DISK1  
64-bit driver D:\X64\DRIVERS\PCL6\X64\MUI\DISK1
- PostScript 3  
32-bit driver D:\X86\DRIVERS\PS\XP\_VISTA\MUI\DISK1  
64-bit driver D:\X64\DRIVERS\PS\X64\MUI\DISK1

For details about the languages supported in the printer drivers, see p.6 "Supported languages".

### 4. Specify a port.

 **Note**

- Available ports vary according to your Windows operating system or the type of interface. For details, see p.11 "Confirming the Connection Method".

## If USB Connection Fails

This section describes how to troubleshoot a problem related to USB connections.

Problem	Causes	Solutions
The machine is not automatically recognized.	The USB cable is not connected properly.	Disconnect the USB cable, and then turn off the main power switch. Turn on the main power switch again. When the machine has fully booted up, reconnect the USB cable.
Windows has already configured the USB settings.	Check whether the computer has identified the machine as an unsupported device.	Open Windows' Device Manager, and then, under [Universal Serial Bus controllers], remove any conflicting devices. Conflicting devices have a [!] or [?] icon by them. Take care not to accidentally remove required devices. For details, see Windows Help.
The machine does not recognize the USB connection even when a USB cable is inserted.	If the USB cable is connected while the machine is off, the machine might not recognize the USB connection.	Press the operation switch, and then disconnect the USB cable. When the machine has returned to the ready condition, reconnect the USB cable.



# 6. Installing the Printer Driver Under Mac OS X

This chapter explains how to install and configure the printer drivers for use on the Mac OS X operating system.

## Installing the PPD Files

To print using the printer specific features under Mac OS X, install the PPD files.

### ★ Important

- Mac OS X 10.2 or higher is required.
- You need an administrator name and a password (phrase). For details, consult your network administrator.
- For the latest information on the corresponding operating system, see the "Readme.txt" file in the DRIVERS folder.

1. Quit all applications. (Do not close this manual.)
2. Insert the provided CD-ROM into the computer's CD-ROM drive.
3. Double-click the CD-ROM drive icon.
4. Double-click the [Mac OS X] folder.
5. Double-click the [(brand name)] folder.
6. Double-click the [Mac OS X 10.2 or later] or [Mac OS X 10.5 or later] folder, depending on your operating system.
7. Double-click the [MacOSX PPD Installer] folder.
8. Double-click the package file icon.
9. Follow the instructions on the screen.

### ↓ Note

- The PPD files will be automatically installed in the following location:
  - Mac OS X 10.2 - 10.4:  
`\Library\Printers\PPDs\Contents\Resources\([language code *1]).lproj`  
\*1 da=Danish, de=German, en=English, es=Spanish, fr=French, it=Italian, nl=Dutch, no=Norwegian, sv=Swedish
  - Mac OS X 10.5 - 10.6:  
`\Library\Printers\PPDs\Contents\Resources\`

## Registering the Printer

To use the machine, the printer must be registered in the printer list.

Make sure the machine and computer are connected and turned on, and perform the following procedure.

For how to connect the machine to the computer, see "Connecting the Machine", Connecting the Machine/ System Settings.

### ★ Important

- Depending on the machine you are using, PostScript 3 unit must be installed.

### ↓ Note

- When printing with a USB connection to a Macintosh computer, the printer language does not change automatically. Use the control panel on this machine to change the printer language to [Auto Detect] or [PS] before printing.
- The operating procedure under Mac OS X differs depending on the version of the operating system. Consult the procedure described in this manual, and make the necessary settings according to the manual of each version.

---

## USB Connection

---

### ★ Important

- Make sure the computer and the machine are connected using the USB cable, and the power of the devices are turned on beforehand.
- USB2.0 can be used only with Mac OS X 10.3.3 or higher.

## Mac OS X 10.2 - 10.3

---

1. Start Print Center or Printer Setup Utility in Applications\Utilities.
2. Click [Set Up Printers].  
Depending on your computer's operating system, [Set Up Printers] may not appear.
3. Click [Add].
4. Select [USB] on the pop-up menu.
5. Select the machine.
6. Select the machine you are using from the [Printer Model:] pop-up menu.

If the machine you are using is not selected in [Printer Model:], select its manufacturer or [Other...] in the pop-up menu, and then select the PPD file of the machine. For the location of the PPD files, see p.53 "Installing the PPD Files".



7. Click [Choose].

8. Click [Add].

If the option settings need to be configured, see p.57 "Configuring Option Settings for the Printer Under Mac OS X".

9. Quit Print Center or Printer Setup Utility.

---

## Mac OS X 10.4 - 10.6

---

1. Start System Preferences.

2. Click [Print & Fax].

3. Click the [+] button.

4. Click [Default Browser] or [Default].

5. Select the machine that has "USB" indicated in the [Connection] or [Kind] column.

6. Select the machine you are using from the [Print Using:] pop-up menu.

If the machine you are using is not selected in [Print Using:], select its manufacturer, [Select a driver to use...], or [Select Printer Software...] in the pop-up menu, and then select the PPD file of the machine. For the location of the PPD files, see p.53 "Installing the PPD Files".

7. Click [Add].

If the option settings need to be configured, click [Configure...] in the dialog box that appears, and then configure the option settings.

8. Quit System Preferences.

---

## Network Connection

---

---

### Mac OS X 10.2 - 10.3

---

1. Start Print Center or Printer Setup Utility in Applications\Utilities.

2. Click [Set Up Printers].

Depending on your computer's operating system, [Set Up Printers] may not appear.

3. Click [Add].

4. Select [Directory Services] on the pop-up menu, and then select [Rendezvous].

5. Select the machine.

If the machine name is not displayed, select the icon that corresponds to your network environment (TCP/IP, etc.).

**6. Select the machine you are using from the [Printer Model:] pop-up menu.**

If the machine you are using is not selected in [Printer Model:], select its manufacturer or [Other...] in the pop-up menu, and then select the PPD file of the machine. For the location of the PPD files, see p.53 "Installing the PPD Files".

**7. Click [Choose].**

**8. Click [Add].**

If the option settings need to be configured, see p.57 "Configuring Option Settings for the Printer Under Mac OS X".

**9. Quit Print Center or Printer Setup Utility.**

---

## Mac OS X 10.4 - 10.6

---

**1. Start System Preferences.**

**2. Click [Print & Fax].**

**3. Click the [+] button.**

**4. Click [Default Browser] or [Default].**

**5. Select the machine that has "Bonjour" indicated in the [Connection] or [Kind] column.**

If the machine name is not displayed, select the icon that corresponds to your network environment (TCP/IP, etc.).

**6. Select the machine you are using from the [Print Using:] pop-up menu.**

If the machine you are using is not selected in [Print Using:], select its manufacturer, [Select a driver to use...], or [Select Printer Software...] in the pop-up menu, and then select the PPD file of the machine. For the location of the PPD files, see p.53 "Installing the PPD Files".

**7. Click [Add].**

If the option settings need to be configured, click [Configure...] in the dialog box that appears, and then configure the option settings.

**8. Quit System Preferences.**

# Configuring Option Settings for the Printer Under Mac OS X

This section explains how to configure the printer driver.

## Mac OS X 10.2 - 10.3

1. Start **Print Center** or **Printer Setup Utility** in **Applications\Utilities**.
2. Click **[Set Up Printers...]**.  
Depending on your computer's operating system, **[Set Up Printers...]** may not appear.
3. Select the machine you are using, and then click **[Show Info]** on the **[Printers]** menu.
4. Select **[Installable Options]** in the pop-up menu, and then configure settings needed.
5. Click **[Apply Changes]**, and then close the **[Printer Info]** dialog box.
6. Quit **Print Center** or **Printer Setup**.

## Mac OS X 10.4

1. Start **System Preferences**.
2. Click **[Print & Fax]**.
3. Select the machine you are using, and then click **[Printer Setup...]**.
4. Select **[Installable Options]** in the pop-up menu, and then configure settings as needed.
5. Click **[Apply Changes]**, and then close the **[Printer Info]** dialog box.
6. Quit **System Preferences**.

## Mac OS X 10.5 - 10.6

1. Start **System Preferences**.
2. Click **[Print & Fax]**.
3. Select the machine you are using, and then click **[Options & Supplies...]**.
4. Click **[Driver]**, and then configure settings as needed.
5. Click **[OK]**.
6. Quit **System Preferences**.

### ↓ Note

- If the option you want to select is not displayed, PPD files may not be set up correctly. To complete the setup, check the name of the PPD file displayed in the dialog box.



# 7. Appendix

---

## Updating or Deleting the Driver

### ★ Important

- Administrator permission is required to update or delete the driver in use. Log on as an Administrators group member.

### ↓ Note

- If the [User Account Control] dialog box appears, click [Yes] or [Continue].
- If the [Windows Security] dialog box appears, click [Install this driver software anyway].

---

## Updating the Driver

---

### Printer driver / LAN-Fax driver

---

You can download the most recent version of the driver from the manufacturer's Web site. Download the latest driver, and then perform the following procedure.

**1. Open the printer window.**

- Windows XP, Windows Server 2003:  
On the [Start] menu, select [Printers and Faxes].
- Windows Vista, Windows Server 2008:  
On the [Start] menu, select [Control Panel], and then click [Printers] in [Hardware and Sound] category.
- Windows 7, Windows Server 2008 R2:  
On the [Start] menu, select [Devices and Printers].

**2. Open the printer properties dialog box.**

- Windows XP/Vista, Windows Server 2003/2008:  
Right-click the machine's icon, and then click [Properties].
- Windows 7, Windows Server 2008 R2:  
Right-click the machine's icon, and then click [Printer properties].

**3. Click the [Advanced] tab.**

**4. Click [New Driver...], and then click [Next].**

**5. Click [Have Disk...].**

**6. Click [Browse...], and then select the driver location.**

7. Click [OK].
8. Select the machine model, and then click [Next].  
The driver update starts.
9. Click [Finish].
10. Click [OK] to close the printer properties window.
11. Restart the computer.

## TWAIN driver

---

You can download the most recent version of the TWAIN driver from the manufacturer's Web site.

Delete the old version of the TWAIN driver first, and then install the new TWAIN driver. For details about how to delete the driver, see p.60 "Deleting the Driver".

---

## Deleting the Driver

---

### Printer driver / LAN-Fax driver

---

## 7

#### Windows XP, Windows Server 2003/2003 R2

1. On the [Start] menu, click [Printers and Faxes].
2. Right-click the icon of the machine you want to delete, and then click [Delete].
3. Click [Server Properties] on the [File] menu.
4. Click the [Drivers] tab.
5. Select the driver you want to delete, and then click [Remove].
6. Click [Yes].
7. Click [Close] to close the print server properties window.

#### Windows Vista, Windows Server 2008

1. On the [Start] menu, select [Control Panel], and then click [Printers] in [Hardware and Sound] category.
2. Right-click the icon of the machine you want to delete, and then click [Delete].
3. On the [File] menu, point to [Run as administrator], and then click [Server Properties...].
4. Click the [Drivers] tab.
5. Select the driver you want to delete, and then click [Remove...].
6. Select [Remove driver and driver package.], and then click [OK].
7. Click [Yes].

8. Click [Delete].
9. Click [OK].
10. Click [Close] to close the print server properties window.

### Windows 7, Windows Server 2008 R2

1. On the [Start] menu, click [Devices and Printers].
2. Right-click the icon of the machine you want to delete, and then click [Remove Device].
3. Click [Yes].
4. Click any machine icon, and then click [Print server properties].
5. Click the [Drivers] tab.
6. Click the [Change Driver Settings] button if it is displayed.
7. Select the driver you want to delete, and then click [Remove...].
8. Select [Remove driver and driver package.], and then click [OK].
9. Click [Yes].
10. Click [Delete].
11. Click [OK].
12. Click [Close] to close the print server properties window.

### TWAIN driver

1. Start uninstaller.
  - **Windows XP, Windows Server 2003/2003 R2:**  
On the [Start] menu, select [Control Panel], and then click [Add or Remove Programs].
  - **Windows Vista/7, Windows Server 2008 R2:**  
On the [Start] menu, select [Control Panel], and then click [Uninstall a program].
  - **Windows Server 2008:**  
On the [Start] menu, select [Control Panel], and then double-click [Programs and Features].
2. Remove the TWAIN driver.
  - **Windows XP, Windows Server 2003/2003 R2:**
    1. Select [(model type) TWAIN Driver Ver.4].
    2. Click [Change/Remove].
  - **Windows Vista/7, Windows Server 2008/2008 R2:**
    1. Select [(model type) TWAIN Driver Ver.4].
    2. Click [Uninstall/Change].

**3. Quit uninstaller.**



# Trademarks

Adobe, PageMaker, and PostScript are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or countries.

Macintosh, and Mac OS are registered trademarks of Apple Inc, registered in the U.S. and other countries.

IPS is a trademark or registered trademark of Zoran Corporation and/or its subsidiaries in the United States or other countries.

Microsoft®, Windows®, Windows Server®, and Windows Vista® are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

Monotype is a registered trademark of Monotype Imaging, Inc.

NetWare, IPX, IPX/SPX are either registered trademarks or trademarks of Novell, Inc.

PCL® is a registered trademark of Hewlett-Packard Company.

Other product names used herein are for identification purposes only and might be trademarks of their respective companies. We disclaim any and all right to those marks.

The proper names of the Windows operating systems are as follows:

- The product names of Windows 2000 are as follows:

Microsoft® Windows® 2000 Professional

Microsoft® Windows® 2000 Server

Microsoft® Windows® 2000 Advanced Server

- The product names of Windows XP are as follows:

Microsoft® Windows® XP Professional Edition

Microsoft® Windows® XP Home Edition

Microsoft® Windows® XP Media Center Edition

Microsoft® Windows® XP Tablet PC Edition

- The product names of Windows Vista are as follows:

Microsoft® Windows Vista® Ultimate

Microsoft® Windows Vista® Business

Microsoft® Windows Vista® Home Premium

Microsoft® Windows Vista® Home Basic

Microsoft® Windows Vista® Enterprise

- The product names of Windows 7 are as follows:

Microsoft® Windows® 7 Home Premium

Microsoft® Windows® 7 Professional

Microsoft® Windows® 7 Ultimate

Microsoft® Windows® 7 Enterprise

- The product names of Windows Server 2003 are as follows:

Microsoft® Windows Server® 2003 Standard Edition

Microsoft® Windows Server® 2003 Enterprise Edition

- The product names of Windows Server 2003 R2 are as follows:

Microsoft® Windows Server® 2003 R2 Standard Edition

Microsoft® Windows Server® 2003 R2 Enterprise Edition

- The product names of Windows Server 2008 are as follows:

Microsoft® Windows Server® 2008 Standard

Microsoft® Windows Server® 2008 Enterprise

- The product names of Windows Server 2008 R2 are as follows:

Microsoft® Windows Server® 2008 R2 Standard

Microsoft® Windows Server® 2008 R2 Enterprise

# INDEX

## B

- Bidirectional communication.....35
- BIP.....31
- Bluetooth.....31
- Bluetooth printer.....32

## C

- CD-ROM.....5
- Confirming the connection method.....11
- Connection fails.....51

## D

- Delete.....59, 60
- DeskTopBinder.....39

## E

- Error message.....49

## F

- Facsimile.....41
- Font Manager.....9, 37

## H

- HRCF.....31

## I

- Installer.....3
- IPP port.....15

## L

- LAN-Fax driver.....8, 41
- LAN-Fax driver properties.....47
- Launcher.....3
- Local connection.....12, 27
- LPR port.....17

## M

- Mac OS X.....10
- Messages displayed when installing the printer driver.....49

## N

- NetWare.....22, 25
- NetWare print server.....23
- Network connection.....11, 14, 55

- Network printer.....12, 22

## O

- Option settings.....35, 48, 57

## P

- PageMaker.....38
- Parallel connection.....13, 31
- PCL.....5, 13, 14, 22
- PostScript 3.....5, 14, 22
- PPD.....5
- Prevent Transmission to the Wrong Destination..44
- Printer driver.....5, 14, 27
- Printer port type.....14

## Q

- Quick Install.....13

## R

- Registering the printer.....54

## S

- Scanner.....39
- Setting print properties.....47
- SmartDeviceMonitor for Client port.....20, 21
- Software.....5
- SPP.....31
- Standard TCP/IP port.....15
- Supported language.....6
- Supported profiles and restrictions.....31

## T

- Trademarks.....63
- TWAIN driver.....7, 39

## U

- Uninstall.....60
- Update.....59
- USB connection.....27, 51, 54
- Utilities.....5

## W

- Windows print server.....22
- Windows Server.....22
- WSD port.....18

---

MEMO

---

MEMO

---

MEMO



