
# **Read This First**



MP C2800/C3300/C4000/C5000 MP C2800/C3300/C4000/C5000 **Aficio**™ MP C2800/C3300/C4000/C5000

# Operating Instructions About This Machine

For information not in the printed manual, refer to the HTML/PDF files on the supplied CD-ROM.

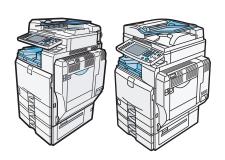

- 1 Simple Search
- 2 Getting Started
- 3 Adding Paper
- 4 Adding Toner and Staples
- 5 Entering Text
- 6 Operating Instructions
- 7 Other User Tools
- 8 Remarks
- 9 Appendix

# **Documentation for This Machine**

About This Machine (This manual)	
Troubleshooting	
Copy and Document Server Reference	💿
Using the various copier functions	💿
Using the Document Server functions	💿
Changing the default settings of the copier and Document Server functions, and related information	💿
Facsimile Reference	💿
Sending and receiving faxes	💿
Using the fax function through a computer	💿
Changing the default settings of the fax function, and related information	💿
Printer Reference	💿
Installing the driver for the printer function	💿
Changing the default settings of the printer function, and related information	💿
Scanner Reference	💿
Sending scan files	💿
Storing scan files	💿
Changing the default settings of the scanner function, and related information	💿
Network and System Settings Guide	💿
Connecting to a network	💿
Registering addresses for fax/scanner functions	💿
Changing the default settings of the system, and related information	💿
Security Reference	💿
PostScript 3 Supplement	💿
Quick Reference Copy Guide	j
Quick Reference Printer Guide	כ
Quick Reference Fax Guide	כ
Quick Reference Scanner Guide	1

# **TABLE OF CONTENTS**

Documentation for This Machine	1
Manuals for This Machine	8
Manuals List	10
What You Can Do with This Machine	11
Using This Machine as a Copier	11
Using This Machine as a Printer	12
Utilizing Stored Documents	12
Paperless Fax Transmission and Reception	13
Fax Transmission and Reception Over the Internet	14
Using the Facsimile and the Scanner in a Network Environment	15
Administrating the Machine/Protecting Documents (Security Functions)	16
Monitoring the Machine Via Computer	17
Preventing an Unauthorized Copy	17
Notice	19
Important	19
How to Read This Manual	20
Symbols	20
Names of Major Items	20
Notes	20
Machine Types	22
Laws and Regulations	23
Legal Prohibition	23
Laser Safety (for users of Type 1 and 2)	23
Laser Safety (for users of Type 3 and 4)	23
Safety Information	25
Safety During Operation	25
Safety Precautions to be Followed	25
Safety Labels of This Machine	31
Positions of WARNING and CAUTION labels for users of type 1 and 2	31
Positions of WARNING and CAUTION labels for users of type 3 and 4	34
Power Switch Symbols	37
ENERGY STAR Program	
Energy Saving Functions	39

### 1. Simple Search

Searching by what you want to do	41
I want to save my paper document!	41
I want to convert documents to electronic formats easily!	42
I want to register destinations!	42
I want to operate the machine more effectively!	43
Searching by Keyword	45
Paper	45
Register/Change/Delete	45
Colour	46
Check	46
Install	47
Envelope	47
2. Getting Started	
Guide to Components	49
Guide to components of type 1 and 2	49
Guide to components of type 3 and 4	51
About the guide on the internal tray 2 (optional)	54
Options	55
External options	55
Internal options	58
Control Panel	60
Display Panel	63
Simplified Display	63
When the Authentication Screen is Displayed	65
User Code Authentication (Using the Control Panel)	65
User Code Authentication (Using a Printer Driver)	66
Login (Using the Control Panel)	66
Logout (Using the Control Panel)	67
Login (Using a Printer Driver)	68
Login (Using Web Image Monitor)	68
Logout (Using Web Image Monitor)	68
Changing Modes	69

System Reset	70
Turning On/Off the Power	71
Turning On the Main Power	72
Turning On the Power	
Turning Off the Power	
Turning Off the Main Power	73
Saving Energy	74
3. Adding Paper	
Loading Paper	75
Loading Paper into the Paper Trays	75
Loading Paper into Tray 3 (LCT)	76
Loading Paper into the Large Capacity Tray (LCT)	77
Orientation-Fixed Paper or Two-Sided Paper	79
Changing the Paper Size	81
Changing the Paper Size in the Paper Trays	81
Changing to a Size That Is Not Automatically Detected	83
Recommended Paper Sizes and Types	86
-nvelopes	92
Thick Paper	94
Unusable Paper	96
Paper Storage	97
4. Adding Toner and Staples	
Adding Toner	
Replacing Toner	100
Sending Faxes or Scanned Documents When Toner Has Run Out	101
Used Toner	101
Adding Staples	102
Finisher SR3010	102
Finisher SR790	103
Booklet Finisher SR3000	104
Booklet Finisher SR3020	105
Booklet Finisher SR3020	106
Finisher SR3030	107

Replacing the Stamp Cartridge	109
Replacing the Stamp Cartridge (Type 1, 2)	109
Replacing the Stamp Cartridge (Type 3, 4)	111
5. Entering Text	
Entering Text	113
Available Characters	113
Keys	113
How to Enter Text	114
6. Operating Instructions	
Installing Operating Instructions	117
PDF Manuals	118
How to Use the Operating Instructions	119
Opening from the Icon	119
Opening from the [Start] Menu	119
Opening from the CD-ROM	120
7. Other User Tools	
Changing the Display Language	121
Enquiry	123
Changing Paper Thickness Settings	125
Counter	127
Displaying the Total Counter	127
8. Remarks	
Dos and Don'ts	129
Saving Colour Copies	130
Where to Put Your Machine	131
Machine Environment	131
Power Connection	133
Maintaining Your Machine	135
Cleaning the Exposure Glass	135
Cleaning the Auto Document Feeder	135
Cleaning the Dustproof Glass	136
9. Appendix	
Software and Utilities Included on the CD-ROM	139

Viewing the Contents of the CD-ROM	139
Printer Drivers for This Machine	139
TWAIN Driver	141
LAN-Fax Driver	141
DeskTopBinder Lite	142
SmartDeviceMonitor for Admin	143
DeskTopBinder-SmartDeviceMonitor for Client	144
Specifications for the Main Unit	146
For users of type 1 and 2	146
For users of type 3 and 4	150
Document Server for Type 1 and 2	155
Document Server for Type 3 and 4	156
Specifications for Auto Document Feeder	157
Specifications for Auto Document Feeder (ARDF DF3030)	157
Specifications for Auto Document Feeder (ARDF DF3010)	157
Specifications for Finishers (Optional)	159
Specifications for Finisher SR790 (1000-sheet) (Optional)	159
Specifications for Finisher SR3030 (3000-sheet) (Optional)	160
Specifications for Finisher SR3010 (500-sheet) (Optional)	162
Specifications for Booklet Finisher (Optional)	164
Specifications for Booklet Finisher SR3020 (2000-sheet-Booklet) (Optional)	164
Specifications for Booklet Finisher SR3000 (1000-sheet-Booklet) (Optional)	166
Specifications for Punch Kit (Optional)	169
Specifications for Punch Kit (Finisher SR3030, Booklet Finisher SR3020) (Optional)	169
Specifications for Punch Kit (Booklet Finisher SR3000) (Optional)	170
Specifications for Paper Trays (Optional)	172
Specifications for Lower Paper Tray (Optional)	172
Specifications for Lower Paper Trays (Optional)	172
Specifications for Tray 3 (LCT) (Optional)	173
Specifications for Large capacity tray (LCT) (Optional)	173
Specifications for Bridge Unit (Optional)	175
Specifications for Internal Tray 2 (Optional)	176
Specifications for Internal Shift Tray (Optional)	177

Specifications for IEEE 1284 Interface Board (Optional)	178
Specifications for Wireless LAN Board (Optional)	179
Specifications for Bluetooth Interface Unit (Optional)	180
Specifications for Gigabit Ethernet (Optional)	181
Specifications for Other Options	182
Trademarks	183
INDEX	185

### Manuals for This Machine

Read this manual carefully before you use this machine.

Refer to the manuals that are relevant to what you want to do with the machine.

### Mportant (

- Media differ according to manual.
- The printed and electronic versions of a manual have the same contents.
- Adobe Acrobat Reader/Adobe Reader must be installed in order to view the manuals as PDF files.
- A Web browser must be installed in order to view the html manuals.

#### **About This Machine**

Before using the machine, be sure to read the section of this manual entitled Safety Information.

This manual introduces the machine's various functions. It also explains the control panel, preparation procedures for using the machine, how to enter text, how to install the CD-ROMs provided, and how to replace paper, toner, staples, and other consumables.

#### **Troubleshooting**

Provides a guide for resolving common usage-related problems.

#### Copy and Document Server Reference

Explains Copier and Document Server functions and operations. Also refer to this manual for explanations on how to place originals.

#### Facsimile Reference

Explains Facsimile functions and operations.

#### **Printer Reference**

Explains Printer functions and operations.

#### **Scanner Reference**

Explains Scanner functions and operations.

#### Network and System Settings Guide

Explains how to connect the machine to a network, configure and operate the machine in a network environment, and use the software provided. Also explains how to change User Tools settings and how to register information in the Address Book.

#### **Security Reference**

This manual is for administrators of the machine. It explains security functions that you can use to prevent unauthorized use of the machine, data tampering, or information leakage. For enhanced security, we recommend that you first make the following settings:

- Install the Device Certificate.
- Enable SSL (Secure Sockets Layer) Encryption.

• Change the user name and password of the administrator using Web Image Monitor.

For details, see "Setting Up the Machine", Security Reference.

Be sure to read this manual when setting the enhanced security functions, or user and administrator authentication.

#### PostScript 3 Supplement

Explains how to set up and use PostScript 3.

#### **UNIX Supplement**

For "UNIX Supplement", please visit our Web site or consult an authorized dealer.

This manual includes descriptions of functions and settings that might not be available on this machine.

#### Other manuals

- Quick Reference Copy Guide
- Quick Reference Printer Guide
- · Quick Reference Fax Guide
- Quick Reference Scanner Guide
- Manuals for DeskTopBinder Lite
  - DeskTopBinder Lite Setup Guide
  - DeskTopBinder Introduction Guide
  - · Auto Document Link Guide



- Manuals provided are specific to machine types.
- The following software products are referred to using general names:

Product name	General name
DeskTopBinder Lite and DeskTopBinder Professional * 1	DeskTopBinder
ScanRouter EX Professional *1 and ScanRouter EX Enterprise *1	the ScanRouter delivery software

\*1 Optional

### Manuals List

Manual Name	Printed Manuals Provided	HTML Manuals Provided	PDF Manuals Provided
About This Machine	Yes	Yes	Yes
Troubleshooting	Yes	Yes	Yes
Copy and Document Server Reference	No	Yes	Yes
Facsimile Reference	No	Yes	Yes
Printer Reference	No	Yes	Yes
Scanner Reference	No	Yes	Yes
Network and System Settings Guide	No	Yes	Yes
Security Reference	No	Yes	Yes
PostScript 3 Supplement	No	Yes	Yes
UNIX Supplement	No	No	Yes

### What You Can Do with This Machine

This section introduces the features of this machine.




• For details about options, see "Options".

### Reference

• p.55 "Options"

#### Using This Machine as a Copier

You can make copies of originals.

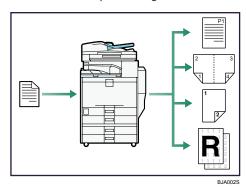


- You can make copies in full colour. You can switch the colour copy mode depending on the type of originals used and the desired finish.
- You can print stamps on copies. Stamps can include background numbers, scanned images, dates, and page numbers.
- You can adjust the colour tones and image quality of your copies.
- You can reduce or enlarge the copy image. With Auto Reduce/Enlarge, the machine automatically
  detects the original size, and then selects an appropriate reproduction ratio based on the paper size
  you select. If the orientation in which your original is placed is different from that of the paper you are
  copying onto, the machine rotates the original image by 90 degrees and fits it on the copy paper.
- Copier functions such as Duplex, Combine, Booklet, and Magazine allow you to save on paper by copying multiple pages onto single sheets.
- You can copy onto various types of paper such as envelopes, and OHP transparencies.
- The optional finisher allows you to sort, staple, and punch holes in your copies.



• See Copy and Document Server Reference .

### Using This Machine as a Printer

You can print documents created in applications.

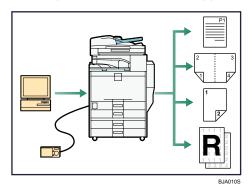


- This machine supports network and local connections.
- With the optional PostScript 3 unit, you can send PDF files directly to the machine for printing, without having to open a PDF application.
- You can print or delete print jobs stored on the machine's hard disk, which have been previously sent
  from computers using the printer driver. The following types of print jobs can be selected: Sample
  Print, Locked Print, Hold Print, and Stored Print.
- The optional finisher allows you to collate, staple, and punch holes in your prints.
- With the optional USB host interface board, and PictBridge card installed, you can connect a
  PictBridge-compatible digital camera to this machine using a USB cable. This allows you to print the
  photographs stored on the camera using the camera's own interface.

### Reference

• See Printer Reference .

### **Utilizing Stored Documents**

You can store files scanned in copier, printer, or scanner mode on the machine's hard disk. With DeskTopBinder or Web Image Monitor, you can use your computer to search for, view, print, delete, and send stored files via the network. You can also change print settings and print multiple documents (Document Server).

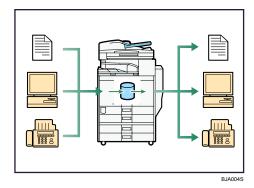

- You can also retrieve stored documents scanned in scanner mode.
- Using File Format Converter (optional), you can download documents stored in copier, Document Server, or printer mode to your computer.

#### Reference


- For details about machine's settings, see "Network Settings Required to Use Document Server", Network and System Settings Guide .
- For details about Document Server in printer mode, see "Saving and Printing Using the Document Server", Printer Reference.
- For details about Document Server in fax mode, see "Storing a Document", Facsimile Reference .
- For details about Document Server in scanner mode, see "Storing Files Using the Scanner Function", Scanner Reference.
- For details about Document Server, see "Document Server", Copy and Document Server Reference
- For details about DeskTopBinder, see DeskTopBinder manuals.

### Paperless Fax Transmission and Reception

You can store received fax messages on the machine's hard disk, instead of printing them onto paper.

#### Reception


You can store received fax documents in electrical format without printing it onto paper.

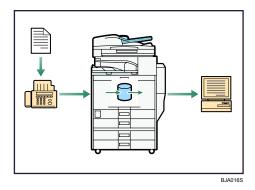

 You can use DeskTopBinder or a Web Image Monitor to check, print, delete, retrieve, or download documents using your computer (Storing received documents). See "Confirming/ Printing/Deleting Received and Stored Documents", Facsimile Reference.

#### **Transmission**


You can send a fax from your computer over the network (Ethernet or wireless LAN) to this machine, which then forwards the fax via its telephone connection (LAN-Fax).

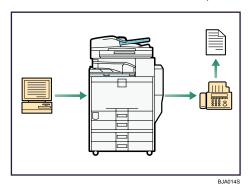

- To send a fax, print from the Windows application you are working with, select LAN-Fax as the
  printer, and then specify the destination.
- You can also check the sent image data.
- For details about the machine's settings, see "Network Settings Required to Use the Printer/LAN-Fax", Network and System Settings Guide .
- For details about how to use the function, see "Fax via Computer", Facsimile Reference .

### Fax Transmission and Reception Over the Internet

You can send and receive faxes over your LAN and the Internet.

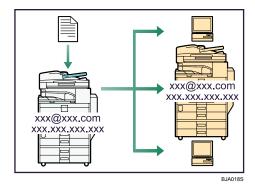

#### **E-mail Transmission**

This machine converts scanned document images to e-mail format, and transmits and receives this data over the Internet.

- To send a document, specify an e-mail address instead of dialing the destination telephone number (Internet Fax and E-Mail Transmission).
- This machine can receive e-mail messages via Internet Fax or from computers (Internet Fax Reception and Mail to Print).
- Internet Fax compatible machines and computers that have e-mail addresses can receive e-mail messages via Internet Fax.

#### IP-Fax

The IP-Fax function sends or receives documents between two facsimiles directly via a TCP/IP network.


- To send a document, specify an IP address or host name instead of a fax number (IP-Fax Transmission).
- This machine can receive documents sent via Internet Fax (IP-Fax Reception).
- Using a VoIP gateway, this machine can send to G3 facsimiles connected to the public switched telephone network (PSTN).

### Reference

- For details about settings, see "Network Settings Required to Use Internet Fax", Network and System Settings Guide .
- For details about how to transmit and receive documents over the Internet, see "Transmission" and "Reception", Facsimile Reference.

### Using the Facsimile and the Scanner in a Network Environment


You can use a facsimile and a scanner over the network.

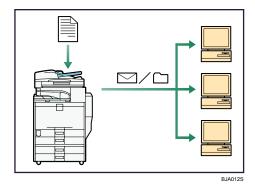

- You can send scan files to a specified destination using e-mail (Sending scan files by e-mail). See "E-Mail Transmission", Facsimile Reference , and "Sending Scan Files by E-mail", Scanner Reference
- You can send scan files directly to folders (Sending scan files by Scan to Folder). See "Folder Transmission", Facsimile Reference, and "Sending Scan Files to Folder", Scanner Reference.
- You can use this machine as a delivery scanner for the ScanRouter delivery application (Network delivery scanner). You can save scan files in the delivery server or send them to a folder in a computer on the same network. For details about the machine's settings, see "Network Settings Required to Use the Network Delivery Scanner", Network and System Settings Guide. For details about how to use the function, see "Delivering Scan Files", Scanner Reference.

### Administrating the Machine/Protecting Documents (Security Functions)

You can prevent information leakage by managing the machine and protecting documents.

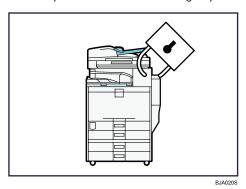

- You can protect documents from unauthorized access and stop them from being copied without permission.
- You can control the use of the machine, as well as prevent machine settings from being changed without authorization.
- By setting passwords, you can prevent unauthorized access via the network.


• You can erase the data on the hard disk to prevent the information from leaking out.



• See the manual for the DataOverWriteSecurity Unit (optional), and Security Reference .

### Monitoring the Machine Via Computer


You can change the machine's settings and monitor its status from a connected computer.

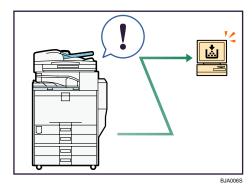

- Web Image Monitor lets you configure and operate the machine using a Web browser on a computer.
   You can also install SmartDeviceMonitor for Admin on a computer to configure and operate the machine.
- Using Web Image Monitor, you can register information in the address book, specify the machine's settings, and check the machine's status with ease.
- Using Web Image Monitor, you can check and specify the initial settings (system settings, printer features, network settings, security settings/certificate management, and E-mail Notification), control print jobs, display the print job journal, and protect the data in the machine using authentication.
- You can also use SmartDeviceMonitor for Admin to register information in the address book.

### Preventing an Unauthorized Copy

You can print embedded pattern on paper to prevent them from being copied.

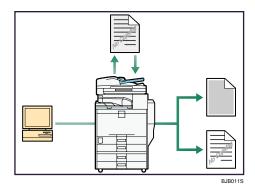

- Using the printer driver, you can embed a pattern in the printed document. If the document is copied
  on a machine with the Copy Data Security Unit (optional), protected pages are grayed out in the
  copy, preventing confidential information from being copied. Protected fax messages are grayed out
  before being transmitted or stored. If a document protected by unauthorized copy guard is copied
  on a machine that is equipped with the Copy Data Security Unit, the machine beeps to notify users
  that unauthorized copying is being attempted.
  - If the document is copied on a machine without the Copy Data Security Unit, the hidden text becomes conspicuous in the copy, showing that the copy is unauthorized.
- Using the printer driver, you can embed text in the printed document for unauthorized copy prevention. If the document is copied, scanned, or stored in a Document Server by a copier or multifunction printer, the embedded text appears conspicuous in the copy, discouraging such unauthorized copying.

### ■ Reference

• See the printer driver Help, Facsimile Reference , Printer Reference and Security Reference

# **Notice**

### **Important**

In no event will the company be liable for direct, indirect, special, incidental, or consequential damages as a result of handling or operating the machine.

For good copy quality, the supplier recommends that you use genuine toner from the supplier.

The supplier shall not be responsible for any damage or expense that might result from the use of parts other than genuine parts from the supplier with your office products.

### How to Read This Manual



This manual uses the following symbols:



Indicates points to pay attention to when using the machine, and explanations of likely causes of paper misfeeds, damage to originals, or loss of data. Be sure to read these explanations.



Indicates supplementary explanations of the machine's functions, and instructions on resolving user errors.

### ■ Reference

This symbol is located at the end of sections. It indicates where you can find further relevant information.

[]

Indicates the names of keys that appear on the machine's display panel.

[]

Indicates the names of keys on the machine's control panel.



Indicates instructions in book form.



Indicates instructions in sheet form.



Indicates instructions stored in a file on a provided CD-ROM.

### Names of Major Items

Major Items of this machine are referred to as follows in this manual:

- Auto document feeder → ADF
- Large capacity tray → LCT (Optional)

#### Notes

Contents of this manual are subject to change without prior notice.

Two kinds of size notation are employed in this manual. With this machine refer to the metric version.

Colours on colour keys or the colour circle may differ slightly from the colours of actual copies.

The colour samples in this manual may differ slightly from the colours of actual copies.

Some illustrations in this manual might be slightly different from the machine.

Certain options might not be available in some countries. For details, please contact your local dealer.

Depending on which country you are in, certain units may be optional. For details, please contact your local dealer.

# **Machine Types**

The model names of the machines do not appear in the following pages. Check the type of your machine before reading this manual.

- Type 1: MP C2800/Aficio MP C2800
- Type 2: MP C3300/Aficio MP C3300
- Type 3: MP C4000/Aficio MP C4000
- Type 4: MP C5000/Aficio MP C5000

Certain types might not be available in some countries. For details, please contact your local dealer.

# Laws and Regulations

### Legal Prohibition

Do not copy or print any item for which reproduction is prohibited by law.

Copying or printing the following items is generally prohibited by local law:

bank notes, revenue stamps, bonds, stock certificates, bank drafts, checks, passports, driver's licenses.

The preceding list is meant as a guide only and is not inclusive. We assume no responsibility for its completeness or accuracy. If you have any questions concerning the legality of copying or printing certain items, consult with your legal advisor.

This machine is equipped with a function that prevents making counterfeit bank bills. Due to this function the original images similar to bank bills may not be copied properly.

### Laser Safety (for users of Type 1 and 2)

This machine is considered a class 1 laser device, safe for office/EDP use. The machine contains four AlGalnP laser diodes, 9-milliwatt, 648 - 663 nanometer wavelength for each emitter. Direct (or indirect reflected) eye contact with the laser beam might cause serious eye damage. Safety

precautions and interlock mechanisms have been designed to prevent any possible laser beam exposure to the operator.

The following label is attached on the rear side of the machine.



#### Caution:

Use of controls or adjustments or performance of procedures other than those specified in this manual might result in hazardous radiation exposure.

### Laser Safety (for users of Type 3 and 4)

This machine is considered a class 1 laser device, safe for office/EDP use. The machine contains eight AlGalnP laser diodes, 9-milliwatt, 648 - 663 nanometer wavelength for each emitter. Direct (or indirect reflected) eye contact with the laser beam might cause serious eye damage. Safety

precautions and interlock mechanisms have been designed to prevent any possible laser beam

exposure to the operator.

The following label is attached on the rear side of the machine.



#### Caution:

Use of controls or adjustments or performance of procedures other than those specified in this manual might result in hazardous radiation exposure.

# **Safety Information**

When using this machine, the following safety precautions should always be followed.

### **Safety During Operation**

In this manual, the following important symbols are used:



#### **⚠ WARNING**

Indicates a potentially hazardous situation which, if instructions are not followed, could result in death or serious injury.



#### **CAUTION**

Indicates a potentially hazardous situation which, if instructions are not followed, may result in minor or moderate injury or damage to property.

### Safety Precautions to be Followed

This section explains safety precautions that should always be followed when using this machine.

#### Environments where the machine can be used

This section explains safety precautions about environments where the machine can be used.



#### **⚠ WARNING**

 Keep the machine away from flammable liquids, gases, and aerosols. A fire or an electric shock might occur.

### **⚠** CAUTION

- Keep the machine away from humidity and dust. Otherwise a fire or an electric shock might occur.
- Do not place the machine on an unstable or tilted surface. If it topples over, an injury might occur.

### **⚠** CAUTION

 Make sure the room where you are using the machine is well ventilated and spacious. Good ventilation is especially important when the machine is used heavily.

#### Handling power cords and power plugs

This section explains safety precautions about handling power cords and power plugs.

### **MARNING**

- Connect this machine only to a power source that matches the specifications shown in "Specifications for the Main Unit" in this manual and do not use an extension cord.
- Use of this machine with extension cords and power sources other than those that match the specifications shown constitutes an electric shock and fire hazard.

### **WARNING**

 Power cords that are damaged, broken, modified, trapped under heavy objects, pulled hard, or bent severely are electric shock and fire hazards.

### **⚠ WARNING**

Disconnect the power plug (by pulling the plug, not the cable) if the power cable or plug becomes
frayed or otherwise damaged.

### **<b>∴** WARNING

 If the power cord is damaged (exposure of the core, disconnection, etc.), contact your service representative to change a new one. Operating the machine with a damaged power cord may cause an electric shock or fire.

### **MARNING**

• The supplied power cord is for use with this equipment only. Do not use with other appliances. Doing so may result in fire, electric shock, or injury.

### **MARNING**

• It is dangerous to handle the plug with wet hands. Doing this may result in receiving an electric shock.

### **ACAUTION**

• When you disconnect the power plug from the wall outlet, always pull the plug (not the cable).

### **CAUTION**

To disconnect the power cord, pull it out by plug. Do not drag the cord itself. Doing so may result
in damage to the cord, leading to fire or electric shock.

### **ACAUTION**

• For safety reason, unplug the power cord from the wall outlet if the machine will not be used for an extended period of time such as holidays.

### **ACAUTION**

Unplug the power cord from the wall outlet before you move the machine. While moving the
machine, you should take care that the power cord will not be damaged under the machine.

#### Handling the main machine

This section explains safety precautions about handling the main machine.

### **MARNING**

- Turn off the power and disconnect the power plug (by pulling the plug, not the cable) if any of the following occurs:
  - You spill something into the machine.
  - You suspect that your machine needs service or repair.
  - The external housing of your machine has been damaged.

### **ACAUTION**

• Protect the machine from dampness or wet weather, such as rain and snow.

### **ACAUTION**

If you have to move the machine when the optional paper tray unit is attached, do not push on
the main unit's top section. Doing so can cause the optional paper tray unit to detach, possibly
resulting in injury.

### **ACAUTION**

• After you move the machine, use the caster fixture to fix it in place. Otherwise the machine might move or come down to cause an injury.

### **ACAUTION**

 Contact your service representative if you need to lift the machine (such as when relocating it to another floor). Do not attempt to lift the machine without the assistance of your service representative. The machine will be damaged if it topples or is dropped, resulting in malfunction and risk of injury to users. The machine's various handling areas are for service engineer use only. Do not touch these areas.

### **ACAUTION**

• Do not allow paper clips, staples, or other small metallic objects to fall inside the machine.

#### **ACAUTION**

Do not look into the lamp. It can damage your eyes.

### **ACAUTION**

• For environmental reasons, do not dispose of the machine or expended supply waste at household waste collection points. Disposal can take place at an authorized dealer.

#### Handling the machine's interior

This section explains safety precautions about handling the machine's interior.

#### **⚠ WARNING**

 To avoid hazardous electric shock or laser radiation exposure, do not remove any covers or screws other than those specified in this manual.

### **ACAUTION**

• The fusing section of this machine might be very hot. Caution should be taken when removing misfed paper.

### **ACAUTION**

• The inside of the machine could be very hot. Do not touch the parts with a label indicating the "hot surface". Otherwise, an injury might occur.

### **CAUTION**

• When loading paper, take care not to trap or injure your fingers.

### **ACAUTION**

During operation, rollers for transporting the paper and originals revolve. A safety device has
been installed so that the machine can be operated safely. But take care not to touch the machine
during operation. An injury might occur.

### **ACAUTION**

 Fire and breakdown can result from heavy accumulation of dust inside this machine. Consult your service representative for details about and charges for cleaning the machine's interior.

#### Handling the machine's supplies

This section explains safety precautions about handling the machine's supplies.

### **MARNING**

• Do not incinerate used toner or toner containers. Toner dust might ignite when exposed to an open flame. Dispose of used toner containers in accordance with local regulations.

#### **⚠ WARNING**

 Do not incinerate spilled toner or used toner. Toner dust might ignite when exposed to an open flame.

### WARNING

• Do not store toner, used toner, or toner containers in a place with an open flame. The toner might ignite and cause burns or a fire.

### **<b>∴** WARNING

• Keep the waste oil bottle away from flames. There is a risk of fire or burns.

### **CAUTION**

• Do not use aluminum foil, carbon paper, or similar conductive paper to avoid a fire or a machine failure.

### **ACAUTION**

• Do not open toner containers forcefully. Toner can spill, dirtying your clothes or hands, and possibly resulting in accidental ingestion.

### **CAUTION**

• Keep toner (used or unused) and toner containers out of reach of children.

### **ACAUTION**

If toner or used toner is inhaled, gargle with plenty of water and move into a fresh air environment.
 Consult a doctor if necessary.

### **ACAUTION**

If toner or used toner gets into your eyes, flush immediately with large amounts of water. Consult
a doctor if necessary.

### **ACAUTION**

If toner or used toner is swallowed, dilute by drinking a large amount of water. Consult a doctor
if necessary.

### **ACAUTION**

- Avoid getting toner on your clothes or skin when removing a paper jam or replacing toner. If your skin comes into contact with toner, wash the affected area thoroughly with soap and water.
- If toner gets on your clothing, wash with cold water. Hot water will set the toner into the fabric and may make removing the stain impossible.

### **ACAUTION**


• Keep your hands clear of the booklet finisher tray when pulling out or pushing in the finisher's staple unit. You can trap your fingers if you do not.

# Safety Labels of This Machine

This section explains the machine's safety information labels.

### Positions of WARNING and CAUTION labels for users of type 1 and 2

This machine has labels for  $\triangle$ WARNING and  $\triangle$ CAUTION at the positions shown below. For safety, please follow the instructions and handle the machine as indicated.

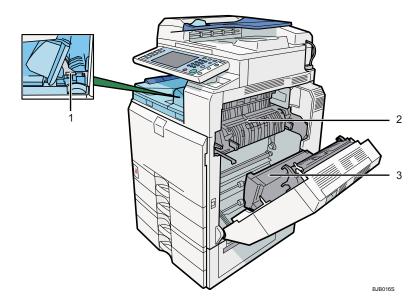


1




Do not touch the parts a label indicates. The inside of the bridge unit could be very hot. Caution should be taken when removing misfed paper.

2

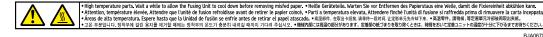


High temperature parts. Wait a while to allow the Fusing Unit to cool down before removing misfed paper.

3

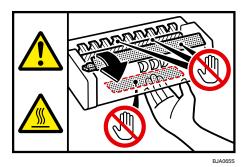

Do not touch the parts a label indicates. The inside of the machine could be very hot. Caution should be taken when removing misfed paper.

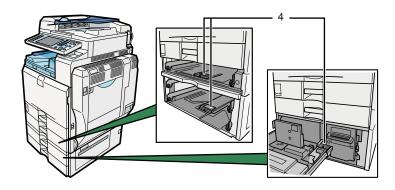

BJB018S

4



BJA046S

The inside of the machine could be very hot. Do not touch the parts which a label is put on. Otherwise, an injury might occur.




5



Keep your hands clear of the booklet finisher tray when pulling out or pushing in the finisher's staple unit, or removing paper jam. You might trap your fingers if you do not. Take care not to touch the booklet finisher tray during operation. Otherwise, an injury might occur.


6

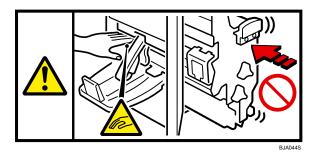

Keep your hands clear of the booklet finisher tray when pulling out or pushing in the finisher's staple unit, or removing paper jam. You might trap your fingers if you do not.

### Positions of WARNING and CAUTION labels for users of type 3 and 4

This machine has labels for  $\triangle$ WARNING and  $\triangle$ CAUTION at the positions shown below. For safety, please follow the instructions and handle the machine as indicated.

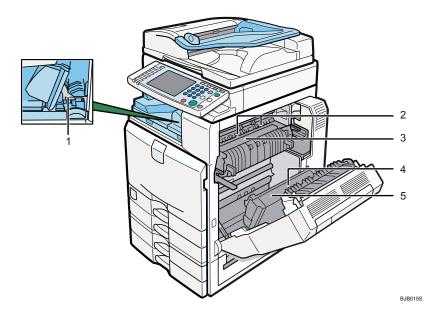

1



Do not touch! Surface may be very hot.

2




Do not touch the parts a label indicates. The inside of the machine could be very hot. Caution should be taken when removing misfed paper.

3




High temperature parts. Wait a while to allow the Fusing Unit to cool down before removing misfed paper.

4

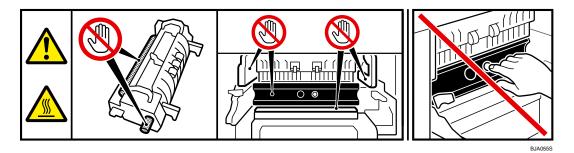


Do not touch the parts a label indicates. The inside of the machine could be very hot. Caution should be taken when removing misfed paper.

5

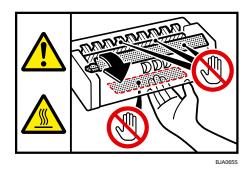

Do not touch the parts a label indicates. The inside of the machine could be very hot. Caution should be taken when removing misfed paper.

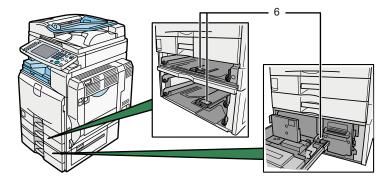


BJB017S

6



The inside of the machine could be very hot. Do not touch the parts which a label is put on. Otherwise, an injury might occur.

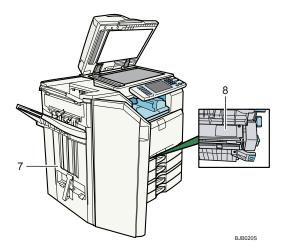


7



Keep your hands clear of the booklet finisher tray when pulling out or pushing in the finisher's staple unit, or removing paper jam. You might trap your fingers if you do not. Take care not to touch the booklet finisher tray during operation. Otherwise, an injury might occur.

8

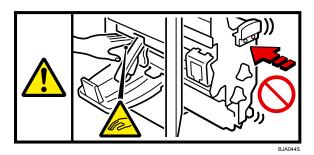

Keep your hands clear of the booklet finisher tray when pulling out or pushing in the finisher's staple unit, or removing paper jam. You might trap your fingers if you do not.

# **Power Switch Symbols**

The meanings of the symbols for the switches on this machine are as follows:

- I:POWER ON.
- O:POWER OFF.
- U:STANDBY.

# **ENERGY STAR Program**

## **ENERGY STAR® Program Requirements for Imaging Equipment**



This company is a participant in the ENERGY STAR® Program. This machine is compliant with the regulations specified by the ENERGY STAR® Program.

The ENERGY STAR® Program Requirements for Imaging Equipment encourage energy conservation by promoting energy efficient computers and other office equipment.

The program backs the development and dissemination of products that feature energy saving functions.

It is an open program in which manufacturers participate voluntarily.

Targeted products are computers, monitors, printers, facsimiles, copiers, scanners, and multi-function devices. Energy Star standards and logos are internationally uniform.



• For details about the "default delay time", see "Energy Saving Functions".

# Reference

• p.39 "Energy Saving Functions"

# **Energy Saving Functions**

To reduce its power consumption, this machine has the following functions:

#### Low Power mode

- If this machine remains idle for a specified period, it automatically reduces its electrical consumption.
- The default period the machine waits before entering Low Power Mode is 15 minutes. This default time can be changed.

#### Sleep Mode

- If this machine is already in Low Power Mode and remains idle for a specified period, it automatically enters Sleep Mode to further reduce its electrical consumption.
- The default delay time the machine waits before entering Sleep Mode for type 1 or 2 is 45 minutes. This default time can be changed.
- The default delay time the machine waits before entering Sleep Mode for type 3 or 4 is 60 minutes. This default time can be changed.
- The machine can print jobs from computers and receive faxes while in Sleep Mode.

## Specification for type 1 and 2

	Type 1	Type 2
Reduced Electrical Consumption by Low Power Mode	108 W	108 W
Time of Switch into Low Power Mode	15 minutes	15 minutes
Time of Switch out from Low Power Mode	17 seconds	17 seconds
Reduced Electrical Consumption by Sleep Mode	4.2 W	4.2 W
Time of Switch into Sleep Mode	45 minutes	45 minutes
Time of Switch out from Sleep Mode	24 seconds	24 seconds

#### Specification for type 3 and 4

	Туре 3	Type 4
Reduced Electrical Consumption by Low Power Mode	135 W	135 W
Time of Switch into Low Power Mode	15 minutes	15 minutes
Time of Switch out from Low Power Mode	5.5 seconds	5.5 seconds
Reduced Electrical Consumption by Sleep Mode	2.4 W	2.4 W

	Туре 3	Type 4
Time of Switch into Sleep Mode	60 minutes	60 minutes
Time of Switch out from Sleep Mode	32 seconds	49 seconds

# ■ Reference

• For details about how to change the default interval, see "Timer Settings", Network and System Settings Guide .

# 1. Simple Search


You can search for a procedure either by keyword or by what you want to do.

# Searching by what you want to do

You can search for a procedure by what you want to do.

## I want to save my paper document!

You can find explanations of the functions and procedures that you can use to save your paper document easily.

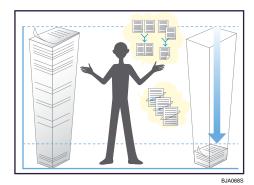

## Printing multi-page documents on both sides of sheets (Duplex Copy)

 $\Rightarrow$  See "Duplex", Copy and Document Server Reference 3.

# Printing multi-page documents and received faxes on a single sheet (Combine (Copier/Fax))

- ⇒ See "Combined Copying", Copy and Document Server Reference.
- ⇒ See "Combine Two Originals", Facsimile Reference .

## Printing received faxes on both sides of sheets (Two-Sided Print)

 $\Rightarrow$  See "Two-Sided Printing", Facsimile Reference  $\odot$ .

## Converting received faxes to electronic formats (Paperless Fax)

 $\Rightarrow$  See "Confirming/Printing/Deleting Received and Stored Documents", Facsimile Reference 0.

## Sending files from the computer without printing them (LAN-Fax)

⇒ See "Sending Fax Documents from Computers", Facsimile Reference.

## I want to convert documents to electronic formats easily!

You can find explanations of the functions and procedures that you can use convert documents to electronic formats easily.



BJA0705

#### Sending scan files

⇒ See "Basic Procedure for Sending Scan Files by E-mail", Scanner Reference .

#### Sending the URL of the folder in which scan files are stored

 $\Rightarrow$  See "Sending the URL by E-mail", Scanner Reference  $\odot$ .

## Storing scan files in a shared folder

⇒ See "Basic Procedure When Using Scan to Folder", Scanner Reference.

#### Storing scan files on media

 $\Rightarrow$  See "Basic Procedure for Saving Scan Files on a Removable Memory Device", Scanner Reference

#### Converting transmitted faxes to electronic formats and sending them to a computer

 $\Rightarrow$  See "Folder Transmission", Facsimile Reference  $\circledcirc$  .

#### Managing and using documents converted to electronic formats (Document Server)

⇒ See "Relationships between Document Server and Other Functions", Copy and Document Server Reference .

### I want to register destinations!

You can find explanations of the functions and procedures that you can use to register destinations easily.



### Using the control panel to register destinations in the address book

- $\Rightarrow$  See "Registering Entered Destinations to the Address Book", Facsimile Reference 0.
- $\Rightarrow$  See "Registering a Directly-Entered Destination in the Address Book", Scanner Reference lacktriangle .

#### Using Web Image Monitor to registering destinations from a computer


 $\Rightarrow$  See "To add new receiver", Facsimile Reference  $\odot$ .

## Downloading destinations registered in the machine to the LAN-Fax driver destination list

⇒ See "Using the Machine's Address Book as the LAN-Fax Destination List", Facsimile Reference ©

## I want to operate the machine more effectively!

You can find explanations of the functions and procedures that you can use to operate the machine more effectively.

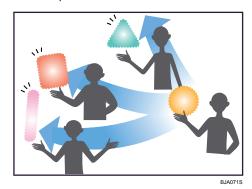

# Registering and using frequently-used settings (Program)

- $\Rightarrow$  See "Registering Frequently Used Functions", Copy and Document Server Reference 0.
- ⇒ See "Programs", Facsimile Reference .
- $\Rightarrow$  See "Registering Frequently Used Setting", Scanner Reference 2.

# Registering frequently-used settings as initial settings (Program as Defaults (Copier/Fax/Scanner))

- $\Rightarrow$  See "Registering the Initial Display's Default Functions", Copy and Document Server Reference
- $\Rightarrow$  See "Setting Transmission Function Defaults", Facsimile Reference 0.
- $\Rightarrow$  See "Registering the Default Values of the Scanner's Initial Display", Scanner Reference 3.

# Searching by Keyword

You can search for a procedure by keyword.

### **Paper**

#### I want to load paper.

 $\Rightarrow$  p.75 "Loading Paper"

#### I want to change the paper size.

⇒ p.81 "Changing the Paper Size"

### I want to know what the paper specifications are.

⇒ p.86 "Recommended Paper Sizes and Types"

#### The paper has jammed.

⇒ See "Removing Jammed Paper", Troubleshooting Q.

#### I want to change the initial paper settings.

⇒ See "Tray Paper Settings", Network and System Settings Guide ◎.

# Register/Change/Delete

#### I want to register a fax number.

- ⇒ See "Registering a Fax Destination", Network and System Settings Guide .
- ⇒ See "Programming Destinations in the Address Book", Facsimile Reference .

#### I want to register an IP-Fax number.

 $\Rightarrow$  See "Registering an IP-Fax Destination", Network and System Settings Guideigotimes .

#### I want to register an e-mail address.

 $\Rightarrow$  See "Registering an E-mail Destination", Network and System Settings Guide  $\odot$ .

#### I want to register an SMB folder.

 $\Rightarrow$  See "Registering an SMB Folder", Network and System Settings Guide @.

#### I want to register multiple addresses as a group.

 $\Rightarrow$  See "Registering Names to a Group", Network and System Settings Guide 3.

#### I want to register frequently-used copy functions.

⇒ See "Registering Frequently Used Functions", Copy and Document Server Reference.

1

I want to copy the contents of the machine's address book to the LAN-Fax address book.

⇒ See "Using the Machine's Address Book as the LAN-Fax Destination List", Facsimile Reference .

#### Colour

I want to scan a colour original (Normal Colour Scan)

 $\Rightarrow$  See "Specifying the File Type", Scanner Reference  $\odot$ .

I want to minimize the amount of storage required when scanning colour originals (High Compression PDF)

⇒ See "Specifying the File Type", Scanner Reference.

#### Check

I want to display the fax transmission status.

⇒ See "Confirming on Display", Facsimile Reference.

I want to print a report of the fax transmission status.

⇒ See "Confirming by Report", Facsimile Reference .

I want to check which destinations the machine failed to send faxes to.

⇒ See "Communication Failure Report", Facsimile Reference .

I want to check which files have been sent by memory transmission.

 $\Rightarrow$  See "Communication Result Report (Memory Transmission)", Facsimile Reference 0.

I want to check which files are stored in the Document Server.

 $\Rightarrow$  See "Checking the Details of a Stored Document", Copy and Document Server Reference $^{igotimes}$  .

I want to check which faxes have been received.

 $\Rightarrow$  See "Checking the Reception Result (Reception File Status)", Facsimile Reference  $\odot$ .

I want to view the received faxes that are stored in the machine.

⇒ See "Confirming Received and Stored Documents", Facsimile Reference.

To avoid sending faxes to wrong destinations, I want to check fax transmission details before sending.

 $\Rightarrow$  See "Preventing Transmission to the Wrong Destination", Facsimile Reference  $\odot$ .

I want to check the settings for scanning and sending files before sending a scan file.

 $\Rightarrow$  See "Check Modes", Scanner Reference  $\odot$ .

I want to check the scan image before sending it.

⇒ See "Preview", Scanner Reference.

I want to view the transmission result.

⇒ See "Scanned Files Status", Scanner Reference.

#### Install

I want to install the printer driver so I can use the SmartDeviceMonitor for Client port.

⇒ See "Using the Smart Device Monitor for Client Port", Printer Reference .

I want to install the printer driver so I can use the Standard TCP/IP port.

 $\Rightarrow$  See "Using the Standard TCP/IP Port", Printer Reference  $\odot$ .

I want to install the printer driver so I can use a Windows Network Printer.

⇒ See "Using as a Windows Network Printer", Printer Reference .

I want to install the printer driver so I can use the machine by USB.

⇒ See "Installing the Printer Driver Using USB", Printer Reference .

## **Envelope**

I want to copy onto envelopes.

⇒ See "Copying onto Envelopes", Copy and Document Server Reference .

I want to print onto envelopes.

⇒ See "Setting Envelopes Using the Control Panel", Printer Reference.

# 2. Getting Started

This chapter describes how to start using this machine.

# **Guide to Components**


This section introduces the names and functions of the components.

## Guide to components of type 1 and 2

This section introduces the names and functions of the components of type 1 and 2.



 Do not obstruct the ventilation holes by placing objects near them or leaning things against them. If the machine overheats, a fault might occur.

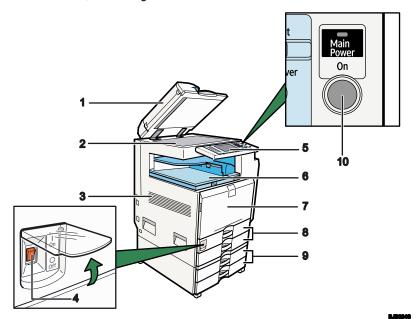

#### 1. Auto Document Feeder (ADF)

If you load a stack of originals in the ADF, the ADF will automatically feed the originals one by one. This document feeder can be used for two-sided originals.

#### 2. Exposure glass

Place originals here face down.

#### 3. Ventilation holes

Prevent overheating.

#### 4. Main power switch

If the machine does not operate after turning on the operation switch, check if the main power switch is turned on. If it is off, turn it on.

See "Turning On/Off the Power".

#### 5. Control panel

See "Control Panel".

#### 6. Internal Tray 1

Copied/printed paper and fax messages are delivered here.

#### 7. Front Cover

Open to access the inside of the machine.

#### 8. Paper tray 1, 2

Load paper here.


#### 9. Lower Paper Trays (optional)

Load paper here.

#### 10. Operation switch

Press to turn the power on (the operation switch indicator lights up). To turn the power off, press again (the operation switch indicator goes off).

See "Turning On/Off the Power".

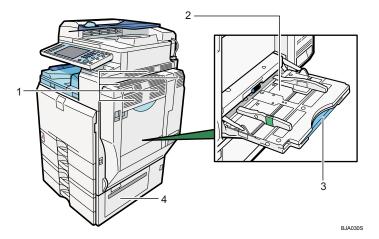

#### 1. Ventilation holes

Prevent overheating.

#### 2. Bypass Tray


Use to copy or print onto OHP transparencies, adhesive labels, translucent paper, envelopes, and custom size paper.

#### 3. Extender

Pull this extender out when loading sheets larger than A4D in the bypass tray.

#### 4. Lower Right Cover

Open this cover when a paper jam occurs.

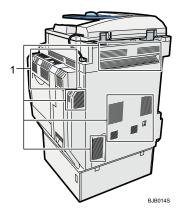

#### 1. Ventilation holes

Prevent overheating.

## ■ Reference


- p.55 "Options"
- p.60 "Control Panel"
- p.71 "Turning On/Off the Power"

# Guide to components of type 3 and 4

This section introduces the names and functions of the components of type 3 and 4.

# **Important**

• Do not obstruct the ventilation holes by placing objects near them or leaning things against them. If the machine overheats, a fault might occur.

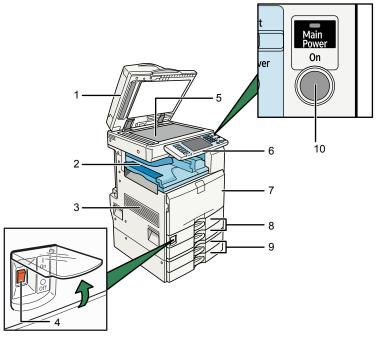

BJB023S

#### 1. Auto Document Feeder (ADF)

If you load a stack of originals in the ADF, the ADF will automatically feed the originals one by one. This document feeder can be used for two-sided originals.

#### 2. Internal Tray 1

Copied/printed paper and fax messages are delivered here.

#### 3. Ventilation holes

Prevent overheating.

#### 4. Main power switch

If the machine does not operate after turning on the operation switch, check if the main power switch is turned on. If it is off, turn it on.

See "Turning On/Off the Power".

#### 5. Exposure glass

Place originals here face down.

#### 6. Control panel

See "Control Panel".

#### 7. Front Cover

Open to access the inside of the machine.

## 8. Paper tray 1, 2

Load paper here.


### 9. Lower Paper Trays (optional)

Load paper here.

#### 10. Operation switch

Press to turn the power on (the operation switch indicator lights up). To turn the power off, press again (the operation switch indicator goes off).

See "Turning On/Off the Power".

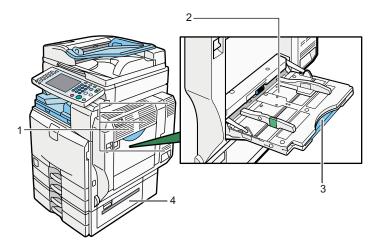

#### 1. Ventilation holes

Prevent overheating.

#### 2. Bypass Tray


Use to copy or print onto OHP transparencies, adhesive labels, translucent paper, envelopes, and custom size paper.

#### 3. Extender

Pull this extender out when loading sheets larger than A4□ in the bypass tray.

#### 4. Lower Right Cover

Open this cover when a paper jam occurs.

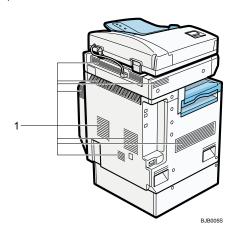

#### 1. Ventilation holes

Prevent overheating.

## Reference


- p.55 "Options"
- p.60 "Control Panel"
- p.71 "Turning On/Off the Power"

# About the guide on the internal tray 2 (optional)

If printed sheets come out curled, raise the guide on the internal tray 2.


### To raise the guide on the internal tray 2

Push the lever that is on the underside of the internal tray 2 inward.

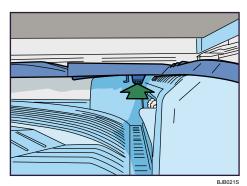

#### To lower the guide on internal tray 2

Push down on the top surface of the guide.

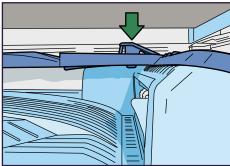

BJB022S

# **Options**


This section introduces the names and functions of main optional parts.

# **External options**

This section provides explanations about external options.

## External options for type 1 and 2

This section provides explanations about external options for type 1 and 2.

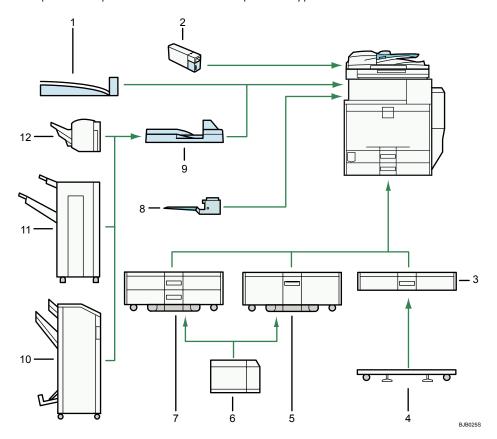

## 1. Internal shift tray

Sorts and stacks multiple sheets of paper.

#### 2. Media slot

With this media slot, you can save scan files on a removable memory device.

#### 3. Lower paper tray

Holds up to 550 sheets of paper.

#### 4. Caster Table for Lower paper tray

To use the lower paper tray, attach the caster table.

#### 5. Tray 3 (LCT)

Holds up to 2,000 sheets of paper.

#### 6. Large capacity tray (LCT)

Holds up to 1,200 sheets of paper.

#### 7. Lower paper trays

Consists of two paper trays. Holds up to 1,100 sheets of paper. Each paper tray holds 550 sheets.

#### 8. Internal tray 2 (1 bin tray)

If you select this as the output tray, copied/printed paper or fax messages are delivered here face down.

#### 9. Bridge unit

Relays paper to the finisher.

#### 10. Booklet Finisher SR3000

Sorts, stacks, staples, and punches multiple sheets of paper. The saddle stitch function can staple multiple sheets of paper in the centre and fold them into booklets. Consists of the following paper trays:

- Finisher upper tray
- · Finisher shift tray
- Finisher booklet tray

#### 11. Finisher SR790

Sorts, stacks, and staples multiple sheets of paper. Consists of the following paper trays:


- Finisher upper tray
- Finisher shift tray

#### 12. Finisher SR3010

Sorts, stacks, and staples multiple sheets of paper.

## External options for type 3 and 4

This section provides explanations about external options for type 3 and 4.

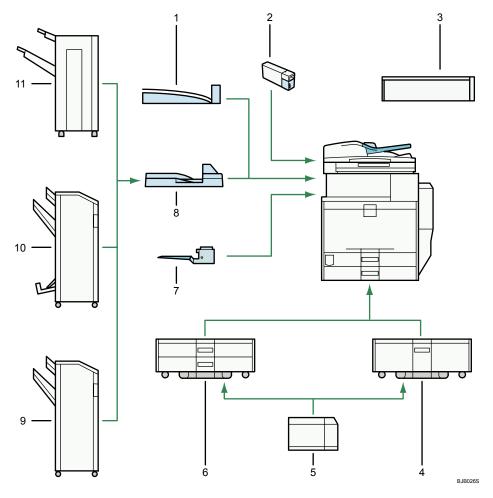

#### 1. Internal shift tray

Sorts and stacks multiple sheets of paper.

#### 2. Media slot

With this media slot, you can save scan files on a removable memory device.

#### 3. Scanner Accessibility Unit

This unit lets you operate the machine or scan documents from the side instead of using the control panel on the machine.

## 4. Tray 3 (LCT)

Holds up to 2,000 sheets of paper.

#### 5. Large capacity tray (LCT)

Holds up to 1,200 sheets of paper.

#### 6. Lower paper trays

Consists of two paper trays. Holds up to 1,100 sheets of paper. Each paper tray holds 550 sheets.

#### 7. Internal tray 2 (1 bin tray)

If you select this as the output tray, copied/printed paper or fax messages are delivered here face down.

#### 8. Bridge unit

Relays paper to the finisher.

#### 9. Finisher SR3030

Sorts, stacks, staples, and punches multiple sheets of paper. Consists of the following paper trays:

- Finisher upper tray
- Finisher shift tray

#### 10. Booklet Finisher SR3020

Sorts, stacks, staples, and punches multiple sheets of paper. The saddle stitch function can staple multiple sheets of paper in the centre and fold them into booklets. Consists of the following paper trays:

- Finisher upper tray
- · Finisher shift tray
- · Finisher booklet tray

#### 11. Finisher SR790

Sorts, stacks, and staples multiple sheets of paper. Consists of the following paper trays:

- Finisher upper tray
- · Finisher shift tray



 When the Scanner Accessibility Unit is installed, the control panel and the scanner unit on the machine cannot be used.

## Internal options

This section describes the options that can be installed in the machine.

• Fax unit

Allows you to use the facsimile function.

• Extra G3 Interface Unit

This lets you add a G3 fax line.

PictBridge card

Allows you to directly print images taken with a PictBridge-compatible digital camera.

• IEEE 1284 Interface Board

Allows you to connect to an IEEE 1284 cable.

Wireless LAN board

Allows you to install a wireless LAN interface.

• Bluetooth interface unit

Allows you to expand the interface.

• Gigabit Ethernet (1000BASE-T)

Allows you to communicate over 1000BASE-T.

• File Format Converter

Allows you to download documents from the Document Server stored by copier and printer functions. See "Downloading Stored Documents with Web Image Monitor", Copy and Document Server Reference.

• Copy Data Security Unit

If a document containing embedded text for unauthorized copy guard is copied, protected pages are greyed out in the copy.

• DataOverWriteSecurity Unit

Allows you to erase data that is stored on the hard disk.

• HDD Encryption Unit

Allows you to encrypt data that is stored on the hard disk.

VM card

With this card, you can install embedded software architecture applications.

Browser Unit

With this, you can display on the machine's control panel the data from the server in HTML. You can send scan files from the displayed screen.



 Only one of the following options can be installed on the machine at any one time: IEEE 1284 interface board, Wireless LAN board, Bluetooth interface unit.


# **Control Panel**

This section introduces the names and functions of the components on the control panel.



 Do not turn off the main power switch while the operation switch indicator is lit or blinking. Doing so may damage the hard disk.

This illustration shows the control panel of the machine with options fully installed.

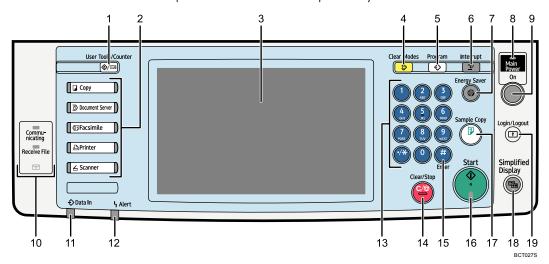

### 1. [User Tools/Counter] key

• User Tools

Press to change the default and conditions to meet your requirements. See "Accessing User Tools", Network and System Settings Guide .

Counter

Press to check or print the counter value. See "Counter".

Enquiry

Press to find out where to order expendable supplies and where to call when a malfunction occurs. You can also print these details. See "Enquiry".

#### 2. Function keys

Press to display the operation screen of one of the following functions: copy, document server, facsimile, printer, or scanner.

The indicator of the selected function goes on. See "Changing Modes".

#### 3. Display panel

Displays keys for each function, operation status, or messages. See "Display Panel".

#### 4. [Clear Modes] key

Press to clear the current settings.

### 5. [Program] key (copier, Document Server, facsimile, and scanner mode)

- Press to register frequently used settings, or to recall registered settings (except Document Server mode).
   See "Registering Frequently Used Functions", Copy and Document Server Reference , "Programs", Facsimile Reference , and "Programs", Scanner Reference .
- Press to program defaults for the initial display when modes are cleared or reset, or immediately after the operation switch is turned on. See "Registering the Initial Display's Default Functions", Copy and Document Server Reference , "Setting Transmission Function Defaults", Facsimile Reference , and "Registering the Default Values of the Scanner's Initial Display", Scanner Reference.

#### 6. [Interrupt] key

Press to make interrupt copies. See "Interrupt Copy", Copy and Document Server Reference.

#### 7. [Energy Saver] key

Press to switch to and from Energy Saver mode. See "Saving Energy".

#### 8. Main power indicator

The main power indicator goes on when you turn on the main power switch.

#### 9. Operation switch

Press to turn the power on (the operation switch indicator goes on). To turn the power off, press again (the operation switch indicator goes off). See "Turning On the Power".

#### 10. Communicating indicator, Receiving File indicator, Confidential File indicator

· Communicating indicator

Lights continuously during data transmission and reception.

· Receiving File indicator

Lights continuously while data other than personal box or Memory Lock file is being received and stored in the fax memory.

See "Substitute Reception", Facsimile Reference.

• Confidential File indicator

Lights continuously while personal box data is being received.

Blinks while Memory Lock file is being received.

See "Personal Boxes", Facsimile Reference and "Printing a File Received with Memory Lock", Facsimile Reference.

#### 11. Data In indicator (facsimile and printer mode)

Flashes when the machine is receiving print jobs or LAN-Fax documents from a computer. See Facsimile Reference and Printer Reference.

#### 12. Alert indicator

Lights continuously if an error has occurred.

#### 13. Number keys

Use to enter the numbers for copies, fax numbers and data for the selected function.

#### 14. [Clear/Stop] key

• Clear

Press to delete a number entered.

• Stop

Press to stop a job in progress, such as copying, scanning, faxing, or printing.

#### 15. [#] key (Enter key)

Press to confirm values entered or items specified.

#### 16. [Start] key

Press to start copying, printing, scanning, or sending.

## 17. [Sample Copy] key

Press to make a single set of copies or prints to check print quality before making multiple sets. See "Sample Copy", Copy and Document Server Reference.

#### 18. [Simplified Display] key

Press this to switch to the Simplified Display.

#### 19. [Login/Logout] key

Press this to log in or log out.

### Reference

- p.63 "Display Panel"
- p.63 "Simplified Display"
- p.69 "Changing Modes"
- p.71 "Turning On/Off the Power"
- p.74 "Saving Energy"
- p.123 "Enquiry"
- p.127 "Counter"

# **Display Panel**

The display panel shows machine status, error messages, and function menus.



 Don't apply strong impact or force to the screen. Or it may be damaged. Maximum force allowable is approx. 30N (approx. 3 kgf). (N = Newton, kgf = Kilogram force. 1 kgf = 9.8N.)

The function items displayed serve as selector keys. You can select or specify an item by lightly pressing them

When you select or specify an item on the display panel, it is highlighted like harmon to be used.

The copy display is set as the default screen when the machine is turned on.






The display panels shown in this manual's illustrations are taken from a machine on which all options
are installed.

# Simplified Display

This section explains how to switch to the simplified display.

When you press the [Simplified Display] key, the screen changes from the initial display to the simplified display.

Letters and keys are displayed at a larger size, making operations easier.

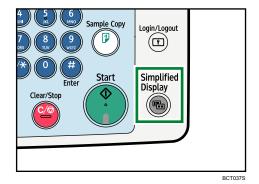

## Example of a simplified display

This illustration shows the copier function's simplified display.



#### 1. [Key Colour]

Press to increase screen contrast by changing the colour of the keys. This is available only for the simplified display.



- To return to the initial display, press the [Simplified Display] key again.
- Certain keys do not appear on the simplified display.

# 2

# When the Authentication Screen is Displayed

This section explains the authentication screen.



- Ask the user administrator for the login user name, login password, and user code. For details about user authentication, contact your administrator.
- User code to enter on User Code Authentication is the numerical value registered in the address book as "login user name".

If Basic Authentication, Windows Authentication, LDAP Authentication, or Integration Server Authentication is active, the authentication screen appears on the display. The machine only becomes operable after entering your own login user name and login password. If User Code Authentication is active, you cannot use the machine until you enter the user code.

If you can use the machine, you can say that you are logged in. When you go out of the operable state, you can say that you are logged out. After logging in the machine, be sure to log out of it to prevent unauthorized usage.




• If authentication fails, the "Authentication has failed." message appears. Check that the login user name and login password are correct.

# User Code Authentication (Using the Control Panel)

This section explains the procedure for logging in to the machine using the control panel while User Code Authentication is active.

If User Code Authentication is active, a screen prompting you to enter a user code appears.

1. Enter a user code (up to eight digits), and then press [OK].

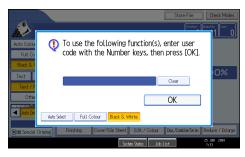

- **U**Note
  - To log off, do one of the following:
    - Press the operation switch.

9

• Press the [Energy Saver] key after jobs are completed.

## User Code Authentication (Using a Printer Driver)

This section explains the procedure for logging in to the machine using a printer driver while User Code Authentication is active.

If User Code Authentication is active, specify the user code in the printer properties of the printer driver. For details, see the printer driver Help.



• When logged in through User Code Authentication, you do not have to log out.

# Login (Using the Control Panel)

This section explains the procedure for logging in to the machine when Basic Authentication, Windows Authentication, LDAP Authentication, or Integration Server Authentication is set.

1. Press [Login].



2. Enter a login user name, and then press [OK].



3. Enter a login password, and then press [OK].



When the user is authenticated, the screen for the function you are using appears.




• If authentication fails, the "Authentication has failed." message appears. Check that the login user name and login password are correct.

## Logout (Using the Control Panel)

This section explains the procedure for logging out the machine when Basic Authentication, Windows Authentication, LDAP Authentication, or Integration Server Authentication is set.



- To prevent use of the machine by unauthorized persons, always log out when you have finished using the machine.
- 1. Press the [Login/Logout] key.

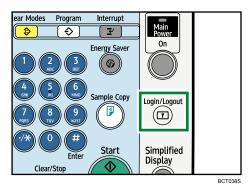

#### 2. Press [Yes].



## Login (Using a Printer Driver)

This section explains the procedure for logging in to the machine using a printer driver.

If Basic Authentication, Windows Authentication, LDAP Authentication, or Integration Server Authentication is active, make encryption settings in the printer properties of the printer driver, and then specify a login user name and password. For details, see the printer driver Help.



• When logged in using a printer driver, you do not have to log out.

# Login (Using Web Image Monitor)

This section explains the procedure for logging in to the machine via Web Image Monitor.

- 1. Click [Login].
- 2. Enter a login user name and password, and then click [Login].



• For user code authentication, enter a user code in [User Name], and then click [OK].

# Logout (Using Web Image Monitor)

This section explains the procedure for logging out the machine via Web Image Monitor.


1. Click [Logout] to log out.



Delete the cache memory of a Web browser after logging out.

# **Changing Modes**

This section explains how to change modes.

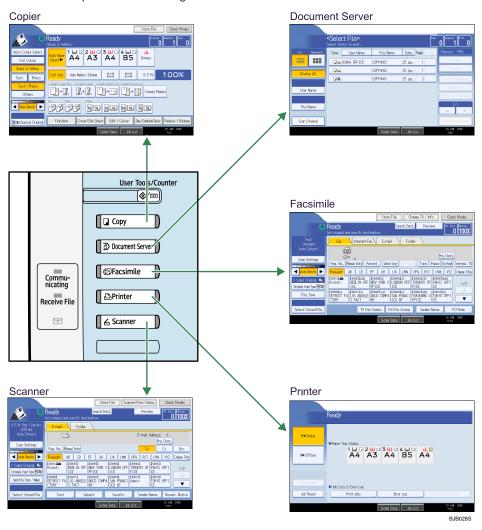

- **U** Note
  - You cannot switch modes in any of the following situations:
    - When scanning a fax message for transmission
    - During immediate transmission
    - When accessing User Tools / Counter / Enquiry
    - During interrupt copying
    - During On-hook dialling for fax transmission
    - While scanning an original

2

The copy display is set as the default screen when the machine is turned on. You can change this
default setting under Function Priority. See "System Settings", Network and System Settings Guide

## **System Reset**

This section explains System Reset.

After finishing a job, the machine waits a specified length of time and then restores its settings to the default values specified under Function Priority. This function is called "System Reset". For the procedure for specifying default settings under Function Priority, see "System Settings", Network and System Settings Guide .

To change the length of time that the machine waits before restoring its settings to their default values, use the System Auto Reset Timer setting. See "System Settings", Network and System Settings Guide.

# **Turning On/Off the Power**

This section discusses how to turn on/off the power.

#### Power supply

This machine has two power switches: operation switch and main power switch.

- Operation switch (right side of the control panel)
   Press to activate the machine. When the machine has finished warming up, you can make use of each function.
- Main power switch (left side of the machine)
   Turning off this switch makes the main power indicator on the right side of the control panel go off. When this is done, machine power is completely off. When the fax unit (optional) is installed, fax files in memory may be lost if you turn this switch off. Use this switch only when necessary.



This machine automatically enters Energy Saver mode or turns itself off if you do not use it for a while.
 To specify the time that the machine waits before it enters Energy Saver mode and/or turns itself off, configure the Energy Saver Timer and/or Auto Off Timer setting, respectively. See "System Settings", Network and System Settings Guide.


## Turning On the Main Power

This section explains how to turn on the main power.



- Do not turn off the main power switch immediately after turning it on. Doing so may result in damage to the hard disk or memory, leading to malfunctions.
- 1. Make sure the power cord is firmly plugged into the wall outlet.
- 2. Open the main power switch cover, and turn on the main power switch.

The main power indicator goes on.

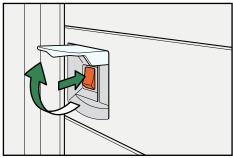

BJA001S




After you switch the main power on, a screen may appear to indicate that the machine is initializing.
 Do not switch the power off during this process. Initialization takes about three minutes.

### **Turning On the Power**

This section explains how to turn on the power.

1. Press the operation switch.

The operation switch indicator goes on.

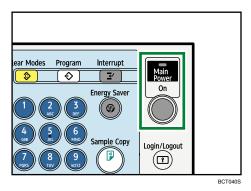

Note


• If the power does not come on when the operation switch is pressed, check the main power switch is on. If it is off, turn it on.

# **Turning Off the Power**

This section explains how to turn off the power.

- 1. Make sure the ADF is in the right position.
- 2. Press the operation switch.

The operation switch indicator goes off.

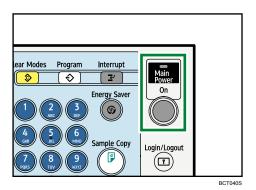



- Even if you press the operation switch, the operation switch indicator does not go out, but blinks in the following cases:
  - During communication with external equipment.
  - When the hard disk is active.
  - When the internal cooling fan is active.

# Turning Off the Main Power

This section explains how to turn off the main power.

# 

- Do not turn off the main power switch when the operation switch indicator is lit or blinking. Doing so
  may result in damage to the hard disk or memory.
- Make sure to turn off the main power switch before pulling out the power plug. Not doing so may
  result in damage to the hard disk or memory.
- 1. Make sure the operation switch indicator is not lit.
- 2. Open the switch cover, and then turn off the main power switch.

The main power indicator goes out.



- When the main power switch is turned off while using the fax function, waiting fax and print jobs may be cancelled, and incoming fax documents not received. If you have to turn off this switch for some reason, make sure 100% is shown as available memory on the screen before turning off the main power switch or unplugging the power cord. Fax files in memory are deleted an hour after you turn off the main power switch or unplug the power cord.
- For details, see "Turning Off the Main Power / In the Event of Power Failure", Troubleshooting

### Saving Energy

This section explains the machine's energy saving functions.

This machine has the following energy saving functions.

#### **Energy Saver**

If you do not use the machine for a certain period after an operation, or when you press the [Energy Saver] key, the display disappears and the machine goes into Energy Saver mode. When you press the [Energy Saver] key again, the machine returns to the ready condition. The machine uses less electricity in Energy Saver mode.

You can change the amount of time the machine waits before switching to Energy Saver mode after copying has finished or the last operation is performed under Energy Saver Timer.

#### **Auto Off**

The machine automatically turns itself off when the job is finished, after a certain period of time has elapsed. This function is called "Auto Off".

You can change the Auto Off time under Auto Off Timer.



- See "System Settings", Network and System Settings Guide .
- The Energy Saver and Auto Off functions will not operate in the following cases:
  - When a warning message appears
  - When the service call message appears
  - When paper is jammed
  - When the cover is open
  - When the "Add Toner" message appears
  - · When toner is being replenished
  - When the User Tools/Counter/Enquiry screen is displayed
  - When fixed warm-up is in progress
  - · When data is being processed
  - When operations are suspended during printing
  - When the On-hook dialing function is in use
  - · When a recipient is being registered in the address list or group dial list
  - · When the Data In indicator is on or blinking
  - When the screen of stored document under the printer function is displayed
  - When the internal cooling fan is active

# 3. Adding Paper

This chapter describes recommended paper sizes and types, and how to load paper into the paper tray.

# **Loading Paper**

This section describes how to load paper into the paper tray.



• When loading paper, take care not to trap or injure your fingers.

### **U** Note

- Fan the paper before loading.
- Straighten curled or warped paper before loading.
- For details about paper sizes and types, see "Recommended Paper Sizes and Types".
- To load paper in the bypass tray, see "Copying from the Bypass Tray", Copy and Document Server Reference.

## Reference

• p.86 "Recommended Paper Sizes and Types"


## Loading Paper into the Paper Trays

This section describes how to load paper into the paper trays.


## Mportant (

- Various sizes of paper can be loaded in the paper trays by adjusting the positions of side fences and end fence.
- Check the paper edges are aligned with the right side.
- Each tray can hold up to 550 sheets of paper. Do not stack paper over the limit mark.



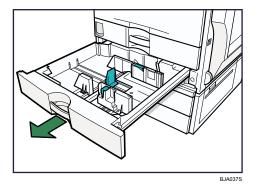

2. Square the paper and load it print side up.

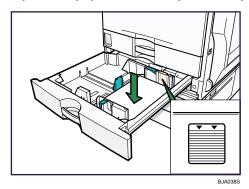

3. Carefully push the paper tray fully in.


# Loading Paper into Tray 3 (LCT)

This section describes how to load paper into tray 3 (LCT).


## Mportant !

- Tray 3 (LCT) uses A4D paper exclusively. Only load A4D paper. If you want to load  $8^{1}/_{2} \times 11D$ , contact your service representative.
- Align the paper stacks and load them against the left and right walls, or a paper misfeed might occur.
- Each tray hold up to 1,000 sheets of paper. Do not stack paper over the limit mark.

1. Carefully pull out tray 3 (LCT) until it stops.

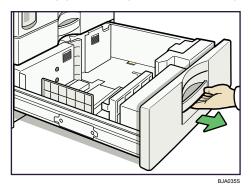

2. With the print side up, align all four sides of two paper stacks, and then load them next to each other in the tray.

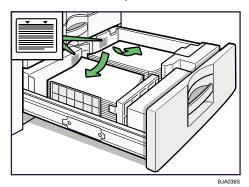

3. Carefully push the paper tray fully in.


# Loading Paper into the Large Capacity Tray (LCT)

This section describes how to load paper into the large capacity tray (LCT).




- The large capacity tray (LCT) uses A4 $\square$  paper exclusively. If you want to load  $8^1/_2 \times 11^\square$  contact your service representative.
- Align the paper stacks and load them against the left and right walls, or a paper misfeed might occur.
- The tray can hold up to 1,200 sheets of paper. Do not stack paper over the limit mark.

## 1. Open the top cover of the large capacity tray (LCT).

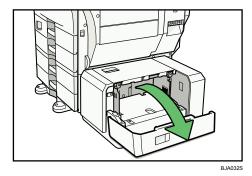

2. Load the paper in the tray along the edge on the back.


Load the paper print side down.

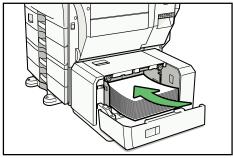

BJA033S

### 3. Press the [Down] key.

The bottom plate is moving down.

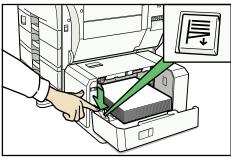

BJA03

- 4. Load paper by repeating steps 2 and 3.
- 5. Close the cover of large capacity tray (LCT).

## Orientation-Fixed Paper or Two-Sided Paper

This section describes loading paper that has a specified orientation and printing side (such as letterhead paper).

Orientation-fixed (top to bottom) or two-sided paper (for example, letterhead paper, punched paper, or copied paper) might not print correctly, depending on how the originals and paper are placed. Set [Letterhead Setting] to [Yes] in [Input/Output] under [Copier/Document Server Features], and then place the original and paper as shown below. For details about Letterhead Setting, see "Copier/Document Server Features", Copy and Document Server reference. For details about printing with the printer function, see "Printing on a Letterhead Paper", Printer Reference.

#### **Original Orientation**

Exposure glass		IA.	OF .
	• copy  • scanner	R	Œ

## **Paper Orientation**

		Б Т			Bypass Tray	
Сору	Mode	Paper Tray or Tray 3 (LCT)	Large Capacity Tray (LCT)	When originals are placed on the exposure glass	When originals are placed on the ADF	
	1 Sided	R			- T	
<b>.</b>	2 Sided		R			
	1 Sided	<b>~</b>		50	ı	
<u> </u>	2 Sided	50				

R	: Shows the paper frontside facing up.	#	: Shows the paper backside facing up.	
				BBR036

<sup>\*1</sup> When the paper size is specified.

# Changing the Paper Size

This section describes how to change the paper size.

### Mportant (

 If you want to change the paper size set in tray 3 (LCT) or large capacity tray (LCT), contact your service representative.



- Be sure to select the paper size with User Tools. If you do not, misfeeds might occur. For details about Tray Paper Size, see "System Settings", Network and System Settings Guide.
- Fan the paper before loading.
- Straighten curled or warped paper before loading.
- For details about paper sizes and types, see "Recommended Paper Sizes and Types".

### ■ Reference


• p.86 "Recommended Paper Sizes and Types"

# Changing the Paper Size in the Paper Trays

This section describes how to change the paper size in the paper trays.


## 

- If a paper tray is pushed vigorously when putting it back into place, the position of the tray's side fences may slip out of place.
- Do not stack paper over the limit mark.
- Check the paper edges are aligned with the right side.
- Slide the side fences until they are aligned with the paper size, and then re-lock the side fences.
- 1. Check that paper in the paper tray is not being used, and then pull the tray carefully out until it stops.

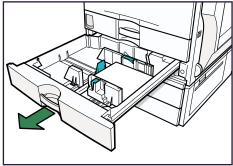


BJA039S


- 2. Remove paper if loaded.
- 3. Release the lock on the side fences.

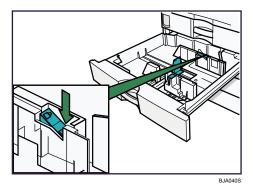

4. While pressing down the release lever, slide the side fences until they are aligned with the paper size you want to load.

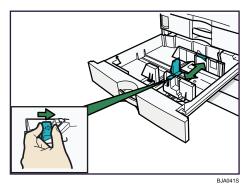


5. Slide the end fence until it is aligned with the size of paper to you want to load.

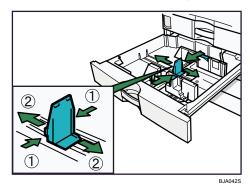

6. Square the paper and load it print side up.

Re-lock the side fences again.



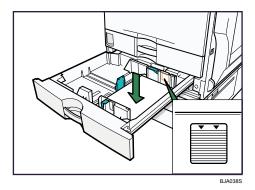


- 7. Carefully slide the paper tray fully in.
- 8. Check the size on the display.

## Changing to a Size That Is Not Automatically Detected

If you load a paper size that is not selected automatically, you need to specify the paper size with the control panel. This section describes how to load such paper.


1. Press the [User Tools / Counter] key.

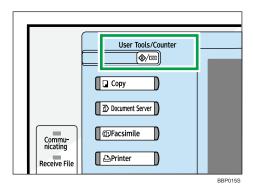


2. Press [System Settings].




3. Press [Tray Paper Settings] tab.

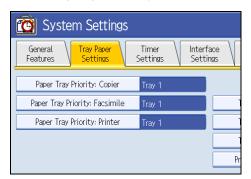


4. Select the tray for which you want to change the paper settings.

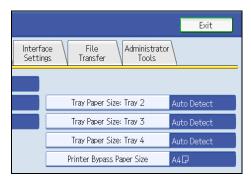

5. Select the loaded paper size and feed direction, and then press [OK].

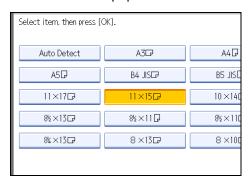

The set paper size and feed direction is displayed.

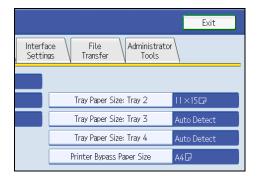

6. Press the [User Tools / Counter] key.

The initial display is shown.



- For details about paper sizes selected automatically, see "Recommended Paper Sizes and Types".
- If you want to print on paper that is selected automatically after printing on a paper size that is not selected automatically, you must return the setting to "Auto Detect". Reload the paper, and select "Auto Detect" in step 5. The setting is returned to "Auto Detect".

## Reference

• p.86 "Recommended Paper Sizes and Types"

# **Recommended Paper Sizes and Types**

This section describes recommended paper sizes and types.

• If you use damp or curled paper, a staple clogging or paper jam may occur.

#### Tray 1

Paper type and weight	Metric version	Inch version	Paper capacity
60 - 105 g/m <sup>2</sup> , 16 - 28 lb.	A4D	8 <sup>1</sup> / <sub>2</sub> × 11□	550 sheets
Thick Paper 106 - 256 g/m <sup>2</sup> , 28 - 68 lb.			

### Tray 2 and lower paper trays (optional)

Paper type and weight	Metric version	Inch version	Paper capacity
60 - 105 g/m <sup>2</sup> , 16 - 28 lb. Thick Paper 106 - 256 g/m <sup>2</sup> , 28 - 68 lb.	*1 A3□, A4□□, A5□, B4□, B5□□, 8 <sup>1</sup> / <sub>2</sub> × 11□	*1 A4 $\square$ , A5 $\square$ , B5 $\square$ , 11 × 17 $\square$ , 8 $^{1}/_{2}$ × 14 $\square$ , 8 $^{1}/_{2}$ × 11 $\square$ $\square$ , 7 $^{1}/_{4}$ × 10 $^{1}/_{2}$ $\square$	550 sheets *7
60 - 105 g/m <sup>2</sup> , 16 - 28 lb. Thick Paper 106 - 256 g/m <sup>2</sup> , 28 - 68 lb.	*2 $8^{1}/_{2} \times 13^{\square}, 8^{1}/_{4} \times 14^{\square}, 8^{1}/_{4} \times 13^{\square}, 8 \times 13^{\square}, 8 \times 10^{\square}, 7^{1}/_{4} \times 10^{1}/_{2}^{\square}, 8K$ $\square$ , $16K^{\square}$ , $11 \times 15$ $\square$ , $10 \times 14^{\square}$	*2 $8^{1}/_{2} \times 13^{\square}, 8^{1}/_{4} \times 14^{\square}, 8^{1}/_{4} \times 13^{\square}, 8 \times 13^{\square}, 8 \times 10^{\square}, 7^{1}/_{4} \times 10^{1}/_{2}^{\square}, 8K$ $\square$ , $16K^{\square}\square$ , $11 \times 15$ $\square$ , $10 \times 14^{\square}$	550 sheets *7

#### Bypass tray

Paper type and	d weight	Metric version	Inch version	Paper capacity
60 - 105 g/m 28 lb.	A	*1 A3ID, A4IDD, A5ID ID, A6ID	*1  11 × 17 $\Box$ , 8 $^{1}/_{2}$ × 11 $\Box\Box$ , 5 $^{1}/_{2}$ × 8 $^{1}/_{2}$	100 sheets

3

Paper type and weight	Metric version	Inch version	Paper capacity
60 - 105 g/m <sup>2</sup> , 16 - 28 lb.	*4  B4□, B5□□, B6□,  11 × 17□, 8¹/ <sub>4</sub> × 14 □, 81/4 × 13□, 8 ×  13□, 8 × 10□,  7¹/ <sub>4</sub> × 10¹/ <sub>2</sub> □□,  5¹/ <sub>2</sub> × 8¹/ <sub>2</sub> □, 8K□,  16K□□, 12 × 18□  11 × 15□, 10 × 14 □	*4  A3□, A4□□, A5□ □, A6□, B4□, B5□ □, B6□, 8¹/2 × 14 □, 8¹/2 × 13□, 8¹/4 × 14□, 8¹/4 × 13□, 8 × 13□, 8 × 10□, 7¹/4 × 10¹/2□ □, 8K□, 16K□□, 12 × 18□, 11 × 15□, 10 × 14□	100 sheets
60 - 105 g/m <sup>2</sup> , 16 - 28 lb.	*5 Custom size Vertical: 90.0 - 305.0 mm Horizontal: 148.0 - 600.0 mm	*5 Custom size Vertical: 3.55 - 12.00 inches Horizontal: 5.83 - 23.62 inches	100 sheets
Thick Paper *6 106 - 256 g/m <sup>2</sup> , 28 - 68 lb.	*1 A3D, A4DD, A5D D, A6D	*1 11 × 17 □, 8 1/2 × 11 □□, 5 1/2 × 8 1/2 □	*7
Thick Paper *6 106 - 256 g/m², 28 - 68 lb.	*4  B4□, B5□□, B6□,  11 × 17□, 8¹/ <sub>4</sub> × 14 □, 8¹/ <sub>4</sub> × 13□, 8 ×  13□, 8 × 10□,  7¹/ <sub>4</sub> × 10¹/ <sub>2</sub> □□,  5¹/ <sub>2</sub> × 8¹/ <sub>2</sub> □, 8K□,  16K□□, 12 × 18□  11 × 15□10 × 14□	*4  A3D, A4DD, A5D  D, A6D, B4D, B5D  D, B6D, 8 <sup>1</sup> / <sub>2</sub> × 14  D, 8 <sup>1</sup> / <sub>2</sub> × 13D,  8 <sup>1</sup> / <sub>4</sub> × 14D, 8 <sup>1</sup> / <sub>4</sub> ×  13D, 8 × 13D, 8 ×  10D, 7 <sup>1</sup> / <sub>4</sub> × 10 <sup>1</sup> / <sub>2</sub> D  D, 8KD, 16KDD, 12  × 14D	*7

Paper type and weight	Metric version	Inch version	Paper capacity
Thick Paper *6	*5	*5	
106 - 256 g/m <sup>2</sup> , 28 - 68 lb.	Custom size Vertical: 90.0 - 305.0 mm	Custom size Vertical: 3.55 - 12.00 inches	
	Horizontal: 148.0 - 600.0 mm	Horizontal: 5.83 - 23.62 inches	
OHP transparencies	A4	8 <sup>1</sup> / <sub>2</sub> × 11	*7 *9
Label paper (adhesive labels)	B4JIS□, A4Ū□	B4JISD, A4DD	1 sheet
Envelope	Com 10 D, Monarch D, C5 D, C6 D, DL Env. D	Com 10 <sup>D</sup> , Monarch <sup>D</sup> , C5 <sup>D</sup> , C6 <sup>D</sup> , DL Env. D	

## Tray 3 (LCT) (optional)

Paper type and weight	Metric version	Inch version	Paper capacity
60 - 105 g/m <sup>2</sup> , 16 - 28 lb.	*10	*10	1,000 + 1,000 sheets
Thick Paper	A4	$8^{1}/_{2} \times 11$	,
106 - 256 g/m², 28 - 68 lb.			

## Large capacity tray (LCT) (optional)

Paper type and weight	Metric version	Inch version	Paper capacity
60 - 105 g/m², 16 -	*10	*10	1200 sheets
28 lb.	A4	$8^{1}/_{2} \times 11$	*7
Thick Paper			
106 - 169 g/m <sup>2</sup> , 28 - 45 lb.			

- \*1 The paper size is detected automatically.
- \*2 Select the paper size in System Settings. For details about Tray Paper Size: Tray 2-4, see "System Settings", Network and System Settings Guide ...

- \*3 Enter the paper size using the number keys in System Settings. For details about Tray Paper Size: Tray 2-4, see "System Settings", Network and System Settings Guide .
- \*4 Press the [#] key, and then select the paper size.
- \*5 Press the [#] key, and then enter the paper size using the number keys.
- \*6 If you want to copy onto thick (105 g/m², 28 lb. or heavier) paper, select [Thick Paper]. See "Copying from the Bypass Tray", Copy and Document Server Reference.
- \*7 When loading paper, make sure the stack height does not exceed the limit mark of the paper tray. See "Loading Paper".
- \*8 If you wish to copy onto OHP transparencies, select [OHP (Transparency)].
- \*9 It is recommended to place one sheet at a time.
- \*10 The paper tray fence is fixed. If you wish to change the size of paper, contact your service representative.

#### **Paper Thickness**

Paper Thickness	Metric version	Inch version
Plain Paper 1	60 - 74 g/m <sup>2</sup>	16 - 20 lb.
Plain Paper 2	75 - 90 g/m <sup>2</sup>	20 - 24 lb.
Middle Thick	91 - 105 g/m <sup>2</sup>	24 - 28 lb.
Thick Paper 1	106 - 169 g/m <sup>2</sup>	28 - 45 lb.
Thick Paper 2	170 - 220 g/m <sup>2</sup>	45 - 58.5 lb.
Thick Paper 3	221 - 256 g/m <sup>2</sup>	59 - 68 lb.

# Note

- Certain types of paper produce noise when delivered. This noise does not indicate a problem and print quality is unaffected. (Glossy paper and OHP transparencies can produce noise when delivered.)
- When using translucent paper or label paper, make sure to select the appropriate paper type. For
  details about Paper Type: Bypass Tray, see "System Settings", Network and System Settings Guide
- When loading paper in the paper trays 1 2, the tray 3 (LCT), and the lower paper trays, place the print side face up.
- When loading paper in the bypass tray, and the large capacity tray, place the print side face down.
- When you use the bypass tray, it is recommended to set the paper direction to  $\Box$ .
- Do not use paper designed for inkjet printers, as these may stick to the fusing unit and cause a misfeed.
- Do not use colour OHP transparencies with coatings that are easily melted by heat.

- When printing on OHP transparencies, press [Bypass], and the [#] key, and then select the paper size.
- When you load OHP transparencies, check the front and back of the sheets, and place them correctly, or a misfeed might occur. Use A4D or 8<sup>1</sup>/<sub>2</sub> × 11D size transparencies, and specify their size. For details, see Copy and Document Server Reference, and Printer Reference.
- When you use OHP transparencies, fan them for each use.
- Flatten out curled sheets before loading them.
- We recommend that you use a 4000ANSI lumen or brighter overhead projector to project OHP transparencies.
- If multiple sheet feeding occurs, load sheets one by one.
- When you load label paper, set the paper direction to  $\mathbb{D}$ .
- To print on envelopes from the bypass tray: select System Settings, [Tray Paper Settings], and then, for each tray's [Paper Type], be sure to set [Paper Type] to [Envelope], and [Paper Thickness] to [Thick Paper 2].
- To print on coated paper from the bypass tray, Tray 1, 2, 3, 4, Tray 3 (LCT), or the large capacity tray (LCT): select System Settings, [Tray Paper Settings], and then, for each tray's [Paper Type] be sure to set [Paper Type] to [Coated Paper], and [Paper Thickness] to [Thick Paper 1].
- To print on high-gloss coated paper from the bypass tray, Tray 1, 2, 3, 4, Tray 3 (LCT), or the large
  capacity tray (LCT): select System Settings, [Tray Paper Settings], and then, for each tray's [Paper
  Type], be sure to set [Paper Type] to [Coated Paper: Gloss].
- Before loading coated or glossy sheets, be sure to fan them thoroughly. If sheets feed in together, become jammed, or produce strange noises when delivered, load them one by one from the bypass tray.
- When copying or printing onto letterhead paper, the paper placing orientation is different depends on which function you are using. See "Orientation-fixed paper or two-sided paper".
- If you load paper of the same size in two or more trays, the machine automatically shifts to the other tray when the first tray in use runs out of paper. This function is called Auto Tray Switching. (However, if the paper type of one tray is recycled or special paper, the settings of the other trays must be the same for the Auto Tray Switching function to work.) This saves interrupting a copy run to replenish paper when making a large number of copies. You can set the paper type of the paper trays under Paper Type: Tray 1-4, and Paper Type: LCT. See "System Settings", Network and System Settings Guide. For the setting procedure of the Auto Tray Switching function, see "Copier/Document Server Features", Copy and Document Server Reference.
- When copying or printing onto prepunched paper, the copy/print speed is slower than usual.
- The paper types you can select in System Settings are only general classifications. Copy quality for every kind of paper in a classification is not guaranteed. See "Unusable Paper" for more information.

## Reference

• p.75 "Loading Paper"

- p.79 "Orientation-Fixed Paper or Two-Sided Paper"
- p.96 "Unusable Paper"

# **Envelopes**

This section describes loading envelopes.



• Only envelopes (1) - (3) as shown below are supported.

Envelope types	Supported/Not supported
(1)	Supported *1
(2) BAV027S	Supported *1
(3) BAV028S	Supported *1

- \*1 Misfeeds might also occur when using envelopes (1) (3) depending on the length and shape of the flaps.
- To print on envelopes, load them on the bypass tray and be sure to specify the appropriate paper type.

See "Copying from the Bypass Tray", Copy and Document Server Reference , and "Setting Paper on the Bypass Tray", Printer Reference.

• Specifications for envelopes are as follows:

	Metric version	Inch version
Weight	72 - 90 g/m <sup>2</sup>	19 - 24 lb.

	Metric version	Inch version
Recommended weight and size	80 g/m <sup>2</sup> , 114 × 229 mm (C5/6)	24 lb., $4^{1}/_{8} \times 9^{1}/_{2}$ (Com10)
	80 g/m <sup>2</sup> , 114 × 162 mm (C6)	
	95 g/m $^2$ , 162 × 229 mm (C5)	


- Before loading envelopes, flatten their leading edges (the edge going into the machine) by running a pencil or ruler across them.
- Some kinds of envelope might cause misfeeds, wrinkles or print poorly.
- Print quality on envelopes may be uneven if parts of an envelope have differing thicknesses. Print one or two envelopes to check print quality.
- In a hot and humid environment, the envelope might be output creased or improper printing quality.

# **Thick Paper**


This section gives you various details about and recommendations concerning thick paper.

When loading thick paper of 170 - 256 g/m<sup>2</sup> (45 - 68) in paper trays 1 - 3 or in the bypass tray, follow the recommendations below to prevent misfeeds and loss of image quality.

- Store all paper together in the same place a room where the temperature is 20 25°C (68 77°
   F) and humidity is 30 65%.
- When loading thick sheets, be sure to load at least 20 sheets. Also, be sure to position the side fences flush against the paper stack.
- Smooth out any curls in the paper before loading it.
- Jams and misfeeds can occur when printing on thick glossy sheets. To prevent such problems, be sure
  to fan glossy sheets thoroughly before loading them. If sheets continue to become jammed or feed in
  together even after they are fanned, load them one by one from the bypass tray.
- When loading thick paper in paper trays 1 3, set the paper direction according to its grain, as shown in the following diagram.

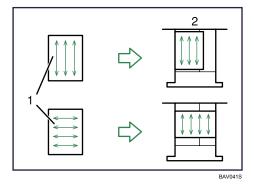

- 1: Direction of paper grain
- 2: Direction in which to set thick paper in paper trays 1 3
- When loading thick paper in the bypass tray, set the paper direction according to its grain, as shown in the following diagram.

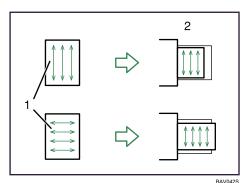

3

- 1: Direction of paper grain
- 2: Direction in which to set thick paper in the bypass tray



- Even if thick paper is loaded as described above, normal operations and print quality might still not be possible, depending on the paper type.
- Prints might have prominent vertical creases.
- Prints might be noticeably curled. Flatten out prints if they are creased or curled.

# **Unusable Paper**

This section describes paper unusable on this machine.



 Do not use aluminum foil, carbon paper, or similar conductive paper to avoid a fire or machine failure.

## Mportant !

- To prevent faults, do not use any of the following kinds of treated paper:
  - Paper for inkjet printers
  - Thermal fax paper
  - Art paper
  - Aluminum foil
  - Carbon paper
  - Conductive paper
  - Paper with perforated lines
  - Hemmed-edge paper
  - Colour OHP transparencies with easily melted coatings
- Faults can occur if you copy or print onto sides that are already printed. Take care to copy or print
  onto unprinted sides only.



- To prevent misfeeds, do not use the following kinds of paper:
  - Bent, folded, or creased paper
  - · Perforated paper
  - Slippery paper
  - Torn paper
  - Rough paper
  - Thin paper with little stiffness
  - Paper with a dusty surface
- If you copy or print onto rough grain paper, the output image might be blurred.
- Do not load sheets that have already been printed onto by another machine. (Sheets can become jammed if they have been improperly stored.)

# Paper Storage

This section describes how to store paper.

- When storing paper, the following precautions should always be followed:
  - Do not store paper where it will be exposed to direct sunlight.
  - Avoid storing paper in humid areas (humidity: 70% or less).
  - Store on a flat surface.
  - Do not store paper vertically.
- Under high temperature and humidity conditions, or low temperature and humidity conditions, store paper in plastic bags.

# 4. Adding Toner and Staples

This chapter explains how to replenish toner and staples when they run out.

# **Adding Toner**

This section describes how to replace toner.

### **⚠ WARNING**

• Do not incinerate used toner or toner containers. Toner dust might ignite when exposed to an open flame. Dispose of used toner containers in accordance with local regulations.

## **ACAUTION**

• Keep toner (used or unused) and toner containers out of reach of children.

## **CAUTION**

• If toner or used toner is inhaled, gargle with plenty of water and move into a fresh air environment. Consult a doctor if necessary.

## **ACAUTION**

• If toner or used toner gets into your eyes, flush immediately with large amounts of water. Consult a doctor if necessary.

# **ACAUTION**

• If toner or used toner is swallowed, dilute by drinking a large amount of water. Consult a doctor if necessary.

# **ACAUTION**

- Avoid getting toner on your clothes or skin when removing a paper jam or replacing toner. If your skin comes into contact with toner, wash the affected area thoroughly with soap and water.
- If toner gets on your clothing, wash with cold water. Hot water will set the toner into the fabric and may make removing the stain impossible.

# **ACAUTION**

• Do not open toner containers forcefully. Toner can spill, dirtying your clothes or hands, and possibly resulting in accidental ingestion.

### Mportant !

- Always add toner when the machine instructs you.
- Fault may occur if you use toner other than the recommended type.
- · When adding toner, do not turn off the operation switch. If you do, settings will be lost.
- Do not repeatedly install and remove toner cartridges. This will result in toner leakage.
- Do not shake the removed toner cartridge. Remaining toner might scatter.



- If the message "La Check toner cartridge replacement(s)." appears, the toner has almost run out. Have a replacement toner cartridge at hand.
- You can check name of the required toner name and the replacement procedure using the "Add Toner" screen.
- Press [System Status] to check contact number where you can order supplies. See "Checking Machine Status and Settings", Troubleshooting .
- You can add all four colour toners in the same way.

## **Replacing Toner**

This section describes how to remove toner.



- Open the front cover of the machine.
- Pull out the toner cartridge slowly.



• Take out the new toner cartridge from the box.



 Hold the toner cartridge and shake it five or six times.



- Check the orientation of the toner cartridge and insert it carefully.
- · Close the front cover of the machine.

BHL001S

### Sending Faxes or Scanned Documents When Toner Has Run Out

When the machine has run out of toner, the indicator on the display lights. Note that even if there is no toner left, you can still send faxes or scanned documents.



- If number of communications executed after the toner has run out and not listed in the automatically output Journal exceeds 200, communication is not possible.
- 1. Make sure the machine is in facsimile or scanner mode.
- 2. Press [Exit], and then perform transmission operation.

The error message disappears.



- Any reports are not printed.
- If the fax or scanner screen does not appear in step 1, press the [Facsimile] key or the [Scanner] key.

#### **Used Toner**

Toner cannot be re-used.

Bring the stored used container to your sales representative or service representative for recycling through our recycling system. If you discard it on your own, treat it as general plastic waste material.

# **Adding Staples**

This section describes what to do when staples need replacing.

## **ACAUTION**

• Keep your hands clear of the booklet finisher tray when pulling out or pushing in the finisher's staple unit. You can trap your fingers if you do not.

## 

• Stapling failures or jams may occur if you use a staple cartridge other than that recommended.

## **U** Note

- If you cannot pull out the upper unit, there are staples remaining inside the cartridge. Use all the staples, and do not add more.
- Refill the stapler according to the finisher type. Check the type if you are unsure. For details about type of finisher, see "Appendix".

## ■ Reference

• p.139 "Appendix"

#### Finisher SR3010

This section describes how to add staples to the Finisher SR3010.

1



- Open the finisher front cover.
- Hold the lever, and then gently pull out the cartridge.



 Holding both side of the cartridge, pull up the upper unit.



 Remove the empty refill in the direction of the arrow.



 Push the new refill into the cartridge until it clicks.



 Push the upper unit gently into the cartridge.



· Pull out the ribbon.



- Hold the lever, and then push in the cartridge until it clicks.
- Close the finisher front cover.

BBT023S

## Finisher SR790

This section describes how to add staples to the Finisher SR790.



 Open the finisher front cover, and then pull out the staple unit.



 Hold the lever, and then gently pull out the cartridge.



 Holding both side of the cartridge, pull up the upper unit.



 Remove the empty refill in the direction of the arrow.



 Push the new refill into the cartridge until it clicks.



 Push the upper unit gently into the cartridge.



 $\cdot$  Pull out the ribbon.




- Hold the green lever, and then push in the cartridge until it clicks.
- Return the staple unit to its original position, and then close the finisher front cover.

BBT024S

## **Booklet Finisher SR3000**

This section describes how to add staples to the Booklet Finisher SR3000.

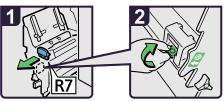

- Open the finihser front cover, and then pull out the staple unit.
- · Hold the lever and pull it up.



Pull out the cartridge gently.



 Holding both side of the cartridge, pull up the upper unit.



 Remove the empty refill in the direction of the arrow.



 Push the new refill into cartridge until it clicks.



 Push the upper unit gently into the cartridge.



· Pull out the ribbon.



· Push in the cartridge gently.



- Hold the lever and hold it down until it clicks.
- Return the staple unit to its original position, and close the finisher front cover.

BBT025S

### **Booklet Finisher SR3020**

This section describes how to add staples to the Booklet Finisher SR3020.



- Open the finisher front cover.
- Pull out the staple unit.



 Pull out the cartridge gently.



 Holding both sides of the cartridge, pull up the upper unit.



Remove the empty refill in the direction of the arrow.



 Push the new refill into the cartridge until it clicks.



 Push the upper unit gently into the cartridge.



 $\boldsymbol{\cdot}$  Pull out the ribbon.



- · Push the cartridge down until it clicks.
- Return the staple unit to its original position and close the finisher front cover.

BAZ034S

## **Booklet Finisher SR3020**

This section describes how to add staples to the Booklet Finisher SR3020.



- Open the finisher front cover.
- Pull out the staple unit.



· Pull lever S2.



 Pull out the cartridge gently.



 Holding both sides of the cartridge, pull up the upper unit.



• Remove the empty refill in the direction of the arrow.



 Push the new refill into the cartridge until it clicks.



 Push the upper unit gently into the cartridge.



· Pull out the ribbon.



· Push the cartridge down until it clicks.



- · Return lever S2 to its original position.
- Return the staple unit to its original position and close the finisher front cover.

BAZ035S

## Finisher SR3030

This section describes how to add staples to the Finisher SR3030.



- Open the finisher front cover.
- Pull out the staple unit.



 Pull out the cartridge gently.



 Holding both sides of the cartridge, pull up the upper unit.



 Remove the empty refill in the direction of the arrow.



 Push the new refill into the cartridge until it clicks.



 Push the upper unit gently into the cartridge.



 $\boldsymbol{\cdot}$  Pull out the ribbon.



- · Push the cartridge down until it clicks.
- Return the staple unit to its original position and close the finisher front cover.

BAZ033S

# Replacing the Stamp Cartridge


If the transmission stamp becomes faint, replace the cartridge.

## 


- This stamp cartridge is used for facsimile and scanner functions.
- Do not add ink to the cartridge by yourself. Neglecting this can cause ink leakage.
- Be sure not to dirty your fingers with ink from the cartridge.
- Use the cartridge specified for this machine.

## Replacing the Stamp Cartridge (Type 1, 2)

1. Open the ADF unit.

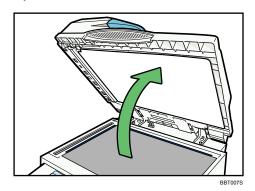


2. Open the stamp cover.

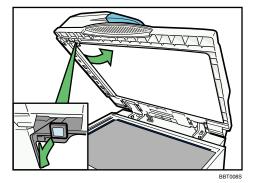


Z

## 3. Pull out the old stamp cartridge.

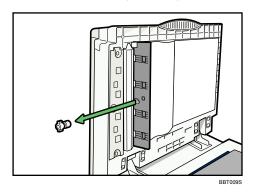


## 4. Insert the new stamp cartridge.

Insert the cartridge until the metal parts are no longer visible.

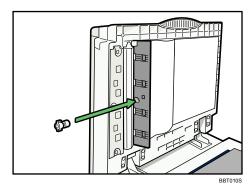


## 5. Close the stamp cover.

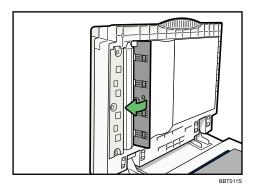


## 6. Close the ADF unit.

## Replacing the Stamp Cartridge (Type 3, 4)


1. Open the ADF cover.

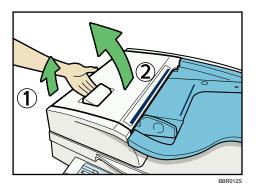


2. Raise lever P2, and then pull open cover P2.

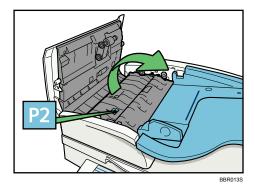

3. Push on the area of cover P3 marked "PUSH", and then open the cover P3.

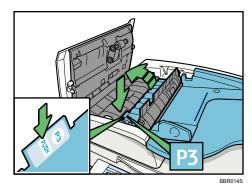


## 4. Pull out the old stamp cartridge.

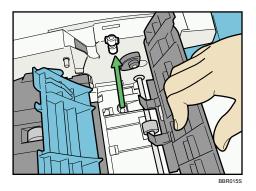

## 5. Insert the new stamp cartridge.

Push in the cartridge until the metal parts are no longer visible.

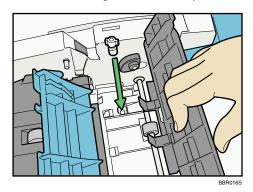

## 6. Close cover P3, P2, and the ADF cover.

# 5. Entering Text

This chapter describes how to enter characters.

# **Entering Text**

This section explains how to enter text.

When you enter a character, it appears at the position of the cursor. If there is a character already at the cursor position, the entered character appears before that.

### **Available Characters**

This section explains which characters are available.

You can enter the following characters:


- Alphabetic characters
- Symbols
- Numerals

0123456789

### Keys

This section explains the entry screen and the keys displayed on it.

You can change the entry screen using the keys below.

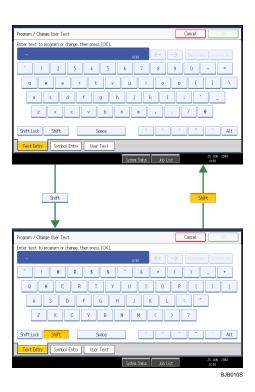



- When entering uppercase or lowercase letters continuously, use [Shift Lock] to lock the case.
- You can also use the number keys to enter numbers, regardless of mode.

### **How to Enter Text**

This section explains text entry more specifically.

## **Entering letters**

This section explains how to enter letters.

- 1. Press [Shift] to switch between uppercase and lowercase.
- 2. Press the letters you want to enter.

## **Entering symbols**

This section explains how to enter symbols.

1. Press [Symbol Entry] to enter into the Symbol Entry mode.



2. Press the symbols you want to enter.



### **Deleting characters**

This section explains how to delete characters.

1. Press [Backspace] or [Delete All] to delete characters.

### Adding user text

You can select and use a User Text that is registered in [Program / Change / Delete User Text].

For the registration procedure under Program / Change / Delete User Text, see "System Settings", Network and System Settings Guide .

## 1. Press [User Text].



2. Select the User Text you want to use.



# 6. Operating Instructions

This chapter describes the Operating Instructions of this machine.

## **Installing Operating Instructions**

The supplied "Manuals" and "Manuals for Administrators" CD-ROMs contain HTML format manuals. For easy access, we recommend you install the manuals on a computer.



- The "Manuals for Administrators" CD-ROM that includes Security Reference is for administrators of the machine.
- The system requirements for installing the manuals are as follows:
  - Operating system: Windows 2000/XP/Vista, Windows Server 2003 or 2003 R2
  - Minimum display resolution: 800 × 600 pixels
- Recommended browsers:
  - Microsoft Internet Explorer 4.01 SP2 or later
  - Netscape 6.2 or later
- Non-recommended browsers can display the simplified manual only.
- HTML manuals can also be viewed on a Macintosh.
- Hyperlinks might not work and referenced sections might not appear unless all the HTML manuals have been installed. To display referenced sections, be sure to install all the HTML manuals.
- 1. Select a language and a product, and then click [OK].
- 2. Click [Install Manuals].

If you want to read manuals from the CD-ROM, click [Read HTML manuals] or [Read PDF manuals].

- 3. Install the manual you require according to the displayed instructions.
- 4. When installation is complete, click [Finish].
- 5. Click [Finish].



- If you cannot install a manual, copy the "MANUAL\_HTML" folder to your computer's hard drive, and then run "Setup.exe".
- To delete an installed manual, on the [Start] menu, click [Programs], then [Product Name], and then
  uninstall the data.
- If you are installing the manuals on a Macintosh, open the "Manuals.htm" file on the CD-ROM.

## **PDF Manuals**

The supplied "Manuals" CD-ROM contains PDF manuals.

## File path

The PDF manuals are in the following folder on the CD-ROM:

### MANUAL\_PDF\ENGLISH



• To view the PDF manuals, you need to have Adobe Acrobat Reader/Adobe Reader installed on your computer.

# How to Use the Operating Instructions

This section explains how to use manuals.



## Opening from the Icon

This section explains how to open a manual using its desktop icon.

1. Double-click the icon on your desktop.



The browser opens and the manual appears.

## Opening from the [Start] Menu

This section explains how to open a manual from the [Start] menu.

1. On the [Start] menu, point to [Programs] (Windows XP: [All Programs]), then [Product Name], and then click the manual you want to view.

The browser opens, and then the manual appears.



• Depending on the settings made during installation, menu folder names may differ.

## Opening from the CD-ROM

This section explains how to open a manual from the supplied "Manuals" and "Manuals for Administrators" CD-ROMs.

- 1. Click [Read HTML manuals].
- 2. Click the title of the manual you want to view.

The browser opens, and then the manual appears.


# 7. Other User Tools

Initial settings allow you to switch the language as well as checking the number of printed papers by displaying the counter.


# **Changing the Display Language**

You can change the language used on the display. English is set as default.

1. Press the [User Tools/Counter] key.

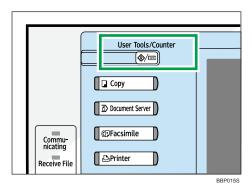


2. Press [Français].

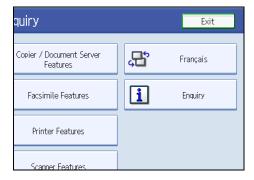

The language is changed to French.

## 3. Press [Sortie].

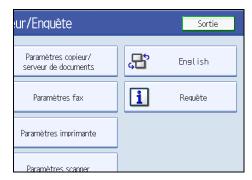

The menu appears in French.

## **Enquiry**

The enquiry function lets you check the telephone numbers to contact for repairs, or ordering consumables such as toner. Be sure to contact your service engineer to verify the following:

### **Consumables**


- Telephone No. to order
- Toner
- Staple
- Staple (Centre)
- TX Stamp Name

### Machine Maintenance/Repair


- Telephone No.
- Serial No. of Machine

### Sales Representative

- Telephone No.
- 1. Press the [User Tools/Counter] key.

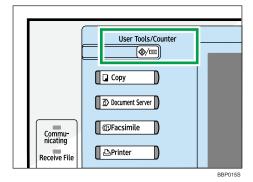


2. Press [Enquiry].

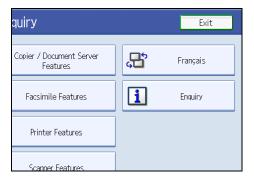

Enquiry information appears.

## 3. Press [Print Enquiry List].

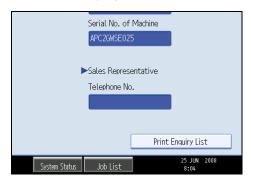

4. Press the [Start] key.

Enquiry information prints out.

5. Press [Exit] twice.

# **Changing Paper Thickness Settings**


Select [Plain Paper 1] or [Plain Paper 2] depending on the type of plain paper.

If in System Settings, [Tray Paper Settings], you set "Paper Thickness" to [Plain Paper] for each tray's [Paper Type], you must then select [Maintenance], [Plain Paper Setting] and specify either [Plain Paper 1] or [Plain Paper 2], depending on the thickness of the loaded paper.


The default setting is Plain Paper 2.




- Select [Plain Paper 1] when paper weight is between 60 g/m<sup>2</sup> (16 lb.) and 74 g/m<sup>2</sup> (20 lb.).
- Select [Plain Paper 2] when paper weight is between  $75 \text{ g/m}^2$  (20 lb.) and  $90 \text{ g/m}^2$  (21 lb.).
- 1. Press the [User Tools/Counter] key.

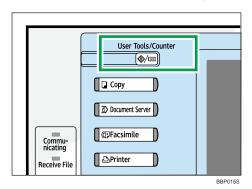


2. Press [Maintenance].

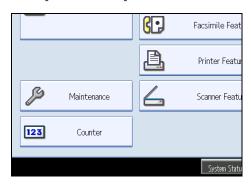


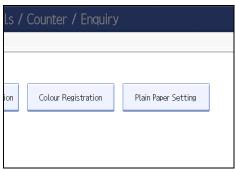

4. Select the plain paper type for each tray depending on the paper to be set and press [OK].

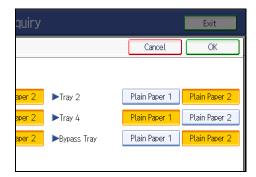

### 5. Press [Exit].

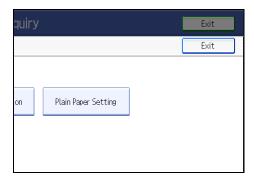

### 6. Press [Exit].



• In System Settings, [Tray Paper Settings], for each tray's [Paper Type] you can specify [Plain Paper], [Middle Thick], [Thick Paper 1], [Thick Paper 2], or [Thick Paper 3]. For details about paper thickness, see "Recommended Paper Sizes and Types".

## **■** Reference


• p.86 "Recommended Paper Sizes and Types"

## Counter


## **Displaying the Total Counter**

You can display the total counter value used for all functions.


1. Press the [User Tools/Counter] key.

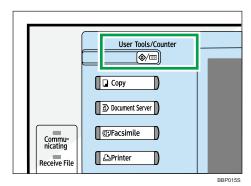

2. Press [Counter].

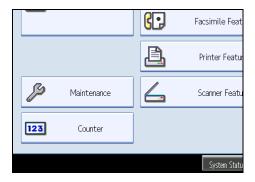

3. To print a counter list, press [Print Counter List].

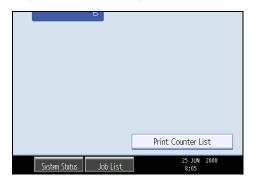

4. Press the [Start] key.

A counter list prints out.

## 8. Remarks

This chapter describes how to maintain and operate the machine.

## Dos and Don'ts

The following items should be followed during use of this machine.

## **WARNING**

• Keep the machine away from flammable liquids, gases, and aerosols. A fire or an electric shock might occur.

## **ACAUTION**

• Unplug the power cord from the wall outlet before you move the machine. While moving the machine, you should take care that the power cord will not be damaged under the machine.

## Mportant !

- Do not turn the power off while the operation switch indicator is lit or blinking. Doing so may damage
  the hard disk.
- Before unplugging the power cord or turning off the main power switch, make sure remaining memory space is at 100%, as shown on the screen. See "Turning On/Off the Power".
- Do not touch areas on or around the fusing unit. These areas get hot.
- After scanning originals continuously, the exposure glass may become warm this is not a malfunction.
- The area around the ventilation holes might feel warm. This is caused by exhaust air and is not a
  malfunction.
- When you use this machine for a long time in a confined space without good ventilation, you may
  detect an odd smell. To keep the workplace comfortable, we recommend that you keep it well
  ventilated.
- If the machine is moved from a cold to a warm place, condensation may form inside it. After moving
  the machine, do not use it for at least an hour. The machine requires this time to adapt to its new
  environment.
- The machine will malfunction if its internal temperature becomes too high. Be sure not to block the intake and exhaust vents.
- Do not turn off the power while the machine is in operation. See "Turning On/Off the Power".
- Do not open the covers of the machine when it is in operation. If you do, misfeeds might occur.
- Do not move or tilt the machine when the power is on.
- Do not allow small objects such as paperclips to fall into or become stuck inside the machine.

- Do not knock the machine while it is operating (for instance, do not use the machine's surfaces to knock stacks of paper into square).
- Depending on the ambient temperature and humidity, steam may come from the exhaust vent behind the control panel during printing. This is water vapour from the paper, not a sign of malfunction.
- If condensation forms inside the machine as a result of temperature change, the machine may not print properly. To minimize this problem, use the optional anti-condensation heaters.
- Be sure to make a note of the registered machine settings in case they are lost due to accident or malfunction.
- The supplier shall not be liable for any loss or damage resulting from a failure of the machine, loss of settings, or use of the machine.

## ■ Reference

• p.71 "Turning On/Off the Power"

## **Saving Colour Copies**

This section explains notes on saving colour copies.

- Like most prints, colour prints will fade if exposed to strong light or dampness and humidity for lengthy periods. Preserve the quality of your copies by storing them in a binder in a dark, dry place.
- Toner may melt if a print and a half-dried print are put on top of each other.
- Toner may also melt when using solvent type adhesive agents for pasting prints.
- When folding prints, toner in the folds will come off.
- Toner may melt if it is placed on mats made of chlorinated plastic in locations of high temperature for long periods of time.
- Toner may melt if prints are placed in places of extremely high temperatures, such as near heaters.

## Where to Put Your Machine

This section describes precautions for installation and movement.

### **Machine Environment**

Choose your machine's location carefully.

Environmental conditions greatly affect its performance.

### Moving

This section describes precautions when moving the machine.

### **ACAUTION**

Contact your service representative if you need to lift the machine (such as when relocating it to
another floor). Do not attempt to lift the machine without the assistance of your service
representative. The machine will be damaged if it topples or is dropped, resulting in malfunction
and risk of injury to users. The machine's various handling areas are for service engineer use only.
Do not touch these areas.

## **ACAUTION**

• Before moving the machine, be sure to disconnect all external connections, especially the power cord from the wall outlet. Damaged power cords are a fire and electric shock hazard.

## **ACAUTION**

Unplug the power cord from the wall outlet before you move the machine. While moving the
machine, you should take care that the power cord will not be damaged under the machine.

## Mportant (

- Be careful when moving the machine. Take the following precautions:
  - Turn off the main power. For details about how to turn the main power off, see "Turning On/Off
    the Power".
  - Unplug the power cord from the wall outlet. When you pull out the plug from the socket, grip
    the plug to avoid damaging the cord, thereby reducing the risk of fire or electric shock.
  - Close all covers and trays, including the front cover and bypass tray.
  - Keep the machine level and carry it carefully, taking care not to jolt or tip it. Rough handling
    may cause a malfunction or damage the hard disk or memory, resulting in loss of stored files.
  - Do not take off the holding stand.

## **■** Reference

• p.71 "Turning On/Off the Power"

### Optimum environmental conditions

This section describes precautions when locating the machine.

## **ACAUTION**

- Keep the machine away from humidity and dust. Otherwise a fire or an electric shock might occur.
- Do not place the machine on an unstable or tilted surface. If it topples over, an injury might occur.

## **ACAUTION**

• After you move the machine, use the caster fixture to fix it in place. Otherwise the machine might move or come down to cause an injury.

## **ACAUTION**

- Make sure the room where you are using the machine is well ventilated and spacious. Good ventilation is especially important when the machine is used heavily.
- Temperature: 10-32 °C (50-89.6 °F) (humidity to be 54% at 32 °C, 89.6 °F)
- Humidity: 15-80% (temperature to be 27 °C, 80.6 °F at 80%)
- A strong and level base.
- The machine must be level within 5 mm, 0.2 inch: both front to rear and left to right.
- To avoid possible buildup of ozone, make sure to locate this machine in a large well ventilated room that has an air turnover of more than 30 m<sup>3</sup>/hr/person.

#### **Environments to avoid**


- Locations exposed to direct sunlight or other sources of strong light (more than 1,500 lux).
- Locations directly exposed to cool air from an air conditioner or heated air from a heater. (Sudden temperature changes can cause condensation to form inside the machine.)
- Locations close to machines generating ammonia, such as a diazo copy machine.
- Places where the machine will be subject to frequent strong vibration.
- Dusty areas.
- Areas with corrosive gases.

Q

## ŏ

### Access to the machine

Place the machine near the power source, providing the clearance areas shown.

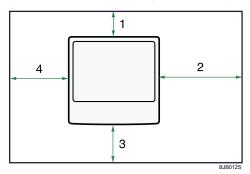

## Type 1 and 2

1	Rear	10 cm (4 inches) or more	
2	Right	55 cm (21.7 inches) or more	
3	Front	75 cm (29.6 inches) or more	
4	Left	10 cm (4 inches) or more	

## Type 3 and 4

1	Rear	10 cm (4 inches) or more
2	Right	60 cm (23.7 inches) or more
3	Front	70 cm (27.6 inches) or more
4	Left	60 cm (23.7 inches) or more



• For the required space when options are installed, contact your service representative.

## **Power Connection**

This section describes power supply.



• Connect the machine only to the power source described on the inside front cover of this manual. Connect the power cord directly into a wall outlet and do not use an extension cord.

## **MARNING**

Do not damage, break or make any modifications to the power cord. Do not place heavy objects
on it. Do not pull it hard nor bend it more than necessary. These actions could cause an electric
shock or fire.

## **MARNING**

 If the power cord is damaged (exposure of the core, disconnection, etc.), contact your service representative to change a new one. Operating the machine with a damaged power cord may cause an electric shock or fire.

## **ACAUTION**

• When you disconnect the power plug from the wall outlet, always pull the plug (not the cable).

## **ACAUTION**

- To disconnect the power cord, pull it out by plug. Do not drag the cord itself. Doing so may result
  in damage to the cord, leading to fire or electric shock.
- · Make sure the plug is inserted firmly in the wall outlet.
- Voltage must not fluctuate by more than 10%.
- The wall outlet shall be installed near the machine and shall be easily accessible.

# Maintaining Your Machine

If the exposure glass, scanning glass, or ADF belt is dirty, copy clarity may be reduced. Clean these parts if they are dirty.




- Do not use chemical cleaners or organic solvents, such as thinner or benzene. If such substances get inside the machine or melt plastic parts, a failure might occur.
- Do not clean parts other than those explicitly specified in this manual. Other parts should only be cleaned by your service representative.

### How to maintain

Cleaning the machine: Wipe the machine with a soft, dry cloth. If this does not remove the dirt, wipe the machine with a damp and tightly wrung cloth. If a damp cloth still does not remove the dirt, try using a mild detergent. Wipe the machine with a dry cloth to remove the moisture, after using a damp cloth.

## Cleaning the Exposure Glass

This section describes how to clean the exposure glass and the scanning glass.

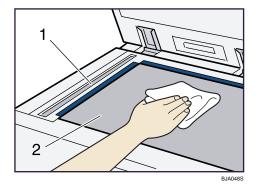


Clean 1 and 2.

## Cleaning the Auto Document Feeder

This section describes how to clean the ADF.

Q

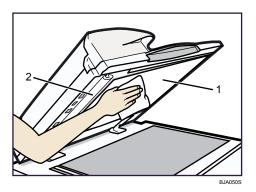


Clean 1 and 2.

## Cleaning the Dustproof Glass


The dustproof glass may require cleaning if white lines appear on the print side of the document.



• Do not insert the brush forcefully, or the machine might be damaged.

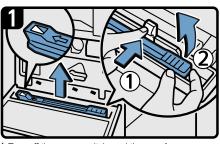


- 1. Turn off the power switch, and then unplug the power cable.
- 2. Open the front cover and remove the cleaning brush. Release the catch at the center of the cleaning brush (1), hold the catch to prevent it re-engaging, and then raise the cleaning brush grip(2).

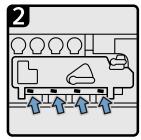

the dustproof glass.




3. There are four holes for cleaning 4. Slide the cleaning brush in and out slowly 2 to 3 times to clean all four areas.

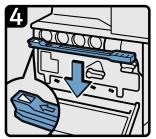

- 5. Return the cleaning brush to its original position, and then close the front cover.
- 6. Plug in the power cable, and the turn on the power swithc.



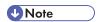

• Insert the cleaning stick so that its rubber surface is pointing down.

# 9. Appendix

This chapter describes the provided software and utilities CD-ROMs, specifications, and paper.

## Software and Utilities Included on the CD-ROM

This section explains the software and utilities CD-ROMs provided with this machine.

Two CD-ROMs come with this machine: "Printer Drivers and Utilities", and "Scanner Driver and Utilities".

The following are included in these CD-ROMs:

### Font Manager

For installing new screen fonts, or organizing and managing fonts already in the system. For details about Font Manager, see the manual on the CD-ROM labeled "Printer Drivers and Utilities".

### SmartDeviceMonitor for Admin

For the system administrator to manage network printers.

### DeskTopBinder-SmartDeviceMonitor for Client

For users to manage their network print status.

### **Printer Utility for Mac**

This utility allows users to download and manage a variety of fonts as well as manage printers. For details about this utility, see PostScript 3 Supplement.



Some documentation about using the machine is included on the CD-ROM in PDF format. For details
about using Adobe Acrobat Reader/Adobe Reader, see Adobe Acrobat Reader/Adobe Reader
online Help.

## Viewing the Contents of the CD-ROM

This section explains how to view the contents of the CD-ROMs.

1. Insert the CD-ROM into the CD-ROM drive.

The installer starts.

2. Click [Browse This CD-ROM].

Explorer starts and displays the contents of the CD-ROM.

### **Printer Drivers for This Machine**

This section explains printer drivers for this machine.

You can install the PCL printer drivers (PCL 5c and PCL 6), the RPCS printer driver, and the Adobe
PostScript printer drivers from the CD-ROM provided with this machine or download them from the
supplier's Web site. If your operating system is Windows XP x64/Vista x64, or Windows Server
2003/2003 R2 x64, you must download the printer drivers from the supplier's Web site. Select this
machine and the operating system you are using, and then download them.

Printing requires installation of a printer driver for your operating system. The following drivers are included on the CD-ROM labeled "Printer Drivers and Utilities".

Printer Language	PCL 6	PCL 5c	RPCS	PostScript 3
Windows 2000 * 1	ОК	OK	OK	ОК
Windows XP *2	ОК	OK	OK	ОК
Windows Vista *3	ОК	OK	OK	ОК
Windows Server 2003 *4	ОК	OK	OK	ОК
Mac OS *5	_	_	_	ОК
Mac OS X *6	_	_	_	ОК

- \* 1 Microsoft Windows 2000 Professional / Microsoft Windows 2000 Server/Microsoft Windows 2000 Advanced Server
- \*2 Microsoft Windows XP Professional/Microsoft Windows XP Home Edition
- \*3 Microsoft Windows Vista Ultimate/Microsoft Windows Vista Enterprise/Microsoft Windows Vista Business/ Microsoft Windows Vista Home Premium/Microsoft Windows Vista Home Basic
- \*4 Microsoft Windows Server 2003 Standard Edition/Microsoft Windows Server 2003 Enterprise Edition/ Microsoft Windows Server 2003 Web Edition/Microsoft Windows Server 2003 Datacenter Edition/Microsoft Windows Server 2003 R2 Standard Edition/Microsoft Windows Server 2003 R2 Enterprise Edition/Microsoft Windows Server 2003 R2 Datacenter Edition
- \*5 Versions 8.6 to 9.2 of the Mac OS (Mac OS X Classic mode is supported.)
- \*6 Mac OS X 10.1 or later (Native mode)

#### PCL printer drivers

Two kinds of PCL printer driver (PCL 5c and PCL 6) are included. These drivers allow your computer to communicate with this machine via a printer language.

### **RPCS** printer driver

This printer driver allows the computer to communicate with the printer using a printer language. In addition to the conventional user interface, another preset user interface is provided.

q

### Adobe PostScript Printer Drivers and PPD files

Adobe PostScript printer drivers allow the computer to communicate with the printer using a printer language. PPD files allow the printer driver to enable specific printer functions.

#### **PPD** files

PPD files allow the printer driver to enable specific printer functions.



- Some applications may require installation of the PCL 5c printer driver. In this case, you can install PCL 5c without having to install PCL 6.
- For details, see "Preparing for Printing", Printer Reference, and PostScript 3 Supplement.

### **TWAIN Driver**

This section describes the file path and system requirements of the TWAIN driver.

This driver is required to scan an original using a scanner. To use the machine as a network TWAIN scanner, this driver must be installed.

### File path

The driver is included in the following folder on the CD-ROM labeled "Scanner Driver and Utilities" provided with this machine:

#### \DRIVERS\TWAIN

#### System requirements

Hardware

PC/AT-compatible machines that support the following operating system properly

Operating system

Windows 2000/XP/Vista

Windows Server 2003/2003 R2

• Display resolution

800 × 600 pixels, 256 colours or higher



Under Windows NT with RISC-based processors (MIPS R series, Alpha AXP, or PowerPC), this driver
is not supported.

### **LAN-Fax Driver**

This section describes the file path and system requirements of the LAN-Fax driver.

You can install the LAN-Fax driver from the CD-ROM provided with this machine or download it from
the supplier's Web site. If your operating system is Windows XP x64/Vista x64, or Windows Server
2003/2003 R2 x64 you must download the LAN-Fax driver from the supplier's Web site. Select this
machine and the operating system you are using, and then download it.

This driver is required to use LAN-Fax functions.

### File path

The driver is included in the following folders on the CD-ROM labeled "Printer Drivers and Utilities":

\DRIVERS\LAN-FAX\XP\_VISTA

#### System requirements

- Hardware
  - PC/AT-compatible
- Operating systems

Windows 2000/XP/Vista

Windows Server 2003/2003 R2

Display

VGA 640 × 480 pixels or more



• Before beginning installation, exit all other applications.

## DeskTopBinder Lite

This section describes the file path and system requirements of DeskTopBinder Lite.

DeskTopBinder is to be installed on the client computers for integration and management of various kinds of files such as scan files, files created with applications, and existing scan files. This software allows you to use various functions for stored scan files such as viewing stored files. Also, with the ScanRouter delivery software, you can view the files stored in in-trays of the delivery server, or use other functions for stored files.

For details about the software installed with DeskTopBinder Lite, see "DeskTopBinder Lite", Scanner Reference.

### File path

The software is included in the following folder on the CD-ROM labeled "Scanner Driver and Utilities" provided with this machine:

\UTILITY\DESKV2

#### System requirements

- Hardware
  - PC/AT-compatible machines that support the operating system properly
- Operating system
  - When installing all functions of DeskTopBinder:
    - Windows 2000 Professional SP1 or later/2000 Server SP1 or later/2000 Advanced Server SP1 or later/XP Professional/XP Home Edition
  - When installing only SmartDeviceMonitor for Client:
    - Windows 2000 Professional SP1 or later/2000 Server SP1 or later/XP Professional/XP Home Edition

#### SmartDeviceMonitor for Admin

This section describes the file path and available functions of SmartDeviceMonitor for Admin.

SmartDeviceMonitor for Admin is an application that uses TCP/IP and IPX/SPX to monitor network printers. It can monitor multiple network printers using IP address. We recommend that network administrators use this application.

#### File path

SmartDeviceMonitor for Admin is stored in the following folder in the CD-ROM labeled "Printer Drivers and Utilities":

#### \NETWORK\DEVMON\ADMIN\DISK1

Operating system	Protocol stack	
Windows 2000	TCP/IP provided with Windows 2000	
	IPX/SPX provided with Windows 2000	
	NetWare Client provided with Windows 2000	
	Novell Client provided with Windows 2000 or Windows NT	
Windows XP	TCP/IP provided with Windows XP	
	IPX/SPX provided with Windows XP	
	NetWare Client provided with Windows XP	
	Novell Client provided with Windows XP	
Windows Vista	TCP/IP provided with Windows Vista	
	Novell Client provided with Windows Vista	

#### Available functions

SmartDeviceMonitor for Admin has the functions to check the followings:

- Printer supplies such as paper or toner
- Results of print jobs executed from the computer



• For details, see "Using SmartDeviceMonitor for Admin", Network and System Settings Guide , and SmartDeviceMonitor for Admin Help.

# DeskTopBinder-SmartDeviceMonitor for Client

This section describes the file path and system requirements of DeskTopBinder-SmartDeviceMonitor for Client.

DeskTopBinder-SmartDeviceMonitor for Client allows you to manage and print various data such as files created with an application, images scanned with a scanner, and existing images as one document.

#### File path

DeskTopBinder-SmartDeviceMonitor for Client is stored in the following folder on the CD-ROM labeled "Printer Drivers and Utilities":

#### \NETWORK\DEVMON\CLIENT\DISK1

#### Operating environment of the printer driver

- Applicable computer
  - Machines which properly work with the applicable OS below. PC/AT compatible machine.
- Applicable OS

Windows 2000/XP/Vista

Windows Server 2003/2003 R2



 See "DeskTopBinder Lite", Scanner Reference or Help of DeskTopBinder-SmartDeviceMonitor for Client.

4

• DeskTopBinder includes SmartDeviceMonitor for Client. See Help of DeskTopBinder-SmartDeviceMonitor for Client.

# Specifications for the Main Unit

This section describes specifications for the main unit.

# For users of type 1 and 2

#### **Configuration:**

Desktop

#### Photosensitivity type:

OPC drum

#### Original scanning:

One-dimensional solid scanning system through CCD

#### Copy process:

Dry electrostatic transfer system

#### **Development:**

Dry two-component magnetic brush development system

#### Fusing:

Oilless belt fusing

#### Scan resolution:

• 600 dpi × 600 dpi

#### Copy/Print resolution:

- 600 dpi × 600 dpi
- 1200 dpi × 1200 dpi (for printer function only)

#### **Exposure glass:**

Stationary original exposure type

#### Original reference position:

Rear left corner

#### Warm-up time (23°C, rated voltage):

• Type 1, 2: 45 seconds or less

#### **Originals:**

Sheet/book/objects

#### Maximum original size:

A3□, 11 × 17□

G

#### Copy paper size:

- Trays: A3 A5 A5 , 11 × 17 8 1/2 × 11 8 1/2 × 390 mm) , 16K (195 × 267 mm)
- Bypass: A3□ A6□, 12 × 18□ 5¹/<sub>2</sub> × 8¹/<sub>2</sub>□, 8K (267 × 390 mm) □, 16K (195 × 267 mm)□□
- Bypass (custom size): Vertical: 90.0 305.0 mm, 3.6 12.1 inches
   Horizontal: 148.0 600.0 mm, 5.83 23.7 inches
- Duplex: A3□ A5□, 11 ×17□ 8¹/<sub>2</sub> × 11□□, 8K (267 × 390 mm)□, 16K (195 × 267 mm)□□

#### Paper weight:

- Trays: 60.0 256.0 g/m<sup>2</sup>, 16 lb. 68 lb.
- Bypass: 60.0 256.0 g/m<sup>2</sup>, 16 lb. 68 lb.
- Duplex: 60.0 169.0 g/m<sup>2</sup>, 16 lb. 45 lb.

For details about and recommendations concerning thick paper, see "Thick Paper".

#### Non-reproduction area (Copier):

- Leading edge: 3.7 6.7 mm, 0.15 0.26 inches (2.7 5.7 mm, 0.10 0.22 inches for paper heavier than  $81 \text{ g/m}^2$ , 22.0 lb.)
- Trailing edge: 0.5 6.0 mm, 0.19 0.24 inches
- Left and Right: 0.5 4.0 mm, 0.19 0.16 inches

#### First copy/print time:

- Type 1, 2:
  - Colour: 8.0 seconds or less
  - B&W: 5.0 seconds or less

 $(A4D, 8^{1}/_{2} \times 11D, 100\%$  reproduction, feeding from Tray 1, on the exposure glass)

# Copying speed (Full Colour / B&W):

- Type 1:
  - 28/28 copies/minute (A4 $\square$ , 8 $^1/_2$ ×11 $\square$ )
- Type 2:
  - 33/33 copies/minute (A4 $\mathbb{D}$ , 8 $^{1}/_{2}$ ×11 $\mathbb{D}$ )

#### Reproduction ratio:

Preset reproduction ratios:

Enlargement

#### • Full size

Metric version	Inch version
100%	100%

#### • Reduction

Metric version	Inch version
93%	93%
82%	85%
75%	78%
71%	73%
65%	65%
50%	50%
25%	25%

Zoom: From 25 to 400% in increments of 1%

#### Maximum continuous copy run:

999 sheets

# Paper capacity (80 $g/m^2$ , 20 lb.):

• Tray 1, 2: 550 sheets

• Bypass tray: 100 sheets

#### Power source:

220 - 240 V, 50/60 Hz, 8 A or more

Please be sure to connect the power cord to a power source as above. For details about power source, see "Power Connection".

# 9

### Power consumption:

• Main unit only

	Туре 1	Туре 2
Warm-up	1600 W	1600 W
Stand-by	216 W	216 W
During printing	761 W	787 W
Maximum	1600 W	1600 W

• Complete system

	Туре 1	Туре 2
Warm-up	1600 W	1600 W
Stand-by	226 W	226 W
During printing	855 W	881 W
Maximum	1600 W	1600 W

 The complete system consists of the main unit, Booklet Finisher SR3000, bridge unit, lower paper trays, and large capacity tray (LCT).

#### Dimensions (W $\times$ D $\times$ H up to exposure glass):

Type 1, 2:  $670 \times 671 \times 760$  mm,  $26.4 \times 26.5 \times 30.0$  inches

#### Space for main unit (W × D):

Type 1, 2:  $1,065 \times 671$  mm,  $42.0 \times 26.5$  inches

#### Noise emission:

- Sound power level:
  - Main unit only

	Type 1	Туре 2
Stand-by	Less than 39.5 dB (A)	Less than 39.5 dB (A)
Copying	Less than 63.2 dB (A)	Less than 63.4 dB (A)

• Complete system

	Туре 1	Туре 2
Stand-by	Less than 39.7 dB (A)	Less than 39.7 dB (A)
Copying	Less than 69.5 dB (A)	Less than 70.3 dB (A)

#### • Sound pressure level:

• Main unit only

	Туре 1	Туре 2
Stand-by	Less than 29.1 dB (A)	Less than 29.1 dB (A)
Copying	Less than 50.6 dB (A)	Less than 50.6 dB (A)

#### • Complete system

	Туре 1	Туре 2
Stand-by	Less than 26.5 dB (A)	Less than 26.5 dB (A)
Copying	Less than 55.2 dB (A)	Less than 56.0 dB (A)

- Sound power level and sound pressure level are actual values measured in accordance with ISO 7779.
- Sound power level and sound pressure level are measured from the position of the bystander.
- The complete system consists of the main unit, internal tray 2 (1 bin tray), lower paper trays, large capacity tray (LCT), bridge unit, Booklet Finisher SR3000, and punch kit for the Booklet Finisher SR3000.

#### Weight:

Type 1, 2: Approx. 110 kg, 242.6 lb.

# **■** Reference

- p.94 "Thick Paper"
- p.133 "Power Connection"

# For users of type 3 and 4

#### Configuration:

Desktop

# 9

#### Photosensitivity type:

OPC drum

#### Original scanning:

One-dimensional solid scanning system through CCD

#### Copy process:

Dry electrostatic transfer system

#### **Development:**

Dry two-component magnetic brush development system

#### Fusing:

Induction Heating (IH) fusing

#### Scan resolution:

• 600 dpi × 600 dpi

#### Copy/Print resolution:

- 600 dpi × 600 dpi
- 1200 dpi × 1200 dpi (for printer function only)

#### **Exposure glass:**

Stationary original exposure type

#### Original reference position:

Rear left corner

#### Warm-up time (23°C, rated voltage):

- Type 3: 21 seconds or less
- Type 4: 27 seconds or less

#### **Originals:**

Sheet/book/objects

#### Maximum original size:

A3□, 11 × 17□

#### Paper size:

- Trays: A3D A5D, 11 × 17D 8<sup>1</sup>/<sub>2</sub> × 11DD, 8K (267 × 390 mm)D, 16K (195 × 267 mm)
- Bypass: A3□ A6□, 12 × 18□ 5<sup>1</sup>/<sub>2</sub> × 8<sup>1</sup>/<sub>2</sub>□, 8K (267 × 390 mm) □, 16K (195 × 267 mm) □□
- Bypass (custom size): Vertical: 90.0 305.0 mm, 3.6 12.1 inches
   Horizontal: 148.0 600.0 mm, 5.83 23.7 inches

• Duplex: A3□ - A5□, 11 × 17□ - 8¹/<sub>2</sub> × 11□□, 8K (267 × 390 mm)□, 16K (195 × 267 mm)□□

#### Paper weight:

- Trays: 60.0 256.0 g/m<sup>2</sup>, 16 lb. 68 lb.
- Bypass: 60.0 256.0 g/m<sup>2</sup>, 16 lb. 68 lb.
- Duplex: 60.0 169.0 g/m<sup>2</sup>, 16 lb. 45 lb.

For details about and recommendations concerning thick paper, see "Thick Paper".

#### Non-reproduction area (Copier):

- Leading edge: 3.7 6.7 mm, 0.15 0.26 inches (2.7 5.7 mm, 0.10 0.22 inches for paper heavier than  $81 \text{ g/m}^2$ , 22.0 lb.)
- Trailing edge: 0.5 6.0 mm, 0.19 0.24 inches
- Left and Right: 0.5 4.0 mm, 0.19 0.16 inches

#### First copy/print time:

- Type 3:
  - Colour: 6.5 seconds or less
  - B&W: 3.9 seconds or less
- Type 4:
  - Colour: 5.9 seconds or less
  - B&W: 3.5 seconds or less

 $(A4D, 8^{1}/_{2} \times 11D, 100\%$  reproduction, feeding from Tray 1, on the exposure glass)

# Copying speed (Full Colour / B&W):

- Type 3: 40/40 copies/minute (A4 $\mathbb{D}$ , 8 $^{1}/_{2} \times 11\mathbb{D}$ )
- Type 4: 50/50 copies/minute (A4 $\mathbb{D}$ , 8 $^{1}/_{2} \times 11\mathbb{D}$ )

#### Reproduction ratio:

- Preset reproduction ratios:
  - Enlargement

Metric version	Inch version
400%	400%
200%	200%
141%	155%
122%	129%
115%	121%

# 9

#### • Full size

Metric version	Inch version
100%	100%

#### • Reduction

Metric version	Inch version
93%	93%
82%	85%
75%	78%
71%	73%
65%	65%
50%	50%
25%	25%

• Zoom: From 25 to 400% in increments of 1%

#### Maximum continuous copy run:

999 sheets

# Paper capacity (80 g/ $m^2$ , 20 lb.):

• Tray 1, 2: 550 sheets

• Bypass tray: 100 sheets

#### Power source:

220 - 240 V, 50/60 Hz, 8 A or more

Please be sure to connect the power cord to a power source as above. For details about power source, see "Power Connection".

#### Power consumption:

• Main unit only

	Туре 3	Type 4
Warm-up	1500 W	1500 W
Stand-by	141 W	141 W
During printing	921 W	1031 W

	Туре 3	Туре 4
Maximum	1500 W	1500 W

#### Complete system

	Туре 3	Туре 4
Warm-up	1500 W	1500 W
Stand-by	156 W	156 W
During printing	1121 W	1221 W
Maximum	1500 W	1500 W

• The complete system consists of the main unit, Booklet Finisher SR3020, bridge unit, lower paper trays, and large capacity tray (LCT).

# Dimensions (W × D × H up to exposure glass):

Types 3, 4:  $670 \times 677 \times 760$  mm,  $26.4 \times 26.7 \times 30.0$  inches

# Space for main unit (W × D):

Types 3, 4:  $1,065 \times 677$  mm,  $42.0 \times 26.7$  inches

#### Noise emission:

- Sound power level:
  - Main unit only

	Туре 3	Type 4
Stand-by	Less than 35.4 dB (A)	Less than 35.4 dB (A)
Copying	Less than 66.7 dB (A)	Less than 67.0 dB (A)

#### Complete system

	Туре 3	Туре 4
Stand-by	Less than 36.6 dB (A)	Less than 36.6 dB (A)
Copying	Less than 71.9 dB (A)	Less than 72.1 dB (A)

- Sound pressure level:
  - Main unit only

	Туре 3	Туре 4
Stand-by	Less than 21.6 dB (A)	Less than 21.6 dB (A)
Copying	Less than 54.0 dB (A)	Less than 54.5 dB (A)

#### Complete system

	Туре 3	Type 4
Stand-by	Less than 20.6 dB (A)	Less than 20.9 dB (A)
Copying	Less than 57.9 dB (A)	Less than 58.0 dB (A)

- Sound power level and sound pressure level are actual values measured in accordance with ISO 7779.
- Sound power level and sound pressure level are measured from the position of the bystander.
- The complete system consists of the main unit, internal tray 2 (1 bin tray), lower paper trays, large capacity tray (LCT), bridge unit, Booklet Finisher SR3020, and punch kit for the Booklet Finisher SR3020.

#### Weight:

Types 3, 4: Approx. 110 kg, 242.6 lb.

# Reference

- p.94 "Thick Paper"
- p.133 "Power Connection"

# Document Server for Type 1 and 2

#### **HDD (Document Server):**

Approx. 17 GB

Maximum: 2,000 pages

(Total number of pages that can be stored with all functions combined)

Copier/Black and white mode/A4 original: 2,000

Copier/Full-colour mode/A4 original: 500

Printer/Black and white/A4/600 dpi, 2 bits: about 2,000

Scanner/Full colour/A4/200 dpi, 8 bits/JPEG: about 2,000

(Under the printer and scanner functions, the number of the pages that can be stored depends on the print image and original.)

#### Maximum number of stored documents:

Maximum: 1,000

(The maximum number of received faxes that can be stored is 400.)

#### **Number of Pages Supported by Memory Sorting:**

Maximum: 1,000 pages

Copier/Black-and-white mode/A4 original: about 1,000

Printer/Black and white/A4/600 dpi, 2 bits: about 1,000

(Under the printer function, the number of the pages that can be sorted depends on the print image.)

# Document Server for Type 3 and 4

#### **HDD (Document Server):**

Approx. 34 GB

Maximum: 9,000 pages

(Total number of pages that can be accommodated stored with all functions combined)

Copier/Black and white mode/A4 original: about 4,000

Copier/Full-colour mode/A4 original: about 1,000

Printer/Black and white/A4/600 dpi, 2 bits: about 9,000

Scanner/Full colour/A4/200 dpi, 8 bits/JPEG: about 9,000

(Under the printer and scanner functions, the number of the pages that can be stored depends on the print image and original.)

#### Maximum number of stored documents:

Maximum: 3,000

(The maximum number of received faxes that can be stored is 400.)

#### Number of Pages Supported by Memory Sorting:

Maximum: 2,000 pages

Copier/Black-and-white mode/A4 original: about 2,000

Printer/Black and white/A4/600 dpi, 2 bits: about 2,000

(Under the printer function, the number of the pages that can be sorted depends on the print image.)

Q

# **Specifications for Auto Document Feeder**

This section describes specifications for auto document feeder.

# Specifications for Auto Document Feeder (ARDF DF3030)

This section describes specifications for auto document feeder ARDF DF 3030.

#### Mode:

ADF mode, Batch mode, SADF mode, Mixed Size mode, Custom Size originals mode

#### Original size:

Metric version:

- 1-sided originals: A3 □ A5 □ □
- 2-sided originals: A3 □ A5 □

Inch version:

- 1-sided originals:  $11 \times 17D 5^{1}/_{2} \times 8^{1}/_{2}DD$
- 2-sided originals:  $11 \times 17 \square 5^1/2 \times 8^1/2 \square$

#### Original weight:

- 1-sided originals: 40 128 g/m<sup>2</sup> (11 34 lb.)
- 2-sided originals:  $52 105 \text{ g/m}^2 (14 28 \text{ lb.}) (64 105 \text{ g/m}^2 (17 28 \text{ lb.}) \text{ for } 11 \times 17 \square$

#### Number of originals to be set:

50 sheets (81.4 g/m<sup>2</sup>, 22 lb.)

#### Maximum power consumption:

Less than 50 W (Power is supplied from the main unit.)

#### Dimensions (W × D × H):

550 × 491 × 120 mm, 21.7 ×19.4 ×4.8 inches

#### Weight:

Approx. 10 kg, 22 lb.



• Specifications are subject to change without notice.

# Specifications for Auto Document Feeder (ARDF DF3010)

This section describes specifications for auto document feeder ARDF DF3010.

#### Mode:

ADF mode, Batch mode, SADF mode, Mixed Size mode, Custom Size originals mode

#### Original size:

- Metric version:
  - 1-sided originals: A3 B6 JIS (Japanese Industrial Standard)
  - 2-sided originals: A3D A5DD
- Inch version:
  - 1-sided originals:  $11 \times 17 \square 5^1/2 \times 8^1/2 \square \square$
  - 2-sided originals:  $11 \times 17 \square 5^1/2 \times 8^1/2 \square \square$

#### Original weight:

- 1-sided originals: 40 128 g/m<sup>2</sup> (10 34 lb.)
- 2-sided originals: 52 128 g/m<sup>2</sup> (14 34 lb.)

#### Number of originals to be set:

100 sheets (80 g/m<sup>2</sup>, 20 lb.)

#### Maximum power consumption:

Less than 60 W (Power is supplied from the main unit.)

#### Dimensions (W $\times$ D $\times$ H):

 $570 \times 520 \times 135$  mm,  $22.5 \times 20.5 \times 5.4$  inches

#### Weight:

Approx. 12 kg, 26.5 lb.

**●** Note

Specifications are subject to change without notice.

# **Specifications for Finishers (Optional)**

This section describes specifications for finishers.

#### Specifications for Finisher SR790 (1000-sheet) (Optional)

This section describes specifications for the Finisher SR790.

#### **Finisher Upper Tray**

This section describes specifications for the finisher upper tray of the Finisher SR790.

#### Paper size:

A3D, B4 JISD, A4DD, B5 JISDD, A5DD, B6 JISD, A6D,  $12 \times 18D$ ,  $11 \times 17D$ ,  $11 \times 15D$ ,  $11 \times 14D$ ,  $10 \times 15D$ ,  $10 \times 14D$ ,  $8^{1}/_{2} \times 14D$ ,  $8^{1}/_{2} \times 13D$ ,  $8^{1}/_{2} \times 11DD$ ,  $8^{1}/_{4} \times 14D$ ,  $8^{1}/_{4} \times 13D$ ,  $8 \times 13D$ ,  $8 \times 10^{1}/_{2}$ DD,  $8 \times 10^{1}/_{2}$   $\times 10^{1}/_{$ 

#### Paper weight:

52 - 260 g/m<sup>2</sup>, 14 - 68 lb.

# Stack capacity (80 g/ $m^2$ , 20 lb.):

- 250 sheets: A4,  $8^{1}/_{2} \times 11$  or smaller
- 50 sheets: B4 JIS,  $8^{1}/_{2} \times 14$  or larger

# Finisher Shift Tray

This section describes specifications for the finisher shift tray of the Finisher SR790.

#### Paper size:

A3D, B4 JISD, A4DD, B5 JISDD, A5DD,  $12 \times 18D$ ,  $11 \times 17D$ ,  $11 \times 15D$ ,  $11 \times 14D$ ,  $10 \times 15D$ ,  $10 \times 14D$ ,  $8^{1}/_{2} \times 14D$ ,  $8^{1}/_{2} \times 13D$ ,  $8^{1}/_{2} \times 11DD$ ,  $8^{1}/_{4} \times 14D$ ,  $8^{1}/_{4} \times 13D$ ,  $8 \times 10^{1}/_{2}DD$ ,  $8 \times 10DD$ ,  $5^{1}/_{2} \times 8^{1}/_{2}D$ ,  $7^{1}/_{4} \times 10^{1}/_{2}DD$ , 8KD, 16KD, 16KD

#### Paper weight:

52 - 163 g/m<sup>2</sup>, 14 - 43 lb.

# Stack capacity (80 g/ $m^2$ , 20 lb.):

- 1,000 sheets: A4,  $8^{1}/_{2} \times 11$  or smaller
- 500 sheets: B4 JIS,  $8^{1}/_{2} \times 14$  or larger, and A5 $\square$
- 100 sheets: A5 $\Box$ ,  $5^{1}/_{2} \times 8^{1}/_{2}\Box$

#### Staple paper size:

A3D, B4 JISD, A4DD, B5 JISDD, 11 × 17D, 11 × 15D, 11 × 14D, 10 × 15D, 10 × 14D,  $8^{1}/_{2} \times 14D$ ,  $8^{1}/_{4} \times 14D$ ,  $8^{1}/_{2} \times 13D$ ,  $8^{1}/_{4} \times 13D$ ,  $8 \times 13D$ ,  $8^{1}/_{2} \times 11DD$ ,  $8 \times 10^{1}/_{2}DD$ ,  $8 \times 10^{1}/_{2}DD$ ,  $8 \times 10^{1}/_{2}DD$ 

#### Staple paper weight:

64 - 90 g/m<sup>2</sup>, 17 - 28 lb.

# Staple capacity (80 g/m<sup>2</sup>, 20 lb.):

- 50 sheets: A4,  $8^{1}/_{2} \times 11$  or smaller
- 30 sheets: B4 JIS,  $8^{1}/_{2} \times 14$  or larger

# Stack capacity after stapling (80 g/m<sup>2</sup>, 20 lb.):

- 2 9 sheets: 100 sets (A4DD, B5 JISDD, 81/2 × 11DD)
- 10 50 sheets: 100 20 sets (A4 $\mathbb{D}$ , 8 $^{1}/_{2} \times 11\mathbb{D}$ )
- 10 50 sheets: 50 10 sets (A4□, B5 JIS□□, 8<sup>1</sup>/<sub>2</sub> × 11□)
- 2 9 sheets: 50 sets (A3D, B4 JISD, 11 × 17D, 8<sup>1</sup>/<sub>2</sub> × 14D)
- 10 30 sheets: 50 10 sets (A3D, B4 JISD, 11 × 17D, 8<sup>1</sup>/<sub>2</sub> × 14D)

#### Staple position:

3 positions (Top, Bottom, 2 Staples)

#### Power consumption:

50 W (Power is supplied from the main unit.)

#### Dimensions (W × D × H):

527 × 520 × 790 mm, 20.8 × 20.5 × 31.2 inches

#### Weight:

Approx. 25 kg, 55.2 lb.

# Specifications for Finisher SR3030 (3000-sheet) (Optional)

This section describes specifications for the Finisher SR3030.

#### **Finisher Upper Tray**

This section describes specifications for the finisher upper tray of the Finisher SR3030.

#### Paper size:

A3D, B4 JISD, A4DD, B5 JISDD, A5DD, B6 JISD, A6D,  $12 \times 18D$ ,  $11 \times 17D$ ,  $11 \times 15D$ ,  $11 \times 14D$ ,  $10 \times 15D$ ,  $10 \times 14D$ ,  $8^{1}/_{2} \times 14D$ ,  $8^{1}/_{2} \times 13D$ ,  $8^{1}/_{2} \times 11DD$ ,

 $8^{1}/_{4} \times 14\Box$ ,  $8^{1}/_{4} \times 13\Box$ ,  $8 \times 13\Box$ ,  $8 \times 10^{1}/_{2}\Box\Box$ ,  $8 \times 10\Box\Box$ ,  $5^{1}/_{2} \times 8^{1}/_{2}\Box$ ,  $7^{1}/_{4} \times 10^{1}/_{2}\Box\Box$ ,  $8K\Box$ ,  $16K\Box\Box$ , custom size

#### Paper weight:

52 - 163 g/m<sup>2</sup>, 14 - 43 lb.

### Stack capacity (80 g/ $m^2$ , 20 lb.):

- 250 sheets: A4,  $8^{1}/_{2} \times 11$  or smaller
- 50 sheets: B4 JIS,  $8^{1}/_{2} \times 14$  or larger

# Finisher Shift Tray

This section describes specifications for the finisher shift tray of the Finisher SR3030.

#### Paper size:

A3D, B4 JISD, A4DD, B5 JISDD, A5DD, B6 JISD, A6D,  $12 \times 18D$ ,  $11 \times 17D$ ,  $11 \times 15D$ ,  $11 \times 14D$ ,  $10 \times 15D$ ,  $10 \times 14D$ ,  $8^{1}/_{2} \times 14D$ ,  $8^{1}/_{2} \times 13D$ ,  $8^{1}/_{2} \times 11DD$ ,  $8^{1}/_{4} \times 14D$ ,  $8^{1}/_{4} \times 13D$ ,  $8 \times 13D$ ,  $8 \times 10^{1}/_{2}$ DD,  $8 \times 10^{1}/_{2}$   $\times 10^{1}/_{$ 

#### Paper weight:

52 - 256 g/m<sup>2</sup>, 14 - 68 lb.

# Stack capacity (80 g/ $m^2$ , 20 lb.):

- 3,000 sheets: A4 $\mathbb{P}$ , 8 $^{1}/_{2} \times 11\mathbb{P}$
- 1,500 sheets: A3D, B4 JISD, A4D, B5 JISDD, 11 × 17D, 8<sup>1</sup>/<sub>2</sub> × 14D, 8<sup>1</sup>/<sub>2</sub> × 11D, 12 × 18D
- 500 sheets: A5
- 100 sheets: A5 $\square$ , B6 JIS $\square$ , A6 $\square$ ,  $5^1/_2 \times 8^1/_2 \square$

#### Staple paper size:

A3D, B4 JISD, A4DD, B5 JISDD,  $12 \times 18D$ ,  $11 \times 17D$ ,  $11 \times 15D$ ,  $11 \times 14D$ ,  $10 \times 15D$ ,  $10 \times 14D$ ,  $8^{1}/_{2} \times 14D$ ,  $8^{1}/_{4} \times 14D$ ,  $8^{1}/_{2} \times 13D$ ,  $8^{1}/_{4} \times 13D$ ,  $8 \times 13D$ ,  $8 \times 10D$ ,  $8 \times 10^{1}/_{2}$ DD,  $8 \times 10^{1}/_{$ 

#### Staple paper weight:

64 - 90 g/m<sup>2</sup>, 17 - 24 lb.

### Staple capacity (80 g/ $m^2$ , 20 lb.):

- Without Mixed Size:
  - 30 sheets: A3□, B4 JIS□, 12 × 18□, 11 × 17□, 8¹/2 × 14□
  - 50 sheets: A4DD, B5 JISDD, 81/2 × 11DD
- With Mixed Size:

• 30 sheets: A3□/ A4□, B4 JIS□/ B5 JIS□, 11 × 17□/8¹/2 × 11□

# Stack capacity after stapling (80 g/ $m^2$ , 20 lb.):

- Without Mixed Size:
  - 2 19 sheets: 150 sets (A4 $\mathbb{D}$ , 8 $^{1}/_{2} \times 11\mathbb{D}$ )
  - 20 50 sheets: 150 60 sets (A4 $\square$ , 8 $^{1}/_{2} \times 11\square$ )
  - 2 14 sheets: 100 sets (A4D, B5 JISD, 8<sup>1</sup>/<sub>2</sub> × 11D)
  - 15 50 sheets: 100 30 sets (A4□, B5 JIS□, 81/2 × 11□)
  - 2 14 sheets: 100 sets (other size paper)
  - 15 30 sheets: 100 33 sets (other size paper)
- With Mixed Size:
  - 2 30 sheets: 50 sets: A3 $\Box$ / A4 $\Box$ , B4 JIS $\Box$ / B5 JIS $\Box$ , 11 × 17 $\Box$ /8 $^{1}$ /2 × 11 $\Box$

#### Staple position:

4 positions (Top, Top Slant, Bottom, 2 Staples)

#### Power consumption:

Approx. 96 W (Power is supplied from the main unit.)

#### Dimensions (W $\times$ D $\times$ H):

657 × 613 × 960 mm, 25.8 × 24.2 × 37.8 inches

#### Weight:

- Approx. 54 kg, 119.1 lb. (without punch kit)
- Approx. 56 kg, 123.5 lb. (with punch kit)

# Specifications for Finisher SR3010 (500-sheet) (Optional)

This section describes specifications for Finisher SR3010.

#### Paper size:

A3 $\square$ , B4 JIS (Japanese Industrial Standard) $\square$ , A4 $\square$  $\square$ , B5 JIS  $\square$  $\square$ , 11 × 17 $\square$ , 11 × 15 $\square$ , 11 × 14  $\square$ , 10 × 15 $\square$ , 10 × 14 $\square$ , 8 $^1/_2$  × 14 $\square$ , 8 $^1/_4$  × 14 $\square$ , 8 $^1/_2$  × 13 $\square$ , 8 $^1/_2$  × 11  $\square$  $\square$ , 8 $^1/_4$  × 13  $\square$ , 8 × 13 $\square$ , 8 × 10 $^1/_2$  $\square$  $\square$ , 8 × 10 $\square$  $\square$ , 8 × 10 $\square$  $\square$ , 8 × 10 $\square$  $\square$ 0, 8 × 10 $\square$ 0, 7 $\square$ 0, 8 × 10 $\square$ 0, 9 × 10 $\square$ 0,

#### Paper weight:

52 - 253 g/m<sup>2</sup>, 14 - 67.5 lb.

#### Stack capacity (80 g/m<sup>2</sup>, 20 lb.):

- 500 sheets: A4,  $8^{1}/_{2} \times 11$  or smaller
- 250 sheets: B4 JIS,  $8^{1}/_{2} \times 14$  or larger

#### Staple paper size:

A3D, B4 JISD, A4DD, B5 JISDD, 11 × 17D, 11 × 15D, 11 × 14D, 10 × 15D, 10 × 14D,  $8^{1}/_{2}$  × 14D,  $8^{1}/_{4}$  × 14D,  $8^{1}/_{2}$  × 13D,  $8^{1}/_{2}$  × 11DD,  $8^{1}/_{4}$  × 13D, 8 × 13D, 8 ×  $10^{1}/_{2}$ DD, 8 ×  $10^{1}/_{2}$ DD

#### Staple paper weight:

 $52 - 253 \text{ g/m}^2$ , 14 - 67.5 lb.

# Staple capacity (80 g/ $m^2$ , 20 lb.):

- Without Mixed Size:
  - 50 sheets: A4,  $8^{1}/_{2} \times 11$  or smaller
  - 30 sheets: B4 JIS,  $8^{1}/_{2} \times 14$  or larger
- With Mixed Size:
  - 30 sheets: A3D/ A4D, B4 JISD/ B5 JISD, 11 × 17D/8 $^1/_2$  × 11D ,  $8^1/_2$  × 14D/  $8^1/_2$  × 11D

### Stack capacity after stapling (80 g/m<sup>2</sup>, 20 lb.):

- 2 9 sheets: 55 46 sets (A4 $\overline{D}$ , B5 JIS $\overline{D}$ , 8 $^{1}/_{2} \times 11\overline{D}$ )
- 10 50 sheets: 45 10 sets (A4 $\mathbb{D}$ , B5 JIS $\mathbb{D}$ , 8 $^{1}/_{2} \times 11\mathbb{D}$ )
- 2 9 sheets: 55 27 sets (A4 $\square$ , B5 JIS $\square$ , 8 $^1/_2 \times 11 \square$ )
- 10 50 sheets: 25 8 sets (A4 $\square$ , B5 JIS $\square$ , 8 $^1/_2 \times$  11 $\square$ )
- 2 9 sheets: 55 27 sets (A3□, B4 JIS□, 11 × 17□, 8<sup>1</sup>/<sub>2</sub> × 14□)
- 10 30 sheets: 25 8 sets (A3D, B4 JISD, 11 × 17D, 8<sup>1</sup>/<sub>2</sub> × 14D)

#### Staple position:

5 positions (Top, Top Slant, Bottom, Bottom Slant, 2 Staples)

#### Power consumption:

Approx. 50 W (Power is supplied from the main unit.)

#### Dimensions (W $\times$ D $\times$ H):

 $396 \times 551 \times 275$  mm,  $15.6 \times 21.7 \times 10.2$  inches

#### Weight:

Approx. 12 kg, 26.5 lb.

# Specifications for Booklet Finisher (Optional)

This section describes specifications for booklet finisher.

# Specifications for Booklet Finisher SR3020 (2000-sheet-Booklet) (Optional)

This section describes specifications for Booklet Finisher SR3020.

# Finisher Upper Tray

This section describes specifications for the finisher upper tray of Booklet Finisher SR3020.

#### Paper size:

A3D, B4 JISD, A4DD, B5 JISDD, A5DD, B6 JISD, A6D,  $12 \times 18D$ ,  $11 \times 17D$ ,  $11 \times 15D$ ,  $11 \times 14D$ ,  $10 \times 15D$ ,  $10 \times 14D$ ,  $8^{1}/_{2} \times 14D$ ,  $8^{1}/_{2} \times 13D$ ,  $8^{1}/_{2} \times 11DD$ ,  $8^{1}/_{4} \times 14D$ ,  $8^{1}/_{4} \times 13D$ ,  $8 \times 13D$ ,  $8 \times 10^{1}/_{2}DD$ ,  $8 \times 10DD$ ,  $5^{1}/_{2} \times 8^{1}/_{2}D$ ,  $7^{1}/_{4} \times 10^{1}/_{2}DD$ , 8KD, 16KDD, custom size

#### Paper weight:

52 - 163 g/m<sup>2</sup>, 14 - 43 lb.

# Stack capacity (80 g/ $m^2$ , 20 lb.):

- 250 sheets: A4,  $8^{1}/_{2} \times 11$  or smaller
- 50 sheets: B4 JIS,  $8^{1}/_{2} \times 14$  or larger

# Finisher Shift Tray

This section describes specifications for the finisher shift tray of Booklet Finisher SR3020.

#### Paper size:

A3D, B4 JISD, A4DD, B5 JISDD, A5DD, B6 JISD, A6D,  $12 \times 18D$ ,  $11 \times 17D$ ,  $11 \times 15D$ ,  $11 \times 14D$ ,  $10 \times 15D$ ,  $10 \times 14D$ ,  $8^{1}/_{2} \times 14D$ ,  $8^{1}/_{2} \times 13D$ ,  $8^{1}/_{2} \times 11DD$ ,  $8^{1}/_{4} \times 14D$ ,  $8^{1}/_{4} \times 13D$ ,  $8 \times 13D$ ,  $8 \times 10^{1}/_{2}DD$ ,  $8 \times 10^{1}/_{2} \times 8^{1}/_{2} \times 8^{1}/_{2}D$ ,  $7^{1}/_{4} \times 10^{1}/_{2}DD$ , 8KD, 16KDD, custom size

#### Paper weight:

 $52 - 256 \text{ g/m}^2$ , 14 - 68 lb.

# Stack capacity (80 g/m<sup>2</sup>, 20 lb.):

- 2,000 sheets: A4 $\mathbb{D}$ , 8 $^{1}/_{2} \times 11\mathbb{D}$
- 1,000 sheets: A3D, B4 JISD, A4D, B5 JISDD, 11 × 17D, 8<sup>1</sup>/<sub>2</sub> × 14D, 8<sup>1</sup>/<sub>2</sub> × 11D, 12 × 18D

• 100 sheets: A5\(\mathbb{D}\), B6\(\text{JIS}\(\mathbb{D}\), A6\(\mathbb{D}\), 5\(\frac{1}{2}\times 8\(\frac{1}{2}\mathbb{D}\)

#### Staple paper size:

A3D, B4 JISD, A4DD, B5 JISDD,  $12 \times 18D$ ,  $11 \times 17D$ ,  $11 \times 15D$ ,  $11 \times 14D$ ,  $10 \times 15D$ ,  $10 \times 14D$ ,  $8^{1}/_{2} \times 14D$ ,  $8^{1}/_{4} \times 14D$ ,  $8^{1}/_{2} \times 13D$ ,  $8^{1}/_{4} \times 13D$ ,  $8 \times 13D$ ,  $8 \times 13D$ ,  $8^{1}/_{2} \times 11DD$ ,  $8 \times 10^{1}/_{2}DD$ ,  $8 \times 10^{1}/_{2}DD$ ,  $8 \times 10^{1}/_{2}DD$ ,  $8 \times 10^{1}/_{2}DD$ 

#### Staple paper weight:

64 - 90 g/m<sup>2</sup>, 17 - 24 lb.

# Staple capacity (80 g/m<sup>2</sup>, 20 lb.):

- Without Mixed Size:
  - 30 sheets: A3D, B4 JISD, 12 × 18D, 11 × 17D, 8<sup>1</sup>/<sub>2</sub> × 14D
  - 50 sheets: A4DD, B5 JISDD, 81/2 × 11DD
- With Mixed Size:
  - 30 sheets: A3 \(\tilde{A}\) A4 \(\Delta\), B4 \(\JIS \tilde{D}\) B5 \(\JIS \Delta\), 11 \(\times 17 \Delta\) \(\B^1/\_2 \times 11 \Delta\)

# Stack capacity after stapling (80 g/m<sup>2</sup>, 20 lb.):

- Without Mixed Size:
  - 2 12 sheets: 150 sets (A4 $\mathbb{D}$ , 8 $^{1}/_{2} \times 11\mathbb{D}$ )
  - 13 50 sheets: 150 40 sets (A4 $\mathbb{D}$ , 8 $^{1}/_{2} \times 11\mathbb{D}$ )
  - 2 9 sheets: 100 sets (A4□, B5 JIS□, 81/2 × 11□)
  - 10 50 sheets: 100 20 sets (A4 $\square$ , B5 JIS $\square$ , 8 $^1/_2 \times 11\square$ )
  - 2 9 sheets: 100 sets (other size paper)
  - 10 30 sheets: 100 33 sets (other size paper)
- With Mixed Size:
  - 2 30 sheets: 50 sets: A3 $\Box$ / A4 $\Box$ , B4 JIS $\Box$ / B5 JIS $\Box$ , 11 × 17 $\Box$ /8 $^{1}/_{2}$  × 11 $\Box$

#### Staple position:

4 positions (Top, Top Slant, Bottom, 2 Staples)

# **Finisher Booklet Tray**

This section describes specifications for the finisher booklet tray of Booklet Finisher SR3020.

#### Saddle stitch paper size:

A3 $\square$ , B4 JIS $\square$ , A4 $\square$ , B5 JIS $\square$ , 11 × 17 $\square$ , 8 $^1/_2$  × 14 $\square$ , 8 $^1/_2$  × 11 $\square$ 

#### Saddle stitch paper weight:

64 - 90 g/m<sup>2</sup>, 17 - 24 lb.

# Saddle stitch capacity (80 g/m<sup>2</sup>, 20 lb.):

1 set: 15 sheets

#### Stack capacity after saddle stitching (80 g/ $m^2$ , 20 lb.):

• 2 - 5 sheets: 30 sets

• 6 - 10 sheets: 15 sets

• 11 - 15 sheets: 10 sets

#### Saddle stitch position:

Centre 2 positions

#### Power consumption:

Approx. 96 W (Power is supplied from the main unit.)

#### Dimensions (W $\times$ D $\times$ H):

657 × 613 × 960 mm, 25.8 × 24.2 × 37.8 inches

#### Weight:

- Approx. 63 kg, 138.9 lb. (without punch kit)
- Approx. 65 kg, 143.3 lb. (with punch kit)

# Specifications for Booklet Finisher SR3000 (1000-sheet-Booklet) (Optional)

This section describes specifications for Booklet Finisher SR3000.

# Finisher Upper Tray

This section describes specifications for the finisher upper tray of Booklet Finisher SR3000.

#### Paper size:

A3D, B4 JISD, A4DD, B5 JISDD, A5DD, B6 JISD, A6D, 
$$11 \times 17$$
D,  $8^{1}/_{2} \times 14$ D,  $8^{1}/_{2} \times 13$ D,  $8^{1}/_{2} \times 11$ DD,  $8 \times 13$ D,  $5^{1}/_{2} \times 8^{1}/_{2}$ DD

#### Paper weight:

52 - 105 g/m<sup>2</sup>, 14 - 28 lb.

# Stack capacity (80 $g/m^2$ , 20 lb.):

- 100 sheets: A4,  $8^{1}/_{2} \times 11$  or smaller
- 50 sheets: B4 JIS,  $8^{1}/_{2} \times 14$  or larger

# Finisher Shift Tray

This section describes specifications for the finisher shift tray of Booklet Finisher SR3000.

#### Paper size:

A3D, B4JISD, A4DD, B5JISD,  $11 \times 17D$ ,  $8^{1}/_{2} \times 14D$ ,  $8^{1}/_{2} \times 13D$ ,  $8^{1}/_{2} \times 11DD$ ,  $8^{1}/_{4} \times 13D$ ,  $8 \times 13D$ ,  $7^{1}/_{4} \times 10^{1}/_{2}DD$ 

#### Paper weight:

 $52 - 256 \text{ g/m}^2$ , 14 - 68 lb.

#### Stack capacity (80 g/ $m^2$ , 20 lb.):

- 1,000 sheets: A4,  $8^{1}/_{2} \times 11$  or smaller
- 500 sheets: B4 JIS,  $8^{1}/_{2} \times 14$  or larger

#### Staple paper size:

A3D, B4 JISD, A4DD, B5 JISDD, 11 × 17D,  $8^{1}/_{2}$  × 14D,  $8^{1}/_{2}$  × 11DD,  $7^{1}/_{4}$  ×  $10^{1}/_{2}$ DD,  $8 \times 13$ D,  $8^{1}/_{2} \times 13$ D,  $8^{1}/_{4} \times 13$ D

#### Staple paper weight:

64 - 90 g/m<sup>2</sup>, 17 - 24 lb.

# Staple capacity (80 g/m<sup>2</sup>, 20 lb.):

- 50 sheets: A4,  $8^{1}/_{2} \times 11$  or smaller
- 30 sheets: B4 JIS,  $8^{1}/_{2} \times 14$  or larger

# Stack capacity after stapling (80 g/m<sup>2</sup>, 20 lb.):

- 2 9 sheets: 100 sets (A4 $\mathbb{D}$ , 8 $^{1}/_{2} \times 11\mathbb{D}$ )
- 10 50 sheets: 100 20 sets (A4 $\mathbb{D}$ , 8 $^{1}/_{2} \times 11\mathbb{D}$ )
- 2 9 sheets: 100 sets (A4□, B5 JIS□□, 81/2 × 11□)
- 10 50 sheets: 50 10 sets (A4□, B5 JIS□□, 81/2 × 11□)
- 2 9 sheets: 50 sets (A3 $\square$ , B4 JIS $\square$ , 11 × 17 $\square$ , 8 $^1/_2$  × 14 $\square$ )
- 10 30 sheets: 50 10 sets (A3 $\square$ , B4 JIS $\square$ , 11 × 17 $\square$ , 8 $^1/_2$  × 14 $\square$ )

# Staple position:

3 positions (Top, Bottom, 2 Staples)

# **Finisher Booklet Tray**

This section describes specifications for the finisher booklet tray of Booklet Finisher SR3000.

#### Saddle stitch paper size:

A3D, B4 JISD, A4D, B5 JISD,  $11 \times 17D$ ,  $8^{1}/_{2} \times 14D$ ,  $8^{1}/_{2} \times 11D$ 

#### Saddle stitch paper weight:

64 - 90 g/m<sup>2</sup>, 17 - 24 lb.

# Saddle stitch capacity (80 g/m<sup>2</sup>, 20 lb.):

1 set: 10 sheets

# Stack capacity after saddle stitching (80 g/m<sup>2</sup>, 20 lb.):

• 2 - 5 sheets: 20 sets

• 6 - 10 sheets: 10 sets

#### Saddle stitch position:

Centre 2 positions

#### Power consumption:

Approx. 60 W (Power is supplied from the main unit.)

#### Dimensions (W $\times$ D $\times$ H):

 $535 \times 600 \times 930$  mm,  $21.1 \times 23.7 \times 36.7$  inches

#### Weight:

• Approx. 48 kg, 105.9 lb. (without punch kit)

• Approx. 50 kg, 110.3 lb. (with punch kit)

# **Specifications for Punch Kit (Optional)**

This section describes specifications for punch kit.

# Specifications for Punch Kit (Finisher SR3030, Booklet Finisher SR3020) (Optional)

This section describes specifications for the punch kit (Finisher SR3030, Booklet Finisher SR3020).

#### Paper size:

Punch unit type	Paper size
2 & 4 holes type: 2 holes	$\square$ : A3, B4 JIS, A4, B5 JIS, A5, 11 × 17, 8 $^{1}/_{2}$ × 14, 8 $^{1}/_{2}$ × 11, 5 $^{1}/_{2}$ × 8 $^{1}/_{2}$ , 7 $^{1}/_{4}$ × 10 $^{1}/_{2}$ , 8 × 13, 8 $^{1}/_{2}$ × 13, 8 $^{1}/_{4}$ × 13, 8 $^{1}/_{4}$ × 14, 8 × 10 $^{1}/_{2}$ , 8 × 10, 11 × 15, 11 × 14, 10 × 15, 10 × 14, 8K, 16K
2 & 4 holes type: 2 holes	$ \Box$ : A4, B5 JIS, A5, $8^{1}/_{2} \times 11$ , $7^{1}/_{4} \times 10^{1}/_{2}$ , $8 \times 10^{1}/_{2}$ , $8 \times 10^{1}$
2 & 4 holes type: 4 holes	$\square$ : A3, B4 JIS, 11 × 17, 11 × 15, 11 × 14, $7^1/_4 \times 10^1/_2$ , 8K
2 & 4 holes type: 4 holes	$\square$ : A4, B5 JIS, $8^{1}/_{2} \times 11$ , $8 \times 10^{1}/_{2}$ , $7^{1}/_{4} \times 10^{1}/_{2}$ , 16K
4 holes type: 4 holes	$\square$ : A3, B4 JIS, A4, B5 JIS, A5, $11 \times 17$ , $8^{1}/_{2} \times 14$ , $8^{1}/_{2} \times 11$ , $5^{1}/_{2} \times 8^{1}/_{2}$ , $7^{1}/_{4} \times 10^{1}/_{2}$ , $8 \times 13$ , $8^{1}/_{2} \times 13$ , $8^{1}/_{4} \times 13$ , $8^{1}/_{4} \times 14$ , $8 \times 10^{1}/_{2}$ , $8 \times 10$ , $11 \times 15$ , $11 \times 14$ , $10 \times 15$ , $10 \times 14$ , 8K, $16$ K
4 holes type: 4 holes	$ \overline{D}$ : A4, B5 JIS, A5, $8^{1}/_{2} \times 11$ , $7^{1}/_{4} \times 10^{1}/_{2}$ , $8 \times 10^{1}/_{2}$ , $8 \times 10^{1}$
2 & 3 holes type: 2 holes	$\square$ : A3, B4 JIS, B5 JIS, A5, $11 \times 17$ , $8^{1}/_{2} \times 14$ , $8^{1}/_{2} \times 11$ , $5^{1}/_{2} \times 8^{1}/_{2}$ , $7^{1}/_{4} \times 10^{1}/_{2}$ , $8 \times 13$ , $8^{1}/_{2} \times 13$ , $8^{1}/_{4} \times 13$ , $8^{1}/_{4} \times 14$ , $8 \times 10^{1}/_{2}$ , $8 \times 10$ , $11 \times 15$ , $11 \times 14$ , $10 \times 15$ , $10 \times 14$ , $8$ K, $16$ K
2 & 3 holes type: 2 holes	$ \Box$ : A4, B5 JIS, A5, $8^{1}/_{2} \times 11$ , $7^{1}/_{4} \times 10^{1}/_{2}$ , $8 \times 10^{1}/_{2}$ , $8 \times 10^{1}$

#### Paper weight:

 $52 - 105 \text{ g/m}^2$ , 14 - 28 lb.

#### Power consumption:

20 W (Power is supplied from the main unit.)

# Dimensions (W $\times$ D $\times$ H):

110 × 484 × 117 mm, 4.4 × 190.6 × 46.1 inches

#### Weight:

Approx. 2.9 kg, 6.4 lb.

# Specifications for Punch Kit (Booklet Finisher SR3000) (Optional)

This section describes specifications for the punch kit (Booklet Finisher SR3000).

#### Paper size:

Punch unit type	Paper size
2 & 4 holes type: 2 holes	$\square$ : A3, B4 JIS, A4, B5 JIS, A5, 11 × 17, 8 $^{1}/_{2}$ × 14, 8 $^{1}/_{2}$ × 11, 5 $^{1}/_{2}$ × 8 $^{1}/_{2}$ × 13, 8 $^{1}/_{2}$ × 13, 8 $^{1}/_{4}$ × 13
2 & 4 holes type: 2 holes	$ \Box$ : A4, B5 JIS, A5, $8^{1}/_{2} \times 11$ , $7^{1}/_{4} \times 10^{1}/_{2}$ , $5^{1}/_{2} \times 8^{1}/_{2}$
2 & 4 holes type: 4 holes	<b>□</b> : A3, B4 JIS, 11 × 17
2 & 4 holes type: 4 holes	$\square$ : A4, B5 JIS, $8^{1}/_{2} \times 11$ , $7^{1}/_{4} \times 10^{1}/_{2}$
4 holes type: 4 holes	$\square$ : A3, B4 JIS, A4, B5 JIS, A5, $11 \times 17$ , $8^{1}/_{2} \times 14$ , $8^{1}/_{2} \times 11$ , $5^{1}/_{2} \times 8^{1}/_{2}$ , $7^{1}/_{4} \times 10^{1}/_{2}$ , $8 \times 13$ , $8^{1}/_{2} \times 13$ , $8^{1}/_{4} \times 13$
4 holes type: 4 holes	$ \Box$ : A4, B5 JIS, A5, $8^{1}/_{2} \times 11$ , $7^{1}/_{4} \times 10^{1}/_{2}$ , $5^{1}/_{2} \times 8^{1}/_{2}$

Punch unit type	Paper size
2 & 3 holes type: 2 holes	$\square$ : A3, B4 JIS, A4, B5 JIS, A5, 11 × 17, 8 $^{1}/_{2}$ × 14, 8 $^{1}/_{2}$ × 11, 5 $^{1}/_{2}$ × 8 $^{1}/_{2}$ , 7 $^{1}/_{4}$ × 10 $^{1}/_{2}$ , 8 × 13, 8 $^{1}/_{2}$ × 13, 8 $^{1}/_{4}$ × 13
2 & 3 holes type: 2 holes	$\square$ : A4, B5 JIS, A5, $8^{1}/_{2} \times 11$ , $7^{1}/_{4} \times 10^{1}/_{2}$ , $5^{1}/_{2} \times 8^{1}/_{2}$
2 & 3 holes type: 3 holes	<b>□</b> : A3, B4 JIS, 11 × 17
2 & 3 holes type: 3 holes	$\square$ : A4, B5 JIS, $8^{1}/_{2} \times 11$ , $7^{1}/_{4} \times 10^{1}/_{2}$

# Paper weight:

52 - 105 g/m<sup>2</sup>, 14 - 28 lb.

# **Specifications for Paper Trays (Optional)**

This section describes specifications for paper trays.

# Specifications for Lower Paper Tray (Optional)

This section describes specifications for the lower paper tray.

#### Paper size:

A3D, B4 JISD, A4DD, B5 JISDD, A5D, 11 × 17D,  $8^{1}/_{2}$  × 14D,  $8^{1}/_{2}$  × 11DD,  $8^{1}/_{2}$  × 13DD,  $8^{1}/_{4}$  × 13D, 8 × 13D,  $5^{1}/_{2}$  ×  $8^{1}/_{2}$ DD,  $7^{1}/_{4}$  ×  $10^{1}/_{2}$ DD,  $8^{1}/_{4}$  × 14D, 8 ×  $10^{1}/_{2}$ DD, 8 × 10DD, 11 × 15DD, 10 × 14DD

#### Paper weight:

 $60 - 256 \text{ g/m}^2$ , 16 - 68 lb.

#### Paper capacity (80 g/ $m^2$ , 20 lb.):

550 sheets × 1 tray

#### Power consumption:

Maximum 50 W (Power is supplied from the main unit.)

#### Dimensions (W $\times$ D $\times$ H):

 $580 \times 620 \times 120$  mm,  $22.9 \times 24.5 \times 4.8$  inches

#### Weight:

Approx. 15 kg, 33.1 lb.

# Specifications for Lower Paper Trays (Optional)

This section describes specifications for the lower paper trays.

#### Paper size:

A3D, B4 JISD, A4DD, B5 JISDD, A5D,  $11 \times 17$ D,  $8^{1}/_{2} \times 14$ D,  $8^{1}/_{2} \times 11$ DD,  $8^{1}/_{2} \times 13$ DD,  $8^{1}/_{4} \times 13$ D,  $8 \times 13$ D,  $5^{1}/_{2} \times 8^{1}/_{2}$ DD,  $7^{1}/_{4} \times 10^{1}/_{2}$ DD,  $8^{1}/_{4} \times 14$ D,  $8 \times 10^{1}/_{2}$ DD,  $8 \times 10^{1}/_{2}$ DD,

#### Paper weight:

 $60 - 256 \,\mathrm{g/m^2}$ ,  $16 - 68 \,\mathrm{lb}$ .

#### Paper capacity (80 g/ $m^2$ , 20 lb.):

550 sheets × 2 trays

#### Power consumption:

Maximum 50 W (Power is supplied from the main unit.)

q

#### Dimensions (W $\times$ D $\times$ H):

580 × 620 × 260 mm, 22.9 × 25.6 × 10.3 inches

#### Weight:

Approx. 26 kg, 57.4 lb.

# Specifications for Tray 3 (LCT) (Optional)

This section describes specifications for the tray 3 (LCT).

#### Paper size:

$$A4D$$
,  $8^{1}/_{2} \times 11D$ 

#### Paper weight:

#### Paper capacity (80 g/ $m^2$ , 20 lb.):

1,000 sheets × 2 trays

#### Power consumption:

Maximum 50 W (Power is supplied from the main unit.)

#### Dimensions (W $\times$ D $\times$ H):

 $580 \times 650 \times 260$  mm,  $22.9 \times 25.6 \times 10.3$  inches

#### Weight:

Approx. 26 kg, 57.4 lb.

# Specifications for Large capacity tray (LCT) (Optional)

This section describes specifications for the large capacity tray (LCT).

#### Paper size:

$$A4D$$
,  $8^{1}/_{2} \times 11D$ 

#### Paper weight:

$$60 - 256 \text{ g/m}^2$$
,  $16 - 68 \text{ lb}$ .

#### Paper capacity (80 g/ $m^2$ , 20 lb.):

1,200 sheets

#### Power consumption:

Maximum 55 W (Power is supplied from the main unit.)

#### Dimensions (W × D × H):

 $348 \times 540 \times 290$  mm,  $13.8 \times 21.3 \times 11.5$  inches

# Weight:

Approx. 14 kg, 30.9 lb.

Q

# **Specifications for Bridge Unit (Optional)**

This section describes specifications for the bridge unit.

# Stack capacity (80 g/ $m^2$ , 20 lb.):

- 250 sheets: A4,  $8^{1}/_{2} \times 11$  or smaller
- 125 sheets: B4 JIS,  $8^{1}/_{2} \times 14$  or larger

#### Power consumption:

Approx. 10 W (Power is supplied from the main unit.)

#### Dimensions (W $\times$ D $\times$ H):

 $415 \times 412 \times 111$  mm,  $16.4 \times 16.3 \times 4.4$  inches

#### Weight:

Approx. 4 kg, 8.9 lb.

Q

# **Specifications for Internal Tray 2 (Optional)**

This section describes specifications for the internal tray 2 (1 bin tray).

#### Number of bins:

1

#### Paper size:

A3 $\square$ , B4 JIS $\square$ , A4 $\square$  $\square$ , B5 JIS $\square$  $\square$ , A5 $\square$ , 11 × 17 $\square$ , 8 $^1/_2$  × 14 $\square$ , 8 $^1/_2$  × 11 $\square$  $\square$ , 5 $^1/_2$  × 8 $^1/_2$   $\square$ , 7 $^1/_4$  × 10 $^1/_2$  $\square$  $\square$ , 8 $^1/_2$  × 13 $\square$ , 8 $^1/_4$  × 14 $\square$ , 8 $^1/_4$  × 13 $\square$ , 8 × 13 $\square$ , 8 × 10 $\square$ , 11 × 14  $\square$ , 11 × 15 $\square$ , 10 × 14 $\square$ , 10 × 15 $\square$ , 8K $\square$ , 16K $\square$  $\square$ , custom size

#### Paper weight:

 $60 - 105 \text{ g/m}^2$ , 16 - 28 lb.

# Paper capacity (80 g/ $m^2$ , 20 lb.):

125 sheets

#### Power consumption:

Approx. 10 W (Power is supplied from the main unit.)

#### Dimensions (W $\times$ D $\times$ H):

 $565 \times 410 \times 115$  mm,  $22.3 \times 16.2 \times 4.6$  inches

#### Weight:

Approx. 2.5 kg, 5.6 lb.

# **Specifications for Internal Shift Tray (Optional)**

This section describes specifications for the shift sort tray.

# Paper capacity (80 g/ $m^2$ , 20 lb.):

- 250 sheets: A4,  $8^{1}/_{2} \times 11$  or smaller
- 125 sheets: B4 JIS,  $8^{1}/_{2} \times 14$  or larger

#### Power consumption:

Maximum 10 W (Power is supplied from the main unit.)

#### Dimensions (W $\times$ D $\times$ H):

 $423 \times 468 \times 114$  mm,  $16.7 \times 18.5 \times 4.5$  inches

#### Weight:

Approx. 2 kg, 4.5 lb.

Q

# Specifications for IEEE 1284 Interface Board (Optional)

This section describes specifications for the IEEE 1284 interface board.

#### Transmission spec.:

**IEEE 1284** 

#### Required cable:

Standard IEEE 1284 compliant Micro Centronics 36 pin cable

# Specifications for Wireless LAN Board (Optional)

This section describes specifications for the wireless LAN board.

#### Transmission spec.:

• Based on IEEE 802.11a/b/g (wireless LAN)

#### Protocol:

TCP/IP, IPX/SPX, AppleTalk

#### Data transfer speed:

Auto select from the following speed:

1 Mbps, 2 Mbps, 5.5 Mbps, 6 Mbps, 9 Mbps, 11 Mbps, 12 Mbps, 18 Mbps, 24 Mbps, 36 Mbps, 48 Mbps, 54 Mbps

#### Frequency range:

- IEEE 802.11a/b/g wireless LAN:
  - 2412 2472 MHz (1 13 channels)
  - 5180 5320 MHz (36, 40, 44, 48, 52, 56, 60, and 64 channels)

#### Transmission mode:

- Ad hoc mode
- Infrastructure mode



• SmartDeviceMonitor and Web Image Monitor are supported.

# Specifications for Bluetooth Interface Unit (Optional)

This section describes specifications for the Bluetooth interface unit.

#### **Supported Profiles:**

- SPP (Serial Port Profile)
- HCRP (Hardcopy Cable Replacement Profile)
- BIP (Basic Imaging Profile)

#### Frequency Range:

2.45 GHz ISM band

#### **Data Transmission Speed:**

723 kbps

#### Maximum Range:

10 m



• The transmission speed is adjusted according to factors such as the distance and obstacles between the devices, radio signal condition and Bluetooth adaptor.

## **Specifications for Gigabit Ethernet (Optional)**

This section describes specifications for the Gigabit Ethernet.

#### **Interface Connector:**

• Ethernet (10Base-T, 100Base-TX, 1000Base-T)

#### **Data Transmission Speed:**

• Ethernet: 1000 Mbps, 100 Mbps, 10 Mbps

#### Protocol:

TCP/IP, IPX/SPX, AppleTalk

#### **Distance Between Devices:**

• Ethernet: 100 m

## **Specifications for Other Options**

This section describes specifications for other options.

#### **Copy Data Security Unit**

The Copy Data Security Unit deletes images and prints the gray ground colour of the paper when the documents marked unauthorized are copied.

#### DataOverWriteSecurity Unit

The DataOverWriteSecurity Unit automatically overwrites the data that remains on the hard disk.

### 9

### **Trademarks**

Adobe, Acrobat, Acrobat Reader, PostScript, and Reader are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.

AppleTalk, Macintosh and Mac OS are trademarks of Apple Inc., registered in the U.S. and other countries.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Ricoh Company, Ltd. is under license.

Microsoft<sup>®</sup>, Windows NT<sup>®</sup>, Windows Server<sup>®</sup>, and Windows Vista<sup>®</sup> are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

Netscape and Netscape Navigator are registered trademarks of Netscape Communications Corporation.

Novell, NetWare, NDS and NDPS are registered trademarks of Novell, Inc.

PCL® is a registered trademark of Hewlett-Packard Company.

 $\mathsf{PowerPC}^{\textcircled{\$}}$  is a trademark of International Business Machines Corporation in the United States, other countries, or both.

UNIX is a registered trademark in the United States and other countries, licensed exclusively through X/ Open Company Limited.

Other product names used herein are for identification purposes only and might be trademarks of their respective companies. We disclaim any and all rights to those marks.

The proper names of the Windows operating systems are as follows:

• The product names of Windows 2000 are as follows:

Microsoft® Windows® 2000 Professional

Microsoft® Windows® 2000 Server

Microsoft® Windows® 2000 Advanced Server

• The product names of Windows XP are as follows:

Microsoft® Windows® XP Professional

Microsoft® Windows® XP Home Edition

Microsoft® Windows® XP Media Center Edition

Microsoft® Windows® XP Tablet PC Edition

• The product names of Windows Vista are as follows:

Microsoft® Windows Vista® Ultimate

Microsoft® Windows Vista® Enterprise

Microsoft® Windows Vista® Business

Microsoft® Windows Vista® Home Premium

Microsoft® Windows Vista® Home Basic

• The product names of Windows Server 2003 are as follows:

9

Microsoft® Windows Server® 2003 Standard Edition

Microsoft® Windows Server® 2003 Enterprise Edition

Microsoft® Windows Server® 2003 Web Edition

Microsoft® Windows Server® 2003 Datacenter Edition

• The product names of Windows Server 2003 R2 are as follows:

Microsoft® Windows Server® 2003 R2 Standard Edition

Microsoft® Windows Server® 2003 R2 Enterprise Edition

Microsoft® Windows Server® 2003 R2 Datacenter Edition

## **INDEX**

	Cleaning the exposure glass135
11: 4	Clear Modes key60
1 bin tray56, 58, 176	Clear/Stop key61
A	Collate12
About the guide on the internal tray 254	Colour46
Access to the machine	Colour copy11, 130
Adding staples102	Colours19
Adding toner99	Combine11
Address book17	Communicating indicator61
ADF20, 49, 52, 157	Components49
Adhesive labels86	Computer17
Adjusting colours11	Confidential File indicator61
Adjusting image qualities11	Contents of the CD-ROM139
Alert indicator61	Control panel50, 52, 60, 65, 66, 67
Authentication screen	Copier11, 69
Auto document feeder20, 49, 52	Copy Data Security Unit17, 58, 182
Auto Off74	Copy speed22
Auto Reduce/Enlarge11	Counter127
Available characters113	Counterfeit bank bills19
В	D
Bluetooth interface unit58, 180	Data In indicator61
Booklet11	DataOverWriteSecurity Unit16, 58, 182
Booklet Finisher	Deleting characters115
Booklet Finisher SR3000	DeskTopBinder12, 13
Booklet Finisher SR302058, 105, 106	DeskTopBinder Lite142
Bridge unit	DeskTopBinder-SmartDeviceMonitor for Client
Browser Unit	139, 144
Bypass tray	Display panel23, 60, 63
bypuss iruy50, 33, 60, 74	Displaying the Total Counter127
С	Document Server12, 69
Caster Table for Lower paper tray56	Document Server for Type 1 and 2155
CAUTION25, 31	Document Server for Type 3 and 4156
CD-ROM117, 118, 119, 120, 139	Documentation for This Machine1
Changing modes69	Dos and Don'ts129
Changing Paper Thickness Settings125	Duplex11
Changing the Display Language121	Duplex priority38
Changing the paper size81	E
Changing the paper size in the paper trays81	E mail Transmission
Changing to a size that is not automatically	E-mail Transmission
Detected83	Energy Saver
Check	Energy Saver key61
Cleaning the auto document feeder135	Energy Saving Functions
Cleaning the Dustproof Glass136	ENERGY STAR Program38

Energy-saving38	Function keys	60
Enlarge11	G	
Enquiry123	2. 1. 21	
Enter key (# key)62	Gigabit Ethernet	
Entering letters114	Gigabit Ethernet (1000BASE-T)	
Entering symbols114	Grain	
Entering text113, 114	Guide to components of type 1 and 2	
Entry screen113	Guide to components of type 3 and 4	51
Envelope47	H	
Envelopes11, 92	11	0.4
Environments to avoid132	Handling power cords	
Environments where the machine can be used	Handling power plugs	
25	Handling the machine's interior	
Ethernet13, 181	Handling the machine's supplies	
Exposure glass49, 52	Handling the main machine	
Extender50, 53	HDD Encryption Unit	
External options55	Hold Print	
Extra G3 Interface Unit58	How to enter text	
E	How to use the operating instructions	
r	HTML manuals10, 11	7, 119
Facsimile13, 14, 15, 69	1	
Fax unit58	1555 100 ( )	
File Format Converter12, 58	IEEE 1284 interface board	
Finisher159	IEEE 1284 Interface Board	
Finisher Booklet Tray (Booklet Finisher SR3000)	Important	
167	Important symbols	
Finisher Booklet Tray (Booklet Finisher SR3020)	Install	
	Installing operating instructions	
Finisher Shift Tray (Booklet Finisher SR3000) 166	Internal options	58
Finisher Shift Tray (Booklet Finisher SR3020)	Internal shift tray55, 5	7, 177
164	Internal Tray 1	50, 52
Finisher Shift Tray (Finisher SR3030)161	Internal tray 256, 5	8, 176
Finisher Shift Tray (Finisher SR790)159	Internet Fax	14
Finisher SR301056, 102	Interrupt key	61
Finisher SR303058, 107	IP-Fax	14
Finisher SR79056, 58, 103	ltems	20
Finisher Upper Tray (Booklet Finisher SR3000)	K	
166		
Finisher Upper Tray (Booklet Finisher SR3020)	Key arrangement	113
164	Key Colour	64
Finisher Upper Tray (Finisher SR3030)160	L	
Finisher Upper Tray (Finisher SR790)159		
Font Manager139	Label paper (adhesive labels)	
Front Cover50, 52	LAN-Fax1	
	LANI-Fax driver	1/1

Large capacity tray20	0	
Large capacity tray (LCT)56, 57, 77, 88	0(( )	
LCT20, 88	Off mode	
Legal prohibition19	OHP transparencies	
Loading paper75	Opening manuals from the [Start] menu119	
Loading paper into the large capacity tray (LCT)	Opening manuals from the CD-ROM120	
77	Opening manuals from the icon119	
Loading paper into the paper trays75	Operating instructions119	
Loading paper into the tray 3 (LCT)76	Operation switch50, 53, 61, 71	
Local connection12	Optimum environmental conditions132	
Locked Print12	Options55, 58, 182	
Login66, 68	Orientation-fixed paper or two-sided paper79	
Login/Logout key62	P	
Logout67, 68	Paper45, 75	
Low Power mode	Paper grain94	
Lower paper tray56		
lower paper trays86	Paper setting direction94	
Lower paper trays56, 57	Paper sizes	
Lower Paper Trays50, 53	Paper storage97	
Lower Right Cover51, 53	Paper trays50, 52, 94	
M	Paper types86	
	Paperless fax reception	
Machine environment131	Paperless fax transmission	
Machine types22	Password	
Magazine11	PCL	
Mail to Print14	PDF manuals10, 118	
Main power71, 73	PictBridge card	
Main power indicator61	Plain Paper Setting121	
Main power switch50, 52, 71	Positions of WARNING and CAUTION labels fo users of type 1 and 23	
Maintaining your machine135	Positions of WARNING and CAUTION labels fo	
Manuals117, 118, 119, 120, 139	users of type 3 and 432	
Manuals for this machine8	PostScript139	
Manuals list10	Power71, 72	
Media slot55, 57	Power connection133	
Moving131	Power supply7	
N	PPD139	
Names of major items20	Preventing an unauthorized copy17	
Network15	Print speed22	
Network connection12	Printed manuals10	
Network delivery scanner	Printer12, 69	
Notice	Printer driver66, 68, 139	
Number keys	Printer Drivers and Utilities139, 141, 143, 144	
140IIIDOI NEYS01	Printer Utility for Mac.	

Printing a PDF file directly	Specifi DF301 Specifi DF303 Specifi Specifi
R	Specif
Receiving File indicator	sheet-I Specif sheet-I Specif Specif Specif
Safety during operation25	Specif
Safety information25	Specifi
Safety Labels of This Machine31	Specif
Safety precautions to be followed25	
Sample Copy key62	Specif
Sample Print12	Specif
Saving colour copies130	Specif
Saving paper11	Specif
Scanner15, 69	Specif
Scanner Accessibility Unit57	Specif Specif
Scanner Driver and Utilities139, 141, 142	Specif
ScanRouter15	SR300
Searching by Keyword45	Specif
Searching by what you want to do41	Bookle
Security functions16	Specif
Sending faxes or scanned documents when toner has run out101	Specifi and 2.
Sending scan files by e-mail15	Specifi and 4.
Sending scan files by Scan to Folder15	Specif
Simplified Display	Specif
Simplified Display key	Stamp
Sleep mode	Stamp
SmartDeviceMonitor for Admin17, 139, 143	Staple
SmartDeviceMonitor for Client142, 144	Staple
Software included on the CD-ROM139	Start k
Sort	Stored
Specifications	Storing
1	

Specifications for Auto Document Feeder (ARDF DF3010)157
Specifications for Auto Document Feeder (ARDF DF3030)157
Specifications for Bluetooth interface unit180
Specifications for Booklet Finisher164
pecifications for Booklet Finisher SR3000 (1000- heet-Booklet)166
pecifications for Booklet Finisher SR3020 (2000- heet-Booklet)164
Specifications for Bridge Unit175
Specifications for Finisher SR3010 (500-sheet)
Specifications for Finisher SR3030 (3000-sheet)
Specifications for Finisher SR790 (1000-sheet)
Specifications for Finishers159
Specifications for Gigabit Ethernet181
Specifications for IEEE 1284 interface board
178
Specifications for Internal shift tray177
Specifications for internal tray 2176
Specifications for Large capacity tray (LCT) 173
Specifications for Lower Paper Tray172
Specifications for Lower Paper Trays172
Specifications for Paper Trays172
Specifications for Punch Kit169
Specifications for Punch Kit (Booklet Finisher
SR3000)170
Specifications for Punch Kit (Finisher SR3030, Booklet Finisher SR3020)169
Specifications for the Main Unit146
Specifications for the main unit for users of type 1 and 2146
Specifications for the main unit for users of type 3 and 4150
Specifications for Tray 3 (LCT)173
Specifications for wireless LAN board179
tamp11
stamp cartridge109
Staple11, 12
itaples102
start key62
Stored Print12
Storing naper 97


Storing received documents	13
Symbols	20
System Reset	70
Т	
Text	113, 114
Thick paper	
Thin paper	86
Toner	99
Trademarks	183
Translucent paper	86
Tray 1	50, 52, 86
Tray 2	50, 52, 86
Tray 3	52, 56, 57
Tray 3 (LCT)	76, 88
Turning off the main power	73
Turning off the power	71, 72
Turning on the main power	71
Turning on the power	71, 72
TWAIN driver	141
U	
Unauthorized copy prevention	17
Unusable paper	96
Used toner	101
User Code Authentication	65, 66
User Text	115
User Tools/Counter key	60
Using the Print Job function	12
Utilities included on the CD-ROM	139
V	
Ventilation holes49, 50, 5	1, 52, 53, 54
Viewing the contents of the CD-ROM.	
VM card	
W	
WARNING	25, 31
Web Image Monitor	
Where to put your machine	
Wireless LAN	
Wireless IAN board	

MEMO

MEMO

MEMO

192 AE (AE) D029-7606

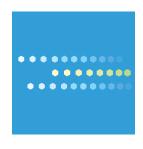



Type for MP C2800/Aficio MP C2800 Type for MP C3300/Aficio MP C3300 Type for MP C4000/Aficio MP C4000 Type for MP C5000/Aficio MP C5000