# **Read This First**



C6055/C7570 MP C6000/MP C7500 LD260c/LD275c Aficio™ MP C6000/C7500

# Operating Instructions About This Machine





- 1 Getting Started
- 2 Entering Text
- 3 Operating Instructions
- 4 Appendix

#### Introduction

This manual contains detailed instructions and notes on the operation and use of this machine. For your safety and benefit, read this manual carefully before using the machine. Keep this manual in a handy place for quick reference.

#### Important

Contents of this manual are subject to change without prior notice. In no event will the company be liable for direct, indirect, special, incidental, or consequential damages as a result of handling or operating the machine.

#### Notes:

Some illustrations in this manual might be slightly different from the machine.

Certain options might not be available in some countries. For details, please contact your local dealer.

Depending on which country you are in, certain units may be optional. For details, please contact your local dealer.

#### Laser Safety:

#### **CDRH Regulations**

This equipment complies with requirements of 21 CFR Subchapter J for class 1 laser products. This equipment contains eight AlGalnP laser diodes, 9-milliwatt, 648 - 663 nanometer wavelength for each emitter. This equipment does not emit hazardous light, since the beam is totally enclosed during all customer modes of operation and maintenance.

#### Caution:

Use of controls or adjustments or performance of procedures other than those specified in this manual might result in hazardous radiation exposure.

#### Notes:

The model names of the machines do not appear in the following pages. Check the type of your machine before reading this manual. (For details, see p.29 "Machine Types".)

- Type 1: C6055/MP C6000/LD260c/Aficio MP C6000
- Type 2: C7570/MP C7500/LD275c/Aficio MP C7500

Certain types might not be available in some countries. For details, please contact your local dealer.

Two kinds of size notation are employed in this manual. With this machine refer to the inch version.

For good copy quality, the supplier recommends that you use genuine toner from the supplier.

The supplier shall not be responsible for any damage or expense that might result from the use of parts other than genuine parts from the supplier with your office products.

#### Power Source

- Type 1: 120V, 60Hz, 16A or more
- Type 2: 208-240V, 60Hz, 12A or more

Please be sure to connect the power cord to a power source as above. For details about power source, see Troubleshooting.

# Manuals for This Machine

Refer to the manuals that are relevant to what you want to do with the machine.

# Mportant (

- Media differ according to manual.
- The printed and electronic versions of a manual have the same contents.
- Adobe Acrobat Reader/Adobe Reader must be installed in order to view the manuals as PDF files.
- A Web browser must be installed in order to view the html manuals.

#### **About This Machine**

Be sure to read the Safety Information in this manual before using the machine.

This manual provides an introduction to the functions of the machine. It also explains the control panel, preparation procedures for using the machine, how to enter text, and how to install the CD-ROMs provided.

#### **Troubleshooting**

Provides a guide to solving common problems, and explains how to replace paper, toner, staples, and other consumables.

# Copy/Document Server Reference

Explains Copier and Document Server functions and operations. Also refer to this manual for explanations on how to place originals.

#### Facsimile Reference

Explains Facsimile functions and operations.

#### **Printer Reference**

Explains Printer functions and operations.

#### **Scanner Reference**

Explains Scanner functions and operations.

#### Network Guide

Explains how to configure and operate the machine in a network environment, and use the software provided.

### **General Settings Guide**

Explains User Tools settings, and Address Book procedures such as registering fax numbers, e-mail addresses, and user codes. Also refer to this manual for explanations on how to connect the machine.

#### Security Reference

This manual is for administrators of the machine. It explains security functions that you can use to prevent unauthorized use of the machine, data tampering, or information leakage. For enhanced security, we recommend that you first make the following settings:

1

- Install the Device Certificate.
- Enable SSL (Secure Sockets Layer) Encryption.
- Change the user name and password of the administrator using Web Image Monitor.

For details, see "Setting Up the Machine", Security Reference.

Be sure to read this manual when setting the enhanced security functions, or user and administrator authentication.

### PostScript 3 Supplement

Explains how to set up and use PostScript 3.

### **UNIX Supplement**

For "UNIX Supplement", please visit our Web site or consult an authorized dealer.

This manual includes descriptions of functions and settings that might not be available on this machine.

#### Information

Contains general notes on the machine, and information about the trademarks of product names used in the manuals.

#### Other manuals

- Manuals for DeskTopBinder Lite
  - DeskTopBinder Lite Setup Guide
  - DeskTopBinder Introduction Guide
  - Auto Document Link Guide



- Manuals provided are specific to machine types.
- The following software products are referred to using general names:

Product name	General name
DeskTopBinder Lite and DeskTopBinder Professional *1	DeskTopBinder
ScanRouter EX Professional *1 and ScanRouter EX Enterprise *1	the ScanRouter delivery software

\*1 Optional

# Manuals List

Manual Name	Printed Manuals Provided	HTML Manuals Provided	PDF Manuals Provided
About This Machine	Yes	Yes	Yes
Troubleshooting	Yes	Yes	Yes
Copy/Document Server Reference	Yes	Yes	Yes
Facsimile Reference	No	Yes	Yes
Printer Reference	No	Yes	Yes
Scanner Reference	No	Yes	Yes
Network Guide	No	Yes	Yes
General Settings Guide	No	Yes	Yes
Security Reference	No	Yes	Yes
PostScript 3 Supplement	No	Yes	Yes
UNIX Supplement	No	No	Yes
Information	No	Yes	No

3

# What You Can Do with This Machine

This section introduces the features of this machine.




• For details about options, see "Options".



• p.33 "Options"

# Using This Machine as a Copier

You can make copies of originals.

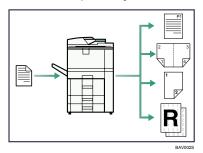


- You can make copies in full color. You can switch the color copy mode depending on the type of
  originals used and the desired finish.
- You can print stamps on copies. Stamps can include background numbers, scanned images, dates, and page numbers.
- You can adjust the color tones and image quality of your copies.
- You can reduce or enlarge the copy image. With Auto Reduce/Enlarge, the machine automatically
  detects the original size, and then selects an appropriate reproduction ratio based on the paper size
  you select. If the orientation in which your original is placed is different from that of the paper you are
  copying onto, the machine rotates the original image by 90 degrees and fits it on the copy paper.
- Copier functions such as Duplex, Combine, Booklet, and Magazine allow you to save on paper by copying multiple pages onto single sheets.
- · You can copy onto various types of paper such as tab sheets, envelopes, and OHP transparencies.
- The optional finisher allows you to sort, staple, punch holes in, and Z-fold your copies.

# ■ Reference

• See Copy/Document Server Reference.

# Using This Machine as a Printer

You can print documents created in applications.

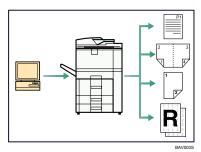


- This machine supports network and local connections.
- You can send PDF files directly to the machine for printing, without having to open a PDF application.
- You can print or delete print jobs stored on the machine's hard disk, which have been previously sent
  from computers using the printer driver. The following types of print jobs can be selected: Sample
  Print, Locked Print, Hold Print, and Stored Print.
- The optional finisher allows you to collate, staple, punch holes in, and Z-fold your prints.

# Reference

• See Printer Reference.

# **Utilizing Stored Documents**

You can store files scanned in copier, printer, or scanner mode on the machine's hard disk. With DeskTopBinder (optional) or Web Image Monitor, you can use your computer to search for, view, print, delete, and send stored files via the network. You can also change print settings and print multiple documents (Document Server).

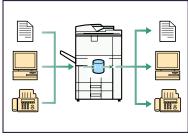

AV004S


- You can also retrieve stored documents scanned in scanner mode.
- Using File Format Converter (optional), you can download documents stored in copier, Document Server, or printer mode to your computer.

### Reference

- For details about machine's settings, see "Network Settings Required to Use Document Server", General Settings Guide.
- · For details about Document Server in printer mode, see "Saving and Printing Using the Document Server". Printer Reference.
- For details about Document Server in fax mode, see "Storing a Document", Facsimile Reference.
- For details about Document Server in scanner mode, see "Storing Files Using the Scanner Function", Scanner Reference.
- For details about Document Server, see "Document Server", Copy/Document Server Reference.
- For details about DeskTopBinder, see DeskTopBinder manuals.

# **Connecting Two Machines for Copying**

You can connect two machines together with Copy Connector (optional). When you set up a copy job on one machine (the main machine), data is transferred to the other (the sub-machine) so that copies can be made on both machines simultaneously (Connect Copy).

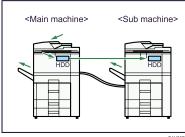

- You can complete large volume copy runs in shorter time.
- Even if one machine runs out of paper, or stops because of a paper jam, the other machine can still continue to finish the job.

# Reference


• See "Connect Copy", Copy/Document Server Reference.

# Paperless Fax Transmission and Reception

You can store received fax messages on the machine's hard disk, instead of printing them onto paper.

### Reception


You can store received fax documents in electrical format without printing it onto paper.

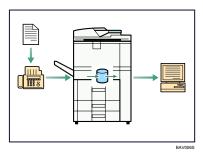

 You can use DeskTopBinder (optional) or a Web Image Monitor to check, print, delete, retrieve, or download documents using your computer (Storing received documents). See "Confirming/ Printing/Deleting Received and Stored Documents", Facsimile Reference.

#### **Transmission**


You can send a fax from your computer over the network (Ethernet or wireless LAN) to this machine, which then forwards the fax via its telephone connection (LAN-Fax).

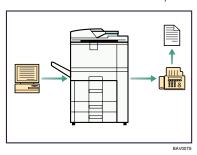

- To send a fax, print from the Windows application you are working with, select LAN-Fax as the
  printer, and then specify the destination.
- You can also check the sent image data.
- For details about the machine's settings, see "Network Settings Required to Use the Printer/LAN-Fax", General Settings Guide.
- For details about how to use the function, see "Fax via Computer", Facsimile Reference.

# Fax Transmission and Reception Over the Internet

This machine supports Internet Fax and IP-Fax.

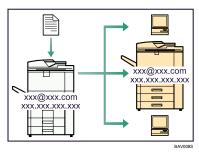

#### Internet Fax

This machine converts scanned document images to e-mail format, and transmits and receives this data over the Internet.

- To send a document, specify an e-mail address instead of dialing the destination telephone number (Internet Fax Transmission).
- This machine can receive e-mail messages via Internet Fax or from computers (Internet Fax Reception).
- Internet Fax compatible machines and computers that have e-mail addresses can receive e-mail messages via Internet Fax.

#### IP-Fax

The IP-Fax function sends or receives documents between two facsimiles directly via a TCP/IP network.


- To send a document, specify an IP address or host name instead of a fax number (IP-Fax Transmission).
- This machine can receive documents sent via Internet Fax (IP-Fax Reception).
- Using a VoIP gateway, this machine can send to G3 facsimiles connected to the public switched telephone network (PSTN).

# Reference

- For details about settings, see "Network Settings Required to Use Internet Fax", General Settings Guide.
- For details about how to transmit and receive documents over the Internet, see "Transmission" and "Reception", Facsimile Reference.

# Using the Facsimile and the Scanner in a Network Environment


You can use a facsimile and a scanner over the network.

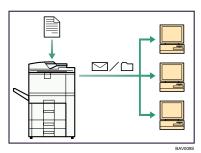

- You can send scan files to a specified destination using e-mail (Sending scan files by e-mail). See
   "Sending to E-mail/Folder Destinations", Facsimile Reference, and "Sending Scan Files by E-mail",
   Scanner Reference.
- You can send scan files directly to folders (Sending scan files by Scan to Folder). See "Sending to E-mail/Folder Destinations", Facsimile Reference, and "Sending Scan Files to Folder", Scanner Reference.
- You can use this machine as a delivery scanner for the ScanRouter delivery application (Network
  delivery scanner). You can save scan files in the delivery server or send them to a folder in a computer
  on the same network. For details about the machine's settings, see "Network Settings Required to Use
  the Network Delivery Scanner", General Settings Guide. For details about how to use the function,
  see "Delivering Scan Files", Scanner Reference.

# Administrating the Machine/Protecting Documents (Security Functions)

You can prevent information leakage by managing the machine and protecting documents.

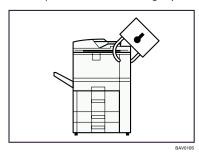

 You can protect documents from unauthorized access and stop them from being copied without permission.


- You can control the use of the machine, as well as prevent machine settings from being changed without authorization.
- By setting passwords, you can prevent unauthorized access via the network.
- You can erase the data on the hard disk to prevent the information from leaking out.

### Reference

• See the manual for the DataOverWriteSecurity Unit (optional), and Security Reference.

# Monitoring the Machine Via Computer


You can change the machine's settings and monitor its status from a connected computer.

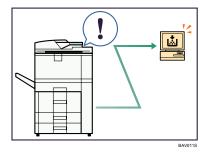

- Web Image Monitor lets you configure and operate the machine using a Web browser on a computer.
   You can also install SmartDeviceMonitor for Admin on a computer to configure and operate the machine.
- Using Web Image Monitor, you can register information in the address book, specify the machine's settings, and check the machine's status with ease.
- Using Web Image Monitor, you can check and specify the initial settings (system settings, printer features, network settings, security settings/certificate management, and E-mail Notification), control print jobs, display the print job journal, and protect the data in the machine using authentication.
- You can also use SmartDeviceMonitor for Admin to register information in the address book.

# Preventing an Unauthorized Copy

You can print embedded pattern on paper to prevent them from being copied.

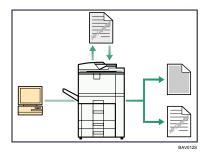

Using the printer driver, you can embed a pattern in the printed document. If the document is copied
on a machine with the Copy Data Security Unit (optional), protected pages are grayed out in the
copy, preventing confidential information from being copied. Protected fax messages are grayed out
before being transmitted or stored. If a document protected by unauthorized copy guard is copied
on a machine that is equipped with the Copy Data Security Unit, the machine beeps to notify users
that unauthorized copying is being attempted.

If the document is copied on a machine without the Copy Data Security Unit, the hidden text becomes conspicuous in the copy, showing that the copy is unauthorized.

Using the printer driver, you can embed text in the printed document for unauthorized copy prevention.
 If the document is copied, scanned, or stored in a Document Server by a copier or multifunction printer,
 the embedded text appears conspicuous in the copy, discouraging such unauthorized copying.

# Reference

• See the printer driver Help, Facsimile Reference, Printer Reference and Security Reference.

# **TABLE OF CONTENTS**

Manuals for This Machine	1
Manuals List	3
What You Can Do with This Machine	4
Using This Machine as a Copier	4
Using This Machine as a Printer	5
Utilizing Stored Documents	5
Connecting Two Machines for Copying	
Paperless Fax Transmission and Reception	7
Fax Transmission and Reception Over the Internet	8
Using the Facsimile and the Scanner in a Network Environment	9
Administrating the Machine/Protecting Documents (Security Functions)	9
Monitoring the Machine Via Computer	10
Preventing an Unauthorized Copy	10
Notice	16
Important	16
Note to Users	16
Notes to Finisher SR5000 (optional) and Twin Interposer (optional) Users	17
Regulatory Information	18
How to Read This Manual	19
Symbols	19
Names of Major Options	19
Safety Information	20
Safety During Operation	20
Safety Precautions to be Followed	20
Positions of WARNING and CAUTION labels	24
ENERGY STAR Program	27
Specifications	28
Recycled Paper	28
Machine Types	29
1. Getting Started	
Guide to Components	31
Options	
Control Panel	37

Display Panel	40
Simplified Display	40
When the Authentication Screen is Displayed	42
User Code Authentication (Using the Control Panel)	42
User Code Authentication (Using a Printer Driver)	43
Login (Using the Control Panel)	43
Logout (Using the Control Panel)	44
Login (Using a Printer Driver)	45
Login (Using Web Image Monitor)	45
Logout (Using Web Image Monitor)	45
Changing Modes	46
System Reset	47
Turning On/Off the Power	48
Turning On the Main Power	48
Turning On the Power	49
Turning Off the Power	49
Turning Off the Main Power	50
Saving Energy	51
2. Entering Text	
Entering Text	53
Available Characters	53
Keys	53
How to Enter Text	54
3. Operating Instructions	
Installing Operating Instructions	57
PDF Manuals	58
How to Use the Operating Instructions	59
Opening from the Icon	59
Opening from the [Start] Menu	59
Opening from the CD-ROM	60
4. Appendix	
Dos and Don'ts	61
Saving Color Conica	60

Software and Utilities Included on the CD-ROM	63
Viewing the Contents of the CD-ROM	63
Printer Drivers for This Machine	63
TWAIN Driver	65
LAN-Fax Driver	65
DeskTopBinder Lite	66
SmartDeviceMonitor for Admin	67
DeskTopBinder-SmartDeviceMonitor for Client	68
Specifications for the Main Unit	70
Auto Document Feeder	74
Document Server	75
Specifications for Finisher SR4010 (50-Sheet-Staples) (Optional)	77
Finisher Upper Tray	77
Finisher Shift Tray	77
Specifications for Finisher SR4020 (Saddle Stitch) (Optional)	79
Finisher Upper Tray	79
Finisher Shift Tray	79
Finisher Booklet Tray	81
Specifications for Finisher SR5000 (100-Sheet-Staples) (Optional)	83
Finisher Upper Tray	83
Finisher Shift Tray	83
Specifications for Punch Unit (Finisher SR4010, Finisher SR4020) (Optional)	86
Specifications for Punch Unit (Finisher SR5000) (Optional)	88
Specifications for Copy Tray (Optional)	90
Specifications for Output Jogger (Optional)	91
Specifications for Mailbox (Optional)	92
Specifications for Interposer (Optional)	93
Specifications for Twin Interposer (Optional)	94
Specifications for Z-folding Unit (Optional)	95
Specifications for Large Capacity Tray (LCT) (Optional)	96
Specifications for Wide Large Capacity Tray (Wide LCT) (Optional)	97
Specifications for IEEE 1284 Interface Board (Optional)	98
Specifications for Wireless IAN Board (Optional)	99

Specifications for Bluetooth Interface Unit (Optional)	.100
Specifications for Gigabit Ethernet (Optional)	.101
Specifications for Other Options	.102
Recommended Paper Sizes and Types	.103
Envelopes	.111
Thick Paper	.113
Unusable Paper	.115
Paper Storage	.116
INDEX	.117

# **Notice**

### **Important**

Do not copy or print any item for which reproduction is prohibited by law.

Copying or printing the following items is generally prohibited by local law:

bank notes, revenue stamps, bonds, stock certificates, bank drafts, checks, passports, driver's licenses.

The preceding list is meant as a guide only and is not inclusive. We assume no responsibility for its completeness or accuracy. If you have any questions concerning the legality of copying or printing certain items, consult with your legal advisor.

Colors on color keys or the color circle may differ slightly from the colors of actual copies.

This machine is equipped with a function that prevents making counterfeit bank bills. Due to this function the original images similar to bank bills may not be copied properly.

### Note to Users

#### Note to users in the United States of America

Declaration of conformity

Product Name: Multi Function Peripheral

Model Number: C6055/C7570/MP C6000/MP C7500/LD260c/LD275c/Aficio MP C6000/Aficio

MP C7500

Responsible party: Ricoh Americas Corporation

Address: 5 Dedrick Place, West Caldwell, NJ 07006

Telephone number: 973-882-2000

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and
- 2) this device must accept any interference received,

including interference that may cause undesired operation.

#### Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency

energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one more of the following measures:

- · Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- · Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

#### Caution:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

#### Note to users in Canada

#### Note:

This Class B digital apparatus complies with Canadian ICES-003.

### Remarque concernant les utilisateurs au Canada

#### Avertissement:

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

# Notes to Finisher SR5000 (optional) and Twin Interposer (optional) Users

#### Note to users in the United States of America

#### Note:

This equipment has been tested and found to comply with the limits for a Class A digital devices, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

#### Caution:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### Note to users in Canada

Note:

This Class A digital apparatus complies with Canadian ICES-003.

### Remarque concernant les utilisateurs au Canada

Avertissement:

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

# **Regulatory Information**

LAMP(S) INSIDE THIS PRODUCT CONTAIN MERCURY AND MUST BE RECYCLED OR DISPOSED OF ACCORDING TO LOCAL, STATE OR FEDERAL LAWS.

### Note to users in the state of California

Perchlorate Material - special handling may apply,

See www.dtsc.ca.gov/hazardouswaste/perchlorate

# How to Read This Manual

# **Symbols**

This manual uses the following symbols:



Indicates important safety notes.

Ignoring these notes could result in serious injury or death. Be sure to read these notes. They can be found in the "Safety Information" section of this manual.

# **ACAUTION**

Indicates important safety notes.

Ignoring these notes could result in moderate or minor injury, or damage to the machine or to property. Be sure to read these notes. They can be found in the "Safety Information" section of this manual.

# 

Indicates points to pay attention to when using the machine, and explanations of likely causes of paper misfeeds, damage to originals, or loss of data. Be sure to read these explanations.

# **U** Note

Indicates supplementary explanations of the machine's functions, and instructions on resolving user errors.

# Reference

This symbol is located at the end of sections. It indicates where you can find further relevant information.

[]

Indicates the names of keys that appear on the machine's display panel.

Γ.

Indicates the names of keys on the machine's control panel.

# Names of Major Options

Major options of this machine are referred to as follows in this manual:

- Auto document feeder → ADF
- Large capacity tray → LCT

# **Safety Information**

When using this machine, the following safety precautions should always be followed.

# **Safety During Operation**

In this manual, the following important symbols are used:



### **⚠ WARNING**

Indicates a potentially hazardous situation which, if instructions are not followed, could result in death or serious injury.



Indicates a potentially hazardous situation which, if instructions are not followed, may result in minor or moderate injury or damage to property.

# Safety Precautions to be Followed

This section explains safety precautions that should always be followed when using this machine.

### Environments where the machine can be used

This section explains safety precautions about environments where the machine can be used.

### **⚠ WARNING**

• Keep the machine away from flammable liquids, gases, and aerosols. A fire or an electric shock might occur.

# **ACAUTION**

- · Keep the machine away from humidity and dust. Otherwise a fire or an electric shock might occur.
- Do not place the machine on an unstable or tilted surface. If it topples over, an injury might occur.
- Make sure the room where you are using the machine is well ventilated and spacious. Good ventilation is especially important when the machine is used heavily.

### Handling power cords and power plugs

This section explains safety precautions about handling power cords and power plugs.

# **⚠ WARNING**

- Connect the machine to the power source specified on the inside front cover of this manual and do
  not use any other power sources. Connect the power cord directly to a wall outlet and do not use an
  extension cord. Power sources not specified on the inside front cover of this manual and extension
  cords are electric shock or fire hazards.
- Power cords that are damaged, broken, modified, trapped under heavy objects, pulled hard, or bent severely are electric shock and fire hazards.
- Disconnect the power plug (by pulling the plug, not the cable) if the power cable or plug becomes frayed or otherwise damaged.
- If the power cord is damaged (exposure of the core, disconnection, etc.), contact your service
  representative to change a new one. Operating the machine with a damaged power cord may cause
  an electric shock or fire.
- It is dangerous to handle the plug with wet hands. Doing this may result in receiving an electric shock.

# **ACAUTION**

- When you disconnect the power plug from the wall outlet, always pull the plug (not the cable).
- To disconnect the power cord, pull it out by plug. Do not drag the cord itself. Doing so may result in damage to the cord, leading to fire or electric shock.
- For safety reason, unplug the power cord from the wall outlet if the machine will not be used for an
  extended period of time such as holidays.

### Handling the main machine

This section explains safety precautions about handling the main machine.

# **⚠WARNING**

- Turn off the power and disconnect the power plug (by pulling the plug, not the cable) if any of the following occurs:
  - · You spill something into the machine.
  - You suspect that your machine needs service or repair.
  - The external housing of your machine has been damaged.

# **ACAUTION**

- Protect the machine from dampness or wet weather, such as rain and snow.
- Unplug the power cord from the wall outlet before you move the machine. While moving the machine, you should take care that the power cord will not be damaged under the machine.
- After you move the machine, use the caster fixture to fix it in place. Otherwise the machine might move
  or come down to cause an injury.

- Contact your service representative if you need to lift the machine (such as when relocating it to another
  floor). Do not attempt to lift the machine without the assistance of your service representative. The
  machine will be damaged if it topples or is dropped, resulting in malfunction and risk of injury to users.
   The machine's various handling areas are for service engineer use only. Do not touch these areas.
- Do not allow paper clips, staples, or other small metallic objects to fall inside the machine.
- Do not look into the lamp. It can damage your eyes.
- For environmental reasons, do not dispose of the machine or expended supply waste at household waste collection points. Disposal can take place at an authorized dealer.

### Handling the machine's interior

This section explains safety precautions about handling the machine's interior.

# **⚠ WARNING**

To avoid hazardous electric shock or laser radiation exposure, do not remove any covers or screws
other than those specified in this manual.

# **ACAUTION**

- The fusing section of this machine might be very hot. Caution should be taken when removing misfed paper.
- The inside of the machine could be very hot. Do not touch the parts with a label indicating the "hot surface". Otherwise, an injury might occur.
- During operation, rollers for transporting the paper and originals revolve. A safety device is being
  installed so that the machine can be operated safely. But take care not to touch the machine during
  operation. An injury might occur.
- Fire and breakdown can result from heavy accumulation of dust inside this machine. Consult your service representative for details about and charges for cleaning the machine's interior.

# Handling the machine's supplies

This section explains safety precautions about handling the machine's supplies.

# **WARNING**

- Do not incinerate used toner or toner containers. Toner dust might ignite when exposed to an open flame. Dispose of used toner containers in accordance with local regulations.
- Do not incinerate spilled toner or used toner. Toner dust might ignite when exposed to an open flame.
- Do not store toner, used toner, or toner containers in a place with an open flame. The toner might
  ignite and cause burns or a fire.
- Keep the waste oil bottle away from flames. There is a risk of fire or burns.

# **ACAUTION**

- To avoid fire or machine failure, do not use aluminum foil, carbon paper, or similar conductive paper.
- Do not open toner containers forcefully. Toner can spill, dirtying your clothes or hands, and possibly
  resulting in accidental ingestion.
- Keep toner (used or unused) and toner containers out of reach of children.
- If toner or used toner is inhaled, gargle with plenty of water and move into a fresh air environment.
   Consult a doctor if necessary.
- If toner or used toner gets into your eyes, flush immediately with large amounts of water. Consult a
  doctor if necessary.
- If toner or used toner is swallowed, dilute by drinking a large amount of water. Consult a doctor if necessary.
- Avoid getting toner on your clothes or skin when removing a paper jam or replacing toner. If your skin comes into contact with toner, wash the affected area thoroughly with soap and water.
- If toner gets on your clothing, wash with cold water. Hot water will set the toner into the fabric and may make removing the stain impossible.
- When loading paper, take care not to trap or injure your fingers.
- Keep your hands clear of the booklet finisher tray when pulling out or pushing in the finisher's staple
  unit. You can trap your fingers if you do not.

### For people using a pacemaker


This section explains safety precautions for people using a pacemaker.

# **⚠ WARNING**

This machine generates a weak magnetic field that can interfere with pacemaker regulation. We
advise people with pacemakers to consult a doctor and not to use this machine if they experience
irregular pacemaker activity while near the machine.

# Positions of WARNING and CAUTION labels


This machine has labels for  $\triangle$ WARNING and  $\triangle$ CAUTION at the positions shown below. For safety, please follow the instructions and handle the machine as indicated.

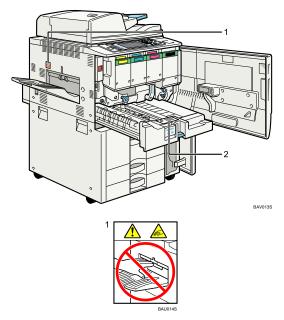

Keep your hands clear of the finisher tray when removing paper jam. You might trap your fingers if you do not.



Do not touch the parts a label indicates. The inside of the machine could be very hot. Caution should be taken when removing misfed paper.

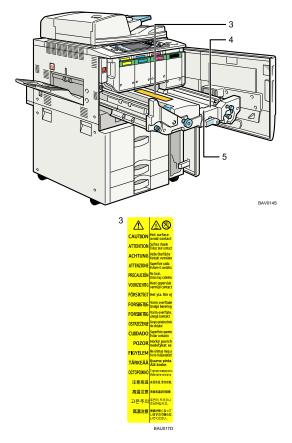

The inside of the machine could be very hot. Do not touch the parts which a label is put on. Otherwise, an injury might occur.



Keep your hands clear of the parts a label indicates. Otherwise, you might trap your fingers and an injury might occur.

25



Keep your hands clear of the finisher tray when removing paper jam. You might trap your fingers if you do not.

# **ENERGY STAR Program**

ENERGY STAR® Program Requirements for Imaging Equipment



The ENERGY STAR® Program Requirements for Imaging Equipment encourage energy conservation by promoting energy efficient computers and other office equipment.

The program backs the development and dissemination of products that feature energy saving functions. It is an open program in which manufacturers participate voluntarily.

Targeted products are computers, monitors, printers, facsimiles, copiers, scanners, and multifunction devices. Energy Star standards and logos are internationally uniform.

#### Low Power mode

This product automatically lowers its power consumption 15 minutes after the last copy or print job has finished. Fax reception or printing is still possible in Low Power Mode, but if you wish to make copies press the [Energy Saver] key first.

### Off mode (Copier only)

To conserve energy, this product automatically turns off 30 minutes after finishing the last copy or print job. In this manual, the Off mode is called the Auto Off mode. If you wish to make copies first press the operation switch.

#### Sleep mode (Fax, printer, or scanner installed)

If there is a fax, printer, or scanner unit installed, this product automatically lowers further its power consumption 30 minutes after it has shifted to Low Power mode. Fax reception or printing is still possible in Sleep mode, but if you wish to make copies first press the operation switch.

#### **Duplex Priority**

We recommend the duplex function. This function is less of a burden to the environment. For applicable machines, duplex function (one-sided originals  $\rightarrow$  two-sided copies) is selected preferentially when the operation switch or the [Clear Modes] key is pressed, or the machine resets automatically.

# **Specifications**

		Туре 1	Туре 2
Low power mode	Power consumption	200 W	200 W
Low power mode	Default interval	15 minutes	15 minutes
Low power mode	Recovery time	45 seconds or less	45 seconds or less
Off mode	Power consumption	10 W or less	10 W or less
Off mode	Default interval	30 minutes	30 minutes
Off mode	Recovery time	90 seconds or less	75 seconds or less

Duplex priority	One-sided → Two-sided
-----------------	-----------------------

# Reference

- Figures for power consumption were obtained from testing performed prior to shipment.
- Using the Energy Saver Timer setting, you can change the length of time that the machine waits before
  it switches to Low Power mode. See "System Settings", General Settings Guide.
- Using the Auto Off Timer setting, you can change the length of time that the machine waits before it switches to Off mode or Sleep mode.
- For details about changing Duplex Priority mode, see "Registering the Initial Display's Default Functions", Copy/Document Server Reference.

# **Recycled Paper**

We recommend use of recycled paper which is environmentally friendly. Please contact your sales representative for recommended paper.

# **Machine Types**

This machine comes in two models which vary in copy/print speed. To ascertain which model you have, see the inside front cover.

	Type 1	Туре 2
Copy/print speed (Full Color)	55 sheets/minute (A4 $\overline{D}$ , 8 $^{1}/_{2} \times 11\overline{D}$ )	70 sheets/minute (A4 $\overline{D}$ , 8 $^{1}/_{2} \times 11\overline{D}$ )
Copy/print speed (B&W)	60 sheets/minute (A4D, 8 <sup>1</sup> / <sub>2</sub> × 11D)	75 sheets/minute (A4D, 81/ <sub>2</sub> × 11D)

# 1. Getting Started


This section describes how to start using this machine.

# **Guide to Components**

This section introduces the names and functions of the components.



 Do not obstruct the ventilation holes by placing objects near them or leaning things against them. If the machine overheats, a fault might occur.

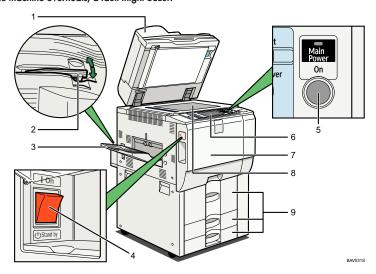

### 1. Auto Document Feeder (ADF)

If you load a stack of originals in the auto document feeder (ADF), the ADF will automatically feed the originals one by one.

This document feeder can be used for two-sided originals.

### 2. Copy tray guide

When copying or printing onto OHP transparencies and translucent paper, raise the guide to prevent output paper from curling when delivered.

### 3. Copy tray (optional)

Copied/printed paper and fax messages are delivered here.

#### 4. Main power switch

If the machine does not operate after turning on the operation switch, check if the main power switch is turned on. If it is off, turn it on.

See "Turning On/Off the Power".

### 5. Operation switch

Press to turn the power on (the operation switch indicator lights up). To turn the power off, press again (the operation switch indicator goes off).

See "Turning On/Off the Power".

### 6. Control panel

See "Control Panel".

#### 7. Front Cover


Open to access the inside of the machine.

### 8. Exposure glass

Place originals here face down.

### 9. Paper trays (Trays 1 - 3)

Load paper here.

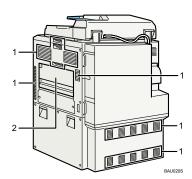


### 1. Ventilation holes

Prevent overheating.

### 2. Bypass Tray

Use to copy or print onto OHP transparencies, adhesive labels, translucent paper, envelopes, and custom size paper.

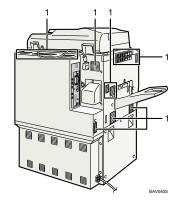

### 1. Ventilation holes

Prevent overheating.



• The bypass tray cannot be used if the wide large capacity tray (Wide LCT) is installed.

# Reference


- p.37 "Control Panel"
- p.48 "Turning On/Off the Power"

# **Options**

This section introduces the names and functions of main optional parts.

# **External options**

This section provides explanations about external options.

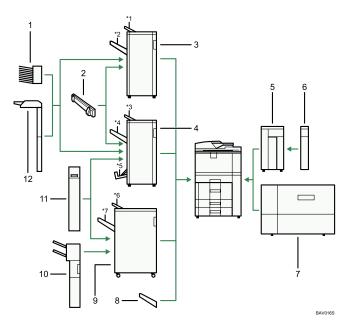

#### 1. Mailbox

Sorts printed paper.

\*: Mailbox output trays 1-9

### 2. Output Jogger

Jogs the sheets delivered to the finisher shift tray.

### 3. Finisher SR4010 (50-Sheet-Staples)

Sorts, stacks, staples, and punches multiple sheets of paper.

- \*1: Finisher upper tray
- \*2: Finisher shift tray

### 4. Finisher SR4020 (Saddle Stitch)

Sorts, stacks, staples, and punches multiple sheets of paper. The saddle stitch function can staple multiple sheets of paper in the center and fold them into booklets.

- \*3: Finisher upper tray
- \*4: Finisher shift tray
- \*5: Finisher booklet tray

### 5. Large Capacity Tray (LCT)

Holds 4,000 sheets of paper.

#### 6. Extension unit

Attached to the LCT and holds 2,500 sheets of B4 JIS (Japanese Industrial Standard) or  $8^{1}/_{2} \times 14$  sized paper.

#### 7. Wide Large Capacity Tray (Wide LCT)

Holds 2,000 sheets of A3 or 11 × 17 sized paper. Use to copy or print onto OHP transparencies, adhesive labels, translucent paper, envelopes, and custom size paper.

#### 8. Copy tray

Copied/printed paper or fax messages are delivered here.

#### 9. Finisher SR5000 (100-Sheet-Staples)

Sorts, stacks, staples, and punches multiple sheets of paper.

- \*6: Finisher upper tray
- \*7: Finisher shift tray

#### 10. Twin Interposer

Inserts cover or slip sheets into copied or printed paper.

#### 11. Z-folding unit

Makes two parallel folds on copied or printed paper, one of which faces in and the other facing out.

### 12. Interposer

Inserts cover or slip sheets into copied or printed paper.



• The bypass tray cannot be used if the wide large capacity tray (Wide LCT) is installed.

# Internal options

This section describes the options that can be installed in the machine.

Fax unit

Allows you to use the facsimile function.

• Printer/Scanner unit

Allows you to use the printer and scanner functions.

• Extra G3 Interface Unit

This lets you add a G3 fax line.

• IEEE 1284 Interface Board

Allows you to connect to an IEEE 1284 cable.

• Wireless LAN board

Allows you to install a wireless LAN interface.

· Bluetooth interface unit

Allows you to expand the interface.

1

• File Format Converter

Allows you to download documents from the Document Server stored by copier and printer functions. See "Downloading Stored Documents with Web Image Monitor", Copy/ Document Server Reference.

• Copy Data Security Unit

If a document containing embedded text for unauthorized copy guard is copied, protected pages are grayed out in the copy.

• DataOverWriteSecurity Unit

Allows you to erase data that is stored on the hard disk.

• Copy Connector

Allows you to use the connect copy function.

• Gigabit Ethernet (1000BASE-T)

Allows you to communicate over 1000BASE-T.

• HDD Encryption Unit

Allows you to encrypt data that is stored on the hard disk.



 Only one of the following options can be installed on the machine at any one time: IEEE 1284 interface board, Wireless LAN board, Bluetooth interface unit, File Format Converter.


# **Control Panel**

This section introduces the names and functions of the components on the control panel.



 Do not turn off the main power switch while the operation switch indicator is lit or blinking. Doing so may damage the hard disk.

This illustration shows the control panel of the machine with options fully installed.

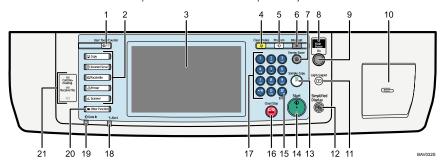

# 1. [User Tools/Counter] key

• User Tools

Press to change the default and conditions to meet your requirements. See "Accessing User Tools", General Settings Guide.

Counter

Press to check or print the counter value. See "Counter", General Settings Guide.

Inquiry

Press to find out where to order expendable supplies and where to call when a malfunction occurs. You can also print these details. See "Inquiry", General Settings Guide.

#### 2. Function keys

Press to display the operation screen of one of the following functions: copy, Document Server, facsimile, printer, or scanner.

The indicator of the selected function goes on. See "Changing Modes".

#### 3. Display panel

Displays keys for each function, operation status, or messages. See "Display Panel".

### 4. [Clear Modes] key

Press to clear the current settings.

## 5. [Program] key (copier, Document Server, facsimile, and scanner mode)

Press to register frequently used settings, or to recall registered settings (except Document Server mode).
 See "Registering Frequently Used Functions", Copy/Document Server Reference, Facsimile Reference, and Scanner Reference.

Press to program defaults for the initial display when modes are cleared or reset, or immediately after the
operation switch is turned on. See "Registering the Initial Display's Default Functions", Copy/Document
Server Reference, Facsimile Reference, and Scanner Reference.

#### 6. [Interrupt] key

Press to make interrupt copies. See "Interrupt Copy", Copy/Document Server Reference.

#### 7. [Energy Saver] key

Press to switch to and from Energy Saver mode. See "Saving Energy".

### 8. Main power indicator

The main power indicator goes on when you turn on the main power switch.

### 9. Operation switch

Press to turn the power on (the operation switch indicator goes on). To turn the power off, press again (the operation switch indicator goes off). See "Turning On the Power".

#### 10. Paper clip tray

Holds paper clips or staples removed from documents.

#### 11. [Login/Logout] key

Press this to log in or log out.

#### 12. [Simplified Display] key

Press this to switch to the Simplified Display.

### 13. [Sample Copy] key

Press to make a single set of copies or prints to check print quality before making multiple sets. See "Sample Copy", Copy/ Document Server Reference.

#### 14. [Start] key

Press to start copying, printing, scanning, or sending.

## 15. [#] key (Enter key)

Press to confirm values entered or items specified.

#### 16. [Clear/Stop] key

Clear

Press to delete a number entered.

Stop

Press to stop a job in progress, such as copying, scanning, faxing, or printing.

#### 17. Number keys

Use to enter the numbers for copies, fax numbers and data for the selected function.

# 18. Alert indicator

Lights continuously if an error has occurred.

#### 19. Data In indicator (facsimile and printer mode)

Flashes when the machine is receiving print jobs or LAN-Fax documents from a computer. See Facsimile Reference and Printer Reference.

### 20. [Other Function] key

Calls up registered functions.

### 21. Communicating indicator, Receiving File indicator, Confidential File indicator

· Communicating indicator

Lights continuously during data transmission and reception.

· Receiving File indicator

Lights continuously while data other than personal box or Memory Lock file is being received and stored in the fax memory.

See "Substitute Reception", Facsimile Reference.

• Confidential File indicator

Lights continuously while personal box data is being received.

Blinks while Memory Lock file is being received.

See "Personal Boxes", Facsimile Reference and "Printing a File Received with Memory Lock", Facsimile Reference.

# Reference

- p.40 "Display Panel"
- p.40 "Simplified Display"
- p.46 "Changing Modes"
- p.48 "Turning On/Off the Power"
- p.51 "Saving Energy"

# **Display Panel**

The display panel shows machine status, error messages, and function menus.



 Don't apply strong impact or force to the screen. Or it may be damaged. Maximum force allowable is approx. 30N (approx. 3 kgf). (N = Newton, kgf = Kilogram force. 1 kgf = 9.8N.)

The function items displayed serve as selector keys. You can select or specify an item by lightly pressing them.

When you select or specify an item on the display panel, it is highlighted like debut blue. Keys appearing as cannot be used.

The copy display is set as the default screen when the machine is turned on.






The display panels shown in this manual's illustrations are taken from a machine on which all options
are installed.

# Simplified Display

This section explains how to switch to the simplified display.

When you press the [Simplified Display] key, the screen changes from the initial display to the simplified display.

Letters and keys are displayed at a larger size, making operations easier.

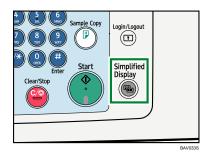

# Example of a simplified display

This illustration shows the copier function's simplified display.



# 1. [Key Color]

Press to increase screen contrast by changing the color of the keys. This is available only for the simplified display.



- To return to the initial display, press the [Simplified Display] key again.
- Certain keys do not appear on the simplified display.

# When the Authentication Screen is Displayed

This section explains the authentication screen.



- Ask the user administrator for the login user name, login password, and user code. For details about user authentication, contact your administrator.
- User code to enter on User Code Authentication is the numerical value registered in the address book as "login user name".

If Basic Authentication, Windows Authentication, LDAP Authentication, or Integration Server Authentication is active, the authentication screen appears on the display. The machine only becomes operable after entering your own login user name and login password. If User Code Authentication is active, you cannot use the machine until you enter the user code.

If you can use the machine, you can say that you are logged in. When you go out of the operable state, you can say that you are logged out. After logging in the machine, be sure to log out of it to prevent unauthorized usage.



 If authentication fails, the "Authentication has failed." message appears. Check that the login user name and login password are correct.

# User Code Authentication (Using the Control Panel)

This section explains the procedure for logging in to the machine using the control panel while User Code Authentication is active.

If User Code Authentication is active, a screen prompting you to enter a user code appears.

Enter a user code (up to eight digits), and then press [OK].





- To log off, do one of the following:
  - Press the operation switch.

1

• Press the [Energy Saver] key after jobs are completed.

# User Code Authentication (Using a Printer Driver)

This section explains the procedure for logging in to the machine using a printer driver while User Code Authentication is active.

If User Code Authentication is active, specify the user code in the printer properties of the printer driver. For details, see the printer driver Help.



• When logged in through User Code Authentication, you do not have to log out.

# Login (Using the Control Panel)

This section explains the procedure for logging in to the machine when Basic Authentication, Windows Authentication, LDAP Authentication, or Integration Server Authentication is set.

# 1. Press [Login].



2. Enter a login user name, and then press [OK].



3. Enter a login password, and then press [OK].



When the user is authenticated, the screen for the function you are using appears.




 If authentication fails, the "Authentication has failed." message appears. Check that the login user name and login password are correct.

# Logout (Using the Control Panel)

This section explains the procedure for logging out the machine when Basic Authentication, Windows Authentication, LDAP Authentication, or Integration Server Authentication is set.



- To prevent use of the machine by unauthorized persons, always log out when you have finished using the machine.
- 1. Press the [Login/Logout] key.

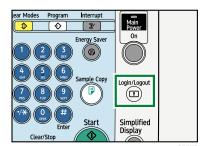

## 2. Press [Yes].



# Login (Using a Printer Driver)

This section explains the procedure for logging in to the machine using a printer driver.

If Basic Authentication, Windows Authentication, LDAP Authentication, or Integration Server Authentication is active, make encryption settings in the printer properties of the printer driver, and then specify a login user name and password. For details, see the printer driver Help.



• When logged in using a printer driver, you do not have to log out.

# Login (Using Web Image Monitor)

This section explains the procedure for logging in to the machine via Web Image Monitor.

- 1. Click [Login].
- 2. Enter a login user name and password, and then click [Login].



• For user code authentication, enter a user code in [User Name], and then click [OK].

# Logout (Using Web Image Monitor)

This section explains the procedure for logging out the machine via Web Image Monitor.


1. Click [Logout] to log out.



• Delete the cache memory of a Web browser after logging out.

# **Changing Modes**

This section explains how to change modes.

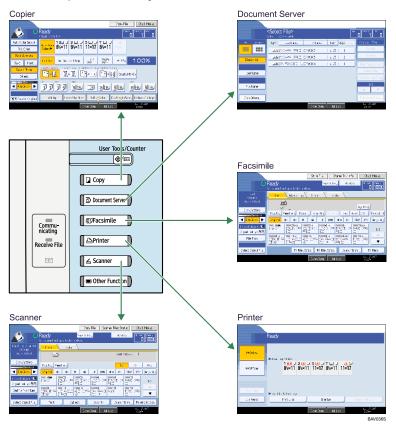

- **U** Note
  - · You cannot switch modes in any of the following situations:
    - When scanning a fax message for transmission
    - · During immediate transmission
    - When accessing User Tools / Counter / Inquiry
    - · During interrupt copying
    - During On-hook dialling for fax transmission
    - · While scanning an original

Ī

The copy display is set as the default screen when the machine is turned on. You can change this
default setting under Function Priority. See "System Settings", General Settings Guide.

# System Reset

This section explains System Reset.

After finishing a job, the machine waits a specified length of time and then restores its settings to the default values specified under Function Priority. This function is called "System Reset". For the procedure for specifying default settings under Function Priority, see "System Settings", General Settings Guide.

To change the length of time that the machine waits before restoring its settings to their default values, use the System Auto Reset Timer setting. See "System Settings", General Settings Guide.

# Turning On/Off the Power

This section discusses how to turn on/off the power.

# Power supply

This machine has two power switches: operation switch and main power switch.

- Operation switch (right side of the control panel)
   Press to activate the machine. When the machine has finished warming up, you can make use of each function.
- Main power switch (left side of the machine)
   Turning off this switch makes the main power indicator on the right side of the control panel go off. When this is done, machine power is completely off. When the fax unit (optional) is installed, fax files in memory may be lost if you turn this switch off. Use this switch only when necessary.



This machine automatically enters Energy Saver mode or turns itself off if you do not use it for a while.
 To specify the time that the machine waits before it enters Energy Saver mode and/or turns itself off, configure the Energy Saver Timer and/or Auto Off Timer setting, respectively. See "System Settings", General Settings Guide.


# **Turning On the Main Power**

This section explains how to turn on the main power.



- Do not turn off the main power switch immediately after turning it on. Doing so may result in damage to the hard disk or memory, leading to malfunctions.
- 1. Make sure the power cord is firmly plugged into the wall outlet.
- 2. Open the main power switch cover, and turn on the main power switch.

The main power indicator goes on.

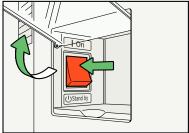




After you switch the main power on, a screen may appear to indicate that the machine is initializing.
 Do not switch the power off during this process. Initialization takes about three minutes.

# Turning On the Power

This section explains how to turn on the power.

1. Press the operation switch.

The operation switch indicator goes on.

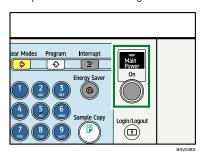

**U** Note


If the power does not come on when the operation switch is pressed, check the main power switch is
on. If it is off, turn it on.

# **Turning Off the Power**

This section explains how to turn off the power.

1. Press the operation switch.

The operation switch indicator goes off.

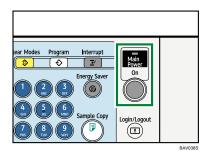

**U** Note

- Even if you press the operation switch, the operation switch indicator does not go out, but blinks in the following cases:
  - During communication with external equipment.
  - When the hard disk is active.
  - When the internal cooling fan is active.

# **Turning Off the Main Power**

This section explains how to turn off the main power.



- Do not turn off the main power switch when the operation switch indicator is lit or blinking. Doing so
  may result in damage to the hard disk or memory.
- Make sure to turn off the main power switch before pulling out the power plug. Not doing so may
  result in damage to the hard disk or memory.
- 1. Make sure the operation switch indicator is not lit.
- Open the switch cover, and then turn off the main power switch.The main power indicator goes out.



- When the main power switch is turned off while using the fax function, waiting fax and print jobs may
  be cancelled, and incoming fax documents not received. If you have to turn off this switch for some
  reason, make sure 100% is shown as available memory on the screen before turning off the main
  power switch or unplugging the power cord. Fax files in memory are deleted an hour after you turn
  off the main power switch or unplug the power cord.
- For details, see "Turning Off the Main Power / In the Event of Power Failure", Troubleshooting.

# **Saving Energy**

This section explains the machine's energy saving functions.

This machine has the following energy saving functions.

### **Energy Saver**

If you do not use the machine for a certain period after an operation, or when you press the [Energy Saver] key, the display disappears and the machine goes into Energy Saver mode. When you press the [Energy Saver] key again, the machine returns to the ready condition. The machine uses less electricity in Energy Saver mode.

You can change the amount of time the machine waits before switching to Energy Saver mode after copying has finished or the last operation is performed under Energy Saver Timer.

# Auto Off

The machine automatically turns itself off when the job is finished, after a certain period of time has elapsed. This function is called "Auto Off".

You can change the Auto Off time under Auto Off Timer.

# **U** Note

- See "System Settings", General Settings Guide.
- The Energy Saver and Auto Off functions will not operate in the following cases:
  - When a warning message appears
  - · When the service call message appears
  - When paper is jammed
  - When the cover is open
  - When the "Add Toner" message appears
  - When toner is being replenished
  - When the User Tools / Counter / Inquiry screen is displayed
  - · When fixed warm-up is in progress
  - When data is being processed
  - · When operations are suspended during printing
  - · When the On-hook dialing function is in use
  - When a recipient is being registered in the address list or group dial list
  - When the Data In indicator is on or blinking
  - When the screen of stored document under the printer function is displayed
  - · When the internal cooling fan is active

# 2. Entering Text

This section describes how to enter characters.

# **Entering Text**

This section explains how to enter text.

When you enter a character, it appears at the position of the cursor. If there is a character already at the cursor position, the entered character appears before that.

# **Available Characters**

This section explains which characters are available.


You can enter the following characters:

- Alphabetic characters
- Symbols
- Numerals 0123456789

# Keys

This section explains the entry screen and the keys displayed on it.

You can change the entry screen using the keys below.

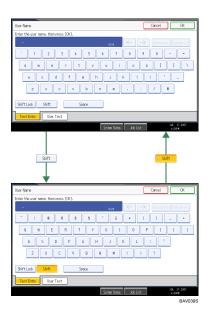



- When entering uppercase or lowercase letters continuously, use [Shift Lock] to lock the case.
- You can also use the number keys to enter numbers, regardless of mode.

# **How to Enter Text**

This section explains text entry more specifically.

# **Entering letters**

This section explains how to enter letters.

- 1. Press [Shift] to switch between uppercase and lowercase.
- 2. Press the letters you want to enter.

# **Deleting characters**

This section explains how to delete characters.

1. Press [Backspace] or [Delete All] to delete characters.

# Adding user text

You can select and use a User Text that is registered in [Program / Change / Delete User Text].

 $For the \ registration\ procedure\ under\ Program\ /\ Change\ /\ Delete\ User\ Text,\ see\ "System\ Settings",\ General\ Settings\ Guide.$ 

# 1. Press [User Text].



2. Select the User Text you want to use.



# 3. Operating Instructions

This section describes the Operating Instructions of this machine.

# **Installing Operating Instructions**

The supplied "Manuals" and "Manuals for Administrators" CD-ROMs contain HTML format manuals. For easy access, we recommend you install the manuals on a computer.



- The "Manuals for Administrators" CD-ROM that includes Security Reference is for administrators of the machine.
- The system requirements for installing the manuals are as follows:
  - Operating system: Windows 95/98/Me/2000/XP/Vista, Windows Server 2003/2003 R2, or Windows NT4.0
  - Minimum display resolution: 800 × 600 pixels
- Recommended browsers:
  - Microsoft Internet Explorer 4.01 SP2 or later
  - Netscape 6.2 or later
- Non-recommended browsers can display the simplified manual only.
- HTML manuals can also be viewed on a Macintosh.
- 1. Select a language and a product, and then click [OK].
- 2. Click [Install manuals].

If you want to read manuals from the CD-ROM, click [Read HTML manuals] or [Read PDF manuals].

- 3. Install the manual you require according to the displayed instructions.
- 4. When installation is complete, click [Finish].
- 5. Click [Finish].



- If you cannot install a manual, copy the "MANUAL\_HTML" folder to your computer's hard drive, and then run "Setup.exe".
- To delete an installed manual, on the [Start] menu, click [Programs], then [Product Name], and then
  uninstall the data.
- If you are installing the manuals on a Macintosh, open the "Manuals.htm" file on the CD-ROM.

The supplied "Manuals" CD-ROM contains PDF manuals.

# File path

The PDF manuals are in the following folder on the CD-ROM:

# MANUAL\_PDF\ENGLISH



• To view the PDF manuals, you need to have Adobe Acrobat Reader/Adobe Reader installed on your computer.

3

# How to Use the Operating Instructions

This section explains how to use manuals.



# Opening from the Icon

This section explains how to open a manual using its desktop icon.

1. Double-click the icon on your desktop.



The browser opens and the manual appears.

# Opening from the [Start] Menu

This section explains how to open a manual from the [Start] menu.

 On the [Start] menu, point to [Programs] (Windows XP: [All Programs]), then [Product Name], and then click the manual you want to view.

The browser opens, and then the manual appears.



Depending on the settings made during installation, menu folder names may differ.

59

# Opening from the CD-ROM

This section explains how to open a manual from the supplied "Manuals" and "Manuals for Administrators" CD-ROMs.

- 1. Click [Read HTML manuals].
- 2. Click the title of the manual you want to view.

The browser opens, and then the manual appears.

# 4. Appendix

This section describes Dos and Don'ts, the provided software and utilities CD-ROMs, specifications, and paper.

# Dos and Don'ts

The following items should be followed during use of this machine.

# **MWARNING**

 Keep the machine away from flammable liquids, gases, and aerosols. A fire or an electric shock might occur.

# **ACAUTION**

 Unplug the power cord from the wall outlet before you move the machine. While moving the machine, you should take care that the power cord will not be damaged under the machine.

# Mportant (

- Do not turn the power off while the operation switch indicator is lit or blinking. Doing so may damage
  the hard disk.
- Before unplugging the power cord or turning off the main power switch, make sure remaining memory space is at 100%, as shown on the screen. See "Turning On/Off the Power".
- Do not touch areas on or around the fusing unit. These areas get hot.
- After scanning originals continuously, the exposure glass may become warm this is not a malfunction.
- The area around the ventilation holes might feel warm. This is caused by exhaust air and is not a
  malfunction.
- If the ambient temperature is high, the internal cooling fan will make noise when the machine is in standby mode. This noise does not indicate malfunction. Do not turn off the machine.
- When you use this machine for a long time in a confined space without good ventilation, you may
  detect an odd smell. To keep the workplace comfortable, we recommend that you keep it well
  ventilated.
- If the machine is moved from a cold to a warm place, condensation may form inside it. After moving
  the machine, do not use it for at least an hour. The machine requires this time to adapt to its new
  environment.
- The machine will malfunction if its internal temperature becomes too high. Be sure not to block the intake and exhaust vents.
- Do not turn off the power while the machine is in operation. See "Turning On/Off the Power".
- Do not open the covers of the machine when it is in operation. If you do, misfeeds might occur.
- Do not move or tilt the machine when the power is on.

- Do not allow small objects such as paperclips to fall into or become stuck inside the machine.
- Do not knock the machine while it is operating (for instance, do not use the machine's surfaces to knock stacks of paper into square).
- Depending on the ambient temperature and humidity, steam may come from the exhaust vent behind
  the control panel during printing. This is water vapour from the paper, not a sign of malfunction.
- If condensation forms inside the machine as a result of temperature change, the machine may not
  print properly. To minimize this problem, use the optional anti-condensation heaters.
- Be sure to make a note of the registered machine settings in case they are lost due to accident or malfunction.
- The supplier shall not be liable for any loss or damage resulting from a failure of the machine, loss of settings, or use of the machine.

# Reference

• p.48 "Turning On/Off the Power"

# **Saving Color Copies**

This section explains notes on saving color copies.

- Like most prints, color prints will fade if exposed to strong light or dampness and humidity for lengthy periods. Preserve the quality of your copies by storing them in a binder in a dark, dry place.
- Toner may melt if a print and a half-dried print are put on top of each other.
- Toner may also melt when using solvent type adhesive agents for pasting prints.
- · When folding prints, toner in the folds will come off.
- Toner may melt if it is placed on mats made of chlorinated plastic in locations of high temperature for long periods of time.
- Toner may melt if prints are placed in places of extremely high temperatures, such as near heaters.

# 4

# Software and Utilities Included on the CD-ROM

This section explains the software and utilities CD-ROMs provided with this machine.

Two CD-ROMs come with this machine: "Printer Drivers and Utilities", and "Scanner Driver and Utilities".

The following are included in these CD-ROMs:

### Font Manager

For installing new screen fonts, or organizing and managing fonts already in the system. For details about Font Manager, see the manual on the CD-ROM labeled "Printer Drivers and Utilities".

#### SmartDeviceMonitor for Admin

For the system administrator to manage network printers.

#### DeskTopBinder-SmartDeviceMonitor for Client

For users to manage their network print status.

### **Printer Utility for Mac**

This utility allows users to download and manage a variety of fonts as well as manage printers. For details about this utility, see PostScript 3 Supplement.



Some documentation about using the machine is included on the CD-ROM in PDF format. For details
about using Adobe Acrobat Reader/Adobe Reader, see Adobe Acrobat Reader/Adobe Reader
online Help.

# Viewing the Contents of the CD-ROM

This section explains how to view the contents of the CD-ROMs.

1. Insert the CD-ROM into the CD-ROM drive.

The installer starts.

2. Click [Browse This CD-ROM].

Explorer starts and displays the contents of the CD-ROM.

# **Printer Drivers for This Machine**

This section explains printer drivers for this machine.



You can install the PCL printer drivers (PCL 5c and PCL 6), the RPCS printer driver, and the Adobe
PostScript printer drivers from the CD-ROM provided with this machine or download them from the
supplier's Web site. If your operating system is Windows 95/98/Me/XP x64/Vista x64, Windows

Server  $2003/2003 R2 \times 64$ , or Windows NT4.0, you must download the printer drivers from the supplier's Web site. Select this machine and the operating system you are using, and then download them.

Printing requires installation of a printer driver for your operating system. The following drivers are included on the CD-ROM labeled "Printer Drivers and Utilities".

Printer Language	PCL 6	PCL 5c	RPCS	PostScript 3
Windows 2000 *1	ОК	OK	OK	ОК
Windows XP *2	OK	OK	OK	ОК
Windows Vista *3	ОК	OK	OK	ОК
Windows Server 2003 *4	OK	OK	OK	OK
Mac OS *5	_	_	_	OK
Mac OS X *6	_	_	_	ОК

- \* 1 Microsoft Windows 2000 Professional / Microsoft Windows 2000 Server/Microsoft Windows 2000 Advanced Server
- \*2 Microsoft Windows XP Professional/Microsoft Windows XP Home Edition
- \*3 Microsoft Windows Vista Ultimate/Microsoft Windows Vista Enterprise/Microsoft Windows Vista Business/ Microsoft Windows Vista Home Premium/Microsoft Windows Vista Home Basic
- \*4 Microsoft Windows Server 2003 Standard Edition/Microsoft Windows Server 2003 Enterprise Edition/ Microsoft Windows Server 2003 Web Edition/Microsoft Windows Server 2003 Datacenter Edition/Microsoft Windows Server 2003 R2 Standard Edition/Microsoft Windows Server 2003 R2 Enterprise Edition/Microsoft Windows Server 2003 R2 Datacenter Edition
- \*5 Versions 8.6 to 9.2 of the Mac OS (Mac OS X Classic mode is supported.)
- \*6 Mac OS X 10.1 or later (Native mode)

### PCL printer drivers

Two kinds of PCL printer driver (PCL 5c and PCL 6) are included. These drivers allow your computer to communicate with this machine via a printer language.

#### **RPCS** printer driver

This printer driver allows the computer to communicate with the printer using a printer language. In addition to the conventional user interface, another preset user interface is provided.

### Adobe PostScript Printer Drivers and PPD files

Adobe PostScript printer drivers allow the computer to communicate with the printer using a printer language. PPD files allow the printer driver to enable specific printer functions.

### PPD files

PPD files allow the printer driver to enable specific printer functions.



- Some applications may require installation of the PCL 5c printer driver. In this case, you can install PCL 5c without having to install PCL 6.
- For details, see "Preparing the Machine", Printer Reference, and PostScript 3 Supplement.

# TWAIN Driver

This section describes the file path and system requirements of the TWAIN driver.

This driver is required to scan an original using a scanner. To use the machine as a network TWAIN scanner, this driver must be installed.

# File path

The driver is included in the following folder on the CD-ROM labeled "Scanner Driver and Utilities" provided with this machine:

#### \DRIVERS\TWAIN

# System requirements

- Hardware
  - PC/AT-compatible machines that support the following operating system properly
  - Operating system

Windows 95/98/Me/2000/XP/Vista

Windows Server 2003/2003 R2

Windows NT 4.0

· Display resolution

800 × 600 pixels, 256 colors or higher



Under Windows NT with RISC-based processors (MIPS R series, Alpha AXP, or PowerPC), this driver
is not supported.

### **LAN-Fax Driver**

This section describes the file path and system requirements of the LAN-Fax driver.



You can install the LAN-Fax driver from the CD-ROM provided with this machine or download it from
the supplier's Web site. If your operating system is Windows 98 / Me or Windows NT 4.0, you must
download the LAN-Fax driver from the supplier's Web site. Select this machine and the operating
system you are using, and then download it.

4

This driver is required to use LAN-Fax functions.

#### File path

The driver is included in the following folders on the CD-ROM labeled "Printer Drivers and Utilities":

## \DRIVERS\LAN-FAX\XP\_VISTA

#### System requirements

- Hardware
  - PC/AT-compatible
- · Operating systems
  - Windows 2000/XP/Vista
  - Windows Server 2003/2003 R2
- Display
  - VGA 640 × 480 pixels or more



· Before beginning installation, exit all other applications.

# DeskTopBinder Lite

This section describes the file path and system requirements of DeskTopBinder Lite.

DeskTopBinder is to be installed on the client computers for integration and management of various kinds of files such as scan files, files created with applications, and existing scan files. This software allows you to use various functions for stored scan files such as viewing stored files. Also, with the ScanRouter delivery software, you can view the files stored in in-trays of the delivery server, or use other functions for stored files.

For details about the software installed with DeskTopBinder Lite, see "DeskTopBinder Lite", Scanner Reference.

### File path

The software is included in the following folder on the CD-ROM labeled "Scanner Driver and Utilities" provided with this machine:

### \UTILITY\DESKV2

# System requirements

- Hardware
  - PC/AT-compatible machines that support the operating system properly
- · Operating system
  - When installing all functions of DeskTopBinder:

Windows 98SE/Me/2000 Professional SP1 or later/2000 Server SP1 or later/2000 Advanced Server SP1 or later/XP Professional/XP Home Edition

• When installing only SmartDeviceMonitor for Client:

Windows 95 SP1/98/98SE/Me/2000 Professional SP1 or later/2000 Server SP1 or later/XP Professional/XP Home Edition

Windows NT 4.0 SP5 or later

# SmartDeviceMonitor for Admin

This section describes the file path and available functions of SmartDeviceMonitor for Admin.

SmartDeviceMonitor for Admin is an application that uses TCP/IP and IPX/SPX to monitor network printers. It can monitor multiple network printers using IP address. We recommend that network administrators use this application.

# File path

SmartDeviceMonitor for Admin is stored in the following folder in the CD-ROM labeled "Printer Drivers and Utilities":

#### \NETWORK\DEVMON\ADMIN\DISK1

Operating system	Protocol stack	
Windows 95 / 98 / Me	TCP/IP provided with Windows 95 / 98 / Me	
	IPX/SPX provided with Windows 95 / 98 / Me	
	NetWare Client provided with Windows 95 / 98	
	Novell Client provided with Windows 95 / 98	
Windows 2000	TCP/IP provided with Windows 2000	
	IPX/SPX provided with Windows 2000	
	NetWare Client provided with Windows 2000	
	Novell Client provided with Windows 2000 or Windows NT	
Windows XP	TCP/IP provided with Windows XP	
	IPX/SPX provided with Windows XP	
	NetWare Client provided with Windows XP	
	Novell Client provided with Windows XP	
Windows Vista	TCP/IP provided with Windows Vista	
	Novell Client provided with Windows Vista	
Windows Server 2003	TCP/IP provided with Windows Server 2003	

# Available functions

Windows NT 4.0

SmartDeviceMonitor for Admin has the functions to check the followings:

Printer supplies such as paper or toner

Operating system

· Results of print jobs executed from the computer



• For details, see Network Guide, and SmartDeviceMonitor for Admin Help.

# DeskTopBinder-SmartDeviceMonitor for Client

This section describes the file path and system requirements of DeskTopBinder-SmartDeviceMonitor for Client.

Protocol stack

IPX/SPX provided with Windows Server 2003

NetWare Client provided with Windows Server 2003

Novell Client provided with Windows Server 2003

Client Service for NetWare provided with Windows NT Novell Client provided with Windows 2000 or Windows NT

TCP/IP provided with Windows NT IPX/SPX provided with Windows NT

DeskTopBinder-SmartDeviceMonitor for Client allows you to manage and print various data such as files created with an application, images scanned with a scanner, and existing images as one document.

#### File path

DeskTopBinder-SmartDeviceMonitor for Client is stored in the following folder on the CD-ROM labeled "Printer Drivers and Utilities":

### \NETWORK\DEVMON\CLIENT\DISK1

Windows NT 4 0

### Operating environment of the printer driver

- Applicable computer
   Machines which properly work with the applicable OS below. PC/AT compatible machine.
- Applicable OS
   Windows 95/98/Me/2000/XP/Vista
   Windows Server 2003/2003 R2



- See "DeskTopBinder Lite", Scanner Reference or Help of DeskTopBinder-SmartDeviceMonitor for Client
- DeskTopBinder includes SmartDeviceMonitor for Client. See Help of DeskTopBinder-SmartDeviceMonitor for Client.

# Specifications for the Main Unit

This section describes specifications for the main unit.

# Configuration:

Console

# Photosensitivity type:

OPC drum

### Original scanning:

CCD

## Copy process:

Dry electrostatic transfer system

#### **Development:**

Dry two-component magnetic brush development system

# Fusing:

Oilless belt fusing

## Resolution:

- Scanning originals: 600 dpi
- Printing: 600 dpi

### Exposure glass:

Stationary original exposure type

### Original reference position:

Rear left corner

## Warm-up time (23°C, rated voltage):

- Type 1: 90 seconds or less
- Type 2: 75 seconds or less

# Originals:

Sheet/book/objects

# Maximum original size:

A3□, 11 × 17□

### Paper size:

- Trays: A3D A5DD, 12 × 18D  $5^1/_2$  ×  $8^1/_2$ DD, 8K (267 × 390 mm)D, 16K (195 × 267 mm)DD
- Bypass: A3 $\square$  A6 $\square$ , 12 × 18 $\square$  5 $^1/_2$  × 8 $^1/_2$  $\square$

4

- Bypass (custom size): Vertical: 100.0 305.0 mm, 3.94 12.00 inches
   Horizontal: 148.0 457.2 mm. 5.83 18 inches
- Duplex: A3\$\opi A5\$\opi\$\opi\$, 12 \times 18\$\opi 5\$^1/2 \times 8\$^1/2\$\opi\$\opi\$, 8K (267 \times 390 mm)\$\opi\$, 16K (195 \times 267 mm)\$\opi\$\opi\$

## Paper weight:

- Trays: 52.3 216 g/m<sup>2</sup>, 14 lb. Bond 80 lb. Cover
- Bypass: 52.3 300 g/m<sup>2</sup>, 14 lb. Bond 110 lb. Cover
- Duplex: 64 163 g/m<sup>2</sup>, 17 lb. Bond 90 lb. Index

For details about and recommendations concerning thick paper, see "Thick Paper".

## Non-reproduction area (Copier):

- Leading edge: 3.0 6.0 mm, 0.12 0.24 inches (2.2 6.2 mm, 0.09 0.25 inches for paper heavier than 127.5 g/m<sup>2</sup>, 34.0 lb.)
- Trailing edge: 0 4.0 mm, 0 0.16 inches (except 12 × 18□)
- Left and Right: 0 4.0 mm, 0 0.16 inches (Less than 4.0 mm, 0.16 inches in total)

## First copy/print time:

- Type 1:
  - Color: 7.5 seconds or less
  - B&W: 5.7 seconds or less
- Type 2:
  - Color: 6.4 seconds or less
  - B&W: 4.9 seconds or less

 $(A4D, 8^{1}/_{2} \times 11D, 100\%$  reproduction, feeding from Tray 1, on the exposure glass)

## Copying speed (Full Color / B&W):

- Type 1: 55/50 copies/minute (A4 $\mathbb{D}$ , 8 $^{1}/_{2} \times 11\mathbb{D}$ )
- Type 2: 70/75 copies/minute (A4 $^{\square}$ , 8 $^{1}/_{2} \times 11^{\square}$ )

### Reproduction ratio:

- Preset reproduction ratios:
  - Enlargement

Metric version	Inch version
400%	400%
200%	200%
141%	155%

### • Full size

Metric version	Inch version
100%	100%

### Reduction

Metric version	Inch version
93%	93%
82%	85%
75%	78%
71%	73%
65%	65%
50%	50%
25%	25%

• Zoom: From 25 to 400% in increments of 1%

## Maximum continuous copy run:

9999 sheets

## Paper capacity (80 g/m<sup>2</sup>, 20 lb.):

• Tray 1 (Tandem tray): 2,200 sheets (1,100 sheets × 2)

• Trays 2, 3 (550-sheet tray): 550 sheets

• Bypass tray: 100 sheets

## Power consumption:

Main unit only

	Туре 1	Туре 2
Warm-up	1.92 kW	2.4 kW
Stand-by	400 W	400 W

	Туре 1	Туре 2
During printing	1.92 kW	2.4 kW
Maximum	1.92 kW	2.4 kW

Complete system

	Туре 1	Туре 2
Warm-up	1.92 kW	2.4 kW
Stand-by	450 W	450 W
During printing	1.92 kW	2.4 kW
Maximum	1.92 kW	2.4 kW

 The complete system consists of the main unit, finisher, large capacity tray (LCT), fax unit, and printer/scanner unit.

## Dimensions (W × D × H up to ADF):

Types 1, 2:  $750 \times 850 \times 1,230$  mm,  $29.6 \times 33.5 \times 48.5$  inches

## Space for main unit (W × D):

Types 1, 2: 1,425 × 1,450 mm, 56.1 × 57.1 inches

### Noise emission:

- · Sound power level:
  - · Main unit only

	Туре 1	Туре 2
Stand-by	Less than 51 dB (A)	Less than 56 dB (A)
Copying	Less than 71 dB (A)	Less than 73 dB (A)

• Complete system

	Туре 1	Туре 2
Stand-by	Less than 51 dB (A)	Less than 56 dB (A)
Copying	Less than 75 dB (A)	Less than 77 dB (A)

- Sound pressure level:
  - · Main unit only

	Туре 1	Туре 2
Stand-by	Less than 45 dB (A)	Less than 50 dB (A)
Copying	Less than 65 dB (A)	Less than 67 dB (A)

• Complete system

	Туре 1	Туре 2
Stand-by	Less than 45 dB (A)	Less than 50 dB (A)
Copying	Less than 69 dB (A)	Less than 71 dB (A)

- Sound power level and sound pressure level are actual values measured in accordance with ISO 7779.
- Sound power level and sound pressure level are measured from the position of the bystander.
- The complete system consists of the main unit, finisher, large capacity tray (LCT), fax unit, and printer/scanner unit.

## Weight:

Types 1, 2: Approx. 298 kg, 657 lb.

## Reference

• p.113 "Thick Paper"

## Auto Document Feeder

## Mode:

Batch (SADF) mode, Mixed Sizes mode, Original Orientation mode

## Original size:

- Metric version:
  - A3□ B6 JIS□□ (1-sided originals)
  - A3□ A5□□ (2-sided originals)
- Inch version:
  - 11 × 17 $\Box$  5<sup>1</sup>/<sub>2</sub> × 8<sup>1</sup>/<sub>2</sub> $\Box$  $\Box$  (1-sided originals)
  - 11 × 17 $\square$   $5^1/_2$  ×  $8^1/_2$  $\square$  $\square$  (2-sided originals)

## Original weight:

• 1-sided originals: 40 - 128 g/m² (11 - 34 lb.)

• 2-sided originals: 52 - 128 g/m<sup>2</sup> (14 - 34 lb.)

### Number of originals to be set:

100 sheets (81.4 g/m<sup>2</sup>, 22 lb.) or less than 12 mm, 0.4 inches

## Maximum power consumption:

Less than 59 W (Power is supplied from the main unit.)

### Dimensions (W × D × H):

 $680 \times 560 \times 180$  mm,  $26.8 \times 22 \times 7.1$  inches

### Weight:

Approx. 19.5 kg, 43 lb.



• Specifications are subject to change without notice.

## **Document Server**

#### HDD:

160 GB × 2

### **HDD (Document Server):**

Approx. 170 GB

### Capacity:

- · Copy:
  - Approx. 5,000 pages (Full Color)(ITUT-No.4 chart)
  - Approx. 15,000 pages (B&W)
- Printer: Approx. 100 pages (600 dpi)
- Scanner: Approx. 200 pages (Scanning Conditions: ITUT-No. 4 chart/200 dpi/Text/A4/ MMR)

## Maximum number of stored documents:

3,000 documents

## Maximum pages of stored documents:

15,000 pages

## Maximum number of pages per document:

2,000 pages

## Capacity (Memory Sorting):

Approx. 21 GB (A4 or  $8^{1}/_{2} \times 11$ : Approx. 333 sheets - 2,760 sheets at maximum) (The capacity differs depending on the functions used.)

## Capacity (Others):

Approx. 83 GB

# Specifications for Finisher SR4010 (50-Sheet-Staples) (Optional)

This section describes specifications for Finisher SR4010 (50-sheet-staples).

## **Finisher Upper Tray**

This section describes specifications for the finisher upper tray of Finisher SR4010 (50-sheet-staples).

#### Paper size:

A3D, B4 JISD, A4DD, B5 JISDD, A5DD, B6 JISD, A6D,  $12 \times 18D$ ,  $11 \times 17D$ ,  $11 \times 15D$ ,  $11 \times 14D$ ,  $10 \times 15D$ ,  $10 \times 14D$ ,  $8^{1}/_{2} \times 14D$ ,  $8^{1}/_{2} \times 13D$ ,  $8^{1}/_{2} \times 11DD$ ,  $8^{1}/_{4} \times 14D$ ,  $8^{1}/_{4} \times 13D$ ,  $8 \times 13D$ ,  $8 \times 10^{1}/_{2}DD$ ,  $8 \times 10DD$ ,  $5^{1}/_{2} \times 8^{1}/_{2}DD$ ,  $7^{1}/_{4} \times 10^{1}/_{2}DD$ ,  $182 \times 10DD$ ,  $170 \times 10DD$ ,  $100 \times 148D$ ,  $100 \times 148D$ ,  $100 \times 100$ 

#### Paper weight:

52 - 163 g/m<sup>2</sup>, 14 - 43 lb.

## Stack capacity (80 g/m<sup>2</sup>, 20 lb.):

- 250 sheets: A4DD, B5 JISDD, A5DD, B6 JISD, A6D, 81/2 × 11DD, 51/2 × 81/2DD
- 50 sheets: A3□, B4 JIS□, 12 × 18□, 11 × 17□, 8¹/<sub>2</sub> × 14□

## Finisher Shift Tray

This section describes specifications for the finisher shift tray of Finisher SR4010 (50-sheet-staples).

#### Paper size:

A3D, B4 JISD, A4DD, B5 JISDD, A5DD, B6 JISD, A6D,  $12 \times 18D$ ,  $11 \times 17D$ ,  $11 \times 15D$ ,  $11 \times 14D$ ,  $10 \times 15D$ ,  $10 \times 14D$ ,  $8^{1}/_{2} \times 14D$ ,  $8^{1}/_{2} \times 13D$ ,  $8^{1}/_{2} \times 11DD$ ,  $8^{1}/_{4} \times 14D$ ,  $8^{1}/_{4} \times 13D$ ,  $8 \times 13D$ ,  $8 \times 10^{1}/_{2}DD$ ,  $170 \times 10^{1}/_{2}DD$ ,  $182 \times 10^{1}/_{2}DD$ ,  $170 \times 10^{1}/_{2}DD$ ,  $100 \times 148D$ ,  $100 \times 10^{1}/_{2}DD$ , custom size.

#### Paper weight:

52 - 256 g/m<sup>2</sup>, 14 - 68 lb.

## Stack capacity (80 g/m<sup>2</sup>, 20 lb.):

- 3,000 sheets: A4 $\mathbb{D}$ , 8 $^{1}/_{2} \times 11\mathbb{D}$
- 1,500 sheets: A3D, B4 JISD, A4D, B5 JISDD, 12 × 18D, 11 × 17D, 8<sup>1</sup>/<sub>2</sub> × 14D, 8<sup>1</sup>/<sub>2</sub> × 11D
- 100 sheets: A5□, B6 JIS□, A6□, 5¹/<sub>2</sub> × 8¹/<sub>2</sub>□□

## Staple paper size:

A3D, B4 JISD, A4DD, B5 JISDD,  $12 \times 18D$ ,  $11 \times 17D$ ,  $11 \times 15D$ ,  $11 \times 14D$ ,  $10 \times 15D$ ,  $10 \times 14D$ ,  $8^{1}/_{2} \times 14D$ ,  $8^$ 

## Staple paper weight:

 $64 - 90 \text{ g/m}^2$ , 17 - 28 lb.

## Staple capacity (80 g/m<sup>2</sup>, 20 lb.):

- · Without Mixed Size:
  - 30 sheets: A3 \(\bigcap\_1\), B4 JIS \(\bigcup\_1\), 12 \times 18 \(\bigcup\_1\), 11 \times 17 \(\bigcup\_1\), 8\(^1/\_2\times 14 \(\bigcup\_1\), 8 \times 13 \(\bigcup\_1\), 8\(^1/\_4\times 13 \(\bigcup\_1\), 210 \times 340 \(\bigcup\_1\), 11 \times 15 \(\bigcup\_1\), 11 \times 14 \(\bigcup\_1\), 10 \times 14 \(\bigcup\_1\), 8K \(\bigcup\_1\)
  - 50 sheets: A4DD, B5 JISDD,  $8^{1}/_{2} \times 11DD$ ,  $8 \times 10^{1}/_{2}DD$ ,  $8 \times 10DD$ ,  $7^{1}/_{4} \times 10^{1}/_{2}DD$ ,  $182 \times 210DD$ , 16KDD
- With Mixed Size:
  - 30 sheets: A3□/ A4□, B4 JIS□/ B5 JIS□, 11 × 17□/8¹/2 ×11□

## Stack capacity after stapling (80 g/m<sup>2</sup>, 20 lb.):

- Without Mixed Size:
  - 2 19 sheets: 150 sets (A4 $\mathbb{D}$ , 8 $^{1}/_{2} \times 11\mathbb{D}$ )
  - 20 50 sheets: 150 60 sets (A4 $\mathbb{D}$ , 8 $^{1}/_{2} \times 11\mathbb{D}$ )
  - 2 14 sheets: 100 sets (A4□, B5 JIS□□, 8<sup>1</sup>/<sub>2</sub> × 11□)
  - 15 50 sheets: 100 30 sets (A4□, B5 JIS□□, 81/2 × 11□)
  - 2 14 sheets: 100 sets (other size paper)
  - 15 30 sheets: 100 33 sets (other size paper)
- · With Mixed Size:
  - 2 30 sheets: 50 sets (A3 $\square$ / A4 $\square$ , B4 JIS $\square$ / B5 JIS $\square$ , 11 × 17 $\square$ /8 $^1$ /2 ×11 $\square$ )

#### Staple position:

4 positions (Top, Top Slant, Bottom, 2 Staples)

#### Power consumption:

Approx. 96 W (Power is supplied from the main unit.)

### Dimensions (W $\times$ D $\times$ H):

657 × 613 × 960 mm, 25.8 × 24.2 × 37.8 inches

#### Weight:

Approx. 56 kg, 123.5 lb.

# Specifications for Finisher SR4020 (Saddle Stitch) (Optional)

This section describes specifications for Finisher SR4020 (Saddle Stitch).

## Finisher Upper Tray

This section describes specifications for the finisher upper tray of Finisher SR4020 (Saddle Stitch).

## Paper size:

Without Z-fold:

```
A3D, B4 JISD, A4DD, B5 JISDD, A5DD, B6 JISD, A6D, 12 \times 18D, 11 \times 17D, 11 \times 15D, 11 \times 14D, 10 \times 15D, 10 \times 14D, 8^{1}/_{2} \times 14D, 8^{1}/_{2} \times 13D, 8^{1}/_{2} \times 11DD, 8^{1}/_{4} \times 14D, 8^{1}/_{4} \times 13D, 8 \times 13D, 8 \times 10^{1}/_{2}DD, 8 \times 10DD, 5^{1}/_{2} \times 8^{1}/_{2}DD, 7^{1}/_{4} \times 10^{1}/_{2}DD, 10 \times 148D, 10 \times 148D, 10 \times 10 \times 10^{1}, 10 \times 148D, 10 \times 10^{1}, 10 \times 10^{
```

• With Z-fold:

A3D, B4 JISD, A4D, 
$$12 \times 18D$$
,  $11 \times 17D$ ,  $8^{1}/_{2} \times 14D$ ,  $8^{1}/_{2} \times 11D$ 

## Paper weight:

- Without Z-fold:
  - 52 163 g/m<sup>2</sup>, 14 43 lb.
- With Z-fold:

## Stack capacity (80 g/ $m^2$ , 20 lb.):

- Without Z-fold:
  - 250 sheets: A4DD, B5 JISDD, A5DD, B6 JISD, A6D, 81/2 × 11DD, 81/2 × 51/2DD
  - 50 sheets: A3□, B4 JIS□, 12 × 18□, 11 × 17□, 8¹/<sub>2</sub> × 14□
- With Z-fold:
  - 20 sheets: A4□, 8<sup>1</sup>/<sub>2</sub> × 11□
  - 30 sheets: A3□, B4 JIS□, 12 × 18□, 11 × 17□, 8<sup>1</sup>/<sub>2</sub> × 14□

## Finisher Shift Tray

This section describes specifications for the finisher shift tray of Finisher SR4020 (Saddle Stitch).

## Paper size:

Without Z-fold:

A3D, B4 JISD, A4DD, B5 JISDD, A5DD, B6 JISD, A6D,  $12 \times 18D$ ,  $11 \times 17D$ ,  $11 \times 15D$ ,  $11 \times 14D$ ,  $10 \times 15D$ ,  $10 \times 14D$ ,  $8^{1}/_{2} \times 14D$ ,  $8^{1}/_{2} \times 13D$ ,  $8^{1}/_{2} \times 11DD$ ,  $8^{1}/_{4} \times 14D$ ,  $8^{1}/_{4} \times 13D$ ,  $8 \times 13D$ ,  $8 \times 10^{1}/_{2}DD$ ,  $8 \times 10DD$ ,  $5^{1}/_{2} \times 8^{1}/_{2}DD$ ,  $7^{1}/_{4} \times 10^{1}/_{2}DD$ ,  $10 \times 148D$ ,  $10 \times 14D$ 

• With Z-fold:

A3D, B4 JISD, A4D,  $12 \times 18D$ ,  $11 \times 17D$ ,  $8^{1}/_{2} \times 14D$ ,  $8^{1}/_{2} \times 11D$ 

## Paper weight:

- Without Z-fold:
  - 52 256 g/m<sup>2</sup>, 14 68 lb.
- With Z-fold:

64 - 80 g/m<sup>2</sup>, 17 - 21 lb.

## Stack capacity (80 g/m<sup>2</sup>, 20 lb.):

- Without Z-fold:
  - 2,000 sheets: A4 $\Box$ , 8 $^{1}/_{2} \times 11\Box$
  - 1,000 sheets: A3D, B4 JISD, A4D, B5 JISD, 12 × 18D, 11 × 17D, 8<sup>1</sup>/<sub>2</sub> × 14D, 8<sup>1</sup>/<sub>2</sub> × 11D
  - 500 sheets: A5□
  - 100 sheets: A5D, B6 JISD, A6D, 51/2 × 81/2DD
- With Z-fold:
  - 20 sheets: A4□, 81/2 × 11□
  - 30 sheets: A3□, B4 JIS□, 12 × 18□, 11 × 17□, 8¹/2 × 14□

## Staple paper size:

Without Z-fold:

A3D, B4 JISD, A4DD, B5 JISDD,  $12 \times 18D$ ,  $11 \times 17D$ ,  $11 \times 15D$ ,  $11 \times 14D$ ,  $10 \times 15D$ ,  $10 \times 14D$ ,  $8^1/_2 \times 14D$ ,  $8^1/_2 \times 11DD$ ,  $7^1/_4 \times 10^1/_2DD$ ,  $8 \times 13D$ ,  $8^1/_2 \times 13D$ ,  $8^1/_4 \times 14D$ ,  $8^1/_4 \times 13D$ ,  $8 \times 10^1/_2DD$ ,  $8 \times 10DD$ ,  $182 \times 210DD$ ,  $210 \times 340D$ , 8KDD, 16KDD

• With Z-fold:

A3D, B4 JISD, A4D,  $12 \times 18D$ ,  $11 \times 17D$ ,  $8^{1}/_{2} \times 14D$ ,  $8^{1}/_{2} \times 11D$ 

#### Staple paper weight:

- Without Z-fold:
  - 64 90 a/m<sup>2</sup>, 17 28 lb.
- With Z-fold:

 $64 - 80 \text{ g/m}^2$ , 17 - 20 lb.

## Staple capacity (80 g/m<sup>2</sup>, 20 lb.):

- Without Z-fold:
  - 30 sheets: A3D, B4 JISD, 12 × 18D, 11 × 17D, 8<sup>1</sup>/<sub>2</sub> × 14D, 8 × 13D, 8<sup>1</sup>/<sub>2</sub> × 13D, 8<sup>1</sup>/<sub>4</sub> × 14D, 8<sup>1</sup>/<sub>4</sub> × 13D, 210 × 340D, 11 × 15D, 11 × 14D, 10 × 15D, 10 × 14D, 8KD
  - 50 sheets: A4DD, B5 JISDD,  $8^{1}/_{2} \times 11DD$ ,  $8 \times 10^{1}/_{2}DD$ ,  $8 \times 10DD$ ,  $7^{1}/_{4} \times 10^{1}/_{2}DD$ ,  $182 \times 210DD$ , 16KDD
  - 30 sheets: With Mixed Size mode
- With Z-fold:
  - 5 sheets: A3□, B4 JIS□, 11 × 17□

## Stack capacity after stapling (80 g/m<sup>2</sup>, 20 lb.):

- Without Mixed Size:
  - 2 12 sheets: 150 sets (A4 $\mathbb{D}$ , 8 $^{1}/_{2} \times 11\mathbb{D}$ )
  - 13 50 sheets: 150 40 sets (A4 $\mathbb{D}$ , 8 $^{1}/_{2} \times 11\mathbb{D}$ )
  - 2 9 sheets: 100 sets (A4□, B5 JIS□□, 81/2 × 11□)
  - 10 50 sheets: 100 20 sets (A4D, B5 JISDD, 8<sup>1</sup>/<sub>2</sub> × 11D)
  - 2 9 sheets: 100 sets (other size paper)
  - 10 30 sheets: 100 33 sets (other size paper)
- With Mixed Size:
  - 2 30 sheets: 50 sets (A3□/ A4□, B4 JIS□/ B5 JIS□, 11 × 17□/8¹/<sub>2</sub> ×11□)

### Staple position:

4 positions (Top, Top Slant, Bottom, 2 Staples)

## Finisher Booklet Tray

This section describes specifications for the finisher booklet tray of Finisher SR4020 (Saddle Stitch).

## Saddle stitch paper size:

A3D, B4 JISD, A4D, B5 JISD, 
$$12 \times 18D$$
,  $11 \times 17D$ ,  $8^{1}/_{2} \times 14D$ ,  $8^{1}/_{2} \times 11D$ 

### Saddle stitch paper weight:

## Saddle stitch capacity (80 g/m<sup>2</sup>, 20 lb.):

1 set (15 sheets)

• 2 - 5 sheets: 30 sets

• 6 - 10 sheets: 15 sets

• 11 - 15 sheets: 10 sets

## Saddle stitch position:

Centre 2 positions

## Power consumption:

Approx. 96 W (Power is supplied from the main unit.)

## Dimensions (W × D × H):

657 × 613 × 960 mm, 25.8 × 24.2 × 37.8 inches

## Weight:

Approx. 65 kg, 143.3 lb.

# Specifications for Finisher SR5000 (100-Sheet-Staples) (Optional)

This section describes specifications for Finisher SR5000 (100-Sheet-Staples).

## Finisher Upper Tray

This section describes specifications for the finisher upper tray of Finisher SR5000 (100-Sheet-Staples).

#### Paper size:

Without Z-fold:

```
A3D, B4 JISD, A4DD, B5 JISDD, A5DD, B6 JISD, A6D, 12 \times 18D, 11 \times 17D, 11 \times 15D, 11 \times 14D, 10 \times 15D, 10 \times 14D, 8^{1}/_{2} \times 14D, 8^{1}/_{2} \times 13D, 8^{1}/_{2} \times 11DD, 8^{1}/_{4} \times 14D, 8^{1}/_{4} \times 13D, 8 \times 13D, 8 \times 10^{1}/_{2}DD, 8 \times 10DD, 5^{1}/_{2} \times 8^{1}/_{2}DD, 7^{1}/_{4} \times 10^{1}/_{2}DD, 10 \times 148D, 10 \times 148D, 10 \times 10 \times 10^{1}, 10 \times 148D, 10 \times 10^{1}, 10 \times 10^{
```

• With Z-fold:

A3D, B4 JISD, A4D, 
$$11 \times 17D$$
,  $8^{1}/_{2} \times 14D$ ,  $8^{1}/_{2} \times 11D$ 

## Paper weight:

• Without Z-fold:

• With Z-fold:

$$64 - 80 \text{ g/m}^2$$
,  $17 - 21 \text{ lb}$ .

## Stack capacity (80 g/ $m^2$ , 20 lb.):

- Without Z-fold:
  - 500 sheets: A4DD, B5 JISDD, A5DD, B6 JISD, A6D, 81/2 × 11DD, 51/2 × 81/2DD
  - 250 sheets: A3□, B4 JIS□, 12 × 18□, 11 × 17□, 8¹/2 × 14□
- With Z-fold:
  - 30 sheets

## Finisher Shift Tray

This section describes specifications for the finisher shift tray of Finisher SR5000 (100-Sheet-Staples).

#### Paper size:

• Without Z-fold:

A3D, B4 JISD, A4DD, B5 JISDD, A5DD, 12 × 18D, 11 × 17D, 11 × 15D, 11 × 14D, 10 × 15D, 10 × 14D,  $8^{1}/_{2}$  × 14D,  $8^{1}/_{2}$  × 13D,  $8^{1}/_{2}$  × 11DD,  $8^{1}/_{4}$  × 14D,  $8^{1}/_{4}$  × 13D,  $8 \times 13$ D,  $8 \times 10^{1}/_{2}$ DD,  $8 \times 10^{1$ 

• With Z-fold:

A3D, B4 JISD, A4D,  $11 \times 17D$ ,  $8^{1}/_{2} \times 14D$ ,  $8^{1}/_{2} \times 11D$ 

## Paper weight:

- Without Z-fold:
  - $52 300 \text{ g/m}^2$ , 14 80 lb.
- With Z-fold:

 $64 - 80 \text{ g/m}^2$ , 17 - 21 lb.

## Stack capacity (80 g/m<sup>2</sup>, 20 lb.):

- Without Z-fold:
  - 3,000 sheets: A4 $\mathbb{D}$ , B5 JIS $\mathbb{D}$ , 8 $^{1}/_{2} \times 11\mathbb{D}$
  - 1,500 sheets: A3□, B4 JIS□, A4□, B5 JIS□, 11 × 17□, 8<sup>1</sup>/<sub>2</sub> × 14□, 8<sup>1</sup>/<sub>2</sub> × 11□
  - 1,000 sheets: 12 × 18□
  - 500 sheets: A5D, 51/2 × 81/2D
  - 100 sheets: A5\(\mu, 5^1/\_2 \times 8^1/\_2\)
- With Z-fold:
  - 30 sheets

## Staple paper size:

Without Z-fold:

A3D, B4 JISD, A4DD, B5 JISDD,  $11 \times 17D$ ,  $11 \times 15D$ ,  $11 \times 14D$ ,  $10 \times 15D$ ,  $10 \times 14D$ ,  $8^{1}/_{2} \times 14D$ ,  $8^{1}/_{2} \times 13D$ ,  $8^{1}/_{2} \times 11DD$ ,  $8^{1}/_{4} \times 14D$ ,  $8^{1}/_{4} \times 13D$ ,  $8 \times 13D$ ,  $8 \times 10DD$ ,  $8 \times 10$ 

• With Z-fold:

A3□, B4 JIS□, 11 × 17□

### Staple paper weight:

- Without Z-fold:
  - $64 90 \text{ g/m}^2$ , 17 28 lb.
- With Z-fold:

64 - 80 g/m<sup>2</sup>, 17 - 20 lb.

## Staple capacity (80 g/m<sup>2</sup>, 20 lb.):

Without Z-fold:

- 50 sheets: A3 $\square$ , B4 JIS $\square$ , 11 × 17 $\square$ , 11 × 15 $\square$ , 11 × 14 $\square$ , 10 × 15 $\square$ , 10 × 14 $\square$ , 8 $^1/_2$  × 14 $\square$ , 8 $^1/_2$  × 13 $\square$ , 8 $^1/_4$  × 14 $\square$ , 8 $^1/_4$  × 13 $\square$ , 8 × 13 $\square$ , 8 × 10 $^1/_2$  $\square$  $\square$ , 8 × 10 $\square$  $\square$ , 182 × 210 $\square$  $\square$ , 170 × 210 $\square$ , 210 × 340 $\square$ , 8K $\square$
- 100 sheets: A4 $\Box\Box$ , B5 JIS $\Box\Box$ , 8 $^{1}/_{2}$  × 11 $\Box\Box$ ,  $7^{1}/_{4}$  × 10 $^{1}/_{2}\Box\Box$ , 16K $\Box\Box$
- With Z-fold:
  - 10 sheets: A3□, B4 JIS□, 11 × 17□

## Stack capacity after stapling (80 g/m<sup>2</sup>, 20 lb.):

- Without Mixed Size:
  - 2 9 sheets: 150 sets (A4DD, B5 JISDD, 8<sup>1</sup>/<sub>2</sub> × 11DD)
  - 10 100 sheets: 200 30 sets (A4DD, B5 JISDD, 81/2 ×11DD)
  - 2 9 sheets: 150 sets (A3D, B4 JISD, 11 × 17D, 8<sup>1</sup>/<sub>2</sub> × 14D)
  - 10 50 sheets: 150 30 sets (A3D, B4 JISD, 11 × 17D, 8<sup>1</sup>/<sub>2</sub> × 14D)
- With Mixed Size:
  - 2 50 sheets: 30 sets (A3D/A4D, B4 JISD/B5 JISD, 11 × 17D/8<sup>1</sup>/<sub>2</sub> ×11D)

## Staple position:

4 positions (Top, Top Slant, Bottom, 2 Staples)

#### Power consumption:

120 W (Power is supplied from the main unit.)

### Dimensions (W $\times$ D $\times$ H):

 $800 \times 730 \times 980$  mm,  $31.5 \times 28.7 \times 38.6$  inches

#### Weight:

Approx. 75 kg, 165.4 lb.

# Specifications for Punch Unit (Finisher SR4010, Finisher SR4020) (Optional)

This section describes specifications for the punch unit (Finisher SR4010, Finisher SR4020).

## Paper size:

Punch unit type	Paper size
2 & 4 holes type: 2 holes	$\Box$ : A3, B4 JIS, A4, B5 JIS, A5, B6 JIS, A6, 11 × 17, $8^{1}/_{2} \times 14$ , $8^{1}/_{2} \times 11$ , $5^{1}/_{2} \times 8^{1}/_{2}$ , $7^{1}/_{4} \times 10^{1}/_{2}$ , $8 \times 13$ , $8^{1}/_{2} \times 13$ , $8^{1}/_{4} \times 13$ , 8K, 16K
2 & 4 holes type: 2 holes	$\square$ : A4, B5 JIS, A5, $8^{1}/_{2} \times 11$ , $5^{1}/_{2} \times 8^{1}/_{2}$ , $7^{1}/_{4} \times 10^{1}/_{2}$ , 16K
2 & 4 holes type: 4 holes	□: A3, B4 JIS, 11 × 17, 8K
2 & 4 holes type: 4 holes	$D: A4, B5 JIS, 8^{1}/_{2} \times 11, 7^{1}/_{4} \times 10^{1}/_{2}, 16K$
4 holes type: 4 holes	$\Box$ : A3, B4 JIS, A4, B5 JIS, A5, B6 JIS, 11 × 17, $8^{1}/_{2} \times 14$ , $8^{1}/_{2} \times 11$ , $5^{1}/_{2} \times 8^{1}/_{2}$ , $7^{1}/_{4} \times 10^{1}/_{2}$ , $8 \times 13$ , $8^{1}/_{2} \times 13$ , $8^{1}/_{4} \times 13$ , 8K, 16K
4 holes type: 4 holes	$\square$ : A4, B5 JIS, A5, $8^{1}/_{2} \times 11$ , $5^{1}/_{2} \times 8^{1}/_{2}$ , $7^{1}/_{4} \times 10^{1}/_{2}$ , 16K
2 & 3 holes type: 2 holes	$\Box$ : A3, B4 JIS, A4, B5 JIS, A5, B6 JIS, A6, 11 × 17, $8^{1}/_{2} \times 14$ , $8^{1}/_{2} \times 11$ , $5^{1}/_{2} \times 8^{1}/_{2}$ , $7^{1}/_{4} \times 10^{1}/_{2}$ , $8 \times 13$ , $8^{1}/_{2} \times 13$ , $8^{1}/_{4} \times 13$ , 8K, 16K
2 & 3 holes type: 2 holes	$\square$ : A4, B5 JIS, A5, $8^{1}/_{2} \times 11$ , $5^{1}/_{2} \times 8^{1}/_{2}$ , $7^{1}/_{4} \times 10^{1}/_{2}$ , 16K
2 & 3 holes type: 3 holes	□: A3, B4 JIS, 11 × 17, 8K
2 & 3 holes type: 3 holes	$\square$ : A4, B5 JIS, $8^{1}/_{2} \times 11$ , $7^{1}/_{4} \times 10^{1}/_{2}$ , 16K

## Paper weight:

52 - 163 g/m<sup>2</sup>, 14 - 43 lb.

### Power consumption:

20 W (Power is supplied from the main unit.)

## Dimensions (W $\times$ D $\times$ H):

 $110 \times 484 \times 117$  mm,  $4.3 \times 19 \times 4.6$  inches

## Weight:

Approx. 2.5 kg, 5.5 lb.

# Specifications for Punch Unit (Finisher SR5000) (Optional)

This section describes specifications for the punch unit (Finisher SR5000).

## Paper size:

Punch unit type	Paper size
2 & 4 holes type: 2 holes	D: A3, B4 JIS, A4, B5 JIS, A5, B6 JIS, A6, 12 × 18, 11 × 17, 8 <sup>1</sup> / <sub>2</sub> × 14, 8 <sup>1</sup> / <sub>2</sub> × 11, 5 <sup>1</sup> / <sub>2</sub> × 8 <sup>1</sup> / <sub>2</sub> , 7 <sup>1</sup> / <sub>4</sub> × 10 <sup>1</sup> / <sub>2</sub> , 8 × 13, 8 <sup>1</sup> / <sub>2</sub> × 13, 8 <sup>1</sup> / 4 × 13, 8K, 16K
2 & 4 holes type: 2 holes	$D: A4, B5 JIS, A5, 8^{1}/_{2} \times 11, 5^{1}/_{2} \times 8^{1}/_{2},$ $7^{1}/_{4} \times 10^{1}/_{2}, 16K$
2 & 4 holes type: 4 holes	□: A3, B4 JIS, 12 × 18, 11 × 17, 8K
2 & 4 holes type: 4 holes	$\square$ : A4, B5 JIS, $8^{1}/_{2} \times 11$ , $7^{1}/_{4} \times 10^{1}/_{2}$ , 16K
4 holes type: 4 holes	$\Box$ : A3, B4 JIS, A4, B5 JIS, A5, B6 JIS, 12 × 18, 11 × 17, 8 $^{1}/_{2}$ × 14, 8 $^{1}/_{2}$ × 11, 5 $^{1}/_{2}$ × 8 $^{1}/_{2}$ , 7 $^{1}/_{4}$ × 10 $^{1}/_{2}$ , 8 × 13, 8 $^{1}/_{2}$ × 13, 8 $^{1}/_{4}$ × 13, 8 K, 16 K
4 holes type: 4 holes	$\square$ : A4, B5 JIS, A5, $8^{1}/_{2} \times 11$ , $5^{1}/_{2} \times 8^{1}/_{2}$ , $7^{1}/_{4} \times 10^{1}/_{2}$ , 16K
2 & 3 holes type: 2 holes	$\square$ : A3, B4 JIS, A4, B5 JIS, A5, B6 JIS, A6, 12 × 18, 11 × 17, $8^{1}/_{2}$ × 14, $8^{1}/_{2}$ × 11, $5^{1}/_{2}$ × $8^{1}/_{2}$ , $7^{1}/_{4}$ × $10^{1}/_{2}$ , $8$ × 13, $8^{1}/_{2}$ × 13, $8^{1}/_{4}$ × 13, 8K, 16K
2 & 3 holes type: 2 holes	$\square$ : A4, B5 JIS, A5, $8^{1}/_{2} \times 11$ , $5^{1}/_{2} \times 8^{1}/_{2}$ , $7^{1}/_{4} \times 10^{1}/_{2}$ , 16K
2 & 3 holes type: 3 holes	□: A3, B4 JIS, 12 × 18, 11 × 17, 8K
2 & 3 holes type: 3 holes	$\square$ : A4, B5 JIS, $8^{1}/_{2} \times 11$ , $7^{1}/_{4} \times 10^{1}/_{2}$ , 16K

## Paper weight:

- 2 & 3 holes: 52 163 g/m<sup>2</sup>, 14 43 lb.
- 4 holes: 52 128 g/m<sup>2</sup>, 14 34 lb.

## Dimensions (W $\times$ D $\times$ H):

 $463 \times 105 \times 100$  mm,  $18.3 \times 4.2 \times 4.0$  inches

## Weight:

Approx. 4.5 kg, 10 lb.

## **Specifications for Copy Tray (Optional)**

This section describes specifications for the copy tray.

## Paper capacity:

- A3, B5 JIS,  $11 \times 17$ ,  $5^{1}/_{2} \times 8^{1}/_{2}$ : 250 sheets
- B4 JIS, A4,  $8^{1}/_{2} \times 14$ ,  $8^{1}/_{2} \times 11 : 500$  sheets

## Dimensions (W × D × H):

 $390 \times 330 \times 130$  mm,  $15.4 \times 13 \times 5.1$  inches

## Weight:

Approx. 650 g, 1.4 lb.

## 4

## **Specifications for Output Jogger (Optional)**

This section describes specifications for the output jogger. To use the output jogger, the Finisher SR4010 or the Finisher SR4020 is required.

## Paper size:

A3D, B4 JISD, A4DD, B5 JISD, A5D, 
$$11 \times 17D$$
,  $8^{1}/_{2} \times 14D$ ,  $8^{1}/_{2} \times 11DD$ ,  $5^{1}/_{2} \times 8^{1}/_{2}D$ 

## Power consumption:

16 W (Power is supplied from the main unit.)

## Dimensions (W $\times$ D $\times$ H):

 $108 \times 452 \times 130$  mm,  $4.3 \times 17.8 \times 5.2$  inches

## Weight:

Approx. 2 kg, 4.4 lb.

This section describes specifications for the mailbox. To use the mailbox, the Finisher SR4010 or the Finisher SR4020 is required.

Specifications for Mailbox (Optional)

## Number of trays:

9 trays

## Paper size:

A3D, B4 JISD, A4DD, B5 JISDD, A5DD, 11 × 17D, 
$$8^{1}/_{2}$$
 × 14D,  $8^{1}/_{2}$  × 11DD,  $5^{1}/_{2}$  ×  $8^{1}/_{2}$ DD,  $7^{1}/_{4}$  ×  $10^{1}/_{2}$ D, 8KD, 16KDD

## Paper weight:

 $60 - 128 \text{ g/m}^2$ , 16 - 34 lb.

## Paper capacity (80 g/m<sup>2</sup>, 20 lb.):

100 sheets per tray

### Power consumption:

Approx. 48 W (Power is supplied from the main unit.)

### Dimensions (W × D × H):

 $540 \times 600 \times 660$  mm,  $21.3 \times 23.6 \times 26$  inches

## Weight:

Approx. 15 kg, 33 lb.

## 4

## **Specifications for Interposer (Optional)**

This section describes specifications for the interposer. To use the interposer, the Finisher SR4010 or the Finisher SR4020 is required.

## Paper size:

A3D, B4 JISD, A4DD, B5 JISDD, A5DD, 11 × 17D, 
$$8^{1}/_{2}$$
 ×  $14$ D,  $8^{1}/_{2}$  ×  $11$ DD,  $5^{1}/_{2}$  ×  $8^{1}/_{3}$ DD

## Paper weight:

## Paper capacity (80 g/m<sup>2</sup>, 20 lb.):

200 sheets

## Power consumption (Max):

Approx. 43 W (Power is supplied from the main unit.)

## Dimensions (W × D × H):

 $500 \times 600 \times 600$  mm,  $19.7 \times 23.7 \times 23.7$  inches

## Weight:

Approx. 12 kg, 26.5 lb.

## Specifications for Twin Interposer (Optional)

This section describes specifications for the twin interposer. To use the twin interposer, the Finisher SR5000 is required.

## Paper size:

- Width: A5D,  $5^{1}/_{2} \times 8^{1}/_{2}D$  12 inches
- Length: A5\(\mathbb{\Pi}\), 5\(^1/\_2 \times 8\(^1/\_2 \mathbb{\Pi}\) 18 inches

## Paper weight:

64 - 216 g/m<sup>2</sup>, 20 lb. Bond - 80 lb. Cover

Paper capacity (80 g/m<sup>2</sup>, 20 lb. Bond):

200 sheets × 2

Power consumption (Max):

Approx. 50 W (Power is supplied from the main unit.)

Dimensions (W × D × H):

 $540 \times 730 \times 1270$  mm,  $21.3 \times 28.7 \times 50$  inches

Weight:

Approx. 45 kg, 98.0 lb.

## Specifications for Z-folding Unit (Optional)

This section describes specifications for the Z-folding unit. To use the Z-folding unit, the Finisher SR4020 or the Finisher SR5000 is required.

## Paper size:

A3D, B4 JISD, A4D, 
$$12 \times 18D$$
,  $11 \times 17D$ ,  $8^{1}/_{2} \times 14D$ ,  $8^{1}/_{2} \times 11D$ 

## Paper weight:

- Without Z-fold:
  - $52 300 \text{ g/m}^2$ , 14 80 lb.
- With Z-fold:

### Power consumption:

Maximum 100 W (A separate power source is required.)

## Dimensions (W × D × H):

 $177 \times 620 \times 960$  mm,  $6.9 \times 24.4 \times 37.8$  inches

## Weight:

Approx. 55 kg, 121.3 lb.

## (Optional)

This section describes specifications for the large capacity tray (LCT).

Specifications for Large Capacity Tray (LCT)

## Paper size:

A4D, B5 JISD, 
$$8^{1}/_{2} \times 11D$$

## Paper weight:

## Paper capacity (80 g/m<sup>2</sup>, 20 lb.):

4,000 sheets

## Power consumption:

Maximum 50 W (Power is supplied from the main unit.)

### Dimensions (W × D × H):

314 × 458 × 659 mm, 12.4 × 18 × 25.9 inches

## Weight:

Approx. 20 kg, 44 lb.

# Specifications for Wide Large Capacity Tray (Wide LCT) (Optional)

This section describes specifications for the wide large capacity tray (Wide LCT).

### Paper size:

```
A3\square, B4 JIS\square, A4\square, B5 JIS\square, A5\square, B6 JIS\square, A6\square, 12 × 18\square, 11 × 17\square, 8^1/_2 × 14\square, 8^1/_2 × 110\square, 8^1/_2 × 13\square, 8^1/_4 × 13\square, 8 × 13\square, 5^1/_2 × 8^1/_20\square, 7^1/_4 × 10^1/_20\square, 8K \square, 16K0\square
```

### Paper weight:

52 - 300 g/m<sup>2</sup>, 14 lb. Bond - 110 lb. Cover

## Paper capacity (80 g/m<sup>2</sup>, 20 lb.):

2,000 sheets

#### Power consumption:

Maximum 90 W (Power is supplied from the main unit.)

## Dimensions (W × D × H):

 $865 \times 730 \times 746$  mm,  $34.1 \times 28.8 \times 29.4$  inches

#### Weight:

Approx. 85 kg, 187.4 lb.



• The bypass tray cannot be used if the wide large capacity tray (Wide LCT) is installed.

# Specifications for IEEE 1284 Interface Board (Optional)

This section describes specifications for the IEEE 1284 interface board.

## Transmission spec.:

**IEEE 1284** 

## Required cable:

Standard IEEE 1284 compliant Micro Centronics 36 pin cable

## Specifications for Wireless LAN Board (Optional)

This section describes specifications for the wireless LAN board.

## Transmission spec.:

Based on IEEE 802.11a/b/g (wireless LAN)

#### Protocol:

TCP/IP, IPX/SPX, AppleTalk

#### Data transfer speed:

Auto select from the following speed:

1 Mbps, 2 Mbps, 5.5 Mbps, 6 Mbps, 9 Mbps, 11 Mbps, 12 Mbps, 18 Mbps, 24 Mbps, 36 Mbps, 48 Mbps, 54 Mbps

### Frequency range:

- 2412 2462 MHz (1 11 channels)
- 5180 5320 MHz (36, 40, 44, 48, 52, 56, 60, and 64 channels)

#### Transmission mode:

- Ad hoc mode
- Infrastructure mode



• SmartDeviceMonitor and Web Image Monitor are supported.

# Specifications for Bluetooth Interface Unit (Optional)

This section describes specifications for the Bluetooth interface unit.

## **Supported Profiles:**

- SPP (Serial Port Profile)
- HCRP (Hardcopy Cable Replacement Profile)
- BIP (Basic Imaging Profile)

## Frequency Range:

2.45 GHz ISM band

## **Data Transmission Speed:**

723 kbps

## Maximum Range:

10 m



The transmission speed is adjusted according to factors such as the distance and obstacles between
the devices, radio signal condition and Bluetooth adaptor.

## 4

## **Specifications for Gigabit Ethernet (Optional)**

This section describes specifications for the Gigabit Ethernet.

### **Interface Connector:**

Ethernet (10Base-T, 100Base-TX, 1000Base-T)

## **Data Transmission Speed:**

1000 Mbps, 100 Mbps, 10 Mbps

## Protocol:

TCP/IP, IPX/SPX, AppleTalk

## Distance Between Devices:

100 m

This section describes specifications for other options.

## A3 / 11 × 17 Tray Unit

You can load A3 □ or 11 × 17 □ paper in the tray 1 using this unit.

## B4 JIS / 8<sup>1</sup>/<sub>2</sub> × 14 Tray Unit

You can load B4 JIS $\square$ /A4 $\square$  or  $8^{1}/_{2} \times 14\square$  paper in the large capacity tray (LCT) using this unit.

#### Tab Sheet Holder

You can use tab sheets with this holder.

## **Copy Connector**

You can utilize the connect copy function bridging two machines with the copy connector.

## Copy Data Security Unit

The Copy Data Security Unit deletes images and prints the gray ground color of the paper when the documents marked unauthorized are copied.

## DataOverWriteSecurity Unit

The Data OverWriteSecurity Unit automatically overwrites the data that remains on the hard disk.

Л

## 

This section describes recommended paper sizes and types.

• If you use damp or curled paper, a staple clogging or paper jam may occur.

Recommended Paper Sizes and Types

• When loading thick paper of  $164 - 216 \text{ g/m}^2$  (61 - 80 lb. Cover) in paper trays 1-3, or of  $281 - 300 \text{ g/m}^2$  (104 - 110 lb. Cover) in the bypass tray or in the wide large capacity tray (Wide LCT), see the recommended conditions described in "Thick Paper".

## Tray 1

Paper type and weight	Metric version	Inch version	Paper capacity * 1
52.3 - 216 g/m <sup>2</sup> (14 - 57 lb. Bond, 20 - 80 lb. Cover, 29 - 119 lb. Index)	A4D, 8 <sup>1</sup> / <sub>2</sub> × 11D * <sup>2</sup>	A4D *2, 81/2 × 11D	1,100 sheets × 2
Thin Paper - Thick Paper 2			

## Tray 1 (A3/11 × 17 Tray Unit (optional))

Paper type and weight	Metric version	Inch version	Paper capacity * 1
52.3 - 216 g/m <sup>2</sup> (14 - 57 lb. Bond, 20 - 80 lb. Cover, 29 - 119 lb. Index)	A3 <b>□</b>	11 × 17□	1,100 sheets
Thin Paper - Thick Paper 2			
52.3 - 216 g/m <sup>2</sup> (14 - 57 lb. Bond, 20 - 80 lb. Cover, 29 - 119 lb. Index)	11 × 17 \(\overline{17}\), 8\(\frac{1}{2}\) × 14	*2 A3D, B4 JISD, A4 DD, 8 <sup>1</sup> / <sub>2</sub> × 14D, 8 <sup>1</sup> / <sub>2</sub> × 11DD	1,100 sheets
Thin Paper - Thick Paper 2			

-4

Tray 2, 3

Paper type and weight	Metric version	Inch version	Paper capacity *1
52.3 - 216 g/m² (14 - 57 lb. Bond, 20 - 80 lb. Cover, 29 - 119 lb. Index) Thin Paper - Thick Paper 2	*3 A3 $\square$ , B4 JIS $\square$ , A4 $\square$ $\square$ , B5 JIS $\square$ $\square$ , A5 $\square$ $\square$ , 12 × 18 $\square$ , 11 × 17 $\square$ , 8 $^1/_2$ × 14 $\square$ , 8 $^1/_2$ × 13 $\square$ , 8 $^1/_4$ × 13 $\square$ , 8 × 13 $\square$ , 8 $^1/_2$ × 11 $\square$ $\square$ , 7 $^1/_4$ × 10 $^1/_2$ $\square$ $\square$ , 5 $^1/_2$ × 8 $^1/_2$ $\square$ $\square$ , 8 K (267 × 390 mm) $\square$ , 16K (195 × 267 mm) $\square$ $\square$		550 sheets
52.3 - 216 g/m² (14 - 57 lb. Bond, 20 - 80 lb. Cover, 29 - 119 lb. Index) Thin Paper - Thick Paper 2	*48 <sup>1</sup> / <sub>4</sub> × 14 <sup>1</sup> / <sub>2</sub> , 11 × 15 <sup>1</sup> / <sub>2</sub> , 11 × 14 <sup>1</sup> / <sub>2</sub> , 10 × 15 <sup>1</sup> / <sub>2</sub> , 170 × 210 mm <sup>1</sup> / <sub>2</sub> , 340 × 210 mm <sup>1</sup> / <sub>2</sub>		550 sheets
Tab sheets *9 163 g/m² (43 lb. Bond, 60 lb. Cover, 90 lb. Index), 199 g/ m² (53 lb. Bond, 73 lb. Cover, 110 lb. Index)	A4D, 8 <sup>1</sup> / <sub>2</sub> × 11D, 8 <sup>1</sup> /	∕ <sub>2</sub> ×14⊡	200 sheets

## **Bypass Tray**

Paper type and weight	Metric version	Inch version	Paper capacity * 1
52.3 - 300 g/m² (14 - 80 lb. Bond, 20 - 110 lb. Cover, 29 - 165 lb. Index) Thin Paper - Thick Paper 3	*3 A3□, A4□, A5□, 8 × 13□	*3 A3D, 11 × 17D, 8 <sup>1</sup> / <sub>2</sub> × 14D, 5 <sup>1</sup> / <sub>2</sub> × 8 <sup>1</sup> / <sub>2</sub> D	*10 100 sheets 100 sheets (Thin Paper) 30 sheets (Thick Paper 1)
			20 sheets (Thick Paper 2) 10 sheets (Thick Paper 3)

Paper type and weight	Metric version	Inch version	Paper capacity * 1
52.3 - 300 g/m² (14 - 80 lb. Bond, 20 - 110 lb. Cover, 29 - 165 lb. Index) Thin Paper - Thick Paper 3	*5 B4 JISD, A4D, B5 JISDD, A5D, B6 JIS D, A6D, 12 × 18D, 11 × 17D, 8 <sup>1</sup> / <sub>2</sub> × 14 D, 8 <sup>1</sup> / <sub>2</sub> × 11DD, 5 <sup>1</sup> / <sub>2</sub> × 8 <sup>1</sup> / <sub>2</sub> D, 8 <sup>1</sup> / <sub>2</sub> × 13D, 8 <sup>1</sup> / <sub>4</sub> × 13D, 8 × 13D, 7 <sup>1</sup> / <sub>4</sub> × 10 <sup>1</sup> / <sub>2</sub> DD, 11 × 15 D, 11 × 14D, 10 × 15D, 10 × 14D, 8 <sup>1</sup> / <sub>4</sub> × 14D, 8 × 10 <sup>1</sup> / <sub>2</sub> DD, 8 × 10D D	*5 B4 JISD, A4DD, B5 JISDD, A5DD, B6 JISD, A6D, 12 × 18 D, 8 <sup>1</sup> / <sub>2</sub> × 11DD, 8 <sup>1</sup> / <sub>2</sub> × 13D, 8 <sup>1</sup> / <sub>4</sub> × 13D, 8 × 13D, 7 <sup>1</sup> / <sub>4</sub> × 10 <sup>1</sup> / <sub>2</sub> DD, 11 × 15D, 11 × 14D, 10 × 15D, 10 × 14D, 8 <sup>1</sup> / <sub>4</sub> × 14D, 8 × 10 <sup>1</sup> / <sub>2</sub> DD, 8 × 10D	*10 100 sheets 100 sheets (Thin Paper) 30 sheets (Thick Paper 1) 20 sheets (Thick Paper 2) 10 sheets (Thick Paper 3)
52.3 - 300 g/m² (14 - 80 lb. Bond, 20 - 110 lb. Cover, 29 - 165 lb. Index) Thin Paper - Thick Paper 3	*6 Custom size Vertical: 100 - 305 mm Horizontal: 148 - 457.2 mm	*6 Custom size Vertical: 3.94 - 12 inches Horizontal: 5.83 - 18 inches	*10 100 sheets 100 sheets (Thin Paper) 30 sheets (Thick Paper 1) 20 sheets (Thick Paper 2) 10 sheets (Thick Paper 3)
Translucent paper *15	A3□, B4 JIS□, A4□, B5 JIS□, A4□ *5, B5 JIS □ *5		50 sheets *11
OHP transparencies *7	*3 A4 <sup>D</sup> , 8 <sup>1</sup> / <sub>2</sub> × 11 <sup>D</sup> *5 A4 <sup>D</sup> , 8 <sup>1</sup> / <sub>2</sub> × 11 <sup>D</sup>		50 sheets *11
Label paper (adhesive labels)	B4 JIS□, A4□, A4□ *5		1 sheet
Tab sheets *9 163 g/m² (43 lb. Bond, 60 lb. Cover, 90 lb. Index), 199 g/	*5 A4D, 8 <sup>1</sup> / <sub>2</sub> × 11D, 8 <sup>1</sup> / <sub>2</sub> × 14D		20 sheets

Paper type and weight	Metric version	Inch version	Paper capacity *1
m <sup>2</sup> (53 lb. Bond, 73 lb. Cover, 110 lb. Index)			
Envelopes *8	*6	*6	10 sheets *11
	114 × 229 mm (C5/6)□,	0.016 $0.016$ $0.016$ $0.016$ $0.016$ $0.016$	
	114 × 162 mm (C6)		
	162 × 229 mm (C5)		

## Large Capacity Tray (LCT) (optional)

Paper type and weight	Metric version	Inch version	Paper capacity
52.3 - 127.9 g/m <sup>2</sup> (14 - 34 lb. Bond, 20 - 47 lb. Cover, 29 - 71 lb. Index)	A4D	8 <sup>1</sup> / <sub>2</sub> ×11□	4,000 sheets
Thin Paper - Middle Thick			
52.3 - 127.9 g/m <sup>2</sup> (14 - 34 lb. Bond, 20 - 47 lb. Cover, 29 - 71 lb. Index) Thin Paper - Middle Thick	*2  B4 JISD *12, A4D  *12, 81/2 × 14D *12, B5 JISD, 81/2 × 11D	*2 B4 JISD *12, A4D *12, A4D, 81/2 × 14 D *12, B5 JISD	4,000 sheets


## Wide Large Capacity Tray (Wide LCT) (optional)

Paper type and weight	Metric version	Inch version	Paper capacity *10
52 - 300 g/m² (14 - 80 lb. Bond, 20 - 110 lb. Cover, 29 - 165 lb. Index) Thin Paper - Thick Paper 3		*3 A3D, B4 JISD, A4 D, B5 JISD, A5D, 12 × 18D, 11 × 17D, 8 <sup>1</sup> / <sub>2</sub> × 11DD, 8 × 13 D, 5 <sup>1</sup> / <sub>2</sub> × 8 <sup>1</sup> / <sub>2</sub> DD	2,000 sheets

Paper type and weight	Metric version	Inch version	Paper capacity *10
52 - 300 g/m² (14 - 80 lb. Bond, 20 - 110 lb. Cover, 29 - 165 lb. Index) Thin Paper - Thick Paper 3	*13 B5 JISD, A5D, B6 JISD, A6D, $8^{1}/_{2} \times$ $14D$ , $8^{1}/_{2} \times 11D$ , $5^{1}/_{2} \times 8^{1}/_{2}D$ , $8^{1}/_{2} \times$ × $13D$ , $8^{1}/_{4} \times 13D$ , $7^{1}/_{4} \times 10^{1}/_{2}DD$ , 8K D, $16$ KDD	*13 A4 $\square$ , B5 JIS $\square$ , A5 $\square$ , B6 JIS $\square$ , A6 $\square$ , 8 $^{1}/_{2} \times 14 \square$ , 8 $^{1}/_{2} \times 13 \square$ , 8 $^{1}/_{4} \times 13 \square$ , $7^{1}/_{4} \times 10^{1}/_{2} \square$	2,000 sheets
52 - 300 g/m <sup>2</sup> (14 - 80 lb. Bond, 20 - 110 lb. Cover, 29 - 165 lb. Index) Thin Paper - Thick Paper 3	*14 Custom size Vertical: 100 - 305 mm Horizontal: 139.7 - 458 mm	*14 Custom size Vertical: 3.94 - 12 inches Horizontal: 5.5 - 18 inches	2,000 sheets
Translucent paper *15	A3□, B4 JIS□, A4□, B5 JIS□, A4□ *13, B5 JIS□ *13		1,000 sheets *11
OHP transparencies *7	*3 A4D, 8 <sup>1</sup> / <sub>2</sub> × 11D *13 A4D, 8 <sup>1</sup> / <sub>2</sub> × 11D		1,000 sheets *11
Label paper (adhesive labels)	B4 JIS□, A4□, A4□ *	13	20 sheets *11
Tab sheets *9 163 g/m² (43 lb. Bond, 60 lb. Cover, 90 lb. Index), 199 g/ m² (53 lb. Bond, 73 lb. Cover, 110 lb. Index)	*13 A4D, 81/ <sub>2</sub> × 11D,	8 <sup>1</sup> / <sub>2</sub> × 14 <b>D</b>	1,000 sheets
Envelopes *8	*14 114 × 229 mm (C5/6)D, 114 × 162 mm (C6) D, 162 × 229 mm (C5)	*14 4 <sup>1</sup> / <sub>8</sub> × 9 <sup>1</sup> / <sub>2</sub> (Com10)	10 sheets *11

<sup>\*1</sup> When loading paper, make sure the stack height does not exceed the limit mark of the paper tray. The amount of paper that can be set is 10 mm/100 sheets approximately. See "Loading Paper", Troubleshooting.

- \*2 The paper tray fence is fixed. If you wish to change the size of paper, contact your service representative.
- \*3 The paper size is detected automatically.
- \*4 Select the paper size under Tray Paper Size: Tray 2-3 in System Settings. See "System Settings", General Settings Guide.
- \*5 Press [Bypass], and the [#] key, and then select the paper size.
- \*6 Press [Bypass], and the [#] key, and then enter the paper size using the number keys.
- \*7 If you wish to copy onto OHP transparencies, select [OHP (Transparency)].
- \*8 For details about loading envelopes, see "Envelopes".
- \*9 The optional tab sheet holder is required.
- \*10 Depending on the paper thickness, the actual paper capacity may be less than specified.
- \*11 It is recommended to place one sheet at a time.
- \*12 The optional B4 JIS/ $8^{1}/_{2} \times 14$  tray unit is required to load B4 JIS/ $8^{1}/_{2} \times 14$  size paper. (2,500 sheets can be loaded in this tray.)
- \*13 Select the paper size under Tray Paper Size: LCT in System Settings. See "System Settings", General Settings Guide.
- \*14 If you want to copy onto custom size paper, select the size using the Tray Paper Settings function. See "System Settings", General Settings Guide.
- \*15 When loading translucent paper, set the paper direction according to the grain.

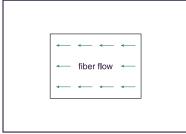

BAV0255

#### **Paper Thickness**

Paper Thickness	Metric version	Inch version (Bond paper)	Inch version (Cover paper)	Inch version (Index paper)
Thin Paper	52.3 - 65.9 g/ m <sup>2</sup>	13.9 - 17.9 lb.	19.3 - 23.9 lb.	28.9 - 36.4 lb.
Plain Paper 1	66 - 80.9 g/m <sup>2</sup>	18 - 21.9 lb.	24 - 29.9 lb.	36.5 - 44.9 lb.
Plain Paper 2	81 - 100.9 g/m <sup>2</sup>	22 - 26.9 lb.	30 - 3 <i>7</i> lb.	45 - 55.9 lb.

Paper Thickness	Metric version	Inch version (Bond paper)	Inch version (Cover paper)	Inch version (Index paper)
Middle Thick	101 - 127.4 g/ m <sup>2</sup>	27 - 33.9 lb.	37.1 - 46.9 lb.	56 - 70.4 lb.
Thick Paper 1	127.5 - 163.9 g/m <sup>2</sup>	34 - 43.9 lb.	47 - 60.4 lb.	70.5 - 90.4 lb.
Thick Paper 2	164 - 249.9 g/ m <sup>2</sup>	44 - 66.9 lb.	60.5 - 91.9 lb.	90.5 - 137.9 lb.
Thick Paper 3	250 - 300 g/m <sup>2</sup>	67 - 80 lb.	92 - 110 lb.	138 - 165.7 lb.

### **U** Note

- When loading paper in the paper trays 1 3, place the print side face down.
- When using translucent paper or label paper, make sure to select the appropriate paper type under Paper Type: Bypass Tray or Paper Type: LCT. See "System Settings", General Settings Guide.
- When loading paper in the bypass tray, the large capacity tray (LCT) or the wide large capacity tray (Wide LCT), place the print side face up.
- When you use the bypass tray, it is recommended to set the paper direction to  $\square$ .
- The bypass tray cannot be used if the wide large capacity tray (Wide LCT) is installed.
- Do not use paper designed for inkjet printers, as these may stick to the fusing unit and cause a misfeed.
- Do not use colour OHP transparencies with coatings that are easily melted by heat.
- When you load OHP transparencies, check the front and back of the sheets, and place them correctly, or a misfeed might occur. For details, see Copy/Document Server Reference, and Printer Reference.
- When you use OHP transparencies, fan them for each use.
- We recommend that you use a 4000ANSI lumen or brighter overhead projector to project OHP transparencies.
- If multiple sheet feeding occurs, load sheets one by one.
- When you load label paper, set the paper direction to □.
- If you load paper of the same size in two or more trays, the machine automatically shifts to the other tray when the first tray in use runs out of paper. This function is called Auto Tray Switching. (However, if the paper type of one tray is recycled or special paper, the settings of the other trays must be the same for the Auto Tray Switching function to work.) This saves interrupting a copy run to replenish paper when making a large number of copies. You can set the paper type of the paper trays under Paper Type: Tray 2-3 and Paper Type: LCT. See "System Settings", General Settings Guide. For the setting procedure of the Auto Tray Switching function, see "Copier/Document Server Features", General Settings Guide.

### Reference

- p.111 "Envelopes"
- p.113 "Thick Paper"

# **Envelopes**

This section describes loading envelopes.



• Only envelopes (1) and (2) as shown below are supported.

Envelope types	Supported/Not supported
(1)	Supported *1
(2)	Supported *1
(3)	Not supported

- \*1 Misfeeds might also occur when using envelopes (1) and (2) depending on the length and shape of the flaps.
- To print on envelopes, load them on the bypass tray or in the wide large capacity tray (Wide LCT)
  and be sure to specify the appropriate paper type.

See "Copying from the Bypass Tray", Copy/Document Server Reference, and "Setting Paper on the Bypass Tray", Printer Reference.

• Specifications for envelopes are as follows:

	Metric version	Inch version
Weight	72 - 90 g/m <sup>2</sup>	19 - 24 lb.
Recommended weight and size	80 g/m <sup>2</sup> , 114 × 229 mm (C5/6)	24 lb., $4^{1}/_{8} \times 9^{1}/_{2}$ (Com10)


Metric version	Inch version
80 g/m <sup>2</sup> , 114 × 162 mm (C6)	
95 g/m <sup>2</sup> , 162 × 229 mm (C5)	

### **Thick Paper**


This section gives you various details about and recommendations concerning thick paper.

When loading thick paper of  $164 - 216 \text{ g/m}^2$  (61 - 80 lb. Cover) in paper trays 1 - 3, or of  $281 - 300 \text{ g/m}^2$  (104 - 110 lb. Cover) in the bypass tray or in the wide large capacity tray (Wide LCT), follow the recommendations below to prevent misfeeds and loss of image quality.

- Store all paper together in the same place a room where the temperature is 20 25°C (68 77°
   F) and humidity is 30 65%.
- Smooth out any curls in the paper before loading it.
- When loading thick paper in paper trays 1 3 or the wide large capacity tray (Wide LCT), set the
  paper direction according to its grain, as shown in the following diagram.

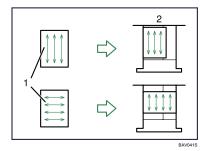

- 1: Direction of paper grain
- 2: Direction in which to set thick paper in paper trays 1 3 or the wide large capacity tray (Wide LCT)
- When loading thick paper in the bypass tray, set the paper direction according to its grain, as shown in the following diagram.

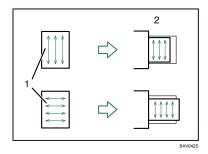

- 1: Direction of paper grain
- 2: Direction in which to set thick paper in the bypass tray



• Even if thick paper is loaded as described above, normal operations and print quality might still not be possible, depending on the paper type.

#### 4

## **Unusable Paper**

This section describes paper unusable on this machine.



• Do not use aluminum foil, carbon paper, or similar conductive paper to avoid a fire or machine failure.



- · To prevent faults, do not use any of the following kinds of treated paper:
  - Paper for inkjet printers
  - Thermal fax paper
  - Art paper
  - Aluminum foil
  - Carbon paper
  - · Conductive paper
  - · Paper with perforated lines
  - Hemmed-edge paper
  - · Color OHP transparencies with easily melted coatings
- Faults can occur if you copy or print onto sides that are already printed. Take care to copy or print
  onto unprinted sides only.



- To prevent misfeeds, do not use the following kinds of paper:
  - · Bent, folded, or creased paper
  - Perforated paper
  - Slippery paper
  - Torn paper
  - · Rough paper
  - Thin paper with little stiffness
  - Paper with a dusty surface
- If you copy or print onto rough grain paper, the output image might be blurred.
- Do not reuse copy paper that has been already copied or printed onto.

## Paper Storage

This section describes how to store paper.

- When storing paper, the following precautions should always be followed:
  - Do not store paper where it will be exposed to direct sunlight.
  - Avoid storing paper in humid areas (humidity: 70% or less).
  - Store on a flat surface.
  - Do not store paper vertically.
- Under high temperature and humidity conditions, or low temperature and humidity conditions, store
  paper in plastic bags.

4

# **INDEX**

Address book	A	Counter key37
Address book	A3/11 × 17 Tray Unit102	Counterfeit bank bills16
ADF		<b>D</b>
Adhesive labels		
Adjusting colors		
Adjusting image qualities.		, - ,
Alert indicator	. •	9
Authentication screen		•
Auto document feeder. 19, 31, 74 Auto Off. 51 Auto Reduce/Enlarge. 4 Available characters. 53 B B4 JIS / 81/2 × 14 Tray Unit. 52 Bluetooth interface unit 35, 100 Booklet. 4 Bypass tray. 32, 104, 113 C C CAUTION. 20, 24 CD-ROM. 57, 58, 59, 60, 63 Clear Modes key. 37 Clear/Stop key. 38 Collate. 5 Colors (Components. 4) Control panel. 32, 37, 42, 43, 44 Copier. 10 Control panel. 32, 37, 42, 43, 44 Copy Connector. 6, 36, 102 Copy tray. 59 Convertagraide. 51 Display panel. 37, 44 Doscument Server. 5, 46, 71 Display panel. 37, 44 Dos and Don'ts. 6 Duplex. Duplex priority. 2: E Energy Saver. 8. Energy Saver. 8. Energy Saver key. 33 Entergy Saver key. 33 Enter key (# key). 34 Entering letters. 55 Enter key (# key). 34 Entering letters. 55 Enter key (# key). 33 Enter key (# key). 34 Entering letters. 55 Enter key (#		2 3 6 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7
Auto Off		Desir oppinion on an Device Menter for enemini
Auto Reduce / Enlarge		
Dos and Don'ts.   6		
Duplex	<del>-</del>	
Duplex priority   Duplex   Duplex priority   Duplex   Duplex priority   Duplex   D		
B4 JIS   81/2 × 14 Tray Unit.   102   Bluetooth interface unit   35, 100   Booklet   4   Energy Saver   5	В	
Bluetooth interface unit.	B4 JIS / 81/2 × 14 Tray Unit	102
Bypass tray.       32, 104, 113       Energy Saver key.       33         C         CAUTION.       20, 24       Energy-saving.       22         Energy-saving.       22         Energy-saving.       22         Energy-saving.       22         Energy-saving.       23         Energy-saving.       22         Energy-saving.       22         Enter key (# key).       33         Enter key (# key).       34         Enter key (# key).	Bluetooth interface unit35,	100
ENERGY STAR Program	Booklet	4 Energy Saver51
CAUTION	Bypass tray32, 104,	
CAUTION.       20, 24       Energy-saving.       2         CD-ROM.       57, 58, 59, 60, 63       Enter key (# key).       3         Changing modes.       46       Entering letters.       5         Clear Modes key.       37       Entering text.       53, 5         Clear/Stop key.       38       Entry screen.       5         Collate.       5       Envelopes.       4, 103, 11         Color copies.       4, 62       Environments where the machine can be used.         Colors.       16       Ethernet.       7, 10         Communicating indicator.       39       Exposure glass.       3         Components.       31       Extension unit.       3         Computer.       10       External options.       3         Confidential File indicator.       39       Extra G3 Interface Unit.       3         Contents of the CD-ROM.       63         Copy Connector.       6, 36, 102       Facsimile.       7, 8, 9, 35, 4         Finisher booklet tray.       8         Finisher booklet tray.       8         Finisher SR4010.       34, 77, 80         Finisher SR4020.       34, 79, 80          Finisher SR4020.       34, 79, 80     <	C	ENERGY STAR Program27
CD-ROM       .57, 58, 59, 60, 63       Enter key (# key)       .33         Changing modes       .46       Entering letters       .5         Clear Modes key       .37       Entering letters       .5         Clear/Stop key       .38       Entering text       .53, 5         Collate       .5       Envelopes       .4, 103, 11         Color copies       .4, 62       Environments where the machine can be used         Colors       .16       .20         Combine       .4       Ethernet       .7, 10         Communicating indicator       .39       Exposure glass       .3         Components       .31       Extension unit       .3         Computer       .10       External options       .3         Confidential File indicator       .39       Extra G3 Interface Unit       .3         Contents of the CD-ROM       .63         Copy Connector       .6, 36, 102       .6         Copy Data Security Unit       .10, 36, 102       .6         Copy speed       .29       .29         Copy tray       .31, 35, 90       .31, 35, 90         Finisher SR4010       .34, 77, 80         Finisher SR4020       .34, 77, 80         Finisher SR		Energy-saving27
Changing modes.       46       Entering letters.       5.5         Clear Modes key.       37       Entering text.       53, 5.5         Clear/Stop key.       38       Entry screen.       5.5         Collate.       5       Envelopes.       4, 103, 11         Color copies.       4.62       Environments where the machine can be used.       20         Colors.       16       Ethernet.       7, 10         Combine.       4       Exposure glass.       33         Components.       31       Extension unit.       33         Components.       31       External options.       32         Confidential File indicator.       39       Extra G3 Interface Unit.       33         Connect Copy.       6       F         Contents of the CD-ROM.       63       Fac simile.       7, 8, 9, 35, 40         Copy Connector.       6, 36, 102       Finisher booklet tray.       8         Copy Data Security Unit.       10, 36, 102       Finisher shift tray.       77, 79, 8         Finisher SR4010.       34, 77, 80       Finisher SR4020.       34, 79, 80		Lindigo
Clear Modes key.       37       Entering text.       53, 5.         Clear/Stop key.       38       Entry screen.       5.         Collate.       5       Envelopes.       4, 103, 11         Color copies.       4, 62       Environments where the machine can be used.         Colors.       16       20         Combine.       4       Ethernet.       7, 10         Communicating indicator.       39       Exposure glass.       31         Components.       31       External options.       32         Computer.       10       External options.       33         Confidential File indicator.       39       Extra G3 Interface Unit.       33         Contents of the CD-ROM.       63       Facsimile.       7, 8, 9, 35, 40         Copy Connector.       6, 36, 102       Facsimile.       7, 8, 9, 35, 40         Copy Data Security Unit.       10, 36, 102       Finisher booklet tray.       8         Finisher SR4010.       34, 77, 80       Finisher SR4020.       34, 77, 80         Finisher SR4020.       34, 77, 80       Finisher SR4020.       34, 77, 80		/ \ //
Clear/Stop key.       38       Entry screen.       55         Collate.       5       Envelopes.       4, 103, 11         Color copies.       4, 62       Environments where the machine can be used.         Combine.       4       Ethernet.       7, 10         Communicating indicator.       39       Exposure glass.       33         Components.       31       Extension unit.       35         Computer.       10       External options.       33         Confidential File indicator.       39       Extra G3 Interface Unit.       33         Connect Copy.       6       6         Control panel.       32, 37, 42, 43, 44       44       6       7, 8, 9, 35, 44         Copy Connector.       6, 36, 102       6, 36, 102       6       7, 8, 9, 35, 44         Copy Data Security Unit.       10, 36, 102		
Collate.       .5       Envelopes.       .4, 103, 11         Color copies.       .4, 62       Environments where the machine can be used		
Color copies       4, 62       Environments where the machine can be used         Colors       16       2         Combine       4       Ethernet       7, 10         Communicating indicator       39       Exposure glass       3         Components       31       Extension unit       3         Computer       10       External options       3         Confidential File indicator       39       External options       33         Connect Copy       6       6       F         Contents of the CD-ROM       63       63       63         Copy Connector       4, 46       6       6, 36, 102         Copy Data Security Unit       10, 36, 102       7, 8, 9, 35, 40         Copy speed       29       16       10         Copy tray       31, 35, 90       10       31, 35, 90         Finisher SR4010       34, 77, 80       34, 77, 80         Finisher SR4020       34, 79, 80		,
Colors       16         Combine       4         Ethernet       7, 10         Communicating indicator       39       Exposure glass         Components       31       Extension unit       3         Computer       10       External options       3         Confidential File indicator       39       External options       33         Connect Copy       6       6         Contents of the CD-ROM       63       63         Control panel       32, 37, 42, 43, 44       6       7, 8, 9, 35, 46         Copy Connector       6, 36, 102       6       6         Copy Data Security Unit       10, 36, 102       6       6         Copy speed       29       6       6       6         Copy tray       31, 35, 90       6       6       6         Finisher SR4010       34, 77, 8       6       6         Finisher SR4020       34, 79, 80       6       6		Littolopos
Combine	Color copies	
Communicating indicator       39       Exposure glass       31         Components       31       Extension unit       3         Computer       10       External options       3         Confidential File indicator       39       External options       3         Connect Copy       6       6         Contents of the CD-ROM       63       63         Control panel       32, 37, 42, 43, 44       44         Copier       4, 46       46         Copy Connector       6, 36, 102       5         Copy Data Security Unit       10, 36, 102         Copy speed       29         Copy tray       31, 35, 90         Finisher SR4010       34, 77, 8         Finisher SR4020       34, 79, 80         Finisher SR4020       34, 79, 80	Colors	
Components.       31       Extension unit.       33         Computer.       10       External options.       33         Confidential File indicator.       39       Extra G3 Interface Unit.       33         Connect Copy.       6       6         Contents of the CD-ROM.       63       63         Control panel.       32, 37, 42, 43, 44       6         Copy Connector.       4, 46       6         Copy Connector.       6, 36, 102       6         Copy Data Security Unit.       10, 36, 102         Copy speed.       29         Copy tray.       31, 35, 90         Finisher SR4010.       34, 77, 8         Finisher SR4020.       34, 79, 80         Finisher SR4020.       34, 79, 80	Combine	
Computer         10         External options	S .	
Confidential File indicator.       39       Extra G3 Interface Unit.       3.         Connect Copy	Components	
Connect Copy	Computer	
Contents of the CD-ROM.       .63         Control panel.       .32, 37, 42, 43, 44         Copier.       .4, 46         Copy Connector.       .6, 36, 102         Copy Data Security Unit.       .10, 36, 102         Copy speed.       .29         Copy tray.       .31, 35, 90         Finisher SR4010.       .34, 77, 80         Finisher SR4020.       .34, 79, 80         Finisher SR4020.       .34, 79, 80	Confidential File indicator	39 Extra G3 Interface Unit35
Copy Connector.       6, 36, 102         Copy Data Security Unit.       10, 36, 102         Copy tray.       31, 35, 90         Finisher SR4010.       34, 77, 80         Finisher SR4020.       34, 77, 80	Connect Copy	6 <b>F</b>
Copier		E::  7 0 0 2 5 44
Copy Connector		3, 44
Copy Data Security Unit.       10, 36, 102         Copy speed.       29         Copy tray.       31, 35, 90         Finisher booklet tray.       8         Finisher shift tray.       .77, 79, 83         Finisher SR4010.       .34, 77, 86         Finisher SR4020.       .34, 79, 86         Finisher SR4020.       .34, 79, 86	Copier	1. 46
Copy speed       29         Copy tray       31, 35, 90         Finisher SR4010       34, 77, 80         Finisher SR4020       34, 79, 80		102 Einicher beeklet trau
Copy tray guide 31, 35, 90  Finisher SR4010	Copy Data Security Unit10, 36	102
Copy tray guide 31, 35, 90 Finisher SR402034, 79, 80	Copy speed	29
	Copy tray31, 3.	5 9()
	Copy tray guide	31 Finisher SR402034, 79, 86 Finisher SR500017, 35, 83, 88

Finisher upper tray	77, 79, 83	Legal prohibition16
Font Manager	63	Local connection5
For people using a pacemaker	23	Locked Print5
Front Cover	32	Login43, 45
Function keys	37	Login/Logout key38
G		Logout44, 45
Cital N Files	27, 101	Low Power mode27
Gigabit Ethernet		M
Grain	113	AA
Н		Machine types29 Magazine4
Handling power cords	20	Mailbox
Handling power plugs	20	Main power48, 50
Handling the machine's interior		Main power indicator38
Handling the machine's supplies	22	Main power switch31, 48
Handling the main machine	21	Main unit70
HDD Encryption Unit	36	Manuals
Hold Print	5	Manuals for this machine1
How to enter text	54	Manuals list3
How to use the operating instructions	59	
HTML	57, 59	N
HTML manuals	3	Names of major options19
I.		Network9
IEEE 1004: . (	05.00	Network connection5
IEEE 1284 interface board		Network delivery scanner9
Important		Note16, 17, 18
Important symbols		Note to users16
Inquiry		Note to users in Canada17, 18
Installing operating instructions		Note to users in the state of California18
Internal options		Note to users in the United States of America
Internet Fax		16, 17
InterposerInterrupt key		Notes to Finisher SR5000 (optional) and Twin Interposer (optional) Users17
IP-Fax		Notice16
Ir-I dx		Number keys38
K		•
Key arrangement	53	0
Key Color	41	Off mode27
I.		OHP transparencies4, 103
		Opening manuals from the [Start] menu59
Label paper (adhesive labels)		Opening manuals from the CD-ROM60
LAN-Fax	,	Opening manuals from the icon59
LAN-Fax driver		Operating instructions59
Large capacity tray19		Operation switch32, 38, 48
LCT19	9, 34, 96, 106	Options19, 33, 35, 102

Other Function key		
Output jogger34,	, 91	
P	RPCS63	
Paper clip tray	38	
Paper grain	Cufut dustant and the control of the	
Paper setting direction		
Paper sizes		
Paper storage		
Paper thickness	C I D'	
Paper trays (Trays 1 - 3)32, 1		
Paper types	C ·	
Paperless fax reception	•	
Paperless fax transmission		
Password	C D .	
PCL	C '' [ ''	
PDF manuals	C 1: (i) 1 :1	
Positions of WARNING and CAUTION labels.		
103110113 01 VYARI VII VO UIIU CAOTIOT VIUDEIS.	****	
PostScript		
Power48,		
Power supply		
PPD		
Preventing an unauthorized copy		
Print speed		
Printed manuals	3 Specifications77, 79, 83, 86, 88, 90, 91, 92, 93	
Printer5,	94, 95, 96, 97, 98, 99, 100, 101, 102	
Printer driver43, 45,	Specifications for the Auto document feeder74	
Printer Drivers and Utilities63, 65, 67,	Specifications for the Document Server75	
Printer Utility for Mac	0 16 11 1 1 1 1 1 1	
Printer/Scanner unit		
Printing a PDF file directly	5 Staple4, 5	
Printing with the finisher		
Program key	.37 Stored Print5	
Punch	<sub>1,5</sub> Storing paper116	
Punch unit	88 Storing received documents	
R	Symbols19	
	System Reset47	
Receiving File indicator		
Recommended paper sizes and types		
Recycled paper	T	
Reduce		
Regulatory information	18 Text	

Thin paper103
Translucent paper103
Tray 132, 103
Tray 1 (A3/11 × 17 Tray Unit (optional))103
Tray 232, 104
Tray 332, 104
Turning off the main power50
Turning off the power48, 49
Turning on the main power48
Turning on the power48, 49
TWAIN driver65
Twin interposer17, 35, 94
U
Unauthorized copy prevention10
Unusable paper115
User Code Authentication42, 43
User Text55
User Tools key37
User Tools/Counter key37
Using the Print Job function5
Utilities included on the CD-ROM63
V
Ventilation holes32, 33
Viewing the contents of the CD-ROM63
w
WARNING20, 24
Web Image Monitor5, 7, 10, 45
Wide large capacity tray35, 97, 106, 113
Wide LCT35, 97, 106, 113
Wireless LAN
Wireless LAN board35, 99
z
Z-fold
Z-folding unit4, 5, 35, 95

In accordance with IEC 60417, this machine uses the following symbols for the main power switch:

means POWER ON.

(b) means STAND BY.

#### **Trademarks**

Adobe, Acrobat, Acrobat Reader, PostScript, and Reader are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.

Apple®, AppleTalk®, Macintosh®, and Mac OS® are registered trademarks of Apple Inc.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Ricoh Company, Ltd. is under license.

Microsoft<sup>®</sup>, Windows<sup>®</sup>, Windows NT<sup>®</sup>, Windows Server<sup>®</sup>, and Windows Vista<sup>TM</sup> are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

Monotype is a registered trademark of Monotype Imaging, Inc.

Netscape and Netscape Navigator are registered trademarks of Netscape Communications Corporation.

NetWare is a registered trademark of Novell, Inc.

PCL® is a registered trademark of Hewlett-Packard Company.

PowerPC® is a trademark of International Business Machines Corporation in the United States, other countries, or both

UNIX is a registered trademark in the United States and other countries, licensed exclusively through X/Open Company Limited.

Other product names used herein are for identification purposes only and might be trademarks of their respective companies. We disclaim any and all rights to those marks.

The proper names of the Windows operating systems are as follows:

- \* [The product name of Windows 95 is Microsoft® Windows® 95
- \* The product name of Windows 98 is Microsoft® Windows® 98
- \* [The product name of Windows Me is Microsoft® Windows® Millennium Edition (Windows Me)
- \* The product names of Windows 2000 are as follows:

Microsoft® Windows® 2000 Professional

Microsoft® Windows® 2000 Server

Microsoft® Windows® 2000 Advanced Server

\* The product names of Windows XP are as follows:

Microsoft® Windows® XP Professional

Microsoft® Windows® XP Home Edition

Microsoft® Windows® XP Media Center Edition

Microsoft® Windows® XP Tablet PC Edition

\* The product names of Windows Vista are as follows:

Microsoft® Windows Vista<sup>TM</sup> Ultimate

 ${\sf Microsoft}^{\circledR} \ {\sf Windows} \ {\sf Vista}^{\sf TM} \ {\sf Enterprise}$ 

Microsoft® Windows Vista<sup>TM</sup> Business

Microsoft® Windows Vista<sup>TM</sup> Home Premium

Microsoft® Windows Vista<sup>TM</sup> Home Basic

\* [The product names of Windows Server 2003 are as follows:

Microsoft® Windows Server® 2003 Standard Edition

Microsoft® Windows Server® 2003 Enterprise Edition

Microsoft® Windows Server® 2003 Web Edition

Microsoft® Windows Server® 2003 Datacenter Edition

\* The product names of Windows Server 2003 R2 are as follows:

Microsoft® Windows Server® 2003 R2 Standard Edition

Microsoft® Windows Server® 2003 R2 Enterprise Edition

Microsoft® Windows Server® 2003 R2 Datacenter Edition

\* [The product names of Windows NT 4.0 are as follows:

Microsoft® Windows NT® Workstation 4.0

Microsoft® Windows NT® Server 4.0

