

# **Network Guide**





- 2 Monitoring and Configuring the Printer
- 3 Special Operations under Windows
- 4 Appendix

Read this manual carefully before you use this machine and keep it handy for future reference. For safe and correct use, be sure to read the Safety Information in "About This Machine" before using the machine.

#### Introduction

This manual contains detailed instructions and notes on the operation and use of this machine. For your safety and benefit, read this manual carefully before using the machine. Keep this manual in a handy place for quick reference. Do not copy or print any item for which reproduction is prohibited by law.

Copying or printing the following items is generally prohibited by local law:

bank notes, revenue stamps, bonds, stock certificates, bank drafts, checks, passports, driver's licenses.

#### Important

Contents of this manual are subject to change without prior notice. In no event will the company be liable for direct, indirect, special, incidental, or consequential damages as a result of handling or operating the machine. Two kinds of size notation are employed in this manual. With this machine refer to the inch version.

#### Notes

Some illustrations in this manual might be slightly different from the machine.

Certain options might not be available in some countries. For details, please contact your local dealer. Depending on which country you are in, your machine may include certain options as standard. For details, please contact your local dealer.

# **Manuals for This Machine**

Refer to the manuals that are relevant to what you want to do with the machine.

# 🔂 Important

- Media differ according to manual.
- The printed and electronic versions of a manual have the same contents .
- Adobe Acrobat Reader/Adobe Reader must be installed in order to view the manuals as PDF files.
- A Web browser must be installed in order to view the html manuals.

#### About This Machine

Be sure to read the Safety Information in this manual before using the machine.

This manual provides an introduction to the functions of the machine. It also explains the control panel, preparation procedures for using the machine, how to enter text, and how to install the CD-ROMs provided.

#### **Trouble Shooting**

Provides a guide to solving common problems, and explains how to replace paper, toner, and other consumables .

#### Copy/Document Server Reference

Explains Copier and Document Server functions and operations. Also refer to this manual for explanations on how to place originals.

#### **Facsimile Reference**

Explains Facsimile functions and operations.

#### Printer Reference

Explains Printer functions and operations.

#### Scanner Reference

Explains Scanner functions and operations.

#### Network Guide

Explains how to configure and operate the machine in a network environment, and use the software provided .

#### **General Settings Guide**

Explains User Tools settings, and Address Book procedures such as registering e-mail addresses, and user codes. Also refer to this manual for explanations on how to connect the machine.

#### **Security Reference**

This manual is for administrators of the machine. It explains security functions that you can use to prevent unauthorized use of the machine, data tampering, or information leakage. For enhanced security, we recommend that you first make the following settings:

- Install the Device Certificate.
- Enable SSL (Secure Sockets Layer) Encryption.
- Change the user name and password of the administrator using Web Image Monitor.

For details, see "Setting Up the Machine", Security Reference.

Be sure to read this manual when setting the enhanced security functions, or user and administrator authentication.

#### PostScript 3 Supplement

Explains how to set up and use PostScript 3.

#### **UNIX Supplement**

For "UNIX Supplement", please visit our Web site or consult an authorized dealer.

This manual includes descriptions of functions and settings that might not be available on this machine

#### Information

Contains general notes on the machine, and information about the trademarks of product names used in the manuals

# Other manuals

- Manuals for DeskTopBinder Lite
  - DeskTopBinder Lite Setup Guide
  - DeskTopBinder Introduction Guide
  - Auto Document Link Guide

## **Vote**

- Manuals provided are specific to machine types.
- The following software products are referred to using general names:

Product name	General name
DeskTopBinder Lite and DeskTopBinder Professional <sup>*1</sup>	DeskTopBinder
ScanRouter EX Professional <sup>*1</sup> and ScanRouter EX Enterprise <sup>*1</sup>	the ScanRouter delivery software

#### \*1 Option

# TABLE OF CONTENTS

Manuals for This Machine	1
How to Read This Manual	7
Symbols	7
About IP Address	7
1. Using a Printer Server	
Preparing Printer Server	9
Printing Notification via SmartDeviceMonitor for Client	9
Using NetWare	
Setting Up as a Print Server (NetWare 3.x)	
Setting Up as a Print Server (NetWare 4.x, 5 / 5.1, 6 / 6.5)	
Using Pure IP in the NetWare 5 / 5.1 or 6 / 6.5 Environment	14
Setting Up as a Remote Printer (NetWare 3.x)	
Setting Up as a Remote Printer (NetWare 4.x, 5 / 5.1, 6 / 6.5)	
2. Monitoring and Configuring the Printer	
Using Web Image Monitor	
Displaying Top Page	
When User Authentication is Set	23
About Menu and Mode	
Access in the Administrator Mode	
List of Setting Items	
Displaying Web Image Monitor Help	
Using SmartDeviceMonitor for Admin	
Installing SmartDeviceMonitor for Admin	
Changing the Network Interface Board Configuration	
Locking the Menus on the Machine's Control Panel	
Changing the Paper Type	
Managing User Information	40
Configuring the Energy Saver Mode	45
Setting a Password	46
Checking the Machine Status	
Changing Names and Comments	
Load Fax Journal	
Viewing and Deleting Spool Print Jobs	

Managing Address Information	
Using SmartDeviceMonitor for Client	
Monitoring Printers	52
Checking the Machine Status	53
When Using IPP with SmartDeviceMonitor for Client	53
Printer Status Notification by E-Mail	55
Auto E-mail Notification	
On-demand E-mail Notification	
Mail Authentication	58
Sending E-mail Notification	
Remote Maintenance by telnet	62
Using telnet	62
access	63
appletalk	64
autonet	64
bonjour (rendezvous)	65
btconfig	66
devicename	67
dhcp	67
dhcp6	
diprint	69
dns	70
domainname	71
help	72
hostname	72
ifconfig	73
info	74
ipp	74
ipv6	75
lpr	75
· netware	76
passwd	77
pathmtu	

prnlog	78
route	78
rhpp	80
set	80
show	83
slp	83
smb	84
snmp	84
sntp	
spoolsw	
ssdp	
ssh	
status	90
syslog	
upnp	
web	91
wiconfig	
wins	96
wsmfp	
SNMP	
Getting Printer Information over the Network	
Current Printer Status	
Printer configuration	
Understanding the Displayed Information	
Print Job Information	
Print Log Information	
Configuring the Network Interface Board	113
Message List	123
System Log Information	123
3. Special Operations under Windows	
Printing Files Directly from Windows	
Setup	131
Using a Host Name Instead of an IPv4 Address	

Printing Commands	
Printing with Bluetooth Connection	137
Supported Profiles	
Adding a Bluetooth Printer	
4. Appendix	
When Using Windows Terminal Service/MetaFrame	141
Operating Environment	141
Supported Printer Drivers	141
Limitations	142
Using DHCP	144
Using AutoNet	144
Configuring the WINS Server	145
Using Web Image Monitor	145
Using telnet	145
Using the Dynamic DNS Function	146
Updating	146
DNS servers targeted for operation	147
DHCP servers targeted for operation	147
Setting the dynamic DNS function	147
Precautions	149
Connecting a Dial-Up Router to a Network	149
NetWare Printing	
When the IEEE 802.11 interface unit is installed	
Configuring WPA/WPA2	
Setting Up the Machine on a Network	
Initial Settings Overview	
Initial Settings	
Specifications	173
Functions	
INDEX	

# How to Read This Manual

# Symbols

This manual uses the following symbols:

# **WARNING**

Indicates important safety notes.

Ignoring these notes could result in serious injury or death. Be sure to read these notes. They can be found in the "Safety Information" section of About This Machine.

# 

Indicates important safety notes.

Ignoring these notes could result in moderate or minor injury, or damage to the machine or to property. Be sure to read these notes. They can be found in the "Safety Information" section of About This Machine.

# Comportant 🔁

Indicates points to pay attention to when using the machine, and explanations of likely causes of paper misfeeds, damage to originals, or loss of data. Be sure to read these explanations.

# • Note

Indicates supplementary explanations of the machine's functions, and instructions on resolving user errors.

# Reference

This symbol is located at the end of sections. It indicates where you can find further relevant information.

[]

Indicates the names of keys that appear on the machine's display panel.

[]

Indicates the names of keys on the machine's control panel.

# About IP Address

In this manual, "IP address" covers both IPv4 and IPv6 environments. Read the instructions that are relevant to the environment you are using.

# 1. Using a Printer Server

# **Preparing Printer Server**

This section explains how to configure the machine as a Windows network printer. The machine is configured to enabling network clients to use it. When the network printer is connected via SmartDeviceMonitor for Client, you can set the printing notification function to notify clients of the results of their print jobs.

#### 🚼 Important

- Under Windows XP Professional or Windows Server 2003, to change printer properties in the [Printer] folder, you need Printer Management access authentication; under Windows NT 4.0 or Windows Vista, Full Control access authentication. Log on to the file server as an Administrator or member of the PowerUsers group.
- 1. Open the [Printers and Faxes] window from the [Start] menu.

The [Printers and Faxes] window appears.

- 2. Click the icon of the machine you want to use. On the [File] menu, click [Properties]. The printer properties appear.
- 3. On the [Sharing] tab, click [Share this printer].
- To share the machine with users using a different version of Windows, click [Additional Drivers...].

If you have installed an alternative driver by selecting [Share As:] during the printer driver installation, this step can be ignored.

5. Click [OK], and then close the printer properties.

# Printing Notification via SmartDeviceMonitor for Client

Follow the procedure below to configure the machine to use the printing notification function of SmartDeviceMonitor for Client.

#### Setting the print server

#### 🚼 Important 🛛

 Under Windows XP Professional or Windows Server 2003, to change printer properties in the [Printer] folder, you need Printer Management access authentication; under Windows NT 4.0 or Windows Vista, Full Control access authentication. Log on to the file server as an Administrator or member of the PowerUsers group.  On the [Start] menu, point to [All Programs], [DeskTopBinder], [SmartDeviceMonitor for Client], and then click [Print Server Setting].

The print server setting dialog box appears.

Select the [Notify client PCs of printout/data-transmission] check box, and then click [OK].
 After print server setting is made, a dialog box appears. Confirm the dialog box content, and click [OK].

Click [Cancel] to interrupt the procedure.

A dialog box appears for client setting.

3. Click [OK].

The print server setting is completed. Each client must be set to receive print notification.

Note

- Current printing jobs restart from the beginning after the spooler pauses briefly.
- When the expansion function is not used, the function is automatically set as available.
- If you log on using an account that does not have Administrator privileges, the client may not be notified.
- For details, see "Using the SmartDeviceMonitor for Client Port", Printer Reference.

#### Setting a Client

 On the [Start] menu, point to [All Programs], [DeskTopBinder], [SmartDeviceMonitor for Client], and then click [Extended Features Settings].

A dialog box for setting the expansion function appears.

- 2. Select the [Notify of printout/data-transmission when using print server] check box.
- 3. Click [OK].

The client setting is completed.

Note

 Set the printing notification function on the printer driver as well as on SmartDeviceMonitor for Client.

1

# Using NetWare

This section describes the setting procedure for network printers in the NetWare environment. In the NetWare environment, you can connect the machine as a "print server" or "remote printer".

🔁 Important

• IPv6 cannnot be used on this function.

#### Setting procedure

- When using the machine as a print server
  - 1. Installing SmartDeviceMonitor for Admin
  - 2. Setting the network interface board.
  - 3. Turning the machine off and then back on.
- When using the machine as a remote printer
  - 1. Installing SmartDeviceMonitor for Admin.
  - 2. Setting the network interface board.
  - 3. Setting NetWare.
  - 4. Starting the print server.

#### Vote

- This procedure assumes an environment is already prepared for normal NetWare running the printing service setting.
- The procedure is explained with the following example settings:
  - File server's name ...CAREE
  - Print server's name ... PSERV
  - Printer's name ...R-PRN
  - Queue name ...R-QUEUE

#### Using SmartDeviceMonitor for Admin

To use the machine in a NetWare environment, use SmartDeviceMonitor for Admin to set the NetWare printing environment.

#### Printers listed by SmartDeviceMonitor for Admin

SmartDeviceMonitor for Admin lists printers connected to the network. If you cannot identify the machine you want to configure, print configuration page, and then check the machine name.

#### 🕓 Note

- The NetWare Client provided by Novell is required to set the printing environment using SmartDeviceMonitor for Admin under the following environments:
  - NDS mode in Windows 95/98/Me

- NDS or Bindery mode in Windows 2000/XP, Windows NT 4.0
- For details about SmartDeviceMonitor for Admin, see "Installing SmartDeviceMonitor for Admin".

#### Reference

• p.36 "Installing SmartDeviceMonitor for Admin"

#### Setting Up as a Print Server (NetWare 3.x)

Follow the procedure below to connect the machine as a print server using NetWare 3.x.

- 1. Start Web Image Monitor.
- 2. Click [Login].

A dialog box for entering the login user name and password appears.

3. Enter the login user name and password, and then click [Login].

For details about the login user name and password, consult your network administrator.

- 4. Click [Configuration] in the left area, and then click [NetWare Print Settings].
  - Print Server Name: Enter the NetWare print server name. To use the interface board as a print server, enter the name of a print server that is not active on the file server. Use up to 47 characters.
  - Logon Mode: Specify whether to designate a file server or NDS tree when logging on to NetWare.
  - File Server Name: When a file server name is entered here, only the specified file server is searched for. This item is mandatory. Use up to 47 characters.
  - NDS Tree: To enable NDS mode, enter the name of the NDS tree you want to log on to. Use up to 32 alphanumeric characters.
  - NDS Context Name: To enable NDS mode, enter the print server context. Use up to 127 characters.
  - Operation Mode: Specify whether to use the interface board as a print server or a remote printer.
  - Remote Printer No.: This item is effective when the interface board is specified as a remote printer. Enter the same number as the number of the printer to be created on the print server (0 to 254 characters).
  - Job Timeout: When the interface board is used as a NetWare remote printer, the printer cannot detect when a print job ends. Therefore, the printer terminates printing when a certain period of time has elapsed since it last received print data (i.e., when it has not received print data for a certain period of time). Specify here this period of time (3 to 255 seconds). The initial value is 15 (seconds).
  - Frame Type: Select the frame type from the drop-down menu.
  - Print Server Protocol: Select the protocol for NetWare from the drop-down menu.
  - NCP Delivery Protocol: Select the protocol for NCP delivery.

1

5. Confirm the settings, and then click [Device Name].

Configuration is now complete. Wait several before restarting Web Image Monitor.

6. Click [Logout].

#### Note

- To check the configuration is correct, enter the following from the command prompt:
   F:> USERLIST
- If the printer works as configured, the name of the print server appears as a connected user.
- If you cannot identify the printer you want to configure, check the printer name against the configuration page printed from the printer. For details about printing a configuration page, see "Printing the Configuration Page", General Settings Guide.
- If no printer names appear in the list, match the frame types of IPX/SPXs for the computer and printer.
   Use the [Network] dialog box of Windows to change the frame type of the computer.
- For details about Web Image Monitor, see "Using Web Image Monitor".
- For details about login user names and passwords, see Security Reference, which is the administrator's manual.

#### Reference

• p.21 "Using Web Image Monitor"

# Setting Up as a Print Server (NetWare 4.x, 5 / 5.1, 6 / 6.5)

Follow the procedure below to connect the machine as a print server using NetWare 4.x, NetWare 5 / 5.1, or NetWare 6 / 6.5.

#### C Important

- When using the printer as a print server in NetWare 4.x, NetWare 5 / 5.1, or NetWare 6 / 6.5, set it to the NDS mode.
- When using NetWare 5 / 5.1 or NetWare 6 / 6.5, set the printer as a print server.
- 1. Start Web Image Monitor.
- 2. Click [Login].

A dialog box for entering the login user name and password appears.

3. Enter the login user name and password, and then click [Login].

For details about the login user name and password, consult your network administrator.

- 4. Click [Configuration] in the left area, and then click [NetWare Print Settings].
- 5. Confirm the settings, and then click [Device Name].

Configuration is now complete. Wait several minutes before restarting Web Image Monitor.

6. Click [Logout].

#### 7. Quit Web Image Monitor.

Vote

- To check the configuration is correct, enter the following from the command prompt:
  - F:> USERLIST
- If the printer works as configured, the name of the print server appears as a connected user.
- If you cannot identify the printer you want to configure, check the printer name against the configuration page printed from the printer. For details about printing a configuration page, see "Printing the Configuration Page", General Settings Guide.
- If no printer names appear in the list, match the frame types of IPX/SPXs for the computer and printer.
   Use the [Network] dialog box of Windows to change the frame type of the computer.
- For details about Web Image Monitor, see "Using Web Image Monitor".
- For details about login user names and passwords, see Security Reference, which is the administrator's manual.

## Reference

• p.21 "Using Web Image Monitor"

# Using Pure IP in the NetWare 5 / 5.1 or 6 / 6.5 Environment

Follow the procedure below to connect the machine as a print server in a pure IP environment of NetWare 5 / 5.1 or NetWare 6 / 6.5.

#### C Important

- When creating a queued print server in a pure IP environment of NetWare 5 / 5.1 or NetWare 6 / 6.5, create a print queue on the file server using NetWare Administrator.
- This printer is not available as a remote printer for use in a pure IP environment.
- To use the printer in a pure IP environment, set it to IPv4.

#### Setting up using NWadmin

1. From Windows, start NWadmin.

For details about NWadmin, see the NetWare manuals.

- 2. Select the object in which the print queue is located in the directory tree, and then click [Create] on the [Object] menu.
- 3. In the [Class of new object] box, click [Print Queue], and then click [OK].
- 4. In the [Print Queue Name] box, enter the name of the print queue.
- 5. In the [Print Queue Volume] box, click [Browse].

1

- 6. In the [Available objects] box, click the volume in which the print queue is created, and then click [OK].
- 7. Check the settings, and then click [Create].
- 8. Select the object in which the printer is located, and then click [Create] on the [Object] menu.
- In the [Class of new object] box, click [Printer], and then click [OK]. For NetWare 5, click [Printer (Non NDPS)].
- 10. In the [Printer name] box, enter the printer name.
- 11. Select the [Define additional properties] check box, and then click [Create].
- 12. Click [Assignments], and then click [Add] in the [Assignments] area.
- 13. In the [Available objects] box, click the queue you created, and then click [OK].
- Click [Configuration], click [Parallel] in the [Printer type] list, and then click [Communication].
- 15. Click [Manual load] in the [Communication type] area, and then click [OK].
- 16. Check the settings, and then click [OK].
- 17. Select a context specified, and then click [Create] on the [Object] menu.
- In the [Class of new object] box, click [Print Server], and then click [OK]. For NetWare 5, click [Print Server (Non NDPS)].
- 19. In the [Print Server Name] box, enter the print server name.

Use the same print server name specified using SmartDeviceMonitor for Admin.

- 20. Select the [Define additional properties] check box, and then click [Create].
- 21. Click [Assignments], and then click [Add] in the [Assignments] area.
- 22. In the [Available objects] box, click the queue you created, and then click [OK].
- 23. Check the settings, and then click [OK].
- 24. Start the print server by entering the following from the console of the NetWare server. If the print server is in operation, guit and restart it.

#### To quit

CAREE: unload pserver

#### To start

CAREE: load pserver print\_server\_name

#### Setting up using Web Image Monitor

- 1. Start Web Image Monitor.
- 2. Click [Login].

A dialog box for entering the login user name and login password appears.

3. Enter the user login user name and password, and then click [Login].

For details about the login name and password, consult your network administrator.

- 4. Click [Configuration] in the left area, and then click [NetWare Print Settings].
- 5. Confirm the settings, and then click [Device Name].

Configuration is now complete. Wait several minutes before restarting Web Image Monitor.

- 6. Click [Logout].
- 7. Quit Web Image Monitor.

#### 🕓 Note

- If you cannot identify the printer you want to configure, check the printer name against the configuration page printed from the printer. For details about printing a configuration page, see "Printing the Configuration Page", General Settings Guide.
- If no printer names appear in the list, match the frame types of IPX/SPXs for the computer and printer. Use the [Network] dialog box of Windows to change the frame type of the computer.
- For details about Web Image Monitor, see "Using Web Image Monitor".
- For details about login user names and passwords, see Security Reference, which is the administrator's manual.

#### Reference

• p.21 "Using Web Image Monitor"

# Setting Up as a Remote Printer (NetWare 3.x)

Follow the procedure below to use the machine as a remote printer under NetWare 3.x.

#### Setting up using PCONSOLE

1. Enter "PCONSOLE" from the command prompt.

F:> PCONSOLE

2. Create a print queue.

When using the existing print queue, go to the procedure for creating a printer.

- From the [Available Options] menu, select [Print Queue Information], and then press the [Enter] key.
- 4. Press [Insert] key, and then enter a print queue name.
- 5. Press [Esc] key to return to the [Available Options] menu.
- 6. Set up the network connection to a printer.
- On the [Available Options] menu, click [Print Server Information], and then press the [Enter] key.

- 8. To create a new print server, press the [Insert] key, and then enter a print server name. For a currently defined print server, select a print server in the [Print Server] list. Use the same printer name specified using SmartDeviceMonitor for Admin.
- 9. From the [Print Server Information] menu, select [Print Server Configuration].
- 10. From the [Print Server Configuration] menu, select [Printer Configuration].
- Select the printer indicated as [Not Installed].
   Use the same printer number specified as the remote printer number using SmartDeviceMonitor for Admin.
- 12. To change the printer name, enter a new name. A name "printer x" is assigned to the printer. The "x" stands for the number of the selected printer.
- As type, select [Remote Parallel, LPT1].
   The IRQ, Buffer size, Starting form, and Queue service mode are automatically configured.
- 14. Press the [Esc] key, and then click [Yes] on the confirmation message.
- 15. Press the [Esc] key to return to [Print Server Configuration Menu].
- 16. Assign print queues to the created printer.
- 17. From [Print Server Configuration Menu], select [Queues Serviced By Printer].
- 18. Select the printer created.
- 19. Press the [Insert] key to select a queue serviced by the printer.

You can select several queues.

20. Follow the instructions on the screen to make other necessary settings.

Following these steps, check that the queues are assigned.

- 21. Press the [Esc] key until "Exit?" appears, and then select [Yes] to exit PCONSOLE.
- 22. Start the print server by entering the following from the console of the NetWare server.

If the print server is in operation, quit and restart it.

#### To quit

CAREE: unload pserver

#### To start

CAREE: load pserver print\_server\_name

If the printer works as configured, the message "Waiting for job" appears.

#### Setting up using Web Image Monitor

- 1. Start Web Image Monitor.
- 2. Click [Login].

A dialog box for entering the login user name and login password appears.

3. Enter the login user name and password, and then click [Login].

For details about the login user name and password, consult your network administrator.

- 4. Click [Configuration] in the left area, and then click [NetWare Print Settings].
- 5. Confirm the settings, and then click [Device Name].

Configuration is now complete. Wait several minutes before restarting Web Image Monitor.

- 6. Click [Logout].
- 7. Quit Web Image Monitor.

#### 🕓 Note

- If you cannot identify the printer you want to configure, check the printer name against the configuration page printed from the printer. For details about printing a configuration page, see "Printing the Configuration Page", General Settings Guide.
- If no printer names appear in the list, match the frame types of IPX/SPXs for the computer and printer. Use the [Network] dialog box of Windows to change the frame type of the computer.
- For details about Web Image Monitor, see "Using Web Image Monitor".
- For details about login user names and passwords, see Security Reference, which is the administrator's manual.

## Reference

• p.21 "Using Web Image Monitor"

# Setting Up as a Remote Printer (NetWare 4.x, 5 / 5.1, 6 / 6.5)

Follow the procedure below to use the printer as a remote printer under NetWare 4.x, 5 / 5.1 and 6 / 6.5.

#### Comportant 🗋

- To use the printer as a remote printer under NetWare 4.x, 5 / 5.1, 6 / 6.5, set it to NDS mode.
- Do not use the printer as a remote printer when Pure IP is used.

#### Setting up using NWadmin

1. From Windows, start NWadmin.

For details about NWadmin, see the NetWare manuals.

- 2. Set up the network connection to a print queue. Select the object in which the print queue is located in the directory tree, and then click [Create] on the [Object] menu.
- 3. In the [Class of new object] box, click [Print Queue], and then click [OK].
- 4. In the [Print Queue Name] box, enter the name of the print queue.
- 5. In the [Print Queue Volume] box, click [Browse].

1

- 6. In the [Available objects] box, click the volume in which the print queue is created, and then click [OK].
- 7. Check the settings, and then click [Create].
- Set up the network connection to a printer. Select the object in which the printer is located, and then click [Create] on the [Object] menu.
- In the [Class of new object] box, click [Printer], and then click [OK]. For NetWare 5, click [Printer (Non NDPS)].
- 10. In the [Printer name] box, enter the printer name
- 11. Select the [Define additional properties] check box, and then click [Create].
- Assign print queues to the created printer. Click [Assignments, and then click [Add] in the [Assignments] area.
- 13. In the [Available objects] box, click the queue you created, and then click [OK].
- Click [Configuration], click [Parallel] in the [Printer type] list, and then click [Communication].
- Click [Manual load] in the [Communication type] area, and then click [OK]. Check the settings, and then click [OK].
- 16. Set up the network connection to a print server. Select a context specified, and then click [Create] on the [Object] menu.
- In the [Class of new object] box, click [Print Server], and then click [OK]. For NetWare 5, click [Print Server (Non NDPS)].
- 18. In the [Print Server Name:] box, enter the print server name.

Use the same print server name specified using SmartDeviceMonitor for Admin.

- 19. Select the [Define additional properties] check box, and then click [Create].
- 20. Assign the printer to the created print server. Click [Assignments], and then click [Add] in the [Assignments] area.
- 21. In the [Available objects] box, click the queue you created, and then click [OK].
- 22. In the [Printers] area, click the printer you assigned, and then click [Printer Number].
- 23. Enter the printer number, and then click [OK]. Check the settings, and then click [OK]. Use the same printer number specified as the remote printer number using SmartDeviceMonitor for Admin.
- 24. Start the print server by entering the following from the console of the NetWare server.

If the print server is in operation, quit and restart it.

To exit

CAREE: unload pserver

#### To start

CAREE: load pserver print\_server\_name

- 25. Enter the printer server name as the context name, and then press the [Enter] key.
- 26. Select the printer name on the context menu, and then press the [Enter] key.

#### Setting up using Web Image Monitor

- 1. Start Web Image Monitor.
- 2. Click [Login].

A dialog box for entering the login user name and login password appears.

3. Enter the user login name and password, and then click [Login].

For details about the login user name and password, consult your network administrator.

- 4. Click [Configuration] in the left area, and then click [NetWare Print Settings].
- 5. Confirm the settings, and then click [Device Name].

Configuration is now complete. Wait several minutes before restarting Web Image Monitor.

- 6. Click [Logout].
- 7. Quit Web Image Monitor.
- 🕗 Note
  - If you cannot identify the printer you want to configure, check the printer name against the configuration page printed from the printer. For details about printing a configuration page, see "Printing the Configuration Page", General Settings Guide.
  - If no printer names appear in the list, match the frame types of IPX/SPXs for the computer and printer.
     Use the [Network] dialog box of Windows to change the frame type of the computer.
  - For details about Web Image Monitor, see "Using Web Image Monitor".
  - For details about login user names and passwords, see Security Reference, which is the administrator's manual.

#### Reference

• p.21 "Using Web Image Monitor"

# 2. Monitoring and Configuring the Printer

# Using Web Image Monitor

Using Web Image Monitor, you can check the machine status and change settings.

#### **Available operations**

The following operations can be remotely performed using Web Image Monitor from a client computer.

- Displaying machine status or settings
- Checking the print job status or history
- Checking, modifying, printing, or deleting print jobs stored in the Document Server
- Interrupting currently printing jobs
- Resetting the machine
- Managing the Address Book
- Making machine settings
- Making network protocol settings
- Making security settings

#### Configuring the machine

To perform the operations from Web Image Monitor, TCP/IP is required. After the machine is configured to use TCP/IP, operations from Web Image Monitor become available.

#### Recommended Web browser

• Windows:

Internet Explorer 5.5 SP2 or higher

Firefox 1.0 or higher

Mac OS:

Firefox 1.0 or higher

Safari 1.0, 1.2, 2.0 (412.2) or higher

Web Image Monitor supports screen reader software. We recommend JAWS 7.0 or a later version.

Note

- Safari cannot be used on Mac OS X 10.4.1.
- Display and operation problems can occur if you do not enable JavaScript and cookies, or if you are using a non-recommended Web Browser.

- If you are using a proxy server, change the Web browser settings. Contact your administrator for information about the settings.
- Machine information is not automatically updated. To perform an update, click [Refresh] in the display area.
- We recommend using Web Image Monitor in the same network.
- You cannot access to the machine from outside the firewall.
- When using the machine under DHCP, the IP address may be automatically changed by the DHCP server settings. Enable DDNS setting on the machine, and then connect using the machine's host name. Alternatively, set a static IP address to the DHCP server.
- If the HTTP port is disabled, connection to the machine using the machine's URL cannot be established. SSL setting must be enabled on this machine. For details, consult your network administrator.
- When using the SSL encryption protocol, enter "https://(machine's IP address or host name)/".
- Internet Explorer must be installed on your computer. Use the most recent available version. We recommend Internet Explorer 6.0 or later.
- When you are using Firefox, fonts and colors may be different, or tables may be out of shape.
- When using a host name under Windows Server 2003 with IPv6 protocol, perform host name resolution using an external DNS server. The host file cannot be used.
- To use JAWS 7.0 under Web Image Monitor, you must be running Windows OS and Microsoft Internet Explorer 5.5 SP2, or a later version.

# **Displaying Top Page**

This section explains the Top Page and how to display Web Image Monitor.

#### 🔂 Important


- When entering an IPv4 address, do not begin segments with zeros. For example: If the address is "192.168.001.010", you must enter it as "192.168.1.10".
- 1. Start your Web browser.
- 2. Enter "http://(machine's IP address or host name)/" in your Web browser's URL bar.

Top Page of Web Image Monitor appears.

If the machine's host name has been registered on the DNS or WINS server, you can enter it.

When setting SSL, a protocol for encrypted communication, under environment which server authentication is issued, enter "https://(machine's IP address or host name)/".

Every Web Image Monitor page is divided into the following areas:

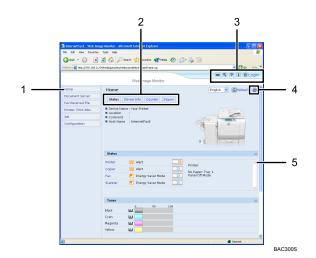

#### 1. Menu area

If you select menu, it's content will be shown on the work area, or the sub area.

#### 2. Tab area

Details about each menu appears.

#### 3. Header area

The dialog box for switching to the user mode and administrator mode appears, and each mode's menu will be displayed.

The link to help and dialog box for keyword search appears.

#### 4. Help

Use Help to view or download Help file contents.

#### 5. Display area

Displays the contents of the item selected in the menu area.

Machine information in the display area is not automatically updated. Click [Refresh] at the upper right in the display area to update the machine information. Click the Web browser's [Refresh] button to refresh the entire browser screen.

#### Vote

• When using a host name under Windows Server 2003 or Windows Vista with IPv6 protocol, perform host name resolution using an external DNS server. The host file cannot be used.

# When User Authentication is Set

#### Login (using Web Image Monitor)

Follow the procedure below to log on when user authentication is set.

1. Click [Login].

#### 2. Enter a login user name and password, and then click [Login].

For details about the login user name and password, consult your network administrator.

#### Vote

- For user code authentication, enter a user code in [Login User Name], and then click [Login].
- The procedure may differ depending on the Web browser used.

## Log Off (using Web Image Monitor)

Click [Logout] to log off.

Note

• When you log on and made the setting, always click [Logout].


# About Menu and Mode

There are two modes available with Web Image Monitor: guest mode and administrator mode.

Displayed Items may differ depending on the machine type.

#### About Guest Mode

In the guest mode, machine status, settings, and print job status can be viewed, but the machine settings cannot be changed.

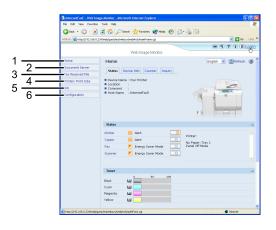

BAC301S

#### 1. Home

The [Status], [Configuration], [Counter], and [Inquiry] tab are displayed. Details of the tab menu are displayed on the work area.

2

#### 2. Document Server

Display files stored in the Document Server.

#### 3. Fax Received File

Display received fax files.

#### 4. Printer: Print Jobs

Allows you to display list of Sample Print, Locked Print, Hold Print, and Stored Print jobs.

#### 5. Job


Display all print files.

#### 6. Configuration

Display current machine and network settings.

#### Administrator Mode

In the administrator mode, you can configure various machine settings.

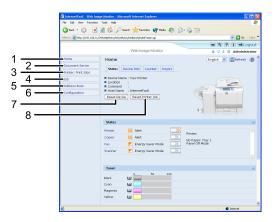

BAC302S

#### 1. Home

The [Status], [Configuration], [Counter], and [Inquiry] tab are displayed. Details of the tab menu are displayed on the work area.

#### 2. Document Server

Display files stored in the Document Server.

#### 3. Printer: Print Jobs

Allows you to display list of Locked Print, Sample Print, Hold Print, and Stored Print jobs.

#### 4. Job

Display all print files.

#### 5. Address Book

User information can be registered, displayed, changed, and deleted.

#### 6. Configuration

Make system settings for the machine, interface settings, and security.

#### 7. Reset Device

Click to reset the printer. If a print job is being processed, the printer will be reset after the print job is completed. This button is located on Top Page.

#### 8. Reset Printer Job

Click to reset current print jobs and print jobs in queue. This button is located on Top Page.

# Access in the Administrator Mode

Follow the procedure below to access Web Image Monitor in the administrator mode.

1. On Top Page, click [Login].

The window for entering the login user name and password appears.

2. Enter your login user name and password, and then click [Login].

For details about the login user name and password, consult your network administrator.

## List of Setting Items

The following tables show Web Image Monitor items that can be viewed or modified depending on the selected mode on the Web browser. Select one of the following modes to log on Web Image Monitor:

- Guest mode: logged on as a user
- Administrator mode: logged on as an administrator

#### Home

Status

Menu	Guest mode	Administrator mode
Reset Device	None	Modify
Reset Printer Job	None	Modify
Status	Read	Read
Toner	Read	Read
Input Tray	Read	Read
Output Tray	Read	Read

#### Device Info

Menu	Guest mode	Administrator mode
Functions	Read	Read
System	Read	Read
Version	Read	Read
Printer Language	Read	Read

#### Counter

Menu	Guest mode	Administrator mode
Copier	Read	Read
Printer	Read	Read
Fax	Read	Read
Send/TX Total	Read	Read
Fax Transmission	Read	Read
Scanner Send	Read	Read
Other Function(s)	Read	Read

# Inquiry

Menu	Guest mode	Administrator mode
Machine Maintenance/Repair	Read	Read
Sales Representative	Read	Read

# **Document Server**

Document Server

Guest mode	Administrator mode
Read/Modify	Read/Modify

#### Fax Received File

Guest mode	Administrator mode
Read/Modify	None

**Printer: Print Jobs** 

Print Job List

Guest mode	Administrator mode
Read/Modify	Read/Modify

#### Job

Job List

Menu	Guest mode	Administrator mode
Current/Waiting Jobs	Read	Read/Modify
Job History	Read	Read

#### Printer

Menu	Guest mode	Administrator mode
Spool Printing	Read	Read/Modify
Job History	Read	Read
Error Log	Read	Read

# Fax History

Menu	Guest mode	Administrator mode
Transmission	Read	Read/Modify
Reception	Read	Read/Modify
LAN-Fax	Read	Read

Document Server

Menu	Guest mode	Administrator mode
Print Job History	Read/Modify	Read/Modify
Fax Remote Send History	Read/Modify	Read/Modify
Scanner Remote Send History	Read/Modify	Read/Modify

# Address Book

Menu	Guest mode	Administrator mode
Address Book	None	Read/Modify

# Configuration

Device Settings

Menu	Guest mode	Administrator mode
System	Read	Read/Modify
Paper	Read	Read/Modify
Date/Time	Read	Read/Modify
Timer	Read	Read/Modify
Logs	None	Read/Modify
E-mail	Read	Read/Modify
Auto E-mail Notification	None	Read/Modify
On-demand E-mail Notification	None	Read/Modify
File Transfer	None	Read/Modify
User Authentication Management	None	Read/Modify
Administrator Authentication Management	None	Read/Modify
Program/Change Administrator	None	Read/Modify

Menu	Guest mode	Administrator mode
LDAP Server	None	Read/Modify
Firmware Update	None	Read/Modify
Program/Change Realm	None	Modify

#### Printer

Menu	Guest mode	Administrator mode
Basic Settings	Read	Read/Modify
Tray Parameters (PCL)	None	Read/Modify
Tray Parameters (PS)	None	Read/Modify
Virtual Printer Settings	Read	Read/Modify
PDF Temporary Password	Modify	None
PDF Group Password	None	Modify
PDF Fixed Password	None	Modify

#### Fax

Menu	Guest mode	Administrator mode
Initial Settings	None	Read/Modify
Send / Reception Settings	None	Read/Modify
IP-Fax Settings	None	Read/Modify
IP-Fax Gateway Settings	None	Read/Modify
Parameter Settings	None	Read/Modify

#### Scanner

Menu	Guest mode	Administrator mode
General Settings	Read	Read/Modify
Scan Settings	Read	Read/Modify

Menu	Guest mode	Administrator mode
Send Settings	Read	Read/Modify
Initial Settings	None	Read/Modify
Default Settings for Normal Screens on Device	Read	Read/Modify
Default Settings for Simplified Screens on Device	Read	Read/Modify

# Interface

Menu	Guest mode	Administrator mode
Interface Settings	Read	Read/Modify
Wireless LAN Settings	Read	Read/Modify

## Network

Menu	Guest mode	Administrator mode
IPv4	Read	Read/Modify
IPvó	Read	Read/Modify
NetWare	Read	Read/Modify
AppleTalk	Read	Read/Modify
SMB	Read	Read/Modify
SNMP	None	Read/Modify
SNMPv3	None	Read/Modify
SSDP	None	Read/Modify
Bonjour	Read	Read/Modify
System Log	Read	Read

Security

Menu	Guest mode	Administrator mode
Network Security	None	Read/Modify
Access Control	None	Read/Modify
IPP Authentication	None	Read/Modify
SSL/TLS	None	Read/Modify
ssh	None	Read/Modify
Site Certificate	None	Read/Modify
Device Certificate	None	Read/Modify
IPsec	None	Read/Modify
User Lockout Policy	None	Read/Modify
S/MIME	None	Read/Modify

#### RC Gate

Menu	Guest mode	Administrator mode
Setup RC Gate	None	Read/Modify
Update RC Gate Firmware	None	Read
RC Gate Proxy Server	None	Read/Modify

# Webpage

Menu	Guest mode	Administrator mode
Webpage	Read/Modify	Read/Modify

# Extended Feature Settings

Menu	Guest mode	Administrator mode
Startup Setting	None	Read/Modify
Extended Feature Info	None	Read
Install	None	Read/Modify

Menu	Guest mode	Administrator mode
Uninstall	None	Read/Modify
Change Allocation	None	Read/Modify
Administrator Tools	None	Read/Modify
Copy Extended Features	None	Read/Modify
Copy Card Save Data	None	Read/Modify

#### Note

• Some items are not displayed depending on the security settings.

# **Displaying Web Image Monitor Help**

When using Help for the first time, clicking the icon marked "?" (20) makes the following screen appear, in which you can view Help in two different ways, as shown below:

#### Viewing Help on our Web site

Downloading Help to your computer

#### Downloading and Checking Help

You can download Help to your computer. As the Help URL, you can specify the path to the local file to view the Help without connecting to the Internet.

#### Vote

- By clicking "?" (?) in the header area, the contents of Help appear.
- By clicking "?" (<sup>2</sup>), the Help icon in the display area, Help for the setting items in the display area appears.

#### Downloading Help

- 1. In the [OS] list, select the operating system.
- 2. In the [Language] list, select the language.
- 3. Click [Download].
- 4. Download Help by following the instructions on the screen.
- Store the downloaded compressed file in a given location, and then decompress the file.
   To create a link for the Help button (???), save the downloaded Help files on a Web server.

# Linking the URL of the downloaded Help

You can link the URL of the help file on a computer or Web server to the "?" button.

- 1. Log on to Web Image Monitor in the administrator mode.
- 2. In the menu area, click [Configuration].
- 3. Click [Webpage].
- 4. In the [Set Help URL Target] box, enter the URL of the help file.

If you saved the help file to "C:\HELP\EN", enter "file://C:/HELP/". For example, if you saved the file to a Web server, and the URL of the index file is "http://a.b.c.d/HELP/EN/index.html", enter "http://a.b.c.d/HELP/".

5. Click [OK].

## Note

 If you save the Help files on your hard disk, you must access them directly - you cannot link to them using the Help button (???).

# Using SmartDeviceMonitor for Admin

Using SmartDeviceMonitor for Admin, you can monitor the network printers. Also, you can change the configuration of the network interface board using TCP/IP or IPX/SPX.

🔁 Important

• IPv6 cannot be used on this function.

## Protocol stack provided with Operating System

• Windows 95/98/Me

TCP/IP

IPX/SPX

NetWare

NetWare Client32 for Windows 95

IntraNetWare Client for Windows 95

Novell Client for Windows 95/98/Me

Windows 2000

TCP/IP

IPX/SPX

NetWare

Novell Client for Windows NT/2000/XP

• Windows Server 2003

TCP/IP

IPX/SPX

Windows XP

TCP/IP

IPX/SPX

Novell Client for Windows NT/2000/XP

• Windows NT 4.0

TCP/IP

IPX/SPX

Client Service for NetWare

NetWare Client32 for Windows NT

IntraNetWare Client for Windows NT

Novell Client for Windows NT/2000/XP

Windows Vista

TCP/IP

Novell Client for Windows NT/2000/XP/Vista

#### Available operations

The following functions are available:

- Limits settings done from the control panel, and disables changes made to certain items.
- Enables selection of paper type loaded in the machine.
- Switches to, and comes out of Energy Saver mode.
- Checks information about printing, paper quantity, etc.
- Simultaneously monitors multiple printers. When there are many printers, you can create groups and classify printers to facilitate management.
- Checks the machine's network settings and detailed device information.
- Enables you to change the machine's network settings.
- You can check details of print jobs sent from a computer.
- Allows you to check job histories of printed, faxed (LAN-Fax), scanned, and photocopied documents identified by user codes.
- Allows selection of functions such as printing and scanning for each user code.
- Fax numbers and e-mail addresses stored in the machine can be changed and saved by computer.
- You can check each fax job history entry.
- You can make settings for and display the status changes of group devices.
- Using Address Management Tool, you can manage LAN-Fax numbers, user names for Scan to Folder, and addresses for sending and receiving Internet faxes.
- The e-mail sender's name and folder can be protected.

# Installing SmartDeviceMonitor for Admin

Follow the procedure below to install SmartDeviceMonitor for Admin

- 1. Quit all applications currently running.
- 2. Insert the CD-ROM into the CD-ROM drive.

The installer starts.

3. Select an interface language, and then click [OK].

The following languages are available: Czech, Danish, German, English, Spanish, French, Italian, Hungarian, Dutch, Norwegian, Polish, Portuguese, Finnish, Swedish, Chinese Simple and Chinese Traditional.

- 4. Click [SmartDeviceMonitor for Admin].
- 5. Click [Next].

The software license agreement appears in the [License Agreement] dialog box.

- 6. After reading through its contents, click [Next].
- 7. Follow the instructions on the screen.

A message appears when the installation is completed.

8. Click [OK].

A message about restarting the computer may appear. Restart the computer to complete installation.

- Vote
  - Auto Run may not work under certain operating system settings. In this case, launch "Setup.exe" located on the CD-ROM root directory.
  - If you are required to restart the computer after installing SmartDeviceMonitor for Admin, restart the computer and continue the configuration.

# Changing the Network Interface Board Configuration

Follow the procedure below to change the network interface board configuration using SmartDeviceMonitor for Admin.

- 1. Start SmartDeviceMonitor for Admin.
- 2. On the [Group] menu, point to [Search Device], and then click [IPv4], [IPX/SPX] or [IPv4 SNMPv3].

A list of machines using the selected protocol appears.

Select the protocol of the machine whose configuration you want to change.

If you are using IPv4 SNMPv3, enter the user authentication.

- 3. In the list, select a machine whose configuration you want to change.
- 4. On the [Tools] menu, click [NIB Setup Tool].



A Web browser opens and the window for entering the login user name and password for the Web Image Monitor administrator appears.

NIB Setup Tool starts. Click [Web browser], and then click [OK].

5. Enter the login user name and password, and then click [Login].

For details about the login user name and password, consult your network administrator.

- 6. Configure settings using Web Image Monitor.
- 7. Click [Logout].
- 8. Quit Web Image Monitor.
- 9. Quit SmartDeviceMonitor for Admin.

#### Note

- For details about login user names and passwords, see Security Reference, which is the administrator's manual.
- For details about Web Image Monitor, see "Using Web Image Monitor".

#### 🕒 Reference

p.21 "Using Web Image Monitor"

# Locking the Menus on the Machine's Control Panel

Follow the procedure below to lock the menus on the machine's control panel.

 
- 1. Start SmartDeviceMonitor for Admin.
- On the [Group] menu, point to [Search Device], and then click [IPv4], [IPX/SPX] or [IPv4 SNMPv3].

A list of machines using the selected protocol appears.

Select the protocol of the machine whose configuration you want to change.

If you are using IPv4 SNMPv3, enter the user authentication.

- 3. Select a machine.
- 4. On the [Tools] menu, point to [Device Settings], and then click [System].



A Web browser opens and the window for entering the login user name and password for the Web Image Monitor administrator appears.

5. Enter the login user name and password, and then click [Login].

For details about the user name and password, consult your network administrator.

The [System] page of Web Image Monitor appears.

- 6. On the [Protect Printer Display Panel], select [Level 1] or [Level 2].
- 7. Click [OK].
- 8. Click [Logout].
- 9. Quit Web Image Monitor.
- 10. Quit SmartDeviceMonitor for Admin.

## Note

- For details about login user names and passwords, see Security Reference, which is the administrator's manual.
- For details about Web Image Monitor, see "Using Web Image Monitor".

### Reference

• p.21 "Using Web Image Monitor"

# Changing the Paper Type

Follow the procedure below to change the paper type.

- 1. Start SmartDeviceMonitor for Admin.
- On the [Group] menu, point to [Search Device], and then click [IPv4], [IPX/SPX] or [IPv4 SNMPv3].

A list of machines using the selected protocol appears.

Select the protocol of the machine whose configuration you want to change.

If you are using IPv4 SNMPv3, enter the user authentication.

- 3. In the list, select a machine whose configuration you want to change.
- 4. On the [Tools] menu, point to [Device Settings], and then click [Paper].

A Web browser opens and the window for entering the login user name and password for the Web Image Monitor administrator appears.

5. Enter the login user name and password, and then click [Login].

For details about the login user name and password, consult your network administrator.

The [Paper] page appears.

Select a paper type in the [Paper Type] list for each tray. Enter required setting items.

- 6. Click [Logout].
- 7. Quit Web Image Monitor.
- 8. Quit SmartDeviceMonitor for Admin.

2

#### Note

- For details about login user names and passwords, see Security Reference, which is the administrator's manual.
- For details about Web Image Monitor, see "Using Web Image Monitor".
- For details about setting items, see Help in the [General Settings] on [Configuration] page.

#### Reference

p.21 "Using Web Image Monitor"

# **Managing User Information**

Follow the procedure below to manage the user's information using SmartDeviceMonitor for Admin. Prints jobs can be managed and functions restricted by user codes.

## Starting User Management Tool

Follow the procedure below to start User Management Tool.

 
- 1. Start SmartDeviceMonitor for Admin.
- On the [Group] menu, point to [Search Device], and then click [IPv4], [IPX/SPX] or [IPv4 SNMPv3].

A list of machines using the selected protocol appears.

Select the protocol of the machine whose configuration you want to change.

If you are using IPv4 SNMPv3, enter the user authentication.

- 3. In the list, select a machine you want to manage.
- 4. On the [Tools] menu, click [User Management Tool].



A Web browser opens and the window for entering the login user mane and password for the Web Image Monitor administrator appears.

5. Enter the user name and password, and then click [Login].

For details about the user name and password, consult your network administrator.

User Management Tool starts.

## **Vote**

- For details about login user names and passwords, see Security Reference, which is the administrator's manual.
- For details about User Management Tool, see SmartDeviceMonitor for Admin Help.

### **Displaying the Number of Sheets Printed**

Follow the procedure below to display the number of sheets printed under each user.

- 1. Start SmartDeviceMonitor for Admin User Management Tool.
- 2. Click the [User Counter Information] tab of User Management Tool.

🏦 User Management Tool - RICOH Aficio MP 2550 : 👘 🔲 🔀				
<u>F</u> ile <u>E</u> dit ⊻ie	w <u>H</u> elp			
<u>\$</u> \$	A 🛃			
User Counter I	nformation Access Cont	rol List		
	4		Printer	•
User	Name	Black & White	Status	
<b>1111</b>	ABCD COMPANY	0		
1234	0315	0		
👤 london	LONDON OFFICE	0		
👤 other		20		
👤 user	user	18		
For Help, press F1 496 more user(s) car //				

The number of pages printed under each user appears.

3. Click [Exit] on the [File] menu to quit User Management Tool.

## Exporting the information about the number of pages printed

Follow the procedure below to export the information of the number of pages printed under each user as a .csv file.

- 1. Start SmartDeviceMonitor for Admin User Management Tool.
- 2. Click the [User Counter Information] tab of User Management Tool.

2

3. On the [File] menu, click [Export User Statistics List].



- 4. Specify the save location and file name, and then click [Save].
- 5. Click [Exit] on the [File] menu to quit User Management Tool.

# Resetting the number of pages printed to 0.

Follow the procedure below to reset the number of pages printed under each user to 0.

- 1. Start SmartDeviceMonitor for Admin User Management Tool.
- 2. Click the [User Counter Information] tab of User Management Tool.
- 3. Select the user whose information you want to reset.
- 4. On the [Edit] menu, click [Reset User Counters].



Select the check box of the items you want to reset, and then click [OK].
 A confirmation message appears.

# 6. Click [OK].

The count for the selected paper type becomes 0 and [Modified] is displayed for [Status].

7. On the [Edit] menu, click [Apply Settings].



Changes are applied to information on the User Counter Information tab.

8. Click [Exit] on the [File] menu to quit User Management Tool.

# **Restricting Functions**

Follow the procedure below to restrict use of individual functions.

- 1. Start SmartDeviceMonitor for Admin User Management Tool.
- 2. Click the [User Counter Information] tab of User Management Tool.
- 3. Click the user whose functions you want to restrict.

4. On the [Edit] menu of User Management Tool, click [Restrict Access To Device].



- 5. Select the check box of the functions you want to restrict.
- 6. Click [OK].

A confirmation message appears.

7. Click [Yes].


The settings are applied.

8. Click [Exit] on the [File] menu to quit User Management Tool.

## Setting Applicable Functions to New Users

Follow the procedure below to add new users and set functions applicable to them.

- 1. Start SmartDeviceMonitor for Admin User Management Tool.
- 2. Click the [Access Control List] tab of User Management Tool.

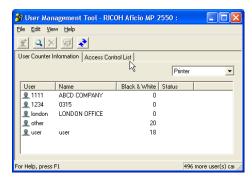

3. On the [Edit] menu, click [Add New User].



- 4. Enter the user code and user name.
- Select the check box of the functions applicable to the new user.
   If the check boxes are unavailable, there is no restriction to use that function.
- 6. Click [OK].

The user is added, and [New] is displayed for [Status].

7. On the [Edit] menu, click [Apply Settings].

The settings are applied.

8. Click [Exit] on the [Files] menu to quit User Management Tool.

#### Note

• For details about setting restrictions, see SmartDeviceMonitor for Admin Help.

# Configuring the Energy Saver Mode

Follow the procedure below to configure Energy Saver mode.

- 1. Start SmartDeviceMonitor for Admin.
- On the [Group] menu, point to [Search Device], and then click [IPv4], [IPX/SPX] or [IPv4 SNMPv3].

A list of machines using the selected protocol appears.

Select the protocol of the machine whose configuration you want to change.


If you are using IPv4 SNMPv3, enter the user authentication.

2

3. Select the machine whose settings you want to make.

To make settings for all machines in the selected group, select no machine.

 Click the [Group] menu, point to [Energy Save Mode], [Set Individually], and then click [On].

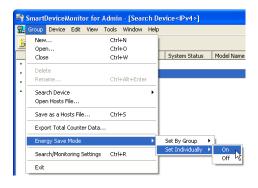

To select all the machines in the group, select [Set By Group].

To disable Energy Save mode, click [Off].

5. Quit SmartDeviceMonitor for Admin.

```
Vote
```

• For details about the setting for Energy Saver mode, see SmartDeviceMonitor for Admin Help.

# Setting a Password

Follow the procedure below to set a password.

- 1. Start SmartDeviceMonitor for Admin.
- On the [Group] menu, point to [Search Device], and then click [IPv4], [IPX/SPX] or [IPv4 SNMPv3].

A list of machines using the selected protocol appears.

Select the protocol of the machine whose configuration you want to change.

If you are using IPv4 SNMPv3, enter the user authentication.

- 3. In the list, select a machine whose configuration you want to change.
- 4. On the [Tools] menu, click [NIB Setup Tool].



A Web browser opens and the dialog box for entering the login user name and password for the Web Image Monitor administrator appears.

NIB Setup Tool starts when the network interface board is default. Follow the instructions on the screen.

5. Enter the login user name and password, and then click [Login].

For details about the user name and password, consult your network administrator.

- 6. Click [Configuration].
- Click [Program/Change Administrator] on the [Device Settings] area, and then change the settings.
- 8. Click [Logout].
- 9. Quit Web Image Monitor.
- 10. Quit SmartDeviceMonitor for Admin.

#### Note

 For details about login user names and passwords, see Security Reference, which is the administrator's manual.

# **Checking the Machine Status**

Follow the procedure below to check machine status.

- 1. Start SmartDeviceMonitor for Admin.
- On the [Group] menu, point to [Search Device], and then click [IPv4], [IPX/SPX] or [IPv4 SNMPv3].

A list of machines using the selected protocol appears.

Select the protocol of the machine whose configuration you want to change.

If you are using TCP/IP SNMP v3, enter the user authentication.

- 3. Click the [View] menu, and then click [Select List Columns].
- From [Device] in the [Select List Columns] dialog box, select the items you want to display, and then click [Add].

Selected items will move to [Show].

5. Move all the items you want to display, and then click [OK].

An icon in the list indicates the machine's status.

 For information about a machine's status, select the machine you want to know about, and then click [Open] in the [Device Settings] menu.

The dialog box of the selected machine appears.

7. Click the application whose status you want to view.

The machine's status is displayed.

#### 8. Quit SmartDeviceMonitor for Admin.

#### Vote

• For details about items in the dialog box, see SmartDeviceMonitor for Admin Help.

# **Changing Names and Comments**

Follow the procedure below to change the names and comments of the machine.

- 1. Start SmartDeviceMonitor for Admin.
- On the [Group] menu, point to [Search Device], and then click [IPv4], [IPX/SPX] or [IPv4 SNMPv3].

A list of machines using the selected protocol appears.

Select the protocol of the machine whose configuration you want to change.

If you are using IPv4 SNMPv3, enter the user authentication.

3. Select a machine in the list, and then click [NIB Setup Tool] on the [Tools] menu.

A Web browser opens and the window for entering the login user name and password for the Web Image Monitor administrator appears.

NIB Setup Tool starts when the network interface board is default. Follow the instructions on the screen.

4. Enter the login user name and password, and then click [Login].

For details about the login user name and password, consult your network administrator.

- 5. Click [System] on the [Device Settings] area, and then change the settings.
- 6. Click [Logout].
- 7. Quit Web Image Monitor.
- 8. Quit SmartDeviceMonitor for Admin.

#### 🕓 Note

- In the [Device Name] box, enter a device name on the machine using up to 31 characters.
- In the [Comment] box, enter a comment on the machine using up to 31 characters.
- For details about login user names and passwords, see Security Reference, which is the administrator's manual.
- For details about Web Image Monitor, see "Using Web Image Monitor".

## Reference

p.21 "Using Web Image Monitor"

# Load Fax Journal

- 1. Start SmartDeviceMonitor for Admin.
- On the [Group] menu, point to [Search Device], and then click [IPv4], [IPX/SPX] or [IPv4 SNMPv3].

A list of machines using the selected protocol appears.

Select the protocol of the machine whose configuration you want to change.

If you are using IPv4 SNMPv3, enter the user authentication.

Select a machine in the list, and then click [Load Fax Journal] on the [Tools] menu.

A Web browser opens and the window for entering the login user name and password for the Web Image Monitor administrator appears.

4. Enter the login user name and password, and then click [Login].

For details about the login user name and password, consult your network administrator.

[Fax Journal] area appears in the Web Image Monitor.

- 5. Click [Logout].
- 6. Quit Web Image Monitor.
- 7. Quit SmartDeviceMonitor for Admin.

# Vote

- For details, see Help in [Fax Journal] area.
- For details about login user names and passwords, see Security Reference, which is the administrator's manual.
- For details about Web Image Monitor, see "Using Web Image Monitor".

#### Reference

• p.21 "Using Web Image Monitor"

# Viewing and Deleting Spool Print Jobs

- 1. Start SmartDeviceMonitor for Admin.
- On the [Group] menu, point to [Search Device], and then click [IPv4], [IPX/SPX] or [IPv4 SNMPv3].

A list of machines using the selected protocol appears.

Select the protocol of the machine whose configuration you want to change.

If you are using IPv4 SNMPv3, enter the user authentication.

3. Select a machine in the list, and then click [Spool Printing Job List(Printer)] on the [Tools] menu.

A Web browser opens and the dialog box for entering the login user name and password for the Web Image Monitor administrator appears.

4. Enter the login user name and password, and then click [Login].

For details about the login user name and password, consult your network administrator.

[Spool Printing Job List] appears in the Web Image Monitor.

- 5. Click [Logout].
- 6. Quit Web Image Monitor.
- 7. Quit SmartDeviceMonitor for Admin.

#### Note

- To display Spool Printing Job List, [Spool Printing] must be set to [Active] on Web Image Monitor in advance.
- To delete the Spool Printing Job, select the document you want to delete and then click [Delete].
- For details, see Help in the [Spool Printing Job List] area.
- For details about login user names and passwords, see Security Reference, which is the administrator's manual.
- For details about Web Image Monitor, see "Using Web Image Monitor".

# 🖪 Reference 🔵

• p.21 "Using Web Image Monitor"

# **Managing Address Information**

- 1. Start SmartDeviceMonitor for Admin.
- On the [Group] menu, point to [Search Device], and then click [IPv4], [IPX/SPX] or [IPv4 SNMPv3].

A list of machines using the selected protocol appears.

Select the protocol of the machine whose configuration you want to change.

If you are using IPv4 SNMPv3, enter the user authentication.

- 3. Select a machine in the list, and then click [Address Management Tool] on the [Tools] menu. The dialog box for entering the login user name and password appears.
- 4. Enter the login user name and password, and then click [OK].

For details about the login user name and password, consult your network administrator.

[Address Management Tool] starts. Make the necessary settings.

- 5. Click [Exit].
- 6. Quit SmartDeviceMonitor for Admin.

# **Note**

- For details, see Address Management Tool Help.
- For details about login user names and passwords, see Security Reference, which is the administrator's manual.

# Using SmartDeviceMonitor for Client

To view the status of machines using SmartDeviceMonitor for Client, configure SmartDeviceMonitor for Client beforehand.

# **Monitoring Printers**

Follow the procedure below to monitor the machine using SmartDeviceMonitor for Client.

 Right-click the SmartDeviceMonitor for Client icon, point to [Properties], and then click [Monitor Device Settings...].

	SmartDeviceMonitor for Client - Status List Printers Folder	
	My Job List Help Topics	
Monitor Device Settings	Property •	
Extended Features Settings 🗟	About	
	Exit	

The [SmartDeviceMonitor for Client - Options] dialog box appears.

2. On the [Printers Folder] tab, select the machine you want to monitor, and then select the [To Be Monitored] check box in the Monitoring Information Settings area.

SmartDeviceM	onitor for	Client - O	ptions		? 🗙
Printers Folder Network Devices General Settings					
Printer Settir Printer List	igs				
Name Your macł	ine	Monitori Yes	Task B Menu	Address 192.168.0.2	
[Monitoring Information Settings] Address: 192.168.0.215					
[Printer Driver Settings]					
Dpen properties Port Settings					
		OK		ancel	Help

To display the machine status on the task bar, you must first select the [To be Monitored] check box, and then select the [Displayed on Task Bar] check box.

3. Click [OK].

The dialog box closes and the configured machine is monitored.

🕗 Note

• For details about status icons, see SmartDeviceMonitor for Client Help.

# **Checking the Machine Status**

Follow the procedure below to check machine status using SmartDeviceMonitor for Client.

1. Right-click the SmartDeviceMonitor for Client icon, and then click the machine.

O <u>1</u> Your machine		
SmartDeviceMonitor for Client - Status List Printers Folder		
My Job List	-	
Help Topics		
Property	•	
About		
Exit		

The machine status appears in the dialog box.

🕓 Note 👘

• For details about items in the dialog box, see SmartDeviceMonitor for Client Help.

# When Using IPP with SmartDeviceMonitor for Client

When using IPP with SmartDeviceMonitor for Client, note the following:

- The network printer can only receive one print job from SmartDeviceMonitor for Client at a time. While
  the network printer is printing, another user cannot access it until the job is finished. In this case,
  SmartDeviceMonitor for Client tries to access the network printer until the retry interval expires.
- If SmartDeviceMonitor for Client cannot access the network printer and times out, it will stop sending
  the print job. In this case, you should cancel the paused status from the print queue window.
   SmartDeviceMonitor for Client will resume access to the network printer. You can delete the print job
  from the print queue window, but canceling a print job printed by the network printer might cause the
  next job sent from another user to be incorrectly printed.
- If a print job sent from SmartDeviceMonitor for Client is interrupted and the network printer cancels the job because something went wrong, send the print job again.
- Print jobs sent from another computer do not appear in the print queue window, regardless of protocol.
- If various users send print jobs using SmartDeviceMonitor for Client to network printers, the printing order might not be the same as that in which the jobs were sent.
- An IP address cannot be used for the IPP port name because the IP address is used for the SmartDeviceMonitor for Client port name.

- When setting SSL, a protocol for encrypted communication, under environment which server authentication is issued, enter "https://(machine's IP address or host name)/". Internet Explorer must be installed on your computer. Use the highest version. Internet Explorer 6.0 or higher is recommended.
- If the [Security Alert] dialog box appears when accessing the machine using IPP to create or configure an IPP port, or when printing, install the certificate. To select the certificate store location when using Certificate Import Wizard, click [Place all certificates in the following store], and then click [Local Computer] under [Trusted Root Certification Authorities].

#### Note

• For details about SSL settings, consult your network administrator.

# Printer Status Notification by E-Mail

Whenever a paper tray becomes empty or paper is jammed, an e-mail alert is issued to the registered addresses to notify the printer status.

For this notification, you can make the e-mail notification settings.

Notification timing and e-mail content can be set.

# Coloritant 🔁

 Depending on your e-mail application, a phishing warning might appear after you receive an e-mail message. To prevent phishing warnings appearing after you receive e-mail from a specified sender, you must add the sender to your e-mail application's exclusion list. For details about how to do this, see your e-mail application's Help.

You can be notified of the following events:

- Service call.
- Toner cartridge is empty.
- Toner cartridge is nearly empty.
- Paper has jammed.
- Open door is detected.
- The paper tray is empty.
- The paper tray is nearly empty.
- A paper tray error occurred.
- Output paper tray is full.
- Unit connection error.
- Waste toner bottle is full.
- Stapler has no staples.
- Service call is successful.
- File storage memory is nearly full.
- Punch dust is full.
- Waste Staple Receptacle is Full.
- Log error.
- Device access is violated.
- 1. Log on to Web Image Monitor in administrator mode.
- 2. In the menu area, click [Configuration].
- 3. Click [E-mail] on the [Device Settings] area.

#### 4. Make the following settings:

- Items in the Reception column: Make the necessary settings for sending and receiving e-mail.
- Items in the SMTP column: Configure the SMTP server. Check your mailing environment, and then specify the necessary items. You can also perform mail authentication for the SMTP server.
- Items in the POP before SMTP column: Configure the POP server. Check your mailing environment, and then specify the necessary items. You can also perform mail authentication for the POP server.
- Items in the POP3/IMAP4 column: Configure the POP3 or IMAP4 server. Check your mailing environment, and then specify the necessary items.
- Items in the E-mail Communication Port column: Configure the port to be used for access to the mail server.
- Items in the Fax E-Mail Account column: Specify these items if you want to use on-demand email notification.

#### 5. Click [OK].

- 6. Click [Logout].
- 7. Quit Web Image Monitor.

#### 🕗 Note

- For details about login user name and password, see Security Reference, which is the administrator's manual.
- For details about the settings, see Web Image Monitor Help.
- For details about Web Image Monitor, see "Using Web Image Monitor".

# Reference

• p.21 "Using Web Image Monitor"

# Auto E-mail Notification

- 1. Log on to Web Image Monitor in administrator mode.
- Click [Configuration] in the menu area, and then click [Auto E-mail Notification] on the [Device Settings] area.

The dialog box for making notification settings appears.

#### 3. Make the following settings:

- Items in Notification Message column: You can set this according to your needs, for example, the machine's location, service representative contact information.
- Items in the Groups to Notify column: E-mail notification addresses can be grouped as required.
- Items in the Select Groups/Items to Notify column: Select groups for each notification type, such as machine status and error.

To make detailed settings for these items, click [Edit] next to [Detailed Settings of Each Item].

- 4. Click [OK].
- 5. Click [Logout].
- 6. Quit Web Image Monitor.

# **Vote**

- For details about Web Image Monitor, see "Using Web Image Monitor".
- For details about the settings, see Web Image Monitor Help.

## Reference

• p.21 "Using Web Image Monitor"

# **On-demand E-mail Notification**

- 1. Log on to Web Image Monitor in administrator mode.
- Click [Configuration] in the menu area, and then click [On-demand E-mail Notification] on the [Device Settings] area.

The dialog box for making notification settings appears.

- 3. Make the following settings:
  - Notification Subject column: Enter a text string to be added to the subject line of return e-mails.
  - Items in Notification Message column: You can set this according to your needs, for example, the machine's location, service representative contact information.
  - Items in the Access Restriction to Information column: Select whether to restrict accesses based on a specific category of information.
  - Items in the Receivable E-mail Address/Domain Name Settings column: Enter an e-mail address
    or domain name to use for requesting information by e-mail and to receive its return e-mail.
- 4. Click [OK].
- 5. Click [Logout].
- 6. Quit Web Image Monitor.

#### **Note**

- For details about Web Image Monitor, see "Using Web Image Monitor".
- For details about the settings, see Web Image Monitor Help.

## Reference

• p.21 "Using Web Image Monitor"

2

# Mail Authentication

You can configure mail authentication to prevent illegal use of the mail server.

#### SMTP Authentication

Specify SMTP authentication.

When mail is sent to the SMTP server, authentication is performed using the SMTP AUTH protocol by prompting the mail originator to enter the user name and password. This prevents illegal use of the SMTP server.

- 1. Log on to Web Image Monitor in administrator mode.
- 2. Click [Configuration] in the menu area, and then click [E-mail] on the [Device Settings] area.
- 3. Make the following settings in SMTP column:
  - SMTP Server Name: Enter the IP address or host name of the SMTP server
  - SMTP Port No.: Enter the port number used when sending e-mail to the SMTP server.
  - SMTP Authentication: Enable or disable SMTP authentication.
  - SMTP Auth. E-mail Address: Enter the e-mail address.
  - SMTP Auth. User Name: Enter the SMTP account name.
  - SMTP Auth. Password: To set or change the password for SMTP AUTH.
  - SMTP Auth. Encryption: Select whether to encrypt the password or not.

[Encryption]-[Auto Select]: If the authentication method is PLAIN, LOGIN, CRAM-MD5, or DIGEST-MD5.

[Encryption]-[Active]: If the authentication method is CRAM-MD5 or DIGEST-MD5.

[Encryption]-[Inactive]: If the authentication method is PLAIN or LOGIN.

- 4. Click [OK]
- 5. Click [Logout].
- 6. Quit Web Image Monitor.

## POP before SMTP Authentication

Select whether to log on to the POP3 server before sending e-mail.

- 1. Log on to Web Image Monitor in administrator mode.
- 2. Click [Configuration] in the menu area, and then click [E-mail] on the [Device Settings] area.
- 3. Make the following settings in POP before SMTP column:
  - POP before SMTP: Enable or disable POP before SMTP.
  - POP E-mail Address: Enter the e-mail address.
  - POP User Name: Enter the POP account name.
  - POP Password: To set or change the POP password.

- Timeout setting after POP Auth.: Enter the time available before connecting to the SMTP server after logging on to the POP server.
- 4. Click [OK].
- 5. Click [Logout].
- 6. Quit Web Image Monitor.

# **Sending E-mail Notification**

To use on-demand e-mail notification, perform the following configuration tasks in Web Image Monitor.

- 1. Log on to Web Image Monitor in administrator mode.
- 2. Click [Configuration] in the menu area, and then click [E-mail] on the [Device Settings] area.
- 3. Make the following settings:
  - E-mail Notification E-mail Address: Enter the address using alphanumeric characters.
  - Receive E-mail Notification: Specify whether to use on-demand e-mail notification.
  - E-mail Notification User Name: Enter the administrator's user name as the mail originator name.
  - E-mail Notification Password: Enter the password of the mail notification user.
- 4. Click [OK].
- 5. Click [Logout].
- 6. Quit Web Image Monitor.

# Format of on-demand e-mail messages

To use mail notification, you need to send an on-demand e-mail message to this machine.

Using your mail software, enter the following:

ltem	Description
Subject (Referred to as Subject)	Enter a request regarding the device. For details, see the table below.
From (Referred to as From)	Specify a valid mail address. The device information will be sent to the address specified here.

Vote

- A mail message must be within 1 MB in size.
- E-mail may be incomplete if sent immediately after power on.

# Subject field

Format: devicestatus?parameter-name=parameter[&=parameter][& =parameter]...

2

# Note

- The Subject field is case-insensitive.
- Parameter names can be written in any order.

# Subject field coding examples

Coding example	Action
devicestatus?request=sysconfig& format=text⟨=en	The device's system configurationinformation will be sent in an English text format.
devicestatus?request=sysconfig	The device's system configurationinformation will be sent in a preset format and language.

# Note

- The Subject field is case-insensitive.
- Parameter names can be written in any order.

# Parameters

Parameter	Meaning	Default
request	Information to be obtained	Mandatory
format	Mail format	Mail will be sent in the format presetfor each mail address.
lang	Language for mail body	Mail will be sent in the languagepreset for each mail address.

# Parameters specifying the information to be obtained

Information to be obtained	Parameter
System configuration information	sysconfig
Network configuration information	netconfig
Printer configuration information	prtconfig
Supplies information	supply
Device status information	status

Mail format	Parameter
Text	text
HTML	html
XML	xml

# Parameters specifying the mail format

# **Vote**

• HTML and XML can be seleceted for subject field, but output is text only.

# Parameters that specify the language for mail bodies

Language	Parameter
Japanese	ja
English	en

# **Remote Maintenance by telnet**

#### 🔁 Important

- Remote Maintenance should be protected so that access is allowed to administrators only.
- The password is the same as the one of Web Image Monitor administrator. When the password is changed using "mshell", other's change also.

# Using telnet

Follow the procedure below to use telnet.

# 🔂 Important

- Only one user at a time can log on to perform remote maintenance.
- If you are using Windows Vista, you must enable the telnet server and telnet client beforehand.
- 1. Use the IP address or the host name of the machine to start telnet.
  - % telnet IP\_address
- 2. Enter your user name and password.

For details about the user name and password, consult your network administrator.

For user authentication, enter a login user name and password.

For user code authentication, enter a user code in User Name.

- 3. Enter a command.
- 4. Quit telnet.

msh> logout

The configuration message about saving the changes appears.

5. Enter "yes" to save the changes, and then press the [Enter] key.

If you do not want to save the changes, enter "no", and then press the [Enter] key. To make further changes, enter "return" at the command line, and then press the [Enter] key.

**Note** 

- If the message "Can not write NVRAM information" appears, the changes are not saved. Repeat the
  procedure above.
- When the changes are saved, the network interface board is reset automatically with that changes.
- When the network interface board resets, the print job in print process will be printed. However, print jobs in queue will be canceled.
- To use Telnet under Windows Vista, SmartDeviceMonitor for Client must be installed.

#### access

Use the "access" command to view and configure access control. You can also specify two or more access ranges.

## View settings

msh> access

#### IPv4 configration display

msh> access ID range

#### IPv6 configuration display

msh> access ID range6

#### IPv6 access mask configuration display

msh> access ID mask6

#### IPv4 configuration

msh> access ID range "start-address end-address"

Example: to specify accessible IPv4 addresses between 192.168.0.10 and 192.168.0.20:

msh> access 1 range 192.168.0.10 192.168.0.20

#### IPv6 configuration

msh> access ID range6 "start-address end-address"

Example: to specify accessible IPv6 addresses between 2001:DB8::100 and 2001:DB8::200.

msh> access 1 range6 2001:DB8::100 2001:DB8::200

#### IPv6 access mask configuration

msh> access ID mask6 "base-address prefixlen"

Example: to specify accessible IPv6 addresses to 2001:DB8::/32

msh> access 1 mask6 2001:DB8:: 32

## Access control initialization

msh> access flush

 Use the "flush" command to restore the default settings so that all access ranges become "0.0.0.0" for IPv4, and "::" for IPv6.

#### Note

- You can specify each IPv6 entry by either range or mask. For the range parameter, you can select "start-address end-address". For the mask parameter, you can select "baseaddress prefixlen".
- The access range restricts computers from use of the machine by IP address. If you do not need to restrict printing, make the setting "0.0.0.0" for IPv4, and "::" for IPv6.
- Valid ranges must be from lower (start address) to higher (end address).

- For IPv4 and IPv6, you can select an ID number between 1 and 5.
- IPv6 can register and select the range and the mask for each access ranges.
- IPv6 mask ranges between 1 128 can be selected.
- Up to five access ranges can be specified. The entry is invalid if the target number is omitted.
- You cannot send print jobs, or access Web Image Monitor and diprint from a restricted IP address.

# appletalk

Use the "appletalk" command to view and configure AppleTalk parameters.

#### **View settings**

msh> appletalk

- [2] means "active" and [0] means "inactive".
- The default is [2].

# **Changing PAP timeout configuration**

msh> appletalk ptimeout value > 0

- Timeout value becomes effective.
- msh> appletalk ptimeout value = 0
  - Timeout value becomes ineffective.

#### autonet

Use the "autonet" command to configure AutoNet parameters.

#### View settings

The following command displays the current AutoNet settings:

msh> autonet

#### Configuration

You can configure AutoNet settings.

```
msh> autonet {on|off}
```

• {on} means "active" and {off} means "inactive".

# Current interface priority configuration display

msh> autonet priority

#### Interface priority configuration

msh> autonet priority "interface\_name"

• You can give interface's AutoNet parameter priority.

- Priority settings are available when multiple interfaces are installed.
- wlan can be specified only when the IEEE 802.11 interface is installed.

Interface	Interface configured
ether	Ethernet interface
wlan	IEEE 802.11 interface

## Note

- If an interface is not selected, the current interface connection settings remain in effect.
- For details about AutoNet, refer to autonet parameters.

# bonjour (rendezvous)

Use the "bonjour (rendezvous)" command to display bonjour (rendezvous)-related settings.

#### View settings

Bonjour settings are displayed.

msh> bonjour

## Bonjour service name setting

You can specify the bonjour service name.

msh> bonjour cname "computer name"

- The computer name can be entered using up to 63 alphanumeric characters.
- If you do not specify a character string, the current setting is displayed.

#### Bonjour Installation location information setting

You can enter information about the location where the printer is installed.

msh> bonjour location "location"

- Information about location can be entered using up to 32 alphanumeric characters.
- If you do not specify a character string, current setting is displayed.

#### Setting order of priority for each protocol

- msh> bonjour diprint [0-99]
- msh> bonjour lpr [0-99]
- msh> bonjour ipp [0-99]

You can specify the order of priority for "diprint", "lpr", and "ipp". Smaller numbers indicate higher priority.

#### **IP TTL setting**

msh> bonjour ip ttl [1-255]

You can specify the IP TTL (the number of routers a packet can pass through).

• The default is 255.

# Resetting the computer name and location information

You can reset the computer name and location information.

msh> bonjour clear {cname|location}

- cname: Reset the computer name. The default computer name will be displayed when the computer is restarted.
- location: Reset the location information. The previous location information will be deleted.

## Interface configuration

msh> bonjour linklocal "interface\_name"

- If you do not specify an interface, the Ethernet interface is selected automatically.
- If many types of interface are installed, configure the interface that communicates with linklocal address.
- If you do not specify an interface, the Ethernet interface is automatically selected.
- wlan can be specified only when the IEEE 802.11 interface is installed.

Interface	Interface configured
ether	Ethernet interface
wlan	IEEE 802.11 interface

#### Setting IPP-SSL printing

```
msh> bonjour ippport {ipp|ssl}
```

- If IPP-SSL Printing is set to ssl, the IPP port number will appear as 443, and IPP-SSL printing can be performed with higher security.
- If IPP-SSL Printing is set to ipp, the IPP port number will appear as 631. Port 631 is the port for normal IPP printing.

# btconfig

Use the "btconfig" command to make Bluetooth settings.

## View settings

Bluetooth settings are displayed.

msh> btconfig

## Mode settings

You can set the Bluetooth operation mode to {private} or {public}.

msh> btconfig {private|public}

The default is {public}.

# devicename

Use the "devicename" command to display and change the printer name.

#### **View settings**

msh> devicename

#### Printer name configuration

msh> devicename name "string"

- Enter a printer name using up to 31 alphanumeric characters.
- Set single names for each printer.

### Printer name initialization

msh> devicename clear name

• Reset the printer name to its default.

# dhcp

Use the "dhcp" command to configure DHCP settings.

#### View settings

The following command displays the current DHCP settings.

msh> dhcp

# Configuration

You can configure DHCP.

msh> dhcp "interface\_name" {on|off}

- Click {on} to enable dhcp. Click {off} to disable DHCP.
- If the DNS server address and domain name are obtained from DHCP, be sure to click {on}.
- wlan can be specified only when the IEEE 802.11 interface is installed.

Interface name	Interface configured
ether	Ethernet interface
wlan	IEEE 802.11 interface

## Current interface priority configuration display

msh> dhcp priority

#### Interface priority configuration

msh> dhcp priority "interface\_name"

- You can select which interface has DHCP parameter priority.
- Priority settings are available when multiple interfaces are installed.

# DNS server address selection

msh> dhcp dnsaddr {dhcp|static}

- Specify whether to obtain the DNS server address from the DHCP server or use the address set by a user.
- To obtain the DNS server address from the DHCP server, specify "dhcp". To use the address set by a user, specify "static".

#### Domain name selection

msh> dhcp domainname {dhcp|static}

- Specify whether to obtain the domain name from the DNS server or use the domain name set by a user.
- To obtain the domain name from the DHCP server, specify "dhcp". To use the domain name set by a user, specify "static".

## Reference

- p.70 "dns"
- p.71 "domainname"
- p.144 "Using DHCP"

## dhcp6

Use the "dhcp6" command to display or configure DHCPv6 settings.

#### View settings

The following command displays the current DHCPv6 settings.

msh> dhcp6

# DHCPv6-lite configuration and display

msh> dhcp6 "interface\_name" lite {on|off}

Viewing and specifying DNS server address selection (obtained from the dhcpv6 server/user specified value)

```
msh> dhcp6 dnsaddr {dhco|static}
```

# DUID(DHCP unique ID) deletion and display

msh> dhcp6 duid clear

#### Viewing and specifying the time required to re-obtain the parameter obtained from dhcpv6

msh> dhcp6 ooption lifetime [0-65535]

- It can be entered between 0 and 65535 minutes.
- The default is 60 minutes.
- If you specify "0", you cannot re-obtain the value.

# diprint

The direct printing port enables direct printing from a network-connected computer.

Use the "diprint" command to change direct printing port settings.

#### View settings

The following command displays the current direct printing port settings:

msh> diprint

Example output:

port 9100

timeout=300(sec)

bidirect on

conn multi

- apl async
  - The "port" specifies the port number of the direct printing port.
  - The "bidirect" setting indicates whether the direct printing port is bidirectional or not.

#### Setting timeout

```
msh> diprint timeout [30-5535]
```

- You can specify the timeout interval to use when the printer is expecting data from the network.
- The default is 300 seconds.

# Specifying the number of concurrent connections

msh> diprint conn {multi|single}

- The above command specifies the number of concurrent diprint connections. Specify "multi" for multiple connections or "single" for a single connection.
- The default is "multi".

# dns

Use the "dns" command to configure or display DNS (Domain Name System) settings.

#### View settings

The following command displays current DNS settings:

msh> dns

#### IPv4 DNS server configuration

The following command enables or disables the IPv4 DNS server address:

msh> dns "ID" server "server address"

The following command displays a configuration using the IP address 192.168.15.16 on a DNS 1 server:

msh> dns 1 server 192.168.15.16

- You can register IPv4 DNS Server address.
- You can select an ID number between 1 and 3. You can select up to three ID numbers.
- You cannot use "255.255.255.255" as the DNS server address.

#### IPv6 DNS server configuration

The following command enables or disables the IPv4 DNS server address:

msh> dns "ID" server6 "server address"

- You can register IPv6 DNS Server address.
- The selectable ID number is between 1 and 3. You can select up to 3 ID.

# Dynamic DNS function setting

msh> dns "interface\_name" ddns {on|off}

- You can set the dynamic DNS function "active" or "inactive".
- {on} means "active" and {off} means "inactive".
- wlan can be specified only when the IEEE 802.11 interface is installed.

Interface name	Interface configured
ether	Ethernet interface
wlan	IEEE 802.11 interface

#### Specifying the record overlap operation

msh> dns overlap {update|add}

- You can specify operations performed when records overlap.
- update: To delete old records and register new records.

2

- add: To add new records and store the old records.
- When CNAME overlaps, it is always changed, irrespective of settings.

#### **CNAME** registration

msh> dns cname {on|off}

- You can specify whether to register CNAME.
- {on} means "active" and {off} means "inactive".
- The CNAME registered is the default name beginning with rnp. CNAME cannot be changed.

#### A records registration

msh> dns arecord {dhcp|own}

- dhcp: You can specify the method of registering an A record when the dynamic DNS function is enabled and DHCP is used.
- own: To register an A record using the printer as the DNS client.

The DNS server address and the domain name already designated are used for the registration.

#### Record updating interval settings

msh> dns interval [1-255]

- You can specify the interval after which records are updated when using the dynamic DNS function.
- The updating interval is specified hourly. It can be entered between 1 and 255 hours.
- The default is 24 hours.

#### resolv.conf display

msh> dns resolv

#### Specifying the protocol when asking names during dual stacking

msh> dns resolv protocol {ipv4|ipv6}

• Appears during dual stacking only.

# domainname

Use the "domainname" command to display or configure the domain name settings.

You can configure the Ethernet interface, or IEEE 802.11 interface.

#### **View settings**

The following command displays the current domain name:

msh> domainname

#### Interface domain configuration

msh> domainname "interface\_name"

#### Setting the Domain Name

msh> domainname "interface\_name" name "domain name"

- A domain name can be entered using up to 63 alphanumeric characters.
- The Ethernet interface and IEEE 802.11 interface will have the same domain name.
- wlan can be specified only when the IEEE 802.11 interface is installed.

Interface	Interface set
ether	Ethernet interface
wlan	IEEE 802.11 interface

#### **Deleting the Domain Name**

```
msh> domainname "interface_name" clear name
```

# help

Use the "help" command to display the available command list and the procedures for using those commands.

### Command list display

msh> help

Display of procedure for using commands

```
msh> help "command_name"
```

#### hostname

Use the "hostname" command to change the printer name.

#### **View settings**

msh> hostname

#### **IPv4** Configuration

msh> hostname "interface\_name" "printer\_name"

- Enter the printer name using up to 63 alphanumeric characters.
- You cannot use a printer name beginning "RNP" (in either upper or lower case).
- The Ethernet interface and IEEE 802.11 interface will have the same printer name.
- wlan can be specified only when the IEEE 802.11 interface is installed.
- If you do not specify an interface, the Ethernet interface is selected automatically.

Interface name	Interface configured
ether	Ethernet interface
wlan	IEEE 802.11 interface

#### Initializing the printer name for each interface

```
msh>hostname "interface_name" clear name
```

# ifconfig

Use the "ifconfig" command to view and configure TCP/IP (IP address, subnet mask, broadcast address, default gateway address) for the printer.

#### **View settings**

msh> ifconfig

#### IPv4 configuration

```
msh> ifconfig "interface_name" "parameter" "address"
```

- If you did not enter an interface name, it is automatically set to the Ethernet interface.
- wlan can be specified only when the IEEE 802.11 interface is installed.

Interface name	Interface configured
ether	Ethernet Interface
wlan	IEEE 802.11 Interface

The following explains how to configure an IPv4 address 192.168.15.16 on Ethernet interface.

msh> ifconfig ether 192.168.15.16

#### IPv6 configuration

```
msh> ifconfig ether inet6 "interface_name" "printer_name"
```

The following explains how to configure a IPv6 address to 2001:DB8::100 with prefix length 64 on the Ethernet interface.

msh> ifconfig ether inet6 2001:DB8::100 64

#### Netmask configuration

```
msh> ifconfig "interface_name" netmask "address"
```

The following explains how to configure a subnet mask 255.255.255.0 on Ethernet interface.

msh> ifconfig ether netmask 255.255.255.0

#### Broadcast address configuration

msh> ifconfig "interface\_name" broadcast "address"

#### Changing the interface

msh> ifconfig "interface" up

• When using the optional IEEE 802.11 interface unit, you can specify either Ethernet or IEEE 802.11 interface.

#### 🕗 Note

- To get the above addresses, contact your network administrator.
- Use the default configuration if you cannot obtain setting addresses.
- The IP address, subnet mask and broadcast address are the same as that for the ethernet interface and IEEE 802.11 interface.
- TCP/IP configuration is the same for both Ethernet and IEEE 802.11 interface. If interfaces are changed, the new interface inherits the configuration.
- Use "0x" as the initial two letters of a hexadecimal address.

# info

Use the "info" command to display printer information such as paper tray, output tray, and printer language.

#### Printer information display

msh> info

#### Reference

p.112 "Understanding the Displayed Information"

# ipp

Use the "ipp" command to view and configure IPP settings.

#### Viewing settings

The following command displays the current IPP settings:

msh> ipp

#### **IPP timeout configuration**

Specify how many seconds the computer waits before canceling an interrupted print job. The time can be entered between 30 to 65535 seconds.

msh> ipp timeout [30-65535]

#### IPP user authorization configuration

Use IPP user authorization to restrict users to print with IPP. The default is "off".

msh> ipp auth {basic|digest|off}

- User authorization settings are "basic" and "digest".
- If user authorization is specified, register a user name. You can register up to 10 users.

#### IPP user name configuration

Configure IPP users according to the following messages:

msh> ipp user

The following message appears:

msh> Input user number (1 to 10):

Enter the number, user name, and password.

msh> IPP user name:user1

msh> IPP :\*\*\*\*\*\*

After configuring the settings, the following message appears:

User configuration changed.

# ipv6

Use the "ipv6" command to display and configure IPv6 settings.

#### **View Setting**

msh> ipv6

# IPv6 stateless address

msh> ipv6 stateless {on|off}

If "on" is selected, IPv6 requests information required for maintaining stateful connection to the router for as long as the printer power is turned on. This setting allows information from the router to be obtained constantly, and periodically refreshes the effective period of the stateless address.

# lpr

Use the "lpr" command to view and configure LPR settings.

#### **View Setting**

msh> lpr

#### Checking host name when deleting the job

msh> lpr chkhost {on|off}

If "on" is selected, you can delete print jobs only from the IP address of the host that sent the print job. If LPR is disabled, you can also delete print jobs sent from IP addresses other than that of the host.

# Printer Error Detection Function

lpr prnerrchk {on|off}

If you set this to "on", the printer stops receiving data and will wait until the error is resolved before continuing processing a job.

#### netware

Use the "netware" command to view and configure the NetWare settings such as the print server name or file server name.

#### **NetWare Printer Server Names**

msh> netware pnamecharacter string

• Enter the NetWare print server name using up to 47 characters.

### **NetWare File Server Names**

- msh> netware fname character string
  - Enter the NetWare file server name using up to 47 characters.

#### Encap type

msh> netware encap {802.3|802.2|snap|ethernet2|auto}

#### **Remote Printer Number**

msh> netware rnum [0-254]

• The default is 0.

#### Timeout

msh> netware timeout [3-255]

• The default is 15.

#### Printer server mode

msh> netware mode pserver

msh> netware mode ps

#### Remote printer mode

- msh> netware mode rprinter
- msh> netware mode rp

#### NDS context name

msh> netware context "character string"

2

### SAP interval

msh> netware "sap\_interval[0-3600]"

It can be entered between 0 and 3600 seconds.

## Setting login mode for file server

msh> netware login server

### Setting login mode for NDS tree

msh> netware login tree

### Setting login mode for NDS tree name

msh> netware tree "NDS tree name"

### File transfer protocol

msh> netware trans {ipv4pri|ipxpri|ipv4|ipx}

• If you do not specify the protocol, the current setting is displayed.

Protocol	Set Protocol
ipv4pri	IPv4+IPX(IPv4)
ipxpri	IPv4+IPX(IPX)
ipv4	IPv4
ірх	IPX

# passwd

Use the "passwd" command to change the remote maintenance password.

### Changing the

msh> passwd

- Enter the current password.
- Enter the new password.
- Renter the new password to confirm it.

# Changing the password of the administrators using the Supervisor

msh> passwd {Administrator ID}

- Enter the new password.
- Renter the new password to confirm it.

# **Vote**

• Be sure not to forget or lose the password.

• The password can be entered using up to 32 alphanumeric characters. s are case-sensitive. For example, "R" is not the same as "r".

# pathmtu

Use the "pathmtu" command to display and configure the PathMTU Discovery service function.

#### View settings

msh> pathmtu

#### Configuration

msh> pathmtu {on|off}

- The default is "on".
- If the MTU size of the sent data is larger than the router's MTU, the router will declare it impassable, and communication will fail. If this happens, selecting the "pathmtu" to "off" optimizes the MTU size and prevents data output failure.
- Depending on the environment, information might not be obtained from the router, and communication will fail. If this happens, select the "pathmtu" to "off".

#### prnlog

Use the "prnlog" command to obtain printer log information.

# Print logs display

msh> prnlog

- Display previous print jobs.
- msh> prnlog "ID Number"
  - Specify the ID number of the displayed print log information to display additional details about a print job.

#### route

Use the "route" command to view and control the routing table.

#### Specified route information display

msh> route get "destination"

• Specify the IPv4 address to destination.

"0.0.0.0" cannot be specified as destination address.

2

## Enabling/disabling specified IPv4 destination

- msh> route active {host|net} "destination" {on|off}
  - If you do not specify {host | net}, the host setting is automatically selected.

#### Adding IPv4 Routing Table

msh> route add {host|net} "destination" "gateway"

- Adds a host or network route to "destination", and a gateway address to "gateway" in the table.
- Specify the IPv4 address to destination and gateway.
- If you do not specify {host | net}, the host setting is selected automatically.
- You cannot specify"0.0.0.0" as the destination address.

#### Setting the Default IPv4 Gateway

msh> route add default "gateway"

#### Deleting specified IPv4 destination from Routing Table

msh> route delete {host|net} "destination"

- If you do not specify {host | net}, the host setting is automatically selected.
- IPv4 address of destination can be specified.

#### Setting IPv6 Default Gateway

msh> route add6 default gateway

#### Adding a specified IPv6 destination to Routing Table

msh> route add6 "destination" "prefixlen[1-128]" "gateway"

- Specify the IPv6 address to destination and gateway.
- If the prefix of the address is between 1 and 127, the network is selected. If the prefix of the address is 128, the host is selected.
- You cannot register a record that has the same destination and prefix as a registered record.
- You cannot register a record that uses "0000:0000:0000:0000:0000:0000:0000" as its destination.

#### Deleting a specified IPv6 destination from Routing Table

msh> route delete6 "destination" "prefixlen"

• Specify the IPv6 address to destination and gateway.

#### Display information about a specified IPv6 route information

msh> route get6 "destination"

• Specify the IPv6 address to destination and gateway.

#### Enabling/disabling a specified IPv6 destination

msh> route active6 "destination" "prefixlen[1-128]" {on|off}

#### **Route initialization**

msh> route flush

#### 🕓 Note

- The maximum number of IPv4 routing tables is 16.
- The maximum number of IPv6 routing tables is 2.
- Set a gateway address when communicating with devices on an external network.
- The same gateway address is shared by all interfaces.
- "Prefixlen" is a number between 1 and 128.

# rhpp

Use the "rhpp" command to view and configure RHPP settings.

#### View settings

msh> rhpp

#### Changing rhpp port number

- msh> rhpp [1024-65535]
  - The default is 59100.

#### **Setting timeout**

msh> rhpp timeout [30-65535]

• The default is 300 seconds.

#### Vote

"RHPP" is an abbreviation of "Reliable Host Printing Protocol", which is a manufacturer-original
printing protocol.

#### set

Use the "set" command to set the protocol information display "active" or "inactive".

#### View settings

The following command displays protocol information (active/inactive).

- msh> set ipv4
  msh> set ipv6
- . . . . .
- msh> set appletalk
- msh> set netware
- msh> set smb

2

msh> set protocol

• When protocol is specified, information about TCP/IP, AppleTalk, NetWare and SMB appears.

msh> set lpr

msh> set lpr6

msh≻ set ftp

msh> set ftp6

msh≻ set rsh

msh> set rsh6

msh> set diprint

msh> set diprint6

msh> set web

msh> set snmp

msh≻ set ssl

msh> set ssl6

msh≻ set nrs

msh≻ set rfu

msh> set rfu6

msh≻ set ipp

msh> set ipp6

msh≻ set http

msh> set http6

msh≻ set bonjour

msh> set bonjour6

msh≻ set nbt

msh> set ssdp

msh≻ set ssh

msh> set sftp

msh> set sftp6

msh≻ set wsdev

msh> set wsdev6

msh> set wsprn

msh> set rhpp

msh> set rhpp6

#### Configuration

• Enter "up" to enable protocol, and enter "down" to disable protocol.

You can set the protocol to "active" or "inactive".

msh> set ipv4 {up|down}

- If you disable IPv4, you cannot use remote access after logging off. If you did this by mistake, you can use the control panel to enable remote access via IPv4.
- Disabling IPv4 also disables lpr, ftp, rsh, diprint, web, snmp, ssl, ipp, http, bonjour, wsdev, and sftp.

msh> set ipv6 {up|down}

- If you disable IPv6, you cannot use remote access after logging off. If you did this by mistake, you can use the control panel to enable remote access via IPv6.
- Disabling IPv6 also disables lpr6, ftp6, rsh6, diprint6, ssl6, ipp6, http6, bonjour6, wsdev6, and sftp6.
- msh> set ipsec {up|down}

```
msh> set appletalk {up|down}
```

```
msh> set netware {up|down}
```

```
msh> set smb {up|down}
```

```
msh> set lpr {up|down}
```

```
msh> set lpr6 {up|down}
```

```
msh> set ftp {up|down}
```

```
msh> set ftp6 {up|down}
```

```
msh> set rsh {up|down}
```

```
msh> set rsh6 {up|down}
```

```
msh> set diprint {up|down}
```

- msh> set diprint6 {up|down}
- msh> set web {up|down}
- msh> set snmp {up|down}
- msh> set ssl {up|down}
- msh> set ssl6 {up|down}
  - If Secured Sockets Layer (SSL, an encryption protocol) function is not available for the printer, you cannot use the function by enabling it.
- msh> set nrs {up|down}
- msh> set rfu {up|down}
- msh> set rfu6 {up|down}

```
msh> set ipp {up|down}
```

```
msh> set ipp6 {up|down}
```

```
msh> set http {up|down}
```

```
msh> set http6 {up|down}
```

```
msh> set bonjour {up|down}
```

```
msh> set bonjour6 {up|down}
```

```
msh> set ssh {up|down}
```

```
msh> set ssdp {up|down}
```

msh> set nbt {up|down}

```
msh> set sftp {up|down}
```

```
msh> set sftp6 {up|down}
```

```
msh> set wsdev {up|down}
```

- msh> set wsdev6 {up|down}
  - If "wsdev" and "wsdev6" are enabled simultaneously, both appear as "up" on the protocol information display, but both use IPv4 for WS-Device and WS-Printer.

msh> set wsprn {up|down}

msh> set rhpp {up|down}

msh> set rhpp6 {up|down}

# show

Use the "show" command to display network interface board configuration settings.

#### **View settings**

msh> show

• If "-p" is added, you can view settings one by one.

# slp

Use "slp" command to view and configure SLP settings.

msh> slp ttl "ttl\_val[1-255]"

- You can search the NetWare server using SLP in the PureIP environment of NetWare 5/5.1. Using the "slp" command, you can configure the value of TTL which can be used by SLP multicast packet.
- The default value of TTL is 1. A search is executed only within a local segment. If the router does not
  support multicast, the settings are not available even if the TTL value is increased.
- The acceptable TTL value is between 1 and 255.

# smb

Use the "smb" command to configure or delete the computer or workgroup name for SMB.

# Computer name settings

msh> smb comp "computer name"

- Set computer name using up to 15 characters.
- Names beginning with "RNP" or "rnp" cannot be entered.

#### Working group name settings

- msh> smb group "work group name"
  - Set workgroup name using up to 15 characters.

#### **Comment settings**

msh> smb comment "comment"

• Set comment using up to 31 characters.

#### Notify print job completion

msh> smb notif {on|off}

• To notify print job completion, specify "on". Otherwise, specify "off".

#### **Deleting computer name**

msh> smb clear comp

#### Deleting group name

msh> smb clear group

#### **Deleting comment**

msh> smb clear comment

#### View protocol

msh> smb protocol

#### snmp

Use the "snmp" command to display and edit SNMP configuration settings such as the community name.

#### **View settings**

msh> snmp

• Default access settings 1 is as follows:

Community name:public

IPv4 address:0.0.0.0

IPv6 address:::

IPX address:0000000:00000000000

Access type:read-only

Effective Protocol: IPv4/IPv6/IPX

• Default access settings 2 is as follows:

Community name:admin

IPv4 address:0.0.0.0

IPv6 address:::

IPX address:0000000:00000000000

Access type:read-write

Effective Protocol: IPv4/IPv6/IPX

- If "-p" is added, you can view settings one by one.
- To display the current community, specify its registration number.

### Display

msh> snmp ?

# Community name configuration

msh> snmp "number" name "community\_name"

- You can configure ten SNMP access settings numbered 1-10.
- The printer cannot be accessed from SmartDeviceMonitor for Admin or SmartDeviceMonitor for Client if "public" is not registered in numbers 1-10. When changing the community name, use SmartDeviceMonitor for Admin and SNMP Setup Tool to correspond with printer settings.
- The community name can be entered using up to 15 characters.

#### Deleting community name

msh> snmp "number" clear name

# Access type configuration

```
msh> snmp "number" type "access_type"
```

Access type	Type of access permission
no	not accessible
read	read only
write	read and write
trap	user is notified of trapmessages

#### Protocol configuration

Use the following command to set protocols "active" or "inactive": If you set a protocol "inactive", all access settings for that protocol are disabled.

msh> snmp {ipv4|ipv6|ipx} {on|off}

- Specify "ipv4" for IPv4, "ipv6" for IPv6, or "ipx" for IPX/SPX.
- {on} means "active" and {off} means "inactive".
- All protocols cannot be turned off concurrently.

#### Configuration of protocol for each registration number

```
msh> snmp "number" active {ipv4|ipv6|ipx} {on|off}
```

• To change the protocol of access settings, use the following command. However, if you have disabled a protocol with the above command, activating it here has no effect.

## Access configuration

msh> snmp "number" {ipv4|ipv6|ipx} "address"

- You can configure a host address according to the protocol used.
- The network interface board accepts requests only from hosts that have IPv4, IPv6, and IPX addresses with access types of "read-only" or "read-write". Enter "0" to have network interface board accept requests from any host without requiring a specific type of access.
- Enter a host address to deliver "trap" access type information to.
- To specify IPv4 or IPv6, enter "ipv4" or "ipv6" followed by a space, and then the IPv4 or IPv6 address.
- To specify IPX/SPX, enter "ipx" followed by a space, the IPX address followed by a decimal, and then the MAC address of the network interface board.

#### sysLocation configuration

msh> snmp location

#### **Deleting sysLocation**

msh> snmp clear location

#### sysContact setting

msh> snmp contact

#### Deleting sysContact

msh> snmp clear contact

#### SNMP v1v2 function configuration

msh> snmp v1v2 {on|off}

• Specify "on" to enable, and "off" to disable.

# SNMP v3 function configuration

msh> snmp v3 {on|off}

86

• Specify "on" to enable, and "off" to disable.

#### SNMP TRAP configuration

- msh> snmp trap{v1|v2|v3} {on|off}
  - Specify "on" to enable, and "off" to disable.

# Remote Configuration Authorization configuration

msh> snmp remote {on|off}

• Specify "on" to enable, and "off" to disable the SNMP v1v2 setting.

#### SNMP v3 TRAP configuration display

- msh> snmp v3trap
- msh> snmp v3trap [1-5]
  - If a number from 1 to 5 is entered, settings are displayed for that number only.

## Configuring a sending address for SNMP v3 TRAP

msh> snmp v3trap [1-5] {ipv4|ipv6|ipx} "address"

# Configuring a sending protocol for SNMP v3 TRAP

msh> snmp v3trap [1-5] active {ipv4|ipv6|ipx} {on|off}

#### Configuring a user account for SNMP v3 TRAP

msh> snmp v3trap [1-5] account "account\_name"

• Enter an account name using up to 32 alphanumeric characters.

#### Deleting an SNMP v3 TRAP user account

msh> snmp v3trap [1-5] clear account

#### Configuring an SNMP v3 encryption algorithm

msh> snmp v3auth {md5|sha1}

#### Configuring SNMP v3 encryption

msh> snmp v3priv {auto|on}

- Set "auto" for automatic encryption configuration.
- If you select "on", plain-text communication becomes impossible only encrypted communication is possible.

#### 🕹 Note

• "Encrypted communication" means an encrypted password is set on the machine.

#### sntp

The printer clock can be synchronized with a NTP server clock using Simple Network Time Protocol (SNTP). Use the "sntp" command to change SNTP settings.

2

#### **View settings**

msh> sntp

# NTP IPv4 server address configuration

You can specify the IPv4 address of the NTP server.

msh> sntp server "IPv4\_address"

#### NTP hostname configuration

You can specify the hostname of the NTP server.

msh> sntp server "hostname"

#### **Deleting NTP server configuration**

msh> sntp server clear

#### Interval configuration

msh> sntp interval "polling\_time"

- You can specify the interval at which the printer synchronizes with the operator-specified NTP server. The default is 60 minutes.
- The interval can be entered from 0, or between 15 and 10,080 minutes.
- If you set 0, the printer synchronizes with the NTP server only when you turn the printer on. After that, the printer does not synchronize with the NTP server.

#### Time-zone configuration

msh> sntp timezone "±hour\_time"

• You can specify the time difference between the printer clock and NTP server clock. The values are between -12:00 and +13:00.

#### Note

• You can only select either the address or host name for the ntp server.

# spoolsw

Use the "spoolsw" command to view and configure Job Spool settings.

You can only specify diprint, trap, lpr, ipp, ftp, sftp, ws-printer, and smb (TCP/IP) protocol.

 The "spoolsw" command for configuring Job Spool settings is available only when the optional hard disk is installed.

#### View settings

The Job Spool setting appears.

msh> spoolsw

# Job Spool setting

msh> spoolsw spool {on|off}

• Specify "on" to enable Job Spool, or "off" to disable it.

# **Resetting Job spool setting**

```
msh> spoolsw clear job {on|off}
```

 When the printer power is cut during job spooling, this determines whether to reprint the spooled job.

### **Protocol configuration**

```
msh> spoolsw diprint {on|off}
msh> spoolsw lpr {on|off}
msh> spoolsw ipp {on|off}
msh> spoolsw smb {on|off}
msh> spoolsw ftp {on|off}
msh> spoolsw sftp {on|off}
msh> spoolsw sftp {on|off}
msh> spoolsw {on|off}
```

# ssdp

Use the "ssdp" command to view and configure SSDP settings.

#### View settings

msh≻ ssdp

#### Setting effective time

msh> ssdp profile [1801-86400]

The default is 10800 seconds.

# Advertise packet TTL settings

msh> ssdp ttl [1-255]

The default is 4.

# ssh

Use the "ssh" command to view and configure SSH settings.

#### **View settings**

msh≻ ssh

### Data compression communication settings

msh> ssh compression {on|off}
The default is "on".

#### SSH/SFTP communication port setting

msh> ssh port [22, 1024-65535]

The default is 22.

#### SSH/SFTP communication timeout setting

msh> ssh timeout [0-65535]

The default is 300.

#### SSH/SFTP communication login timeout setting

msh> ssh logintimeout [0-65535]

The default is 300.

#### Setting an open key for SSH/SFTP

msh> ssh genkey {512|768|1024} "character string"

Create an open key for SSH/SFTP communication.

Usable characters are ASCII 0x20-0x7e (32 bytes) other than "0".

The default key length is 1024, and the character string is blank.

If you do not specify this parameter, an open key with the default value will be created.

# Deleting open key for ssh/sftp communication

msh> ssh delkey

#### Note

• If you do not specify a character string, current setting is displayed.

#### status

Use the "status" command to display the printer status.

#### view messages

msh> status

# syslog

Use the "syslog" command to display the information stored in the printer's system log.

#### View message

msh> syslog

#### upnp

Use the "upnp" command to display and configure the universal plug and play.

# Public URL display

msh> upnp url

## **Public URL configuration**

msh> upnp url "string"

• Enter the URL string in the character string.

# web

Use the "web" command to display and configure parameters on Web Image Monitor.

#### **View Settings**

msh> web

#### **URL** Configuration

You can set URLs linked by clicking [URL] on Web Image Monitor.

msh> web "ID" url http:// "The URL or IP address you want to register"/

Specify "1" or "2" for ID as the number corresponding to the URL. Up to two URLs can be registered and specified.

#### Resetting URLs registered as link destinations

msh> web "ID" clear url

Specify "1" or "2" for ID as the corresponding number to the URL.

#### Link name configuration

You can enter the name for URL that appears on Web Image Monitor.

msh> web "ID" name "Name you want to display"

Specify "1" or "2" for ID the corresponding number to the link name.

#### Resetting URL names registered as link destinations

msh> web "ID" clear name

Specify "1" or "2" for ID as the number corresponding to the link name.

#### Help URL Configuration

You can set URLs linked by clicking "?" on Web Image Monitor.

msh> web help http://"Help URL or IP address"/help/

# **Resetting Help URL**

msh> web clear help

91

# wiconfig

Use the "wiconfig" command to make settings for IEEE 802.11.

# View settings

msh> wiconfig

# View IEEE 802.11 settings

msh> wiconfig cardinfo

• If IEEE 802.11 is not working correctly, its information is not displayed.

# Configuration

msh> wiconfig "parameter"

Parameter	Value configured
mode {ap 802.11adhoc}	You can set the infrastructure mode (ap) or the 802.11 Ad hoc mode (802.11adhoc).
	The default is the infrastructure mode.
ssid " <b>ID value</b> "	You can specify an SSID in infrastructure mode. The characters you can enter in the SSID string are ASCII 0x20-0x7e (32 bytes). If you do not specify a character string, the machine will connect to the nearest access point. The default SSID is blank.
channel frequency " <b>channel no.</b> "	In 802.11 ad hoc mode, you can select a channel between 1 and 14, or 36, 40, 44, or 48. Be sure to set the same channel for all ports that will transmit and receive data.
	The default is "11".
key " <b>key value</b> " val [1 2 3 4]	You can specify the WEP key when entering in hexadecimal.
	With a 64-bit WEP, you can use 10 digit hexadecimals. With a 128-bit WEP, you can use 26 digit hexadecimals.
	Up to four WEP keys can be registered. Specify the number to be registered with "val".
	When a WEP is specified by key, the WEP specified by key phrase is overwritten.

Parameter	Value configured
	To use this function, set the same key number and WEP key for all ports that transmit data to each other. Put "Ox" on the front of WEP key.
	You can omit the numbers with "val". The key number is set to 1 when making these omissions. The default is blank.
keyphrase " <b>phrase</b> " val [1 2 3 4]	You can specify the WEP key when entering in ASCII.
	With a 64-bit WEP, you can use 5 digit hexadecimals. With a 128-bit WEP, you can use 13 digit hexadecimals.
	Up to four WEP keys can be registered. Specify the number to be registered with "val".
	When a WEP is specified by key phrase, the WEP specified by key is overwritten.
	To use this function, set the same key number and WEP key for all ports that transmit data to each other.
	You can omit the numbers with "val". The key number is set to 1 when making these omissions. The default is blank.
encval [1   2   3   4]	You can specify which of the four WEP keys is used for packet encoding. "1" is set if a number is not specified.
wepauth {open shared}	You can set an authorization mode when using WEP. The specified value and authorized mode are as follows:
	open: open system authorized (default) shared: shared key authorized rate
security {none wep wpa}	You can specify the security mode.
	none: No encryption(default) wep: WEP encryption
	wpa: WPA encryption
wpaenc {tkip ccmp}	You can specify WPA encryption key when using WPA encryption.

Parameter	Value configured
	tkip: TKIP ccmp: CCMP (AES) (default)
wpaauth {wpapsk wpa wpa2psk wpa2}	You can specify the WPA authentication mode when using WPA encryption. wpapsk: WPA-PSK authentication(default) wpa: WPA authentication wpa2psk: WPA2-PSK authentication wpa2: WPA2 authentication
psk "character string"	You can specify the Pre-Shared key. Usable characters: ASCII 0x20-0x7e (8 to 63 bytes). The default is blank.
eap {tls ttls leap peap} {chap mschap  mschapv2 pap md5 tls}	You can specify the EAP authentication type. tls: EAP-TLS (default) ttls: EAP-TTLS leap: LEAP peap: PEAP chap, mschap, mschapv2, pap, md5, or tls are settings for the phase 2 method, and must be set when using EAP-TTLS or PEAP. Do not make these settings when using other EAP authentication types. If you select EAP-TTLS, you can select chap, mschap, mschapv2, pap, or md5. If you select PEAP, you can select mschapv2 or tls.
username "character string"	You can specify the login user name for the Radius server. Usable characters: ASCII 0x20-0x7e (31 bytes). The default is blank.
username2 "character string"	You can specify the phase 2 username for EAP- TTLS/PEAP phase 2 authentication.

Parameter	Value configured
	Usable characters: ASCII 0x20-0x7e (31 bytes).
	The default is blank.
domain "character string"	You can specify the login domain name for the Radius server.
	The characters you can enter are ASCII 0x20-0x7e (31 bytes), but not "@" or "∖".
	The default is blank.
password "character string"	You can specify the login for the Radius server.
	Usable characters: ASCII 0x20-0x7e (128 bytes). The default is blank.
srvcert {on off}	You can set the server certificate. The default is "off".
imca {on off}	You can enable or disable the certificate when the intermediate certificate authority is present. The default is "off".
srvid "character string"	You can set the server ID and subdomain of the certificate server.
	Usable characters: ASCII 0x20-0x7e(128 bytes). The default is blank.
connectinfo	Obtains connection information.
claer {a each command all}	Returns the selected setting to its default value.
	If you specify "all", all settings will be restored to their default values.
miccheck {on off}	You can enable or disable the MIC check function.
	The default setting is "On" (enabled).
	If you specify "Off", you cannot perform MIC checks. We recommend you specify "On" for the MIC check function when using this machine.

### wins

Use the "wins" command to configure WINS server settings.

#### Viewing settings

msh> wins

• If the IPv4 address obtained from DHCP differs from the WINS IPv4 address, the DHCP address is the valid address.

#### Configuration

```
msh> wins "interface_name" {on|off}
```

- {on} means "active" and {off} means "inactive".
- Be sure to specify the interface.
- wlan can be specified only when the IEEE 802.11 interface is installed.

Interface name	Interface configured
ether	Ethernet interface
wlan	IEEE 802.11 interface

#### Address configuration

Use the following command to configure a WINS server IP address:

wins "interface\_name" {primary|secondary} "IP address"

- Use the "primary" command to configure a primary WINS server IP address.
- Use the "secondary" command to configure a secondary WINS server IP address.
- Do not use "255.255.255.255" as the IP address.

# NBT (NetBIOS over TCP/IP) Scope ID Selection

You can specify the NBT scope ID.

msh> wins "interface\_name" scope "scope ID"

- The scope ID can be entered using up to 31 alphanumeric characters.
- Be sure to specify the interface.
- wlan can be specified only when the IEEE 802.11 interface is installed.

Interface name	Interface configured
ether	Ethernet interface
wlan	IEEE 802.11 interface

# wsmfp

Use the "wsmfp" command to view and configure WS-MFP settings.

#### Viw settings

msh> wsmfp

## **Comment settings**

msh> wsmfp comments "comment"

• If you do not specify a comment, current setting is displayed.

#### Location configuration

mah> wsmfp location "location"

• If you do not specify a comment, current setting is displayed.

#### Presentation URL configuration

msh> wsmfp url "URL"

• Ebter the URL string in the "URL".

#### WS-Device TCP port configuration

msh> wsmfp devport "port\_number"

• The Default is 53000.

# WS-Printer TCP port configuration

msh> wsmfp prnport "port\_number"

• The Default is 53001.

# **Timeout configuration**

msh> wsmfp prntimeout [30-65535]

• The default is 900 seconds.

# **Comment initialization**

msh> wsmfp clear comments

#### Location initialization

msh> wsmfp clear location

### Presentation URL initialization

msh> wsmfp clear url

# SNMP

Using the SNMP manager, you can get information about the machine.

The SNMP agent operating on UDP and IPX is incorporated into the built-in Ethernet board and optional IEEE 802.11 interface unit of this machine.

This machine also supports SNMPv3, which increases user authentication, data encryption, and access control security.

To encrypt communication by SNMPv3, you must specify the machine's encrypted password.

🚼 Important

• If you changed the machine's community name, change the configuration of the connected computer accordingly, using SNMP Setup Tool. For details, see SNMP Setup Tool Help.

The default community names are [public] and [admin]. You can get MIB information using these community names.

### Start SNMP Setup Tool

• Windows 95/98/Me, Windows 2000, Windows NT 4.0:

Click the [Start] button.

Point to [SmartDeviceMonitor for Admin] on the [Programs] menu.

Click [SNMP Setup Tool].

• Windows XP/Vista:

Click the [Start] button.

Point to [SmartDeviceMonitor for Admin] on the [All Programs] menu.

Click [SNMP Setup Tool].

# Supported MIBs(SNMPv1/v2)

- MIB-II
- PrinterMIB
- HostResourceMIB
- IPv6-TCP-MIB
- IPv6-UDP-MIB
- IPv6-MIB
- IPv6-ICMP-MIB
- RicohPrivateMIB

# Supported MIBs(SNMPv3)

- MIB-II
- PrinterMIB

2

- HostResourceMIB
- IPv6-TCP-MIB
- IPv6-UDP-MIB
- IPv6-MIB
- IPv6-ICMP-MIB
- RicohPrivateMIB
- SNMP-FRAMEWORK-MIB
- SNMP-TARGET-MIB
- SNMP-NOTIFICATION-MIB
- SNMP-USER-BASED-SM-MIB
- SNMP-VIEW-BASED-ACM-MIB

# **Getting Printer Information over the Network**

This section explains details of each item displayed in the printer status and information.

# **Current Printer Status**

This section explains how you can check the machine's status and the items displayed. Depending on the options installed on the machine, some items might not be displayed.

- UNIX: Use the "lpq" command and "rsh", "rcp", "ftp", and "sftp" parameters.
- mshell: Use the "status" command.

Messages	Description
Access Restricted	The job was canceled because user have no authority.
Add staples (Booklet: Back)	The staple of booklet finisher (back) is exhausted.
Add staples (Booklet: Both)	The staple of booklet finisher is exhausted.
Add staples (Booklet: Front)	The staple of booklet finisher (front) is exhausted.
Adjusting	The machine is initializing or calibrating.
Call Service Center	There is a malfunction in the machine.
Canceled	The job is reset.
Canceling Job	The job is being reset.
Cannot Eject Original Through	
Card/Counter not inserted	The machine is waiting for prepaid card or key.
Coin or amount not inserted	The machine is waiting for coin to be inserted.
Coin/Key Counter not inserted	The machine is waiting for coin or key counter.
Configuring	Setting is being changed.
Cooling Down Fusing Unit	The fusing unit is cooling down.
Cover Open: ADF	The document feeder is open.
Cover Open: Duplex Unit	The cover of the duplex unit is open.

Messages	Description
Cover Open: Finisher	The cover of Finisher is open.
Cover Open: Finisher Front	The front cover of Finisher is open.
Cover Open: Front Cover	The front cover is open.
Cover Open: Interposer Base	The front cover of the interposer unit is open.
Cover Open: Interposer Right	The right cover of the interposer unit is open.
Cover Open: Interposer Tray Low	The lower cover of the interposer unit is open.
Cover Open: Interposer Tray Up	The upper cover of the interposer unit is open.
Cover Open: LCT Front Cover	The front cover of the Large Capacity tray is open.
Cover Open: Mailbox	A cover of Mailbox is open.
Cover Open: Shift Tray Cover	The shift tray cover is open.
Cover Open: Upper Right Cover	The upper right cover is open.
Cover Open: Z-folding Upper	An upper cover of Z fold unit is open.
Data Size Error	The data size error occurred.
Empty: Black Toner	The black toner cartridge is almost empty.
Empty: Cyan Toner	The cyan toner cartridge is almost empty.
Empty: Magenta Toner	The magenta toner cartridge is almost empty.
Empty: Yellow Toner	The yellow toner cartridge is almost empty.
Energy Saver Mode	The machine is in Energy Saver Mode.
Envelope Setting Error: None	Printing paper type other than envelope is instructed when B2 lever is down.
Envelope Setting Error: Others	Printing envelope is instructed when B2 lever is down.
Error	An error has occurred.
Error: Address Book	An error has occurred in the data of the address book.
Error: Command Transmission	An error has occurred in the machine.

Messages	Description
Error: DIMM Value	A memory error occurred.
Error: Ethernet Board	An Ethernet board error has occurred.
Error: HDD Board	A hard disk drive board error has occurred.
Error: Media Link Board	An error has occurred on the media link board.
Error: Memory Switch	A memory switch error has occurred.
Error: Optional Font	An error has occurred in the font file of the machine.
Error: Optional RAM	An error has occurred in the optional memory unit.
Error: Parallel I/F Board	An error has occurred in the parallel interface.
Error: PDL	An error has occurred in the page description language.
Error: Rem. Certificate Renewal	An error has occurred in the remote server renewal.
Error: USB Board	An error has occurred in the USB interface board.
Error: USB Interface	An error has occurred in the USB interface.
Error: Wireless Board	An error has occurred in the wireless interface board or IEEE 802.11 interface unit.
Error: Wireless Card	Wireless card is not inserted during start up, or the IEEE 802.11 interface unit or the wireless card is taken out after start up.
Exceed Booklet Stapling Limit	The printing has exceeded the stapling limit of the booklet finisher.
Exceed Stapling Limit	The printing has exceeded the stapling limit.
Full: Copy Tray	Copy tray is full.
Full: Finisher	Finisher tray is full.
Full: Finisher Booklet Tray	Booklet tray of Finisher is full.
Full: Finisher Shift Tray	Shift tray of Finisher is full.
Full: Finisher Shift Tray 1, 2	The shift tray 1 and 2 of Finisherare full.
Full: Finisher Upper Tray	Finisher's upper tray is full.

Messages	Description
Full: Hole Punch Receptacle	Punch Chip receptacle for hole punch is full.
Full: Log Data Capacity	The log data capacity is full.
Full: Mailbox Tray 1	Mailbox Tray 1 is full.
Full: Mailbox Tray 2	Mailbox Tray 2 is full. Full:
Full: Mailbox Tray 3	Mailbox Tray 3 is full.
Full: Mailbox Tray 4	Mailbox Tray 4 is full.
Full: Mailbox Tray 5	Mailbox Tray 5 is full.
Full: Mailbox Tray 6	Mailbox Tray 6 is full.
Full: Mailbox Tray 7	Mailbox Tray 7 is full.
Full: Mailbox Tray 8	Mailbox Tray 8 is full.
Full: Mailbox Tray 9	Mailbox Tray 9 is full.
Full: Shift Tray	Shift tray is full.
Full: Waste Staples	Waste Staples.
Full: Waste Toner Bottle	Waste toner is full.
Hex Dump Mode	It is a hex dump mode.
Immed. Trans. not connected	It did not connect directly with the other party of the transmission.
Immediate Transmission Failed	An error has occurred while transmitting directly.
In Use: Copier	The copier is being used.
In Use: Fax	The fax is being used.
In Use: Finisher	Other functions is using Finisher.
In Use: Input Tray	Other functions is using the input tray.
In Use: Staple Unit	Other functions is using the staple unit.
Independent-supplier Toner	Toner that is not recommended is set.
Jobs Suspended	All jobs are suspended.

Messages	Description
Key Card not inserted	The machine is waiting for key card to be inserted.
Key Card/Counter not inserted	The machine is waiting for key card or key counter to be inserted.
Key Counter not inserted	The machine is waiting for key counter to be left in it.
Loading Toner	Toner is being supplied.
Log Data Transfer failed	Log transfer has failed.
Low: Black Toner	The black toner cartridge is not set correctly, or toner is almost running out.
Low: Cyan Toner	The cyan toner cartridge is not set correctly, or toner is almost running out.
Low: Magenta Toner	The magenta toner cartridge is not set correctly, or toner is almost running out.
Low: Toner	The toner cartridge is not set correctly, or toner is almost running out.
Low: Yellow Toner	The yellow toner cartridge is not set correctly, or toner is almost running out.
Malfunction: Booklet Processor	There is a problem with booklet finisher.
Malfunction: Duplex Unit	There is a problem with the duplex unit.
Malfunction: Ext. Charge Unit	There is a problem with the external charge unit.
Malfunction: Finisher	There is a problem with the finisher.
Malfunction: Interposer	There is a problem with the interposer.
Malfunction: LargeCapacity Tray	There is a problem with the large capacity tray.
Malfunction:Lower Paper Tray(s)	There is a problem with the bank motor.
Malfunction: Multi-hole Punch	There is a problem with the multi hole punching unit.
Malfunction: Output Tray	There is a problem with the output tray.
Malfunction: Punch Unit	There is a problem with the punch unit.

Messages	Description
Malfunction: Staple Unit	There is a problem with the staple unit.
Malfunction: Tray 1	There is a problem with tray 1.
Malfunction: Tray 2	There is a problem with tray 2.
Malfunction: Tray 3	There is a problem with tray 3.
Malfunction: Tray 4	There is a problem with tray 4.
Malfunction: Z-folding unit	There is a problem with Z-folding unit.
Memory Low: Copy	Memory shortage has occurred while the copy was operating.
Memory Low: Data Storage	Memory shortage has occurred while the document was being accumulated.
Memory Low: Fax Scanning	Memory shortage has occurred while transmitting the fax.
Memory Low: Scanning	Memory shortage has occurred while the scanner was working.
Miscellaneous Error	Other error has occurred.
Mismatch: Paper Size	Indicated paper tray does not contain paper of selected size.
Mismatch: Paper Size and Type	Indicated paper tray does not contain paper of selected size and type.
Mismatch: Paper Type	Indicated paper tray does not contain paper of selected type.
Near Replacing: Black PCU	Prepare the new black photoconductor unit.
Near Replacing: Color Dev. Unit	Prepare the new color development unit.
Near Replacing: Color PCU	Prepare the new color photoconductor unit.
Near Replacing: Develop. Unit C	Prepare the new development unit (cyan).
Near Replacing: Develop. Unit K	Prepare the new development unit (black).
Near Replacing: Develop. Unit M	Prepare the new development unit (magenta).

Messages	Description
Near Replacing: Develop. Unit Y	Prepare the new development unit (yellow).
Near Replacing: Fusing Unit	Prepare the new fusing unit.
Nearly Full: Log Data Capacity	The log is nearing data capacity
Nearly Full: Waste Toner	Waste toner bottle is nearly full.
Need more Staples	Stapler has almost run out of staples.
No Paper: Interposer Tray	There is no paper in interposer unit.
No Paper: Interposer Upper Tray	There is no paper in interposer upper tray.
No Paper: LCT	There is no paper in Large Capacity Tray.
No Paper: Selected Tray	There is no paper in specified tray.
No Paper: Tray 1	There is no paper in tray 1.
No Paper: Tray 2	There is no paper in tray 2.
No Paper: Tray 3	There is no paper in tray 3.
No Paper: Tray 4	There is no paper in tray 4.
Not Detected: B4 Lever	B4 lever is not correctly set.
Not Detected: Black Toner	Black toner is not correctly set.
Not Detected: Cyan Toner	Cyan toner is not correctly set.
Not Detected: Develop. Unit (C)	The development unit (cyan) is not correctly set.
Not Detected: Develop. Unit (K)	The development unit (black) is not correctly set.
Not Detected: Develop. Unit (M)	The development unit (magenta) is not correctly set.
Not Detected: Develop. Unit (Y)	The development unit (yellow) is not correctly set.
Not Detected: Duplex Feed Unit	The duplex unit is not correctly set.
Not Detected: Duplex Unit	The duplex feed unit is not correctly set.
Not Detected: Finisher	Finisher is not correctly set.
Not Detected: Input Tray	The paper feed tray is not correctly set.
Not Detected: InternalPaperPath	The fusing unit is not correctly set.

Messages	Description
Not Detected: Interposer	Interposer unit is not correctly set.
Not Detected: LCT	Large Capacity Tray is not correctly set.
Not Detected: Magenta Toner	Magenta toner is not correctly set.
Not Detected: PCU (C)	The photoconductor unit (cyan) is not correctly set.
Not Detected: PCU (K)	The photoconductor unit (black) is not correctly set.
Not Detected: PCU (M)	The photoconductor unit (magenta) is not correctly set.
Not Detected: PCU (Y)	The tab stock is not correctly set.
Not Detected: Tab Stock	The transfer roller is not correctly set.
Not Detected: Tray 1	Tray 1 is not correctly set.
Not Detected: Tray 2	Tray 2 is not correctly set.
Not Detected: Tray 3	Tray 3 is not correctly set.
Not Detected: Tray 4	Tray 4 is not correctly set.
Not Detected: WasteToner Bottle	Waste toner bottle is not correctly set.
Not Detected: Yellow Toner	Yellow toner is not correctly set.
Not Detected: Z-fold'g Internal	Z-folding unit is not correctly set.
Not Reached, Data Deleted	Unreached job is deleted.
Not Reached, Data Stored	Unreached documents are saved.
Offline	Machine is offline.
Online	Machine is online.
Original on Exposure Glass	The original remains on the exposure glass.
Operating Thermo-range Error	The machine is operating outside the permissible temperature range.
Panel Off Mode	The machine is in Panel-Off mode.
Panel Off Mode>>Printing ava.	The machine is in Control Panel-Off mode.

Messages	Description
Paper in Duplex Unit	The paper remains in the duplex unit.
Paper in Finisher	The paper remains in Finisher.
Paper Misfeed: ADF	The paper has jammed in Document Feeder.
Paper Misfeed: Finisher	The paper has jammed in Finisher.
Paper Misfeed: Input Tray	The paper has jammed in the input tray.
Paper Misfeed: Internal Path	The paper has jammed inside the machine.
Paper Misfeed: Interposer	The paper has jammed in interposerunit.
Paper Misfeed: Mailbox	The paper has jammed in the mailbox.
Paper Misfeed: Z-folding unit	The paper has jammed in Z-folding unit.
Paper Misfeed:Booklet Processor	The paper has jammed in booklet finisher.
Paper on FinisherShiftTray1, 2	The paper remains in Finisher Shift Tray 1 and 2.
Paper on Finisher Shift Tray 2	The paper remains in Finisher Shift Tray 2.
Prepaid Card not inserted	The prepaid card is not inserted, or has insufficient credit.
Print Complete	The print was completed.
Printing	Printing is in progress.
Processing	Data is being processed.
Proxy Address/Port Incorrect	The proxy address and port setting is incorrect.
Proxy User / Password Incorrect	The proxy user name and password setting is incorrect.
RC Gate Connection Error	Failed connection with RC Gate.
Ready	The machine is ready to print.
Remove Bypass paper/Reset jobs	
Renewing Remote Certificate	The remote certificate is being renewed.
Replace Black PCU	It is time to replace the black photoconductor unit.
	J

Messages	Description
Replace Charger Kit	It is time to replace the charger kit.
Replace Cleaning Web	It is time to replace the Cleaning Web.
Replace Develop. Unit	It is time to replace the development unit.
Replace Develop. Unit (Black)	It is time to replace the development unit (black).
Replace Develop. Unit (Color)	It is time to replace the development unit (color).
Replace Develop. Unit (Cyan)	It is time to replace the development unit (cyan).
Replace Develop. Unit (Magenta)	It is time to replace the development unit (magenta).
Replace Develop. Unit (Yellow)	It is exchange time of the development unit (yellow).
Replace Fusing Unit	It is time to replace the fusing unit.
Replace PCU	It is time to replace the photoconductor unit.
Replace PCU (Color)	It is time to replace the photoconductor unit (Color).
Replace Transfer Cleaning Unit	It is time to replace the transfer cleaning unit.
Retarding	Printing has stopped momentarily to allow printed sheets to dry.
SD Card Authentication failed	SD card authentication failed.
SD Card not inserted	The machine is waiting for SD card.
Setting Remotely	The RDS setting is being processed.
Skipped due to Error	Skipped the error.
Storage Complete	The storage is complete.
Storage Failed	The storage has failed.
Supplies Order Call failed	The supply order call has failed.
Suspend / Resume Key Error	Finisher stop button was pressed.
Transmission Aborted	The transmission was interrupted.
Transmission Complete	The transmission completion was completed.
Transmission Failed	The transmission has failed.

Messages	Description
Tray Error: Chaptering	The paper feed tray specification error has occurred because chaptering as well as the normal paper use the same tray for printing.
Tray Error: Duplex Printing	Selected paper tray cannot be used for duplex printing.
Unit Left Open: ADF	Document feeder is opened.
Waiting for Job Suspension	The machine is waiting for Job Suspension.
Warming Up	The machine is warming up.

# **Note**

- For details about UNIX commands, see UNIX Supplement.
- Check the error contents that may be printed in the configuration page. For details about printing a configuration page, see "Printing the Configuration Page", General Settings Guide.

# **Printer configuration**

You can check the printer configuration using telnet.

This section explains the checking procedure for input/output tray and printer language.

- UNIX: Use the "info" command and "rsh", "rcp", "ftp", and "sftp" parameters.
- mshell: Use the "info" command.

# Input Tray

ltem	Description
No.	ID number of the paper tray
Name	Name of the paper tray
PaperSize	Size of paper loaded in the paper tray
Status	Current status of the paper tray <ul> <li>Normal: Normal</li> <li>NoInputTray: No tray</li> <li>PaperEnd: No paper</li> </ul>

Output	Tray
--------	------

ltem	Description
No.	ID number of the output tray
Name	Name of the output tray
Status	Current status of the output tray
	Normal: Normal
	PaperExist: Paper exist
	OverFlow: Paper is full
	• Error: Other errors

# Printer Language

ltem	Description
No.	ID number of the printer language used by the printer
Name	Name of the printer language used in the printer
Version	Version of the printer language

# **Vote**

• For details about UNIX commands and parameters, see UNIX Supplement.

# **Understanding the Displayed Information**

This section explains how to read status information returned by the network interface board.

# **Print Job Information**

Use the following command to display print job information:

- UNIX: Use the "info" command and "rsh", "rcp", "ftp", and "sftp" parameters.
- mshell: Use the "info" command.

ltem	Description
Rank	<ul> <li>Print job status.</li> <li>Active <ul> <li>Printing or preparing for printing.</li> <li>1 st, 2nd, 3rd, 4th</li> <li>Waiting to be transferred to the printer.</li> </ul> </li> </ul>
Owner	Print request user name.
Job	Print request number.
Files	The name of the document.
Total Size	The size of the data (spooled). The default is 0 bytes.

# Note

• For details about UNIX commands and parameters, see UNIX Supplement.

# **Print Log Information**

This is a record of the most recent jobs printed.

Use the following command to display print log information:

- UNIX: Use the "prnlog" command and "rsh", "rcp", "ftp", and "sftp" parameters.
- telnet : Use the "prnlog" command.

ltem	Description
ID	Print request ID.
User	Print request user name.
Page	Number of pages printed
Result	Print Request Result
	<ul> <li>Communication Result</li> <li>OK <ul> <li>Print was completed normally. However, the print result may not be as required due to printer problems.</li> <li>NG</li> <li>Printing was not completed normally.</li> <li>Canceled <ul> <li>An "rcp", "rsh", or "lpr" command print request was canceled, possibly due to the printing application. Not applicable to the "ftp" or "rprinter" command.</li> </ul> </li> </ul></li></ul>
Time	Time the print requested was received. Time of print request reception
User ID (when designating Job ID on telnet)	Printer driver-configured User ID. Appears when the print request ID is specified.
JobName (when designating Job ID on telnet)	Name of the document for printing Appears when the print request ID is specified.

# Note

• For details about UNIX commands and parameters, see UNIX Supplement.

# Configuring the Network Interface Board

Use the following command to display network interface board settings:

• telnet : Use the "show" command.

ltem		Description
Common		
Mode		
Protocol Up/I	Down	Protocol Settings
AppleTall	x	
IPv4		
IPv6		
IPsec		
NetWare		
SMB		
PictBridge	)	
Device Up/D	own	Device Settings
Parallel		
USB		
Bluetooth		
Ethernet interf	ace	
Syslog priority	/	
NVRAM versi	on	
Device name		
Comment		
Location		
Contact		
Soft switch		
AppleTalk		AppleTalk settings
Mode		
Net		

	ltem	Description
	Object	
	Туре	
	Zone	
TC	P/IP	TCP/IP settings
	Mode(IPv4)	
	Mode(IPv6)	
	ftp	
	lpr	
	rsh	
	telnet	
	diprint	
	web	
	http	
	ftpc	
	snmp	
	ірр	
	autonet	
	bonjour	
	ssl	
	nrs	
	rfu	
	nbt	
	ssdp	
	ssh	
	sftp	

,	ltem	Description
	WS-Device	
	WS-Print	
	rhpp	
IPv4		
	DHCP	
	Address	
	Netmask	
	Broadcast	
	Gateway	
IPvć	>	
	Stateless	
	Manual	
	Gateway	
	ЕпсарТуре	
	DHCPv6-lite	
	DUID	
	DHCPv6 option lifetime	
IPse	c	
	Manual Mode	
	Excluded Protocol	
	https	
	dns	
	dhcp	
	wins	
Enco	арТуре	

	ltem	Description
	Host name	
	DNS Domain	
	Access Control	Access Control settings
	IPv4	X can be set between 1 and 5.
	AccessEntry[X]	
	IPv6	
	AccessEntry[X]	X can be set between 1 and 5.
	SNTP Server	Time settings
	Time Zone	
	SNTP Server polling time	
	SYSLOG server	Websys settings
	Home page URL1	
	Home page linkname l	
	Home page URL2	
	Home page linkname2	
	Help page URL	
	IPDS Port	
	IPDS timeout	
	RHPP Port	
	RHPP timeout	
Ne	btWare	
	EncapType	
	RPRINTER number	
	Print server name	
	File server name	
	1	

ltem		Description
C	ontext name	
Sv	witch	
	Mode	
	NDS/Bindery	
	Packet negotiation	
	Login Mode	
Pr	int job timeout	
Pr	otocol	
SA	AP interval time	
N	DS Tree Name	
Tr	ansfer Protocol	
SMB		SMB settings
Sv	witch	
	Mode	
	Direct print	
	Notification	
W	/orkgroup name	
C	omputer name	
C	omment	
Sł	nare name[1]	
Pr	otocol	
Wirele	ess LAN	Wireless LAN settings
H	ost Name	
C	ommunication Mode	
SS	SID	

ltem	Description
Channel	
Security	
WEP Authentication	
WEP Encryption key number	
WEP Encryption key number [X]	X can be set between 1 and 4.
WEP Encryption	
WPA Encryption	
WPA Authentication	
Pre-Shared Key	
User name	
Domain name	
ЕАР Туре	
Password	
Phase 2 user name	
Phase 2 Method TTLS	
Phase 2 Method PEAP	
Server cert.	
IntermediateCA	
Server ID	
Sub domain	
MIC check	
DNS	DNS settings
IPv4	
Server[X]	X can be set between 1 and 3.
Selected IPv4 DNS Server	

ltem		ltem	Description
	IPv	6	
		Server[X]	X can be set between 1 and 3.
		Selected IPv6 DNS Server	
	Res	solver Protocol	
Dor	nair	n Name	
	eth	er	
	wlo	n	
DDI	NS		
	eth	er	
	wlo	n	
WI	WINS		WINS settings
	eth	er	
		Primary WINS	
		Secondary WINS	
	wlo	n	
		Primary WINS	
		Secondary WINS	
Blue	etoo	th	Bluetooth settings
	Blu	etooth mode	Bluetooth connection mode
SSD	OP		SSDP settings
	UUID		
	Profile		
	TTL		
UPn	UPnP		UPnP settings
	URL		

Description
Bonjour (Redezvous) settings
SNMP settings
ssh settings

ltem	Description
AuthFree	Authfree settings
IPv4	
AuthFreeEntry[X]	X can be set between 1 and 5.
IPvó	
AuthFreeEntry[X]	X can be set between 1 and 5
Parallel	
USB	
LPR	
lprm check host	
lpr prnerr chk	
Certificate	
Verification	
WS-MFP	
Network Device Name	
Comments	
Location	
Presentation URL	
WS-Device TCP Port	
WS-Printer TCP Port	
WS-Printer Job Timeout	
MetadataVersion	
UUID	
Shell mode	Remote maintenance tool mode

# **Message List**

This is a list of messages that appear in the machine's system log. The system log can be viewed using the "syslog" command.

# System Log Information

Use the following command to display the system log information:

- UNIX: Use the "syslog" command and "rsh", "rcp", "ftp", and "sftp" parameters.
- telnet: Use the "syslog" command.

Message	Problem and solutions
account is unavailable: Same account name be used.	User account is disabled. This could be because it use the same account name as the administrator account.
account is unavailable: The authentication password is not set up.	User account is disabled. This could be because the authentication password is not set, and only the encryption account is set.
account is unavailable: encryption is impossible.	Encryption is not possible and account is disabled. This could be because: • Security option is not installed. • Encryption password has not been specified.
add_sess_IPv4: bad trap <ipv4 address=""> community <community name=""></community></ipv4>	The IPv4 address (0.0.0.0.) is unavailable when the community access type is TRAP. Specify the host IPv4 address for the TRAP destination.
add_sess_IPv6: bad trap <ipv6 address=""> community <community name=""></community></ipv6>	The IPv6 address [::] is unavailable when the community access type is TRAP. Specify the host IPv6 address for the TRAP destination.
add_sess_IPv4: community <community name=""> already defined.</community>	The same community name already exists. Use another community name.
add_sess_IPv6: community <community name=""> already defined.</community>	The same community name already exists. Use another community name.
add_sess_IPX: bad trap <ipx address=""> community <community name=""></community></ipx>	The IPX address (00:00:00:00:00) is unavailable when the community access type is

Message	Problem and solutions
	TRAP. Specify the host IPX address for the TRAP destination.
add_sess_ipx: community <communityname> already defined.</communityname>	The same community name already exists. Use another community name.
adjust time server <ntp name="" server=""> offset: xx sec.</ntp>	ncsd tells you the timing of the NTP server and whether or not the time system clock is set.
	NTP Server: NTP server name
	offset: number of seconds of delay (minus number if a time in advance is specified)
authenticated	The supplicant is authenticated.
authenticating	The supplicant is authenticating with the access point (EAP or WPA).
Authentication mode mismatch	The authentication mode of the access point is different from the authentication mode of the supplicant.
	Use the authentication mode between the access point and the supplicant.
Client EAP method rejected	The authentication mode of the access point is different with the authentication mode of the supplicant.
	Use the same authentication mode between the access point and the supplicant.
Client password rejected	The client's password was rejected. Check the client password.
Client TLS certificate rejected	The client's TLS certificate was rejected. Check the certificate.
cipher suite mismatch	The uni-cast / multi-cast suite (TKIP/AES/WEP) of the access point is different from the suite used by the supplicant.
connecting	The supplicant is waiting for wireless connection to the access point.

Message	Problem and solutions
Current Interface Speed: xxxMbps	Speed of the network (10Mbps, 100 Mbps, or 1Gbps).
Duplicate IP = <ip address=""> (from <mac address="">).</mac></ip>	The same IP address (IPv4, or IPv6 address) was used. Each IP address (IPv4, or IPv6 address) must be unique. Check the address of the device indicated in [MAC address].
IEEE 802.11 Card does NOT support WPA .	A wireless card that does not support WPA is installed. Install a wireless card that supports WPA.
IEEE 802.11 Card Firmware REV. <version></version>	Displays the version number of the 802.11 card's firmware.
IEEE 802.11 card removed	The wireless card managed by the supplicant has been removed.
IEEE 802.11 current channel <channel nember=""></channel>	Displays the current channel number of the active wireless card (in ad hoc and infrastructure mode).
IEEE 802.11 interface down	The IEEE 802.11 interface managed by the supplicant is disabled, or cannot connect to the access point.
IEEE 802.11 interface up	The IEEE 802.11 interface managed by the supplicant is enabled, or is connected to the access point.
IEEE 802.11 MAC Address = <mac address=""></mac>	Displays the MAC address of the wireless interface.
IEEE 802.11 SSID <ssid> (AP MAC Address <mac address="">)</mac></ssid>	The MAC address and SSID of the access point are connected in infrastructure mode.
IEEE 802.11 <communication mode=""> mode</communication>	Displays IEEE 802.11 communication mode.
inetd start.	The inetd service has started.
Interface (interface name): Duplicate IP Address ( <ip address="">).</ip>	The same IP (IPv4 or IPv6) address was used. Each IP address must be unique. Check the address of the device indicated in [IP address].
< Interface > started with IP: < IP address >	IP address (IPv4 or IPv6 address) has been set for the interface and is operating.

Problem and solutions
The same IP address (IPv4, orIPv6 address) and the subnet mask is used with other device.
The LEAP challenge to the access point has failed.
The supplicant using TKIP has detected two instances of tampering within 60 seconds and has started counter measures.
Counter measures have stopped after 60 seconds (since the supplicant using TKIP started counter measures against tampering).
The supplicant has received a message reporting that a usable RADIUS server cannot be found.
PEAP/GTC (Generic Token Card) is selected, but a smart card using GTC authentication cannot be found.
There is no WPA information on the response from the SSID probe of the access point you want to use. The supplicant is rescanning.
The server ID is disabled. Check the server authentication.
The server ID is disabled. Check the server authentication.
The RADIUS server cannot be trusted.
The requested community name is not defined.
The requested community name is not defined.
The requested community name is not defined.
The smbd service has started.
The SMTP server IP address could not be obtained. This could be because: • The specified DNS server could not be found.

Message	Problem and solutions
	<ul> <li>No connection to the network has been established.</li> </ul>
	• The specified DNS server could not be found.
	• An incorrect DNS server is specified.
	• The specified SMTP server IP address could not be found in the DNS server.
SMTPC: failed to connect smtp server. timeout.	Connection to the SMTP server failed due to timeout. This could be because the specified SMTP server name is incorrect, or no connection to the network has been established, or the network configuration is incorrect, so there is no response from the SMTP server. Check the SMTP server name, or the network connection and configuration.
SMTPC: refused connect by smtp server.	Connection to the SMTP server is denied. This could be because server other than the SMTP server has been specified, or the specified SMTP server port number is incorrect. Check the SMTP server name, port number, or the SMTP server port number.
SMTPC: no smtp server. connection close.	Connection to the SMTP server failed due to no response from SMTP. This could be because a server other than the SMTP server has been specified, or the specified SMTP server port number is incorrect. Check the SMTP server name, port number, or the SMTP server port number.
SMTPC: failed to connect smtp server.	Connection to the SMTP server failed. This could be because no connection to the network has been established, or the network configuration is incorrect, so there is no response from the SMTP server, or the specified SMTP server name is incorrect, or the specified SMTP server IP address could not be found in the DNS server, or a server other than the SMTP server has been specified, or the specified SMTP server port number is incorrect. Check the DNS Server's IP address and SMTP server's IP address, or the SMTP server name and SMTP port number, or the SMTP server's SMTP port

Message	Problem and solutions
	number, or the network connection and configuration.
SMTPC: username or password wasn't correct. [response code] (information)	Connection to the SMTP server failed, because the specified SMTP user name is incorrect, or the specified SMTP password is incorrect. Check the SMTP user name and password.
Snmp over IPv4 is ready	Communication over IPv4 with snmp is available.
Snmp over IPv6 is ready.	Communication over IPv6 with snmp is available.
Snmp over ipx is ready.	Communication over IPX with snmp is available.
snmpd start.	The snmpd service has started.
started.	The direct print service has started.
Started.	The bonjour (rendezvous) function is enabled.
stopped	The supplicant is terminating.
success key received	The supplicant received the EAP-Success key.
success but invalid key	The supplicant received a message reporting that EAP authentication was successful, but the EAPOL key was invalid.
Terminated.	The bonjour (rendezvous) function is disabled.
There is problem in dhcp server operation.	There is a problem with the DHCP server. If multiple DHCP servers are active on the network, check that they are assigning unique IP addresses to each machine.
trap account is unavailable.	v3Trap cannot be sent. This could be because the Trap destination account is different from the account specified by the printer.
unauthenticated	The authentication failed. The supplicant was denied access to the access point, or was not authenticated.
waiting for keys	The supplicant is waiting for the session key.
WPA supplicant started	The WPA supplicant has started.

Message	Problem and solutions
WPA supplicant unbound	The WPA supplicant is not connected to the unbound access point.
WS-Device started.	WS-Device has started.
WS-Printer started.	WS-Printer has started.

# **Vote**

• For details about UNIX commands and parameters, see UNIX Supplement.

2. Monitoring and Configuring the Printer

# 3. Special Operations under Windows

# **Printing Files Directly from Windows**

You can print files directly using Windows commands. For example, you can print PostScript files for PostScript 3.

### Windows 95/98/Me

You can print files directly using ftp or sftp command.

#### Windows 2000/XP/Vista, Windows Server 2003, Windows NT 4.0

You can print files directly using lpr, rcp ftp or sftp command.

# Setup

Follow the procedure below to make network environment settings.

1. Enable TCP/IP with the control panel, and then set up the printer's network environment about TCP/IP including IP addresses.

TCP/IP of the printer is set as default.

2. Install a TCP/IP in Windows to set up the network environment.

Consult the network administrator for the local setting information.

 To print under Windows 2000/XP/Vista, Windows Server 2003, install "Printing service for UNIX" as the network application. To print under Windows NT 4.0, install "Microsoft TCP/IP printing" as the network application.

# Reference

• p.144 "Using DHCP"

# Using a Host Name Instead of an IPv4 Address

When a host name is defined, you can specify a printer by host name instead of IP address. The host names vary depending on the network environment.

### When using DNS

Use the host name set to the data file on the DNS server.

# When setting the IPv4 address of a printer using DHCP

Use the printer name on the configuration page as the host name.

#### Vote

 For details about printing a configuration page, see "Printing the Configuration Page", General Setting Guide.

# In other cases

Add the IP address and host name of the network printer to the hosts file on the computer used for printing. Methods of addition vary depending on operating systems.

### Windows 95/98/Me

- Copy \WINDOWS\HOSTS.SAM to the same directory and name it "HOSTS" with no extension.
- 2. Open the "\WINDOWS\HOSTS" file created using memo pad files, for instance.
- 3. Add an IP address and host name to the hosts file using the following format:

192.168.15.16 host # NP

"192.168.15.16" is the IP address, "host" is the printer's host name, and "#NP" is replaced by comments. Insert a space or tab between "192.168.15.16" and "host", between "host" and "#NP" respectively, using one line for this format.

4. Save the file.

#### Windows 2000/XP/Vista, Windows Server 2003, Windows NT 4.0

1. Open the hosts file using memo pad files, for instance.

The hosts file is in the following folder:

\WINNT\SYSTEM32\DRIVERS\ETC\HOSTS

"\WINNT" is the directory of the installation destination for Windows 2000/XP, Windows Server 2003, and Windows NT 4.0.

2. Add an IPv4 or IPv6address and host name to the hosts file using the following format:

192.168.15.16 host # NP

"192.168.15.16" is the IPv4 address, "host" is the printer's host name, and "#NP" is replaced by comments. Insert a space or tab between "192.168.15.16" and "host", between "host" and "#NP" respectively, using one line for this format.

2001:DB::100 host # NP

"2001:DB::100" is the IPv6 address, "host" is the printer's host name, and "#NP" is replaced by comments. Insert a space or tab between "2001:DB::100" and "host", between "host" and "#NP" respectively, using one line for this format.

### 3. Save the file.

### Vote

 When using a host name under Windows Server 2003 with IPv6 protocol, perform host name resolution using an exrernal DNS server. The host file cannot be used.

# **Printing Commands**

The following explains printing operations using the "lpr", "rcp", "ftp" and "sftp" commands.

Enter commands using the command prompt window. The location of the command prompts varies depending on operating systems:

- Windows 95/98
  - [Start] [Programs] [MS-DOS Prompt]
- Windows Me

[Start] - [Programs] - [Accessories] - [MS-DOS Prompt]

• Windows 2000

[Start] - [Programs] - [Accessories] - [Command Prompt]

- Windows XP, Windows Vista, Windows Server 2003
  - [Start] [All Programs] [Accessories] [Command Prompt]
- Windows NT 4.0

[Start] - [Programs] - [Command Prompt]

# **Vote**

- Match the data format of the file to be printed with the emulation mode of the printer.
- If the message "print requests full" appears, no print jobs can be accepted. Try again when sessions end. For each command, the amount of possible sessions is indicated as follows:
  - Ipr: 5(When the spool printing function is available: 10)
  - rcp, rsh: 5
  - ftp: 3
  - sftp: 3
- Enter the file name in a format including the path from the directory executing commands.
- The "option" specified in a command is an intrinsic printer option and its syntax is similar to printing from UNIX. For details, see UNIX Supplement.

# lpr

#### When specifying a printer by IP address

```
c:> lpr -Sprinter's IP address [-Poption] [-ol] \pass name\file name
```

When using a host name instead of an IP address

c:> lpr -Sprinter's host name [-Poption] [-ol] \pass name\file name

When printing a binary file, add the "-ol" option (lowercase O, and lowercase L).

When using a printer with the host name "host" to print a PostScript file named "file 1" located in the "C: \PRINT" directory, the command line is as follows:

c:> lpr -Shost -Pfiletype=RPS -ol C:\PRINT\file1

#### Printing from the virtual printer

C:\>lpr -S "printer's IP address" [-P**virtual printer name**] [-ol] \path name\file name

Note

 For details about the virtual printer configuration, see "Using the Virtual Printer", Printer Reference.

#### rcp

First, register the printer's host name in the hosts file.

```
c:> rcp [-b] \pass name\file name [pass name\file name...] printer's host name:
[option]
```

In file names, "\*" and "?" can be used as wild cards.

When printing a binary file, add the "-b" option.

When using a printer with the host name "host" to print a PostScript file named "file 1" or "file 2" located in the "C:\PRINT" directory, the command line is as follows:

c:> rcp -b C:\PRINT\file1 C:\PRINT\file2 host:filetype=RPS

#### Printing from the virtual printer

c:> rcp [-b] \path name\file name [\path name\file name...] printer's host name: ["virtual printer name"]

\rm Note

 For details about the virtual printer configuration, see "Using the Virtual Printer", Printer Reference.

# Reference

p.131 "Using a Host Name Instead of an IPv4 Address"

# ftp / sftp

Use the "put" or "mput" command according to the number of files to be printed.

# When one file is printed

ftp> put \pass name\file name [option]

#### Printing from the virtual printer

ftp> put \path name\file name [virtual printer name]

# When multiple files are printed

ftp> mput \pass name\file name [\pass name\file name...] [option]

Follow the procedure below to print using the "ftp" command.

 Formulate the printer's IP address or the host name of the hosts file printer as an argument and use the "ftp" command.

% ftp printer's IP address

2. Enter the user name and password, and then press the [Enter] key.

For details about the user name and password, consult your network administrator.

User:

Password:

When user authentication is set, enter a login user name and password.

3. When printing a binary file, set the file mode to binary.

ftp> bin

When printing a binary file in ASCII mode, print may not come out correctly.

4. Specify files to be printed.

The following shows the examples of printing a PostScript file named "file 1" in the "C:\PRINT" directory and printing file 1 and file 2.

ftp> put C:\PRINT\file1 filetype=RPS

ftp> mput C:\PRINT\file1 C:\PRINT\file2

5. Quit ftp.

ftp> bye

# **Vote**

- "=", ",", "\_", and ";" cannot be used for filenames. File names will be read as option strings.
- If you are using ftp, you cannot specify an option using the "mput" command.
- If you are using ftp, you cannot specify an option using the "pwd" command.
- If you are using sftp, you cannot specify an option using the "cd" command.
- If you are using sftp, you cannot specify an option using the "pwd" command.

- If personal authentication (Basic, Windows, LDAP, or Integrated Server Authentication) is enabled, only authenticated users (users authenticated by login user name and password) can log on.
- For "mput" command, "\*" and "?" can be used as wild cards in file names.
- When printing a binary file in ASCII mode, print may not come out correctly.
- For details about registering the machine's host name to the host file, see "Using a Host Name Instead of an IPv4 Address".
- For details about login user name and password, see Security Reference, which is the administrator's manual.
- For details about the virtual printer configuration, see "Using the Virtual Printer", Printer Reference.

# **Printing with Bluetooth Connection**

This describes how to print with Bluetooth devices.

# **Supported Profiles**

The following profiles are supported:

- SPP (Serial Port Profile)
- HCRP (Hardcopy Cable Profile)
- BIP (Basic Imaging Profile)

### Restrictions on SPP, HCRP

- A maximum of two Bluetooth adaptor or Bluetooth-equipped computers can be connected at the same time using the Bluetooth interface: one by SPP, one by HCRP.
- When connecting more than one Bluetooth adaptor or Bluetooth-equipped computer at the same time, the first device that establishes connection is selected. When selecting the connection between the other devices, cancel the first established connection.
- SPP connection does not support bidirectional communications.
- HCRP connection supports bidirectional communications.

#### **Restrictions on BIP**

- For BIP connection, a module including PostScript 3 must be installed in the machine.
- Only one Bluetooth adaptor or Bluetooth-equipped computer can be connected via BIP.
- Only JPEG images can be printed using BIP.
- User codes are disabled for BIP.
- You cannot print if print functions are restricted.
- Some printers do not support BIP.

Instructions in this manual relate to printing via HRCP. To print using SPP or BIP, see the Help supplied with the Bluetooth adapter you want to use, or the Microsoft Web site.

# Adding a Bluetooth Printer

The following procedures explain how to install a Bluetooth printer on a computer that is running Windows XP or Windows Vista.

If your computer is running SP1 or an earlier version of Windows XP, there are additional applications that you must install. For details about these, see the Help supplied with your Bluetooth device.

# Coloritant 🗋

- To perform a printer installation, your account must have Manage Printers permission. Log on as an Administrators or Power Users group member.
- To connect to a Bluetooth printer, your computer must have a Bluetooth device installed. Make sure a Bluetooth device is installed on your computer.

# Windows XP

- On the [Start] menu, click [Printers and Faxes].
  - The [Printers and Faxes] window appears.
- 2. Click [Add a printer].

The [Add Printer Wizard] window opens.

- 3. Click [Next > ].
- 4. Click [Bluetooth Printer], and then click [Next >].

The computer begins searching for available Bluetooth printers.

If a new printer is discovered, the [Found New Hardware Wizard] window appears. To ignore a discovered device and continue searching, click [Cancel]. The computer resumes searching for other available Bluetooth printers.

- 5. Click [No, I will not connect], and then click [Next >].
- 6. Click [Install from a list or specific location (Advanced)], and then click [Next >].
- 7. Insert the CD-ROM provided with this machine into your computer's CD-ROM drive, select the [Search removable media (floppy, CD-ROM...)] check box, and then click [Next >].
- 8. If the [Hardware Installation] window appears, click [Continue].
- 9. If the installation was successful, click [Finish].
- 10. Select [Test Print], and then click [Next >].
- 11. Click [Finish].

# Note

- Actual Bluetooth printer operations will vary according to your Bluetooth device and/or Bluetoothinstalled computer. For details, see the Help supplied with your Bluetooth device and/or Bluetoothequipped computer.
- After printing the test page, check it, and then click [Close] to close the window.
- If there is a problem with the test page, click [Troubleshooting] in the test print window.

# Windows Vista

# 🔁 Important

- To perform a printer installation, your account must have Manage Printers permission. Log on as an Administrators or Power Users group member.
- 1. On the [Start] menu, click [Control Panel].
- 2. In the "Hardware and Sound" area, click [Printers].
- 3. In the top part of the window, click [Add a printer].
- 4. In the [Add Printer] window, select [Add a network, wireless or Bluetooth printer], and then click [Next].

The computer begins searching for available Bluetooth devices.

From the list of discovered devices, select the printer you want to use, and then click [Next >].

All discovered wireless printers appear in the list of discovered printers, not only Bluetooth printers. Make sure the printer you select is a Bluetooth printer.

- 6. Insert the CD-ROM provided with this machine into your computer's CD-ROM drive, and then click [Browse my computer for driver software (advanced)] on the [Found New Hardware] display.
- 7. In the [Found New Hardware] window, select the printer driver you want to use, and then click [Next].

The printer driver installation starts.

- 8. If the [Windows Security] window appears, click [Install this driver software anyway].
- 9. Click [Close].
- If you want to change the printer name, enter the new name in the [Printer Name Settings] window.
- 11. If you want to print a test page, click [Printing Test Page] on the "Test Print" page.

Otherwise, click [Finish].

# Note

- If you print the test page, after checking it, click [Close] to close the test print window.
- If there is a problem with the test page, click [Troubleshooting Printer Problems] in the test print window.

3. Special Operations under Windows

# 4. Appendix

# When Using Windows Terminal Service/ MetaFrame

The following explains how to use Windows Terminal Service and Maintenance.

# **Operating Environment**

The following operating systems and MetaFrame versions are supported.

# Windows NT Server 4.0 Terminal Server Edition

- MetaFrame 1.8 SP3 / FR1+SP3 / SP4
- MetaFrame XP 1.0 SP1 / SP2 / FR1

### Windows 2000 Server / Advanced Server

- MetaFrame 1.8 SP3 / FR1+SP3 / SP4 / FR1+SP4
- MetaFrame XP 1.0 SP1 / SP2 / FR1 / FR1+SP2 / FR2 / SP3 / FR2+SP3 / FR3
- MetaFrame Presentation Server 3.0
- Citrix Presentation Server 4.0

# Windows 2003 Server

- MetaFrame XP 1.0 FR3
- MetaFrame Presentation Server 3.0
- Citrix Presentation Server 4.0

# **Supported Printer Drivers**

### When Windows Terminal Service is operating

- PCL drivers
- PostScript 3
- RPCS drivers

# Note

• Some RPCS printer driver functions do not work if Windows Terminal Service is installed.

# Limitations

The following limitations apply to the Windows Terminal Service environment.

These limitations are built in Windows Terminal Service or MetaFrame.

## Windows Terminal Service

In the Windows Terminal Service environment, some of the printer driver's functions is unavailable. In an environment where Windows Terminal Service is installed, some of the printer driver's functions is unavailable, even if any function of Windows Terminal Service is not used. When you install SmartDeviceMonitor for Client in an environment where the Terminal Service is running on a Windows NT Server 4.0 Terminal Server Edition or the Windows 2000 Server family computer, be sure to install it using the install mode. The following are the two methods of installation using the install mode:

1. Use [Add/Remove Programs] in [Control Panel] to install SmartDeviceMonitor for Client.

2. Enter the following command in the MS-DOS command prompt:

To quit the install mode, enter the following command in the MS-DOS command prompt.

### MetaFrame's [Auto-creating client printers]

Using [Auto-creating client printers] can select a logical printer created by copying the client's local printer data to the MetaFrame server. We strongly recommend testing this function in your network environment before using it for your work.

- The settings for optional equipment will not be stored in the server after the equipment is disconnected. The settings for optional equipment will be restored to its defaults each time the client computer logs on to the server.
- When printing a large number of bitmap images or using the server in a WAN environment over dial-up lines such as ISDN, printing may not be possible or errors may occur, depending on data transfer rates.
- When using MetaFrame XP 1.0 or higher versions, we recommend making settings in [Client Printer bandwidth] under [Citrix Management Console] according to the environment.
- If a print error occurs on the server and the print job or a printer created in [Auto-creating client printers] cannot be deleted, we recommend the following:
  - MetaFrame 1.8 SP3, MetaFrame XP 1.0 SP1/FR1

Make settings in [Delete unfinished print jobs] in the registry. For details, see the Readme file provided with MetaFrame.

MetaFrame XP 1.0 FR2

Make settings in [Delete pending print jobs at logout] under [Printer Properties Management] of Citrix Management Console.

#### MetaFrame's [Printer driver replication]

Using [Printer driver replication] can distribute printer drivers across all servers in a server farm. We strongly recommend testing this function in your network environment before using it for your work.

• If the printer drivers are not properly copied, install them directly onto each server.

4

## Using DHCP

You can use the printer in a DHCP environment. You can also register the printer NetBIOS name on a WINS server when it is running.

- Printers that register the printer NetBIOS name on a WINS server must be configured for the WINS server.
- Supported DHCP servers are Microsoft DHCP Server included with Windows 2000 Server, Windows Server 2003, and Windows NT 4.0, and the DHCP server included with NetWare and UNIX.
- If you do not use the WINS server, reserve the printer's IP address in the DHCP server so the same IP address is assigned every time.
- To use the WINS server, change the WINS server setting to "active" using the control panel.
- Using the WINS server, you can configure the host name via the remote network printer port.
- DHCP relay-agent is not supported. If you use DHCP relay-agent on a network via ISDN, it will result in increased line charges. This is because your computer connects to the ISDN line whenever a packet is transferred from the printer.
- If there is more than one DHCP server, use the same setting for all servers. The machine operates using data from the DHCP server that responds first.
- DHCP servers can operate in an IPv6 environment, but they cannot be configured to allocate IPv6 addresses or obtain host names.

#### Using AutoNet

If the printer IPv4 address is not automatically assigned by the DHCP server, a temporary IP address starting with 169.254 and not used on the network can be automatically selected by the printer.

#### **Vote**

- The IP address assigned by the DHCP server is given priority over that selected by AutoNet.
- You can confirm the current IPv4 address on the configuration page. For more information about the configuration page, see General Settings Guide.
- When AutoNet is running, the NetBIOS name is not registered on the WINS server.
- The machine cannot communicate with devices that do not have the AutoNet function. However, this machine can communicate with Macintosh computers running Mac OS X 10.2.3. or higher.

## **Configuring the WINS Server**

The printer can be configured to register its NetBIOS name with a WINS server when the power is turned on. This enables the NetBIOS name of the printer to be specified from SmartDeviceMonitor for Admin even in a DHCP environment.

This section explains configuring the WINS server.

#### **Note**

- The WINS server is supported with Windows NT 4.0 Server Service Pack 4 or higher, and Windows 2000 Servers WINS Manager.
- For details about the WINS server settings, see Windows Help.
- If there is no reply from the WINS server, the NetBIOS name is registered by broadcast.
- The NetBIOS name can be entered using up to 13 alphanumeric characters.

#### Using Web Image Monitor

- 1. Start a Web browser.
- 2. Enter "http://(machine's IP address or host name) /" in the address bar to access the printer whose settings you want to change.

Top Page of Web Image Monitor appears.

3. Click [Login].

The dialog box for entering the user name and password appears.

4. Enter the user name and password, and then click [Login].

Contact your administrator for information about the settings.

- 5. In the left area, click [Configuration], and then click [Network].
- 6. Click [TCP/IP].
- Check that [Enable] is selected for [WINS] in the [Ethernet + Wireless LAN] column, and then enter the WINS server IPv4 address in [Primary WINS Server] and [Secondary WINS Server].
- 8. Click [Apply].
- 9. Quit Web Image Monitor.

#### Using telnet

You can also use telnet to configure WINS.

4

## Using the Dynamic DNS Function

Dynamic DNS is a function which dynamically updates (registers and deletes) records (A record, AAAA record, CNAME, and PTR record) managed by the DNS server. When a DNS server is part of the network environment to which this printer, a DNS client, is connected, records can be dynamically updated using this function.

## Updating

Updating procedure varies depending on whether the printer IP address is static or acquired by DHCP.

#### 🔂 Important

• Dynamic update using message authentication (TSIG, SIG(0)) is not supported.

#### For a static IPv4 setting

If the IP address or host name is changed, the A and PTR records are updated. If the A record is registered, CNAME is also registered. CNAMEs that can be registered are as follows:

• Ethernet and IEEE 802.11

RNPXXXXXX (XXXXXX represents the last 3 hexadecimal bytes of the MAC address)

However, if CNAME (PRNXXXXX) overlaps with the host name, CNAME will not be registered.

#### For DHCPv4 settings

As a substitute for the printer, the DHCP server updates the record, and one of the following occurs:

- When the printer acquires the IP address from the DHCP server, the DHCP server updates the A and PTR records.
- When the printer acquires the IP address from the DHCP server, the printer updates the A record, and the DHCP server updates the PTR record.

If the A record is registered, CNAME is also registered. CNAMEs that can be registered are as follows:

• Ethernet and IEEE 802.11

RNPXXXXXX (XXXXXX represents the last 3 hexadecimal bytes of the MAC address)

#### For IPv6 settings

This machine updates the AAAA record and PTR record.

It also updates CNAME when the AAAA record is updated.

When a stateless address is newly set, it is automatically registered on the DNS server also.

#### • Note

- When the dynamic DNS function is not used, records managed by the DNS server must be updated manually, if the printer's IP address is changed.
- To update the record using the printer, the DNS server has to have one of the following:

- No security settings made.
- If security settings are made, an IP-specified client (this printer) permits updating.

#### DNS servers targeted for operation

#### For static IP setting

- Microsoft DNS servers with standard Windows 2000 Server/Windows Server 2003 features
- BIND 8.2.3 or higher

#### For DHCP setup, when the printer updates the A record

- Microsoft DNS servers with standard Windows 2000 Server/Windows Server 2003 features
- Microsoft DNS servers with standard Windows 2000 Server/Windows Server 2003 features

#### For DHCP setup, when the DHCP server updates records

- Microsoft DNS servers with standard Windows 2000 Server/Windows Server 2003 features
- BIND 8.2.3 or higher
- DNS servers with standard NetWare 5 (or a higher version) features

#### For IPv6 setting

- Microsoft DNS servers with standard Windows Server 2003 features
- BIND 9.2.3 or higher

#### DHCP servers targeted for operation

As a substitute for the printer, DHCP servers capable of updating the A record and PTR record are as follows:

- Microsoft DHCP servers with standard Windows 2000 Server (Service Pack 3 or higher versions)/ Windows Server 2003 features
- ISC DHCP 3.0 or higher
- DHCP server with standard NetWare 5 features

#### Setting the dynamic DNS function

Make settings with telnet using the "dns" command.

Note

• For details, see "Remote Maintenance by telnet".

4

#### Reference

• p.62 "Remote Maintenance by telnet"

## **Precautions**

Please pay attention to the following when using the network interface board. When configuration is necessary, follow the appropriate procedures below.

#### Connecting a Dial-Up Router to a Network

#### When using NetWare (file server)

If the NetWare file server and printer are on opposite sides of a router, packets are sent back and forth continuously, possibly incurring communications charges. Because packet transmission is a feature of NetWare, you need to change the configuration of the router. If the network you are using does not allow you to configure the router, configure the machine instead.

#### Configuring the router

Filter packets so they do not pass over the dial-up router.

#### Vote

- The MAC address of the filtering printer is printed on the printer configuration page. For more information about printing a configuration page, see "Printing the Configuration Page", General Settings Guide.
- For more information about configuring the printer if the router cannot be configured, see the following instructions.

#### Configuring the printer with NetWare

- 1. Following the setup method described earlier in this manual, configure the file server.
- 2. Set the frame type for NetWare environment.

#### Vote

For more information about selecting a frame type, see "Interface Settings", General Settings Guide.

#### Configuring the printer without NetWare

 When not printing, the network interface board sends packets over the network. Set NetWare to "inactive".

#### **Vote**

• For more information about selecting a protocol, see "Interface Settings", General Settings Guide.

#### When Using Network Utility

If the machine is connected to a network, observe the following points when setting up the machine or changing settings:

For more details, see the operating instructions and Help for the ScanRouter delivery software and DeskTopBinder.

#### When a dial-up router is connected in a network environment

The settings for the delivery server to be connected must be made appropriately for the machine with the ScanRouter delivery software, Auto Document Link, or DeskTopBinder. In addition, set up connected devices using the I/O settings of the ScanRouter delivery software administration utility.

If the network environment changes, make the necessary changes for the delivery server using the machine, the administration utility of client computers, Auto Document Link, and DeskTopBinder. Also, set the correct information for the connected devices using the I/O settings of the ScanRouter delivery software administration utility.

#### C Important

 If the machine is set up to connect to the delivery server via a dial-up router, the router will dial and go online whenever a connection to the delivery server is made. Telephone charges may be incurred.

#### When connected to a computer that uses dial-up access

- Do not install the ScanRouter delivery software on a computer which uses dial-up access.
- When using the ScanRouter delivery software, DeskTopBinder, Auto Document Link, or a TWAIN
  driver on a computer with dial-up access, a dial-up connection may be performed when
  connecting to the delivery server and other equipment, depending on the setup. If the computer
  is set up to connect to the Internet automatically, the confirmation dialog box will not appear,
  and telephone charges may be incurred without your being aware of it. To prevent unnecessary
  connections, the computer should be set up so the confirmation dialog box always appears
  before establishing a connection. Do not make unnecessary connections when using the above
  listed software.

#### **NetWare Printing**

#### 🚼 Important

• IPv6 cannot be used on this function.

#### Form feed

You should not configure form feed on NetWare. Form feed is controlled by the printer driver on Windows. If NetWare form feed is configured, the printer might not work properly. If you want to change form feed settings, always configure them using Windows.

- Under Windows 95/98/Me, clear the [Form feed] check box on the [Printer Settings] tab in the printer properties dialog box.
- Under Windows 2000/XP and Windows Server 2003, clear the [Form feed] check box on the [NetWare Settings] tab in the printer properties dialog box.
- Under Windows NT 4.0, clear the [Form feed] check box on the [NetWare Settings] tab in the printer
  properties dialog box.

#### Banner page

You should not configure a banner page on NetWare. If you want to change the banner page setting, always configure it using Windows.

- Under Windows 95/98/Me, clear the [Enable banner] check box on the [Printer Settings] tab in the printer properties dialog box.
- Under Windows 2000/XP and Windows Server 2003, clear the [Enable banner] check box on the [NetWare Settings] tab in the printer properties dialog box.
- Under Windows NT 4.0, clear the [Enable banner] check box on the [NetWare Settings] tab in the printer properties dialog box.

#### Printing after resetting the machine

After resetting the remote printer, the connection from the print server will be cut off for about 30-40 seconds before re-connecting. Depending on the NetWare specification, print jobs may be accepted, but they will not be printed during this interval.

When using the machine as a remote printer, wait about two minutes after resetting before attempting to print.

#### When the IEEE 802.11 interface unit is installed

When using the wireless LAN interface on the network, note the following:

#### When moving the machine

Detach the antennas when relocating the machine locally.

After moving the machine, reattach the antennas, ensuring that:

- The antennas are positioned clear of obstacles.
- There is 40 to 60 mm between the antennas, so that they do not touch.
- The exposure glass cover and the Auto Document Feeder (ADF) do not knock the antennas.

4

#### If the network area provides poor radio environment

Where radio wave conditions are bad, the network may not function due to interrupted or failed connections. When checking the wireless LAN signal and the access point, follow the procedure below to improve the situation:

- Position the access point nearer to the machine.
- Clear the space between access point and machine of obstructions.
- Move radio wave generating appliances, such as microwaves, away from the machine and access point.

#### Note

- For information about how to check radio wave status, see "Checking the signal", General Settings Guide.
- For more information about access point radio wave conditions, refer to the access point manual.

#### Configuring WPA/WPA2

WPA/WPA2 uses an authentication server to provide greatly enhanced security compared to WPA-PSK/ WPA2-PSK.

WPA/WPA2 can be configured using Web Image Monitor's administrator mode. You can select four types of EAP authentication method: EAP-TLS, LEAP, EAPTTLS and PEAP. Note that each EAP authentication method has different configuration settings and authentication procedures.

Types and requirements of certificates are as follows:

If a certificate is required, configure all settings after installing the certificate.

#### EAP Types Requiring a "Site Certificate"

EAP-TLS, EAP-TTLS, PEAP (Necessary except LEAP)

#### EAP Types Requiring a "Site Certificate" and a "Device Certificate"

EAP-TLS, PEAP (Phase 2 is for TLS only)

#### 🔂 Important 🔵

- To set WPA/WPA2, you must enable SSL. For details about setting SSL configuration, see "Protection Using Encryption", Security Reference.
- To set WPA/WPA2, you must use Web Image Monitor.

#### Installing a Site Certificate

1. Access the authentication server and obtain the CA certificate.

Methods of obtaining certificates differ according to the operating system you are using.

2. Log on to Web Image Monitor in the administrator mode.

4

- 3. Click [Configuration].
- 4. [Site Certificate] in the "Security" area.
- Click [Browse] on the "Site Certificate to Import" window, and then select the CA certificate you obtained.
- 6. Click [Import].
- 7. Check that the imported certificate's [Status] shows "Trustworthy".

If [Site Certificate Check] shows [Active], and the [Status] of the certificate shows [Untrustworthy], communication might not be possible.

- 8. Click [OK].
- 9. Click [Logout].
- 10. Quit the Web Image Monitor.

#### Installing Device Certificate

- 1. Log on to Web Image Monitor in the administrator mode.
- 2. Click [Configuration].
- 3. Click [Device Certificate] in "Security" area.
- 4. Click [Certificate 2] on the "Device Certificate" window, and then click [Request].
- Enter appropriate "Common Name" and "Country Code" on "Certificate Information" page, and then click [OK].
- 6. "Updating..." appears. Wait for about 2 minutes, and then click [OK].
- Click [Details], shown in the "Device Certificate" window as the memo pad icon for "Requesting".
- 8. Select all, and then copy the entire "Text for Requested Certificate" text that is displayed in the "Certificate Status" window.
- Access the certificate authority server, and then obtain the CA signified certificate using the text copied into "Text for Requested Certificate" windows.

Obtaining the certificate differs depending on the environment you want to use.

- 10. Click [Certificate 2] on "Device Certificate" window, and then click [Install].
- Using a text editor, open the CA signified certificate downloaded in step 11, and then copy over all the text.
- 12. In the [Install Certificate] window, paste all the text copied into the CA signified certificate.
- 13. Click [OK].
- 14. "Updating..." appears. Wait for about one or two minutes, and then click [OK].
- 15. Check that the "Device Certificate" shows "Installed".

- 16. Click [Certificate 2] on "Certification", and then click [OK].
- 17. Click [Logout].
- 18. Quit Web Image Monitor.

#### Note

- you request two certificates simultaneously, the certificate authority might not display either certificate. Click [Cancel Request] to cancel the request.
- You can select [Certificate 1] and [Certificate 2] in the "Device Certificate" window. Note that if you select [Certificate 1] in the "Device Certificate" window, you must select "Certificate 1" in the "IEEE 802.11a/b/g" drop down menu in the "Certification" window.
- Click [Cancel Request] to cancel the request for the server certificate.
- If "Not found" appears after clicking [OK] in steps 8 and 16, wait one or two minutes, and then click [Refresh].

#### Setting Items of WPA/WPA2

- 1. Log on to Web Image Monitor in the administrator mode.
- 2. Click [Configuration], and then click [Wireless LAN Settings] in the "Interface" area.
- 3. Select [Infrastructure Mode] in "Communication Mode".
- 4. Enter the alphanumeric characters (a-z, A-Z, or 0-9) in [SSID] according to the access point you want to use.
- 5. Select [WPA] in "Security Method".
- Select [TKIP] or [CCMP (AES)] in "WPA Encryption Method" according to the access point you want to use.
- 7. Select [WPA] or [WPA2] in "WPA Authentication Method".
- 8. In "User Name", enter the user name set in the RADIUS server.
- 9. Enter the domain name in "Domain Name".
- 10. Select "EAP Type". Configurations differ according to the EAP Type.

EAP-TLS

- Make the following settings according to the operating system you are using:
  - Select [On] or [Off] in "Authenticate Server Certificate".
  - Select [On] or [Off] in "Trust Intermediate Certificate Authority".
  - Enter the host name of the RADIUS server on "Server ID".

LEAP

• Click [Change] in "Password", and then enter the password set in the RADIUS server.

EAP-TTLS

4

- Click [Change] in "Password", and then enter the password set in the RADIUS server.
- Click [Change] in "Phase 2 User Name", and then enter the user name set in the RADIUS server.
- Select [CHAP], [MSCHAP], [MSCHAPv2], [PAP], or [MD5] in "Phase 2 Method".
- Certain methods might not be available, depending on the RADIUS server you want to use.
- Make the following settings according to the operating system you are using:
  - Select [On] or [Off] in "Authenticate Server Certificate".
  - Select [On] or [Off] in "Trust Intermediate Certificate Authority".
  - Enter the host name of the RADIUS server in "Server ID".

#### PEAP

- Click [Change] in "Password", and then enter the password set in the RADIUS server.
- Click [Change] on "Phase 2 User Name", and then enter the user name set in the RADIUS server.
- Select [MSCHAPv2] or [TLS] in "Phase 2 Method".
- When you select [TLS], select the client certificate you want to use in "WPA Client Certificate".
- Make the following settings according to the operating system you are using:
  - Select [On] or [Off] in "Authenticate Server Certificate".
  - Select [On] or [Off] in "Trust Intermediate Certificate Authority".
  - Enter the host name of the RADIUS server on "Server ID".

#### 11. Click [OK].

- 12. Click [Logout].
- 13. Quit the Web Image Monitor.

#### Note

- If there is a problem with settings, you might not be able to communicate with the printer. To identify the problem, print a network summary.
- If you cannot identify the problem, reset the printer interface to normal, and then repeat the procedure from the beginning.

## Setting Up the Machine on a Network

This section describes the network settings you can change with User Tools (System Settings). Make settings according to functions you want to use and the interface to be connected.

🔁 Important

 These settings should be made by the systems administrator, or after consulting with the systems administrator.

#### **Initial Settings Overview**

#### Interface Settings

4

Menu	Description
Machine IPv4 Address	Specify the machine's IPv4 network address.
IPv4 Gateway Address	Specify the gateway address for the router or host computer used as a gateway.
Machine IPv6 Address	Displays the machine's IPv6 network address.
IPv6 Gateway Address	Displays the machine's IPv6 gateway address.
IPv6 Stateless Address Autoconfiguration	Specify IPv6 Stateless Address Autoconfiguration.
DNS Configuration	Make settings for the DNS server.
DDNS Configuration	Specifies the DDNS settings.
IPSec	Specify the machine's IPSec function Active/ Inactive.
Domain Name	Specifies the domain name.
WINS Configuration	Specifies the WINS server settings.
Effective Protocol	Select the protocol to use in the network.
NCP Delivery Protocol	Select the protocol for NCP delivery:
NW Frame Type	Select the frame type when you use NetWare.
SMB Computer Name	Specify the SMB computer name.
SMB Work Group	Specify the SMB work group.

Menu	Description
Ethernet Speed	Set the access speed for networks.
LAN Type	When you have installed the IEEE 802.11a/g interface unit, select the method of connection.
Ping Command	Check the network connection with ping command using given IP address.
Permit SNMPv3 Communication	Set the encrypted communication of SNMP v3.
Permit SSL / TLS Communication	Set the encrypted communication of SSL/TLS.
Host Name	Specify the host name.
Machine Name	Specify the machine name.
Communication Mode	Specifies the communication mode of the wireless LAN.
SSID Setting	Specifies SSID to distinguish the access point in infrastructure mode or 802.11 ad hoc mode.
Ad-hoc Channel	Specify the channel to use when [802.11 Ad- hoc Mode] has been selected. Set the channel that matches the type of wireless LAN being used.
Security Method	Specifies the encryption of the IEEE 802.11a/g (wireless LAN).
Wireless LAN Signal	When using in infrastructure mode, you can check the machine's radio wave status using the control panel.
Restore Factory Defaults	You can return the wireless LAN settings to their defaults.

#### File Transfer Settings

Menu	Description
Delivery Option	Enables or disables sending stored or scanned documents to the ScanRouter delivery server.
Capture Server IPv4 Address	Specify the capture server IPv4 address.

Menu	Description
Fax RX File Transmission	Specify how to deliver fax files received via the different lines.
SMTP Server	Specifies the SMTP server name.
SMTP Authentication	Specify SMTP authentication (PLAIN, LOGIN, CRAMMD5, DIGEST-MD5).
POP before SMTP	Specify POP authentication (POP before SMTP).
Reception Protocol	Specify Reception Protocol for receiving Internet Fax.
POP3 / IMAP4 Settings	Specify the POP3/IMAP4 server name for receiving Internet faxes.
Administrator's E-mail Address	Specify the Administrator's E-mail Address.
E-mail Communication Port	Specify the port numbers for receiving Internet faxes. The specified POP3 port number is used for [POP before SMTP].
E-mail Reception Interval	Specify, in minutes, the time interval for receiving Internet faxes via POP3 or IMAP4 server.
Max. Reception E-mail Size	Specify the maximum reception e-mail size for receiving Internet faxes.
E-mail Storage in Server	Specify whether or not to store received Internet fax e-mails on the POP3 or IMAP4 server.
Default User Name / Password (Send)	Specify the user name and password required when sending scan files directly to a shared folder on a computer running Windows, to an FTP server, or to a NetWare server.
Program / Change / Delete E-mail Message	You can program, change, or delete the e-mail message used when sending an Internet fax or scan file as an attachment.
Auto Specify Sender Name	Set whether or not to specify the name of the sender when sending e-mail.
Fax E-mail Account	Specify e-mail address, user name and password for receiving Internet faxes.

Menu	Description
Scanner Resend Interval Time	Specifies the interval the machine waits before resending a scan file, if it cannot be sent to the delivery server or mail server.
Number of Scanner Resends	Sets a maximum number of times a scan file is resent to the delivery server or mail server.

## Initial Settings

#### Printer/LAN-Fax

Interface	Settings	
Ethernet	Interface Settings/Network	Machine IPv4 Address
		IPv4 Gateway Address
		Machine IPv6 Address
		IPv6 Gateway Address
		IPv6 Stateless Address Autoconfiguration
		DNS Configuration
		DDNS Configuration
		Domain Name
		WINS Configuration
		Effective Protocol
		NCP Delivery Protocol
		NW Frame Type
		SMB Computer Name
		SMB Work Group
		Ethernet Speed
		LAN Type

Interface	Se	Settings	
		Permit SNMPv3 Communication	
		Permit SSL/TLS Communication	
		Host Name	
		Machine Name	
Wireless LAN	Interface Settings/Network	Machine IPv4 Address	
		IPv4 Gateway Address	
		Machine IPv6 Address	
		IPv6 Gateway Address	
		IPv6 Stateless Address Autoconfiguration	
		DNS Configuration	
		DDNS Configuration	
		Domain Name	
		WINS Configuration	
		Effective Protocol	
		NCP Delivery Protocol	
		NW Frame Type	
		SMB Computer Name	
		SMB Work Group	
		LAN Type	
		Permit SNMPv3 Communication	
		Permit SSL/TLS Communication	
		Host Name	

Interface	Settings	
		Machine Name
	Interface Settings/ Wireless LAN	Communication Mode
		SSID Setting
		Channel
		Security Method

#### Internet Fax

Interface	Settings	
Ethernet	Interface Settings/Network	Machine IPv4 Address
		IPv4 Gateway Address
		Machine IPv6 Address
		IPv6 Gateway Address
		IPv6 Stateless Address
		Autoconfiguration
		DNS Configuration
		DDNS Configuration
		Domain Name
		WINS Configuration
		Effective Protocol
		Ethernet Speed
		LAN Type
		Permit SNMPv3 Communication
		Permit SSL/TLS Communication
		Host Name

Interface	Settings	
	File Transfer	SMTP Server
		SMTP Authentication
		POP before SMTP
		Reception Protocol
		POP3 / IMAP4 Settings
		Administrator's E-mail Address
		E-mail Communication Port
		E-mail Reception Interval
		Max. Reception E-mail Size
		E-mail Storage in Server
		Program / Change / Delete E- mail Message
		Fax E-mail Account
Wireless LAN	Interface Settings/Network	Machine IPv4 Address
		IPv4 Gateway Address
		Machine IPv6 Address
		IPvó gateway Address
		IPv6 Stateless Address
		Autoconfiguration
		DNS Configuration
		DDNS Configuration
		Domain Name
		WINS Configuration
		Effective Protocol
		LAN Type

Interface	Settings	
		Permit SNMPv3 Communication
		Permit SSL/TLS Communication
		Host Name
	Interface Settings/ Wireless	Communication Mode
	LAN	SSID Setting
		Channel
		Security Method
	File Transfer	SMTP Server
		SMTP Authentication
		POP before SMTP
		Reception Protocol
		POP3 / IMAP4 Settings
		Administrator's E-mail Address
		E-mail Communication Port
		E-mail Reception Interval
		Max. Reception E-mail Size
		E-mail Storage in Server
		Program / Change / Delete E- mail Message
		Fax E-mail Account

#### E-mail

Interface	Settings	
Ethernet	Interface Settings/Network	Machine IPv4 Address

Interface	Se	ettings
		IPv4 Gateway Address
		DNS Configuration
		DDNS Configuration
		Domain Name
		WINS Configuration
		Effective Protocol
		Ethernet Speed
		LAN Type
		Permit SNMPv3 Communication
		Permit SSL/TLS Communication
		Host Name
	File Transfer	SMTP Server
		SMTP Authentication
		POP before SMTP
		Reception Protocol
		POP3 / IMAP4 Settings
		Administrator's E-mail Addres
		E-mail Communication Port
		Program / Change / Delete mail Message
		Scanner Resend Interval Time
		Number of Scanner Resends
Wireless LAN	Interface Settings/Network	Machine IPv4 Address
		IPv4 Gateway Address

Interface	Settings	
		DNS Configuration
		DDNS Configuration
		Domain Name
		WINS Configuration
		Effective Protocol
		LAN Type
		Permit SNMPv3 Communication
		Permit SSL/TLS Communication
		Host Name
	Interface Settings/ Wireless	Communication Mode
	LAN	SSID Setting
		Channel
		Security Method
	File Transfer	SMTP Server
		SMTP Authentication
		POP before SMTP
		Reception Protocol
		POP3 / IMAP4 Settings
		Administrator's E-mail Address
		E-mail Communication Port
		Program / Change / Delete E- mail Message
		Scanner Resend Interval Time
		Number of Scanner Resends

#### Scan to Folder

Interface	Sett	ings
Ethernet	Interface Settings/Network	Machine IPv4 Address
		IPv4 Gateway Address
		DNS Configuration
		DDNS Configuration
		Domain Name
		WINS Configuration
		Effective Protocol
		Ethernet Speed
		LAN Type
		Permit SNMPv3 Communication
		Permit SSL/TLS Communication
		Host Name
	File Transfer	Scanner Resend Interval Time
		Number of Scanner Resends
Wireless LAN	Interface Settings/Network	Machine IPv4 Address
		IPv4 Gateway Address
		DNS Configuration
		DDNS Configuration
		Domain Name
		WINS Configuration
		Effective Protocol
		LAN Type

Interface	Settings	
		Permit SNMPv3 Communication
		Permit SSL/TLS Communication
		Host Name
	Interface Settings/ Wireless	Communication Mode
	LAN	SSID Setting
		Channel
		Security Method
	File Transfer	Scanner Resend Interval Time
		Number of Scanner Resends

#### Network Delivery Scanner

Interface	Settings	
Ethernet	Interface Settings/Network	Machine IPv4 Address
		IPv4 Gateway Address
		DNS Configuration
		DDNS Configuration
		Domain Name
		WINS Configuration
		Effective Protocol
		Ethernet Speed
		LAN Type
		Permit SNMPv3
		Communication
		Permit SSL/TLS
		Communication

Interface	Settings	
		Host Name
	File Transfer	Delivery Option
		Fax RX File Transmission
		Scanner Resend Interval Time
		Number of Scanner Resends
Wireless LAN	Interface Settings/Network	Machine IPv4 Address
		IPv4 Gateway Address
		DNS Configuration
		DDNS Configuration
		Domain Name
		WINS Configuration
		Effective Protocol
		LAN Type
		Permit SNMPv3 Communication
		Permit SSL/TLS Communication
		Host Name
	Interface Settings/ Wireless	Communication Mode
	LAN	SSID Setting
		Channel
		Security Method
	File Transfer	Delivery Option
		Fax RX File Transmission
		Scanner Resend Interval Time

Interface	Settings	
		Number of Scanner Resends

#### Network TWAIN Scanner

Interface	Sett	lings
Ethernet	Interface Settings/Network	Machine IPv4 Address
		IPv4 Gateway Address
		DNS Configuration
		DDNS Configuration
		Domain Name
		WINS Configuration
		Effective Protocol
		Ethernet Speed
		LAN Type
		Permit SNMPv3 Communication
		Permit SSL/TLS Communication
		Host Name
Wireless LAN	Interface Settings/Network	Machine IPv4 Address
		IPv4 Gateway Address
		DNS Configuration
		DDNS Configuration
		Domain Name
		WINS Configuration
		Effective Protocol
		LAN Type

Interface	Settings	
		Permit SNMPv3 Communication
		Permit SSL/TLS Communication
		Host Name
	Interface Settings/ Wireless	Communication Mode
	LAN	SSID Setting
		Channel
		Security Method

#### **Document Server**

Interface	Settings	
Ethernet	Interface Settings/Network	Machine IPv4 Address
		IPv4 Gateway Address
		Machine IPv6 Address
		IPv6 Gateway Address
		IPv6 Stateless Address
		Autoconfiguration
		DNS Configuration
		DDNS Configuration
		Domain Name
		WINS Configuration
		Effective Protocol
		Ethernet Speed
		LAN Type
		Permit SNMPv3
		Communication

Interface	Sett	lings
		Permit SSL/TLS Communication
		Host Name
Wireless LAN	Interface Settings/Network	Machine IPv4 Address
		IPv4 Gateway Address
		Machine IPv6 Address
		IPv6 Gateway Address
		IPv6 Stateless Autocofiguration
		DNS Configuration
		DDNS Configuration
		Domain Name
		WINS Configuration
		Effective Protocol
		LAN Type
		Permit SNMPv3 Communication
		Permit SSL/TLS Communication
		Host Name
	Interface Settings/ Wireless	Communication Mode
	LAN	SSID Setting
		Channel
		Security Method
		Transmission Speed

#### • Note

<sup>•</sup> For the Effective Protocol setting, check that the protocol you want to use is set to [Active].

- [Wireless LAN] and [LAN Type] are displayed when the wireless LAN interface board is installed.
- When both Ethernet and wireless LAN are connected, the selected interface takes precedence.
- SMTP Server and Fax E-mail Account must be specified in order to send Internet Fax.
- When [POP before SMTP] is set to [On], you must also make settings for [Reception Protocol] and [POP3 / IMAP4 Settings].
- When [SMTP Authentication] is set to [On], you must also make settings for [Administrator's E-mail Address].
- When setting [POP before SMTP] to [On], check POP3 port number in [E-mail Communication Port].
- If [Delivery Option] is set to [On], check that IPv4 Address is specified.

# Specifications

Interface	1000BASE-T, 100BASE-TX, 10BASE-T, IEEE 802.11a/b/g	
Frame type	EthernetII, IEEE 802.2, IEEE 802.3, SNAP	
Printer ( LAN-Fax)	IPv4/IPv6	
	LPR	
	RSH	
	RCP	
	DIPRINT	
	FTP	
	IPP	
	IPP-SSL	
	IPX/SPX (NetWare)	
	AppleTalk	
	SMB	
	WS-Printer	
Internet Fax	ΙΡν4/ΙΡνό	
	SMTP	
	SMTP-C	
	POP3	
	IMAP4	
Network Scanner	IPv4/IPv6	
	RSH	
	FTP	
	FTP-C	

	SMTP
	SMTP-C
	POP3
	SMB
	NCP
Document Server	IPv4/IPv6
	FTP
	FTP-C
	HTTP
	HTTPS
Management Function	IPv4/IPv6
	RSH
	RCP
	FTP
	FTP-C
	SNMP
	SNMP-C
	HTTP
	HTTPS
	TELNET (mshell)
	NBT
	DHCP
	DNS
	DNS-C
	LDAP

SNMP v1/v2	MIB-II, PrinterMIB, HostResourceMIB, IPv6-TCP- MIB, IPv6-UDP-MIB, IPv6-MIB, IPv6-ICMP-MIB, RicohPrivateMIB
SNMP v3	MIB-II, PrinterMIB, HostResourceMIB, RicohPrivateMIB, SNMP-FRAMEWORK-MIB, SNMP-TARGET-MIB, SNMP-NOTIFICATION- MIB, SNMP-USER-BASED-SM-MIB, SNMP- VIEW-BASED-ACM-MIB, IPv6-TCP-MIB, IPv6- UDP-MIB, IPv6-MIB, IPv6-ICMP-MIB

To use IPP and SMB, use the SmartDeviceMonitor for Client port.

To use IPP under Windows XP, Windows Server 2003, use the Standard IPP port. To use IPP under Windows 98, Windows 2000, Windows NT, use SmartDeviceMonitor for Client.

AppleTalk can be used when the PostScript 3 module is installed.

Under Window Vista, WS-Printer uses the WSD Port.

#### **Functions**

The following functions are available with the machine:

- Copy
- Printer
- Scanner
- Document Server

Note

• The machine must be equipped with the Printer/Scanner Unit in order to use the printer or scanner function.

4. Appendix

# INDEX

#### Α

Access Control	63
Address Information	50
Administrator Mode	24
AppleTalk	64
Auto E-mail Notification	56
AutoNet	144

#### B

Bluetooth6	6, 137
Adding a Printer	
Bonjour	65

#### С

Change Direct Printing Port Settings
Changing the Printer Name67, 72
Changing the Remote Maintenance Password
77
Comments48

#### D

DHCP	67, 144
DHCPv6	68, 144
Dial-up Router	149
Direct Printing	131
Displayed Information	112
Displaying Web Image Monitor Help	33
DNS(Domain Name System)	70
Document Server	156
Domain Name Settings	71
Dynamic DNS	146

#### Е

E-mail	156
E-Mail Notification	55
Energy Saver Mode	45

#### F

Fax Journal	49
File Transfer Settings	156
ftp100, 110, 112,	, 123, 133

#### G

Going to the Top Page	22
Guest Mode	24

#### н

Host Name72, 13	31
How to Read This Manual	.7

#### I.

IEEE 802.11 interface	
IEEE 802.11 Settings	92
info110,	112
Initial Settings	
Document Server	156
E-mail	156
File Transfer Settings	156
Interface Settings	156
Internet Fax	156
LAN-Fax	156
Network Delivery Scanner	156
Network TWAIN Scanner	156
Printer	156
Printer/LAN-Fax	156
Scan to Folder	156
Installing	36
Interface Settings	156
Internet Fax	
IPP53	
IPv6	
11 v0	/ J
1	
Job Spool	88
L	
LAN-Fax	156
Limitations	142
Locking the Menus	38
Log Off	
User Authentication	24
Login	
Administrator Mode	26
User Authentication	23
lpr75, 100,	133

## Μ

Machine Status	47, 53
Mail Authentication	58
Message	123
MetaFrame	141

Monitoring Printers	2
---------------------	---

#### Ν

48
11, 76
151
150
150
12, 16
13, 18
.13, 14, 18
.13, 14, 18
.13, 14, 18
.13, 14, 18
156
37
113
156
44
41

#### 0

On-demand E-mail Notification57, 59
-------------------------------------

#### Ρ

Paper Type
PathMTU Discovery Service Function78
Print Job Information
ftp112
info112
rcp112
rsh112
sftp112
Print Log Information
ftp

prnlog	
rcp	
rsh	
sftp	
Print Server	

NetWare 3.x	12
NetWare 4.x	
NetWare 5	
NetWare 5.1	13
NetWare 6	
NetWare 6.5	13

Printer	156
Printer Configuration	
ftp	110
info	110
rcp	110
rsh	
sftp	110
Printer Information	74
Printer Log Information	78
Printer Server	9
Printer Status	90
ftp	100
lpr	
rcp	100
rsh	
sftp	
status	100
Printer's System Log	
Printer/LAN-Fax	156
Printing Commands	
ftp	
lpr	
rcp	
sftp	133
Printing Notification	9
prnlog	112
Protpcol Information	80
Pure IP	14
Pure IP Environment	
NetWare 5.1	14
NetWare 6	14
NetWare 6.5	14

#### R

rcp100, 110, 112, 123, 133
Remote Maintenance62
Remote Printer
NetWare 3.x16
NetWare 4.x
NetWare 5
NetWare 5.1
NetWare 618
NetWare 6.5
Rendezvous
Resetting the number of pages printed42
Restricting Functions

S	T
rsh100, 110, 112, 123	Sy
Routing Table	
Ricoh Host Printing Protocol80	

Scan to Folder1	56
Setting a Password	46
Setting Items	
sftp100, 110, 112, 123, 13	
show	
slp	
SmartDeviceMonitor for Admin	
Address Information	
Comments	
Energy Saver Mode	
Fax Journal	
Installing	
Locking the Menus	
Machine Status	
Names	48
New Users	44
Number of Sheets Printed	41
Paper Type	
Resetting the number of pages printed	42
Restricting Functions	43
Setting a Password	
Spool Print	
User Information	
User Management Tool	
SmartDeviceMonitor for Client	
IPP	
Machine Status	
Monitoring Printers	
Printing Notification	
smb	84
SNMP	98
SNTP	87
Spool Print	49
SSDP	89
status	00
Supported Printer Drivers	41
syslog12	
System Log Information	
ftp1	23
rcp1	
rsh1	

.80	sftp	
.78	syslog	
23	System Settings	156
	<b>T</b>	

TCP/IP	73
TCP/IP address	
telnet	62, 64, 96
Тор Раде	22
U	

Universal Plug and Play	.91
User Information	.40
User Management Tool	.40

## V

Virtual Printer133	3
--------------------	---

## w

Web Image Monitor	21, 91
Administrator Mode	
Auto E-mail Notification	56
E-Mail Notification	55
Guest Mode	24
Mail Authentication	58
Menu	24
Mode	24
On-demand E-mail Notification	57
Sending E-mail Notification	59
Setting Items	26
Тор Раде	22
Windows Terminal Service	141
WINS Server	145
Web Image Monitor	145
WPA	152
WPA2	152
WS-MFP	97

MEMO

#### Software Version Conventions Used in This Manual

\* NetWare 3.x means NetWare 3.12 and 3.2.

\* NetWare 4.x means NetWare 4.1, 4.11, 4.2 and IntranetWare.

#### Trademarks

Microsoft<sup>®</sup>, Windows<sup>®</sup>, Windows NT<sup>®</sup>, Windows Server<sup>®</sup>, and Windows Vista<sup>™</sup> are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

Adobe, Acrobat, Adobe Type Manager, Flash, Macromedia, PageMaker, PostScript are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.

Apple, AppleTalk, EtherTalk, Bonjour, Macintosh, Mac OS, and TrueType are registered trademarks of Apple Inc, registered in the United States and other countries.

UNIX is a registered trademark in the United States and other countries, licensed exclusively through X/Open Company Limited. PCL<sup>®</sup> is a registered trademark of Hewlett-Packard Company.

Monotype is a registered trademark of Monotype Imaging, Inc.

IPS is a trademark or registered trademark of Zoran Corporation and/ or its subsidiaries in the United States or other countries.

The Bluetooth<sup>®</sup> word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Ricoh Company, Ltd is under license.

Netware, IPX, IPX/SPX are either registered trademarks or trademarks of Novell, Inc.

Other product names used herein are for identification purposes only and might be trademarks of their respective companies. We disclaim any and all rights to those marks.

The proper names of the Windows operating systems are as follows:

\* ∏he product name of Windows 98 is Microsoft<sup>®</sup> Windows<sup>®</sup> 98.

- \* [The product name of Windows Me is Microsoft<sup>®</sup> Windows<sup>®</sup> Millennium Edition (Windows Me).
- \* The product names of Windows 2000 are as follows: Microsoft<sup>®</sup> Windows<sup>®</sup> 2000 Professional Microsoft<sup>®</sup> Windows<sup>®</sup> 2000 Server Microsoft<sup>®</sup> Windows<sup>®</sup> 2000 Advanced Server
- \* ∏he product names of Windows XP are as follows:
  - Microsoft<sup>®</sup> Windows<sup>®</sup> XP Professional
  - Microsoft<sup>®</sup> Windows<sup>®</sup> XP Home Edition
  - Microsoft<sup>®</sup> Windows<sup>®</sup> XP Media Center Edition
  - Microsoft® Windows® XP Tablet PC Edition
- \* [The product names of Windows Vista are as follows: Microsoft<sup>®</sup> Windows Vista<sup>™</sup> Ultimate Microsoft<sup>®</sup> Windows Vista<sup>™</sup> Enterprise Microsoft<sup>®</sup> Windows Vista<sup>™</sup> Business Microsoft<sup>®</sup> Windows Vista<sup>™</sup> Home Premium Microsoft® Windows Vista<sup>™</sup> Home Basic
- \* The product names of Windows Server 2003 are as follows: Microsoft<sup>®</sup> Windows Server<sup>™</sup> 2003 Standard Edition Microsoft<sup>®</sup> Windows Server<sup>™</sup> 2003 Enterprise Edition Microsoft<sup>®</sup> Windows Server<sup>™</sup> 2003 Web Edition Microsoft® Windows Server<sup>™</sup> 2003 Datacenter Edition
- \* The product names of Windows Server 2003 R2 are as follows: Microsoft<sup>®</sup> Windows Server<sup>®</sup> 2003 R2 Standard Edition Microsoft<sup>®</sup> Windows Server<sup>®</sup> 2003 R2 Enterprise Edition Microsoft<sup>®</sup> Windows Server<sup>®</sup> 2003 R2 Datacenter Edition
- \* ☐he product names of Windows NT 4.0 are as follows: Microsoft<sup>®</sup> Windows NT<sup>®</sup> Workstation 4.0 Microsoft® Windows NT® Server 4.0

# Network Guide



EN (USA) D376-7505