

C6055/C7570 MP C6000/MP C7500 LD260c/LD275c Aficio™ MP C6000/C7500

Operating Instructions Printer Reference



- 1 Preparing the Machine
- 2 Setting Up the Printer Driver
- 3 Other Print Operations
- 4 Saving and Printing Using the Document Server
- **5** Appendix

Introduction

This manual contains detailed instructions and notes on the operation and use of this machine. For your safety and benefit, read this manual carefully before using the machine. Keep this manual in a handy place for quick reference.

Do not copy or print any item for which reproduction is prohibited by law.

Copying or printing the following items is generally prohibited by local law:

bank notes, revenue stamps, bonds, stock certificates, bank drafts, checks, passports, driver's licenses.

The preceding list is meant as a guide only and is not inclusive. We assume no responsibility for its completeness or accuracy. If you have any questions concerning the legality of copying or printing certain items, consult with your legal advisor.

Important

Contents of this manual are subject to change without prior notice. In no event will the company be liable for direct, indirect, special, incidental, or consequential damages as a result of handling or operating the machine.

Two kinds of size notation are employed in this manual. With this machine refer to the inch version.

Notes

Some illustrations in this manual might be slightly different from the machine.

Certain options might not be available in some countries. For details, please contact your local dealer.

Depending on which country you are in, your machine may include certain options as standard. For details, please contact your local dealer.

Manuals for This Machine

Refer to the manuals that are relevant to what you want to do with the machine.

- Media differ according to manual.
- The printed and electronic versions of a manual have the same contents.
- Adobe Acrobat Reader/Adobe Reader must be installed in order to view the manuals as PDF files.
- A Web browser must be installed in order to view the html manuals.

About This Machine

Be sure to read the Safety Information in this manual before using the machine.

This manual provides an introduction to the functions of the machine. It also explains the control panel, preparation procedures for using the machine, how to enter text, and how to install the CD-ROMs provided.

Trouble Shooting

Provides a guide to solving common problems, and explains how to replace paper, toner, staples, and other consumables.

Copy/Document Server Reference

Explains Copier and Document Server functions and operations. Also refer to this manual for explanations on how to place originals.

Facsimile Reference

Explains Facsimile functions and operations.

Printer Reference

Explains Printer functions and operations.

Scanner Reference

Explains Scanner functions and operations.

Network Guide

Explains how to configure and operate the machine in a network environment, and use the software provided.

General Settings Guide

Explains User Tools settings, and Address Book procedures such as registering fax numbers, e⁻mail addresses, and user codes. Also refer to this manual for explanations on how to connect the machine.

Security Reference

This manual is for administrators of the machine. It explains security functions that you can use to prevent unauthorized use of the machine, data tampering, or information leakage. For enhanced security, we recommend that you first make the following settings:

- Install the Device Certificate.
- Enable SSL (Secure Sockets Layer) Encryption.
- Change the user name and password of the administrator using Web Image Monitor.

For details, see "Setting Up the Machine", Security Reference.

Be sure to read this manual when setting the enhanced security functions, or user and administrator authentication.

PostScript 3 Supplement

Explains how to set up and use PostScript 3.

UNIX Supplement

For "UNIX Supplement", please visit our Web site or consult an authorized dealer.

This manual includes descriptions of functions and settings that might not be available on this machine.

Information

Contains general notes on the machine, and information about the trademarks of product names used in the manuals.

Other manuals

- Manuals for DeskTopBinder Lite
 - DeskTopBinder Lite Setup Guide
 - DeskTopBinder Introduction Guide
 - · Auto Document Link Guide



- Manuals provided are specific to machine types.
- The following software products are referred to using general names:

Product name	General name
DeskTopBinder Lite and DeskTopBinder Professional * 1	DeskTopBinder

*1 Optional

TABLE OF CONTENTS

Manuals for This Machine	1
How to Read This Manual	7
Symbols	7
Model-Specific Information	8
Display Panel	9
Initial Display	9
Simplified Display	10
Job List	12
Job List Screen	12
Checking Jobs in the Job List	13
Changing the Order of Jobs	14
Holding Jobs	14
Deleting Jobs	15
Checking the Job History	15
Setting Paper on the Bypass Tray	16
Setting the Paper Size Using the Control Panel	17
Setting Custom Size Paper Using the Control Panel	
Setting Thick Paper, Thin Paper, or OHP Transparencies Using the Control Panel	21
Setting Envelopes Using the Control Panel	23
1. Preparing the Machine	
Confirming the Connection Method.	29
Network Connection	
Local Connection	32
Installing the Printer Driver	33
Quick Install	
Installing the Printer Driver for the Selected Port	34
Using as a Windows Network Printer	
Using as a NetWare Print Server / Remote Printer	
Form Feed	
Banner Page	48
Printing after Resetting the Printer	
Installing the Printer Driver Using USB	
Windows Me - USB	

Windows 2000 - USB	50
Windows XP, Windows Server 2003 / 2003 R2 - USB	51
Windows Vista - USB	52
Printing with Parallel Connection	54
Making Option Settings for the Printer	56
Conditions for Bidirectional Communication	56
If Bidirectional Communication Is Disabled	57
Installing Font Manager	59
Using Adobe PageMaker Version 6.0, 6.5, or 7.0	60
2. Setting Up the Printer Driver	
PCL - Accessing the Printer Properties	61
Windows 95 / 98 / Me - Accessing the Printer Properties	61
Windows 2000 - Accessing the Printer Properties	62
Windows XP, Windows Server 2003 / 2003 R2 - Accessing the Printer Properties	64
Windows Vista - Accessing the Printer Properties	65
Windows NT 4.0 - Accessing the Printer Properties	67
RPCS - Accessing the Printer Properties	69
Windows 95 / 98 / Me - Accessing the Printer Properties	69
Windows 2000 - Accessing the Printer Properties	70
Windows XP, Windows Server 2003 / 2003 R2 - Accessing the Printer Properties	72
Windows Vista - Accessing the Printer Properties	74
Windows NT 4.0 - Accessing the Printer Properties	75
Black and White Printing when [Photograph] or [DTP] is Selected for [Document type]	78
3. Other Print Operations	
Printing a PDF File Directly	79
Printing Method	79
Using DeskTopBinder Lite	79
PDF Direct Print Properties	82
Using Commands	83
Unauthorized Copy Control	84
Opening the Unauthorized Copy Control Window	84
Using [Data security for copying]	84
Usina [Mask type:]	86

Important Notice	87
Using the Print Job Function	88
Selecting the Initial Print Job List	91
Printing from the Print Job Screen	93
Sample Print	93
Locked Print	96
Hold Print	99
Stored Print	102
Printing from the Jobs Per User ID Screen	107
Printing the Selected Print Job	107
Printing All Print Jobs	108
Form Feed	111
Printing from a Selected Tray	111
Canceling a Print Job	112
Canceling a Print Job	113
Canceling a Print Job Using the Control Panel	113
Windows - Canceling a Print Job from the computer	113
Checking the Error Log	115
Spool Printing	117
User Defined Pages	118
Printing with the Finisher	119
Staple	119
Punch	121
Collate	124
Covers	127
Chaptering	130
No Slip Sheets	130
Inserting Chapter Slip Sheets	130
Designated Sheet Print	131
Slip Sheet	133
Tab Stock	135
Z-fold	136
Folding Positions	136

Notes on the Z-fold Function	137
Using the Virtual Printer	138
Adding a Virtual Printer	138
Changing a Virtual Printer Configuration	139
Confirming a Virtual Printer Configuration	139
Deleting a Virtual Printer	140
Printing Using a Virtual Printer	140
4. Saving and Printing Using the Document Server	
Accessing the Document Server	143
5. Appendix	
Specifications	145
Printer Features Menu	147
INDEX	153

How to Read This Manual

Symbols

This manual uses the following symbols:



Indicates important safety notes.

Ignoring these notes could result in serious injury or death. Be sure to read these notes. They can be found in the "Safety Information" section of About This Machine.

ACAUTION

Indicates important safety notes.

Ignoring these notes could result in moderate or minor injury, or damage to the machine or to property. Be sure to read these notes. They can be found in the "Safety Information" section of About This Machine.

Indicates points to pay attention to when using the machine, and explanations of likely causes of paper misfeeds, damage to originals, or loss of data. Be sure to read these explanations.



Indicates supplementary explanations of the machine's functions, and instructions on resolving user errors.

■ Reference

This symbol is located at the end of sections. It indicates where you can find further relevant information.

[]

Indicates the names of keys that appear on the machine's display panel.

[]

Indicates the names of keys on the machine's control panel.

Model-Specific Information

In this manual, model-specific information is indicated by the following marks:

220-240V


Indicates information that is specific to the 220 to 240 V model.

120V

Indicates information that is specific to the 120 V model.



• Check the label on the right side of the machine to identify the model.

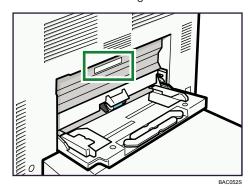

 Dimensions in this manual are given in two units of measure: metric and inch. If your machine is the 220 to 240 V model, refer to the metric units. If your printer is the 120 V model, refer to the inch units.


Display Panel

This section describes configuration using the display panel when the printer function is selected.

Initial Display



- The machine switches to offline when you make settings in online mode. After you complete the setting, the machine switches to online automatically.
- If you make a setting when the machine is offline, it will stay offline afterwards.
- The function items displayed serve as selector keys. You can select or specify an item by pressing it lightly.
- When you select or specify an item on the control panel, it becomes highlighted.
- Keys dimmed (for example, OK) cannot be used.

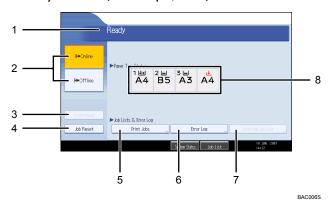

1. Operational status or messages

Displays current machine status, such as "Ready", "Offline", and "Printing...". Information about the print job (user ID and document name) appears in this section.

2. [HOnline] / [HHOffline]

Press to switch the machine between online and offline.

When the machine is online, it can receive data from the computer.

When the machine is offline, it cannot receive data from the computer.

3. [Form Feed]

Press to print all the data left in the machine's input buffer.

- When the machine is online, the status appears dimly.
- This function is not available with the RPCS printer language.

4. [Job Reset]

Press to cancel the current print job.

If you press it when the machine is offline and Hex Dump is selected, Hex Dump is canceled.

5. [Print Jobs]

Press to display print jobs sent from a computer.

6. [Error Log]

Press to display the error logs of print jobs sent from a computer.

7. [Spooling Job List]

Press to display spooled jobs.

8. Paper Tray Status indicators

The paper tray settings appear.




• When the power is turned on, the copier display is shown. This is a factory default. This initial setting can be changed. For details, see "System Settings", General Settings Guide.


Simplified Display

This section explains how to switch to the simplified display.

When you press the [Simplified Display] key, the screen changes from the initial display to the simplified display. Letters and keys are displayed at a larger size, making operations easier.

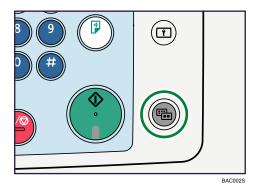

Example of a simplified display

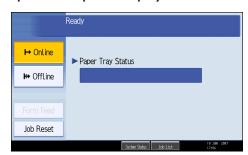



- To return to the initial display, press the [Simplified Display] key again.
- Certain keys do not appear on the simplified display.

Job List

Jobs printed using Copy, Document Server, or Printer mode are temporarily stored in the machine, and then executed in order. The Job List function allows you to manage these jobs.

For example, you can cancel incorrect job settings or print an urgent document.



- You cannot use the Job List function when Interrupt Copy is active.
- Documents printed using the facsimile function and scanner function are not displayed in the Job List.


Job List Screen

This section explains displays and icons that appear in the Job List screen.

The Job List screen varies depending on whether Job Order is selected with Print Priority for the System Settings. For details about setting procedure, see "System Settings", General Settings Guide.


When [Job Order] is not selected:

The job list is displayed for each of the functions.

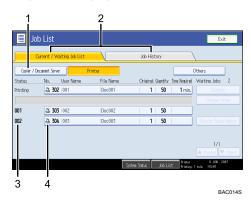

When [Job Order] is selected:

The job list is displayed for all functions in the order of print jobs.

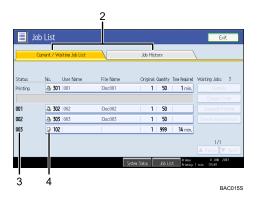

- 1. Switches between job lists for each function.
- 2. Switches between [Current / Waiting Job List] and [Job History].
- 3. Displays reserved job numbers.
- 4. Displays the function used to print jobs.
 - ☐: Job printed using copy function
 - 3: Job printed using printer function
 - D: Job printed using Document Server function
 - Job printed using DeskTopBinder
 - Job printed using Web Image Monitor

Checking Jobs in the Job List

You can check the contents of jobs in the job list.

- 1. Press [Job List].
- 2. Select a job whose contents you want to check.



- 3. Press [Details], and then check the contents.
- 4. Press [Exit].

Changing the Order of Jobs

You can change the order of jobs in the job list.

- 1. Press [Job List].
- 2. Select a job whose order you want to change.



- 3. Press [Change Order].
- 4. Change the order using [Top], [Previous], or [Next].



5. Press [OK].

Holding Jobs

You can hold jobs that are queued or currently printing.

- 1. Press [Job List].
- 2. Select a job you want to hold.



3. Press [Suspend Printing].

The selected job and the jobs that follow it are suspended. "Suspended" is displayed at the left of the jobs in the job list that are suspended.



- To resume the suspended jobs, press [Resume Printing].
- This function is available only if [Job Order] is specified.

Deleting Jobs

You can delete a job that is queued or currently printing.

- 1. Press [Job List].
- 2. Select a job you want to delete.



To delete multiple print jobs, select all print jobs you want to delete.

- 3. Press [Delete Reservation].
- 4. Press [OK].

Checking the Job History

You can view the history and contents of completed print jobs.

- 1. Press [Job List].
- 2. Press [Job History].

A list of completed print jobs appears.

- 3. Select a job whose contents you want to check.
- 4. Press [Details], and then check the contents.
- 5. Press [Exit].


Setting Paper on the Bypass Tray

This section gives instructions for setting paper on the bypass tray.

For details about paper size and paper type, see "Paper Size and Paper Type", About This Machine.

Mportant (

- Paper sizes that can be loaded onto the bypass tray are 100 ⁻ 305 mm (3.94 ⁻ 12 in.) vertical, and 148 ⁻ 457.2 mm (5.83 ⁻ 18 in.) horizontal.
- When paper larger than 458 mm (18.1 in.) in length is used, the paper may become wrinkled, may not be fed into the machine, or may cause paper jams.
- The machine can automatically detect the following sizes as regular size copy paper:
 - 220-240V A3□, A4□, A5□, 8 " × 13 "□
 - 120V A3 \square , 11 " × 17 " \square , 81/2" × 14 " \square , 51/2" × 81/2" \square
- If you want to use the size of paper other than the above, be sure to specify the size.
- The following functions are disabled when printing from the bypass tray:
 - Duplex / Booklet printing
 - Auto Tray Select
 - Auto Tray Switching
 - Rotating Collate
 - Staple (when the optional Finisher SR4010, Finisher SR4020, or SR5000 is installed)
 - Punch (when the optional Finisher SR4010, Finisher SR4020, or SR5000, and Punch Unit is installed)
 - Z-fold (when the optional Finisher SR4020, Finisher SR5000 and Z-folding unit is installed)
- 1. Open the bypass tray.

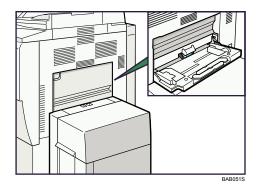


2. Gently insert paper face up into the bypass tray until the beeper sounds, and then adjust the paper guides to the paper size.

If the paper size of the paper guide and the paper do not match, skewing and misfeeds might occur.

Do not stack paper over the limit mark, otherwise a skewed image or misfeeds might occur.

Open out the extender to support paper sizes larger than A4\$\sum_, 8\$^1/2" \times 11 "\$\sum_.

Fan the paper to get air between the sheets to avoid a multi-sheet feed.

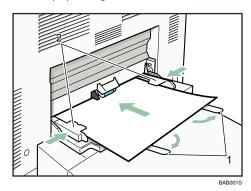

- 1. Extender
- 2. Paper Guide
- 3. Set the paper size using the printer driver or the control panel.



- When loading thick paper, thin paper, or OHP transparencies, set paper size and paper type.
- The number of sheets that can be loaded in the bypass tray depends on the paper type.
- When loading letterhead paper, see "Loading Paper", General Settings Guide.
- Depending on the environment where the machine is being used, you might at times hear a rustling noise from paper moving through the machine. This noise does not indicate a malfunction.
- When the Panel Key Sound is turned off, it will not sound if you insert paper into the bypass tray. For
 details about Panel Key Sound, see "System Settings", General Settings Guide.
- The bypass tray is not usable when the wide large capacity tray (Wide LCT) is installed. For details
 about setting paper on the Wide LCT, see "Changing the Paper Size", Trouble Shooting.
- For details about setting printer drivers, see the printer driver Help.


Setting the Paper Size Using the Control Panel

Follow the procedure below to set the machine using the control panel when loading standard size paper onto the bypass tray.



 The following procedures are not required if you select [Driver / Command] from [Bypass Tray Setting Priority] in [System] of [Printer Features] (see "Printer Features", General Settings Guide). In that case, set the paper size using the printer driver.


- Under [Printer Features], [System], if you set [Bypass Tray Setting Priority] to [Driver / Command],
 paper size settings made on the printer driver must match those made on the control panel. If they do
 not match, an error message appears and printing stops if [Printer Features], [System], [Auto Continue]
 is not set. For details about [Printer Features] settings, see General Settings Guide.
- 1. Press the [User Tools/Counter] key on the control panel.

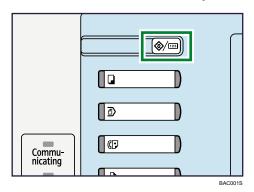

2. Press [System Settings].



- 3. Press the [Tray Paper Settings] tab.
- 4. Press [Printer Bypass Paper Size].

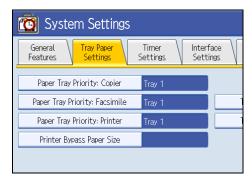

5. Select the paper size.



- 6. Press [OK].
- 7. Press the [User Tools/Counter] key.

The initial screen appears.

••• Note

- When loading thick paper, thin paper, or OHP transparencies, set paper size and paper type.
- [Auto Detect] is the default setting for [Printer Bypass Paper Size].
- The bypass tray is not usable when the Wide LCT is installed. For setting paper on the Wide LCT, see "Changing the Paper Size", Trouble Shooting.
- For details about setting printer drivers, see the printer driver Help.


Setting Custom Size Paper Using the Control Panel

Follow the procedure below to set the machine using the control panel when loading custom size paper onto the bypass tray.




- The following procedures are not required if you select [Driver / Command] from [Bypass Tray Setting Priority] in [System] of [Printer Features] (see "Printer Features", General Settings Guide). In that case, set the paper size using the printer driver.
- If you select [Machine Settings] from [Bypass Tray Setting Priority] in [System] of [Printer Features]
 (see "Printer Features", General Settings Guide), the settings made using the control panel have priority
 over the printer driver settings.
- If the printer driver is not used, select [Machine Settings] from [Bypass Tray Setting Priority] in [System] of [Printer Features] (see "Printer Features", General Settings Guide). Set paper size using the control panel.

1. Press the [User Tools/Counter] key on the control panel.

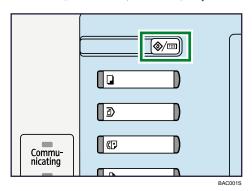


- 2. Press [System Settings].
- 3. Press the [Tray Paper Settings] tab.
- 4. Press [Printer Bypass Paper Size].
- 5. Press [Custom Size].

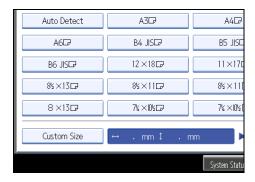

If a custom size is already set, press [Change Size].

6. Press [Vertical], enter the vertical size of the paper using the number keys, and then press the [#] key.

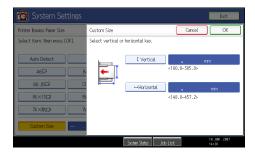

Press [Horizontal], enter the horizontal size of the paper using the number keys, and then
press the [#] key.

8. Press [OK].

The paper sizes entered are displayed.

- 9. Press [OK].
- 10. Press the [User Tools/Counter] key.

The initial screen appears.




- When loading thick paper, thin paper, or OHP transparencies, set paper size and paper type.
- [Auto Detect] is the default setting for [Printer Bypass Paper Size].
- The bypass tray is not usable when the Wide LCT is installed. For details about setting paper on the Wide LCT, see "Changing the Paper Size", Trouble Shooting.
- For details about setting printer drivers, see the printer driver Help.

Setting Thick Paper, Thin Paper, or OHP Transparencies Using the Control Panel


Follow the procedure below to set the machine using the control panel when loading thick paper, thin paper, or OHP transparencies onto the bypass tray.

- The following procedures are not required if you select [Driver / Command] from [Bypass Tray Setting Priority] in [System] of [Printer Features] (see "Printer Features", General Settings Guide). In that case, set the paper size using the printer driver.
- If you select [Machine Settings] from [Bypass Tray Setting Priority] in [System] of [Printer Features]
 (see "Printer Features", General Settings Guide), the settings made using the control panel have priority
 over the printer driver settings.
- If the printer driver is not used, select [Machine Settings] from [Bypass Tray Setting Priority] in [System] of [Printer Features] (see "Printer Features", General Settings Guide). Set the paper size using the control panel.
- When printing onto OHP transparencies, paper thinner than 66.0 g/m² (about 18 lb.), or paper of 101 g/m² (about 26 lb.) or above, you need to specify the type and size of paper with Tray Paper Settings in User Tools Menu. For details about Tray Paper Settings, see "System Settings", General Settings Guide.
- Do not use color OHP transparencies that have easily melted coatings.
- When printing onto OHP transparencies, use A4 $^{\square}$, or 8 $^{1}/_{2}$ " \times 11 " $^{\square}$, size sheets, and specify its size.

1. Press the [User Tools/Counter] key on the control panel.

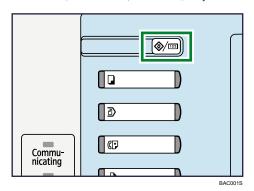

- 2. Press [System Settings].
- 3. Press the [Tray Paper Settings] tab.
- 4. Press [▼Next] to scroll through the list.
- 5. Press [Paper Type: Bypass Tray].

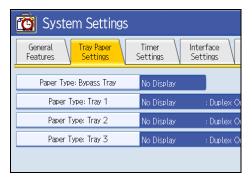


6. Select the proper items, according to the paper type you want to set.

Press [OHP (Transparency)] on the [Paper Type] area when loading OHP transparencies.



Press [No Display] on the [Paper Type] area, and then press [Thick Paper 1], [Thick Paper 2], [Thick Paper 3], or [Thin paper] on the [Paper Thickness] area when loading thick paper or thin paper.

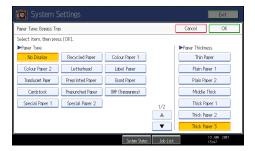

7. Press [OK].

The paper type selected is displayed.

8. Press the [User Tools/Counter] key.

The initial screen appears.



- Printing on special paper such as thick paper, thin paper, or OHP transparencies may be slower than
 printing on plain paper.
- The settings made will remain valid until they are reset again. After printing on OHP transparencies
 or thick paper, thin paper, make sure to clear settings for the next user.
- The bypass tray is not usable when the Wide LCT is installed. For details about Paper Type: LCT, see "System Settings", General Settings Guide.
- For details about setting printer drivers, see the printer driver Help.

Setting Envelopes Using the Control Panel


Follow the procedure below to set the machine using the control panel when loading envelopes onto the bypass tray.



- The following procedures are not required if you select [Driver / Command] from [Bypass Tray Setting Priority] in [System] of [Printer Features] (see "Printer Features", General Settings Guide). In that case, set the paper size using the printer driver.
- If you select [Machine Settings] from [Bypass Tray Setting Priority] in [System] of [Printer Features]
 (see "Printer Features", General Settings Guide), the settings made using the control panel have priority
 over the printer driver settings.
- If the printer driver is not used, select [Machine Settings] from [Bypass Tray Setting Priority] in [System]
 of [Printer Features] (see "Printer Features", General Settings Guide). Set paper size using the control
 panel.
- Only envelopes (1) and (2) as shown below are supported.


Envelope types	Supported/Not supported
(1) BAV026S	Supported *1
(2) BAV027S	Supported *1

- * 1 Misfeeds might also occur when using envelopes (1) and (2) depending on the length and shape of the flaps.
- You can load up to 10 envelopes (80 95 g/m², 24 lb.) in the bypass tray at the same time, without
 compressing them. Check the envelopes are not damp, and the top of the stack is not higher than the
 limit mark on the side guide.
- When loading envelopes, be sure to unfold the flaps and position them opposite to the paper feed direction.
- Load type (4) (162 x 229 mm / C5) envelopes flap down, flap fold against the side guide.

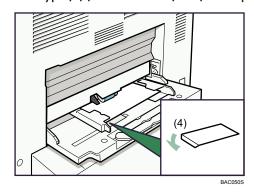


- Depending on the envelope type, specify an appropriate print image rotation using the printer driver. For a type (1), (2), or (4) envelope, rotate by specify 180 degrees.
- To print on type (4) (custom paper size) envelopes using the RPCS printer driver: in the printer driver's [Paper position in tray] area, specify [Place as portrait]. For details, see the printer driver Help.
- Check there is no air in the envelopes before loading.
- To get better print quality, it is recommended that you set the right, left, top, and bottom print margin, to at least 15 mm (0.6 in.) each.

- You cannot print envelopes with duplex function.
- Load only one size and type of envelope at a time.
- Before loading envelopes, flatten leading edges (the side going into the machine) by pressing a pencil or ruler across them.
- Before loading envelopes, check they are rectangular in shape.
- 1. Open the bypass tray, and then insert the envelopes with the side you want to print faceup until the beeper sounds.

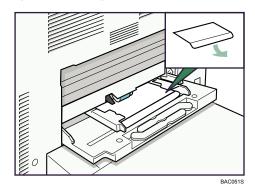


2. Press the [User Tools/Counter] key on the control panel.

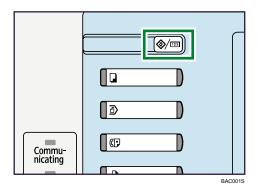


- 3. Press [System Settings].
- 4. Press the [Tray Paper Settings] tab.
- 5. Press [Printer Bypass Paper Size].

6. Press [Custom Size].

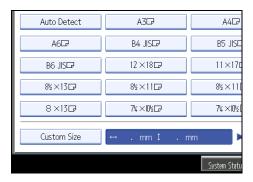

If a custom size is already set, press [Change Size].


7. Press [Vertical], enter the vertical size of the paper using the number keys, and then press the [#] key.

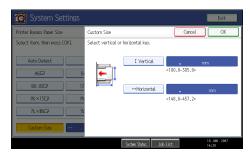

- 8. Press [Horizontal], enter the horizontal size of the paper using the number keys, and then press the [#] key.
- 9. Press [OK].

The paper sizes entered are displayed.

- 10. Press [OK].
- 11. Press [▼Next] to scroll through the list.
- 12. Press [Paper Type: Bypass Tray].

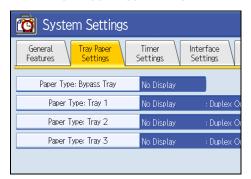

13. Press [No Display] on the [Paper Type] area, and then press [Thick Paper 2] on the [Paper Thickness] area.



14. Press [OK].


The paper type selected is displayed.

15. Press the [User Tools/Counter] key.

The initial screen appears.



· When entering the horizontal size for envelopes, including the opened-out flap in the measurement.

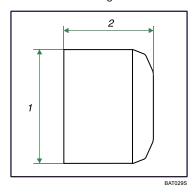

1. Vertical size

2. Horizontal size

- The bypass tray is not usable when the Wide LCT is installed. For details about setting paper on the Wide LCT, see "Changing the Paper Size", Trouble Shooting.
- When printing on envelopes, select [Thick Paper 2] as the paper type. For details about Paper Type: LCT, see "System Settings", General Settings Guide.
- For details about envelopes, see "Envelopes", About This Machine.

1. Preparing the Machine

This chapter describes how to connect this machine to your computer, and install the printer driver.

Confirming the Connection Method

This machine supports network and local connection.

Before installing the printer driver, check how the machine is connected. Follow the driver installation procedure that is appropriate to the connection method.


Network Connection

This machine can be used as a Windows printing port or network printer.

Using this machine as the Windows printing port

Network connections can be established through Ethernet, and Wireless LAN.

Available ports are determined based on the combination of Windows operating system version and connection method used.

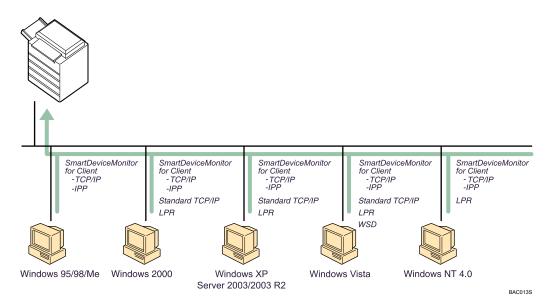

Windows 95 / 98 / Me

Connection Method	Available Ports
Ethernet	SmartDeviceMonitor for Client port

1

Connection Method	Available Ports
Wireless LAN	

Windows 2000 / XP

Connection Method	Available Ports
• Ethernet	SmartDeviceMonitor for Client port
Wireless LAN	Standard TCP/IP port
	• LPR port

Windows Vista

Connection Method	Available Ports
• Ethernet	SmartDeviceMonitor for Client port
Wireless LAN	Standard TCP/IP port
	LPR port
	WSD port

Windows Server 2003 / 2003 R2

Connection Method	Available Ports
• Ethernet	SmartDeviceMonitor for Client port
Wireless LAN	Standard TCP/IP port
	LPR port

Windows NT 4.0

Connection Method	Available Ports
• Ethernet	SmartDeviceMonitor for Client port
Wireless LAN	LPR port

UNote

- See the explanation about how to install the printer driver for each type of port.
- For details about SmartDeviceMonitor for Client port, see "Installing the Printer Driver".
- For details about Standard TCP/IP port, see "Installing the Printer Driver".


- For details about LPR port, see "Installing the Printer Driver".
- For details about WSD port, see "Installing the Printer Driver".

Reference

• p.33 "Installing the Printer Driver"

Using as a network printer

This machine can be used as the Windows network printer, the NetWare print server, or the NetWare remote printer.

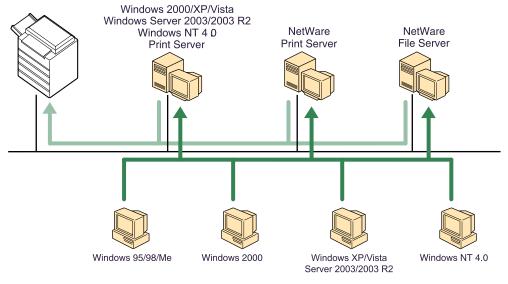

BAC011S

U Note

- In an IPv6 environment, NetWare servers cannot be used.
- See the explanation about how to install the printer driver for each type of network printer.
- For details about Windows network printer, see "Using as a Windows Network Printer".
- For details about NetWare print server and remote printer, see "Using as a NetWare Print Server / Remote Printer".

Reference

- p.44 "Using as a Windows Network Printer"
- p.46 "Using as a NetWare Print Server / Remote Printer"

Local Connection

Local connections can be established via parallel, USB, and Bluetooth connections.

Available connection methods are determined based on the Windows operating system version used.

Windows 95 / 98:

· Parallel connections

Windows 98 SE:

- Parallel connections
- Bluetooth connections

Windows Me / 2000 / XP / Vista:

- USB connections
- · Parallel connections
- Bluetooth connections

Windows Server 2003 / 2003 R2:

- USB connections
- Parallel connections
- Bluetooth connections

Windows NT 4.0:

• Parallel connections



- See the explanation about how to install the printer driver for each method of connections.
- For details about Bluetooth connections, see "Printing with Bluetooth Connection", Network Guide.
- For details about USB connections, see "Installing the Printer Driver Using USB".
- For details about parallel connections, see "Printing with Parallel Connection".

Reference

- p.49 "Installing the Printer Driver Using USB"
- p.54 "Printing with Parallel Connection"

Installing the Printer Driver

This section explains how to install the printer driver. There are two ways to install the printer driver: using Quick Install, which installs the settings at once, or installing the appropriate driver according to the port you want to use.

Downloading the Printer Driver

You can install the printer driver from the CD-ROM provided with this machine or download it from the supplier's Web site.

If your operating system is Windows 95 / 98 / Me, Windows XP Pro x64, Windows Server 2003 / 2003 R2 x64, or Windows NT 4.0, you must download the printer driver from the supplier's Web site. Select this machine and the operating system you are using, and then download it.

Quick Install

Users of Windows 2000 / XP / Vista, and Windows Server 2003 / 2003 R2 can install this software easily using the supplied CD-ROM.

Using Quick Install, the PCL printer driver and/or RPCS printer driver, DeskTopBinder ⁻ SmartDeviceMonitor for Client are installed under network environment, and the TCP/IP port will be set.

- To install the printer driver under Windows 2000 / XP / Vista, and Windows Server 2003 / 2003 R2, you must have an account that has Manage Printers permission. Log on as an Administrator.
- If you connect using USB, see "Installing the Printer Driver Using USB" and install the printer driver.
- 1. Quit all applications currently running.
- 2. Insert the CD-ROM into the CD-ROM drive.

The installer starts.

3. Select an interface language, and then click [OK].

The default interface language is English.

4. Click [Quick Install].

The software license agreement appears in the [License Agreement] dialog box.

- After reading the agreement, click [I accept the agreement.], and then click [Next >].
- 6. Select the machine model you want to use in the [Select Printer] dialog box.

For network connection via TCP/IP, select the machine whose IP address is displayed in [Connect Tol

For parallel connection, select the machine whose printer port is displayed in [Connect To].

1

7. Click [Install].

The printer driver installation starts.

8. Click [Finish].

A message about restarting the computer appears. Restart the computer to complete installation.

9. Click [Exit] in the first dialog box of the installer, and then take out the CD-ROM.

₩Note

- To stop installation of the selected software, click [Cancel] before installation is complete.
- Auto Run may not work with certain operating system settings. If this happens, launch "Setup.exe" on the CD-ROM root directory.
- Select a machine to whose IP address is displayed in [Connect To] to install SmartDeviceMonitor for Client when using TCP/IP.
- Quick Install is not available unless bidirectional communication between the machine and computer
 is enabled via parallel connection. For details about bidirectional communication between the
 machine and computer, see "Making Option Settings for the Printer".

Reference

- p.49 "Installing the Printer Driver Using USB"
- p.56 "Making Option Settings for the Printer"

Installing the Printer Driver for the Selected Port

Using the SmartDeviceMonitor for Client port



- To install SmartDeviceMonitor for Client under Windows 2000 / XP / Vista, and Windows Server 2003 / 2003 R2, you must have an account that has Manage Printers permission. Log on as an Administrator.
- Install SmartDeviceMonitor for Client before installing the printer driver when using the SmartDeviceMonitor for Client port.

Installing SmartDeviceMonitor for Client

- 1. Quit all applications currently running.
- 2. Insert the CD-ROM into the CD-ROM drive.

The installer starts.

3. Select an interface language, and then click [OK].

The default interface language is English.

- 4. Click [DeskTopBinder SmartDeviceMonitor for Client].
- The message to quit all other applications appears. Quit all applications, and then click [Next
 .
- 6. The software license agreement appears in the [License Agreement] dialog box. After reading through its contents, click [Yes].
- 7. Click [Full install] or [Custom install].

[Full install] installs all required applications: DeskTopBinder Lite and SmartDeviceMonitor for Client.

[Custom install] installs selected applications.

- 8. Follow the instructions on the display and then click [Next >] to proceed to the next step.
- 9. After the installation is completed, select one of the options to restart the computer either now or later, and click [Complete].

Restart the computer to complete installation.



- To stop installation of the selected software, click [Cancel] before installation is complete.
- Auto Run may not work with certain operating system settings. If this happens, launch "Setup.exe" on the CD-ROM root directory.

Changing the port settings for SmartDeviceMonitor for Client

Follow the procedure below to change the SmartDeviceMonitor for Client settings, such as TCP/IP timeout, recovery/parallel printing, and printer groups.

Windows 95 / 98:

- On the [Start] menu, point to [Settings], and then click [Printers].
 - The [Printers] window appears.
- 2. Click the icon of the machine you want to use. On the [File] menu, click [Properties].
- 3. Click the [Details] tab, and then click [Port Settings].

The [Port Settings] dialog box appears.

Windows 2000 / Windows NT 4.0:

- 1. On the [Start] menu, point to [Settings], and then click [Printers].
 - The [Printers] window appears.
- 2. Click the icon of the machine you want to use. On the [File] menu, click [Properties].
- 3. On the [Ports] tab, click [Configure Port].

The [Configuration] dialog box appears.

Windows XP, Windows Server 2003 / 2003 R2:

1. On the [Start] menu, click [Printers and Faxes].

The [Printers and Faxes] window appears.

- 2. Click the icon of the machine you want to use. On the [File] menu, click [Properties].
- 3. Click the [Ports] tab, and then click [Configure Port].

The [Port Configuration] dialog box appears.

Windows Vista:

1. On the [Start] menu, click [Control Panel].

The [Control Panel] window appears.

2. Click [Printer].

The [Printers] window appears.

- 3. Right-click the icon of the printer you want to use, and then click [Properties].
- 4. Click the [Ports] tab, and then click [Configure Port].

The [Port Configuration:] dialog box appears.



- For TCP/IP, timeout setting can be configured.
- User, proxy, and timeout settings can be configured for IPP.
- If no settings on the [Recovery/Parallel Printing] tab are available, follow the procedure below.
 - 1. Click [Cancel] to close the [Port Configuration:] dialog box.
 - 2. Start SmartDeviceMonitor for Client, and then right⁻click the SmartDeviceMonitor for Client icon on the task tray.
 - 3. Point to [Properties], and then click [Extended Features Settings].
 - 4. Select the [Set Recovery/Parallel Printing for each port] check box.
 - 5. Click [OK] to close the [Extended Features Settings] dialog box.
- For details about these settings, see "Using SmartDeviceMonitor for Client", Network Guide, or SmartDeviceMonitor for Client Help.

Installing the PCL or RPCS printer driver (TCP/IP)



- To install this printer driver under Windows 2000 / XP / Vista, and Windows Server 2003 / 2003
 R2, you must have an account that has Manage Printers permission. Log on as an Administrators or Power Users group member.
- 1. Quit all applications currently running.

2. Insert the CD-ROM into the CD-ROM drive.

The installer starts.

3. Select an interface language, and then click [OK].

The default interface language is English.

- 4. Click [PCL/RPCS Printer Drivers].
- 5. The software license agreement appears in the [License Agreement] dialog box.

After reading the agreement, click [I accept the agreement.], and then click [Next >].

6. Select the printer driver you want to use in the [Select Program] dialog box.

You can select several printer drivers.

- 7. Click [Next>].
- 8. Select the machine model you want to use.

The printer name can be changed in the [Change settings for 'Printer Name'] box.

9. Double click the printer name to display the printer settings.

The details shown in [Comment], [Driver], and [Port] vary depending on the operating system, printer model, and port.

- 10. Click [Port], and then click [Add].
- 11. Click [SmartDeviceMonitor], and then click [OK].
- 12. Click [TCP/IP], and then click [Search].

A list of printers using TCP/IP appears.

13. Select the printer you want to use, and then click [OK].

Only printers that respond to a broadcast from the computer appear. To use a machine not listed here, click [Specify Address], and then enter the IP address or host name of the machine.

- 14. Check that the port of the selected printer is displayed in [Port].
- 15. Set a user code, if necessary.

Up to 8 numeric characters can be entered. No alphabetic characters or symbols can be entered.

- 16. Select the [Default Printer] check box to configure the printer as default.
- 17. Click [Continue].

Installation starts.

18. After the installation is completed, select one of the options to restart the computer either now or later, and then click [Finish].



 Setting a user code allows a SmartDeviceMonitor for Admin user to display and check statistics about the number of sheets which each user prints. For details, see SmartDeviceMonitor for Admin Help.

- Auto Run may not work with certain operating system settings. If this happens, launch "Setup.exe" on the CD-ROM root directory.
- Under Windows 95 / 98 / Me, you cannot add an IP address partially similar to the one already used. For example, if "192.168.0.2" is in used, "192.168.0.2xx" cannot be used. Similarly, if "192.168.0.20" is in use, "192.168.0.2" cannot be used.
- A message appears if there is a newer version of the printer driver already installed. If there is, you
 cannot install the printer driver using Auto Run. If you still want to install the printer driver, use [Add
 Printer]. See "When a Message Appears during Installation of the Printer Driver", Trouble Shooting.

Installing the PCL or RPCS printer driver (IPP)

Mportant !

- To install printer driver under Windows 2000 / XP / Vista, and Windows Server 2003 / 2003 R2, you must have an account that has Manage Printers permission. Log on as an Administrators or Power Users group member.
- 1. Quit all applications currently running.
- 2. Insert the CD-ROM into the CD-ROM drive.

The installer starts.

3. Select an interface language, and then click [OK].

The default interface language is English.

- 4. Click [PCL/RPCS Printer Drivers].
- 5. The software license agreement appears in the [License Agreement] dialog box.

After reading the agreement, click [I accept the agreement.], and then click [Next>].

6. Select a printer driver you want to use in the [Select Program] dialog box.

You can select several printer drivers.

7. Select the machine model you want to use.

The printer name can be changed in the [Change settings for 'Printer Name'] box.

8. Double click the printer name to display the printer settings.

The details shown in [Comment], [Driver], and [Port] vary depending on the operating system, printer model, and port.

- 9. Click [Port], and then click [Add].
- 10. Click [SmartDeviceMonitor], and then click [OK].
- 11. Click [IPP].

12. In the [Printer URL] box, enter "http://printer's IP address/printer" as the printer's address.

If the server authentication is issued, to enable SSL (a protocol for encrypted communication), enter "https://printer's IP address/printer" (Internet Explorer 5.01, or a higher version must be installed). (example IP address: 192.168.15.16)

http://192.168.15.16/printer

https://192.168.15.16/printer

You can enter "http://printer's IP address/ipp" as the printer's address.

 Enter a name for identifying the printer in [IPP Port Name]. Use a name different from the one of any existing ports.

If a name is not specified here, the address entered in the [Printer URL] box becomes the IPP port name.

14. Click [Detailed Settings] to make necessary settings.

For details about the settings, see SmartDeviceMonitor for Client Help.

- 15. Click [OK].
- 16. Check that the port of the selected printer is displayed in [Port].
- 17. Set a user code, if necessary.

Up to 8 numeric characters can be entered. No alphabetic characters or symbols can be entered.

- 18. Select the [Default Printer] check box to configure the printer as default.
- 19. Click [Continue].

Installation starts.

20. After the installation is completed, select one of the options to restart the computer either now or later, and then click [Finish].

Restart the computer to complete installation.



- To stop installation of the selected software, click [Cancel] before installation is complete.
- Auto Run may not work with certain operating system settings. In that case, launch "Setup.exe" on the CD-ROM root directory.
- Setting a user code allows a SmartDeviceMonitor for Admin user to display and check the number
 of sheets each user prints. For details, see SmartDeviceMonitor for Admin Help.
- A message appears if there is a newer version of the printer driver already installed. If there is, you
 cannot install the printer driver using Auto Run. If you still want to install the printer driver, use [Add
 Printer]. See "When a Message Appears during Installation of the Printer Driver", TroubleShooting.

Using the Standard TCP/IP port

This describes how to install the PCL or RPCS printer driver using the TCP/IP port.

- To install this printer driver under Windows 2000 / XP / Vista, and Windows Server 2003 / 2003
 R2, you must have an account that has Manage Printers permission. Log on as an Administrators or Power Users group member.
- In an IPv6 environment, you cannot use the Standard TCP/IP Port. Use the SmartDeviceMonitor for Client port.

Installing the PCL or RPCS Printer Driver

- 1. Quit all applications currently running.
- 2. Insert the CD-ROM into the CD-ROM drive.

The installer starts.

3. Select an interface language, and then click [OK].

The default interface language is English.

- 4. Click [PCL/RPCS Printer Drivers].
- 5. The software license agreement appears in the [License Agreement] dialog box.

After reading the agreement, click [I accept the agreement.], and then click [Next >].

6. Select a printer driver you want to use in the [Select Program] dialog box.

You can select several printer drivers.

- 7. Click [Next>].
- 8. Select the machine model you want to use.

The printer name can be changed in the [Change settings for 'Printer Name'] box.

9. Double click the printer name to display the printer settings.

The details shown in [Comment], [Driver], and [Port] vary depending on the operating system, printer model, and port.

- 10. Click [Port], and then click [Add].
- 11. Click [Standard TCP/IP Port], and then click [OK].

Configure the Standard TCP/IP port settings, and then see Windows Help if [Standard TCP/IP Port] does not appear.

- 12. Click [Next >] in the [Add Standard TCP/IP Printer Port Wizard] dialog box.
- 13. Enter the printer name or IP address in the [Printer Name or IP Address] box.

The [Port Name] text box automatically obtains a port name. Change this name if necessary.

When the device selection appears, select "RICOH NetworkPrinter Driver C Model".

- 14. Click [Next >].
- 15. Click [Finish] in the [Add Standard TCP/IP Printer Port Wizard] dialog box.

The installation start dialog box reappears.

- 16. Check that the port of the selected printer is displayed in [Port].
- 17. Configure the default printer as necessary.
- 18. Click [Continue].

The printer driver installation starts.

19. After the installation is completed, select one of the options to restart the computer either now or later, and then click [Finish].

Restart the computer to complete installation.



- To stop installation of the selected software, click [Cancel] before installation is complete.
- Auto Run may not work with certain operating system settings. In that case, launch "Setup.exe" on the CD-ROM root directory.
- A message appears if there is a newer version of the printer driver already installed. If there is, you
 cannot install the printer driver using Auto Run. If you still want to install the printer driver, use [Add
 Printer]. See "When a Message Appears during Installation of the Printer Driver", TroubleShooting.

Using the LPR port

This describes how to install the PCL or RPCS printer driver using the LPR port.

Mportant (

To install this printer driver under Windows 2000 / XP / Vista, and Windows Server 2003 / 2003
 R2, you must have an account that has Manage Printers permission. Log on as an Administrators or Power Users group member.

Installing the PCL or RPCS Printer Driver

- 1. Quit all applications currently running.
- 2. Insert the CD-ROM into the CD-ROM drive.

The installer starts.

3. Select an interface language, and then click [OK].

The default interface language is English.

- 4. Click [PCL/RPCS Printer Drivers].
- The software license agreement appears in the [License Agreement] dialog box.

After reading the agreement, click [I accept the agreement.], and then click [Next >].

6. Select a printer driver you want to use in the [Select Program] dialog box.

You can select several printer drivers.

7. Select the machine model you want to use.

The printer name can be changed in the [Change settings for 'Printer Name'] box.

- 8. Click [Next>].
- 9. Double click the printer name to display the printer settings.

The details shown in [Comment], [Driver], and [Port] vary depending on the operating system, printer model, and port.

- 10. Click [Port], and then click [Add].
- 11. Click [LPR Port], and then click [OK].

If [LPR Port] does not appear, see Windows Help and install it.

- 12. Enter the printer's IP address in the [Name or address of server providing lpd] box.
- 13. Enter "lp" in the [Name of printer or print queue on that server] box, and then click [OK].
 The port is added.
- 14. Check that the port of the selected printer is displayed in [Port].
- 15. Configure the default printer as necessary.
- 16. Click [Continue].

The printer driver installation starts.

17. After the installation is completed, select one of the options to restart the computer either now or later, and then click [Finish].

Restart the computer to complete installation.



- To stop installation of the selected software, click [Cancel] before installation is complete.
- Auto Run may not work with certain operating system settings. In that case, launch "Setup.exe" on the CD-ROM root directory.
- A message appears if there is a newer version of the printer driver already installed. If there is, you
 cannot install the printer driver using Auto Run. If you still want to install the printer driver, use [Add
 Printer]. See "When a Message Appears during Installation of the Printer Driver", TroubleShooting.

Using the WSD port

This section explains installation when using the WSD port.



- The WSD port can be used only under Windows Vista.
- To install under Windows Vista, you must have an account that has Manage Printers permission. Log
 on as an Administrator.

- If the machine is connected using the WSD port, bi-directional communication is not possible. For details about bi-directional communication, see "Making Option Settings for the Printer".
- You can connect to the machine only if both the machine and computer are on the same network segment, or Windows Vista "Network discovery" is enabled. For details, see Windows Help.
- 1. Quit all applications currently running.
- 2. On the [Start] menu, click [Network].

The [Network] window appears, and the device search begins automatically.

3. Right-click the machine's icon, and then click [Install].

If the [User Account Control] dialog box appears, click [Continue].

The [Found New Hardware] dialog box appears.

4. Click [Locate and install driver software (Recommended)].

If the [User Account Control] dialog box appears, click [Continue].

- 5. Click [Don't search online].
- Click [Browse my computer for driver software (advanced)].
- 7. Insert the provided CD-ROM into the computer's CD-ROM drive.

If the [AutoPlay] dialog box appears, click the [close] button and then proceed to step 8.

8. Click [Browse...], and then specify a location for the printer driver.

If the CD-ROM drive letter is D, the printer driver's source files are stored in "D:\DRIVERS\RPCS $XP_VISTA(Language)$ DISK1".

9. Click [Next].

If the [Windows can't verify the publisher of this driver software] message appears, click [Install this driver software anyway].

10. Click [Close].

If installation is successful, the icon of the printer connected to the "WSD" port is added to the [Printers] window.



- The port name that follows "WSD" uses random character strings. It cannot be changed freely.
- To stop the installation, click [Cancel] before the installation is complete. When re-installing the WSD
 Port, right-click the machine's icon in the [Network] window, and then click [Uninstall].

Reference

• p.56 "Making Option Settings for the Printer"

Using as a Windows Network Printer

This describes how to install the PCL or RPCS printer driver when using the printer as a Windows network printer.

To use the print server, install the printer driver by selecting "Network printer server", and then select the Windows 2000 / XP / Vista, Windows Server 2003 / 2003 R2, or Windows NT 4.0 shared printer.

This section assumes that the client has already been configured to communicate with a Windows 2000 / XP / Vista, Windows Server 2003 / 2003 R2, or Windows NT 4.0 print server. Do not begin the following procedure before the client is set up and configured correctly.

Mportant !

- To install the printer driver under Windows 2000 / XP / Vista, and Windows Server 2003 / 2003
 R2, you must have an account that has Manage Printers permission. Log on as an Administrators or Power Users group member.
- If you print with a print server connected to the printer using the SmartDeviceMonitor port, Recovery
 Printing and Parallel Printing cannot be used from the client.
- If you print under Windows XP / Vista or Windows Server 2003 / 2003 R2 print server, notification functions of SmartDeviceMonitor may not be used with the client.
- If you print under Windows NT 4.0 print server, install the printer driver before you connect the print server to the printer.

Installing the PCL or RPCS Printer Driver

- 1. Quit all applications currently running.
- 2. Insert the CD-ROM into the CD-ROM drive.

The installer starts.

3. Select an interface language, and then click [OK].

The default interface language is English.

- 4. Click [PCL/RPCS Printer Drivers].
- 5. The software license agreement appears in the [License Agreement] dialog box.

After reading the agreement, click [I accept the agreement.], and then click [Next>].

6. Select the printer driver you want to use in the [Select Program] dialog box.

You can select several printer drivers.

- 7. Click [Next>].
- 8. Select the [Printer Name] check box to select the printer models you want to use.

The printer name can be changed in the [Change settings for 'Printer Name'] box.

9. Double-click the printer name to display the printer settings.

The details shown in [Comment], [Driver], and [Port] vary depending on the operating system, printer model, and port.

- 10. Click [Port], and then click [Add].
- 11. Click [Network Printer], and then click [OK].
- 12. Double click the computer name you want to use as a print server in the [Browse for Printer] window.
- 13. Select the printer you want to use, and then click [OK].
- 14. Check that the port of the selected printer is displayed in [Port].
- 15. Configure the user code as necessary.

For an RPCS printer driver, a user code can be set after the printer driver installation.

For details about user code, see the printer driver Help.

- 16. Select the [Default Printer] check box to configure the printer as default.
- 17. Click [Continue].

The printer driver installation starts.

18. After the installation is completed, select one of the options to restart the computer either now or later, and then click [Finish].

Restart the computer to complete installation.



- To stop installation of the selected software, click [Cancel] before installation is complete.
- Auto Run may not work with certain operating system settings. In that case, launch "Setup.exe" on the CD-ROM root directory.
- A message appears if there is a newer version of the printer driver already installed. If there is, you
 cannot install the printer driver using Auto Run.
- If you still want to install the printer driver, use [Add Printer]. See "When a Message Appears during Installation of the Printer Driver", TroubleShooting.

Using as a NetWare Print Server / Remote Printer

This describes how to set up the Windows computer used as the NetWare client.

Mportant (

- To install this printer driver under Windows 2000 / XP / Vista, Windows Server 2003 / 2003 R2, and Windows NT 4.0, you must have an account that has Manage Printers permission. Log on as an Administrators or Power Users group member.
- In an IPv6 environment, NetWare servers cannot be used.

The following explanation assumes NetWare Client is installed on the client computer and the NetWare server environment is correctly set up. Install all necessary client applications before following this procedure.

Set up the printer driver while logging on to the NetWare file server.

The following values are used in the example:

• Operating system: Windows 98

• NetWare version: 4.1

File server name: CARFF

• Queue name: R-QUEUE

1. Insert the CD-ROM into the CD-ROM drive.

The installer starts.

Auto Run may not work with certain operating system settings. In that case, launch "Setup.exe" on the CD-ROM root directory.

2. Select an interface language, and then click [OK].

The default interface language is English.

- 3. Click [PCL/RPCS Printer Drivers].
- 4. The software license agreement appears in the [License Agreement] dialog box.

After reading the agreement, click [I accept the agreement.], and then click [Next >].

5. Select the printer driver you want to use in the [Select Program] dialog box.

You can select several printer drivers.

- 6. Click [Next >].
- 7. Select the [Printer Name] check box to select the printer model you want to use.

The printer name can be changed in the [Change settings for 'Printer Name'] box.

8. Double-click the printer name to display the printer settings.

The details shown in [Comment], [Driver], and [Port] vary depending on the operating system, printer model, and port.

- 9. Click [Port], and then click [Add].
- 10. Click [Network Printer], and then click [OK].
- 11. Double click the name of the NetWare file server on the network tree.

The created queue is displayed.

- 12. Select the print queue, and then click [OK].
- 13. Check that the port of the selected printer is displayed in [Port].
- 14. Click [Continue].

The printer driver installation starts.

- 15. Click [Finish] in the [Select Program] dialog box.
- 16. After the installation is completed, select one of the options to restart the computer either now or later, and then click [Finish].

Restart the computer to complete installation.

 After restarting the computer, launch the [Printers] window, and then open the printer properties.

Under Windows XP or Windows Server 2003 / 2003 R2, open the printer properties from the [Printers and Faxes] window.

18. On the [Printer Settings] tab, clear the [Form Feed] and [Enable Banner] check boxes.

Under Windows 2000 / XP, Windows Server 2003 / 2003 R2, or Windows NT 4.0, click the [NetWare setting] tab.

Do not select these check boxes since they are automatically selected by the printer driver. If you select the check boxes, the printer may not print correctly.

19. Click [OK] to close the printer properties dialog box.



- To stop installation of the selected software, click [Cancel] before installation is complete.
- The protocol is set to inactive as default. Enable it using SmartDeviceMonitor or Telnet.

Form Feed

Do not use NetWare to configure form feed. Form feed is controlled by the printer driver on Windows. If NetWare form feed is configured, the printer may not print properly.

Follow the procedure below to disable form feed according to the operating system used:

- 1
- Under Windows 95 / 98 / Me, clear the [Form feed] check box on the [Printer Settings] tab in the
 printer properties dialog box.
- Under Windows 2000 / XP / Vista, Windows Server 2003 / 2003 R2, or Windows NT 4.0, clear the [Form feed] check box on the [NetWare Settings] tab in the printer properties dialog box.

Banner Page

Do not use NetWare to configure a banner page.

Follow the procedure below to disable banner pages according to the operating system used:

- Under Windows 95 / 98 / Me, clear the [Enable banner] check box on the [Printer Settings] tab in the printer properties dialog box.
- Under Windows 2000 / XP / Vista, Windows Server 2003 / 2003 R2, or Windows NT 4.0, clear the [Enable banner] check box on the [NetWare Settings] tab in the printer properties dialog box.

Printing after Resetting the Printer

Printer to print server connection requires 30 ⁻ 40 seconds to resume after the printer is reset. During this period, jobs may be accepted (depending on NetWare specifications) but not printed.

To print after resetting the printer as the remote printer, check on the print server that the remote printer is disconnected, or wait for two minutes before trying to print.

Installing the Printer Driver Using USB

This section explains how to install printer drivers using USB.

Before installing, check that only the operating system is running on the computer and no print jobs are in progress.

You can use the printer driver included on the CD-ROM provided with this machine, or can download it from the supplier's Web site.

Windows Me - USB

Mportant !

- Installation via USB is not possible under Windows 95 / 98. Upgrade to Windows Me or later.
- Download USB Printing Support and printer driver for Windows Me from the supplier's Web site.

If the printer driver is already installed and plug⁻and⁻play is enabled, the icon of the printer connected to the "USB" port appears in the [Printers] window.

1. Download USB Printing Support from the supplier's Web site.

Use a search to find the model name, and then download USB Printing Support from the supplier's Web site.

Save it where you can locate it easily.

2. Download the printer driver from the supplier's Web site, and then extract it.

Extract the printer driver where you can locate it easily.

Connect the machine to the computer using a USB cable.

Connect the USB cable firmly.

If USB Printing Support is already installed on the computer proceed to Step 9.

- 4. In the [Found New Hardware Wizard] dialog box, click [Install from a list or specific location (Advanced)], and then click [Next >].
- 5. Select the [Specify a location:] check box, and then click [Browse...].

The [Browse for Folder] dialog box appears.

- 6. Specify the location where USB Printing Support is located, and then click [Next >].
- 7. Check the location, and then click [Next >].

USB Printing Support is installed.

8. Click [Finish].

If the printer driver has already been installed, plug and play is enabled, the icon of the printer connected to the "USB001" port is added to the [Printers] window.

- Install the printer driver. Click [Install from a list or specific location (Advanced)], and then click [Next >].
- 10. Select the [Specify a location:] check box, and then click [Browse...].

The [Browse for Folder] dialog box appears.

- Specify the location where the source files of the printer driver are stored, and then click [Next >].
- 12. Check the location, and then click [Next >].

Add Printer Wizard starts.

13. Click [Finish].

Installation is complete. If the installation is successful, the icon of the printer connected to the "USB001" port appears in the [Printers] window.



- The number after "USB" varies depending on the number of printers that the computer is connected to
- It is not necessary to reinstall USB Printing Support when connecting a different machine via USB interface with USB Printing Support installed.
- After installing USB Printing Support, if the printer driver is not installed, follow the plug⁻and⁻play
 instructions of the printer.

Windows 2000 - USB

Important

 To install a printer driver, you must have Administrator privilege. Log on using an account that has Administrator privilege.

When USB is first used, Found New Hardware Wizard starts, and USB Printing Support is installed automatically.

If the printer driver is already installed and plug⁻and⁻play is enabled, the icon of the printer connected to the "USB" port appears in the [Printers] window.

The printer drivers can be installed from the CD-ROM provided with this machine.

If the printer driver is not already installed, follow the printer's plug⁻and⁻play instructions to install it from the provided CD-ROM.

- 1. Connect the machine to the computer using a USB cable.
 - Connect the USB cable firmly.
- 2. In the [Found New Hardware Wizard] dialog box, click [Search for a suitable driver for my device (recommended)], and then click [Next >].
- 3. Select the [Specify location] check box, and then click [Next >].

4. Insert the CD-ROM into the CD-ROM drive.

When Auto Run starts, click [Exit].

To disable Auto Run, press the left [Shift] key when inserting the CD-ROM into the drive and keep it pressed until the computer finishes reading from the CD-ROM.

5. Specify the location where the source files of the printer driver are stored.

If the CD-ROM drive is D, the source files of the printer driver are stored in the following location:

- RPCS
 - D:\DRIVERS\RPCS\XP_VISTA\(Language)\DISK1
- PCL 5c (for color printing)
 - D: \DRIVERS \PCL5C \XP_VISTA \((Language) \DISK1
- PCL 6
 - D: \DRIVERS \PCL6 \XP_VISTA \(Language) \DISK1
- PostScript 3
 - D: \DRIVERS \PS \XP_VISTA \(Language) \DISK1
- 6. Check the printer driver location, and then click [OK].
- 7. Click [Next>].
- 8. Click [Finish].

If the printer driver has already been installed, and plug and play is enabled, the icon of the printer connected to the "USB001" port appears in the [Printers] window.



 The number after "USB" varies depending on the number of printers that the computer is connected to.

Windows XP, Windows Server 2003 / 2003 R2 - USB



 To install a printer driver, you must have Administrators privilege. Log on using an account that has Administrators privilege.

When USB is first used, Found New Hardware Wizard starts, and USB Printing Support is installed automatically.

If the printer driver is already installed and plug⁻and⁻play is enabled, the icon of the printer connected to the "USB" port appears in the [Printers and Faxes] window.

The printer drivers can be installed from the CD-ROM provided with this machine.

If the printer driver is not already installed, follow the printer's plug⁻and⁻play instructions to install it from the provided CD-ROM.

1. Connect the machine to the computer using a USB cable.

Connect the USB cable firmly.

- In the [Found New Hardware Wizard] dialog box, click [Install the software automatically (Recommended)], and then click [Next >].
- 3. Insert the CD-ROM into the CD-ROM drive.

If Auto Run starts, click [Cancel], and then [Exit].

To disable Auto Run, press the left [Shift] key when inserting the CD-ROM into the drive and keep it pressed until the computer finishes reading from the CD-ROM.

4. Select the [Include this location in the search] check box under [Search for the best driver in these location], and then click [Browse] to select the printer driver location.

If the CD-ROM drive is D, the source files of the printer driver are stored in the following location:

- RPCS
 - D:\DRIVERS\RPCS\XP_VISTA\(Language)\DISK1
- PCL 5c (for color printing)
 - D: \DRIVERS \PCL5C \XP_VISTA \((Language) \DISK1
- PCL 6
 - D: \DRIVERS \PCL6 \XP_VISTA \((Language) \DISK1
- PostScript 3
 - D:\DRIVERS\PS\XP_VISTA\(Language)\DISK1
- 5. Check the printer driver location, and then click [Next >].
- 6. Click [Continue].
- 7. Click [Finish].

If the installation is successful, the icon of the printer connected to the "USB001" port appears in the [Printers and Faxes] window.



 The number after "USB" varies depending on the number of printers that the computer is connected to.

Windows Vista - USB



 To install a printer driver, you must have Administrators privilege. Log on using an account that has Administrators privilege.

If the printer driver is already installed and plug⁻and⁻play is enabled, the icon of the printer connected to the "USB" port appears in the [Printers] window.

The printer drivers can be installed from the CD-ROM provided with this machine.

If the printer driver is not already installed, follow the printer's plug⁻and⁻play instructions to install it from the provided CD-ROM.

1. Connect the machine to the computer using a USB cable.

Connect the USB cable firmly.

The [Found New Hardware] dialog box appears.

2. Click [Locate and install driver software (Recommended)].

If the [User Account Control] dialog box appears, click [Continue].

3. Click [Don't search online].

A message prompting you to insert the provided CD-ROM appears.

4. Insert the provided CD-ROM into the computer's CD-ROM drive.

The printer driver search begins, and a list of printer drivers appears.

5. Select the printer driver you want to use, and then click [Next].

If the [Windows can't verify the publisher of this driver software] message appears, click [Install this driver software anyway].

6. Click [Close].

If the installation is successful, the icon of the printer connected to the "USB001" port appears in the [Printers] window.



The number after "USB" varies depending on the number of printers that the computer is connected
to.

Printing with Parallel Connection

This describes how to install the PCL or RPCS printer driver when using the parallel port.

To use a machine connected using a parallel interface, click [LPT1] when installing the printer driver.

Mportant (

To install this printer driver under Windows 2000 / XP / Vista, and Windows Server 2003 / 2003
 R2, you must have an account that has Manage Printers permission. Log on as an Administrators or Power Users group member.

Installing the PCL or RPCS Printer Driver

- 1. Quit all applications currently running.
- 2. Insert the CD-ROM into the CD-ROM drive.

The installer starts.

3. Select an interface language, and then click [OK].

The default interface language is English.

- 4. Click [PCL/RPCS Printer Drivers].
- 5. The software license agreement appears in the [License Agreement] dialog box.

After reading the agreement, click [I accept the agreement.], and then click [Next>].

6. Select the printer driver you want to use in the [Select Program] dialog box.

You can select several printer drivers.

- 7. Click [Next>].
- 8. Select the [Printer Name] check box to select the printer model you want to use.

The printer name can be changed in the [Change settings for 'Printer Name'] box.

9. Double click the printer name to display the printer settings.

The details shown in [Comment], [Driver], and [Port] vary depending on the operating system, printer model, and port.

- 10. Check that [LPT1:] is shown in [Port].
- 11. Select the [Default Printer] check box to configure the printer as default.
- 12. Click [Finish].

The printer driver installation starts.

13. After the installation is completed, select one of the options to restart the computer either now or later, and then click [Finish].

Restart the computer to complete installation.

1

UNote

- To stop installation of the selected software, click [Cancel] before installation is complete.
- Auto Run may not work with certain operating system settings. In that case, launch "Setup.exe" on the CD-ROM root directory.
- A message appears if there is a newer version of the printer driver already installed. If there is, you cannot install the printer driver using Auto Run. If you still want to install the printer driver, use [Add Printer]. See "Massages Displayed When Installing the Printer Driver", Trouble Shooting.

1

Making Option Settings for the Printer

Make option settings for the machine using the printer driver when bidirectional communication is disabled.

Conditions for Bidirectional Communication

Bidirectional communication allows information about paper size and feed direction settings to be automatically sent to the printer. You can check machine status from your computer.

- Bidirectional communication is supported by Windows 95 / 98 / Me / 2000 / XP / Vista, Windows Server 2003 / 2003 R2, and Windows NT 4.0.
- If you use the RPCS printer driver and bidirectional communication is enabled under Windows 2000, the [Change Accessories] tab is unavailable.



- The RPCS printer driver supports bidirectional communication and updates the machine status automatically.
- The PCL printer driver supports bidirectional communication. You can update the machine status manually.

To support bidirectional communication, the following conditions must be met:

When connected with parallel cables

- The computer must support bidirectional communication.
- The machine must support bidirectional communication.
- The interface cable must support bidirectional communication.
- The machine must be connected to the computer using the standard parallel cables and parallel connectors.
- Under Windows 2000, [Enable bidirectional support] must be selected, and [Enable printer
 pooling] must not be selected on the [Ports] tab with the RPCS printer driver.

When connected with the network

- The machine must support bidirectional communication.
- SmartDeviceMonitor for Client included on the CD-ROM must be installed, and TCP/IP must be
 used.
- Under Windows 2000 / XP / Vista, Windows Server 2003 / 2003 R2, [Enable bidirectional support] must be selected, and [Enable printer pooling] must not be selected on the [Ports] tab with the RPCS printer driver.
- In addition to the above, one of the following conditions must also be met:
 - The SmartDeviceMonitor for Client port and the TCP/IP protocol must be used.
 - Microsoft TCP/IP print IP address must be specified for use (for Windows NT 4.0).

• IPP port name must include the IP address when using the IPP protocol.

When connected with USB

- The machine must be connected to the computer's USB port using the USB interface cable (for Windows Me / 2000 / XP / Vista, Windows Server 2003 / 2003 R2).
- The computer must support bidirectional communication.



• Install SmartDeviceMonitor for Client from the supplied CD-ROM.

If Bidirectional Communication Is Disabled

Set up option settings when bidirectional communication is disabled.



- Under Windows 2000 / XP / Vista, and Windows Server 2003 / 2003 R2, Manage Printers
 permission is required to change the printer properties in the [Printers] folder. Log on as an
 Administrators or Power Users group member.
- Under Windows NT 4.0, Full Control permission is required to change the printer properties in the [Printers] (Windows 2000 / Vista) or [Printers and Faxes] (Windows XP / Windows Server 2003) folder. Log on as an Administrators or Power Users group member.
- 1. On the [Start] menu, click [Printers and Faxes].

The [Printers and Faxes] window appears.

When using Windows 2000, point to [Settings] on the [Start] menu, and then click [Printers]. The [Printers] window appears.

When using Windows Vista, click [Control Panel] on the [start] menu, and then click [Printer]. The [Printers] window appears.

- 2. Click the icon of the printer you want to use.
- 3. On the [File] menu, click [Properties].

When using Windows Vista, right⁻click the icon of the printer you want to use, and then click the [Properties].

4. Click the [Change Accessories] tab.

If options in the [Change Accessories] tab are disabled, bidirectional connection is enabled. In this case, no change is necessary for option settings.

If you are using the RPCS printer driver, click the [Change Accessories] tab.

- Select options installed from the [Select printer options:] area, and then make the necessary settings.
- Select the total amount of the memory in [Total memory:] when the optional SDRAM module is added.

- 1
- 7. Under [Paper source tray settings:], click the tray to be used, and then select the appropriate size, position, and type for the tray. Select the [Do not use Auto Tray Select] check box to exclude the tray from the targets of automatic tray selection.
- 8. Click [OK] to close the printer properties dialog box.

Installing Font Manager

- Under Windows 2000 / XP / Vista, Windows Server 2003 / 2003 R2, or Windows NT 4.0, installing applications by Auto Run requires Administrator privilege. To install a printer driver by Auto Run, log on using an account that has Administrator privilege.
- 1. Quit all applications currently running.
- 2. Insert the CD-ROM into the CD-ROM drive.

The installer starts.

- 3. Click [Font Manager].
- 4. Follow the instructions on the display.

Using Adobe PageMaker Version 6.0, 6.5, or 7.0

Under Windows 95 / 98 / Me / 2000 / XP, Windows Server 2003 / 2003 R2, or Windows NT 4.0 with Adobe PageMaker, you need to copy PPD files to the PageMaker folder.

PPD files have the .ppd extension in the folder "DRIVERS \ PS \ XP_VISTA \ (Language) \ DISK1" on the CD-ROM.

The "XP_VISTA" folder inside the "PS" folder is for Windows 2000 / XP, Windows Server 2003 / 2003 R2. Use the folder that is appropriate for the operating system you are currently using.

The third folder "(Language)" may be substituted by an appropriate language name.

Copy the .ppd file to the PageMaker folder.

• For PageMaker 6.0 default installation

The directory is "C:\PM6\RSRC\PPD4".

• For PageMaker 6.5 default installation

The directory is "C:\PM65\RSRC\USENGLISH\PPD4".

The "USENGLISH" may vary depending on your language selection.

• For PageMaker 7.0 default installation

The directory is "C: \PM7 \RSRC \USENGLISH \PPD4".

The "USENGLISH" may vary depending on your language selection.



- If the driver is not set correctly after copying the ".ppd" file, printing may not be performed properly.
- When using PageMaker, the optional features that can be selected by the printer driver will not be
 active. The following procedure describes how to activate the optional printer features.
 - On the [File] menu, click [Print].
 The [Print Document] dialog box appears.
 - 2. Make the necessary settings in the [Features] box.

2. Setting Up the Printer Driver

This chapter explains the printer properties and how to make changes to the printer settings.

PCL - Accessing the Printer Properties

Windows 95 / 98 / Me - Accessing the Printer Properties

There are two methods to open the [Printer Properties] dialog box.

Making printer default settings

To make the printer default settings, open the [Printer Properties] dialog box from the [Printers] window.



- You cannot change the printer default settings for individual users. Settings made in the [Printer Properties] dialog box are applied to all users.
- On the [Start] menu, point to [Settings], and then click [Printers].
 The [Printers] window appears.
- 2. Click the icon of the printer you want to use.
- 3. On the [File] menu, click [Properties].
- 4. Make the settings you require, and then click [OK].



- With some applications, the printer driver settings are not applied, and the application's own default settings are applied.
- For details, see the printer driver Help.

Making printer settings from an application

You can make printer settings for a specific application.

To make printer settings for a specific application, open the [Printer Properties] dialog box from that application. The following procedure explains making printer settings for Windows 95 / 98 / Me WordPad as an example of how to make printer settings for a specific application.

- On the [File] menu, click [Print].
 The [Print] dialog box appears.
- 2. In the [Name] list, select the printer you want to use.

3. Click [Properties].

The [Printer Properties] dialog box appears.

4. Make the settings you require, and then click [OK].



- Procedures for opening the [Printer Properties] dialog box vary depending on the application. For details, see the manuals provided with the application.
- With some applications, the printer driver settings are not used, and the application's own default settings are applied.
- Any settings you make using this procedure apply to the current application only.
- General users can change the properties displayed in the [Print] dialog box of an application. Settings
 made here are used the defaults when printing from the application.
- For details, see the printer driver Help.

Windows 2000 - Accessing the Printer Properties

Making printer default settings - the printer properties



- To change the printer's default settings (including settings for options), log on using an account that
 has Manage Printers permission. Members of the Administrator and Power Users groups have
 Manage Printers permission by default.
- You cannot change the printer default settings for individual users. Settings made in the [Printer Properties] dialog box are applied to all users.
- 1. On the [Start] menu, point to [Settings], and then click [Printers].

The [Printers] window appears.

- 2. Click the icon of the printer you want to use.
- 3. On the [File] menu, click [Properties].

The [Printer Properties] dialog box appears.

4. Make the settings you require, and then click [OK].



- The settings you make here are used as the default settings for all applications.
- For details, see the printer driver Help.

Making printer default settings - printing preferences

- You cannot change the printer default settings for individual users. Settings made in the [Printer Properties] dialog box are applied to all users.
- On the [Start] menu, point to [Settings], and then click [Printers].
 The [Printers] window appears.
- 2. Click the icon of the printer you want to use.
- On the [File] menu, click [Printing Preferences...].
 The [Printing Preferences] dialog box appears.
- 4. Make the settings you require, and then click [OK].



- The settings you make here are used as the default settings for all applications.
- For details, see the printer driver Help.

Making printer settings from an application

You can make printer settings for a specific application.

To make printer settings for a specific application, open the [Printing Preferences] dialog box from that application. The following procedure explains making printer settings for Windows 2000 WordPad as an example of how to make printer settings for a specific application.

- On the [File] menu, click [Print...].
 The [Print] dialog box appears.
- 2. In the [Select Printer] list, select the printer you want to use.
- 3. Make the settings you require, and then click [OK].



- Procedures for opening the [Printing Preferences] dialog box vary depending on the application. For
 details, see the manuals provided with the application.
- Any settings you make using this procedure apply to the current application only.
- General users can change the properties displayed in the [Print] dialog box of an application. Settings made here are used as defaults when printing from the application.
- For details, see the printer driver Help.

Windows XP, Windows Server 2003 / 2003 R2 - Accessing the Printer Properties

Making printer default settings - the printer properties

☆ Important

- To change the printer's default settings (including settings for options), log on using an account that
 has Manage Printers permission. Members of the Administrators and Power Users groups have
 Manage Printers permission by default.
- You cannot change the printer default settings for individual users. Settings made in the [Printer Properties] dialog box are applied to all users.
- On the [Start] menu, click [Printers and Faxes].
 The [Printers and Faxes] window appears.
- 2. Click the icon of the printer you want to use.
- On the [File] menu, click [Properties].
 The [Printer Properties] dialog box appears.
- 4. Make the settings you require, and then click [OK].



- The settings you make here are used as the default settings for all applications.
- For details, see the printer driver Help.

Making printer default settings - printing preferences

- You cannot change the printer default settings for each user. Settings made in the [Printer Properties]
 dialog box are applied to all users.
- On the [Start] menu, click [Printers and Faxes].
 The [Printers and Faxes] window appears.
- 2. Click the icon of the printer you want to use.
- 3. On the [File] menu, click [Printing Preferences...].
 The [Printing Preferences] dialog box appears.
- 4. Make the settings you require, and then click [OK].



- The settings you make here are used as the default settings for all applications.
- For details, see the printer driver Help.

Making printer settings from an application

You can make printer settings for a specific application.

To make printer settings for a specific application, open the [Printing Preferences] dialog box from that application. The following procedure explains making printer settings for Windows XP WordPad as an example of how to make printer settings for a specific application.

- 1. On the [File] menu, click [Print...].
 - The [Print] dialog box appears.
- 2. In the [Select Printer] list, select the printer you want to use.
- 3. Click [Preferences].
 - The [Printing Preferences] dialog box appears.
- 4. Make the settings you require, and then click [OK].



- Procedures for opening the [Printing Preferences] dialog box vary depending on the application. For
 details, see the manuals provided with the application.
- Any settings you make using this procedure apply to the current application only.
- General users can change the properties displayed in the [Print] dialog box of an application. Settings made here are used the defaults when printing from the application.
- For details, see the printer driver Help.

Windows Vista - Accessing the Printer Properties

Making printer default settings - the printer properties



- To change the printer's default settings (including settings for options), log on using an account that
 has Manage Printers permission. Members of the Administrators group have Manage Printers
 permission by default.
- You cannot change the printer default settings for individual users. Settings made in the [Printer Properties] dialog box are applied to all users.
- 1. On the [Start] menu, click [Control Panel].
 - The [Control Panel] window appears.
- 2. In "Hardware and Sound", click [Printer].
- Right⁻click the icon of the printer you want to use, and then click [Properties].
 The [Printer Properties] dialog box appears.

Make the settings you require, and then click [OK].



- The settings you make here are used as the default settings for all applications.
- For details, see the printer driver Help.

Making printer default settings - printing preferences



- You cannot change the printer default settings for individual users. Settings made in the [Printing Preferences] dialog box are applied to all users.
- On the [Start] menu, click [Control Panel].

The [Control Panel] window appears.

- 2. In "Hardware and Sound", click [Printer].
- Right⁻click the icon of the printer you want to use, and then click [Printing Preferences...].
 The [Printing Preferences] dialog box appears.
- 4. Make the settings you require, and then click [OK].



- The settings you make here are used as the default settings for all applications.
- For details, see the printer driver Help.

Making printer settings from an application

You can make printer settings for a specific application.

To make printer settings for a specific application, open the [Printing Preferences] dialog box from that application. The following procedure explains making printer settings for Windows Vista WordPad as an example of how to make printer settings for a specific application.

1. On the [File] menu, click [Print...].

The [Print] dialog box appears.

- 2. In the [Select Printer] list, select the printer you want to use.
- 3. Click [Preferences].

The [Printing Preferences] dialog box appears.

4. Make the settings you require, and then click [OK].



Procedures for opening the [Printing Preferences] dialog box vary depending on the application. For
details, see the manuals provided with the application.

- Any settings you make using this procedure apply to the current application only.
- General users can change the properties displayed in the [Print] dialog box of an application. Settings
 made here are used the defaults when printing from the application.
- For details, see the printer driver Help.

Windows NT 4.0 - Accessing the Printer Properties

Making printer default settings - the printer properties



- To change the printer's default settings (including settings for options), log on using an account that
 has Full Control permission. Members of the Administrators, Server Operators, Print Operators, and
 Power Users groups have Full Control permission by default.
- You cannot change the printer default settings for each user. Settings made in the [Printer Properties] dialog box are applied to all users.
- 1. On the [Start] menu, point to [Settings], and then click [Printers].

The [Printers] window appears.

- 2. Click the icon of the printer you want to use.
- 3. On the [File] menu, click [Properties].

The [Printer Properties] dialog box appears.

4. Make the settings you require, and then click [OK].



- The settings you make here are used as the default settings for all applications.
- For details, see the printer driver Help.

Making printer default settings

Mportant ...

- To change the printer's default settings (including settings for options), log on using an account that
 has Full Control permission. Members of the Administrators, Server Operators, Print Operators, and
 Power Users groups have Full Control permission by default.
- You cannot change the printer default settings for individual users. Settings made in the [Printer Properties] dialog box are applied to all users.
- 1. On the [Start] menu, point to [Settings], and then click [Printers].

The [Printers] window appears.

- 2. Click the icon of the printer you want to use.
- On the [File] menu, click [Document Defaults].
 The [Default] dialog box appears.
- 4. Make the settings you require, and then click [OK].



- The settings you make here are used as the default settings for all applications.
- For details, see the printer driver Help.

Making printer settings from an application

You can make printer settings for a specific application.

To make printer settings for a specific application, open the [Printer Properties] dialog box from that application. The following procedure explains making printer settings for Windows NT 4.0 WordPad as an example of how to make printer settings for a specific application.

- On the [File] menu, click [Print].
 The [Print] dialog box appears.
- 2. In the [Name] list, select the printer you want to use.
- 3. Click [Properties].

The [Printer Properties] dialog box appears.

4. Make the settings you require, and then click [OK].



- Procedures for opening the [Printer Properties] dialog box vary depending on the application. For details, see the manuals provided with the application.
- With some applications, the printer driver settings are not used, and the application's own default settings are applied.
- Any settings you make using this procedure apply to the current application only.
- General users can change the properties displayed in the [Print] dialog box of an application. Settings
 made here are used the defaults when printing from the application.
- For details, see the printer driver Help.

RPCS - Accessing the Printer Properties

There are two dialog box types of the [Printer Properties] dialog box.

"Multi-tab" is used as an example in this manual. For details about changing the dialog box types, see the printer driver Help.

Multi-tab

This dialog box type is designed for users who often change print settings to perform various printing operations.

Custom Setting

This dialog box type is designed for users who rarely change print settings. This type of dialog box may vary depending on the installed options.

Windows 95 / 98 / Me - Accessing the Printer Properties

Making printer default settings

To make the printer default settings, open the [Printer Properties] dialog box from the [Printers] window.

- You cannot change the printer default settings for individual users. Settings made in the [Printer Properties] dialog box are applied to all users.
- On the [Start] menu, point to [Settings], and then click [Printers].
 The [Printers] window appears.
- 2. Click the icon of the printer you want to use.
- 3. On the [File] menu, click [Properties].

When you open the [Printer Properties] dialog box for the first time after installing the RPCS printer driver, a confirmation message appears. After you click [OK], the [Printer Properties] dialog box appears.

4. Make the settings you require, and then click [OK].



- With some applications, the printer driver settings are not applied, and the application's own default settings are applied.
- For details, see the printer driver Help.

Making printer settings from an application

You can make printer settings for a specific application.

To make printer settings for a specific application, open the [Printer Properties] dialog box from that application. The following procedure explains making printer settings for Windows 95 / 98 / Me WordPad as an example of how to make printer settings for a specific application.

- 1. On the [File] menu, click [Print].
 - The [Print] dialog box appears.
- 2. In the [Name] list, select the printer you want to use.
- 3. Click [Properties].
 - The [Printer Properties] dialog box appears.
- 4. Make the settings you require, and then click [OK].



- Procedures for opening the [Printer Properties] dialog box vary depending on the application. For details, see the manuals provided with the application.
- With some applications, the printer driver settings are not used, and the application's own default settings are applied.
- Any settings you make using this procedure apply to the current application only.
- General users can change the properties displayed in the [Print] dialog box of an application. Settings made here are used the defaults when printing from the application.
- For details, see the printer driver Help.

Windows 2000 - Accessing the Printer Properties

This describes how to launch printer driver's properties.

Making printer default settings - the printer properties

Mportant !

- To change the printer's default settings (including settings for options), log on using an account that
 has Manage Printers permission. Members of the Administrators and Power Users groups have
 Manage Printers permission by default.
- You cannot change the printer default settings for individual users. Settings made in the [Printer Properties] dialog box are applied to all users.
- On the [Start] menu, point to [Settings], and then click [Printers].
 The [Printers] window appears.

- 2. Click the icon of the printer you want to use.
- 3. On the [File] menu, click [Properties].

The [Printer Properties] dialog box appears.

When you open the [Printer Properties] dialog box for the first time after installing the RPCS printer driver, a confirmation message appears. After you click [OK], the [Printer Properties] dialog box appears.

4. Make the settings you require, and then click [OK].



- The settings you make here are used as the default settings for all applications.
- For details, see the printer driver Help.

Making printer default settings - printing preferences



- You cannot change the printer default settings for individual users. Settings made in the [Printer Properties] dialog box are applied to all users.
- 1. On the [Start] menu, point to [Settings], and then click [Printers].

The [Printers] window appears.

- 2. Click the icon of the printer you want to use.
- 3. On the [File] menu, click [Printing Preferences...].

The [Printing Preferences] dialog box appears.

4. Make the settings you require, and then click [OK].



- The settings you make here are used as the default settings for all applications.
- For details, see the printer driver Help.

Making printer settings from an application

You can make printer settings for a specific application.

To make printer settings for a specific application, open the [Printing Preferences] dialog box from that application. The following procedure explains making printer settings for Windows 2000 WordPad as an example of how to make printer settings for a specific application.

- On the [File] menu, click [Print...].
 The [Print] dialog box appears.
- 2. Select the printer you want to use in the [Select Printer] list.

Make the settings you require, and then click [OK].



- Procedures for opening the [Printing Preferences] dialog box vary depending on the application. For
 details, see the manuals provided with the application.
- Any settings you make using this procedure apply to the current application only.
- General users can change the properties displayed in the [Print] dialog box of an application. Settings made here are used the defaults when printing from the application.
- For details, see the printer driver Help.

Windows XP, Windows Server 2003 / 2003 R2 - Accessing the Printer Properties

Making printer default settings - the printer properties

Important

- To change the printer's default settings (including settings for options), log on using an account that
 has Manage Printers permission. Members of the Administrators and Power Users groups have
 Manage Printers permission by default.
- You cannot change the printer default settings for individual users. Settings made in the [Printer Properties] dialog box are applied to all users.
- On the [Start] menu, click [Printers and Faxes].

The [Printers and Faxes] window appears.

- 2. Click the icon of the printer you want to use.
- 3. On the [File] menu, click [Properties].

The [Printer Properties] dialog box appears.

When you open the [Printer Properties] dialog box for the first time after installing the RPCS printer driver, a confirmation message appears. After you click [OK], the [Printer Properties] dialog box appears.

4. Make the settings you require, and then click [OK].



- The settings you make here are used as the default settings for all applications.
- For details, see the printer driver Help.

Making printer default settings - printing preferences



- You cannot change the printer default settings for individual users. Settings made in the [Printer Properties] dialog box are applied to all users.
- On the [Start] menu, click [Printers and Faxes].
 The [Printers and Faxes] window appears.
- 2. Click the icon of the printer you want to use.
- On the [File] menu, click [Printing Preferences...].
 The [Printing Preferences] dialog box appears.
- 4. Make the settings you require, and then click [OK].



- The settings you make here are used as the default settings for all applications.
- For details, see the printer driver Help.

Making printer settings from an application

You can make printer settings for a specific application.

To make printer settings for a specific application, open the [Printing Preferences] dialog box from that application. The following procedure explains making printer settings for Windows XP WordPad as an example of how to make printer settings for a specific application.

- 1. On the [File] menu, click [Print...].
 - The [Print] dialog box appears.
- 2. In the [Select Printer] list, select the printer you want to use.
- 3. Click [Preferences].

The [Printing Preferences] dialog box appears.

4. Make the settings you require, and then click [OK].



- Procedures for opening the [Printing Preferences] dialog box vary depending on the application. For
 details, see the manuals provided with the application.
- Any settings you make using this procedure apply to the current application only.
- General users can change the properties displayed in the [Print] dialog box of an application. Settings
 made here are used the defaults when printing from the application.
- For details, see the printer driver Help.

Windows Vista - Accessing the Printer Properties

Making printer default settings - the printer properties



- To change the printer's default settings (including settings for options), log on using an account that
 has Manage Printers permission. Members of the Administrators group have Manage Printers
 permission by default.
- You cannot change the printer default settings for individual users. Settings made in the [Printer Properties] dialog box are applied to all users.
- On the [Start] menu, click [Control Panel].
 The [Control Panel] window appears.
- 2. In "Hardware and Sound", click [Printer].
- 3. Right-click the icon of the printer you want to use, and then click [Properties].

The [Printer Properties] dialog box appears.

When you open the [Printer Properties] dialog box for the first time after installing the RPCS printer driver, a confirmation message appears. After you click [OK], the [Printer Properties] dialog box appears.

4. Make the settings you require, and then click [OK].



- The settings you make here are used as the default settings for all applications.
- For details, see the printer driver Help.

Making printer default settings - printing preferences



- You cannot change the printer default settings for individual users. Settings made in the [Pinter Preferences] dialog box are applied to all users.
- 1. On the [Start] menu, click [Control Panel].

The [Control Panel] window appears.

- 2. In "Hardware and Sound", click [Printer].
- 3. Right-click the icon of the printer you want to use, and then click [Printing Preferences...].

 The [Printing Preferences] dialog box appears.
- 4. Make the settings you require, and then click [OK].



- The settings you make here are used as the default settings for all applications.
- For details, see the printer driver Help.

Making printer settings from an application

You can make printer settings for a specific application.

To make printer settings for a specific application, open the [Printing Preferences] dialog box from that application. The following procedure explains making printer settings for Windows Vista WordPad as an example of how to make printer settings for a specific application.

- On the [File] menu, click [Print...].
 The [Print] dialog box appears.
- 2. In the [Select Printer] list, select the printer you want to use.
- Click [Preferences].
 The [Printing Preferences] dialog box appears.
- 4. Make the settings you require, and then click [OK].



- Procedures for opening the [Printing Preferences] dialog box vary depending on the application. For
 details, see the manuals provided with the application.
- Any settings you make using this procedure apply to the current application only.
- General users can change the properties displayed in the [Print] dialog box of an application. Settings made here are used the defaults when printing from the application.
- For details, see the printer driver Help.

Windows NT 4.0 - Accessing the Printer Properties

Making printer default settings - the printer properties



- To change the printer's default settings (including settings for options), log on using an account that
 has Full Control permission. Members of the Administrators, Server Operators, Print Operators, and
 Power Users groups have Full Control permission by default.
- You cannot change the printer default settings for individual users. Settings made in the [Printer Properties] dialog box are applied to all users.

1. On the [Start] menu, point to [Settings], and then click [Printers].

The [Printers] window appears.

- 2. Click the icon of the printer you want to use.
- 3. On the [File] menu, click [Properties].

The [Printer Properties] dialog box appears.

When you open the [Printer Properties] dialog box for the first time after installing the RPCS printer driver, a confirmation message appears. After you click [OK], the [Printer Properties] dialog box appears.

4. Make the settings you require, and then click [OK].



- The settings you make here are used as the default settings for all applications.
- For details, see the printer driver Help.

Making printer default settings - default



- To change the printer's default settings (including settings for options), log on using an account that
 has Full Control permission. Members of the Administrators, Server Operators, Print Operators, and
 Power Users groups have Full Control permission by default.
- You cannot change the printer default settings for individual users. Settings made in the [Printer Properties] dialog box are applied to all users.
- 1. On the [Start] menu, point to [Settings], and then click [Printers].

The [Printers] window appears.

- 2. Click the icon of the printer you want to use.
- 3. On the [File] menu, click [Document Defaults...].

The [Default] dialog box appears.

4. Make the settings you require, and then click [OK].



- The settings you make here are used as the default settings for all applications.
- For details, see the printer driver Help.

Making printer settings from an application

You can make printer settings for a specific application.

To make printer settings for a specific application, open the [Printer Properties] dialog box from that application. The following procedure explains making printer settings for Windows NT 4.0 WordPad as an example of how to make printer settings for a specific application.

- 1. On the [File] menu, click [Print].
 - The [Print] dialog box appears.
- 2. In the [Name] list, select the printer you want to use.
- 3. Click [Properties].

The [Printer Properties] dialog box appears.

4. Make the settings you require, and then click [OK].



- Procedures for opening the [Printer Properties] dialog box vary depending on the application. For details, see the manuals provided with the application.
- With some applications, the printer driver settings are not used, and the application's own default settings are applied.
- Any settings you make using this procedure apply to the current application only.
- General users can change the properties displayed in the [Print] dialog box of an application. Settings
 made here are used the defaults when printing from the application.
- For details, see the printer driver Help.

Black and White Printing when [Photograph] or [DTP] is Selected for [Document type]

If you select [Photograph] or [DTP] for [Document type] in the [Printing Preferences] dialog box, black areas of text and line art might be detected as color images, depending the application you are using. If this happens, the document might be printed and counted as a CMYK image.

To print and count the document as a Black and White image, use the following procedure to set the color to black and white in the printer driver.

- In the printer driver's [Printing Preferences] dialog box, click the [Print Quality] tab.
- 2. Select the [User settings] check box.
- 3. In the list box, select a user setting.
- 4. Click [Change User Settings...].
- 5. On the [Image Adjustments] tab, select a document type in the [Load document types:] list.
 The following document types are selectable:

[Photograph (Quality)], [Photograph (Speed)], [Photograph (High Speed)], [DTP (Quality)], [DTP (Speed)], and [DTP (High Speed)].

6. In the [Gray reproduction (Txt/Line Art):] list, select [K (Black)].

The gray reproduction is set to pure black, and the [Load document types:] list becomes blank. If you select the [Print as bitmap] check box on the [Misc.] tab, the gray reproduction setting is ignored, and black areas of text and line art are printed and counted as CMYK images.

7. Click [OK].



 Black areas of text and line art that were produced using colors other than black and grey are printed out and counted as CMYK images even if they appear as black or grey on the screen.

3. Other Print Operations

This chapter explains the various printing functions, including Sample Print, Locked Print, Hold Print, Stored Print, and PDF Direct Print.

Printing a PDF File Directly

You can send PDF files directly to the machine for printing, without having to open a PDF application.



- This function is possible only when the optional PostScript 3 unit is installed.
- This function is possible for genuine Adobe PDF files only.
- Version 1.3, 1.4, 1.5, and 1.6 PDF files are compatible.
- PDF files created using PDF version 1.5 Crypt Filter functions or more than eight DeviceN Color Space components cannot be printed.
- PDF files created using PDF version 1.6 watermark note functions, extended optional contents, or page size exceeds 5.08 m cannot be printed.
- PDF version 1.7 (Acrobat 8.0) files created without any functions that are exclusive to PDF version 1.7 can be printed.
- Some types of High Compression PDF files may not be printed.



• Paper size errors may occur when printing on custom size paper.

Printing Method

There are the two methods of printing the PDF files directly, either using the DeskTopBinder Lite, or entering commands.

Using DeskTopBinder Lite

Installing DeskTopBinder Lite

Follow the procedure below to install DeskTopBinder Lite.

- 1. Quit all applications currently running.
- Insert the "Scanner Driver and Utilities" CD-ROM into the CD-ROM drive.
 The installer starts.

Auto Run may not work under certain operating system settings. In this case, launch "Setup.exe", located on the CD-ROM root directory.

3. Click [DeskTopBinder Lite].

The [DeskTopBinder Lite] dialog box appears.

- 4. Click [DeskTopBinder Lite], and then click [OK].
- 5. Follow the instructions on the display to install DeskTopBinder Lite.

If you are required to restart the computer after installing DeskTopBinder Lite, restart the computer and continue the configuration.

DeskTopBinder Lite enhancements

Follow the DeskTopBinder Lite enhancement procedure to print PDF files directly.

 On the [Start] menu, point to [All Programs], [DeskTopBinder], and then click [Extended Features Wizard].

The [Extended Features Wizard] dialog box appears.

- Click [Start], and then click [Next>] repeatedly until the [Printing Function2] dialog box appears.
- 3. In the [Printing Function2] dialog box, click [Add...].

The [PDF Direct Print Properties] dialog box appears.

4. Select the driver for this machine, and then click [OK].

The [PDF Direct Print Properties] dialog box closes.

- 5. Click [Next>] repeatedly until [Finish] appears.
- 6. Click [Finish].

Function Palette

The Function palette contains buttons for functions that are already configured through DeskTopBinder Lite enhancement. Using these buttons, you can print Windows files, preview printouts, convert images, and register scanners for documents without having to open DeskTopBinder Lite. You can also use these functions simply by dragging a target file to the button corresponding to the required function and dropping it there.

 On the [Start] menu, point to [All Programs], [DeskTopBinder], and then click [Function Palettel.

An icon for the Function palette is added to the task tray displayed at the bottom right of the screen.

2. Right⁻click the new icon that has been added to the task tray, and then click [Properties...].

The [Properties] dialog box appears.

Click the [Contents] tab, select the [PDF Direct Print] check box at the center, and then click [OK].

The [Properties] screen closes and the [PDF Direct Print] icon is added to the palette.

PDF Direct Printing

Follow the procedure below to print PDF files directly.

 Drag the PDF file you want to print to the PDF Direct Printing icon on the Function Palette and drop it there.

The [Output File List-PDF Direct Print] dialog box appears.

2. Highlight the PDF file you want to print, and then click [OK].

The PDF file is printed.

Printing PDF Password-Protected Documents

Follow the procedure below to print password-protected PDF files.

1. On the [Start] menu, point to [All Programs], [DeskTopBinder], and then click [Extended Features Wizard].

The [Extended Features Wizard] dialog box appears.

- 2. Click [Start], and then click [Next>] repeatedly until the [Printing Function2] dialog box appears.
- 3. In the [Printing Function2] dialog box, click [Properties...].

The [PDF Direct Print Properties] dialog box appears.

- 4. Select the [Use PDF Password] check box at the bottom right of the dialog box, and then click [OK].
- 5. Click [Next>] repeatedly until [Finish] appears.
- 6. Click [Finish].

The [Extended Features Wizard] dialog box closes.

Drag the PDF file you want to print over the PDF Direct Printing icon on the Function Palette and drop it there.

The [Output File List - PDF Direct Print] dialog box appears.


- 8. Click on the PDF file you want to print, making it appear highlighted, and then click [OK].
 The [PDF Direct Print Properties] dialog box appears.
- In the [PDF password:] box at the bottom right of the dialog box, enter the password for the PDF file you want to print, and then click [OK].

The password⁻protected PDF file is printed.



- Before printing a password⁻protected PDF file, perform one of the followings:
 - In the [PDF Direct Print Properties] dialog box, enter the password for the PDF file you want to print
 - Specify a password for the PDF file by selecting [Change PDF Password] in the [PDF Menu] on the machine's control panel.
- If a [PDF Group Password] for the [PDF Menu] has been specified using DeskTopBinder Lite or the
 machine's control panel, the same group password must be set on the other also.

PDF Direct Print Properties

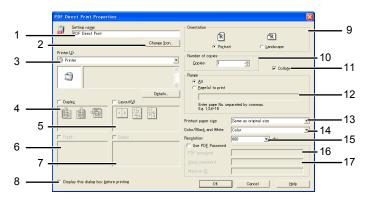

BAC010S

1. Setting name:

Displays the plug⁻in configuration name (up to 63 single byte characters)

2. Change Icon...

Changes the icon displayed on the tool bar.

3. Printer:

Displays a list of RPCS drivers that support PDF direct printing.

4. Duplex

Prints on both sides of sheets.

5. Layout

Prints multiple pages on a single sheet.

6. Punch

Punches holes in printed sheets.

7. Staple

Staples together printed sheets.

8. Display this dialog box before printing

Appears in PDF direct printing mode if this check box is selected.

9. Orientation:

Specify the original's orientation.

10. Number of copies

Specify the number of copies to print.

11. Collate

Sorts printed sheets.

12. Range:

Specify which paper to print.

13. Printout paper size:

Specify the paper size you want copies to be printed onto.

14. Color/Black and White:

Specify color or black-and-white printing.

15. Resolution:

Specify a print resolution.

16. PDF password:

Enter the password for password⁻protected PDF files. A password⁻protected PDF file cannot be printed unless its password is entered here.

17. Group password:

If a group password is assigned to DeskTopBinder Lite and this machine, enter the group password in this field. The group password must be entered for printing to start.

Using Commands

You can print PDF files directly, using commands such as "ftp", "sftp", and "lpr".

For details about UNIX commands, see UNIX Supplement.

Unauthorized Copy Control

You can embed patterns and text under printed text to prevent unauthorized copying of the document. Unauthorized Copy Control consists of two functions: [Data security for copying] and [Mask type:].

 This function is designed to discourage copying of confidential documents; it does not prevent unauthorized use of information.

Opening the Unauthorized Copy Control Window


- 1. In the RPCS printer driver, open the [Printing Preference] window.
- 2. Click [Add/Change Custom Settings...].
- 3. Select the [Unauthorized copy...] check box.
- Click [Control Settings...].
 The [Unauthorized Copy Control] window appears.



• For details, see the printer driver Help.

Using [Data security for copying]

You can embed a print pattern by setting it in the printer driver.

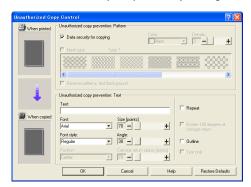


Setting [Data security for copying] in the printer driver

- Select the [Data security for copying] check box. You can also enter the text in the [Text:] box.
- You cannot select the [Mask type:] check box at the same time.
- To print a document protected by gray overprint, the machine must be set up correctly. Consult
 your administrator.

3

Printing a document using [Data security for copying]

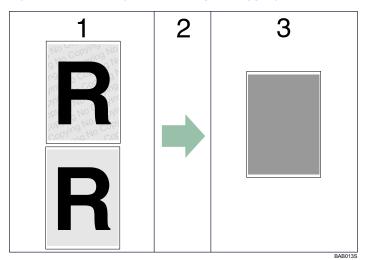


- 1. The pattern and text you have set is printed.
- The document is copied or stored in copiers / multifunction machines which the optional Copy Data Security unit is installed.
- 3. The document is blanked by gray overprint.



- When printing a document that is set with [Data security for copying], the machine does not require
 the optional Copy Data Security unit to be installed. The Copy Data Security unit is required when
 copying or storing a document protected by gray overprint.
- Only the RPCS printer driver is supported.
- Printing at 200 × 200 dpi is not possible.
- You cannot partially embed a pattern and text in a document.
- To make the embedded pattern clear, set the character size at least 50 pt (preferably 70 to 80 pt) and character angle to between 30 and 40 degrees.
- Use $182 \times 257 \text{ mm} (7^{1}/_{4} \times 10^{1}/_{2} \text{ in.})$ or larger paper.
- Use ordinary or recycled paper of at least 70% whiteness.
- Duplex printing may interfere with this function as a result of text and patterns being visible through the paper.
- For details about setting [Data security for copying], see the printer driver Help.

Using [Mask type:]


You can embed patterns and texts in a document by setting in the printer driver to prevent unauthorized copying.

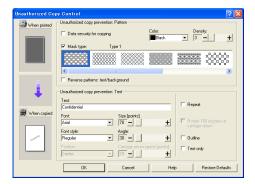

Setting [Mask type:] in the printer driver

- Select a pattern from [Mask type:], and then enter texts in the [Text:] box.
- You can select overprint color from [Black], [Cyan], or [Magenta] in the [Color:] list.
- You can set only [Text:], but [Mask type:] and [Text:] must be set together.

Printing a document using [Mask type:]

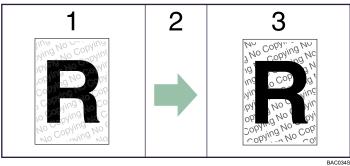

- 1. The pattern and text you have set is printed palely.
- 2. The document is copied, scanned, or stored in copiers / multifunction machines.
- 3. The pattern and text you have set appear clearly.
- Note
 - Only the RPCS printer driver is supported.
 - Printing at 200 × 200 dpi is not possible.
 - You cannot partially embed patterns and texts strings in a document.
 - To make the embedded pattern clear, set the character size at least 50 pt (preferably 70 to 80 pt) and character angle to between 30 and 40 degrees.

- Due to the effects of the settings, the results of copying, scanning, and saving documents in the document server may vary depending on the machine model and setting conditions.
- Printing with background patterns and texts may be slower than normal printing.
- For details about setting [Mask type:], see the printer driver Help.

Important Notice

- The supplier does not provide warranty regarding the appearance of print patterns and other copy
 protection features. The appearance of the print patterns and the performance of Unauthorized Copy
 Control may vary depending on the quality of paper used and the machine model and settings.
- The supplier takes no responsibility for any damages sustained in connection with use of or inability to make use of Unauthorized Copy Control print patterns.

Using the Print Job Function

This describes how to print files stored in the machine.

The following types of printing can be selected using the printer driver: Sample Print, Locked Print, Hold Print, and Stored Print.

You can print or delete the print jobs stored in the machine which is sent from computers.


If you select Sample Print, Locked Print, and Hold Print, the print files stored in the machine are deleted after printing is completed. If you select Stored Print, the files remain in the machine even after printing is finished.

If you press [Print Jobs] on the Printer screen, the Complete List or the List Per User ID screen appears depending on which list type you select from [Initial Print Job List].



Complete List

If you select [Complete List] from [Initial Print Job List], the following screen appears:

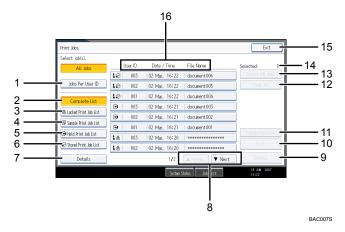

- 1. [Jobs Per User ID]
 - Displays List Per User ID.
- [Complete List]
 Displays all files stored in the machine.
- 3. [Locked Print Job List]

Displays only Locked Print files stored in the machine.

4. [Sample Print Job List]

Displays only Sample Print files stored in the machine.

5. [Hold Print Job List]

Displays only Hold Print files stored in the machine.

6. [Stored Print Job List]

Displays only Stored Print files stored in the machine.

7. [Details]

Displays details about a selected file.

8. [▲Previous] / [▼Next]

If the list of files does not fit on the screen, scroll up or down to view the list.

9. [Delete]

Deletes a selected file.

10. [Print]

Prints a selected file.

11. [Change Password]

Changes or deletes the password of a file if a password is set. To change the password, press [Change Password], enter the current password, and then enter the new password on the confirmation screen. To delete the password, press [Change Password], leave the entering/confirming a new password box blank, and then press [OK].

You can also set passwords to the Stored Print files that do not currently have passwords.

12. [Clear All]

Clears all selections.

13. [Select All Jobs]

Selects all files stored in the machine.

14. Selected:

Displays number of the files selected.

15. [Exit]


Returns to the Printer screen.

16. User ID, Date / Time: , and File Name: display

Displays the time when the instruction to print the stored files was entered, the User IDs, and the file names.

List Per User ID

If you select [List Per User ID] from [Initial Print Job List], the following screen appears:

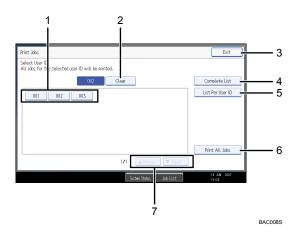

1. User ID

Displays the User IDs who sent files to the machine.

2. [Clear]

Clears a selection.

3. [Exit]

Returns to the Printer screen.

4. [Complete List]

Displays all print jobs.

5. [List Per User ID]

Displays the print job list of each ID.

6. [Print All Jobs]

Prints all selected type of files sent by the user ID.

7. [▲Previous] / [▼Next]

If the list of files does not fit on the screen, scroll up or down to view the list.



- Multiple files can be selected on the Print Jobs screen. To clear selection, press the selected print jobs again.
- The display is not updated if a new file is stored while the list of stored files is displayed. To update the display, press [Exit] to return to the Printer screen, and then press [Print Jobs] again.
- If a large number of print jobs is stored in the machine, processing may slow temporarily, depending on which functions are used.
- If you press [List Per User ID] in the Complete List screen, the screen switches to the List Per User ID screen where [Back] appears at the bottom right. Press [Back] to switch to the Complete List screen.
- For details about Sample Print, Locked Print, Hold Print, and Stored Print, see "Printing from the Print Job Screen".

3




• p.93 "Printing from the Print Job Screen"

Selecting the Initial Print Job List

Follow the procedure below to set the initial Print Jobs screen, and to show it.

Selecting the Initial Print Job List

1. Press the [User Tools/Counter] key.

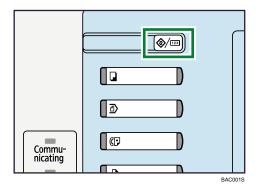

2. Press [Printer Features].

The Printer Features menu appears.


- 3. On the [System] tab, press [Initial Print Job List].
- 4. Select either [Complete List] or [List Per User ID].



After configuring the settings, the selected type of print job list is displayed.

Displaying a Print Job List

1. Press the [Printer] key.

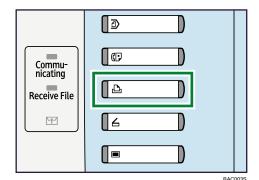

2. Press [Print Jobs].



Either the Complete List or List Per User ID screen appears.

3

3

Printing from the Print Job Screen

This describes about Sample Print, Locked Print, Hold Print, and Stored Print.

Sample Print

Use this function to print only the first set of a multiple-set print job. After you have checked the result, remaining sets can be printed or canceled using the machine's control panel. This can reduce misprints due to mistakes in contents or settings.



- A Sample Print file cannot be stored if:
 - the total number of Sample Print, Locked Print, Hold Print, and Stored Print files in the machine is over 100. (The maximum number varies depending on the volume of data in files.)
 - the file contains over 2,000 pages.
 - the machine's sent or stored files total over 15,000 black-and-white pages. (The total varies depending on the size of the files.)
 - the machine's sent or stored files total over 5,000 color pages. (The total varies depending on the size of the files.)



- If a Sample Print file has not been stored properly, check the error log on the control panel.
- Even after you turn off the machine, stored documents in the machine remain. However, the [Auto Delete Temporary Print Jobs] or [Auto Delete Stored Print Jobs] settings are applied first.
- If the application has a collate option, make sure it is not selected before sending a print job. By
 default, Sample Print jobs are automatically collated by the printer driver. If a collate option is selected
 from the application's [Print] dialog box, more prints than intended may be produced.
- If the first set of the Sample Print files is not as you expected and you do not want to print remaining sets, delete the Sample Print file using the control panel. If you print the remaining sets of the Sample Print file, the job in the machine is deleted automatically.
- For details about the error log on the control panel, see "Checking the Error Log".
- For details about the [Auto Delete Temporary Print Jobs] and [Auto Delete Stored Print Jobs], see
 "Printer Features", General Settings Guide.

Reference

• p.115 "Checking the Error Log"

Printing a Sample Print file

The following procedure describes how to print a Sample Print file with the PCL 6 / 5c and the RPCS printer driver. For details about how to print a Sample Print file with the PostScript 3 printer driver, see PostScript 3 Supplement included as a PDF file on the CD-ROM.




- Applications with their own drivers, such as PageMaker, do not support this function.
- If you are using Mac OS X, you need Mac OS X v10.2 or higher version to use this function.
- Configure Sample Print in the printer driver's properties.
 For details about configuring the printer drivers, see the relevant Help files.
- 2. Start printing from the application's [Print] dialog box.

Make sure to set more than two copies.

The Sample Print job is sent to the machine, and the first set is printed.

- On the machine's control panel, press the [Printer] key to display the Printer screen.
- 4. Press [Print Jobs].

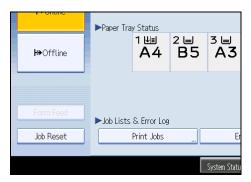

A list of print files stored in the machine appears.

5. Press [Sample Print Job List].



A list of Sample Print files stored in the machine appears.

Depending on the security settings, certain print jobs may not be displayed.

3

6. Select the file you want to print, and press [Print].



7. Enter the new number of sets using the number keys.



You can enter up to 9999 sets.

Press the [Clear/Stop] to correct any entry mistakes.

8. Press [Yes].

The remaining sets are printed.

Press [No] to cancel printing.



- If you select multiple files, the confirmation screen displays the total number of files to be printed.
- If you select multiple documents and do not specify the number of sets on the confirmation screen,
 one set less than the number specified on the computer is printed for every selected document. If the
 number of sets specified on the computer is "1", one set each is printed for every document.
- When printing accumulated sample print documents, you cannot change the numbers of sets.
- When printing is completed, the stored file will be deleted.
- To stop printing after printing has started, press [Exit] until the Printer screen appears, and then press [Job Reset]. The file will be deleted.

Deleting Sample Print files

If you are not satisfied with the sample printout, you can delete the Sample Print file, revise it and print it again until the settings are suitable.

- 1. Press the [Printer] key to display the Printer screen.
- 2. Press [Print Jobs].

A list of the print files stored in the machine appears.

3. Press [Sample Print Job List].

A list of Sample Print files stored in the machine appears.

Depending on the security settings, certain print jobs may not be displayed.

4. Select the file you want to delete, and then press [Delete].

The delete confirmation screen appears.

5. Press [Yes] to delete the file.

The selected file is deleted.



- If you do not want to delete the file, press [No].
- If you select multiple files, the confirmation screen displays the total number of files to be deleted.

Locked Print

Use this function to maintain privacy when printing confidential documents on the machine over a shared network. Usually, it is possible to print data using the control panel once it is stored in this machine. When using Locked Print, it is not possible to print unless a password is entered on the machine's control panel. Your confidential documents will be safe from being viewed by other people.



- A Locked Print file cannot be stored if:
 - the total number of Sample Print, Locked Print, Hold Print, and Stored Print files in the machine is over 100. (The maximum number varies depending on the volume of data in files.)
 - the file contains over 2,000 pages.
 - the machine's sent or stored files total over 15,000 black-and-white pages. (The total varies depending on the size of the files.)
 - the machine's sent or stored files total over 5,000 color pages. (The total varies depending on the size of the files.)



- If a Locked Print file has not been stored properly, check the error log on the control panel.
- Even after you turn off the machine, stored documents remain. However, the [Auto Delete Temporary Print Jobs] or [Auto Delete Stored Print Jobs] settings are applied first.

- If the application has a collate option, make sure it is not selected before sending a print job. Locked
 Print jobs are automatically collated by the printer driver as default. If a collate option is selected in
 the application print dialog box, more sets than intended may be printed.
- After the Locked Print file is printed, the job is automatically deleted.
- For details about the error log on the control panel, see "Checking the Error Log".
- For details about the [Auto Delete Temporary Print Jobs] and [Auto Delete Stored Print Jobs], see
 "Printer Features", General Settings Guide.

Reference


• p.115 "Checking the Error Log"

Printing a Locked Print file

The following procedure describes how to print a Locked Print file with the PCL 6/5c and the RPCS printer driver. For details about how to print a Locked Print file with the PostScript 3 printer driver, see PostScript 3 Supplement included as a PDF file on the CD-ROM.

Mportant !

- Applications with their own drivers, such as PageMaker, do not support this function.
- If you are using Mac OS X, you need Mac OS X v10.2 or higher to use this function.
- Configure the Locked Print in the printer driver's properties.
 For details about configuring the printer drivers, see the corresponding Help files.
- Start printing from the application's [Print] dialog box.The Locked Print job is sent to the machine.
- 3. On the machine's control panel, press the [Printer] key to display the Printer screen.
- 4. Press [Print Jobs].

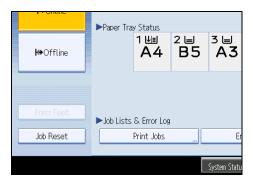

A list of print files stored in the machine appears.


5. Press [Locked Print Job List].



A list of Locked Print files stored in the machine appears.

Depending on the security settings, certain print jobs may not be displayed.

6. Select the file you want to print, and then press [Print].

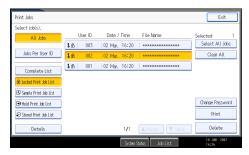

The password screen appears.

7. Enter the password using the number keys, and then press [OK].



The print confirmation screen appears.

A confirmation screen will appear if the password is not entered correctly. Press [Exit] to enter the password again.

If multiple print files are selected, the machine prints files that correspond to the entered password. The number of files to be printed is displayed on the confirmation screen.

If you forgot your password, ask your file administrator for help.

8. Press [Yes].

The locked file is printed.

3

Press [No] to cancel printing.



- When printing is completed, the stored file will be deleted.
- To stop printing after printing has started, press [Exit] until the Printer screen appears, and then press
 [Job Reset]. The file will be deleted.

Deleting Locked Print files

- 1. Press the [Printer] key to display the Printer screen.
- 2. Press [Print Jobs].
- 3. Press [Locked Print Job List].

A list of Locked Print files stored appears.

Depending on the security settings, certain print jobs may not be displayed.

4. Select the file you want to delete, and then press [Delete].

The password screen is displayed.

5. Enter the password using the number keys, and then press [OK].

The delete confirmation screen appears.

A confirmation screen will appear if the password is not entered correctly. Press [Exit] to enter the password again.

If you forget your password, ask your file administrator for help.

6. Press [Yes].

The selected file is deleted.

If you do not want to delete the file, press [No].



• If multiple print files are selected, the machine deletes files that correspond to the entered password. The number of files to be deleted is displayed on the confirmation screen.

Hold Print

Use this function to temporarily hold a file in the machine, and print it from the computer or the machine's control panel later.



- A Hold Print file cannot be stored if:
 - the total number of Sample Print, Locked Print, Hold Print, and Stored Print files in the machine is over 100. (The maximum number varies depending on the volume of data in files.)

- the file contains over 2,000 pages.
- the machine's sent or stored files total over 15,000 black-and-white pages. (The total varies
 depending on the size of the files.)
- the machine's sent or stored files total over 5,000 color pages. (The total varies depending on the size of the files.)



- If a Hold Print file has not been stored properly, check the error log on the control panel.
- Even after you turn off the machine, stored documents in the machine remain. However, the [Auto Delete Temporary Print Jobs] or [Auto Delete Stored Print Jobs] settings are applied first.
- If the application has a collate option, make sure it is not selected before sending a print job. By
 default, Hold Print jobs are automatically collated by the printer driver. If a collate option is selected
 from the application's Print dialog box, more prints than intended may be produced.
- For details about the error log on the control panel, see "Checking the Error Log"
- For details about the [Auto Delete Temporary Print Jobs] and [Auto Delete Stored Print Jobs], see
 "Printer Features", General Settings Guide.

Reference

• p.115 "Checking the Error Log"


Printing a Hold Print file

The following procedure describes how to print a Hold Print file with the PCL 6/5c and the RPCS printer driver. For details about how to print a Hold Print file with the PostScript 3 printer driver, see Postscript 3 Supplement included as a PDF file in the supplied CD-ROM.

☆ Important

- Applications with their own drivers, such as PageMaker, do not support this function.
- If you are using Mac OS X, you need Mac OS X v10.2 or higher to use this function.
- Configure Hold Print in the printer driver's properties.
 For details about configuring the printer drivers, see the relevant Help files.
- 2. Click [Details...], and then enter a User ID in the [User ID:] box.
- Start printing from the application's [Print] dialog box.
 The Hold Print job is sent to the machine and stored.
- 4. On the machine's control panel, press the [Printer] key to display the printer screen.

5. Press [Print Jobs].

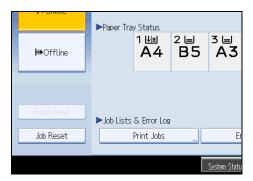

6. Press [Hold Print Job List].



A list of Hold print files stored in the machine appears.

Depending on the security settings, certain print jobs may not be displayed.

7. Select the file you want to print, and press [Print].



The confirmation screen appears.

8. Press [Yes].

The Hold Print file is printed.

Press [No] to cancel printing.



- When printing is completed, the stored file is deleted.
- To stop printing after printing has started, press [Exit] until the Printer screen appears, and then press [Job Reset]. The file will be deleted.

- If you select multiple files, the confirmation screen displays the total number of files to be printed.
- For details about setting printer drivers, see the printer driver Help.
- You can also print or delete a Hold Print file from Web Image Monitor. For details, see Web Image Monitor Help.

Deleting Hold Print files

- 1. Press the [Printer] key to display the Printer screen.
- 2. Press [Print Jobs].

A list of print files stored in the machine appears.

3. Press [Hold Print Job List].

A list of Hold Print files stored in the machine appears.

Depending on the security settings, certain print jobs may not be displayed.

4. Select the file you want to delete, and then press [Delete].

The delete confirmation screen appears.

5. Press [Yes] to delete the file.

The selected file is deleted.

If you do not want to delete the file, press [No].



· If you select multiple files, the confirmation screen displays the total number of files to be deleted.

Stored Print

Use this function to store a file in the machine, and then print it from the computer or the machine's control panel later.

Jobs are not deleted after they are printed, so the same job need not be re-sent in order to print multiple copies.



- A Stored Print file cannot be stored if:
 - the total number of Sample Print, Locked Print, Hold Print, and Stored Print files in the machine is over 100. (The maximum number varies depending on the volume of data in files.)
 - the file contains over 2,000 pages.
 - the machine's sent or stored files total over 15,000 black-and-white pages. (The total varies depending on the size of the files.)

• the machine's sent or stored files total over 5,000 color pages. (The total varies depending on the size of the files.)



- If a Stored Print file has not been stored properly, check the error log on the control panel. Even after
 you turn off the machine, stored documents remain. However, the [Auto Delete Temporary Print Jobs]
 or [Auto Delete Stored Print Jobs] settings are applied first (see "Printer Features", General Settings
 Guide).
- If the application has a collate option, make sure it is not selected before sending a print job. By default, Stored Print jobs are automatically collated by the printer driver. If a collate option is selected from the application's Print dialog box, more prints than intended may be produced. You can optionally set a document title and a password of a Stored Print file. For details about a password setting, see the printer driver Help.
- For details about the error log on the control panel, see "Checking the Error Log".
- For details about the [Auto Delete Temporary Print Jobs] and [Auto Delete Stored Print Jobs], see
 "Printer Features", General Settings Guide.



• p.115 "Checking the Error Log"

Printing a Stored Print file

The following procedure describes how to print a Stored Print file with the PCL 6/5c and the RPCS printer driver. For details about how to print a Stored Print file with the PostScript 3 printer driver, see Postscript 3 Supplement included as a PDF file on the supplied CD-ROM.



- Applications with their own drivers, such as PageMaker, do not support this function.
- If you are using Mac OS X, you need Mac OS X v10.2 or higher to use this function.
- 1. Configure Stored Print in the printer driver's properties.

You can select two methods of Stored Print:

- [Stored Print]
 - Stores the file in the printer and prints it later using the control panel.
- [Store and Normal Print]

Prints the file at once and also stores the file in the machine.

For details about configuring the printer drivers, see the relevant Help files.


2. Click [Details...], and then enter a User ID in the [User ID:] box.

You can also set a password. The same password must be entered when printing or deleting.

3. Start printing from the application's [Print] dialog box.

The Stored Print job is sent to the machine and stored.

- 4. On the machine's control panel, press the [Printer] key to display the Printer screen.
- 5. Press [Print Jobs].

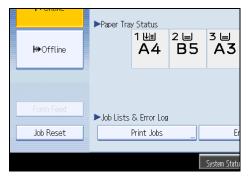

6. Press [Stored Print Job List].



A list of Stored Print files stored in the machine appears.

7. Select the file you want to print, and press [Print].



The confirmation screen appears.

If you set a password in the printer driver, a password confirmation screen appears. Enter the password.

If multiple print files are selected, and some of these require a password, the machine prints files that correspond to the entered password and files that do not require a password. The number of files to be printed is displayed on the confirmation screen.

If you forgot your password, ask your file administrator for help.

8. Enter the number of sets using the number keys.



You can enter up to 9999 sets.

Press the [Clear/Stop] key to correct any entry mistakes.

9. Press [Yes].

The Stored Print file is printed.

Press [No] to cancel printing.



- If you select multiple files, the confirmation screen displays the total number of files to be printed. If
 you select multiple documents, set numbers are determined based on the smallest set number specified
 for a selected document.
- When printing accumulated stored print documents, you cannot change the numbers of sets.
- To stop printing after printing has started, press [Exit] until the Printer screen appears, and then press [Job Reset]. A Stored Print file is not deleted even if [Job Reset] is pressed.
- The Stored Print file that sent to the machine is not deleted unless you delete a file or select [Auto Delete Stored Print Jobs] (see "Printer Features", General Settings Guide).
- For details about setting printer drivers, see the printer driver Help.
- You can also print or delete a Stored Print file from Web Image Monitor. For details, see Web Image Monitor Help.

Deleting Stored Print files

- 1. Press the [Printer] key to display the Printer screen.
- 2. Press [Print Jobs].

A list of print files stored in the machine appears.

3. Press [Stored Print Job List].

A list of Stored Print files stored in the machine appears.

Depending on the security settings, certain print jobs may not be displayed.

4. Select the file you want to delete, and press [Delete].

The delete confirmation screen appears.

If you set the password in the printer driver, enter the password to delete.

If multiple print files are selected, and some of these require a password, the machine deletes files correspond to the entered password and files that do not require a password. The number of files to be deleted is displayed on the confirmation screen.

If you forgot your password, ask your file administrator for help.

5. Press [Yes] to delete the file.

The selected file is deleted.

If you do not want to delete the file, press [No].



• If you select multiple files, the confirmation screen displays the total number of files to be deleted.


Printing from the Jobs Per User ID Screen

This describes how to print the files saved in the machine from the User ID screen.

Printing the Selected Print Job


Press the [Printer] key.
 The Printer screen appears.

2. On the Printer screen, press [Print Jobs].

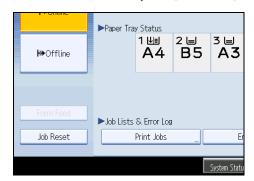

A list of user IDs whose files are stored in the machine appears.

3. Press the user ID whose file you want to print.

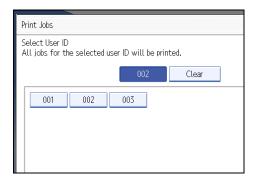


You cannot select multiple user IDs at the same time.

Press [▲Previous] or [▼Next] to scroll through the list.

Press [Clear] to cancel a selection.

4. Press [List Per User ID].

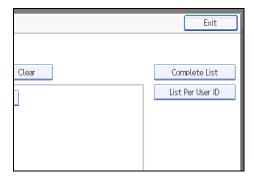

The print job list of the selected user ID appears.

5. Select the desired print jobs.



To cancel a selection, press the highlighted print job again. To clear all selections, press [Clear All].

6. Press [Print].

The confirmation screen appears.

7. Press [Yes].

The selected files are printed.



• If you select multiple files, the confirmation screen displays the total number of files to be printed.


Printing All Print Jobs

1. Press the [Printer] key.

The Printer screen appears.


On the Printer screen, press [Print Jobs].



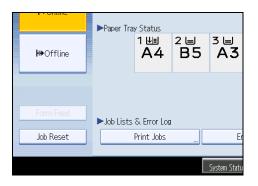

A list of user IDs whose files are stored in the machine appears.

2. Press the user ID whose file you want to print.

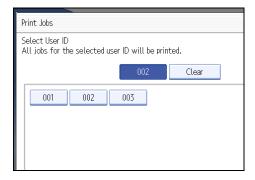


You cannot select multiple user IDs at the same time.

Press [▲Previous] or [▼Next] to scroll through the list.

Press [Clear] to cancel a selection.

3. Press [Print All Jobs].

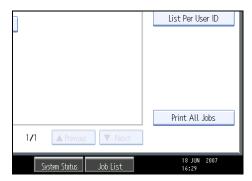

If the selected user ID has multiple types of print jobs, the selection screen of the print job type appears.

4. Select the desired print job type, and then press [OK].



The confirmation screen appears.

The confirmation screen does not appear if the selected ID has only one type of print job.

5. Press [Yes].

The selected files are printed.



- After printing is completed, Sample Print, Locked Print, and Hold Print files are deleted.
- You cannot select a print job that is not stored under the selected user ID.
- If you select multiple Sample Print files and do not specify the number of sets on the confirmation screen, one set less than the number specified on the computer is printed for every selected document. If the number of sets specified on the computer is "1", one set each is printed for every document.
- If you select Stored Print, the number you set on the confirmation screen is applied to all files of the selected print job type. If you do not set a quantity, the minimum number is applied to all files.
- If you select Locked Print, enter the correct password. If there are multiple passwords, the machine prints only files that correspond to the entered password.
- If you select Stored Print files, and some of these require a password, the machine prints files that correspond to the entered password and files that do not require a password.
- The confirmation screen displays the total number of files that have the selected user ID to be printed.

Form Feed

This section gives instructions for operating the machine when there is no tray for the selected paper size or type, or when paper loaded in the machine has run out.



- The tray cannot be changed if the following functions are set:
 - Staple
 - Punch
 - Z-fold
 - Duplex Print to a tray that does not support duplex printing
 - Cover Sheet
 - Back Cover Sheet
 - Slip Sheet
 - Chaptering
 - Chapter Slip Sheets
 - Separation Sheet



- If form feed is selected for a tray with the following settings, you can change the tray by canceling the settings:
 - Staple
 - Punch
 - Z-fold
 - Duplex
- If Auto Continue is selected, form fed paper is printed after a set interval. See "Printer Features", General Settings Guide.

Printing from a Selected Tray

If the machine does not have a tray for the selected paper size or paper type, or if the selected paper loaded in the machine has run out, a caution message appears. If this message appears, do the following procedure.

- 1. Press the [Printer] key.
- 2. Select the tray for form feed from those that appear on the control panel.

 If you want to print after adding paper to the tray, select the tray after loading the correct paper.

3. Press [Continue].

The machine prints using the selected tray.



If a tray with a smaller paper size is selected, the print job may be cut short, or other problems may
occur.

Canceling a Print Job

Follow the procedure below to cancel a print job if the message prompting form feed appears.

1. Press the [Printer] key.

The Printer screen appears.

2. Press [Job Reset] or the [Clear/Stop] key.

Delete the stored print jobs, and then cancel form feed.

3. Press [Reset the Job] to cancel the current print job, or [Reset All Jobs] to cancel all jobs.

A confirmation message appears.

4. Press [Yes] to cancel the print job.

Press [No] to return to the previous display.



- To resume printing print jobs, press [Resume Printing].
- If the machine is shared by multiple computers, be careful not to accidentally cancel someone else's print jobs.
- Under Windows, if the machine is connected to the computer using a parallel cable, sent print jobs
 may be canceled if [Reset All Jobs] is pressed while "Waiting for print data..." is on the control panel.
 After the interval set in [I/O Timeout] in Printer Features has passed, the next print job can be sent. A
 print job sent from a different client computer will not be canceled in this case.
- You cannot stop printing data that has already been processed. For this reason, printing may continue for a few pages after you press [Job Reset] or the [Clear/Stop] key.
- A print job containing a large volume of data may take considerable time to stop.
- For details, see "Canceling a Print Job".

Reference

• p.113 "Canceling a Print Job"


Canceling a Print Job

This section gives instruction to stop printing from the computer or the control panel.

Canceling a Print Job Using the Control Panel

Press the [Printer] key.
 The Printer screen appears.

2. Press [Job Reset].

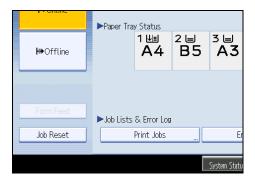

3. Press [Reset the Job] or [Reset All Jobs].



- [Reset the Job]: cancels the print job currently being processed.
- [Reset All Jobs]: cancels all jobs in the print queue.
- [Resume Printing]: resumes printing print jobs.

A confirmation message appears.

- 4. Press [Yes] to cancel the print job.
- 5. Press [No] to return to the previous display.

Windows - Canceling a Print Job from the computer

You can cancel a print job from the computer if transferring print jobs is not completed.

1. Double click the printer icon on the Windows task tray.

A window appears, showing all print jobs currently queued for printing. Check the current status of the job you want to cancel.

- 2. Select the name of the job you want to cancel.
- 3. On the [Document] menu, click [Cancel].
- 4. Press the [Printer] key on the machine's control panel.



- If the machine is shared by multiple computers, be careful not to accidentally cancel someone else's print jobs.
- If the machine is connected to the computer using a parallel cable, sent print jobs may be canceled if [Reset All Jobs] is pressed while "Waiting for print data..." is on the control panel. After the interval set in [I/O Timeout] in Printer Features has passed, the next print job can be sent. A print job sent from a different client computer will not be canceled in this case.
- Under Windows XP / Vista, Windows Server 2003 / 2003 R2, or Windows NT 4.0, click [Cancel] on the [Document] menu.
- Under Windows 95 / 98 / Me / 2000 or Windows NT 4.0, you can also open the print job queue window by double-clicking the machine icon in the [Printers] machine window (the [Printers and Faxes] window under Windows XP and Windows Server 2003).
- You cannot stop printing data that has already been processed. For this reason, printing may continue
 for a few pages after you press [Job Reset].
- A print job containing a large volume of data may take considerable time to stop.

Checking the Error Log


If files could not be stored due to printing errors, identify the cause of the errors by checking the error log on the control panel.



- The most recent 50 errors are stored in the error log. If a new error is added when there are 50 errors already stored, the oldest error is deleted. However, if the oldest error belongs to one of the following print jobs, it is not deleted. The error is stored separately until the number of those errors reaches 30. You can check any of these print jobs for error log information.
 - Sample Print
 - Locked Print
 - Hold Print
 - Stored Print
- If the main power switch is turned off, the error log is deleted.
- 1. Press the [Printer] key.

The Printer screen appears.

2. Press [Error Log].

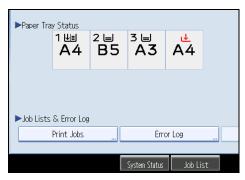

An error log list appears.

Depending on the security settings, certain errors may not be displayed.

3. Press the desired job list.

You can select job list from [Complete List], [Locked Print Job List], [Sample Print Job List], [Hold Print Job List], or [Stored Print Job List].

4. Select the print file you want to check, and then press [Details].

A detailed error log appears.

Press [▲Previous] or [▼Next] to scroll the error files.

- Press [Exit] after checking the log.
- Press [Back to List] to return to the error log list.
- To print files that appear in the error log, resend them after stored files have been printed or deleted.
- [Error Log] is not available in simplified display mode. To view the error log, you must first switch to normal display mode by pressing [Simplified Display] to turn into the normal display mode.

Spool Printing

Spool Printing allows print jobs transferred from a computer to be temporarily stored, and then prints them after they are transferred. This shortens printing time as it maximizes printer efficiency.



- During Spool Printing, the hard disk is accessed and the Data In indicator blinks. Turning off the
 computer or machine during Spool Printing can damage the hard disk. Also, if the computer or machine
 is turned off during Spool Printing, spooled jobs will be deleted. Therefore, do not turn the power of
 the computer or machine off during Spool Printing.
- If data is sent to the machine using other protocols besides "diprint", "lpr", "ipp", "ftp", "sftp", "smb", and "ws-printer", Spool Printing cannot be performed.

Setting Spool Printing

Spool Printing can be set using telnet or Web Image Monitor.

- Using Web Image Monitor
 For details, see Network Guide or Help for more information.
- Using telnet

Type in "spoolsw spool on" to set Spool Printing.

For details, see Network Guide for more information about telnet.

Viewing a list of spool jobs on the control panel

If Spool Printing is set, a list of spooled jobs can be viewed on the control panel screen.

Press the [Printer] key, and then press [Spooling Job List]. A list of spooled jobs appears.

Deleting jobs

Select files to be deleted, and then press [Delete].

Viewing/Deleting spool jobs in Web Image Monitor

Start Web Image Monitor and enter the machine's IP address in the address bar. This displays the top page.

For details, see Network Guide.




- Up to a maximum of 150 jobs at once can be spool printed.
- If Spool Printing is not set, you cannot select [Spooling Job List].
- Printing the first page with Spool Printing will be slow.
- The computer requires less print processing time when large amounts of data are spooled.
- Stored spool jobs can be viewed or deleted using Web Image Monitor.

User Defined Pages

Using this function, you can specify the page numbers for each input tray.

- This function is available with the PCL 6/5c printer driver only.
- If [Document Server] is selected under [Job Type:], User Defined Page cannot be used.
- If [User Defined Pages] is selected under [Paper Selection:] on the [Paper] tab, [Layout:] cannot be selected.

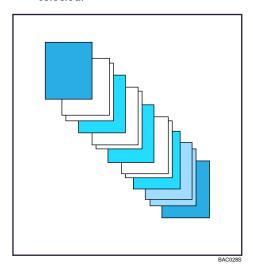

Note

• For details, see the printer driver Help.

3

Printing with the Finisher

You can collate, staple, or punch holes in printed paper by installing the optional finisher. Make sure you read the following precautions when using the optional finisher.

- Make option settings for the machine using the printer driver when bidirectional communication is disabled.
- Be sure to set the paper size and paper orientation in the printer driver when using duplex printing, booklet printing, combined printing (layout), staple, punch and Z-fold functions.
- The machine can have only one of the followings installed at any one time: Finisher SR4010, Finisher SR4020, and Finisher SR5000.



- Depending on the application, print settings may not be enabled and printed output may not be as expected.
- When setting Staple or Collate in the printer driver, make sure that the Collate check box is cleared in the application's [Print] dialog box. If Collate is enabled in the application, printing will not be as intended.
- When printing restarts after removing jammed paper, the printing position may be different, depending on the location of the jam.
 - If the paper jam occurred in the optional finisher, printing will restart from the top page of the data currently being printed, or from the page where the paper jam occurred.
 - If the paper jam occurred in the machine, printing will restart from the page where the paper jam occurred.
 - Even if the paper jam occurred in the machine, the error will not be cleared unless the cover of the finisher is opened and closed.
- For details about duplex printing, booklet printing, or combined printing (layout), see the printer driver Help.
- For details about optional finishers, see General Settings Guide.
- To remove paper misfeeds, see Trouble Shooting.

Staple

With the optional Finisher SR4010, Finisher SR4020, or Finisher SR5000 installed, sets can be stapled individually when printing multiple sets.

Staple position

The specified staple position varies depending on paper size, type, quantity and feed orientation. The following table shows staple positions:

Paper	Print Data	Staple Position		
Orientation on the Machine	Direction	Finisher SR4010/SR5000	Finisher SR4020	
	R Portrait	RRRR	RRRR	
کیا	R Landscape	R R R	R R R	
D.	R Portrait	RRRR	R R R R.R	
	R Landscape	R R R	R R R R	

BAC004S



- Stapling might not be in the specified position if combine (layout) and duplex printing are both selected. After setting the staple position, use the printer driver's preview icon to check the position before printing.
- For paper sizes and maximum numbers of sheets available for stapling, see "Specifications", General Settings Guide.
- For printing methods, see the printer driver Help.

Stapling precautions



• Stapling can be done only with the optional finisher installed.

Staple printing will be canceled under the following conditions:

- If the number of pages to staple exceeds maximum.
- If a paper size that cannot be stapled is selected.
- If a paper type that cannot be stapled is selected.
- If positions other than those fixed for stapling are specified.
- If there are inconsistencies between the orientation in duplex mode and the staple position.
- If there are inconsistencies between the orientation in letterhead mode and the staple position.

- If the paper contains sheets of differing lengths but same widths (like A4□ and A3□,11 "× 17 "□ and 8¹/2 "× 11 "□), and the paper sizes are mixed on a single job.
- When feeding paper from the bypass tray.
- When staples have run out and Auto Continue is set (Printing will continue without stapling after the message has been displayed).
- When only 1 page is printed.
- When staples have run out.



- When the stapling is canceled, "BD: Staple has been cancelled." appears.
- If Staple or Shift Collate is selected with the optional Finisher SR4010, Finisher SR4020, or SR5000 installed, the paper will be output to the finisher shift tray irrespective of the setting.
- When printing on letterhead, stapling may not be at the specified position.
- If you cannot make staple settings even with Finisher SR4010, Finisher SR4020, or SR5000 installed, options may not be set correctly in the printer driver. Correct option settings in the printer driver. For details, see the printer driver Help.
- When the finisher is being used for another function's job (for example, a copy job), printing will start
 after that job ends.
- Be sure to set paper size and orientation in the printer driver when stapling.
- When duplex printing is selected, adjust staple positions to the binding orientation.
- Depending on the application you are using, print settings may not be stored and the printed result
 may not be as expected.
- When setting Staple in the printer driver settings, make sure that a collate option is not selected in the
 print settings of the application. If a collate option is selected in the application, printing will not be
 as intended.
- When using the optional Finisher SR4010, Finisher SR4020, or Finisher SR5000, following paper sizes can be stapled using the Mixed Size mode.
 - A3□ and A4□
 - B4□ and B5□
 - 11" \times 17" \square and 8 $^{1}/_{2}$ " \times 11" \square

Punch

With the optional Finisher SR4010, Finisher SR4020, or SR5000 and Punch Unit installed, holes can be punched into printed outputs.

Punch position

The specified punch position varies depending on paper feed and print data orientation. The following table shows punch positions:

220-240V

Paper Orientation	Print Data	Punch Position	
on the Machine	Direction	2 holes	4 holes
	Portrait	R R	R
	Landscape	·R·	'R'
	Portrait	R	R
—	Landscape	R R.	R R

120V

Paper Orientation	Print Data	Punch Position	
on the Machine	Direction	2 holes	3 holes
	Portrait	R R	R
	Landscape	·R·	Ř
	Portrait	R	R
—	Landscape	R R.	R R

- **U**Note
 - Punch positions will vary slightly from page to page as holes are punched into each sheet individually.
 - The number of holes that can be punched varies according to country.
 - For details about paper sizes that can be punched, see "Supplementary Informations", Copy/ Document Server Reference.
 - For details about printing methods, see the printer driver Help.

Punching precautions

Follow these precautions when using the punch function.



 To use this function, the optional Finisher SR4010, Finisher SR4020, or Finisher SR5000 must be installed on the machine.

Punch printing will be canceled under the following conditions:

- When a paper type that cannot be punched is selected.
- When a paper size that cannot be punched is selected.
- If positions other than those fixed for punching are specified.
- If there are inconsistencies between the orientation in duplex mode and the punch position.
- If there are inconsistencies between the orientation in letterhead mode and the punch position.
- When feeding paper from the bypass tray.
- When the punch receptacle has become full and Auto Continue is set (Printing will continue without punching after the message appears).
- If there are inconsistencies between the staple position and the punch position, when using with staple function.



- When punching is canceled, "BE: Punch has been cancelled." appears.
- Punching might not be in the specified position when printing on letterhead paper.
- If you cannot make punch settings even with the optional finisher installed, options may not be set correctly in the printer driver. Correct option settings in the printer driver. For details, see the printer driver Help.
- When duplex print is selected, adjust the punch position to the binding direction.
- Be sure to set the punch position as same as the staple position when using it with the staple function.
- Be sure to set paper size and orientation in the printer driver when punching.
- Depending on the application, print settings may not be enabled and printed output may not be as expected.
- When setting Punch in the printer driver settings, make sure that a collate option is not selected in the print settings of the application.
- If a collate option is selected in the application, printing will not be as intended.

Collate

When printing multiple documents such as handouts for meetings, you can separate sets into order. This function is known as "Collate". Collate stores data transmitted from a computer to the machine memory or hard disk drive. The followings are the three types of Collate:

 


- If Auto Continue occurs on the first set, Collate will be canceled.
- If forced printing occurs on the first set, Collate will be canceled.
- The Rotating Collate function requires two paper trays containing same size paper but in different orientations.
- If the output tray has shift function, Shift Collate will be applied even if Rotating Collate is selected.
- When setting Collate in the printer driver settings, make sure that a collate option is not selected in the application's print settings. If a collate option is selected, printing will not be as intended.

Collate Types

Collate


Printed output is assembled as sets in sequential order.



BAC016

Rotating Collate

 
Every other print set is rotated by 90 degrees.



Shift Collate

 The optional finisher is required for this function.





The finisher shift tray moves backward or forward when a job or set is output, causing the next to shift, so you can separate them.

When Rotate Collate is cancelled

If the following functions are selected, Collate or Shift Collate will be applied even if Rotating Collate is selected:

- When combined with staple function.
- When combined with punch function.
- If jobs containing pages of various sizes are set.
- When output tray is specified.
- When combined with covers function.
- When combined with slip sheet function.
- · When combined with chaptering function.
- If tab stock is set.
- If custom size paper is set.
- When combined with Z-fold function.
- When combined with Separation Sheet function.

Separation Sheet

Insert a separation sheet between each set.

• Separation sheets are fed from the tray specified in the machine's default settings. For details about the separation sheet tray, see "System Settings", General Settings Guide.



- When Rotating Collate has been selected, printing speed will be slower than with other collate functions.
- Set Collate and Rotating collate when using the RPCS printer driver.
- Separation sheets cannot be inserted if "Slip Sheet" is specified.
- Follow the procedure below when using a printer driver other than the RPCS:
 - Set Collate and Rotating Collate in the printer driver.
 - If you cannot make Shift Collate even with the optional finisher installed, options may not be set
 up correctly in the printer driver. Correct the printer driver's option settings.

• For details, see the printer driver Help.

Covers

Using this function, you can insert cover and back sheets fed from a different tray to that of the body paper, and print on them.



 
- To use this function, Collate must be set. Rotating Collate cannot be set.
- The cover sheets should be the same size and orientation as the body paper.

Cover sheet

Prints the first page of the document on the sheet for the cover page.

Print on one side


Prints on one side of the cover sheet only, even when duplex printing is selected.




Print on both sides

Prints on both sides of the cover sheet when duplex printing is selected.

 
• Cover sheet printed on both sides




• Cover sheet printed on one side

 

- Blank
 - When printing one side

 

• When printing both sides

 


Back Cover

Prints the last page of the document as the back cover pages.


• Print on one side

Prints on one side of the cover sheets only, even when duplex printing is selected.

• Back cover page face inside

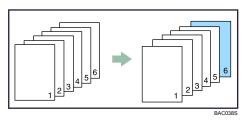


• Back cover page face outside

 


• Print on both sides

Prints on both sides of the cover sheets when duplex printing is selected.


• Back cover page face inside, and the number of pages is odd

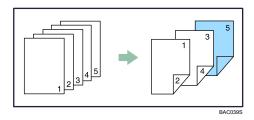

 
• Back cover page face outside, and the number of pages is odd



 • Back cover page face inside, and the number of pages is even



 • Back cover page face outside, and the number of pages is even



U Note


- If "Auto Tray Select" is set as the paper feed tray for the body paper, the paper will be delivered from a tray containing paper in the \square orientation. Therefore, if the cover paper is set to the \square orientation, the orientation of the output cover and body will be different.
- For printing methods, see the printer driver Help.

Chaptering

The specified page is printed on the same side as the first page, like a book. Also, you can insert chapter slip sheets before specified pages, and select whether or not to print on the slip sheets.

No Slip Sheets

The specified page is always printed on the same side as the first page.

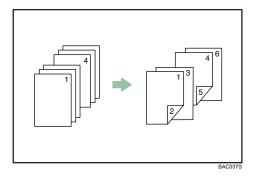

UNote

- This function is only valid with duplex printing.
- You can designate up to 100 locations using the printer driver.
- This function can be used together with combine (layout) printing.
- For details about printing methods, see the printer driver Help.


Inserting Chapter Slip Sheets

Insert chapter slip sheets before the specified page.


• Print

Prints on the chapter slip sheets. When duplex printing is selected, both sides of the slip sheets are printed on.

3

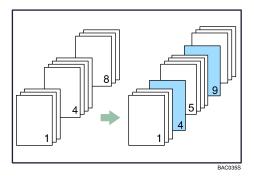

• Blank

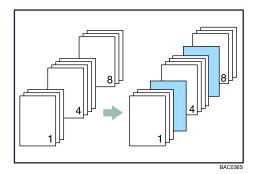

Note


- You can designate up to 100 locations using the printer driver.
- The slip sheet should be the same size and orientation as the body paper.
- If "Auto Tray Select" has been set as the paper feed tray for the body paper, the paper will be delivered
 from a tray containing paper in the D orientation. Therefore, when the slip sheet has been set to the
 D orientation, the orientation of the output slip sheet and body will be different.
- The same paper feed tray cannot be set for the body of the document and the slip sheet.
- For details about printing methods, see the printer driver Help.

Designated Sheet Print


You can print a designated area of a page onto another sheet.



- You cannot specify [Chaptering] or [Designate] inside the [Designated Sheet Print] area.
- When printing one side

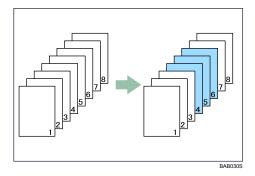

• When printing both sides

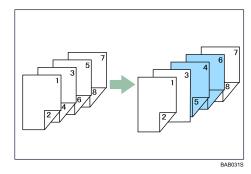


Note

- You can designate up to 100 locations using the printer driver.
- For the slip sheets, specify the same size and orientation as is specified for the main paper.
- For details about printing methods, see the printer driver Help.


Slip Sheet

Inserting a slip sheet between each page

Print

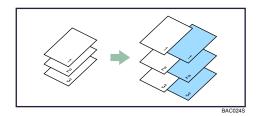


• Blank

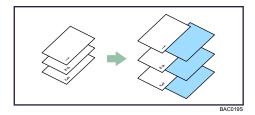


Inserting a slip sheet between OHP transparencies

Print

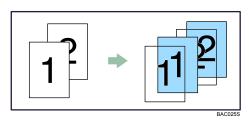

• Blank

 




- Collate cannot be set when using slip sheets.
- When the duplex printing or cover printing is set, you cannot insert slip sheets.
- The slip sheet should be the same size and orientation as the body paper.

- If "Auto Tray Select" has been set as the paper feed tray for the body paper, the paper will be delivered from a tray containing paper in \square orientation. Therefore, when the slip sheet has been set to \square orientation, the orientation of the output slip sheet and body paper will be different.
- The same paper feed tray cannot be set for the body of the document and slip sheets.

Tab Stock

 Prints on tab stocks.





- Make sure to install the optional tab sheet fence when setting tab stocks. Contact your service representative regarding the optional tab sheet fence installation.
- Only tab stocks with the tab on the right (at the top part of the paper) can be printed on.
- For details about tab stocks size that can be printed, see "System Settings", General Settings Guide.
- For details about printing method, see the printer driver Help.



- Make sure to check the position of the tab beforehand, so that images to be printed do not come out slanted. If there are any letters in a position where the tab is not present, toner may dirty the back of the paper.
- If there are any inconsistencies between the position of the tab, the staple and the punch hole, the tab position will be prioritized.

You can Z-fold prints when the optional Z-folding unit and the optional Finisher SR4020 or Finisher SR5000 are attached.

Folding Positions

When Z-folding, select the folding positions for the front page using the printer driver.

The relationship between the size of the front page and that of subsequent pages determines whether the subsequent pages can be Z-folded.

Feed	Front page			
direction	Print direction	Folding position*1	Result	
		Right fold	A Z-fold not possible	
	A B C	Bottom fold	Z-fold possible	
		Left fold	A Z-fold not possible	
		Right fold	Z-fold possible	
	АВС	Bottom fold	ABC Z-fold not possible	
		Left fold	Z-fold possible	

BAC045

Subsequent pages		
Paper size	Result*2	
Larger than front page	Z-fold possible	
Smaller than front page	Z-fold not possible	

BAC046S

3

^{* 1} Select the folding position according to the print direction.

*2 If the size of the paper is the same as that of the front page, the paper can be Z-fold edonly if the front page can be Z-folded.

Notes on the Z-fold Function

Follow these precautions when using the Z-fold function.

Z-folding will be canceled under the following conditions:

- When the Z-fold function is not supported for the selected paper type
- The Z-fold function is not supported for OHP transparencies, labels, thick paper, translucent paper, and tab stock paper.
- When form feeding is used
- When the paper is fed from the optional interposer tray
- The rotating collate and auto tray switching cannot be used when Z-folding.



- You can Z-fold with A3, A4, B4, 11 " \times 17 ", $8^{1}/_{2}$ " \times 14 ", $8^{1}/_{2}$ " \times 11 ", and 12 " \times 18 " paper.
- Z-folded paper can be stapled.
- When stapling Z-folded paper, fewer sheets than normal can be stapled together. This is because a single Z-folded sheet is equivalent to 10 non-Z-folded sheets.
- The Z-fold function and punch function cannot be used together. If the Z-fold function is used, punch function settings are canceled.

Using the Virtual Printer

This section explains the virtual printer function.

The virtual printer is a pseudo printer that can only be recognized on a network. The virtual printer has various print options, such as feeding tray selection and duplex printing, which you can set in advance. You can set those options beforehand. If you use the virtual printer under UNIX, Solaris, and other operating systems, various print functions are possible without your having to manually enter the usual print commands.

Adding a Virtual Printer

Use this procedure to add a virtual printer.



- Adding a virtual printer requires Administrators privilege. Log on using an account that has Administrators privilege.
- The following Virtual Printer protocols are available: "TCP/IP (Unspecified, Normal)", "TCP/IP (DIPRINT)", "TCP/IP (RHPP)", "AppleTalk", and "NetWare".
- 1. Log on to Web Image Monitor as an administrator.

For details about login user names and passwords, see "Using Web Image Monitor", Network Guide.

In the menu area, click [Configuration], and then click [Virtual Printer Settings] in the "Printer" category.

A list of the available virtual printers appears.

3. Click [Add].

The screen for adding virtual printers appears.

- 4. In [Virtual Printer Name], enter a name for the new printer, and then select the protocol in the [Protocol] list.
- 5. Click [OK].

The virtual printer is added.



- If you select [AppleTalk] or [NetWare] in the [Protocol] list, you cannot specify a virtual printer name.
- You can specify a virtual printer name using up to 47 characters.
- You can add up to 50 virtual printers. After 50 virtual printers have been added, [Add] will no longer be displayed.

3

Changing a Virtual Printer Configuration

Use this procedure to change a virtual printer configuration.



- You must have Administrators privilege to change the configuration of a virtual printer. Log on using an account that has Administrators privilege.
- 1. Log on to Web Image Monitor as an administrator.

For details about login user names and passwords, see "Using Web Image Monitor", Network Guide.

2. In the menu area, click [Configuration], and then click [Virtual Printer Settings] in the "Printer" category.

A list of the available virtual printers appears.

- 3. Select the virtual printer whose configuration you want to change, and then click [Change].
- 4. Change the configuration as required.
- 5. Click [OK].



• For details about virtual printer configuration, see Web Image Monitor Help.

Confirming a Virtual Printer Configuration

Use this procedure to confirm a virtual printer configuration.

1. Start Web Image Monitor.

For details about login user names and passwords, see "Using Web Image Monitor", Network Guide.

In the menu area, click [Configuration], and then click [Virtual Printer Settings] in the "Printer" category.

A list of available virtual printers appears.

Select the virtual printer whose configuration details you want to confirm, and then click [Details].

A configuration list for the selected virtual printer appears.



- [Details] is not displayed if you log on to Web Image Monitor as an administrator. To confirm a virtual printer configuration, click [Change].
- If the virtual printers function is disabled, the list of available virtual printers is not displayed. For details about enabling the virtual printers function, see Web Image Monitor Help.

Deleting a Virtual Printer

Use this procedure to delete a virtual printer.



- You must have Administrators privilege to delete a virtual printer. Log on using an account that has Administrators privilege.
- 1. Log on to Web Image Monitor as an administrator.

For details about login user names and passwords, see "Using Web Image Monitor", Network Guide.

In the menu area, click [Configuration], and then click [Virtual Printer Settings] in the "Printer" category.

The list of available virtual printers appears.

3. Select the virtual printer that you want to delete, and then click [Delete].

The delete confirmation screen appears.

4. Click [OK].



- You cannot delete this printer's default virtual printer.
- [Delete] appears only if you have already added a virtual printer.

Printing Using a Virtual Printer

To print directly from a specified virtual printer, assign the virtual printer in the print command. Before printing for the first time, specify the virtual printer you want to use.

1. Log on to Web Image Monitor in administrator mode.

For details about login user name and password, see "Using Web Image Monitor", Network Guide.

- 2. In the menu area, click [Configuration], and then click [Printer Basic Settings] in the "Printer" category.
- 3. Select [Active] in [Virtual Printer], and then click [OK].
- 4. Send a command from your computer.

lpr

C:\>lpr -S "printer's IP address" [-PVirtual Printer Name] [-ol] \path name\file
name

rcp

c:> rcp [-b] \path name\file name [\path name\file name...] printer's host name:
["Virtual Printer Name"]

ftp

ftp> put \path name\ file name [Virtual Printer Name]

4. Saving and Printing Using the Document Server

This chapter explains how to use the Document Server function.

Accessing the Document Server

The Document Server enables you to store documents on the machine's hard disk, and allows you to edit and print them as necessary.



• Applications with their own drivers, such as PageMaker, do not support this function.



- When you use the Document Server, the following functions can be selected using the machine's control panel:
 - Copies
 - Collate
 - Duplex
 - Staple
 - Paper selection: Paper source tray, paper type, paper output tray.
 - Functions related to paper selection: Cover Sheet, Slip Sheet.
- The above items are dimmed, so you cannot set them from the printer properties dialog box when the
 Document Server is selected.
- You must enter a user ID, using up to eight alphanumeric characters.
- You should enter a Password and File Name to distinguish the job from others.
- Up to 3,000 files can be stored in the Document Server. New files cannot be stored when 3,000 files have already stored. Even if less than 3,000 files are stored, new files cannot be stored when
 - a file to be stored contains more than 2,000 pages,
 - the machine's sent or stored files total over 15,000 black-and-white pages. (The total varies depending on the size of the files.)
 - the machine's sent or stored files total over 5,000 color pages. (The total varies depending on the size of the files.)
 - the hard disk is full.
- The Document Server also stores files scanned using the Automatic Document Feeder (ADF) or
 exposure glass. You should delete unnecessary stored files once in a while so as not to exceed the
 capacity of the hard disk. For details about deleting stored files, see General Settings Guide.

- When using the hard disk for functions other than those of Document Server, you may not be able to store new files in the Document Server, even if there are less than 3,000 files stored.
- For details about Document Server functions, see "Document Server", General Settings Guide.
- For details about how to access Document Server from a client, see the printer driver Help.

5. Appendix

This chapter lists the printer's specifications and the functions that are available on the Printer Features screen.

Specifications

This section contains the machine's electrical and hardware specifications, including information about its options.

Component	Specifications
Resolution	600 × 600 dpi
Printing speed	Type 1:
	• Color: 55 ppm
	• B&W: 60 ppm
	Type 2:
	• Color: 70 ppm
	• B&W: 75 ppm
	(A4 ⁰ , 8 ¹ / ₂ " × 11 " ⁰ plain paper)
	Printing speeds depend on the machine. Check which type of machine you have. See General Settings Guide.
Interface	Standard:
	Ethernet interface (100BASE-TX / 10BASE-T)
	USB 2.0 interface
	Option:
	Giga Ethernet interface (1000BASE ⁻ TX / 100BASE ⁻ TX / 10BASE ⁻ T)
	IEEE 1284 parallel interface
	Use a standard 36 ⁻ pin printer cable not longer than 3 meters (10 feet).
	IEEE 802.11a/b/g or IEEE 802.11 b/g wireless LAN interface
	Bluetooth interface
Network protocol	IPv4, IPv6, IPX/SPX, AppleTalk

Component	Specifications
Printer language	Standard: PCL 6/5c, RPCS
	Option: PostScript 3, PDF
Fonts	PCL 6/5c:
	Monotype Imaging 35 Intellifonts, 10 TrueType fonts, 13 International fonts.
	PostScript 3:
	136 fonts (Type 2:24, Type 14:112)
Memory	1.5 GB
Hard disk	Storage capacity: 320 GB
USB Interface (Standard)	Supported Operating System:
	Windows Me / 2000 / XP / Vista, Windows Server 2003 / 2003 R2, MacOS 10.3.3 or later
	Transmission spec.
	USB 2.0 Standard
	Connectable Device:
	Devices corresponding to USB 2.0 Standard



- When using Mac OS, use only the standard USB Interface. The optional USB interface board is not supported.
- When using the USB Interface (Standard) with Mac OS 10.3.3, USB2.0 is supported.
- When using the USB Interface (Standard) with Windows Me, install USB Printing Support. Windows Me only supports USB 1.1 speed.

Printer Features Menu

The following explains settings and meanings of functions on the Printer Features screen. Select [Printer Features] after you press the [User Tools/Counter] key. For details, see "Printer Features", General Settings Guide.

List / Test Print

Menu	Description
Multiple Lists	You can print the configuration page and error log.
Configuration Page	You can print the machine's current configuration values.
Error Log	You can print error logs listing all errors that occurred during printing.
Menu List	You can print a Menu List showing the machine's function menus.
PCL Configuration / Font Page	You can print the current PCL configuration and installed PCL font list.
PS Configuration / Font Page	You can print the current PS configuration and installed PostScript font list.
	This menu can be selected only when the optional PostScript 3 unit is installed.
PDF Configuration / Font Page	You can print the current PDF configuration and installed PDF font list.
	This menu can be selected only when the optional PostScript 3 unit is installed.
Hex Dump	You can print in the Hex Dump mode.

Maintenance

Menu	Description
Menu Protect	This function lets you protect menu settings from accidental change. It makes impossible to change menu settings with normal procedures unless you perform the required key operations.
	In a network environment, only administrators can make changes to menu settings.

Menu	Description
List / Test Print Lock	You can lock the [List / Test Print] menu.
Delete All Temporary Print Jobs	You can delete all print jobs temporarily stored in the machine.
Delete All Stored Print Jobs	You can delete all print jobs stored in the machine.
4 Color Graphic Mode (4 Colour Graphic Mode)	You can adjust the image density.

System

Menu	Description
Print Error Report	You can print an error report when a printer or memory error occurs.
Auto Continue	You can select this to enable Auto Continue.
	When it is On, printing continues after a system error occurs.
Memory Overflow	Select this to have a memory overflow error report printed.
Job Separation	You can enable Job Separation.
	This menu can be selected only when a finisher (optional) is installed.
Rotate by 180 Degrees	Specify whether to rotate the print image 180 degrees relative to the paper orientation.
Auto Delete Temporary Print Jobs	You can select to automatically delete print jobs temporarily stored in the machine.
Auto Delete Stored Print Jobs	You can select to automatically delete print jobs stored in the machine.
Initial Print Job List	You can set the default Printer screen when you press [Print Jobs].
Memory Usage	You can select the amount of memory used in Font Priority or Frame Priority, according to paper size or resolution.
Duplex	You can select to have print on both sides of each page.
Copies	You can specify the number of print sets.

Menu	Description
	This setting is disabled if the number of pages to print has been specified with the printer driver or another command.
Blank Page Print	You can select whether or not to print blank pages.
Spool Image	You can select to print spool images. The print job transmitted from the computer is temporarily stored on the machine's hard disk as bitmap images that can be printed when transmission is complete. If more than one print job is transmitted, a spool image is printed for each.
Reserved Job Waiting Time	You can specify how long the machine waits to receive a print job before allowing other functions such as the copier and scanner functions to interrupt it.
Printer Language	You can specify the printer language.
Sub Paper Size	You can enable the Auto Substitute Paper Size (A4←→LT) feature.
Page Size	You can select the default paper size.
Letterhead Setting	You can rotate original images when printing.
	When printing, original images are always rotated by 180 degrees. Therefore, output might not be as expected when printing onto letterhead or preprinted paper requiring orientation.
Bypass Tray Setting Priority	You can specify which of the two options, (Printer) Driver / Command or Machine Settings, has priority for determining the paper size for the bypass tray.
Edge to Edge Print	You can select whether or not to print on the entire sheet.
Default Printer Language	You can set the default printer language if the machine cannot find the printer language automatically.
Tray Switching	You can set to switch the paper tray.

Host Interface

Menu	Description
I/O Buffer	You can set the size of the I/O Buffer. Normally it is not necessary to change this setting.
I/O Timeout	You can set how many seconds the machine should wait before ending a print job. If data from another port usually arrives in the middle of a print job, you should increase this timeout period.

PCL Menu

Menu	Description
Orientation	You can set the page orientation.
Form Lines	You can set the number of lines per page.
Font Source	You can set the storage location of the default font.
Font Number	You can set the ID of the default font you want to use.
Point Size	You can set the point size you want to use for the selected font.
Font Pitch	You can set the number of characters per inch for the selected font.
Symbol Set	You can specify the set of print characters for the selected font.
Courier Font	You can select a courier font type.
Extend A4 Width	You can extend the printing area width when printing on A4 sheet with PCL.
Append CR to LF	When set to On, a carriage return will follow each line feed: CR=CR, LF=CR ⁻ LF, FF=CR ⁻ FF.
Resolution	You can set the print resolution in dots per inch.

5

PS Menu (optional)

Menu	Description
Data Format	You can select a data format.
Resolution	You can set the print resolution in dots per inch.
Color Setting (Colour Setting)	You can make an RGB setting.
Color Profile (Colour Profile)	You can set the color profile.

PDF Menu (optional)

Menu	Description
Change PDF Password	You can set the password for the PDF file executing PDF Direct Print.
PDF Group Password	You can set the group password already specified with DeskTopBinder Lite.
Resolution	You can set the print resolution in dots per inch.
Color Setting (Colour Setting)	You can make an RGB setting.
Color Profile (Colour Profile)	You can set the color profile.



- Some options do not appear depending on optional units or selected printer languages in use.
- Some options cannot be set depending on security settings.
- For details, see "Printer Features", General Settings Guide.
- For details about "Copier Features" and "System Settings", see Copy/Document Server Reference and General Settings Guide.

INDEX

В		F	
Bidirectional Communication	56, 57	Finisher	119
Black and White Printing	78	Font Manager	59
Bypass tray		Form Feed	
Envelopes		canceling	
OHP Transparencies	21	selected tray	11
Setting Custom Size Paper	19	Н	
Setting the Paper Size	17	п	
Thick Paper	21	Hold Print	99
Thin Paper	21	deleting	
C		printing	100
		How to Read This Manual	
Canceling a job	113	1	
Canceling a Print Job		·	
using the computer		Initial Display	
using the control panel		Initial Print Job List	9
Chaptering		Installing the Printer Driver	3
Chapter Slip Sheets		IPP	
Designated Sheet Print		LPR port	
No Slip Sheets		NetWare Print Server / Remote Printer	
Checking jobs in the print queue		Parallel Connection	
Collate		Quick Install	
Confirming the Connection Method		SmartDeviceMonitor for Client Port	
Local Connection		Standard TCP/IP portTCP/IP	
Network Connection	29	Windows Network Printer	
Control panel	147	WSD port	
Covers	127	Installing the Printer Driver Using USB	
D		Windows 2000	
D 17 D: 1 15	7.0	Windows Me	
DeskTopBinder Lite		Windows Vista	
Function Palette		Windows XP, Windows Server 2003 / 2003 R	
Install			
Password-Protected		<u></u>	
Display Panel		Job List	12, 13
document defaults, PCL	7	Change Order	14
Windows NT 4.0		Checking Jobs	
		Deleting Jobs	
document defaults, RPCS Windows NT 4.0	76	Holding Jobs	
Document Server		Job History	
		Job List Screen	12
Downloading the Printer Driver	33	L	
E		List Per User ID	107
Envelopes	23	printing all print jobs	
Error log		printing the desired print job	107
•		Locked Print	0.

M 97 M 56 Manuals for This Machine	deleting	
Making Option Settings for the Printer .56 Manuals for This Machine .1 P	printing	9/
Manuals for This Machine. 1 P 60 PDF Direct Print. 79, 81 PDF direct print properties. 82 using commands. 83 Print Job Function. 88 Printer Features Menu. 147 Printer Properties, PCL 62 Windows 2000. 62 Windows 95 / 98 / Me. 61 Windows Server 2003 / 2003 R2. 64 Windows VP. 64 Windows Vista. 65 Printer Properties, RPCS Windows 2000. 70 Windows 95 / 98 / Me. 69 Windows NT 4.0. 75 Windows Server 2003 / 2003 R2. 72 Windows Vista. 74 Windows Vista. 74 Windows XP. 72 Punch. 121 S Sample Print. 93 deleting. 95 printing. 94 Sip Sheet. 133 Specifications. 145 Spool printing. 117 Stored Print. 102 <td< th=""><th>M</th><th></th></td<>	M	
PageMaker		
PageMaker	Manuals for This Machine	1
PDF Direct Print. 79, 81 PDF direct print properties. 82 using commands. 83 Print Job Function. 88 Printer Features Menu. 147 Printer Properties, PCL Windows 2000. 62 Windows NT 4.0. 67 Windows NT 4.0. 67 Windows Server 2003 / 2003 R2 64 Windows Vista. 65 Printer Properties, RPCS Windows 2000. 70 Windows 95 / 98 / Me. 69 Windows NT 4.0. 75 Windows Server 2003 / 2003 R2. 72 Windows Vista. 74 Windows XP. 72 Punch. 121 S Sample Print. 93 deleting. 95 printing. 10 Slip Sheet. 133 Specifications. 145 Spool printing. 117 Stored Print. 102 deleting. 105 printing. 105	P	
PDF direct print properties. 82 using commands. 83 Print Job Function. 88 Printer Features Menu. 147 Printer Properties, PCL Windows 2000. 62 Windows 95 / 98 / Me. 61 Windows NT 4.0. 67 Windows Server 2003 / 2003 R2. 64 Windows Vista. 65 Printer Properties, RPCS Windows 2000. 70 Windows 95 / 98 / Me. 69 Windows NT 4.0. 75 Windows Server 2003 / 2003 R2. 72 Windows Vista. 74 Windows P. 72 Punch. 121 S Sample Print. 93 deleting. 95 printing. 117 Stopol printing. 117 Stored Print. 102 deleting. 105	PageMaker	60
using commands 83 Print Job Function 88 Printer Features Menu 147 Printer Properties, PCL Windows 2000 62 Windows 95 / 98 / Me 61 Windows NT 4.0 67 Windows Server 2003 / 2003 R2 64 Windows XP 64 Windows Vista 65 Printer Properties, RPCS Windows 2000 70 Windows 95 / 98 / Me 69 Windows NT 4.0 75 Windows Server 2003 / 2003 R2 72 Windows Vista 74 Windows Vista 74 Windows XP 72 Punch 121 S Sample Print 93 deleting 95 printing 94 Slip Sheet 133 Specifications 145 Spool printing 117 Staple 119 Stored Print 102 deleting 105 printing 105 printing 105 printing 105 <tr< td=""><td>PDF Direct Print</td><td>79, 81</td></tr<>	PDF Direct Print	79, 81
Print Job Function 88 Printer Features Menu 147 Printer Properties, PCL Windows 2000 62 Windows 95 / 98 / Me 61 Windows NT 4.0 67 Windows Server 2003 / 2003 R2 64 Windows VP 64 Windows Vista 65 Printer Properties, RPCS Windows 2000 70 Windows 95 / 98 / Me 69 Windows NT 4.0 75 Windows Server 2003 / 2003 R2 72 Windows Vista 74 Windows XP 72 Punch 121 S Sample Print 93 deleting 95 printing 94 Slip Sheet 133 Specifications 145 Spool printing 117 Staple 119 Stored Print 102 deleting 105 printing 105 printing 105	PDF direct print properties	82
Printer Properties, PCL Windows 2000. 62 Windows 95 / 98 / Me. 61 Windows NT 4.0. 67 Windows Server 2003 / 2003 R2. 64 Windows XP. 64 Windwos Vista. 65 Printer Properties, RPCS Windows 2000. 70 Windows 95 / 98 / Me. 69 Windows NT 4.0. 75 Windows Vista. 74 Windows Vista. 74 Windows XP. 72 Punch. 121 S Sample Print. 93 deleting. 95 printing. 10 Slip Sheet. 133 Specifications. 145 Spool printing. 117 Stored Print. 102 deleting. 105 printing. 105 printing. 103	_	
Printer Properties, PCL Windows 2000	Print Job Function	88
Windows 2000	Printer Features Menu	147
Windows 95 / 98 / Me 61 Windows NT 4.0 67 Windows Server 2003 / 2003 R2 64 Windows XP 64 Windwos Vista 65 Printer Properties, RPCS Windows 2000 70 Windows 95 / 98 / Me 69 Windows NT 4.0 75 Windows Server 2003 / 2003 R2 72 Windows Vista 74 Windows XP 72 Punch 121 S Sample Print 93 deleting 95 printing 94 Slip Sheet 133 Specifications 145 Spool printing 117 Stored Print 102 deleting 105 printing 105 printing 105 printing 103		
Windows NT 4.0 67 Windows Server 2003 / 2003 R2 64 Windows XP 64 Windwos Vista 65 Printer Properties, RPCS Windows 2000 70 Windows SP / 98 / Me 69 Windows NT 4.0 75 Windows Server 2003 / 2003 R2 72 Windows Vista 74 Windows XP 72 Punch 121 S Sample Print 93 deleting 95 printing 94 Slip Sheet 133 Specifications 145 Spool printing 117 Staple 119 Stored Print 102 deleting 105 printing 105 printing 103 T		
Windows Server 2003 / 2003 R2 64 Windows VP 64 Windwos Vista 65 Printer Properties, RPCS 70 Windows 2000 70 Windows 95 / 98 / Me 69 Windows NT 4.0 75 Windows Server 2003 / 2003 R2 72 Windows Vista 74 Windows XP 72 Punch 121 S Sample Print 93 deleting 95 printing 94 Slip Sheet 133 Specifications 145 Spool printing 117 Staple 119 Stored Print 102 deleting 105 printing 103 T		
Windows XP		
Windwos Vista 65 Printer Properties, RPCS 70 Windows 2000 70 Windows 95 / 98 / Me 69 Windows NT 4.0 75 Windows Server 2003 / 2003 R2 72 Windows Vista 74 Windows XP 72 Punch 121 S Sample Print 93 deleting 95 printing 94 Simplified Display 10 Slip Sheet 133 Specifications 145 Spool printing 117 Staple 119 Stored Print 102 deleting 105 printing 103 T	•	
Printer Properties, RPCS Windows 2000		
Windows 2000 70 Windows 95 / 98 / Me 69 Windows NT 4.0 75 Windows Server 2003 / 2003 R2 72 Windows Vista 74 Windows XP 72 Punch 121 S Sample Print 93 deleting 95 printing 94 Simplified Display 10 Slip Sheet 133 Specifications 145 Spool printing 117 Staple 119 Stored Print 102 deleting 105 printing 103 T		03
Windows 95 / 98 / Me. 69 Windows NT 4.0. 75 Windows Server 2003 / 2003 R2. 72 Windows Vista. 74 Windows XP. 72 Punch. 121 S Sample Print. 93 deleting. 95 printing. 94 Simplified Display. 10 Slip Sheet. 133 Specifications. 145 Spool printing. 117 Staple. 119 Stored Print. 102 deleting. 105 printing. 103 T		70
Windows NT 4.0. 75 Windows Server 2003 / 2003 R2. 72 Windows Vista. 74 Windows XP. 72 Punch. 121 S Sample Print. 93 deleting. 95 printing. 94 Simplified Display. 10 Slip Sheet. 133 Specifications. 145 Spool printing. 117 Staple. 119 Stored Print. 102 deleting. 105 printing. 103 T		
Windows Server 2003 / 2003 R2 72 Windows Vista 74 Windows XP 72 Punch 121 S 93 deleting 95 printing 94 Simplified Display 10 Slip Sheet 133 Specifications 145 Spool printing 117 Staple 119 Stored Print 102 deleting 105 printing 103 T		
Windows XP. 72 Punch. 121 S 93 deleting. 95 printing. 94 Simplified Display. 10 Slip Sheet. 133 Specifications. 145 Spool printing. 117 Staple. 119 Stored Print. 102 deleting. 105 printing. 103 T		
Punch 121 S Sample Print 93 deleting 95 printing 94 Simplified Display 10 Slip Sheet 133 Specifications 145 Spool printing 117 Staple 119 Stored Print 102 deleting 105 printing 103 T	Windows Vista	74
Sample Print 93 deleting 95 printing 94 Simplified Display 10 Slip Sheet 133 Specifications 145 Spool printing 117 Staple 119 Stored Print 102 deleting 105 printing 103 T	Windows XP	72
Sample Print. 93 deleting. 95 printing. 94 Simplified Display. 10 Slip Sheet. 133 Specifications. 145 Spool printing. 117 Staple. 119 Stored Print. 102 deleting. 105 printing. 103 T	Punch	121
deleting 95 printing 94 Simplified Display 10 Slip Sheet 133 Specifications 145 Spool printing 117 Staple 119 Stored Print 102 deleting 105 printing 103 T	\$	
printing 94 Simplified Display 10 Slip Sheet 133 Specifications 145 Spool printing 117 Staple 119 Stored Print 102 deleting 105 printing 103 T	Sample Print	93
Simplified Display 10 Slip Sheet 133 Specifications 145 Spool printing 117 Staple 119 Stored Print 102 deleting 105 printing 103 T	deleting	95
Slip Sheet 133 Specifications 145 Spool printing 117 Staple 119 Stored Print 102 deleting 105 printing 103 T	printing	94
Specifications	Simplified Display	10
Spool printing 117 Staple 119 Stored Print 102 deleting 105 printing 103 T	Slip Sheet	133
Staple	Specifications	145
Stored Print	Spool printing	117
deleting	Staple	119
deleting	•	
т		
·		
Tab Stock 135	Т	
	Tab Stock	135

U

Unauthorized copy control	84		
data security for copyingmask typeUser Defined Pages	86		
		Virtual Printer	138
		Adding	138
		Changing	139
Confirming			
Deleting	140		
Printing	140		
Z			
Z-fold	136		

MEMO

MEMO

156 EN USA D376

Trademarks

Microsoft[®], Windows[®], Windows NT[®], Windows Server[®], and Windows Vista[™] are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

Adobe, Acrobat, Adobe Type Manager, Flash, Macromedia, PageMaker, PostScript are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.

Apple, AppleTalk, EtherTalk, Bonjour, Macintosh, Mac OS, and TrueType are registered trademarks of Apple Inc, registered in the United States and other countries.

UNIX is a registered trademark in the United States and other countries, licensed exclusively through X/Open Company Limited. PCL® is a registered trademark of Hewlett-Packard Company.

Monotype is a registered trademark of Monotype Imaging, Inc.

IPS is a trademark or registered trademark of Zoran Corporation and/ or its subsidiaries in the United States or other countries.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Ricoh Company, Ltd is under license.

Netware, IPX, IPX/SPX are either registered trademarks or trademarks of Novell, Inc.

Other product names used herein are for identification purposes only and might be trademarks of their respective companies. We disclaim any and all rights to those marks.

The proper names of the Windows operating systems are as follows:

- * [The product name of Windows 98 is Microsoft® Windows® 98.
- * The product name of Windows Me is Microsoft® Windows® Millennium Edition (Windows Me).
- * The product names of Windows 2000 are as follows:

Microsoft® Windows® 2000 Professional

Microsoft® Windows® 2000 Server

Microsoft® Windows® 2000 Advanced Server

* [The product names of Windows XP are as follows:

Microsoft® Windows® XP Professional

Microsoft® Windows® XP Home Edition

Microsoft® Windows® XP Media Center Edition

Microsoft® Windows® XP Tablet PC Edition

* The product names of Windows Vista are as follows:

Microsoft® Windows Vista™ Ultimate

Microsoft® Windows Vista™ Enterprise

Microsoft® Windows Vista™ Business

Microsoft® Windows Vista™ Home Premium

Microsoft® Windows Vista™ Home Basic

* The product names of Windows Server 2003 are as follows:

Microsoft® Windows Server™ 2003 Standard Edition

Microsoft® Windows Server™ 2003 Enterprise Edition

Microsoft® Windows Server™ 2003 Web Edition

Microsoft® Windows Server™ 2003 Datacenter Edition

* [The product names of Windows Server 2003 R2 are as follows:

Microsoft® Windows Server® 2003 R2 Standard Edition

Microsoft® Windows Server® 2003 R2 Enterprise Edition

Microsoft® Windows Server® 2003 R2 Datacenter Edition

* [The product names of Windows NT 4.0 are as follows:

Microsoft® Windows NT® Workstation 4.0

Microsoft® Windows NT® Server 4.0

