

# Notes for Users

---


## ◆ Getting Started

Guide to Functions of the Machine's Options > Guide to Functions of the Machine's External Options

---

### Additional Information

Remove printouts from Finisher SR4120 or Booklet Finisher SR4130 by lifting them straight out from the left side. If you remove printouts at an angle or towards the front, the shift tray may rise and pinch the paper.

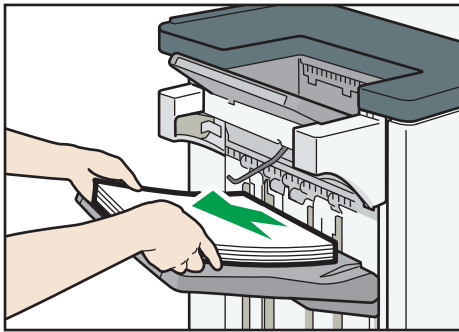

DR8977

© 2016

Printed in Japan

EN (GB) EN (US) EN (AU) D257-7042



D2577042