

3406WD GWD3006 *LW426* **Aficio**™ MP W3601

Operating Instructions Copy and Document Server Reference



- 1 Placing Originals
- 2 Basic Copying
- 3 Advanced Copying
- 4 Document Server
- 5 Copier and Document Server Features
- 6 Appendix

TABLE OF CONTENTS

Manuals for This Machine	6
Notice	8
Important	8
How to Read This Manual	9
Symbols	9
Names of Major Items	9
Terms	9
Notes	10
Laws and Regulations	11
Legal Prohibition	11
Functions Requiring Optional Configurations	12
Display Panel	13
Simplified Display	13
1. Placing Originals	
Original and Copy Output Locations	15
Original Output Locations	15
Copy Output Locations	18
Originals	22
Sizes and Weights of Recommended Originals	22
Originals That Should Be Scanned Using the Carrier Sheet	22
Non-compatible Originals	23
Missing Image Area	24
Placing Originals	25
Placing Originals on the Original Table	25
Original Orientation	27
Placing Custom Size Originals	28
Wide Scan	29
Scanning an Original Using a Carrier Sheet	31
Placing Folded Originals (Using the Original Switching Lever)	32
Placing Rolled Originals	32
Attaching the Original Hangers	33
2. Basic Copying	
Basic Procedure	35

Check Modes	36
Original Counter/Reset	37
Auto Start	37
Interrupt Copy	38
Job Preset	39
Copying from the Bypass Tray	41
Copying onto Regular Size Paper	43
Copying onto Custom Size Paper	43
Copying onto Special Paper	45
Selecting the Original Type Setting	47
Adjusting Copy Image Density	49
Auto Image Density	49
Manual Image Density	49
Combined Auto and Manual Image Density	50
Copy Quality	50
Selecting Copy Paper	53
Auto Paper Select	53
Manual Paper Select	54
Rotate Copy	54
Setting the Length of Copy Paper Cut	56
Synchro Cut	56
Preset Cut	57
Variable Cut	58
Reducing or Enlarging Originals	60
Preset Reduce/Enlarge	60
Zoom	61
Auto Reduce / Enlarge	64
User Auto Reduce / Enlarge	66
Combined Copying	68
One-Sided Combine	68
Finishing	71
Sort	71
Storing Data in the Document Server	76

Managing Jobs	78
Job List Screen	78
Checking Jobs in the Job List	79
Changing the Order of Jobs	80
Holding Jobs	80
Deleting Jobs	81
Checking the Job History	82
Registering Frequently Used Functions	83
Registering Functions in a Program	83
Changing a Stored Program	84
Deleting a Stored Program	85
Recalling a Stored Program	85
Changing the Default Functions of the Copy's Initial Display	87
3. Advanced Copying	
Advanced Reduce/Enlarge Copying	89
Size Magnification	89
Directional Magnification (%)	90
Directional Size Magnification (inch)	93
Fine Magnification	94
Stamps	97
Background Numbering	97
Preset Stamp	98
User Stamp	101
Date Stamp	107
Page Numbering	110
Advanced Copier Functions	118
Erase Border (Same Width)	118
Erase Border (Different Width)	119
Erase Inside	121
Erase Outside	122
Margin Adjustment	124
Image Repeat	126
Double Copies	127

Positive / Negative	128
Partial Copy	129
Mirror Image	130
Format Overlay	131
Adjust Print Position	136
4. Document Server	
Relationship between Document Server and Other Functions	139
Document Server Display	140
Simplified Display	141
Preview Display	142
Using the Document Server	145
Storing Data	145
Changing the User Name of a Stored Document	149
Changing the File Name of a Stored Document	150
Changing the Password of a Stored Document	151
Checking the Details of a Stored Document	151
Searching for Stored Documents	152
Printing Stored Documents	154
Deleting a Stored Document	160
Displaying Stored Documents with Web Image Monitor	161
Downloading Stored Documents with Web Image Monitor	162
Registering Frequently Used Functions for Printing Stored Documents from	
	163
Changing the Default Functions of the Document Server's Initial Display	163
5. Copier and Document Server Features	
Accessing User Tools	165
Changing Default Settings	165
Quitting User Tools	166
General Features	167
Reproduction Ratio.	169
Edit	172
Stamp	175
Background Numbering	175

Preset Stamp	175
User Stamp	176
Date Stamp	177
Page Numbering	178
Input / Output	180
Administrator Tools	181
6. Appendix	
Function Compatibility	183
Function Compatibility	
	185
Scan Size Limitations, by Function	185
Scan Size Limitations, by Function	
Scan Size Limitations, by Function Settings Record Sheet Magnification Ratio Chart	

Manuals for This Machine

Read this manual carefully before you use this machine.

Refer to the manuals that are relevant to what you want to do with the machine.

Important

- · Media differ according to manual.
- The printed and electronic versions of a manual have the same contents.
- Adobe Acrobat Reader/Adobe Reader must be installed in order to view the manuals as PDF files.
- A Web browser must be installed in order to view the html manuals.

About This Machine

Before using the machine, be sure to read the section of this manual entitled Safety Information.

This manual introduces the machine's various functions. It also explains the control panel, preparation procedures for using the machine, how to enter text, how to install the CD-ROMs provided, and how to replace paper, toner, and other consumables.

Troubleshooting

Provides a guide for resolving common usage-related problems.

Copy and Document Server Reference

Explains Copier and Document Server functions and operations. Also refer to this manual for explanations on how to place originals.

Printer Reference

Explains Printer functions and operations.

Scanner Reference

Explains Scanner functions and operations.

Network and System Settings Reference

Explains how to connect the machine to a network, configure and operate the machine in a network environment, and use the software provided. Also explains how to change User Tools settings and how to register information in the Address Book.

Security Reference

This manual is for administrators of the machine. It explains security functions that you can use to prevent unauthorized use of the machine, data tampering, or information leakage. For enhanced security, we recommend that you first make the following settings:

- Install the Device Certificate.
- Enable SSL (Secure Sockets Layer) Encryption.
- Change the user name and password of the administrator using Web Image Monitor.

For details, see "Setting up the Machine", Security Reference.

Be sure to read this manual when setting the enhanced security functions, or user and administrator authentication.

VM Card Extended Feature Settings Device Reference

Explains how to set up the extended features settings with the machine.

VM Card Extended Feature Settings Web Reference

Explains how to set up the extended features settings using Web Image Monitor.

Other manuals

- UNIX Supplement
- Quick Reference Copy Guide
- Quick Reference Printer Guide
- Quick Reference Scanner Guide



- Manuals provided are specific to machine types.
- For "UNIX Supplement", please visit our Web site or consult an authorized dealer. This manual includes descriptions of functions and settings that might not be available on this machine.

Notice

Important

In no event will the company be liable for direct, indirect, special, incidental, or consequential damages as a result of handling or operating the machine.

For good copy quality, the manufacturer recommends that you use genuine toner from the manufacturer.

The manufacturer shall not be responsible for any damage or expense that might result from the use of parts other than genuine parts from the manufacturer with your office products.

How to Read This Manual



• For proper use of this product, be sure to read About This Machine first.

Symbols

This manual uses the following symbols:



Indicates points to pay attention to when using the machine, and explanations of likely causes of paper misfeeds, damage to originals, or loss of data. Be sure to read these explanations.



Indicates supplementary explanations of the machine's functions, and instructions on resolving user errors.

■ Reference

This symbol is located at the end of sections. It indicates where you can find further relevant information.

[]

Indicates the names of keys on the machine's display or control panels.

Names of Major Items

Major items for this machine are referred to as follows:

- Roll Feeder Type 3601A → Paper roll tray 1
- Roll Feeder Type 3601B → Paper roll tray 2
- Paper Cassette Type 240 \rightarrow Cut paper tray
- Table Type 240 → Table

Terms

Long length original/paper
 Original/paper length longer than 1189 mm (46.8 inches).

Notes

Contents of this manual are subject to change without prior notice.

Some illustrations in this manual might be slightly different from the machine.

Certain options might not be available in some countries. For details, please contact your local dealer.

Depending on which country you are in, certain units may be optional. For details, please contact your local dealer.

Laws and Regulations

Legal Prohibition

Do not copy or print any item for which reproduction is prohibited by law.

Copying or printing the following items is generally prohibited by local law:

bank notes, revenue stamps, bonds, stock certificates, bank drafts, checks, passports, driver's licenses.

The preceding list is meant as a guide only and is not inclusive. We assume no responsibility for its completeness or accuracy. If you have any questions concerning the legality of copying or printing certain items, consult with your legal advisor.

Functions Requiring Optional Configurations

Certain functions require special machine configuration and extra options as follows:

Function	Option
Auto Paper Select	Paper roll tray 1, paper roll tray 2, cut paper tray
User Auto Reduce / Enlarge	Paper roll tray 1, paper roll tray 2, cut paper tray
Lower copy output	Paper roll tray 1, paper roll tray 2, table
Rear copy output	Rear stacker
Rotate Sort	Paper roll tray 2
Synchro Cut	Paper roll tray 1, paper roll tray 2
Preset Cut	Paper roll tray 1, paper roll tray 2
Variable Cut	Paper roll tray 1, paper roll tray 2




- Paper roll tray 1 or 2 is required to install the cut paper tray.
- Paper roll tray 1, paper roll tray 2, or table is required to install the rear stacker.

Display Panel

The function items displayed serve as selector keys. You can select or specify an item by lightly pressing them.

When you select or specify an item on the display panel, it is highlighted like has been been been used.

Initial copy display

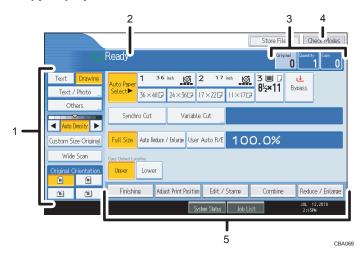

- 1. Use this area to specify the original type, original orientation, image density level, and other settings.
- 2. Displays operational status and messages.
- 3. Displays the numbers of originals scanned, copies set, and copies made.
- 4. Press the key to confirm the current settings.
- 5. Displays available functions. Press a function to display its menu.




 The illustration is an example of the panel display when paper roll tray 2 and the cut paper tray are installed.

Simplified Display

This section explains how to switch to the simplified display.

When you press the [Simplified Display] key, the screen changes from the initial display to the simplified display.

Letters and keys are displayed at a larger size, making operations easier.

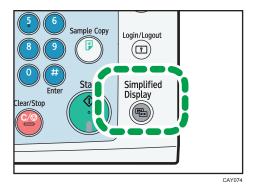

Example of a simplified display



1. [Key Color]

Press to increase screen contrast by changing the color of the keys. This is available only for the simplified display.



- To return to the initial display, press the [Simplified Display] key again.
- Certain keys do not appear on the simplified display.

1. Placing Originals

This chapter describes original and copy output locations, the types of originals you can set, and how to place originals.

Original and Copy Output Locations

Specify original and copy output locations before copying.

Original Output Locations

Two types of original output locations are available.

Original upper output

This is the basic original output location.

Originals are ejected onto the original stackers.


Original rear output

Originals are ejected onto the original output guides. When copying thick or hard originals, select this output location.

Original upper output


Originals are ejected onto the original stackers.

1. Check the upper output stackers are correctly installed on the top of the machine.

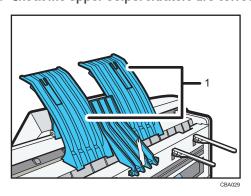

1. Upper output stackers

Originals are ejected onto the original stackers.

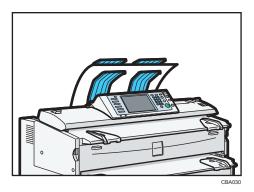

The original stackers can hold one original at a time. Remove each original after it is ejected by holding its leading edge.




- If the original is larger than A1 (D) \square , select original rear output.
- If the original is heavier than 157 g/m² (41 lb.), select original rear output.
- If the original is plain paper not heavier than 52 g/m^2 (13 lb.) or translucent paper not heavier than 80 g/m^2 (21 lb.), select original rear output.
- When copying a rolled original, prevent it curling up on the stackers by holding its leading edge as it is ejected.

Original rear output


Originals are ejected onto the original output guides.

1. Remove the upper output stackers.

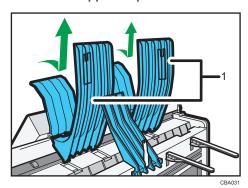


1. Upper output stackers



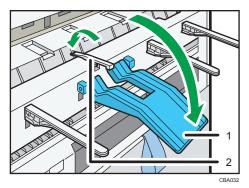


- 1. Upper output guide
- 2. Original exit switching lever
- 3. Extend the original output guides.

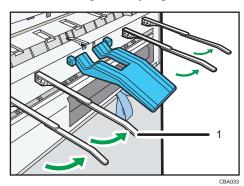

1. Original output guides

Originals are ejected onto the original output guides.

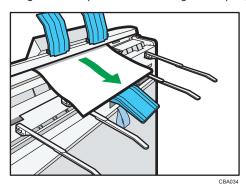

UNote

• When reinstalling the upper output stackers, set them so the extenders are on the outside.

Copy Output Locations

Two types of copy output locations are available.

Upper copy output

Copies come out between the upper output stackers and upper output guide on the machine's top.

When copying sizes up to A1 (D) \mathbb{D} , we recommend selecting upper copy output.

Lower copy output

Copies come out to the lower output stacker through the lower output exit and lower output tray at the machine's rear.

When copying A1 (D) \overline{D} or A0 (E) \overline{D} , select lower copy output.

The table below shows you how many sheets can be stacked.

Copy output location	Plain paper	Translucent paper
Upper copy output (A1 (D)D or smaller)	50 sheets	10 sheets
Lower copy output (A1 (D) or A0 (E))*1	40 sheets	1 sheet
Rear copy output*2 (A1 (D)D or A0 (E)D)	10 sheets	1 sheet

- *1 You can stack a mixture of A1 (D) and A0 (E) sheets at the same time.
- *2 The optional rear stacker is required.




- If copies exceed the upper limit or are pushed out of the stacker by curled copies, paper jams may occur. Remove the copies from the stacker.
- When copying onto film, hold the leading edge of the copied film, remove it from the stacker, and then place it on a level surface.
- When copying onto A1 (D) size paper, pull out the extenders of the upper output stackers. When inserting originals one after the other, remove the previous original before inserting the next.
- You can select upper copy output only if the upper output stackers are installed.


Upper copy output

Copies come out between the upper output stackers and upper output guide.

1. Make sure that [Upper] is selected under Copy Output Location.

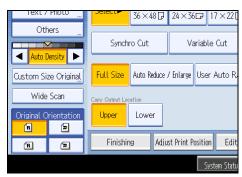


Copies come out between the upper output stackers and upper output guide.

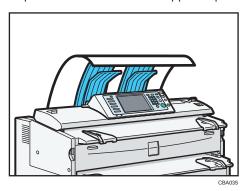

Lower copy output


Copies come out to the lower output stacker.

1. Press [Lower] under Copy Output Location.

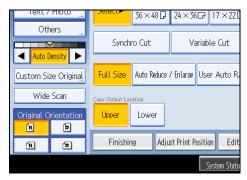





• Do not pull out the lower output auxiliary guides when lower copy output is selected. Otherwise, copies may not be stacked properly. When it is hard to remove the copies from the lower output stacker, pull out the guides.

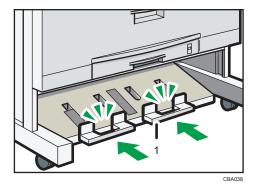

- 1. Lower output auxiliary guides
- If you copy a rolled original using the lower output auxiliary guides, and lower copy output is selected for the copy output location, the original in the lower output auxiliary guides may interfere with copy output. This may damage originals or cause paper jams. In such case, select Synchro Cut.
- Copies are ejected from the lower output exit onto the lower output tray, and then sent to the lower output stacker at the machine's front. Remove the copies from the stacker.

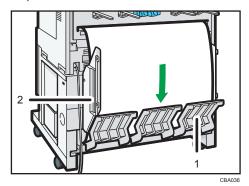


- 1. Lower output tray
- 2. Lower output guides

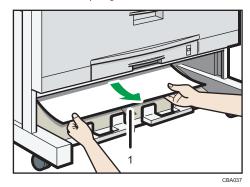

1. Lower output stacker

- When lower copy output is specified for A1 (D) \overline{D} or A0 (E) \overline{D} size paper, attach the lower output guides to the machine.
- When using thick paper, the last sheet to be ejected may remain in the output exit. If this happens, remove it.
- If the optional rear stacker is installed instead of the lower output tray and if you select lower copy output, copies come out to the rear stacker at the back of the machine (Rear copy output).

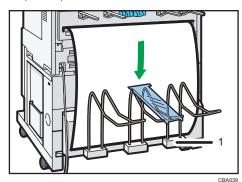

Rear stacker

21

Originals

This section describes the types of originals that can be placed, and missing image area.

Sizes and Weights of Recommended Originals

The following describes recommended original sizes for this machine:

Original location	Original size	Original weight
Original table	Standard sizes: • Engineering E (34 × 44)□, D (22 × 34)□□, C (17 × 22)□□, B (11 × 17)□□, A (8¹/2 × 11)□□ • Architecture	5 ⁻ 41 lb. and 1.1 ⁻ 40 mil thick originals
	E (36 × 48) , D (24 × 36) , C (18 × 24) , B (12 × 18) , A (9 × 12) .	
	$8^{1}/_{2} \times 12^{D}$ \mathbb{C} , $8^{1}/_{2} \times 13^{D}$, $8^{1}/_{2} \times 14^{D}$, 11×14^{D} , 11×15^{D} , $12 \times 14^{1}/_{2}$ \mathbb{C} , 30×21^{D} , 30×42^{D} Custom sizes:	
	Length: 8.3 ⁻ 590.5 inches Width: 8.3 ⁻ 36.0 inches	
	(Maximum width 37.8 inches)	

Originals That Should Be Scanned Using the Carrier Sheet

The following types of originals should be mounted on the carrier sheet. You should also use the carrier sheet for important originals and for originals you will copy repeatedly.

- Cut and pasted originals
- Originals with fold lines
- Wrinkled or torn originals
- Waved originals
- · Punched originals
- · Originals with sticky tape or adhesive
- Pasted originals

- Originals with a damaged leading edge
- · Originals with surfaces that attach to glass easily such as photographs
- Originals drawn in pencil
- Originals no thicker than 52 g/m² (13 lb.)

U Note

 For details about how to scan an original using a carrier sheet, see "Scanning an Original Using a Carrier Sheet".

Reference

• p.31 "Scanning an Original Using a Carrier Sheet"


Non-compatible Originals

The following types of originals can cause jams, or may itself be damaged.

- Originals other than those specified in "Sizes and Weights of Recommended Originals"
- Stapled or clipped originals
- Perforated or torn originals
- · Bent, folded, or creased originals
- Pasted originals
- Originals with any kind of coating, such as thermal fax paper, art paper, aluminum foil, carbon paper, or conductive paper
- · Originals with indexes, tags, or other projecting parts
- Thin and soft originals such as translucent paper
- Bound originals such as books
- Damp originals
- · Badly curled originals
- · Originals that vary in thickness
- · Originals with sticky tape or adhesive
- Originals with thick leading edges
- · Originals with wet ink or correction fluid
- Carbon-backed originals
- Originals not made of paper (such as glass, metal)
- Originals with a roll diameter smaller than 40 mm (1.6 inches)
- Originals with a roll diameter larger than 110 mm (4.3 inches)

Flatten curled originals so they fit within the range shown below.


• Front and back curl; R 50 mm (2.0 inches) or more, height 20 mm (0.7 inch) or less

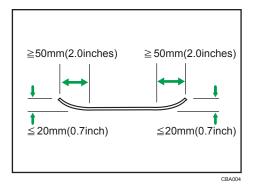

Originals that use more than 20% of the image area, may be faint.

Missing Image Area

Part of the original may not be copied as shown below (full-size copying on paper roll).

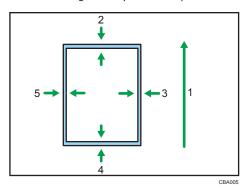

- 1. Original feed direction
- 2. Less than 8.0 mm (0.32 inch)
- 3. 2.0±2.0 mm (0.08±0.08 inch)
- 4. Less than 8.0 mm (0.32 inch) (excluding cutting error)
- 5. 2.0±2.0 mm (0.08±0.08 inch)



• The total missing horizontal image area (3+5) is less than 5.0 mm (0.2 inch).

Placing Originals

This section describes the procedure for placing originals on the original table.

- Place one original at a time on the original table.
- Once an original start to feed in, do not push or pull it. This may damage the original.
- If the original's front or rear edge is badly curled, smooth it out with both hands before scanning. If the original is inserted as is, it may be damaged.
- When inserting an original, push it lightly against the rollers. Pushing it with force may cause an original
 iam.
- When inserting an original, be careful not to put the trailing edge into the entrance of the bypass tray.
 This will cause an original jam.




- Place originals after any correction fluid or ink has completely dried. Not taking this precaution will
 result in a dirtied exposure glass and blemished copies.
- Dust and residue from originals drawn with a pencil can result in a dirtied exposure glass and blemished copies. We recommend using the carrier sheet for this type of original.

Placing Originals on the Original Table

Place originals on the original table.

- 1. Make sure that "Ready" appears on the screen.
- 2. Adjust the original guides to the size and orientation of the original.

Make sure that the original guides are flush against the original. Do not push the original guide side fence with force.

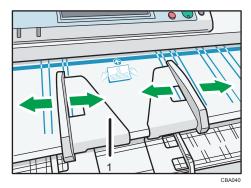

1. Original guides

3. Using both hands, carefully insert the original between the original guides, copy side down.

Place the original centrally, so that the space on either side of its edges is even.

Then push it carefully in, so that it makes light contact with the feed rollers.

Support the original with your hands until it feeds in.






- After inserting an original, do not try to handle it. Support it, if necessary, so as not to interrupt feeding.
- When copying rolled originals, use the lower output auxiliary guides.
- You can change the original feed delay setting if originals are repeatedly feeding in slanted, or if you
 need to adjust the delay for the type of originals you are using. For details about Original Feed Delay
 1, see "System Settings", Network and System Settings Reference.

Stopping Originals from Feeding In

If the originals are feeding in slanted, or jamming, etc., press the [Scanner Stop] key to stop them feeding in.

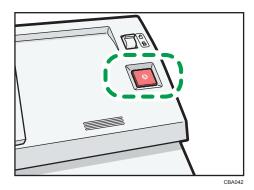


UNote

• When you press the [Scanner Stop] key, the original stops immediately, which can cause it to jam. When this happens, see "Clearing Misfeeds", Troubleshooting.

• When you have set original rear output as the original output location, the rear edge of the originals is held at the output exit. To cancel this, press the [Scanner Stop] key.

Original Orientation

Place the original face down on the original table so that the top of the original feeds in first.

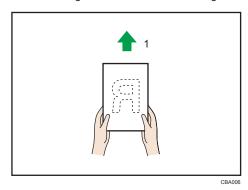


1. Original feed direction

When you cannot place the original as the above, you may not make copies as you want with particular functions.


If this happens, change the orientation by selecting 🗐 or 🗐

The relationship between Original Orientation and the actual orientation of originals is as follows:

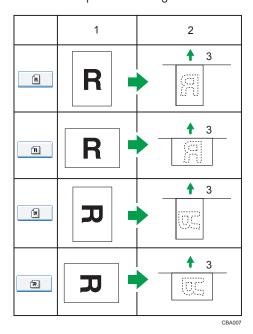

1. Original

- 1
- 2. Original on the original table
- 3. Original feed direction
- 1. Under Original Orientation, select an original orientation that is suitable for your original.

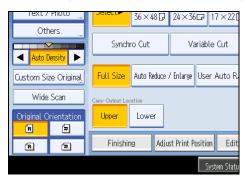




It is recommended that you use this function together with Auto Paper Select or Auto Reduce / Enlarge.


Placing Custom Size Originals

When placing custom size originals, specify the size of the originals.

1. Press [Custom Size Original].

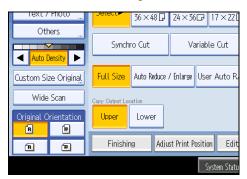



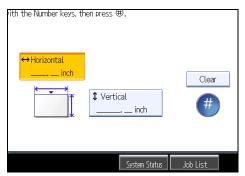

- 3. Enter the vertical size of the original with the number keys, and then press [#].
- 4. Press [OK].



- Originals with a vertical size of 210 ⁻ 15000 mm (8.3 ⁻ 590.5 inches) and a horizontal size of 210 ⁻ 914 mm (8.3 ⁻ 36.0 inches) can be specified with this function.
- If you do not specify the size, parts of the image may not be copied.
- To change the value you entered, press the item you want to change, and then enter the value again.


Wide Scan

When Wide Scan is selected, the machine scans using a predetermined width, regardless of the actual width of the original.

You can copy a custom size original without specifying its horizontal and vertical sizes.

If the paper size you want to copy onto is larger than that of the original, this function shifts the image to the upper center of the paper.

If the paper size you want to copy onto is smaller than that of the original, this function copies the top center part of the image.

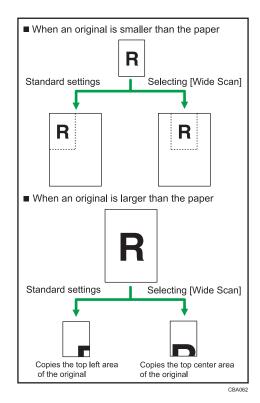

- You cannot use the bypass tray with this function.
- 1. Press [Wide Scan].



U Note

- If you select Wide Scan, the scan width is determined by the sum of the selected paper size and a specified reduction/enlargement ratio. The maximum width of Wide Scan is 914 mm (36 inches).
- When originals are scanned and stored in Document Server using this function, the stored original size is the paper size of the selected paper tray.

• Depending on the paper cut method you are using, some functions cannot be used with this function. For details, see "Function Compatibility".

Reference

• p.183 "Function Compatibility"

Scanning an Original Using a Carrier Sheet


Use the carrier sheet when copying originals listed in "Originals That Should Be Scanned Using the Carrier Sheet", such as originals drawn in pencil, and pasted originals.

For details, see "Originals That Should Be Scanned Using the Carrier Sheet".

Mportant !

- When using the optional carrier sheet, set the original output location to original rear output. If the
 original output location is set to original upper output, the original may be damaged.
- Open the carrier sheet with the transparent sheet face up, and then insert the original also face up.

Align the original with the fold of the carrier sheet.

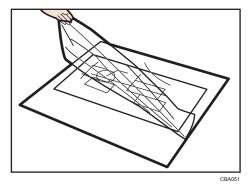

2. Using both hands, hold the carrier sheet face down, and carefully insert the folded edge of the carrier sheet into the insertion area.




- **U** Note
 - When using the carrier sheet with Synchro Cut, the paper is cut to the size of the carrier sheet.
- Reference
 - p.22 "Originals That Should Be Scanned Using the Carrier Sheet"

Placing Folded Originals (Using the Original Switching Lever)

When placing folded originals such as drawings, you can make copies with the fold lines erased.

1. Move the original switching levers at both sides of the machine to the front.

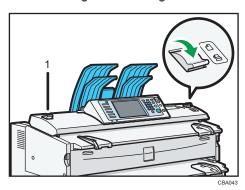

1. Original switching levers




• Originals of 157 g/m² (41 lb.) or heavier cannot be used.

Placing Rolled Originals

When placing rolled originals, you can make copies using the lower output auxiliary guides.


1. Pull the lower output auxiliary guides out.

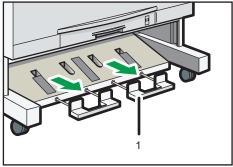

CBA044

1

- 1. Lower output auxiliary guides
- 2. Place the rolled original on the lower output auxiliary guides.
- Pull the leading edge of the original up to the original table, and then adjust the original guides to the paper width.
- 4. Using both hands, carefully insert the original between the original guides, copy side down.

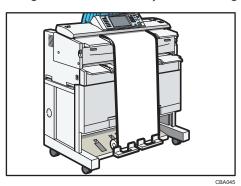




- Do not apply excessive force to the lower output auxiliary guides.
- Close the lower output auxiliary guides after each use.

Attaching the Original Hangers

The original hangers (optional) are useful when scanning two or more originals at a time.


Up to AO (E) size originals can be placed on the hangers.

Attach each of the original hangers to the front of the machine.

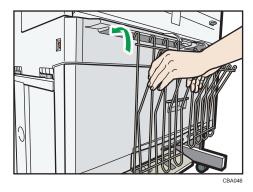

When placing originals, space the hangers according to the size of your originals.

Drape large originals, such as AO (E) or A1 (D) sizes, over the tips of the hangers.

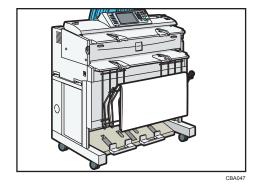

2. Basic Copying

This chapter describes the basic procedure for making copies.

Basic Procedure

This section describes the basic procedure for making copies.



- When User Code Authentication is set, enter your user code (up to eight digits) with the number keys so that the machine accepts copy jobs. For details about Administrator Tools, see "System Settings", Network and System Settings Reference.
- When Basic Authentication, Windows Authentication, LDAP Authentication, or Integration Server
 Authentication is set, enter your login user name and password so that the machine accepts copy
 jobs. Ask the administrator for the login user name and password. For details, see "When the
 Authentication Screen is Displayed", About This Machine.
- 1. Make sure that "Ready" appears on the screen.

If any other function is displayed, press the [Copy] key on the left side of the control panel.

Initial copy screen



2. Make sure that no previous settings remain.

When there are previous settings remaining, press the [Clear Modes] key.

- 3. Specify the output locations for originals and copies, and then prepare to use them.
- 4. Select an original orientation that matches the orientation of your originals.
- 5. Make the necessary settings.
- 6. Enter the number of copies with the number keys.

The maximum copy quantity that can be set is 99.

Adjust the original guides to the width of the original, and then place the original face down.

The original feeds into the machine automatically, and copying starts.

If [Press Start Key] is selected for Feed Start Method, copying starts after you press the [Start] key. For details about Feed Start Method, see "System Settings", Network and System Settings Reference.



- After logging in the machine, be sure to log out of it to prevent unauthorized usage.
- To stop the machine during a multi-copy run, press the [Clear/Stop] key after the original has fed in. The machine stops when the current copy finishes. Press [Stop] to cancel the copy job; press [Continue] to resume the interrupted copy job.
- To cancel all copy functions and return the machine to the default condition, press the [Clear Modes] key.
- To clear entered values, press [Cancel] on the screen.
- To confirm settings, press [Check Modes].
- To stop the original feeding in, press the [Scanner Stop] key.
- If you register the settings using the program function, you can easily recall them by pressing the [Program] key.
- The number of scanned originals is displayed in the top right corner of the screen.
- You can change the maximum copy quantity under Max. Copy Quantity in User Tools. For details about Max. Copy Quantity, see "General Features".


■ Reference

• p.167 "General Features"

Check Modes

You can confirm the current settings on the screen.

1. Press [Check Modes].

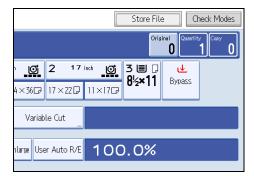

The Check Modes screen appears.



Original Counter/Reset

The number of scanned originals is displayed in the top right corner of the screen.

This allows you to check the number of originals in a job, or if any sheets have been fed together, and the number of copies that will be stored in the copy output tray.



Resetting the original counter

Reset the number of scanned originals displayed on the screen.

1. Press [Original] in the top right corner of the screen.

The number is reset to 0.


Auto Start

If you make settings and scan the originals while the messages "Scanning originals can be started." and "Select copy mode and Place original." are displayed alternately, your copies will be made once the machine is ready.

Interrupt Copy

Use this function if you want to interrupt a long copy job to make urgently needed copies.


1. Press the [Interrupt] key.

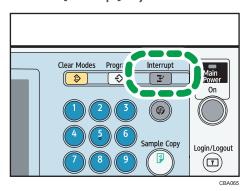

The interrupt key indicator lights.

The current copy is ejected, and the machine stops making copies.

2. Make the settings for an interrupt copy job.

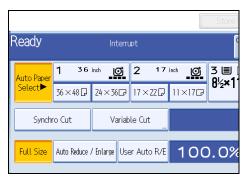

3. Place the original you want to copy face down.

The original feeds into the machine, and copying starts automatically.

- 4. When copying is complete, remove the originals and copies.
- 5. Press the [Interrupt] key again.

The interrupt key indicator goes off.

6. Replace the originals that you were copying.

The original feeds into the machine, and copying resumes automatically. To cancel copying, press the [Clear Modes] key.




- You cannot set Job Preset for Interrupt Copy.
- The number of originals is counted from "1" when you use Interrupt Copy.

Job Preset

You can make settings for the next copy job during copying.

If a long copy job is in progress and you do not want to wait for it to finish, you can use this function to set up the next copy job in advance. When the current copy job is finished, the next job will start automatically.

1. Press [New Job] when "Copying..." appears.

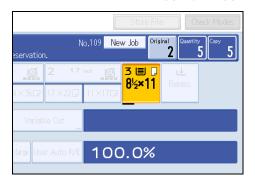

- 2. Be sure message "Ready" appears, and then make settings for the next copy job.
- 3. Place the original.

The original feeds automatically into the machine and is then scanned.

When the job preset is complete, a confirmation dialog box appears.

4. Press [Exit].

The initial copy display appears.

After the current copy job, the next copy job starts automatically.



- You can switch the display to the current copy job by pressing [To Copying Screen]. You can switch the display to the preset job by pressing [To Reserv. Screen].
- Preset copy jobs are registered under job numbers in the Reserv. Screen.
- You can confirm and delete preset jobs. For details about the procedures, see "Managing Jobs".
- When the original size specified in Job Preset is as the same as that of the copy job in progress, the number of sheets that can be scanned is as follows:
 - A0 (E): 100 sheets
 - A1 (D): 100 sheets
 - A2 (C): 200 sheets
 - A3 (B): 400 sheets
 - A4 (A): 400 sheets
- The maximum number of jobs that can be preset is eight.

• You might not be able to specify eight preset jobs if your originals are large.

■ Reference

• p.78 "Managing Jobs"


2

Copying from the Bypass Tray


Use the bypass tray to copy onto paper sizes that cannot be loaded on the paper roll trays, or cut paper tray.



- You can copy originals that are up to 2000 mm (78.74 inches) long.
- Paper that has a horizontal length of 210 ⁻ 914.4 mm (8.27 ⁻ 36.00 inches) and a vertical length of 257 ⁻ 2000 mm (10.12 ⁻ 78.74 inches) can be copied from the bypass tray.
- Insert the paper in the bypass tray lengthwise or sideways to fit it onto the feeding orientation.
- Insert the paper in the bypass tray lengthwise when you use AO (E) size paper.
- 1. Press [Bypass], and then press the [#] key.

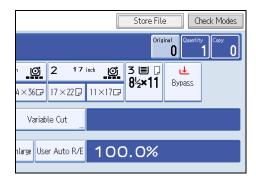


2. Select the size and type of the paper.

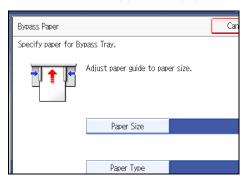

- 3. Press [OK].
- 4. Enter the number of copies with the number keys.
- 5. Place your original, and let it be scanned.




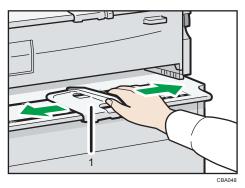

1. Bypass tray's paper guide

7. Insert the paper copy side up into the bypass tray.

The paper feeds into the machine automatically and copying starts.

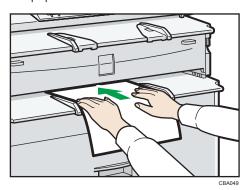

UNote

- Insert the paper until you hear the beep. When the Panel Key Sound is turned off, it will not sound if you insert paper into the bypass tray. For details about Panel Key Sound, see "System Settings", Network and System Settings Reference.
- Place paper centrally, so that the space on either side of its edges is even. Then push it carefully in, so that it makes light contact with the feed rollers. Support the paper with your hands until it feeds in.
- Do not copy on both sides of the paper.
- Do not use paper already copied or printed on.
- Do not insert multiple sheets at one time. Doing so can result in jams and poor quality prints.
- To make multiple copies, insert an additional sheet after each feeds in.
- For details about paper type and orientation that can be loaded in the bypass tray, see "Adding Paper", About This Machine.
- To place a rolled original, pull out the lower output auxiliary guides to the front, and then place the rolled original on it. For details, see "Placing Rolled Originals".




• p.32 "Placing Rolled Originals"

Copying onto Regular Size Paper

Makes copies onto regular size paper from the bypass tray.

- 1. Press [Bypass], and then press the [#] key.
- 2. Press [Paper Size].
- 3. Make sure that [Regular Size] is selected.
- 4. Select the paper size.

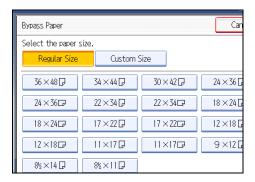

- 5. Press [OK] twice.
- 6. Place your original, and let it be scanned.
- 7. Adjust the bypass tray's paper guides to the size of the paper.
- 8. Insert the paper copy side up into the bypass tray.


The paper feeds into the machine automatically and copying starts.

Copying onto Custom Size Paper


Makes copies onto custom size paper from the bypass tray.

- 1. Press [Bypass], and then press the [#] key.
- 2. Press [Paper Size].

3. Press [Custom Size].

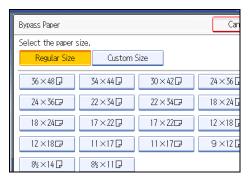

4. Enter the horizontal size of the paper with the number keys, and then press [#].

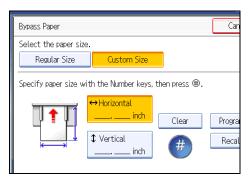

- 5. Enter the vertical size of the paper with the number keys, and then press [#].
- 6. Press [OK] twice.
- 7. Place your original, and let it be scanned.
- 8. Adjust the bypass tray's paper guides to the size of the paper.
- Insert the paper copy side up into the bypass tray.
 The paper feeds into the machine automatically and copying starts.




To change the value you entered, press the item you want to change, and then enter the value again.

Registering a custom size

Register a custom paper size.

- 1. Press [Bypass], and then press the [#] key.
- 2. Press [Paper Size].
- 3. Press [Custom Size].
- 4. Enter the horizontal size with the number keys, and then press [#].

- 5. Enter the vertical size with the number keys, and then press [#].
- 6. Press [Program].

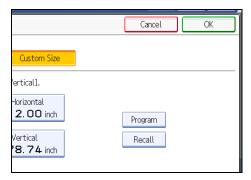


The confirmation screen appears.

7. Press [Exit].

Recalling the registered custom size

Recalls the registered paper size.

- 1. Press [Bypass], and then press the [#] key.
- 2. Press [Paper Size].
- 3. Press [Custom Size].
- 4. Press [Recall].

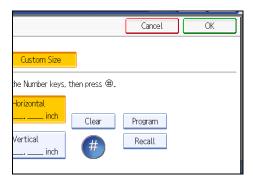

The registered size is displayed.


5. Press [OK].

Copying onto Special Paper

When copying onto special paper such as translucent paper or films, select the type and size of paper.



- Remove a copied special paper every time it is ejected.
- 1. Press [Bypass], and then press the [#] key.
- 2. Press [Paper Type].
- 3. Select a paper type ([Translucent Paper] or [Film]) in the special paper settings.

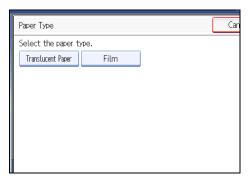

- 4. Press [OK].
- 5. Specify the paper size.
- 6. Press [OK].
- 7. Place your original, and let it be scanned.
- 8. Adjust the bypass tray's paper guides to the size of the paper.
- 9. Insert the paper copy side up into the bypass tray.
 The paper feeds into the machine automatically and copying starts.



• Printing on special paper may be slower than printing on plain paper.

2

Selecting the Original Type Setting

Select one of the following nine types to match your originals:

Text

For originals that contain mainly text or printed characters.

Drawing

For drawings that contain fine lines. Faint lines are clearly reproduced.

Text / Photo

For originals that contain both text and photographs or pictures.

Glossy Photo

The machine scans the original using the settings for pictures and photographs printed on glossy photographic paper.

Printed Photo

The machine scans the original using the settings for pictures and photographs printed in magazines and on other documents.

Copied Photo

The machine scans the original using the settings for pictures and color copies of photographs.

Background Lines

For images drawn on section paper (green sectioned graph paper) without copying the lines on the paper. Blue lines on originals cannot be eliminated.


Patched Original

For originals made up of several pieces of smaller originals which differ in background density. Selecting this mode tones down the dark background of originals.

Generation Copy


For originals that are copied. The copy image can be reproduced sharply and clearly.

1. Select the original type.

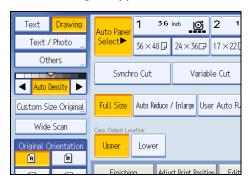



• To select [Glossy Photo], [Printed Photo], [Copied Photo], [Background Lines], [Patched Original], or [Generation Copy], select [Others] first.

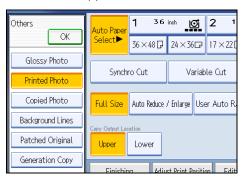

- If you select [Glossy Photo], [Printed Photo], or [Copied Photo] in [Others], Auto Image Density is automatically cancelled.
- When you select [Patched Original], thick lines, text, or solid images in the original are recognized as dark background that may not be copied.
- You can change the settings for original types shown on the initial display under General Features in User Tools. For details, see "General Features".

■ Reference

• p.167 "General Features"

2

Adjusting Copy Image Density

There are three types of adjustment available.

Auto image density

The machine automatically adjusts the image density by scanning the densities of originals. Dark texture originals (such as newspaper or recycled paper) will be copied so that background will not be reproduced.

Manual image density

You can adjust the density of the overall original in nine steps.

Combined auto and manual image density


Adjusts the density of an image only for dark texture originals.

Auto Image Density

The machine automatically adjusts the image density by scanning the densities of originals. Dark texture originals (such as newspaper or recycled paper) will be copied so that background will not be reproduced.

1. Make sure that [Auto Density] is selected.

When [Auto Density] is not selected, press [Auto Density].

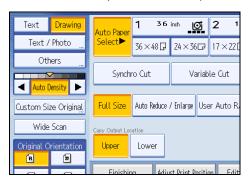

Manual Image Density

You can adjust the density of the overall original in nine steps.

1. When [Auto Density] is selected, press [Auto Density] to cancel it.


2. Press [¶] or [▶] to adjust the image density. The density indicator "∇" moves.



Combined Auto and Manual Image Density

Adjusts the density of an image only for dark texture originals.

- Make sure that [Auto Density] is selected.
 When [Auto Density] is not selected, press [Auto Density].
- 2. Press [\P] or [\P] to adjust the density. The density indicator " \P " moves.

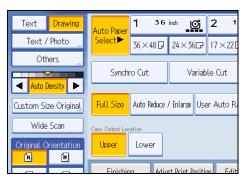



• If dark backgrounds still appear on copies, adjust the density using $[\P]$.

Copy Quality

Adjusts image qualities.

The following three types of image adjustments are available:

Sharp / Soft

Adjusts the outline of an image.

2


Contrast

Adjusts the shades of an image.

Background Density

Adjusts the background density of an image.

1. Press [Edit / Stamp].

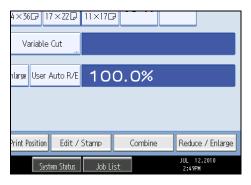

- 2. Press [Copy Quality].
- 3. Press [Copy Quality].
- 4. Adjust the settings.
- 5. Press [OK] twice.



- [Sharp / Soft], [Contrast], and [Background Density] can each be adjusted, however, their
 adjustments can affect the level of other adjustment functions.
- The adjusted settings will be deleted and the initial values will be reset, when Auto Clear has been performed, when the [Clear Modes] key has been pressed or when the power has been turned off.

Sharp / Soft

Adjusts the outline of an image.

1. Adjust the image quality by pressing [Soft] or [Sharp].



2. Press [OK].

Contrast

Adjusts the shades of an image.

1. Adjust the image quality by pressing [Low] or [High].




2. Press [OK].

Background Density

Adjusts the background density of an image.

1. Adjust the image quality by pressing [Lighter] or [Darker].

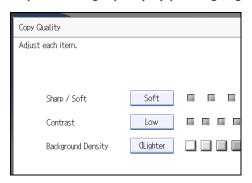

2. Press [OK].



• Adjustments should be made lighter when copying dark textured originals, such as newspaper or recycled paper.

Selecting Copy Paper

There are two ways to select copy paper:

Auto Paper Select

The machine selects a suitable size of copy paper automatically based on original size and reproduction ratio.

Manual Paper Select

Choose the tray containing the paper you want to copy onto: paper roll tray, cut paper tray, or bypass tray

The paper sizes and orientations you can use with Auto Paper Select (when copying at a ratio of 100%) are as follows:

Engineering

E
$$(34 \times 44)$$
D, D (22×34) DD, C (17×22) DD, B (11×17) DD, A $(8^{1}/_{2} \times 11)$ D

Architecture

E
$$(36 \times 48)$$
D, D (24×36) DD, C (18×24) DD, B (12×18) DD, A (9×12) D

Others



- Only the paper trays set to [Do not Display] or [Recycled Paper] in Paper Type and also set to [Yes] in Apply Auto Paper Select under Tray Paper Settings can be selected in Auto Paper Select mode.
 For details, see "System Settings", Network and System Settings Reference.
- If you change the paper type, copying may take longer to start.
- When Auto Paper Select is selected, copying may take slightly longer since the machine selects the copy paper after scanning the original.


Auto Paper Select

The machine selects a suitable size of copy paper automatically based on the original size and the reproduction ratio.



- You cannot use the bypass tray with this function.
- 1. Make sure that [Auto Paper Select] is selected.

Trays with a key mark () will not be automatically selected.

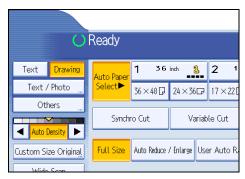




- If no paper suitable for the size and magnification you have specified is loaded in the paper trays, load paper of the required size in a paper tray. Alternatively, you can select a suitable magnification ratio for the paper currently loaded in the paper trays. After doing one of the above, place your original again.
- Special size paper cannot be used with Auto Paper Select.

Manual Paper Select


Choose the tray containing the paper you want to copy onto: paper roll tray, cut paper tray, or bypass tray

Select the paper roll tray, cut paper tray, or bypass tray.
 The indicator corresponding to the selected paper tray is highlighted.

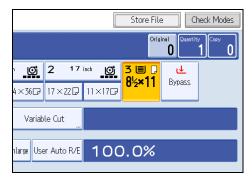

Rotate Copy

If the original's width is different to that of the paper loaded in the paper roll tray, or the original's orientation is different to that of the paper loaded in the cut paper tray, the machine rotates the original image by 90 degrees to fit it onto the copy paper.

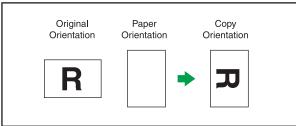

BZH101

U Note

- This function works when [Auto Paper Select] or [Auto Reduce / Enlarge] is selected. See "Auto Paper Select" and "Auto Reduce / Enlarge".
- The default setting for Auto Tray Switching is [With Image Rotation]. You cannot use Rotate Copy if this setting is changed to [Without Image Rotation] or [Off]. See "General Features".
- You cannot use Rotate Copy when copying onto AO (E), A4 (A), B1 JIS, or B4 JIS size paper. In this case, place your original in the D orientation.

■ Reference

- p.53 "Auto Paper Select"
- p.64 "Auto Reduce / Enlarge"
- p.167 "General Features"

Setting the Length of Copy Paper Cut

Specify the length to cut the paper loaded in the paper roll tray.



• You cannot cut the paper in the bypass tray.

The following paper cut methods are available:

Synchro Cut

Cuts the paper at the same length as the original. If the copy is enlarged or reduced, the machine calculates the appropriate length for the magnification ratio and cuts the paper.

Preset Cut

Cuts the paper at a preset size, regardless of the size of the original. You can use this to copy different sized originals to the same size.

Variable Cut

Cuts the paper to the size entered.



• The minimum cut length is 280 mm (11 inches), and the maximum length is 15000 mm (590.5 inches) for plain paper of 841 mm (34 or 36 inches) or more in width. For other paper, the maximum length is 3600 mm (141.8 inches). If the length you specify exceeds the maximum, the paper will be fed in at a slant, resulting in poor copy quality and wrinkled paper.

Synchro Cut

Cuts the paper at the same length as the original. If the copy is enlarged or reduced, the machine calculates the appropriate length for the magnification ratio and cuts the paper.

1. Press [Synchro Cut].



2. Select a paper roll tray.



• Depending on the original length and paper type, copy paper length may be different from the original.

Preset Cut

Cuts the paper at a preset size, regardless of the size of the original. You can use this to copy different sized originals to the same size.

1. Select a preset cut size of the paper roll tray 1 or 2.



The preset cut size differs depending on the paper roll width. It is cut in the following sizes or standard lengths.

Engineering

Paper roll width	Preset D	Preset 🗗
34 inch	34 × 44D	22 × 34□
22 inch	22 × 34D	17 × 22□
17 inch	17 × 22D	11 × 17 🗗
11 inch	11 × 17D	-
$8^{1}/_{2}$ inch	8 ¹ / ₂ × 11D	$8^{1}/_{2} \times 14^{\circ}$

Architecture

Paper roll width	Preset D	Preset 🗗
36 inch / 914 mm	36 × 48D	24 × 36□
30 inch	30 × 42D	21 × 30₽

Paper roll width	Preset D	Preset 🗗
24 inch	24 × 36D	18 × 24 □
18 inch	18 × 24D	12 × 18□
12 inch	12 × 18D	-
9 inch	9 × 12D	-


Variable Cut

Cuts the paper to the size entered.

1. Press [Variable Cut].



2. Enter the length with the number keys, and then press [#].

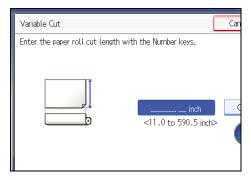

3. Press [OK].

The entered length is displayed on the screen.

4. Select a paper roll tray.



• To change the value you entered, press [Clear], and then enter a new value.

72

• To cancel Variable Cut, press [Cancel].

Reducing or Enlarging Originals

This section describes methods of reducing or enlarging images by specifying a reproduction ratio, or a paper size.

In addition to the functions described in this section, advanced reduce/enlarge copy functions are also available. For details about these functions, see "Advanced Reduce/Enlarge Copying".


Reference

• p.89 "Advanced Reduce/Enlarge Copying"

Preset Reduce/Enlarge

This function allows you to reduce or enlarge images by selecting a preset ratio.

You can register up to three frequently used reproduction ratios other than the preset reduce/enlarge ratios.

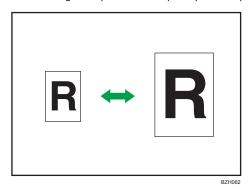

You can select one of eight preset ratios (four enlargement ratios, four reduction ratios).

Engineering

Enlargement ratios: 129.4%, 200.0%, 258.8%, 400.0%


Reduction ratios: 25.0%, 32.4%, 50.0%, 64.7%

Architecture


Enlargement ratios: 133.3%, 200.0%, 266.7%, 400.0%

Reduction ratios: 25.0%, 33.3%, 50.0%, 66.7%

1. Press [Reduce / Enlarge].

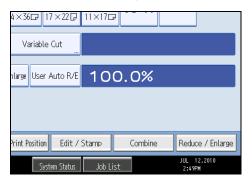

2. Select a ratio, and then press [OK].

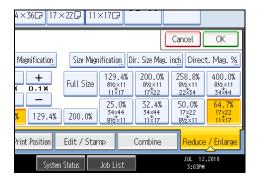

The selected ratio appears on the display.



- Select one of the preset ratios based on the original size and paper size.
- You can store up to three ratios of your own for frequently used ratio, but are not preset. The ratios can be set in 0.1% increments. See "Reproduction Ratio".
- For details about the relationship between the original and paper sizes for preset ratios, see "Magnification Ratio Chart".
- You can select a ratio regardless of original or paper size, or paper cut method. With certain ratios, parts of the image might not be copied or margins will appear.

Reference

- p.169 "Reproduction Ratio"
- p.189 "Magnification Ratio Chart"

Zoom

You can change the reproduction ratio in increments of 0.1%.



You can specify the ratio in the following ways.

- Entering the ratio with the number keys
- Specifying the ratio with [+] and [-]




- The reproduction ratios you can specify are 25.0 400.0%.
- You can select a ratio regardless of original or paper size, or paper cut method. With certain ratios, parts of the image might not be copied or margins will appear.

Entering the ratio with the number keys


Enter a ratio using the number keys.

1. Press [Reduce / Enlarge].

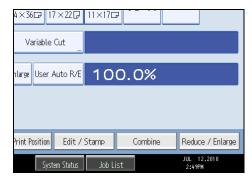

2. Press [Number keys].

3. Enter the desired ratio with the number keys, and then press [#].

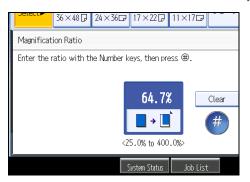

4. Press [OK] twice.



- Use the [.] key to enter a decimal point.
- To change the value, press [Clear], and then enter a new value.

Specifying the ratio with [+] and [-]


Specify a ratio using [+] and [-].

1. Press [Reduce / Enlarge].



2. Select a preset ratio which is close to the desired ratio.

3. Adjust the ratio with [+] and [-].

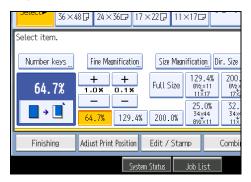

Pressing [+] or [-] above and below "0.1%" changes the ratio in steps of 0.1%. Pressing [+] or [-] above and below "1.0%" changes the ratio in steps of 1.0%. Pressing and holding down one of these on-screen buttons will change the ratio ten times faster than a single press.


4. Press [OK].



• To change the value you specified, readjust it with [+] and [-].

Auto Reduce / Enlarge


The machine automatically detects the original size and then selects an appropriate reproduction ratio based on the paper size you select.

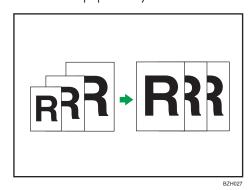

• You cannot use the bypass tray with this function.

This is useful to copy different size originals to the same size paper.

To ensure the print result you require is produced, specify the original orientation before using Auto Reduce / Enlarge.

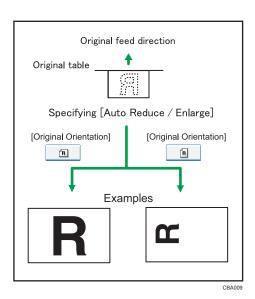

The paper sizes and orientations you can use with this function are as follows:

- Engineering
 E (34 × 44)D, D (22 × 34)DD, C (17 × 22)DD, B (11 × 17)DD, A (8¹/₂ × 11)D
- Architecture E (36 × 48)□, D (24 × 36)□□, C (18 × 24)□□, B (12 × 18)□□, A (9 × 12)□
- Others 30 × 21 □, 30 × 42 □
- 1. Press [Auto Reduce / Enlarge].



2. Select the paper size.



- The machine selects one of the following ratios:
 - Engineering
 400.0%, 258.8%, 200.0%, 129.4%, 100.0%, 64.7%, 50.0%, 32.4%, 25.0%

2

- Architecture
 400.0%, 266.7%, 200.0%, 133.3%, 100.0%, 66.7%, 50.0%, 33.3%, 25.0%
- Make sure that the original orientation setting matches the actual orientation of your original. For details, see "Original Orientation".

■ Reference

• p.27 "Original Orientation"

User Auto Reduce / Enlarge

Use this function to copy to a selected size for each original size.

• You cannot use the bypass tray with this function.


When the original is placed, the machine automatically enlarges or reduces the image to fit the size of the copy paper.

You can select the following combinations:

	Original size	Copy size	
Engineering	E (34 × 44)D	E (34 × 44), D (22 × 34), C (17 × 22), B (11 × 17), A	
	D (22 × 34)□□	$(8^{1}/_{2} \times 11)$	
	C (17 × 22) □□		
	B (11 × 17)□□		
	A $(8^1/_2 \times 11)$		
Architecture	E (36 × 48)₽	E (36 × 48), D (26 × 36), C (18 × 24), B (12 × 18), A (9 ×	
	D (26 × 36)₽□	12)	
	C (18 × 24)₽□		
	B (12 × 18)□□		
	A (9 × 12)₽□		

1. Press [User Auto R/E].

2. Check that the combination selected for User Auto Reduce / Enlarge is the one you want.

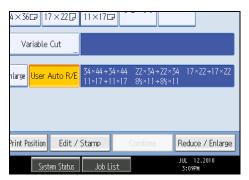



- The default setting is to copy at the same size (full size). You can change the combination under Reproduction Ratio in User Tools. For details, see "Reproduction Ratio".
- Make sure that the original orientation setting matches the actual orientation of your original. For details, see "Original Orientation".
- You can specify the copy paper size in the range 34 × 44 to 8¹/₂ × 11 or 36 × 48 to 9 × 12.
 However, you cannot change the size of the page image on an Engineering-series original to fit Architecture-series copy paper or vice versa.

■ Reference

- p.27 "Original Orientation"
- p.169 "Reproduction Ratio"

Combined Copying

Combines several pages onto one side of a sheet.

One-Sided Combine

Combine several pages onto one side of a sheet.




• You cannot use the bypass tray with this function.

There are three types of One-Sided Combine.


1 Sided 2 Pages → Combine 1 Side

Copies two 1-sided originals to one side of a sheet.

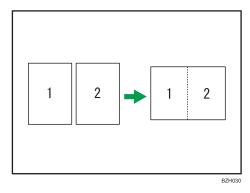


1 Sided 4 Pages → Combine 1 Side

Copies four 1-sided originals to one side of a sheet.

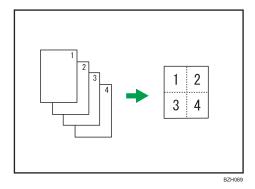


1 Sided 8 Pages → Combine 1 Side

Copies eight 1-sided originals to one side of a sheet.

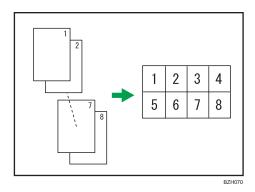


Orientation of the original and image position of combine


Portrait (D) originals

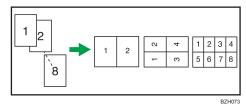


Landscape (□) originals

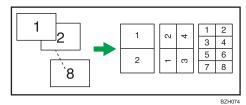

1. Press [Combine].

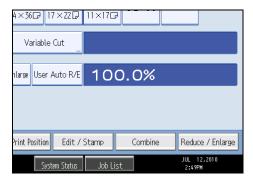


2. Select the number of originals to combine.

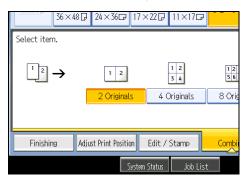

- 3. Select the paper size.
- 4. Press [OK].



- The machine selects the reproduction ratio automatically. This reproduction ratio depends on copy paper sizes and the number of originals.
- If the calculated ratio is under the minimum ratio, it is automatically adjusted to within available range. However, with some ratios, parts of the image might not be copied.
- You cannot use custom size paper.
- If the orientation of originals is different from that of the copy paper, the machine will automatically rotate the image by 90 degrees to make copies properly.
- If the number of originals placed is less than the number specified for Combine, the last page segment is left blank as shown.

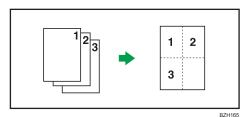

 You can change the initial settings for 1-Sided Combine under Edit in User Tools. For details, see "Edit".

Reference

• p.172 "Edit"

Finishing

You can specify how to finish the prints. You can sort the prints by page number or copy order.

Sort


The machine assembles copies as sets in sequential order.



- To use the Rotate Sort function, two paper trays loaded with paper of the same size and type, but in different orientation (DD), are required.
- You cannot use the bypass tray with Rotate Sort.


Sort

Copies are assembled as sets in sequential order.

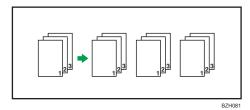

Rotate Sort

Every other copy set is rotated by 90 degrees (DD) and delivered to the copy tray.

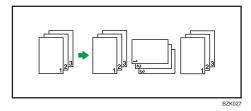

1. Make necessary settings.

2. Press [Finishing].



3. Select [Sort] or [Rotate Sort].



- 4. Press [OK].
- 5. Enter the number of copy sets using the number keys.
- 6. Place your original, and let it be scanned.
 Press the [#] key after all the originals have been scanned.
 The machine starts copying.



- When the Sort function is selected, the machine will make a single copy of each original before it
 begins the full copy run. If the first copy set is acceptable, you can make the remaining copy sets by
 pressing the [#] key. The time required for copy sets to be delivered varies depending on the print
 settings.
- To confirm the type of finishing, press the [Sample Copy] key in step 6. To use Sample Copy, select
 [Press Start Key] in Feed Start Method under User Tools. You cannot make sample copy when [Auto]
 is selected. For details about Feed Start Method, see "System Settings", Network and System Settings
 Reference.
- To cancel Sort or Rotate Sort, press the [Clear Modes] key.
- Special size paper cannot be used with Rotate Sort.
- You can use Rotate Sort for copy sizes up to A1 (D).

- The number of originals that can be scanned for Sort and Rotate Sort is as follows:
 - A0 (E)^{*1}: 100 sheets
 - A1 (D): 100 sheets
 - A2 (C): 200 sheets
 - A3 (B): 400 sheets
 - A4 (A)^{*1}: 400 sheets
 - * 1 The Rotate Sort function cannot be used.
- You can use the following paper sizes with Rotate Sort:
 - Engineering
 - $22 \times 34 (D)$
 - 17 × 22 (C)
 - 11 × 17 (B)
 - Architecture
 - $24 \times 36 (D)$
 - 18 × 24 (C)
 - $12 \times 18 (B)$

Sample Copy


Use this function to check the copy settings before making a long copy run.



- This function can be used only when the Sort function is selected.
- To use Sample Copy, select [Press Start Key] in Feed Start Method under User Tools. You cannot
 make sample copy when [Auto] is selected.
- 1. Select Sort and any other necessary functions, and then place the originals.



2. Press the [Sample Copy] key.

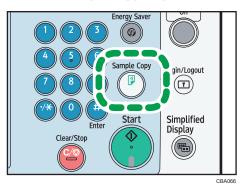

One copy set is delivered as a sample.

If the sample is acceptable, press [Continue].
 The number of copies made is the number specified, minus one for the proof copy.




• If you press [Suspend] after checking the results, return to step 1 to adjust the copy settings as necessary. Depending on the combination of functions, you may not be able to change some settings.

Changing the number of sets

You can change the number of copy sets during copying.

Important

- This function can be used only when the Sort function is selected.
- 1. While "Copying..." is displayed, press the [Clear/Stop] key.
- 2. Press [Change Quantity].
- 3. Enter the number of copy sets with the number keys, and then press the [#] key.

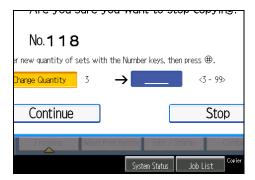

4. Press [Continue].

Copying starts again.




• The number of sets you can enter in step 3 differs depending on when the [Clear/Stop] key is pressed.

Storing Data in the Document Server


The Document Server enables you to store documents being read with the copy feature on the hard disk of this machine. Thus you can print them later applying necessary conditions.



- Machine failure can result in data loss. Important data stored on the hard disk should be backed up.
 The manufacturer shall not be responsible for any damage that might result from the loss of data.
- You cannot use the bypass tray with this function.
- 1. Press [Store File].

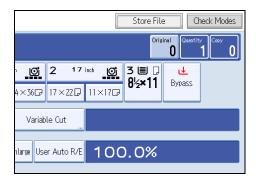

2. Enter a file name, user name, or password if necessary.

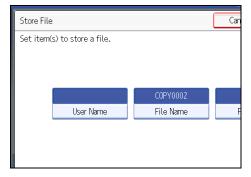

- 3. Press [OK].
- 4. Make the scanning settings for the original.
- 5. Adjust the original guides to the width of the original, and then place the original face down.
 The original feeds into the machine automatically, and copying starts. The scanned data is also stored in the memory.



- To stop scanning, press the [Clear/Stop] key. To resume a paused scanning job, press [Continue] in the confirmation display. To delete scanned images and cancel the job, press [Stop].
- Press the [#] key after all the originals have been scanned.

- Data stored in the Document Server is set to be deleted after three days by the factory default. You can specify the period after which the stored data is deleted automatically. For details about changing settings, see "System Settings", Network and System Settings Reference.
- To check if the document has been stored, press the [Document Server] key.
- If you want to store another document, do so after copying is complete.
- For details about the Document Server, see "Using the Document Server".
- For details about printing stored documents, see "Printing Stored Documents".
- For details about setting user name, file name, and password, see "Using the Document Server".
- Depending on the security setting, [Access Privileges] may appear instead of [User Name]. For details about specifying [Access Privileges], consult the administrator.
- For details about how to enter text, see "Entering Text", About This Machine.

■ Reference

- p.145 "Using the Document Server"
- p.154 "Printing Stored Documents"

Managing Jobs

Jobs printed using copy, Document Server, or printer mode are temporarily stored in the machine, and then executed in order. The Job List function allows you to manage these jobs.

For example, you can cancel incorrect job settings or print an urgent document.



- You cannot use the Job List function when Interrupt Copy is active.
- Documents printed using the scanner function are not displayed in the job list.


Job List Screen

This section explains displays and icons that appear in the Job List screen.

The Job List screen varies depending on whether [Job Order] is selected with Print Priority for the System Settings. For details about the setting procedure, see "System Settings", Network and System Settings Reference.

When [Job Order] is not selected:


The job list is displayed for each of the functions.

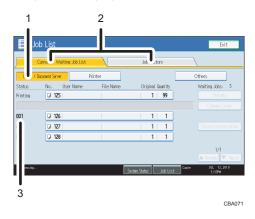

When [Job Order] is selected:

The job list is displayed for all functions in the order of print jobs.

9

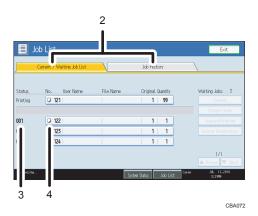


- 1. Switches between job lists for each function.
- 2. Switches between [Current / Waiting Job List] and [Job History].
- 3. Displays reserved job numbers.
- 4. Displays the function used to print jobs.
 - D: Job printed using copy function
 - (a): Job printed using printer function
 - D: Job printed using Document Server function
 - E: Job printed using Web Image Monitor

Checking Jobs in the Job List

You can check the contents of jobs in the job list.

- 1. Press [Job List].
- 2. Select the job whose contents you want to check.
- 3. Press [Details], and then check the contents.

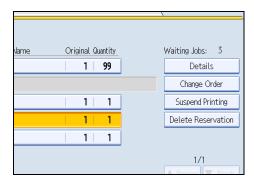


4. Press [Exit].


Changing the Order of Jobs

You can change the order of jobs in the job list.

- 1. Press [Job List].
- 2. Select the job whose order you want to change.
- 3. Press [Change Order].

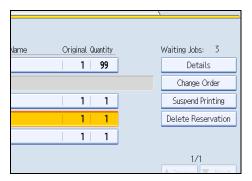

4. Change the order using [Top], [Previous], or [Next].

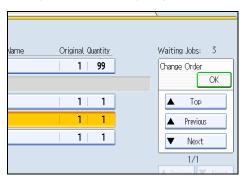


5. Press [OK].

Holding Jobs

You can hold jobs that are queued or currently printing.

- 1. Press [Job List].
- 2. Select the job you want to hold.

3. Press [Suspend Printing].

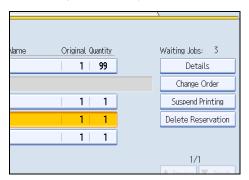

The selected job and the jobs that follow it are suspended. "Suspended" is displayed at the left of the jobs in the job list that are suspended.



- To resume the suspended jobs, press [Resume Printing].
- This function is available only if [Job Order] is specified.


Deleting Jobs

You can delete a job that is queued or currently printing.

- 1. Press [Job List].
- 2. Select the job you want to delete.

To delete two or more print jobs, select them.

3. Press [Delete Reservation].

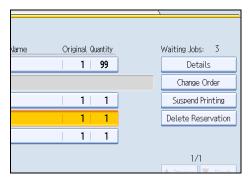

4. Press [OK].

Checking the Job History

You can view the history and contents of completed print jobs.

- 1. Press [Job List].
- Press [Job History].A list of completed print jobs appears.
- 3. Select the job whose contents you want to check.
- 4. Press [Details], and then check the contents.
- 5. Press [Exit].

2

Registering Frequently Used Functions

You can store frequently used copy job settings in the machine memory and recall them for future use. You can store up to 10 programs.



- When a specified program is registered as the default, its values become the default settings, which
 are displayed without pressing the [Program] key, when modes are cleared or reset, and after the
 operation switch is turned on. See "Changing the Default Functions of the Copy's Initial Display".
- Stored paper settings are based on paper size. If multiple trays holding paper of the same size are
 installed, the paper tray that is prioritized in the system settings will be selected first. See "System
 Settings", Network and System Settings Reference.
- Programs are not deleted by turning the power off or by pressing the [Clear Modes] key.


Reference

• p.87 "Changing the Default Functions of the Copy's Initial Display"


Registering Functions in a Program

You can register functions in a program.

- 1. Edit the copy settings so all functions you want to store in a program are selected.
- 2. Press the [Program] key.

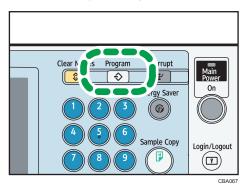

3. Press [Program].

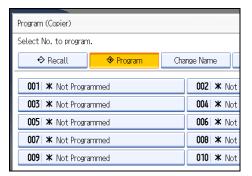

- 4. Press the program number you want to store.
- 5. Enter the program name with the letter keys on the display panel.

You can enter up to 34 characters.



6. Press [OK].

The screen returns to the program screen, showing the program number followed by the program name. The screen returns to the initial copy display after a short time.



- Program numbers with → against them already have settings made for them.
- For details about how to enter text, see "Entering Text", About This Machine.

Changing a Stored Program

Changes program settings.

- 1. Check the program settings.
- 2. Specify the contents of a program.
- 3. Press the [Program] key.
- 4. Press [Program].

- 5. Press the program number you want to change.
- 6. Press [Yes].
- 7. Enter the program name.

You can enter up to 34 characters.

8. Press [OK].

The screen returns to the program screen, showing the program number followed by the program name. The screen returns to the initial copy display after a short time.




- To check the contents of a program, recall the program.
- When it is overwritten, the previous program is deleted.
- For details about how to enter text, see "Entering Text", About This Machine.

Deleting a Stored Program

Erases the contents of a program.

- 1. Press the [Program] key.
- 2. Press [Delete].

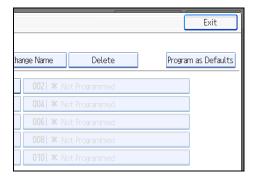

- 3. Press the program number you want to delete.
- 4. Press [Yes].


The program is deleted, and the display returns to the initial copy display.

Recalling a Stored Program

Recalls a stored program to make copies using the stored settings.

- 1. Press the [Program] key.
- 2. Make sure that [Recall] is selected.

3. Press the program number you want to recall.

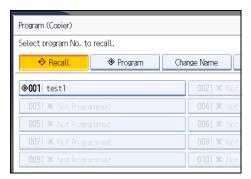

The stored settings are displayed.



• Only programs with � against them contain a program.


2

Changing the Default Functions of the Copy's Initial Display

This section describes how to program defaults for the initial display when modes are cleared or reset, or immediately after the operation switch is turned on.

The default settings you can program are Paper Tray, Original Type, Density, Custom Size Original, Wide Scan, Original Orientation, Edit / Stamp, Combine, Reduce / Enlarge, Finishing, Adjust Print Position, Copy Output Location, paper cut method, and the number of copies.

- 1. Specify scan settings and any other settings you require on the initial display.
- 2. Press the [Program] key.

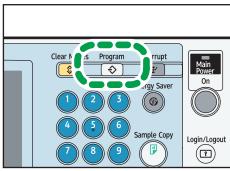


CBA06

3. Press [Program as Defaults].

			Exit
hange Name	Delete	Program	n as Defaults
002 ×	Not Programmed		
004 ×	Not Programmed		
006 ×			
800 ×			
010 *	Not Programmed		

4. Press [Program].

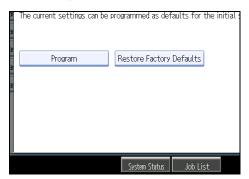

5. When a confirmation dialog appears, press [Yes].

The current settings are programmed as defaults. The screen returns to the initial display.



- To restore the factory default settings on the initial display, press [Restore Factory Defaults].
- The default settings can be programmed separately for the normal screen and simplified display screens.

3. Advanced Copying

This chapter describes the procedure for making copies in various modes.

Advanced Reduce/Enlarge Copying

This section describes the advanced functions for reducing or enlarging images.


For details about the basic reduce/enlarge copy functions, see "Reducing or Enlarging Originals".



• p.60 "Reducing or Enlarging Originals"


Size Magnification

This function calculates a reproduction ratio based on the lengths of the original and copy.

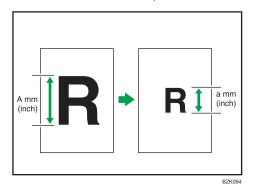


Measure and specify the lengths of the original and copy by comparing "A" with "a".

1. Press [Reduce / Enlarge].

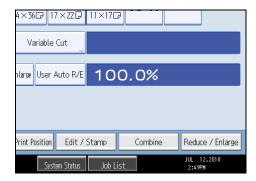

2. Press [Size Magnification].

3. Enter the length of the original with the number keys, and then press [#].

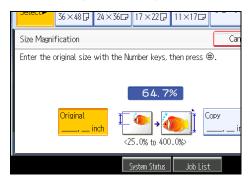

You can enter sizes between 1 to 9999 mm (0.1 to 99.9 inches) in increments of 1 mm (0.1 inch).

- 4. Enter the length of the copy with the number keys, and then press [#].
- 5. Press [OK] twice.




- To change the value you entered, press the key you want to change, and then enter a new value.
- The machine selects reproduction ratios of between 25.0 and 400.0%.
- If the calculated ratio is over the maximum or under the minimum ratio, it is automatically adjusted to
 within available range. However, with some ratios, parts of the image might not be copied or margins
 will appear on copies.

Directional Magnification (%)

Specify the horizontal and vertical reproduction ratios, individually.

Copies can be reduced or enlarged at different reproduction ratios horizontally and vertically.

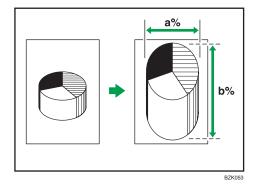

a: Horizontal ratio

b: Vertical ratio






- The reproduction ratios you can specify are 25.0 400.0%.
- You can enter a ratio regardless of original or paper size, or paper cut method. With certain ratios, parts of the image might not copy or margins will appear.
- You cannot use Directional Magnification (%) if Auto Paper Select is selected.


Entering the ratio with the number keys

Enter a ratio using the number keys.

1. Press [Reduce / Enlarge].

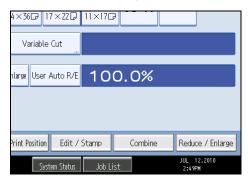

- 2. Press [Direct. Mag. %].
- 3. Press [Horizontal].

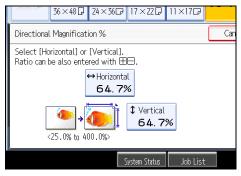

- 4. Enter the desired ratio with the number keys, and then press [#].
- 5. Press [Vertical].
- 6. Enter the desired ratio with the number keys, and then press [#].
- 7. Press [OK] twice.




- Use the [.] key to enter a decimal point.
- To change the value you entered, press the key you want to change, and then enter a new value.


Specifying the ratio with [+] and [-]

Specify a ratio using [+] and [-].


1. Press [Reduce / Enlarge].

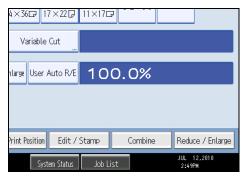

- 2. Press [Direct. Mag. %].
- 3. Press [[+] [-] keys].

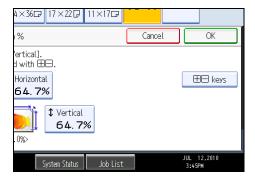

- 4. Press [Horizontal].
- 5. Adjust the ratio using [+] and [-].

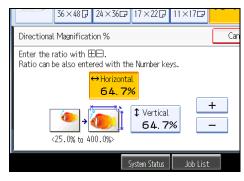

Pressing [+] or [-] changes the ratio in increments of 0.1%. Pressing and holding down [+] or [-] changes it in increments of 1%.

6. Press [Vertical].

3

3

- 7. Adjust the ratio with [+] and [-].
- 8. Press [OK] twice.




• To change the value you entered, readjust it with [+] and [-].

Directional Size Magnification (inch)

Specify the horizontal and vertical lengths of the original and copy image.

Copies can be reduced or enlarged at different reproduction ratios horizontally and vertically.

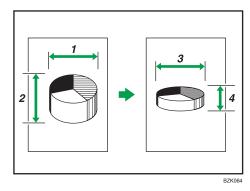

1. Horizontal original size: A mm (inch)


2. Vertical original size: B mm (inch)

3. Horizontal copy size: a mm (inch)

4. Vertical copy size: b mm (inch)


Measure and specify the lengths of the original and copy by comparing "A" with "a" and "B" with "b".

1. Press [Reduce / Enlarge].

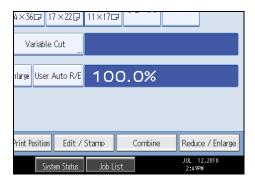

2. Press [Dir. Size Mag. inch].

Enter the horizontal size of the original with the number keys, and then press [#].

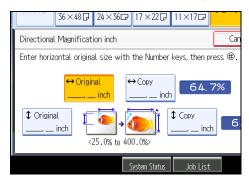

- 4. Enter the horizontal size of the copy with the number keys, and then press [#].
- 5. Enter the vertical size of the original with the number keys, and then press [#].
- 6. Enter the vertical size of the copy with the number keys, and then press [#].
- 7. Press [OK] twice.



- To change the value you entered, press the key you want to change, and then enter a new value.
- You can specify a paper size of 1 9999 mm (0.1 99.9 inches) in units of 1 mm (0.1 inch).
- The machine selects reproduction ratios of between 25.0 and 400.0%.
- If the calculated ratio is over the maximum or under the minimum ratio, it is automatically adjusted within the available range. With certain ratios, parts of the image might not copy or margins will appear.
- You cannot use Directional Size Magnification (inch) if Auto Paper Select is selected.

Fine Magnification


The machine calculates the correction ratios to produce copies that are close to the actual image size.

For environmental reasons such as humid conditions, paper may expand or shrink. This can result in a mismatch between the size of the original and copy.

This function uses the measurements of the original and the copy to calculate a ratio to produce copies that are close to the actual size.

Measure the length and width of the original and the copy, and then calculate the correction ratio as follows:




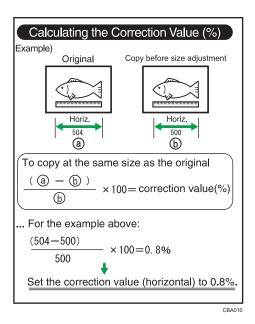

1. Press [Reduce / Enlarge].



- 2. Press [Fine Magnification].
- 3. Adjust the horizontal ratio using [+] and [-].

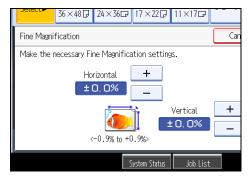

- 4. Adjust the vertical ratio using [+] and [-].
- 5. Press [OK] twice.



- Fine Magnification is used for originals that have already been scanned. If you want to apply fine magnification corrections to paper that has stretched due to the paper type or exposure to humid conditions, see "System Settings", Network and System Settings Reference.
- You can also make these settings in Fine Ratio Adjustment: Copier under User Tools. If you specified the ratio in both System Settings and this function, the resulting settings will be the sum of the set value.
- When the bypass tray is selected, you can specify Fine Magnification after scanning the original.
- Depending on the image patterns of the originals, moire patterns may be noticeable, or the image quality may deteriorate.


Stamps

Copies with the date, page numbers, etc.

Background Numbering

Use this function to have numbers printed on the background of copies.

If this function is used in conjunction with Sort, the same numbers are printed on each set of copies, helping you keep track of confidential documents.

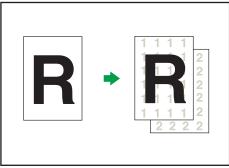


BZK031

- - You cannot use the bypass tray with this function.
 - 1. Press [Edit / Stamp].



- 2. Press [Stamp].
- 3. Press [Background Numbering].

4. Enter the number to start counting from with the number keys, and then press [#].

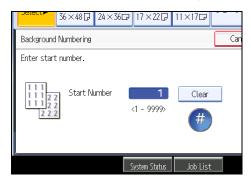

You can enter a number between 1 and 9999.

5. Press [OK] twice.




- To change the value entered, press [Clear], and then enter a new value.
- You can combine this function with up to four other stamp functions.
- A pattern-like image may appear in the area where an original's image overlaps the background number.
- You can change the settings for Background Numbering under Stamp in User Tools. For details about Stamp, see "Stamp".

Reference

• p.175 "Stamp"

Preset Stamp

Messages are stamped on copies.

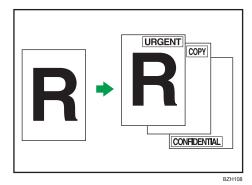

Mportant 🕽

• You cannot use the bypass tray with this function.


• Only one message can be stamped at a time.

The following eight messages are available for Preset Stamp:

"COPY", "URGENT", "PRIORITY", "For Your Info.", "PRELIMINARY", "For Internal Use Only", "CONFIDENTIAL", "DRAFT"


Stamp position and original orientation

The stamp positions differ according to the orientation in which you place the originals.

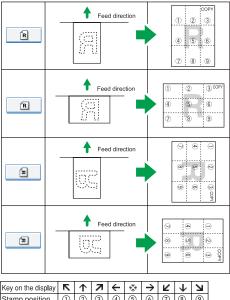

CBA011


1. Press [Edit / Stamp].

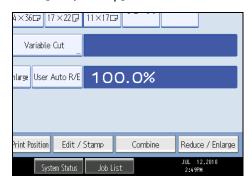

- 2. Press [Stamp].
- 3. Press [Preset Stamp].
- 4. Select the desired message.

You can change the position, size, and density of the stamp.

5. Press [All Pages] or [1st Page Only] to select the print page.

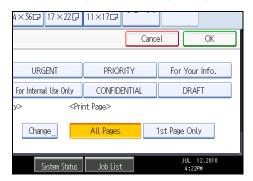

- 6. After making all settings, press [OK].
- 7. Press [OK].



- You can combine this function with up to four other stamp functions.
- You can change the default settings of the stamp with User Tools. Depending on settings, image density may change. For details about Stamp, see "Stamp".
- Depending on paper size, if you change the stamp size, parts of the stamp might not be printed.
- When you set the stamp position to "Bottom Left", "Bottom Center", or "Bottom Right", and then use Rotate Sort or Rotate Copy, the stamp position may shift.

■ Reference


• p.175 "Stamp"

Changing the stamp position, size, and density

Changes the stamp position, size, and density.

- 1. Press [Edit / Stamp].
- 2. Press [Stamp].
- 3. Press [Preset Stamp].
- 4. Press [Change] under Position / Size / Density.


5. Select the position, size, and density of the stamp, and then press [OK].

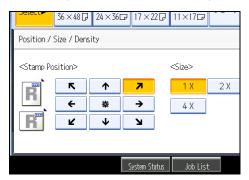

6. Press [OK] twice.

User Stamp

Prints a scanned image on copies as a stamp. Letters or images you use frequently can be registered.

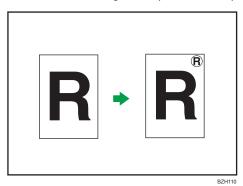


Mportant !

- You have to register a user stamp before using this function. For details, see "Registering a user stamp".
- You cannot use the bypass tray with this function.
- Only one message can be stamped each time.


Stamp position and original orientation

The user stamp positions differ according to the orientation in which you place the originals.

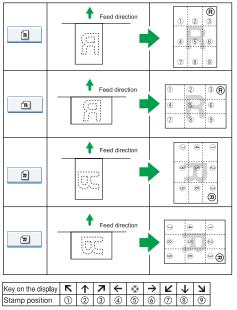

CBA012


1. Press [Edit / Stamp].

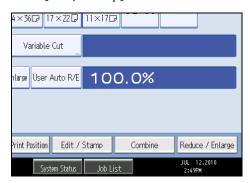

- 2. Press [Stamp].
- 3. Press [User Stamp].
- 4. Select the stamp you require.

You can change the stamp position.

5. Press [All Pages] or [1st Page Only] to select the print page.

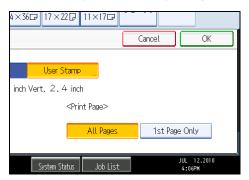

- 6. After making all settings, press [OK].
- 7. Press [OK].



- You can combine this function with up to four other stamp functions.
- You can register up to 40 user stamps.
- When User Stamp is selected, it may take longer to print the first copy.
- To delete a stored user stamp, see "Deleting the user stamp".
- You can change the settings for User Stamp under Stamp in User Tools. For details about Stamp, see "Stamp".


Reference

- p.104 "Registering a user stamp"
- p.106 "Deleting the user stamp"
- p.175 "Stamp"

Changing the user stamp position

Changes the stamp position.

- 1. Press [Edit / Stamp].
- 2. Press [Stamp].
- 3. Press [User Stamp].
- 4. Press [Change] under Stamp Position.

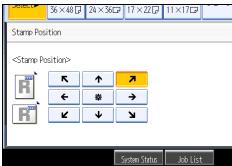


6. Press [OK] twice.

Registering a user stamp

Scans an image that is used as a user stamp.

The size range for stamp images is $10^{-}297 \text{ mm}$ (0.4 $^{-}11.7 \text{ inches}$) wide and $10^{-}432 \text{ mm}$ (0.4 $^{-}17.0 \text{ inches}$) high. However, if the stamp's size exceeds the maximum value of the area (5000 mm², 7.75 inch²), it will be automatically corrected to a size that is within the range of the area.


Up to 40 frequently used images can be stored in memory.

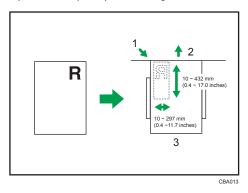


- 1. Base point
- 2. Original feed direction
- 3. Original table

3

1. Press the [User Tools/Counter] key.

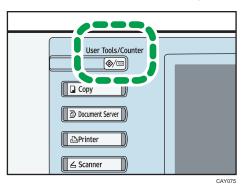

2. Press [Copier / Document Server Features].

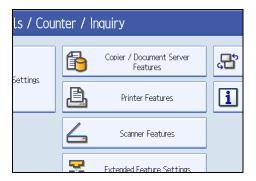

- 3. Press [Stamp].
- 4. Press [User Stamp].
- 5. Press [Program / Delete Stamp].
- 6. Press [Program], and then press [Select Stamp].
- 7. Press the stamp number you want to program.
- 8. Enter the user stamp name (up to 10 characters) with the letter keys, and then press [OK].
- 9. Enter the horizontal size of the stamp with the number keys, and then press [#].
- 10. Enter the vertical size of the stamp with the number keys, and then press [#].
- 11. Adjust the original guides to A3 (11 × 17) \square or A4 (8 $^{1}/_{2}$ × 11) \square , and then place the original for user stamp on the original table.
- 12. Press [Start Scanning].

The original will be scanned, and the stamp will be registered.

- 13. Press [Exit].
- 14. Press [Exit].

The display returns to the User Tools / Counter / Inquiry screen.

15. Press [Exit].

Exits settings and gets ready to copy.




- Stamp numbers with � already have settings in them. Stamp numbers that are not registered yet are marked with "Not Programmed".
- If the stamp number is already being used, the machine will ask you if you want to overwrite it. Press [Yes] or [Stop].
- You cannot restore the overwritten stamp.
- If the stamp is red or bright red, it may not be scanned clearly. To store a user stamp clearly, use a black ink stamp, or make a copy and use that as the original.
- For details about how to enter text, see "Entering Text", About This Machine.

Deleting the user stamp

Deletes an image registered as a user stamp.

You cannot restore a deleted stamp.

1. Press the [User Tools/Counter] key.

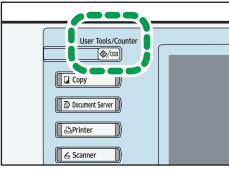

CAY07

2. Press [Copier / Document Server Features].



3. Press [Stamp].

- 4. Press [User Stamp].
- 5. Press [Program / Delete Stamp].
- 6. Press [Delete], and then press [Select Stamp].
- 7. Press the stamp number you want to delete.
- 8. Select [Yes], and then press [Exit].
- 9. Press [Exit] twice.


The display returns to the User Tools / Counter / Inquiry screen.

10. Press [Exit].

Exits settings and gets ready to copy.

Date Stamp

Use this function to print dates on your copies.

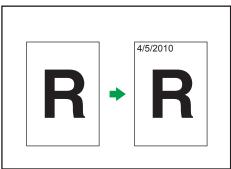

BZH20

• You cannot use the bypass tray with this function.


Date stamp formats

You can select from the following styles:

- MM/DD/YYYY
- MM.DD.YYYY
- DD/MM/YYYY
- DD.MM.YYYY
- YYYY.MM.DD


Stamp position and original orientation

The date stamp positions differ according to the orientation in which you place the originals.

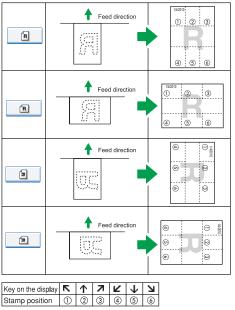

CBA014


1. Press [Edit / Stamp].

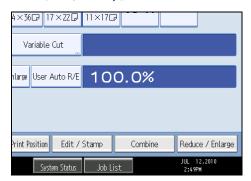

- 2. Press [Stamp].
- 3. Press [Date Stamp].
- 4. Select the stamp format.

You can change the style and position of the date.

5. Press [All Pages] or [1st Page Only] to select the print page.

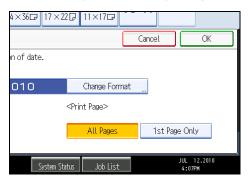

- 6. After making all settings, press [OK].
- 7. Press [OK].



- You can combine this function with up to four other stamp functions.
- When using the Combine mode, the date stamp is printed as follows:



 You can change the settings for Date Stamp under Stamp in User Tools. For details about Stamp, see "Stamp".

Reference

• p.175 "Stamp"

Changing the format of date

Changes the format of date.

- 1. Press [Edit / Stamp].
- 2. Press [Stamp].
- 3. Press [Date Stamp].
- 4. Press [Change Format] under Current Date.

5. Select the date format, and then press [OK].




6. Press [OK] twice.

Changing the date stamp position

Changes the stamp position.


- 1. Press [Edit / Stamp].
- 2. Press [Stamp].
- 3. Press [Date Stamp].
- 4. Press [Change] under Stamp Position.
- 5. Select the desired date stamp position, and then press [OK].

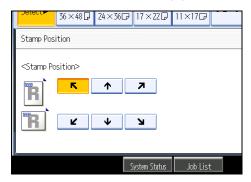

6. Press [OK] twice.

Page Numbering

Use this function to print page numbers on your copies.

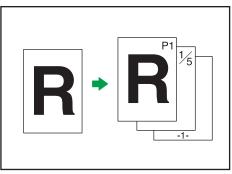

BZH



• You cannot use the bypass tray with this function.


Page number formats

There are six types of page numbering.

- P1,P2...
- 1/5,2/5...
- -1-,-2-...
- P.1,P.2...
- 1,2...
- 1-1,1-2...

Stamp position and original orientation

The page stamp positions differ according to the orientation in which you place your originals.

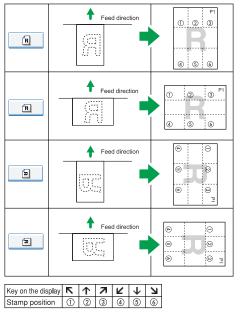


CBA015

1. Press [Edit / Stamp].



- 2. Press [Stamp].
- 3. Press [Page Numbering].
- 4. Select the page numbering format.

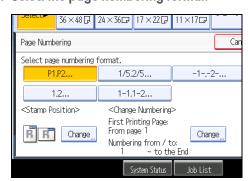


You can change the stamp position, pages to be stamped, and numbering.


- 5. After making all settings, press [OK].
- 6. Press [OK].



- You can combine this function with up to four other stamp functions.
- When using Combine mode, page numbers are printed as follows:
 - [Per Original] is selected in User Tools:

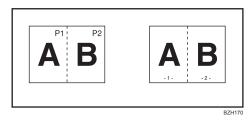

• [Per Copy] is selected in User Tools:

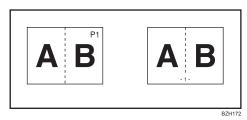

You can change the settings for Page Numbering under Stamp in User Tools. For details about Stamp,
 see "Stamp".

■ Reference


• p.175 "Stamp"

Changing the stamp position

Changes the stamp position.

- 1. Press [Edit / Stamp].
- 2. Press [Stamp].
- 3. Press [Page Numbering].
- 4. Press [Change] under Stamp Position.

5. Select the desired position, and then press [OK].

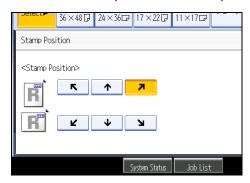


6. Press [OK] twice.

Specifying the first printing page and start number ("P1,P2...", "-1-,-2-...", "P.1,P.2...", "1,2...")


Explains the example when "P1,P2..." is selected. The steps are the same for other cases.

- 1. Press [Edit / Stamp].
- 2. Press [Stamp].
- 3. Press [Page Numbering].
- 4. Press [Change] under Change Numbering.
- 5. Press [First Printing Page], enter the original sheet number from which to start printing with the number keys, and then press [#].

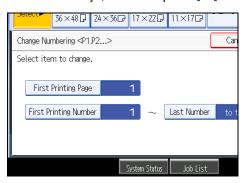

6. Press [First Printing Number], enter the number of page from which to start numbering with the number keys, and then press [#].

The example below shows when the first printing page is "2" and the start number is "3".

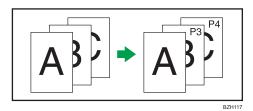

7. Press [Last Number], enter the number of the page at which to stop numbering with the number keys, and then press [#].

If you want to number all pages to the end, press [to the End].

- 8. When page designation is complete, press [OK].
- 9. Press [OK] twice.




- To change the numbers entered in steps 5 to 7, press [Clear], and then enter a new number.
- You can set a value from 1 to 9999 for [First Printing Page], [First Printing Number], and [Last Number].

Specifying the first printing page and start number ("1/5,2/5...")

Explains the procedures when "1/5,2/5..." is selected.

- Press [Edit / Stamp].
- 2. Press [Stamp].
- 3. Press [Page Numbering].
- 4. Press [Change] under Change Numbering.
- 5. Press [First Printing Page], enter the original sheet number from which to start printing with the number keys, and then press [#].

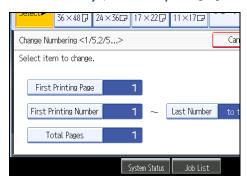

6. Press [First Printing Number], enter the number of page from which to start numbering with the number keys, and then press [#].

7. Press [Last Number], enter the number of page at which to stop numbering with the number keys, and then press [#].

Proceed to step 8 when not changing.

If you want to number all pages to the end, press [to the End].

The last number is the last page number to print. For example, if Total Pages is ten, if you want to print up to seven pages and do not want to print from page 8 on, enter "7" for Last Number. Normally, you do not need to enter the number.

- Press [Total Pages], enter the total number of original pages with the number keys, and then press [#].
- 9. When page designation is complete, press [OK].
- 10. Press [OK] twice.




- To change the numbers entered in steps 5 to 8, press [Clear], and then enter a new number.
- To change the settings (the first printing page, the number of page from which to start numbering, or total number of pages) after pressing [OK] in step 9, press [Change], and then enter the numbers again.
- You can set a value from 1 to 9999 for [First Printing Page], [First Printing Number], [Last Number], and [Total Pages].

Specifying the first printing page and start number ("1-1,1-2...")

Explains the procedures when "1-1,1-2..." is selected.

- 1. Press [Edit / Stamp].
- 2. Press [Stamp].
- 3. Press [Page Numbering].
- 4. Press [Change] under Change Numbering.
- 5. Press [First Printing Page], enter the original sheet number from which to start printing with the number keys, and then press [#].

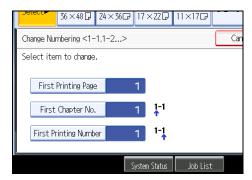

- 6. Press [First Chapter No.], enter the chapter number from which to start numbering with the number keys, and then press [#].
- 7. Press [First Printing Number], enter the page number from which to start printing with the number keys, and then press [#].
- 8. When page designation is complete, press [OK].
- 9. Press [OK] twice.




- To change the numbers entered in steps 5 to 7, press [Clear], and then enter a new number.
- You can set a value from 1 to 9999 for [First Printing Page], [First Chapter No.], and [First Printing Number].

Advanced Copier Functions

This section describes the machine's advanced copy functions.

Erase Border (Same Width)

Erases the edge margin of the original image.

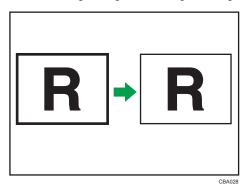


Mportant !

- You cannot use the bypass tray with this function.
- 1. Press [Edit / Stamp].



- 2. Press [Erase].
- 3. Press [Erase Border].
- 4. Make sure that [Same Width] is selected.
- 5. Specify an erase border width with [+] or [-].

 Pressing [+] or [-] changes the width in increments of 1 mm (0.1 inch). Pressing and holding down the relevant key changes the width in increments of 10 mm (1 inch).

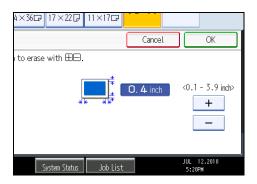

6. Press [OK] twice.




- To change the value entered, press [+] and [-], and then specify a new value.
- For details about the scan size limitations when using Erase Border together with the other functions, see "Scan Size Limitations, by Function".
- You can specify the width of the erased border margins from 2 to 99 mm (0.1 to 3.9 inches) in increments of 1 mm (0.1 inch).
- The default erase border setting is 10 mm (0.4 inch). You can change this setting under Edit in User Tools. For details about Edit, see "Edit".

■ Reference

- p.172 "Edit"
- p.185 "Scan Size Limitations, by Function"

Erase Border (Different Width)

Erases the edge margins of the original image.

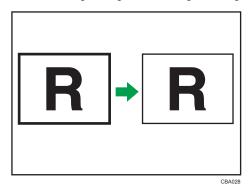

Important


• You cannot use the bypass tray with this function.

1. Press [Edit / Stamp].



- 2. Press [Erase].
- 3. Press [Erase Border].
- 4. Press [Different Width].
- 5. Press the key for the border you want to change and specify an erase width with [+] and [-].

Pressing [+] or [-] changes the width in increments of 1 mm (0.1 inch). Pressing and holding down the relevant key changes the width in increments of 10 mm (1 inch).

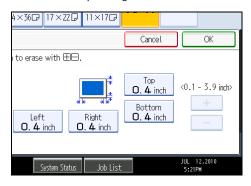

6. Press [OK] twice.



- To change the value entered, press [+] and [-], and then specify a new value.
- For details about the scan size limitations when using Erase Border together with the other functions, see "Scan Size Limitations, by Function".
- You can specify the width of the erased border margins from 2 to 99 mm (0.1 to 3.9 inches) in increments of 1 mm (0.1 inch).
- The default erase border setting is 10 mm (0.4 inch). You can change this setting under Edit in User Tools. For details about Edit, see "Edit".


Reference

• p.172 "Edit"

• p.185 "Scan Size Limitations, by Function"

Erase Inside


Use this function to copy the original while erasing a specified area.

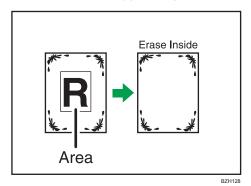

Important

• You cannot use the bypass tray with this function.

To specify the area you want to erase, you have to define the value of X1, Y1, X2, and Y2 on the original. Measure the area you want to specify before entering the area settings.

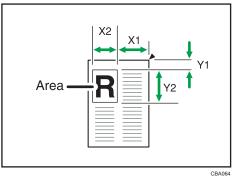


X1, X2: 0 - 1220 mm (0 - 48.0 inches)

Y1, Y2: 0 - 1220 mm (0 - 48.0 inches)

1. Press [Edit / Stamp].



- 2. Press [Erase].
- 3. Select one of the areas from [Erase Inside 1] to [Erase Inside 5].
- 4. Enter the length of [X1] with the number keys, and then press [#].

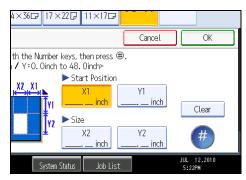


- 5. Enter the lengths of [X2], [Y1], and [Y2] in the same way, and then press [OK].
- 6. To specify multiple areas, specify areas 1 to 5, and then repeat steps 4 to 5.
- 7. Press [OK].



- When using this function with magnification, the actual size will be the specified value multiplied by the reproduction ratio.
- To change the value you entered, press the key you want to change, and then enter a new value.
- By combining "Erase Inside 1" to "Erase Inside 5", you can erase up to 5 areas at the same time.


Erase Outside

Use this function to copy the original while erasing outside of a specified area.

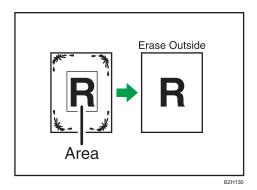

• You cannot use the bypass tray with this function.

To specify the area you want to erase, you have to define the value of X1, Y1, X2, and Y2 on the original. Measure the area you want to specify before entering the area settings.

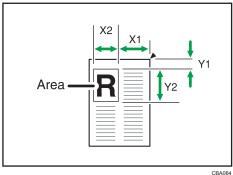


CE

X1, X2: 0 - 1220 mm (0 - 48.0 inches)


Y1, Y2: 0 - 1220 mm (0 - 48.0 inches)

1. Press [Edit / Stamp].

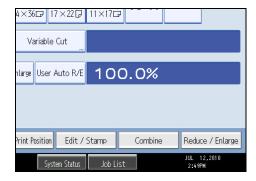

- 2. Press [Erase].
- 3. Press [Erase Outside].

4. Enter the length of [X1] with the number keys, and then press [#].

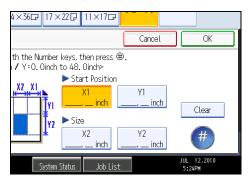


- 5. Enter the lengths of [X2], [Y1], and [Y2] in the same way, and then press [OK].
- 6. Press [OK].



- When using this function with magnification, the actual size will be the specified value multiplied by the reproduction ratio.
- To change the value you entered, press the key you want to change, and then enter a new value.

Margin Adjustment

When Synchro Cut is selected, you can create a margin on the copy's leading and trailing edge.

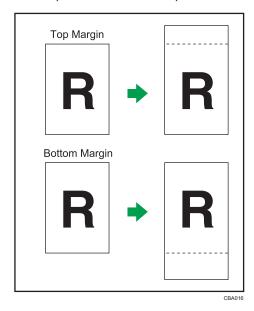


Mportant


You cannot use the bypass tray with this function.

You can select the following types of margin for this function:

- Top Margin: margin at the leading edge of the original (top of copy)
- Bottom Margin: margin at the trailing edge of the original (bottom of copy)
- 1. Press [Edit / Stamp].

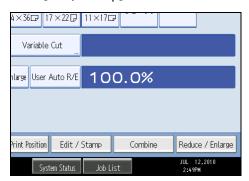

- 2. Press [Margin Adj.].
- 3. Press [Top Margin] or [Bottom Margin].

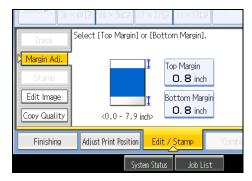

4. Use [+] or [-] to specify the margin, and then press [OK].

[Synchro Cut] is automatically selected.




- You can specify the margin from 0 to 200 mm (7.9 inches) in 1 mm (0.1 inch) increments. The default margin is 20 mm (0.8 inch).
- You can specify both the top and the bottom margins at a time.
- · The copy length is the length automatically specified by Synchro Cut plus the margin specified.
- If you specify the margin too long for the original, parts of the image might not be copied.
- You can change the settings for Margin Adjustment under Edit in User Tools. For details about Edit, see "Edit".

Reference

• p.172 "Edit"

The original image is copied repeatedly.

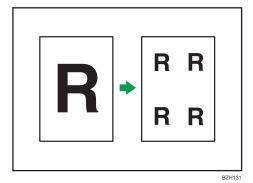


Mportant ...

• You cannot use the bypass tray with this function.

The number of repeated images depends on the original size, copy paper size, and reproduction ratio. For example, you can copy eight A4 (A) images to one sheet of A1 (D) size paper.

Press [Edit / Stamp].

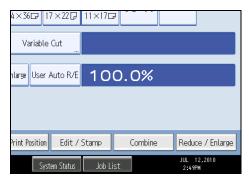

- 2. Press [Edit Image].
- 3. Press [Image Repeat].
- 4. Press [OK].
- 5. Select the paper tray.




- You can insert separation lines (solid, broken, crop marks) between repeated images. For details, see "Edit".
- Depending on the paper size, ratio, and orientation, parts of repeated images may not be copied.
- When using Image Repeat with Adjust Print Position together, the repeated images will be shifted as a whole.



• p.172 "Edit"

Double Copies

One original image is copied twice on one sheet.

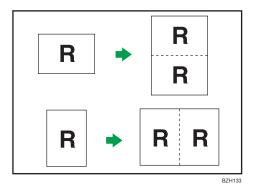

- You cannot use the bypass tray with this function.
- 1. Press [Edit / Stamp].



- 2. Press [Edit Image].
- 3. Press [Double Copies].
- 4. Press [OK].
- 5. Select the paper tray.




 You can insert separation lines (solid, broken, crop marks) between two images. For details, see "Edit".

■ Reference


• p.172 "Edit"

Positive / Negative

Copies an image inverted.

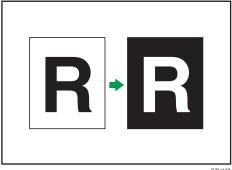

1. Press [Edit / Stamp].

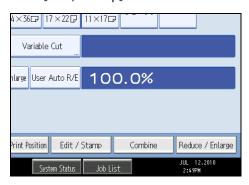

- 2. Press [Edit Image].
- 3. Press [Positive / Negative].
- 4. Press [OK].
- 5. Select the paper tray.


Note

• When making continuous copies, image density may deteriorate.


3

Partial Copy


Use this function to copy only a specified portion of the original.

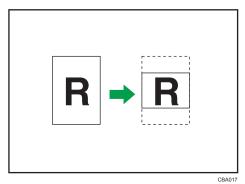

Press [Edit / Stamp].

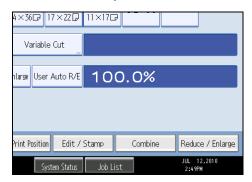

- 2. Press [Edit Image].
- 3. Press [Partial Copy].
- 4. Press [Y1], and then enter the scan start position (the length from the leading edge of the original) with the number keys.

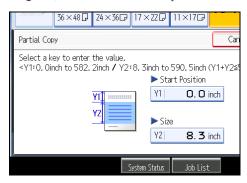

- 5. Press [#].
- 6. Press [Y2], and then enter the copy size with the number keys.

- 7. Press [#].
- 8. Press [OK] twice.




- To change the value, press [Clear], and then enter a new value.
- The copy size (Y2) should be at least 210 mm (8.3 inches).
- The maximum copy length (Y1+Y2) is 15000 mm (590.5 inches).
- If Y1+Y2 is greater than 15000 mm (590.5 inches), the machine shortens Y2 to make Y1+Y2 less than the maximum.
- If Y1+Y2 is less than 279 mm (11 inches), the length of the copy paper is 279 mm (11 inches).
- For Y2, specify the actual length that you require.
- You can change the settings for Partial Copy under Edit in User Tools. For details about Edit, see "Edit".

■ Reference


• p.172 "Edit"

Mirror Image

Copies by reversing the image from left to right, as reflected in a mirror.

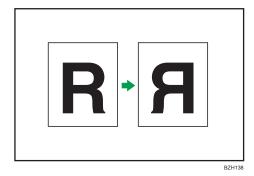

Press [Edit / Stamp].

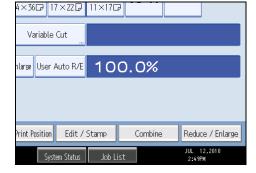


- 2. Press [Edit Image].
- 3. Press [Mirror Image].
- 4. Press [OK].

Format Overlay

Combines two images onto one copy.

You can also store frequently used format original in the machine memory and recall it for future use.

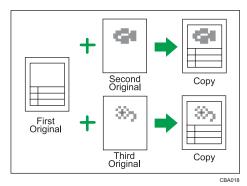

☆ Important

• You cannot use the bypass tray with this function.

There are two types of Format Overlay available.

Format Overlay

Combines two images onto one copy using the first original as the background.

Programmed Format Overlay

Uses a stored image as the background and combines it with a scanned image.




- When the sizes of the format (background original) and original to be overlaid on the format are different, the image is created at the size of the overlaid original.
- When scanning a format (background original), the output image may be blurred. If this happens, copy the format, and then use it as the background original.
- When using Format Overlay, image quality may deteriorate.
- You cannot change the image density of a format (background original). To achieve a desired image density, scan an original with the image density changed beforehand.


Format Overlay

Combines two images onto one copy using the first original as the background.

1. Press [Edit / Stamp].

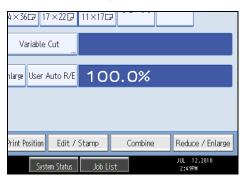

- 2. Press [Edit Image].
- 3. Press [Format Overlay].
- 4. Press [Format Overlay].

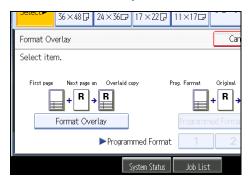

- 5. Press [OK] twice.
- 6. Make the necessary settings.
- 7. Place the first original, and let it be scanned.
- 8. Place the second original, and let it be scanned.

The machine makes a composite copy of the first and second originals.

9. Place the third original, and let it be scanned.

The machine makes a composite copy of the first and third originals.

10. Place any further originals, as required.

Press the [#] key after all the originals have been scanned.

Programmed Format Overlay


Uses a stored image as the background and combines it with a scanned image.

To use this function, you need to register the overlay format in advance. For details, see "Storing a format".

1. Press [Edit / Stamp].



- 2. Press [Edit Image].
- 3. Press [Format Overlay].
- 4. Press [Programmed Format Overlay].
- 5. Select a stored format number.

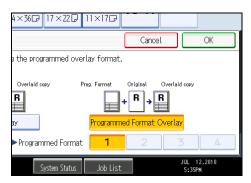

- 6. Press [OK] twice.
- 7. Make the necessary settings.
- 8. Place your original, and let it be scanned.

The machine makes a copy overlaying the scanned original onto the stored format.

9. Place any further originals, as required.

The machine makes a copy overlaying the new original onto the stored format.

Press the [#] key after all the originals have been scanned.

●Note

• You can register up to four formats.

Reference


• p.134 "Storing a format"

Storing a format

Stores a format for Programmed Format Overlay.

You cannot store long length originals.


- 1. Make sure that the machine is ready to copy.
- 2. Press the [User Tools/Counter] key.

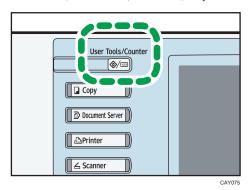

3. Press [Copier / Document Server Features].



- 4. Press [Edit], and then press [Program / Delete Format].
- 5. Select a format number (1 to 4).

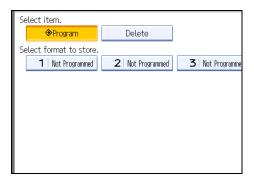

Format numbers with \Rightarrow against them have already been stored.

6. Select the original orientation.

7. Place the original, and then press [Start Scanning].

The original is scanned and stored.

8. Press [Exit] twice.

The display returns to the User Tools / Counter / Inquiry screen.

Overwriting a stored format

Overwrites a format stored in memory.



- You cannot restore a format that has been overwritten.
- 1. Make sure that the machine is ready to copy.
- 2. Press the [User Tools/Counter] key.
- 3. Press [Copier / Document Server Features].
- 4. Press [Edit], and then press [Program / Delete Format].
- 5. Select a format number you want to overwrite.
- 6. Press [Yes].

Press [Stop] if you do not want to overwrite the existing format.

- 7. Select the original orientation.
- 8. Place the original, and then press [Start Scanning].

The original is scanned and stored.

9. Press [Exit] twice.

The display returns to the User Tools / Counter / Inquiry screen.

Deleting a stored format

Deletes a format stored in memory.



- You cannot restore a format that has been deleted.
- 1. Make sure that the machine is ready to copy.
- 2. Press the [User Tools/Counter] key.
- 3. Press [Copier / Document Server Features].
- 4. Press [Edit], and then press [Program / Delete Format].
- 5. Press [Delete], and then select the format number to be deleted.


Press [No] if you do not want to delete the existing format.

7. Press [Exit] twice.

The display returns to the User Tools / Counter / Inquiry screen.

Adjust Print Position

Use this function to move (shift) the copy image up, down, left, or right to create a margin. You can also shift in a combination of up/down and left/right.

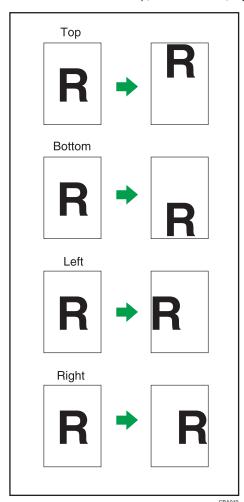


You can select the following types of margin for this function:

- [↑] (Top): shifts towards the leading edge of the paper
- $[\Psi]$ (Bottom): shifts towards the trailing edge of the paper

- [←] (Left): shifts towards the left of the paper
- [→] (Right): shifts towards the right of the paper
- 1. Press [Adjust Print Position].



2. Use $[\leftarrow]$ or $[\rightarrow]$ to specify the horizontal position.

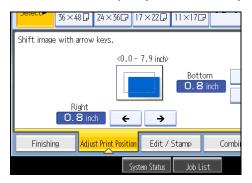

- 3. Use $[\uparrow]$ or $[\downarrow]$ to specify the vertical position.
- 4. Press [OK].



- The default setting is Bottom 20 mm (0.8 inch) and Right 20 mm (0.8 inch). You can change this setting
 under Edit in User Tools. For details about Edit, see "Edit".
- You can shift the image from 0 to 200 mm in 1 mm increments (0 to 7.9 inches in 0.1 inch increments).
- When using Stamp and Adjust Print Position together, the stamp position does not move.
- If you specify the margin too long for the original, parts of the image might not be copied.

Reference

• p.172 "Edit"

4. Document Server

The Document Server enables you to store documents on the hard disk of this machine. Thus you can print them later applying necessary conditions.

Relationship between Document Server and Other Functions

State of the Document Server varies depending on the function used.

Copier functions

- Storing method: Copy/Document Server
- List display: Available
- Printing: Available
- Transmission: Unavailable

Printer functions

- · Storing method: Personal computer
- List display: Available
- Printing: Available
- Transmission: Unavailable

Scanner functions

- Storing method: Scanner
- List display: Unavailable


When documents are stored with the scanner feature, you can confirm them from the scanner feature screen. For details, see "Displaying the List of Stored Files", Scanner Reference.

- Printing: Unavailable
- Transmission: Available

The data can be transferred by the scanner feature. For details, see "Sending a Stored File", Scanner Reference.

Explains the screens and icons displayed in the Document Server function.

Document Server initial display

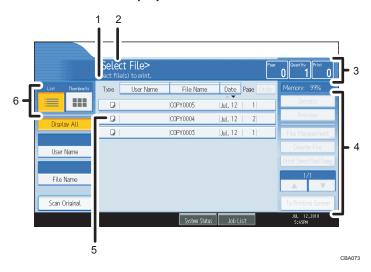

- 1. Displays operational status and messages.
- 2. Displays the title of the current screen.
- 3. Displays the numbers of originals stored into the memory, copies set, and copies made.
- 4. Displays keys for the operation.
- 5. Displays an icon that indicates the function used to store the document.
- 6. Displays keys for switching the display between list and thumbnails.

The following icons appear in the list of the Document Server to indicate the function used to store a document.

Function	Copier	Printer
Icons	Q	<u>D</u>

Thumbnail screen

In thumbnail view, miniature images of the stored documents are displayed. This is useful for checking a document's content.






• All the stored documents may not be displayed depending on the security function specified.

Simplified Display

This section explains how to switch to the simplified display.

When you press the [Simplified Display] key, the screen changes from the initial display to the simplified display.

Letters and keys are displayed at a larger size, making operations easier.

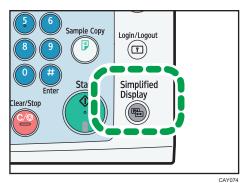

Simplified Document Server Screen



1. [Key Color]

Press to increase screen contrast by changing the color of the keys. This is available only for the simplified display.




- To return to the initial display, press the [Simplified Display] key again.
- Certain keys do not appear on the simplified display.

Preview Display

This section explains the items that appear on the preview display and how to preview stored documents.

To preview stored documents, select the documents you want to preview on the Document Server initial display, and then press [Preview]. The preview display denotes the screen that allows confirming contents of the scanned documents.

Preview Display

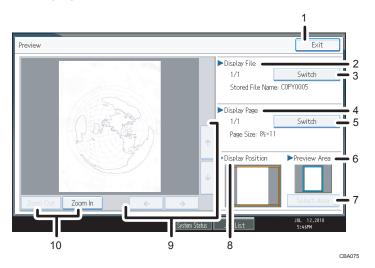

1. [Exit]

Closes the preview display.

2. Display File

Displays the file name.

If you have selected two or more files for preview, press [Switch] to switch between them.

3. [Switch]

If you have selected two or more files for preview, press this to switch between them.

4. Display Page

Displays the number of the currently displayed page, total number of pages, and page size.

5. [Switch]

Flips the page of the selected file.

6. Preview Area

Stored scan files for originals larger than A2 (C) can be previewed using the zoom control on the preview display.

7. [Select Area]

You can specify the preview area.

8. Display Position

Indicates the location of the displayed preview image when the image is enlarged.

9. [←][→][↑][↓]

Moves the display area in the direction indicated by the arrow.

10. [Zoom Out], [Zoom In]

Scales the displayed page down or up.



- When the preview is already selected from another function, the preview screen function may become unusable.
- The preview function is not available if the stored file has been corrupted. Scan and save the file again.
- Only documents with a maximum paper size of that are smaller than 914.4×1219.2 mm (36×48 inches) can be previewed.

4

Using the Document Server

The following describes how to use the Document Server.

Storing Data

The following describes the procedure for storing documents on the Document Server.



- Data stored in the machine might be lost if some kind of failure occurs. The manufacturer shall not be responsible for any damage resulting from loss of data.
- Be careful not to let anyone know your password, especially when entering a password or recording it. Keep any record of your password in a secure place.
- Avoid using a single number or consecutive numbers for a password such as "0000" or "1234", since the numbers like this are easy to guess, so using them will not provide a worthwhile level of security.
- A document accessed with a correct password remains selected even after operations are complete, and it can be accessed by other users. After the operation, be sure to press the [Clear Modes] key to cancel the document selection.
- The user name registered to a stored document in the Document Server is to identify the document creator and type. It is not to protect confidential documents from others.
- When scanning documents by the scanner, make sure that all other operations are ended.

File Name


A document name such as "COPY0001" and "COPY0002" is automatically attached to the scanned document. You can change the document name.

User Name


You can register a user name to identify the user or user group that stored the documents. To assign it, select the user name registered in the Address Book, or enter the name directly.

Password

To prevent unauthorized printing, you can set a password for any stored document. A protected document can only be accessed if its password is entered. If a password is set for the documents, the key icon appears next to the documents.

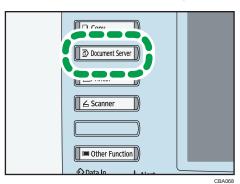

2. Press [Scan Original].

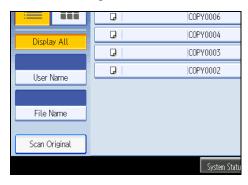

3. Enter a user name, file name, and password, if necessary.

When not changing a file name, the name will be automatically set.

- 4. Specify the original scanning conditions.
- 5. Place the original.

The original feeds into the machine automatically.

If [Press Start Key] is selected for Feed Start Method, scanning starts when you press the [Start] key. For details about Feed Start Method, see "System Settings", Network and System Settings Reference.

The original is scanned.

6. Press [Finish Scanning] after all documents are scanned.

The document is saved in the Document Server.




- Enter the password in the range of four and eight digits.
- To interrupt the scan, press the [Clear/Stop] key. Pressing [Continue] from the confirmation screen resumes the scan. Pressing [Stop] deletes the scanned images.
- If a password is set, the key icon appears on the left side of the file name.

- Data stored in the Document Server is set to be deleted after three days (72 hours) by the factory
 default. You can specify the period after which the stored data is deleted automatically under Auto
 Delete File in Document Server in User Tools. See "System Settings", Network and System Settings
 Reference.
- If you do not want stored documents to be automatically deleted, select [Off] in Auto Delete File in Document Server before storing a document. If you select [On] later, data stored after will be automatically deleted.
- When storing another document in the Document Server after storing a document from the copy feature, be sure that its copy is completed.
- Depending on the security setting, [Access Privileges] may appear instead of [User Name]. For details
 about specifying [Access Privileges], consult the administrator.
- For details about how to enter text, see "Entering Text", About This Machine.

Specifying a user name

You can specify a user name for the stored file.

- 1. Press [Scan Original].
- 2. Press [User Name].

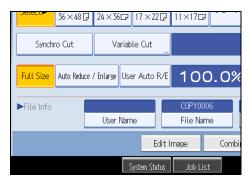

A list of user names appears.


3. Select a user name, and then press [OK].

The user names shown are names that were registered in the Address Book. To specify a name not shown in the display, press [Manual Entry], and then enter a user name.

Specifying a file name

You can change the name of a stored document.

1. Press [Scan Original].

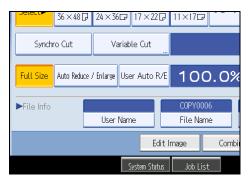

The soft keyboard appears.

3. Press [Delete All] to delete automatically generated document name.

Pressing [Backspace] allows you to delete up to any desired position.

4. Enter a document name, and then press [OK].




You can enter up to 20 characters for a document name. In the list, however, up to 16 characters are
displayed as the document name. If above limits are exceeded, the list will display up to 15 characters
for the document name.


Specifying a password

You can specify a password for the stored document.

- 1. Press [Scan Original].
- 2. Press [Password].

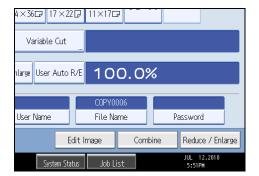

3. Enter a password with the number keys, and then press [OK].

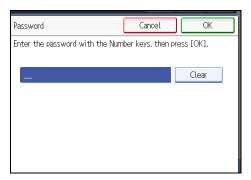


You can use four to eight digits for the password.

4. For double-check, enter the password again, and then press [OK].

Changing the User Name of a Stored Document


You can change the user name for a stored document.

1. Select the document whose user name you want to change.

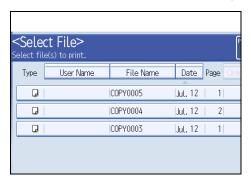

If a password is set, enter it, and then press [OK].

2. Press [File Management].

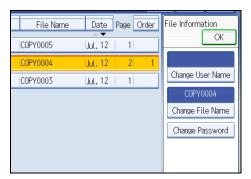

- 4. Enter a new user name, and then press [OK].
- 5. Press [OK].




- To cancel the selection, press the selected (highlighted) key.
- Depending on the security setting, [Access Privileges] may appear instead of [User Name]. For details about specifying [Access Privileges], consult the administrator.
- For details about how to enter text, see "Entering Text", About This Machine.

Changing the File Name of a Stored Document

You can change the file name of a stored document.

- Select the document whose name you want to change.
 If a password is set, enter it, and then press [OK].
- 2. Press [File Management].
- 3. Press [Change File Name].

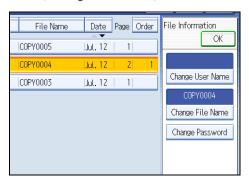

- 4. Enter a new file name, and then press [OK].
- 5. Press [OK].






- To cancel the selection, press the selected (highlighted) key.
- Depending on the security setting, [Access Privileges] may appear instead of [User Name]. For details about specifying [Access Privileges], consult the administrator.
- For details about how to enter text, see "Entering Text", About This Machine.

Changing the Password of a Stored Document

You can change the password of a stored document.

- Select the document whose password you want to change.
 If a password is set, enter it, and then press [OK].
- 2. Press [File Management].
- 3. Press [Change Password].

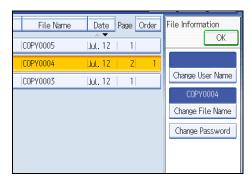


- 4. Enter a new password, and then press [OK].
- 5. For double-check, enter the password again and then press [OK].
- 6. Press [OK].



- To cancel the selection, press the selected (highlighted) key.
- Depending on the security setting, [Access Privileges] may appear instead of [User Name]. For details
 about specifying [Access Privileges], consult the administrator.
- For details about how to enter text, see "Entering Text", About This Machine.

Checking the Details of a Stored Document


You can confirm the details of a stored document.

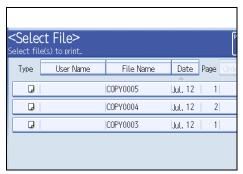

If a password is set, enter it, and then press [OK].

2. Press [Details].

Details of the document will be displayed.

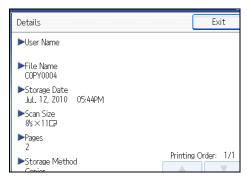



- If you have selected two or more documents, press [▲] or [▼] to view their information.
- To cancel the selection, press the selected (highlighted) key.
- Pressing [Exit] restores the document selection screen.

Searching for Stored Documents

Searches for stored documents by user name or file name.

You can rearrange the currently chronologically ordered documents in any desired order.

Searching by file name

Searches for stored documents by file name.

Searching by user name

Searches for stored documents by user name.






- Web Image Monitor enables searching and reordering of stored documents from computers.
- For details about Web Image Monitor, see Help of Web Image Monitor.
- For details about how to enter text, see "Entering Text", About This Machine.

Searching by file name

Searches for stored documents by file name.

1. Press [File Name].

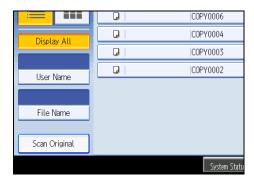

2. Enter the document name to be searched, and then press [OK].




Document names that match completely from the starting character will be searched and displayed on the screen.




• Pressing [Display All] displays all stored documents.

Searching by user name

Searches for stored documents by user name.

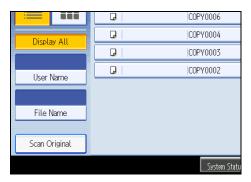

- 2. When specifying a registered user name, select it.
- 3. When the user name is not registered, press [Manual Entry], and then enter it from the input screen to be displayed. Then press [OK].

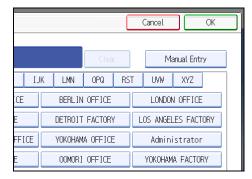

4. Press [OK].

User names that match completely from the starting character will be searched and displayed on the screen.



• Pressing [Display All] displays all stored documents.

Printing Stored Documents

Prints stored documents.

Web Image Monitor allows you to print documents stored in the Document Server from your computer.


1. Select a document to be printed.

If a password is set, enter it, and then press [OK].

2. When printing two or more documents at a time, repeat step 1.


Up to 30 documents can be printed.



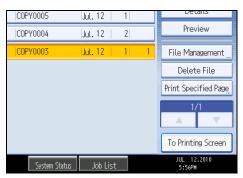

The printing condition screen will appear. The user name, file name, and printing order of the document will be displayed.

4. Enter the number of print copies with the number keys.

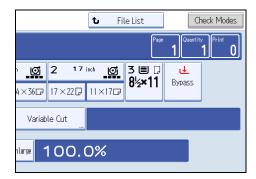

The maximum quantity that can be set is 99.

5. Press the [Start] key.

Printing will be started.



- You can search the target document using [User Name] or [File Name] situated in the left side of the screen. For details about searching the target document, see "Searching for Stored Documents".
- You can sort the documents by user name, file name, or creation date. Press the item to be used for the sorting on the top of the list.
- To cancel the selection, press the selected (highlighted) key.
- Some of the selected documents may not be printed due to the difference in the size or resolution.
- When changing the printing order, cancel the highlight and then specify the order correctly.
- Pressing the [Clear Modes] key cancels every selection.
- Pressing [Order] displays the selected documents in the printing order.
- The copy and printer features hold the specified printing conditions after the operation is over and apply them at the next printing.

- When two or more documents are specified, the printing conditions are stored on the first document but not on the succeeding documents.
- The following settings are available for the printing conditions. For respective printing results, see "Basic Copying" and "Advanced Copying".
 - Reduce / Enlarge (Preset Reduce / Enlarge, Zoom, Fine Magnification, Auto Reduce / Enlarge)
 - Stamp (Background Numbering, Preset Stamp, User Stamp, Date Stamp, Page Numbering)
 - Adjust Print Position
 - Finishing (Sort, Rotate Sort)
 - Variable Cut
 - Print Output Location
 - Density
 - Paper trays
 - Number of copies
- When printing two or more copies while selecting the Sort function, you can confirm the finish by printing only one copy. For details about sample print function, see "Sample print".
- When printing two or more documents at a time, you can print them as a single continuous document
 by specifying the order of their printing.
- When printing two or more documents at a time, the printing conditions set for the first document are applied to all the remaining documents.
- When two or more documents are selected, press [▲] [▼] to confirm the user name, document name, and printing order of the document.
- Pressing [File List] restores the document selection screen.
- You can change the maximum print quantity under Max. Copy Quantity in User Tools. For details about Max. Copy Quantity, see "General Features".
- Web Image Monitor allows you to print a document stored in the Document Server from your computer. For the Web Image Monitor starting procedure, see "Displaying Stored Documents with Web Image Monitor".

Reference

- p.152 "Searching for Stored Documents"
- p.157 "Sample print"
- p.161 "Displaying Stored Documents with Web Image Monitor"
- p.167 "General Features"

Interrupting a print job

Interrupts a print job.


- 1. Press the [Clear/Stop] key.
- 2. Press [Stop].

Changing the number of sets

You can change the number of sets during printing.



- This function can be used only when the Sort function is selected in the printing conditions.
- 1. Press the [Clear/Stop] key.
- 2. Press [Change Quantity].
- 3. Enter the number of sets anew with the number keys.

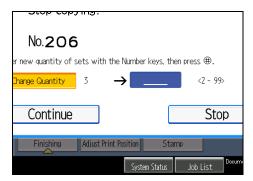

- 4. Press the [#] key.
- 5. Press [Continue].

Printing will be resumed.



• The number of sets you can enter in step 3 differs depending on when the [Clear/Stop] key is pressed.

Sample print

When the number of sets is massive, you can print a single set in advance to check the printing order and the printing conditions of the selected documents.



• This function can be used only when the Sort function is selected in the printing conditions.

If a password is set, enter it, and then press [OK].

- 2. Press [To Printing Screen].
- 3. Enter the number of print copies with the number keys.
- 4. Select the Sort function.
- 5. Press the [Sample Copy] key.

Only one set will be printed.

6. Press [Continue].

Printing will be resumed.



• To cancel the printing, press [Suspend]. The print screen will appear, enabling to set another item.

Printing the first page

In order to confirm the print results, you can print the first page alone of the document selected on the Select File screen.


When two or more documents are selected, the first page of the respective documents is printed.

1. Select the document to be printed.

If a password is set, enter it, and then press [OK].

2. Press [Print Specified Page].

3. Press [1st Page].

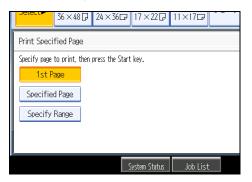


4. Press the [Start] key.

Printing a specified page

You can print the specified page alone of the document selected on the Select File screen.

- Select the document to be printed.
 If a password is set, enter it, and then press [OK].
- 2. Press [Print Specified Page].
- 3. Press [Specified Page].
- 4. Specify the page to be printed with the number keys, and then press [#].

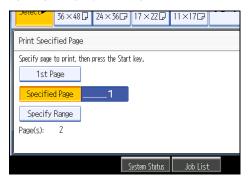

5. Press the [Start] key.



• To change the value you entered, press the key you want to change, and then enter a new value.


Printing a specified range

You can print the pages in the specified range alone of the document selected on the Select File screen.

1. Select the document to be printed.

If a password is set, enter it, and then press [OK].

- 2. Press [Print Specified Page].
- 3. Press [Specify Range].
- 4. Specify the printing start page with the number keys, and then press [#].

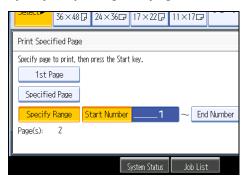

- 5. Specify the printing end page with the number keys, and then press [#].
- 6. Press the [Start] key.



• To change the value you entered, press the key you want to change, and then enter a new value.

Deleting a Stored Document


Deletes a stored document.



- The Document Server can store up to 3000 documents. As the number of stored documents reaches
 the limit, storing of a new document becomes unavailable. Thus, you should delete unnecessary
 documents as much as practicable.
- 1. Select the document to be deleted.

If a password is set, enter it, and then press [OK].

2. Press [Delete File].

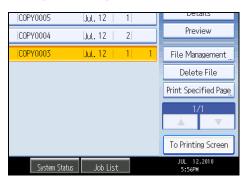

3. Press [Yes].



- You can delete all documents stored in the Document Server under Delete All Files in Document Server
 in User Tools. For details about Delete All Files in Document Server, see "System Settings", Network
 and System Settings Reference.
- Web Image Monitor allows you to delete a document stored in the Document Server from your computer. For details about how to start Web Image Monitor, see "Displaying Stored Documents with Web Image Monitor".
- It is also possible to select two or more documents and delete them.
- You can search the target document using [File Name] or [User Name] situated in the left side of the screen.
- You can sort the documents by user name, file name, or creation date. Press the item to be used for the sorting on the top of the list.
- When you could not identify the target document from the document name, print the first page alone
 of the document in order to confirm the print results.
- To cancel the selection, press the selected (highlighted) key.

Reference

p. 161 "Displaying Stored Documents with Web Image Monitor"

Displaying Stored Documents with Web Image Monitor

You can display stored documents in the Document Server on the computer screen with Web Image Monitor.

- 1. Start a Web browser.
- 2. Enter "http://(IPv4 address, IPv6 address or host name of this machine)/" in the address bar.

When entering an IPv4 address, do not begin segments with zeros.

For example: If the address is "192.168.001.010", you must enter it as "192.168.1.10" to connect to the machine.

The top page of Web Image Monitor will be displayed.

3. Click [Document Server].

The list of documents in the Document Server will be displayed.

4. Click of the document you want to confirm.

Information of the document will be displayed.

5. Confirm contents of the document.



- You can change the format of the list. Click the 🖽 (Thumbnails), 🛄 (Icons), or 🔳 (Details).
- When you want to enlarge the preview display, click [Enlarge Image].

Downloading Stored Documents with Web Image Monitor

You can download stored documents to the computer with Web Image Monitor.

- The file format converter is required if you want to download documents saved under the copy or printer function.
- 1. Start a Web browser.
- Enter "http://(IPv4 address, IPv6 address or host name of this machine)/" in the address bar.

When entering an IPv4 address, do not begin segments with zeros.

For example: If the address is "192.168.001.010", you must enter it as "192.168.1.10" to connect to the machine.

The top page of Web Image Monitor will be displayed.

3. Click [Document Server].

The list of documents in the Document Server will be displayed.

- 4. Click of the document you want to download.
- Select the format for the file you want to download, and then click [Download].

The data will be downloaded.

6. Click [OK].



• You can change the format of the list. Click the 🖽 (Thumbnails), 🍱 (Icons), or 🔳 (Details).

- You can download all the pages of a file by clicking [PDF] or [TIFF] on the upper right side of the document you want to download.
- The file format converter is not required if you want to download documents saved under the scanner function
- You can select [JPEG] only for files that are full color or gray scale and compressed using the scanner function
- If you are using Internet Explorer 8, downloading will be slower than with other browsers. To
 download faster with Internet Explorer 8, open the browser's [Internet Options] menu and register the
 machine's URL as a trusted site. Then disable SmartScreen filter for trusted sites. For details about these
 settings, see the Internet Explorer 8 Help files.

Registering Frequently Used Functions for Printing Stored Documents from the Document Server

You can store frequently used Document Server print job settings in the machine memory and recall them for future use.

The settings you can store are Density, Print Output Location, Finishing, Adjust Print Position, Stamp, Reduce / Enlarge, and number of copies.

For details about how to store these settings, see "Registering Frequently Used Functions".

Reference

p.83 "Registering Frequently Used Functions"

Changing the Default Functions of the Document Server's Initial Display

You can configure the settings of the initial document print screen or the initial scan original screen.

The initial document print screen appears when [To Printing Screen] on the document selection screen is pressed. The initial scan original screen appears when [Scan Original] on the document selection screen is pressed.

The functions you can specify as the default functions of the initial screens are as follows:

- Initial document print screen
 Density, Print Output Location, Finishing, Adjust Print Position, Stamp, Reduce / Enlarge, number of copies
- Initial scan original screen
 - Paper Tray, Original Type, Density, Custom Size Original, Wide Scan, Original Orientation, paper cut method, Auto Reduce / Enlarge, User Auto Reduce / Enlarge, Edit Image, Combine, Reduce / Enlarge

For details about how to configure the default functions displayed on the initial document print screen, see "Changing the Default Functions of the Copy's Initial Display".

To configure the default functions displayed on the initial scan original screen, press the [Program] key and then press [Program].

■ Reference

• p.87 "Changing the Default Functions of the Copy's Initial Display"

5. Copier and Document Server Features

This chapter describes User Tools in the Copier / Document Server Features menu.

Accessing User Tools

This section describes how to access the User Tools menu.

User Tools allow you to change or set defaults.



- Operations for system settings differ from normal operations. Always quit User Tools when you have finished. For details about how to end User Tools, see "Quitting User Tools".
- Any changes you make with User Tools remain in effect even if the main power switch or operation switch is turned off, or the [Energy Saver] or [Clear Modes] key is pressed.

Reference


• p.166 "Quitting User Tools"

Changing Default Settings

This section describes how to change the settings of User Tools.

Mportant (

- If the Administrator Authentications Management is specified, contact your administrator.
- 1. Press the [User Tools/Counter] key.

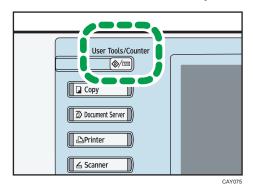

- 2. Press [Copier / Document Server Features].
- 3. Select the user tool you want to change.
- 4. Change settings by following instructions on the display, and then press [OK].




• To cancel changes made to settings and return to the initial display, press the [User Tools/Counter] key.

Quitting User Tools

This section describes how to quit the settings of User Tools.

1. Press the [User Tools/Counter] key.

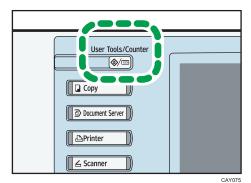

Note

• You can also quit User Tools by pressing [Exit].

General Features

This section describes the User Tools in the General Features menu under Copier / Document Server Features.

Auto Image Density Priority

You can set whether Auto Image Density is "On" or "Off" when the machine is turned on, reset, or modes are cleared.

Default for "Text": [On]

Default for "Drawing": [On]

Default for "Text / Photo": [On]

Default for "Photo": [Off]

Default for "Background Lines": [On]

Default for "Patched Original": [On]

Default for "Generation Copy": [On]

Original Photo Type Priority

You can specify which original photo type has priority when you select "Text / Photo" or "Photo".

Default for "Text / Photo": [Printed Photo]

Default for "Photo": [Printed Photo]

Max. Copy Quantity

The maximum copy quantity can be set between 1 and 99.

Default: [99 sheet(s)]

Auto Tray Switching

If you load paper of the same size in two or more trays, the machine automatically shifts to the other when the first tray runs out of paper (when Auto Paper Select is selected). This function is called "Auto Tray Switching". This setting specifies whether or not Auto Tray Switching is used. The machine can only select loaded paper rolls with this function.

Default: [With Image Rotation]

• With Image Rotation

Use to copy when using the Auto Tray Switching function.

• Without Image Rotation

Only copies with Auto Tray Switching if you load paper of the same size and in the same orientation in two or more trays. If the paper is not the same size or in the same orientation, copying is interrupted and the message "Load paper." is displayed.

Off

5

When a paper tray runs out of paper, copying is interrupted and the message "Load paper." is displayed.

Job End Call

You can choose whether or not the beeper sounds when copying is complete.

If Panel Key Sound of User Tools (System Settings) settings is "Lowest", "Low", "Medium", or "High", the machine beeps to notify you that it did not complete a job for reasons such as copying was interrupted, the paper tray ran out of paper, or a paper jam occurred.

Default: [On]

Reproduction Ratio

This section describes the User Tools in the Reproduction Ratio menu under Copier / Document Server Features.

User Reduce/Enlarge Ratio

You can register up to three frequently used reduce/enlarge ratios other than the fixed reduce/enlarge ratio and have them shown on the display. You can also change registered reduce/enlarge ratios.

When you select [User Reduce/Enlarge Ratio], the ratio can be set from 25.0 to 400.0%, using the number keys.

Default for "F1": [64.7%]


Default for "F2": [129.4%]

Default for "F3": [200.0%]

Reproduction Ratio

Specify the enlargement and reduction ratios that appear if [Reduce / Enlarge] is pressed on the copier screen.

When you select [User Reduce/Enlarge Ratio], the ratio can be set from 25.0 to 400.0%, using the number keys.

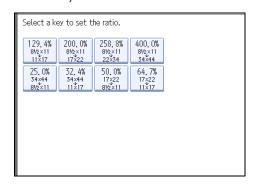

Engineering

400.0% (A → E)

25.0% (E \rightarrow A) 32.4% (D \rightarrow A, E \rightarrow B) 50.0% (C \rightarrow A, D \rightarrow B, E \rightarrow C) 64.7% (B \rightarrow A, C \rightarrow B, D \rightarrow C, E \rightarrow D) 129.4% (A \rightarrow B, B \rightarrow C, C \rightarrow D, D \rightarrow E) 200.0% (A \rightarrow C, B \rightarrow D, C \rightarrow E) 258.8% (A \rightarrow D, B \rightarrow E) Architecture

25.0% (E
$$\rightarrow$$
 A)
33.3% (D \rightarrow A, E \rightarrow B)
50.0% (C \rightarrow A, D \rightarrow B, E \rightarrow C)
66.7% (B \rightarrow A, C \rightarrow B, D \rightarrow C, E \rightarrow D)
133.3% (A \rightarrow B, B \rightarrow C, C \rightarrow D, D \rightarrow E)
200.0% (A \rightarrow C, B \rightarrow D, C \rightarrow E)
266.7% (A \rightarrow D, B \rightarrow E)
400.0% (A \rightarrow E)

• User Reduce/Enlarge Ratio

Reduce/Enlarge Ratio Priority

You can set the ratio that has priority when [Reduce / Enlarge] is pressed.

• Engineering

Default: [64.7%]

Architecture

Default: [66.7%]

Magnification Key Display

Specify which scale's reproduction ratios shown on the initial display.

Default: [Engineering]

User Auto Reduce / Enlarge

Define a user auto reduce/enlarge ratio for each document size when copying with the User Auto Reduce / Enlarge function.

[Off] determines whether to display a defined user auto reduce/enlarge ratio on a copier screen.

Select one of the following paper sizes for a user auto reduce/enlarge ratio defined for each document size:

- 34 × 44
- 22 × 34
- 17 × 22
- 11×17
- $8^{1}/_{2} \times 11$
- 36 × 48
- 24 × 36
- 18 × 24
- 12 × 18

- 9×12
- Off

You cannot change the size of the page image on an Engineering-series original to fit Architecture-series copy paper or vice versa.

Edit

This section describes the User Tools in the Edit menu under Copier / Document Server Features.

Adjust Position

Specify the default setting for Adjust Print Position.

Default: [Bottom 0.8 inch], [Right 0.8 inch]

The range of adjustment is 0 to 200 mm (0 to 7.9 inches) in 1 mm (0.1 inch) steps.

Erase Border Width

Specify the width of erased border margins using this function.

Use the number keys to specify the width of the erased border from 2 to 99 mm (0.1 to 3.9 inches) in 1 mm (0.1 inch) steps.

Default: [0.4 inch]


Erase Original Shadow in Combine

In Combine mode, you can specify whether to erase a 3 mm, 0.1 inch boundary margin around all four edges of each original.

Default: [On]

Image Repeat Separation Line

You can select a separation line using the Image Repeat function from: None, Solid, Broken A, Broken B, or Crop Marks.

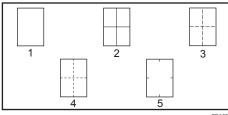


- 1. None
- 2. Solid
- 3. Broken A
- 4. Broken B
- 5. Crop Marks

Default: [None]

Selecting solid or broken lines might produce a blank area of approximately 1.5 mm (0.06 inch) in width along the separation line.

Double Copies Separation Line

You can select a separation line using the Double Copies function from: None, Solid, Broken A, Broken B, or Crop Marks.

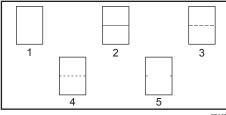

CBA053


- 1. None
- 2. Solid
- 3. Broken A
- 4. Broken B
- 5. Crop Marks

Default: [None]

Selecting solid or broken lines might produce a blank area of approximately 1.5 mm (0.06 inch) in width along the separation line.

Separation Line in Combine

You can select a separation line using the Combine function from: None, Solid, Broken A, Broken B, or Crop Marks.

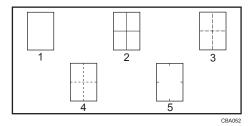

- 1. None
- 2. Solid
- 3. Broken A
- 4. Broken B
- 5. Crop Marks

Default: [None]

Selecting solid or broken lines might produce a blank area of approximately 1.5 mm (0.06 inch) in width along the separation line.

You can set the copy order in Combine mode to From Left to Right or From Top to Bottom.

From Left to Right	From Top to Bottom
1 2 3 4	1 3 2 4
1 2 3 4 5 6 7 8	1 3 5 7 2 4 6 8

BZK041

Default: [From Left to Right]

Program / Delete Format

Store a format (background) image for use with Format Overlay. You can store up to four formats. For details about how to program a format, see "Storing a format".

Margin Adjustment Priority

Specify the default setting for the margin size.

You can set the top and bottom margin size.

Default for "Top": [0.8 inch]

Default for "Bottom": [0.8 inch]

The range of adjustment is 0 to 200 mm (0 to 7.9 inches) in 1 mm (0.1 inch) steps.

Partial Copy Size

Specify the default settings of the start position (Y1) and the copy size (Y2).

Default for "Y1": [0.0 inch]

Default for "Y2": [8.3 inch]

The size can be set as follows:

Y1: 0 mm to 14790 mm (0.0 to 582.2 inches) in 1 mm (0.1 inch) increments, Y2: 210 mm to 15000 mm (8.3 to 590.5 inches) in 1 mm (0.1 inch) increments

Reference

• p.134 "Storing a format"

F

5

Stamp

This section describes the User Tools in the Stamp menu under Copier / Document Server Features.

Background Numbering

This section describes the User Tools in the Background Numbering menu under Stamp.

Size

You can set the size of the numbers.

Default: [Normal]

Density

You can set the density of the numbers.

Default: [Normal]

Preset Stamp

This section describes the User Tools in the Preset Stamp menu under Stamp.

Stamp Language

You can select the language of the message printed in Stamp mode.

Default: [English]

Stamp Priority

You can select the stamp type given priority when [Preset Stamp] is pressed.

Default: [COPY]

Stamp Format

Specify how each stamp is printed.

• Stamp Position

Specify where to print the stamp.

Default: [Top Right]

• Adjust Stamp Position

You can adjust the position of the stamp within the available ranges shown below.

```
"Top Left" - T/B: 0.1 - 16.0 inches, L/R: 0.1 - 16.0 inches
```

"Top Center" - T/B: 0.1 - 16.0 inches, L/R: 8.0 - 8.0 inches

"Top Right" - T/B: 0.1 - 16.0 inches, L/R: 0.1 - 16.0 inches

"Center Left" - T/B: 8.0 - 8.0 inches, L/R: 0.1 - 16.0 inches

"Center" - T/B: 8.0 - 8.0 inches, L/R: 8.0 - 8.0 inches

"Center Right" - T/B: 8.0 - 8.0 inches, L/R: 0.1 - 16.0 inches

"Bottom Left" - T/B: 0.1 - 16.0 inches, L/R: 0.1 - 16.0 inches

"Bottom Center" - T/B: 0.1 - 16.0 inches, L/R: 8.0 - 8.0 inches

"Bottom Right" - T/B: 0.1 - 16.0 inches, L/R: 0.1 - 16.0 inches

Size

You can set the size of the stamp.

Default: [1X]

Density

You can set the pattern used to print the stamp.

Default: [Normal]

Normal

The stamp is printed on the image. You cannot check which parts will overlap.

Lighter

The image can be seen through the stamp.

Lightest

The image appears even clearer than in the Lighter setting.

• Page to Stamp

Sets whether to print the stamp on all pages or only the first page.

Default: [All Pages]

User Stamp

This section describes the User Tools in the User Stamp menu under Stamp.

Program / Delete Stamp

You can register, change, or delete user stamps.

You can register up to 40 custom stamps with your favorite designs.

For details about how to program the user stamp, see "Registering a user stamp".

Stamp Format: 1-40

Specify how each registered user stamps 1 to 40 is printed.

• Stamp Position

Specify where to print the user stamp.

Default: [Top Right]

• Adjust Stamp Position

You can adjust the position of the user stamp within the available ranges shown below.

```
"Top Left" - T/B: 0.1 - 16.0 inches, L/R: 0.1 - 16.0 inches
```

"Top Center" - T/B: 0.1 - 16.0 inches, L/R: 8.0 - 8.0 inches

"Top Right" - T/B: 0.1 - 16.0 inches, L/R: 0.1 - 16.0 inches

"Center Left" - T/B: 8.0 - 8.0 inches, L/R: 0.1 - 16.0 inches

"Center" - T/B: 8.0 - 8.0 inches, L/R: 8.0 - 8.0 inches

"Center Right" - T/B: 8.0 - 8.0 inches, L/R: 0.1 - 16.0 inches

"Bottom Left" - T/B: 0.1 - 16.0 inches, L/R: 0.1 - 16.0 inches

"Bottom Center" - T/B: 0.1 - 16.0 inches, L/R: 8.0 - 8.0 inches

"Bottom Right" - T/B: 0.1 $^-$ 16.0 inches, L/R: 0.1 $^-$ 16.0 inches

• Page to Stamp

Sets whether to print the stamp on all pages or only the first page.

Default: [All Pages]



• p.104 "Registering a user stamp"

Date Stamp

This section describes the User Tools in the Date Stamp menu under Stamp.

Format

You can select the date format for Date Stamp mode.

Default: [MM / DD / YYYY]

Font

You can select the date stamp font.

Default: [Font 1]

Size

You can set the date stamp size.

Default: [Auto]

Superimpose

You can have the date stamp printed in white when it overlaps black parts of the image.

Default: [Off]

Stamp Setting

Specify how the date stamp is printed.

5

• Stamp Position

Specify where to print the Date Stamp.

Default: [Top Left]

Adjust Stamp Position

You can adjust the position of the Date Stamp within the available ranges shown below.

```
"Top Left" - T/B: 0.1 - 16.0 inches, L/R: 0.1 - 16.0 inches
```

"Top Center" - T/B: 0.1 $^-$ 16.0 inches, L/R: 8.0 $^-$ 8.0 inches

"Top Right" - T/B: 0.1 - 16.0 inches, L/R: 0.1 - 16.0 inches

"Bottom Left" - T/B: 0.1 - 16.0 inches, L/R: 0.1 - 16.0 inches

"Bottom Center" - T/B: 0.1 - 16.0 inches, L/R: 8.0 - 8.0 inches

"Bottom Right" - T/B: 0.1 - 16.0 inches, L/R: 0.1 - 16.0 inches

Page to Stamp

Sets whether to print the stamp on all pages or only the first page.

Default: [All Pages]

Page Numbering

This section describes the User Tools in the Page Numbering menu under Stamp.

Stamp Format

You can select the page number format given priority when [Page Numbering] is pressed.

Default: [P1,P2...]

Font

You can select the page number printed in Page Numbering mode.

Default: [Font 1]

Size

You can set the size of the stamp printed in Page Numbering mode.

Default: [Auto]

Page Numbering in Combine

You can set page numbering when using the Combine function and the Page Numbering function together.

Default: [Per Original]

Stamp Position

Specify how each of stamp is printed.

Stamp Position

Specify where to print the stamp.

Default for the patterns of "P1,P2...", "1/5,2/5...", "P.1,P.2...", and "1,2...": [Top Right] Default for the patterns of "-1-,-2-..." and "1-1,1-2...": [Bottom Center]

• Adjust Stamp Position

You can adjust the position of the stamp within the available ranges shown below.

"Top Left" - T/B: 0.1 ⁻ 16.0 inches, L/R: 0.1 ⁻ 16.0 inches
"Top Center" - T/B: 0.1 ⁻ 16.0 inches, L/R: 8.0 ⁻ 8.0 inches

"Top Right" - T/B: 0.1 ⁻ 16.0 inches, L/R: 0.1 ⁻ 16.0 inches

"Bottom Left" - T/B: 0.1 - 16.0 inches, L/R: 0.1 - 16.0 inches

"Bottom Center" - T/B: 0.1 $^-$ 16.0 inches, L/R: 8.0 $^-$ 8.0 inches

"Bottom Right" - T/B: 0.1 - 16.0 inches, L/R: 0.1 - 16.0 inches

Superimpose

You can have page numbers printed in white when they overlap black parts of the image.

Default: [Off]

Page Numbering Initial Letter

You can select the page numbering initial letter between "P1,P2.../P.1,P.2..." and "S1,S2.../S.1,S. 2...".

Default: [P1,P2.../P.1,P.2...]

Input / Output

This section describes the User Tools in the Input / Output menu under Copier / Document Server Features.

Rotate Sort: Auto Paper Continue

Specify to continue copying when paper of the required orientation has run out during rotate sort.

Default: [Off]

On

Copying continues using copy paper of a different orientation. The copy job will finish even if you have left the machine.

Off

When paper of the required orientation runs out, the machine stops copying and prompts you to supply copy paper. After you have loaded paper, the machine will continue copying.

Administrator Tools

This section describes the User Tools in the Administrator Tools menu under Copier / Document Server Features.

Menu Protect

You can prevent unauthenticated users from changing the User Tools settings.

For details, consult the administrator.

6. Appendix

This chapter describes the copy machine's specifications and the function compatibility.

Function Compatibility

The combination chart given below shows which modes can be used together.

Blank: These modes can be used together.

- ×: These modes cannot be used together. The first mode selected will be the mode you are working in.
- •: These modes cannot be used together. The second mode selected will be the mode you are working in.

The following shows the combinations of functions:

\setminus															Fu	ınct	ion	sele	cted	sec	cond	ł											_	\neg
				П		Т	Т	Т				П	П	Т	Т	Т	Т	Т	Т							Т	Т	Т	Т	Т	Т			
				Unreadable)		Α.	Paner Roll Trav	Cut Paper Tray							ılarge										Overlay			Du Bu						Server)
		Custom Size Original	Wide Scan	Original Orientation (Unreadable)	Auto Image Density	Manual Image Density		Manual Paper Select:	Bypass Tray		Variable Cut	Preset Cut	Auto Reduce/Enlarge			Combine	Double Copies	Image Repeat	Positive/Negative	Erase Border	Erase Inside	Erase Outside	Mirror Image	Format Overlay	Programmed Format Overlay			Background Numbering	Preset Stamp	User Stamp	Page Numbering	Sort	Rotate Sort	Store File (Document Server)
	Custom Size Original	7	•	Ш	_	>		+	_	×		Н	4		×	4	_	+	_	┡	_		_		_		<	4	_	_	\perp	_	Ш	_
1	Wide Scan	•	\rightarrow	\sqcup	+	>	4	\perp	×	\vdash	Ш	Н	×	\perp	× :	× :	× :	×	+	\vdash	×	×	_	×	×	×	4	+	+	+	\perp	\vdash	Ш	ᅵ
1	Original Orientation (Unreadable)	Ш	_	\downarrow	+	+	+	\perp	_	\vdash	Н	Н	\dashv	\perp	+	+	+	+	+	_	\vdash	Щ	_	_	-	+	4	+	+	+	\perp	\vdash	\sqcup	ᅬ
	Auto Image Density			Н	\downarrow	+	+	\perp	_	┡		Н	\dashv	_	+	+	4	+	+	┡	_		_	_	_	_	4	4	+	+	+	\vdash	Ш	4
	Manual Image Density	_	L	\perp		\downarrow	+-	+-	L	-	L		_	_	+	_	_	_	+	L	L	_	_	_	_	_	4	+	+	+	+	\vdash	Ш	\dashv
	Auto Paper Select	•	•	\Box	_	4	•			•	•	•	•	*2		• (•		+	•	•	•	_	_	_	• (•	4	+	+	+	\vdash	Ш	\dashv
ı	Manual Paper Select: Paper Roll Tray			\Box	_	•				-			\dashv		•	+	4	+	+	┡	_		_		_	-	1	4	+	+	+		Ш	\dashv
ı	Manual Paper Select: Cut Paper Tray			\Box	_	•			•	•		•			•	_		+	+				_				<		-		1			
ı	Bypass Tray		×		_	•		_	-	•	•		×					×	+		×	×	_	×	×	- 12			× >		: ×			×
	Synchro Cut	×			_	•		•	•		•		×					×	+	×	×	Х	_	Χ	×	_		× :	× >	< ×	: ×		×	\dashv
	Variable Cut		_	\Box	_	•		•				•	×			× :	× :	×	_	┖	_		_		_		<	4	4	_	\perp	\perp	×	Ц
	Preset Cut			\Box	_	•		•	•		•	\square	_		•	4	_	_					_			>		4	_		_		Ш	_
ı	Auto Reduce/Enlarge		×		_	•	_	_	×	×	×	Ц	-		•	_	- (•		┖						- >	<	_	_		┸		Ш	Ш
ı	Reduce/Enlarge					*						Ш	•		•	\perp		\perp									\perp	\perp	\perp				Ш	Ш
rst	User Auto Reduce/Enlarge	×	×			\perp		•				•	•	• `				×		×	×	×					<	\perp	\perp	\perp			Ш	Ш
± 0	Combine		×			>			×	×	×				×			×						×	×	>								
že	Double Copies		×	П		7		Т	×	×	×	П	Т			Χľ	J	•	Т	П	Г			×	×	-	₹	Т	Т	Т	Т			×
l ĕ	Image Repeat		×	П		7>	T	Т	×	×	×	П	X	Т	X :	×Ι	•	J	Т	П			П	×	×	-	<	Т	Т	Т	Т	П		X
l se	Adjust Print Position			П	Т	Т	Т	Т	П	П		П	П	Т	Т	Т	Т	\neg	J	П			×	×	×		Т	Т	Т	Т	Т			П
i.	Positive/Negative			П	Т	Т	Т	Т	П	П		П	П	Т	Т	Т	Т	Т	abla	Г			П	×	×		Т	Т	Т	Т	Т			П
Function selected first	Erase Border				I	>			×	×			J		×	I		Ι		abla				×	×		<	I	\perp	Ι	\Box			
13	Erase Inside		×		I	>		I	×	×			J		×	I		Ι		Ľ							<	I	Ι	Ι	\Box			
ı	Erase Outside		×	П		>	T	Т	×	×		П	\neg	T	×	T		Т	Т		Г		\neg	×	×	- >	<	T		Т	Т		П	П
1	Mirror Image			\Box	T	T	Т	Т				П	\neg	T	\top	\top	T	>					V	×	×		T	\top	\top	\top	Т		П	×
1	Format Overlay		×	\Box	T	T	Т	Т	×	×		П	\neg	T		× :	× :	X >	X			×	×	abla	•	- 2	<	× :	× Þ	₹İ×	×	×	×	×
1	Programmed Format Overlay		×	\Box	T	T	Т	Т	×	×		П	\neg	T		× :	× :	X >	X	×			×	•	abla			× :		₹İ×		×	×	$\overline{\times}$
1	Partial Copy		×	\Box	T	>	4	Т		Г		П	\neg	T	×	\top	T	\top	T	Г			\neg		Ť	J	T	Т	T	Т	Т		П	\neg
1	Margin Adjustment	×		\Box	T	>	<	×	×	Г	×	×	×	T	× i	× i	× :	×	Τ	×	×	×	\neg	×	×		J	× :	× D	₹İ×	×	Г	×	\neg
1	Background Numbering	П		\Box	T	T	Т	Т	×			П	\dashv	T	\top	\top	T	\top	Τ	Г			\neg	×	×		<↑	J	T	Т	Т	Г	П	П
1	Preset Stamp	П		\Box	T	Т	Т	Т	×			П	\dashv	T	\top	\top	T	\top	Τ	Г			\neg	×	×		<	Ť	J	Т	Т	Г	П	П
1	User Stamp	П		\Box	T	T	Т	Т	×	×	П	П	\dashv	T	\top	\top	T	\top	Τ	Г			\neg	×	×	7	<	T	ॏ	J	Т	Г	П	П
ı	Date Stamp	П	П	\sqcap	T	T	Т	Т	×	×	П	П	\dashv	T	\top	丁	T	\top	Τ	Т			\neg	×	×	- 2	<	丁	T	\land	T	Т	П	П
1	Page Numbering	П		\vdash	\top	\top	T	\top	×	×	П	П	\dashv	\top	\top	1	\top	\top	\top				\neg	×	×		<	\top	\top	\top	⇈		П	\neg
1	Sort	П		\dashv	$^{+}$	$^{+}$	T	$^{+}$		T	П	H	\dashv	\top	7	1	$^{+}$	†	T	T		П	\dashv	X	×	\top	\dagger	1	$^{+}$	\top	+`	$\overline{}$	•	\dashv
1	Rotate Sort	П		\dashv	$^{+}$	$^{+}$	T	$^{+}$	×	×	×	Н	\dashv	$^{+}$	7	1	$^{+}$	+	†	T		П	\dashv	X	×	1	<u> </u>	1	$^{+}$	$^{+}$	$^{+}$	•	H	\dashv
1	Store File (Document Server)	П		\dashv	\top	\top	\top	\top	×		П	П	\dashv	\top	\top		× :	×	\top				×	×	×	T	Ť	\top	\top	\top	\top		H	d
_		_	_				_			_		_								_	_		_		_							_	CBA	001

183

- *1 When Directional Magnification (%) or Directional Size Magnification (inch) is selected, the function selected first has priority.
- *2 When Directional Magnification (%) or Directional Size Magnification (inch) is selected, the function selected second has priority.

Scan Size Limitations, by Function

The following chart shows scan size limitations for the Adjust Print Position, Margin Adjustment, Edit, and Stamp functions.

	Function	Scan size limitation				
Adjust Print Po	osition	AO (E) or smaller				
Margin Adjus	tment	15 m (590.5 inches) or smaller				
Format Overlay		AO (E) or smaller				
Erase	Erase Inside	AO (E) or smaller, 5 locations				
Erase	Erase Outside	AO (E) or smaller				
Erase	Erase Border	AO (E) or smaller				
Erase	Erase Inside, Erase Border, and Format Overlay combinations	AO (E) or smaller				
Erase Outside and Format Overlay combinations		AO (E) or smaller				
Positive / Ne	gative	15 m (590.5 inches) or smaller				
Mirror Image		15 m (590.5 inches) or smaller				
Double Copie	es	A1 (D) (when A0 (E) paper is selected)				
Image Repeat	with no other modes	AO (E) or smaller				
Image Repeat	with Erase Border	AO (E) or smaller				
Image Repeat	with Format Overlay	AO (E) or smaller				
Stamp		AO (E) or smaller				

Settings Record Sheet

Use the following sheets to record the programs, formats, and user stamps that are stored on the machine.

Program Record Sheet

Print this sheet to keep a record of your program settings.

Function 5										
Function 4										
Function 3										
Function 2										
Function 1										
Original name										
Program No.	-	2	က	4	വ	9	7	∞	0	O
										ODAUZS

Stored Format Record Sheet

Print this sheet to keep a record of your format settings.

Format No.	-	0	ю	4
Original name				
Note				
Date				
User				

User Stamp Record Sheet

Print this sheet to keep a record of your user stamps.

User			
4			
Date			
age			
Stamp image			
amp			
St			
etc			
Corporation/section/projectetc			
proj			
ion/			
sect			
ion/			
orat			
orp			
Record No.			
COL			
Re			
		1	CBA025

CBA025

Magnification Ratio Chart

The following charts show the preset magnification ratios available for standard size originals and copy paper.

Engineering

		Copy size								
	%	Е	D	С	В	А				
Original	Е	100.0	64.7	50.0	32.4	25.0				
size	D	129.4	100.0	64.7	50.0	32.4				
	С	200.0	129.4	100.0	64.7	50.0				
	В	258.8	200.0	129.4	100.0	64.7				
	А	400.0	258.8	200.0	129.4	100.0				

Architecture

		Copy size								
	%	Е	D	С	В	А				
Original	E	100.0	66.7	50.0	33.3	25.0				
size	D	133.3	100.0	66.7	50.0	33.3				
	С	200.0	133.3	100.0	66.7	50.0				
	В	266.7	200.0	133.3	100.0	66.7				
	А	400.0	266.7	200.0	133.3	100.0				

Measure Chart

The following tables list the standard sizes of copy paper.

Engineering

	Width × Length (inches)
Е	34 × 44
D	22 × 34
С	17 × 22
В	11×17
A	8 ¹ / ₂ × 11

Architecture

6

	Width × Length (inches)
Е	36 × 48
D	24 ×36
С	18 × 24
В	12 × 18
А	9 × 12

Trademarks

Windows® is either a registered trademark or a trademark of Microsoft Corporation in the United States and /or other countries.

Adobe, Acrobat, Acrobat Reader, Adobe Reader, and Reader are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.

UNIX is a registered trademark of The Open Group in the United States and other countries.

Other product names used herein are for identification purposes only and might be trademarks of their respective companies. We disclaim any and all rights to those marks.

INDEX

A	Copying from the bypass tray4
Accessing Hear Tools 145	Custom size original28
Accessing User Tools	Custom size paper43
Adjust Print Position	Cut paper tray9
Adjusting copy image density49	D
Administrator Tools	Date format109
Attaching the original hangers33	Date Stamp
Auto Image Density49	Default settings87, 163
Auto Image Density Priority167	Deleting a stored document
Auto Paper Select	Deleting a stored format
Auto Reduce / Enlarge64	Deleting a stored program85
Auto Start	
Auto Tray Switching167	Deleting jobs
	Density175
<u>B</u>	Directional Magnification (%)90
Background Density50, 52	Directional Size Magnification (inch)93
Background Lines	Display panel13
Background Numbering97, 175	Displaying stored documents161
Basic Copying35	Document Server76, 139, 145, 163
Basic procedure35	Document Server display140
Bypass tray41	Double Copies127
C	Double Copies Separation Line173
	Downloading stored documents162
Carrier sheet22, 31	Drawing
Changing a stored program84	
Changing default settings	E
Changing the file name	Edit172
Changing the number of sets74, 157	Enlarging originals60, 89
Changing the order of jobs80	Entering the ratio with the number keys62, 91
Changing the password	Erase Border118, 119
Changing the user name	Erase Border Width172
Check Modes	Erase Inside121
Checking jobs in the job list79	Erase Original Shadow in Combine172
Checking the details of a stored document151	Erase Outside122
Checking the job history82	F
Combine68	Г
Combined auto and manual image density50	Film45
Contrast	Fine Magnification92
Copied Photo47	Finishing71
Copier functions118, 139	First Chapter No116
Copy Order in Combine174	First Printing Number114, 115, 116
Copy output locations18	First Printing Page114, 115, 116
Copy Quality50	Folded originals32

Font177,	178 Manuals for this machine	t
Format	.177 Margin Adjustment	124
Format Overlay	.131 Margin Adjustment Priority	174
Frequently used functions83,	163 Max. Copy Quantity	167
Function compatibility	.183 Measure chart	190
G	Menu Protect	181
	Mirror Image	130
General Features	Missing image area	24
Generation Copy	N	
Glossy Photo		
Н	Names of major items	
Holding jobs	New job	
How to read this manual	o Tron-compande originals	
	140les	
1	Notice	
Image Repeat	.126 •	
Image Repeat Separation Line	. 172 One-Sided Combine	68
Important	8 Options	12
Initial display13, 87, 140,	Original and copy output locations	
Input / Output		
Interrupt Copy		
Interrupting a print job	.156 Original output locations	
Invert	.128 Original Photo Type Priority	
J	Original rear output	
	Original size	
Job End Call	Original table	
Job List screen	/8 Original upper output	
Job order	/8 Original weight	
Job Preset	39 Originals	
L	Overwriting a stored format	
Last Number114,	115 p	
Laws.	11	
Legal prohibition	11 Page Numbering11	
Long length original	9 Page Numbering in Combine	
Long length paper	9 Page Numbering Initial Letter	
Lower copy output12, 18	3. 19 Paper roll tray 1	
M	Paper roll tray 2	
	Partial Copy	
Magnification Key Display		
Magnification ratio chart	et	
Managing jobs		
Manual Image Density	-1	
Manual Paper Select53	3, 54 Placing originals	25

Placing rolled originals	32	Scanner functions	139
Positive / Negative	128	Scanning an original using a carrier sheet	3
Preset Cut	12, 56, 57	Searching by file name	153
Preset Reduce/Enlarge	60	Searching by user name	153
Preset Stamp	98, 1 <i>7</i> 5	Searching for stored documents	152
Preview Display	142	Selecting a preset ratio	60
Printed Photo	47	Selecting copy paper	53
Printer functions	139	Selecting the original type setting	47
Printing a specified page	159	Separation Line in Combine	173
Printing a specified range	159	Setting the length of copy paper cut	56
Printing stored documents	154	Settings record sheet	186
Printing the first page	158	Sharp / Soft	.50, 51
Program	83, 87, 163	Simplified Display1	3, 141
Program / Delete Format	174	Size175, 17	7, 178
Program / Delete Stamp	176	Size Magnification	89
Programmed Format Overlay	132	Sort	7
Q		Special Paper	45
		Specifying a file name	147
Quitting User Tools	166	Specifying a password	148
R		Specifying a user name	147
Rear copy output	10	Specifying the reproduction ratio	.63, 92
Rear stacker		Stamp9	7, 175
Recalling a stored program		Stamp density	100
Recalling the registered custom size		Stamp Format175, 17	'6, 178
Recommended originals		Stamp Language	175
Reduce/Enlarge Ratio Priority		Stamp position98, 100, 101, 103, 10	7, 110
Reducing originals			113
Registering a custom size		Stamp Position	
Registering a user stamp		Stamp Priority	
Registering functions		Stamp Setting	
Regular size paper		Stamp size	
Regulations		Stopping originals from feeding in	
Reproduction Ratio		Storing a format	
Resetting the original counter		Storing data7	
Rolled originals		Superimpose17	
Rotate Copy		Symbols	
Rotate Sort		Synchro Cut	.12, 56
Auto Paper Continue		T	
\$		Table	
Sample Copy	70	Terms	9
Sample print		Text	47
Scan Size Limitations		Text / Photo	47
Jean Jize Lillillanons	103	Trademarks	191

Translucent paper	45
U	
Upper copy output User Auto Reduce / Enlarge User Reduce/Enlarge Ratio User Stamp	12, 66, 170 169
V	
Variable Cut	12, 56, 58
Web Image Monitor	
Z	
700m	61

