Quick Reference Copy Guide

⇒Please put this guide above your machine <>



Paper Size

You can check the paper size using the scale on the original table.

Auto Image Density

Adjusts the image density (darker/lighter) automatically for copying.

Auto Paper Select

Selects a suitable size of paper automatically.

Manual Paper Select

You can choose the tray containing the paper you want to copy onto.

How to make copies... (1. Placing Originals, 2. Basic Copying)

 
- Press the [Clear Modes] key.
- 2 Make the necessary settings.
- B Enter the number of copies.
- Adjust the original guides to the original width.
- Insert the original between the guides, copy side down.



The original feeds into the machine automatically, and copying starts.

Original Orientation (1. Placing Originals)

Place the original face down on the original table. When you cannot place the original as shown in the illustration, change the orientation by selecting or 🖭



1. [User Tools/Counter] key

- 2. Display panel
- 3. [Clear Modes] key

Press to clear the current settings.

4. [Program] key

Standard available:

Document Server:

Press to register frequently used settings. or to recall registered settings.

5. [Interrupt] key

- [Energy Saver] key
- 7. Main power indicator
- 8. Operation switch
- 9. [Login/Logout] key 10. [Simplified Display] key
- 11. [Sample Copy] key

12. [Start] key

Press to start copying, printing, scanning,

- 13. [#] key (Enter key)
- 14. [Clear/Stop] key
- · Clear: Press to delete a number entered.
- · Stop: Press to stop a job in progress.

(4)(5)(6) (7/*) (0) (#)(C/®)

You can also print and scan on this machine! Please ask your sales person for these options.

How to Reduce/Enlarge...

1 Press [Auto Reduce / Enlarge].

Place the original face down.

Select a preset ratio for copying.

Auto Reduce/Enlarge

2 Select the paper size.

Preset Reduce/Enlarge

original sizes.



Copy

Other Function

16

(2. Basic Copying)

€ Data In

How to make copies of custom size originals... (1. Placing Originals)

Scans using a predetermined width, regardless of the actual width of the original.

1 Press [Wide Scan].

Sort/Rotate Sort

1 Press [Finishing].

Press [OK].

2 Select [Sort] or [Rotate Sort].

Place the original face down.

2 Place the original face down.



How to finish your document...

Copies are assembled as sets in sequential order.

Custom Size Original

15 14 13 12 11 10 9

Specify the size of the originals. 1 Press [Custom Size Original].

15. Number keys

16. Function keys

- 2 Enter the horizontal size, and then press [#].
- Enter the vertical size, and then press [#].
- Press [OK].
- 5 Place the original face down.

To find your document, press the [Document Server] key.

(2. Basic Copying)

For more functions on Document

Server, see "4. Document Server".

Document Server

To reduce network load.

1 Press [Store File].

How to use in copy mode...

2 Enter a file name, user name, or

password if necessary.

4 Make the scanning settings.

5 Place the original face down.

Originals are scanned and stored in the memory.

• To store often used documents centrally and print on

Why use it...

demand.

Press [OK].



Ø 2 17 km Ø 3 ■ □ ↓ 8½×11 Bysass

(2. Basic Copying)

How to set the length of copy paper cut (2. Basic Copying)

Synchro Cut

Cuts the paper at the same length as the original.

- 1 Press [Synchro Cut].
- 2 Select a paper roll tray.



Preset Cut

Cuts the paper at a preset size, regardless of the size of the

Select a preset cut size of the paper roll tray 1 or 2.

Variable Cut

Cuts the paper to the size entered.

- Press [Variable Cut].
- 2 Enter the length, and then press [#].
- Press [OK].
- Select a paper roll tray.

1 Press [Reduce / Enlarge]. 2 Select a ratio, and then press [OK]. Place the original face down. (1. Placing Originals)

Selects an appropriate reproduction ratio based on the paper and

Copy Output Locations

Upper copy output

Copies come out between the upper output stackers and upper output

1 Make sure that [Upper] is selected under Copy Output Location.



Lower copy output

Copies come out to the lower output

Output Location.



1 Press [Lower] under Copy

Enter the number of copy sets.



EN (US) D094-7514