

Notes for Users

Note the following corrections to the manual.

About This Machine

Topic: Energy Saving Functions (p.31)

Error

Energy Saving Functions

To reduce its power consumption, this machine has the following functions:

Low Power mode

- If this machine remains idle for a specified period, it automatically reduces its electrical consumption.
- The default period the machine waits before entering Low Power Mode is 7 minutes. This default time can be changed.

Off Mode (on machines with only copier function)

- If this machine remains idle for a specified period, it automatically turns off its power.
- The default delay time the machine waits before entering Off Mode is 14 minutes. This default time can be changed.

Sleep Mode (on machines with printer, or scanner functions)

- If this machine is already in Low Power Mode and remains idle for a specified period, it automatically enters Sleep Mode to further reduce its electrical consumption.
- The default delay time the machine waits before entering Sleep Mode is 14 minutes. This default time can be changed.
- The machine can print jobs from computers while in Sleep Mode.

Specifications

	Type 1	Type 2
Reduced Electrical Consumption by Low Power Mode	195 W	193 W
Time of Switch into Low Power Mode	7 minutes	7 minutes
Time of Switch out from Low Power Mode	69 seconds	91 seconds
Reduced Electrical Consumption by Off Mode	0.19 W	0.19 W
<u>Time of Switch into Off Mode</u>	<u>14 minutes</u>	<u>14 minutes</u>
<u>Time of Switch out from Off Mode</u>	<u>64 seconds</u>	<u>84 seconds</u>

Correction

Energy Saving Functions

To reduce its power consumption, this machine has the following functions:

Low Power mode

- If this machine remains idle for a specified period, it automatically reduces its electrical consumption.
- The default period the machine waits before entering Low Power Mode is 7 minutes. This default time can be changed.

Sleep Mode

- If this machine is already in Low Power Mode and remains idle for a specified period, it automatically enters Sleep Mode to further reduce its electrical consumption.
- The default delay time the machine waits before entering Sleep Mode is 14 minutes. This default time can be changed.
- The machine can print jobs from computers while in Sleep Mode.

Specifications

	Type 1	Type 2
Reduced Electrical Consumption by Low Power Mode	195 W	193 W
Time of Switch into Low Power Mode	7 minutes	7 minutes
Time of Switch out from Low Power Mode	69 seconds	91 seconds
Reduced Electrical Consumption by Off Mode	0.19 W	0.19 W

